



D-Link[®]

WIRELESS AC1200 DUAL BAND ACCESS POINT
DAP-1665

QUICK INSTALLATION GUIDE

КРАТКОЕ РУКОВОДСТВО ПО УСТАНОВКЕ

GUÍA DE INSTALACIÓN RÁPIDA

GUIA DE INSTALAÇÃO RÁPIDA

快速安裝指南

PETUNJUK PEMASANGAN CEPAT

クイックインストールガイド

CONTENTS OF PACKAGING



WIRELESS AC1200 DUAL BAND ACCESS POINT
DAP-1665



12V 1A POWER ADAPTER
SUPPLIES POWER TO THE DAP-1665



ETHERNET CABLE (CAT5 UTP)
USE TO CONNECT TO YOUR COMPUTER



PRODUCT MANUAL ON CD



WI-FI CONFIGURATION NOTE
CONTAINS THE AP'S DEFAULT WI-FI INFORMATION



If any of the above items are missing, please contact your reseller.

 
PRODUCT SETUP

PRODUCT INSTALLATION




POSITION THE ACCESS POINT

Place the access point in an open area of your intended work area for better wireless coverage. If you are using it as a repeater, you should ensure that the access point is within wireless range of the network which you wish to repeat.



TURN ON THE POWER

 Plug the supplied power adapter into the back of the DAP-1665 and connect it to a power outlet. Press the power switch at the back of the access point to turn on the power. Wait about 30 seconds for the device to complete startup processes.

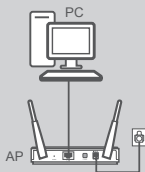

CONNECT THE DAP-1665

Using the included Ethernet cable, plug one end into the LAN port on the back of the DAP-1665, and plug the other end into the Ethernet port on your computer. Alternatively, you can connect to the DAP-1665 using Wi-Fi. Go to your computer or mobile device's Wi-Fi settings. Select the network name (SSID) that is printed on the included Wi-Fi Configuration Note (ex: **dlink-A8FA**), then enter the Wi-Fi password also printed on the Wi-Fi Configuration Note (ex: **akbdj19368**).

PRODUCT CONFIGURATION (WEB-BASED UTILITY)

To configure, open a web browser (such as Internet Explorer) and enter **http://dlinkap** or **http://dlinkap.local** in the address bar. This will direct you to the web-based configuration utility. The default username is *Admin* and the password field should be left blank. Click **Log In** to continue. Once logged in, click **Launch Wireless Setup Wizard** to commence the setup process. For further information on configuring your access point, please refer to the included user manual.

LOGIN URL : <http://dlinkap> or <http://dlinkap.local>.

USERNAME: Admin

PASSWORD: (blank by default)

If you have more than one access point, enter **http://dlinkapxxxx**, or **http://dlinkapxxxx.local**. (where **xxxx** represents the last four digits of the access point's MAC address, which is located on the label on the bottom of the device).

TROUBLESHOOTING

SETUP AND CONFIGURATION PROBLEMS

1. WHY CAN'T I ACCESS THE WEB-BASED CONFIGURATION UTILITY?

- Check the physical connection between your computer and the access point. The LAN LED on the access point should be illuminated, indicating that a connection is present. You should also ensure that your computer's Ethernet port is enabled and functioning correctly.
- If you are using Wi-Fi to connect to the access point, ensure that you are connected to the correct wireless network, and that there are no connectivity problems. If you are still unable to access the configuration utility, try connecting to the access point using the included Ethernet cable.

2. HOW DO I RESET MY DAP-1665 AP TO FACTORY DEFAULT SETTINGS?

- Ensure the access point is powered on.
 - Press and hold the reset button on the rear of the device for 5 seconds.
- Note: Resetting the AP to the factory default will erase the current configuration settings. You should repeat the setup process described in the installation guide above to reconfigure your access point.

3. HOW DO I ADD A NEW WIRELESS CLIENT OR PC IF I HAVE FORGOTTEN MY WIRELESS NETWORK NAME (SSID) OR WIRELESS ENCRYPTION KEY?

- If you have not changed your Wi-Fi settings from the factory defaults, you can use the information listed on the provided Wi-Fi Configuration Card to connect to the access point.
- If you have changed your Wi-Fi settings, you should access the web-based configuration utility as described on the previous page, and complete the setup wizard again to renew your wireless settings.
- Make sure you write down these settings so that you can enter them into each wirelessly connected device.

You can find software updates and user documentation on the D-Link website.

Tech Support for customers in

Australia:

Tel: 1300-766-868
24/7 Technical Support
Web: <http://www.dlink.com.au>
E-mail: support@dlink.com.au

India:

Tel: +91-22-27626600
Toll Free 1800-22-8998
Web: www.dlink.co.in
E-Mail: helpdesk@dlink.co.in

Singapore, Thailand, Indonesia, Malaysia, Philippines, Vietnam:

Singapore - www.dlink.com.sg
Thailand - www.dlink.co.th
Indonesia - www.dlink.co.id
Malaysia - www.dlink.com.my
Philippines - www.dlink.com.ph
Vietnam - www.dlink.com.vn

Korea:

Tel: +82-2-2028-1810
Monday to Friday 9:00am to 6:00pm
Web: <http://d-link.co.kr>
E-mail: g2b@d-link.co.kr

New Zealand:

Tel: 0800-900-900
24/7 Technical Support
Web: <http://www.dlink.co.nz>
E-mail: support@dlink.co.nz

South Africa and Sub Sahara Region:

Tel: +27 12 661 2025
08600 DLINK (for South Africa only)
Monday to Friday 8:30am to 9:00pm South Africa Time
Web: <http://www.d-link.co.za>
E-mail: support@d-link.co.za

Saudi Arabia (KSA):

Tel: +966 01 217 0008
Fax: +966 01 217 0009
Saturday to Wednesday 9.30AM to 6.30PM
Thursdays 9.30AM to 2.00 PM
E-mail: Support.sa@dlink-me.com

D-Link Middle East - Dubai, U.A.E.

Plot No. S31102,
Jebel Ali Free Zone South,
P.O.Box 18224, Dubai, U.A.E.
Tel: +971-4-8809022
Fax: +971-4-8809066 / 8809069
Technical Support: +971-4-8809033
General Inquiries: info.me@dlink-me.com
Tech Support: support.me@dlink-me.com

Egypt

1, Makram Ebeid Street - City Lights Building
Nasr City - Cairo, Egypt
Floor 6, office C2
Tel.: +2 02 26718375 - +2 02 26717280
Technical Support: +2 02 26738470
General Inquiries: info.eg@dlink-me.com
Tech Support: support.eg@dlink-me.com

Kingdom of Saudi Arabia

Office # 84 ,
Al Khaleej Building (Mujamathu Al-Khaleej)
Opp. King Fahd Road, Olaya
Riyadh - Saudi Arabia
Tel: +966 1 217 0008
Technical Support:
+966 1 2170009 / +966 2 6522951
General Inquiries: info.sa@dlink-me.com
Tech Support: support.sa@dlink-me.com

Pakistan

Islamabad Office:
61-A, Jinnah Avenue, Blue Area,
Suite # 11, EBC, Saudi Pak Tower,
Islamabad - Pakistan
Tel.: +92-51-2800397, 2800398
Fax: +92-51-2800399

Karachi Office:

D-147/1, KDA Scheme # 1,
Opposite Mudassir Park, Karsaz Road,
Karachi - Pakistan
Phone: +92-21-34548158, 34326649
Fax: +92-21-4375727
Technical Support: +92-21-34548310, 34305069
General Inquiries: info.pk@dlink-me.com
Tech Support: support.pk@dlink-me.com

TECHNICAL SUPPORT

Iran

Unit 5, 5th Floor, No. 20, 17th Alley , Bokharest
St. , Argentine Sq. ,
Tehran IRAN
Postal Code : 1513833817
Tel: +98-21-88880918,19
+98-21-88706653,54
General Inquiries: info.ir@dlink-me.com
Tech Support: support.ir@dlink-me.com

Morocco

M.I.T.C
Route de Nouaceur angle RS et CT 1029
Bureau N° 312 ET 337
Casablanca , Maroc
Phone : +212 663 72 73 24
Email: support.na@dlink-me.com

Lebanon RMA center

Dbayeh/Lebanon
PO Box:901589
Tel: +961 4 54 49 71 Ext:14
Fax: +961 4 54 49 71 Ext:12
Email: taoun@dlink-me.com

Bahrain

Technical Support: +973 1 3332904

Kuwait:

Technical Support: + 965 22453939 / +965
22453949

Türkiye Merkez İrtibat Ofisi

Ayazağa Maslak yolu
Erdebil Cevahir İş Merkezi No: 5/A Ayazağa /
Maslak İstanbul
Tel: +90 212 2895659
Ücretsiz Müşteri Destek Hattı: 0 800 211 00 65
Web:www.dlink.com.tr
Teknik Destek: support.tr@dlink.com.tr

ISRAEL

מטלון סנטר
רח' המגשימים 20
קרית מטלון, פ"ת 49348
ת.ד. 7060
טלפון: 073-796-2797
אי-מאייל כללי: info@dlink.co.il
אי-מאייל תמיכה: support@dlink.co.il

КОМПЛЕКТ ПОСТАВКИ



БЕСПРОВОДНАЯ ДВУХДИАПАЗОННАЯ ТОЧКА ДОСТУПА AC1200

DAP-1665



 
АДАПТЕР ПИТАНИЯ 12 В, 1 А ДЛЯ ПОДАЧИ ПИТАНИЯ НА DAP-1665



ETHERNET-КАБЕЛЬ (ВИТАЯ ПАРА 5 КАТЕГОРИИ) ДЛЯ ПОДКЛЮЧЕНИЯ К КОМПЬЮТЕРУ



РУКОВОДСТВО ПОЛЬЗОВАТЕЛЯ НА CD-ДИСКЕ




УКАЗАНИЕ ПО НАСТРОЙКЕ WI-FI СОДЕРЖИТ ИНФОРМАЦИЮ О СЕТИ WI-FI ТОЧКИ ДОСТУПА ПО УМОЛЧАНИЮ



Если что-либо из перечисленного отсутствует, пожалуйста,
обратитесь к поставщику.


УСТАНОВКА

 УСТАНОВКА УСТРОЙСТВА

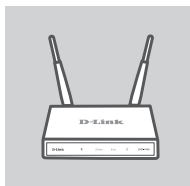


РАСПОЛОЖЕНИЕ ТОЧКИ ДОСТУПА

 Разместите данное устройство на открытом пространстве предполагаемой рабочей области для расширения зоны покрытия беспроводной сети. Если устройство используется в качестве повторителя, то следует убедиться, что точка доступа находится в зоне покрытия сети, чей сигнал необходимо усилить

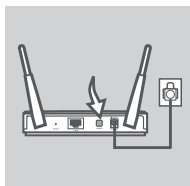

ВКЛЮЧИТЕ ПИТАНИЕ

 Подключите входящий в комплект поставки адаптер питания к DAP-1665 и к розетке. Нажмите выключатель питания на задней панели точки доступа, чтобы включить питание. Подождите около 30 секунд до тех пор, пока устройство не завершит процесс загрузки.

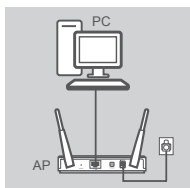

ПОДКЛЮЧИТЕ DAP-1665

Подключите входящий в комплект поставки Ethernet-кабель к LAN-порту на задней панели DAP-1665 и к Ethernet-порту компьютера. В качестве альтернативного варианта, можно подключиться к DAP-1665, используя Wi-Fi. Перейдите в настройки компьютера или настройки Wi-Fi мобильного устройства. Выберите имя сети (SSID), которое напечатано во входящем в комплект поставки указании по настройке Wi-Fi (пример: **dlink-A8FA**), затем введите пароль Wi-Fi, также напечатанный в указании по настройке Wi-Fi (пример: **akbdj19368**).

НАСТРОЙКА УСТРОЙСТВА (ЧЕРЕЗ УТИЛИТУ WEB-НАСТРОЙКИ)

Откройте Web-браузер (например, Internet Explorer) и введите **http://dlinkap** или **http://dlinkap.local**. в адресной строке. Произойдет перенаправление в Web-утилиту настройки. Именем пользователя по умолчанию является Admin, а поле пароля следует оставить пустым. Нажмите **Log In** (Войти), чтобы продолжить. Когда вход будет осуществлен, нажмите **Launch Wireless Setup Wizard** (Запустить мастер настройки беспроводной сети), чтобы начать процесс установки. За дополнительной информацией по настройке точки доступа, пожалуйста, обратитесь к входящему в комплект поставки руководству пользователя.

URL-АДРЕС : **http://dlinkap** или **http://dlinkap.local**.

USERNAME: Admin

PASSWORD: (по умолчанию не заполняется)

Если у Вас несколько точек доступа, введите **http://dlinkapxxxx**, или **http://dlinkapxxxx.local**. (где **xxxx** - последние четыре знака MAC-адреса точки доступа, который указан на этикетке на нижней панели устройства).

ПОИСК И УСТРАНЕНИЕ НЕИСПРАВНОСТЕЙ

ПРОБЛЕМЫ УСТАНОВКИ И НАСТРОЙКИ

1. ПОЧЕМУ НЕ УДАЕТСЯ ПОЛУЧИТЬ ДОСТУП К УТИЛИТЕ WEB-НАСТРОЙКИ?

- Проверьте физическое соединение между компьютером и точкой доступа. Индикатор LAN на точке доступа должен быть подсвечен, что означает наличие соединения. Также следует убедиться, что Ethernet-порт компьютера включен и функционирует корректно.
- Если для подключения к точке доступа используется Wi-Fi, убедитесь, что Вы подключены к соответствующей беспроводной сети, и проблемы с соединением отсутствуют. Если доступ к утилите настройки по-прежнему невозможен, попробуйте подключиться к точке доступа, используя входящий в комплект поставки Ethernet-кабель.

2. КАК СБРОСИТЬ DAP-1665 К ЗАВОДСКИМ НАСТРОЙКАМ?

- Убедитесь, что питание устройства включено.
- Нажмите и удерживайте кнопку сброса на задней панели устройства в течение 5 секунд. Примечание: Сброс устройства к заводским настройкам удалит текущие параметры. Вам следует повторить процесс настройки, описанный выше в руководстве по установке, чтобы повторно настроить точку доступа.

3. КАК ДОБАВИТЬ НОВОГО БЕСПРОВОДНОГО КЛИЕНТА ИЛИ ПК, ЕСЛИ ЗАБЫТО ИМЯ БЕСПРОВОДНОЙ СЕТИ (SSID) ИЛИ КЛЮЧ ШИФРОВАНИЯ БЕСПРОВОДНОЙ СЕТИ?

- Если заводские настройки Wi-Fi не были изменены, можно использовать информацию, указанную во входящей в комплект поставки карточке настройки Wi-Fi, чтобы подключиться к точке доступа.
- Если настройки Wi-Fi были изменены, то следует получить доступ к утилите Web-настройки способом, описанным на предыдущей странице, и снова выполнить шаги мастера установки, чтобы обновить настройки беспроводной сети.
- Запишите или запомните эти настройки для возможности дальнейшего их использования каждым устройством, подключающимся к беспроводной сети.

ТЕХНИЧЕСКАЯ ПОДДЕРЖКА

Обновления программного обеспечения и документация доступны на Интернет-сайте D-Link. D-Link предоставляет бесплатную поддержку для клиентов в течение гарантийного срока. Клиенты могут обратиться в группу технической поддержки D-Link по телефону или через Интернет.

Техническая поддержка D-Link:

8-800-700-5465

Техническая поддержка через Интернет:

<http://www.dlink.ru>

e-mail: support@dlink.ru

ОФИСЫ

Россия

129626 г. Москва
Графский пер., 14
Тел.: +7 (495) 744-0099

Украина

04080 г. Киев , ул. Межигорская, 87-А, офис 18
Тел.: +38 (044) 545-64-40
E-mail: kiev@dlink.ru

Беларусь

220114, г. Минск, проспект Независимости,
169 , БЦ "XXI Век"
Тел.: +375(17) 218-13-65
E-mail: minsk@dlink.ru

Казахстан

050008, г. Алматы, ул. Курмангазы, 143
(уг. Муқанова)
Тел./факс: +7 727 378-55-90
E-mail: almaty@dlink.ru

Армения

0038, г. Ереван, ул. Абеяна, 6/1, 4 этаж
Тел./Факс: + 374 (10) 398-667
E-mail: erevan@dlink.ru

Грузия

Тел./Факс: +995 (593) 98-3210

Lietuva

09120, Vilnius, Žirmūnų 139-303
Тел./факс. +370 (5) 236-3629
E-mail: info@dlink.lt

Eesti

Mustamäe 55-314
10621, Tallinn
Tel +372 613 9771
e-mail: info@dlink.ee

Latvija

Mazā nometņu 45/53 (ieeja no Nāras ielas)
LV-1002, Rīga
Тел.:+371 7 618-703
Fax: +371 7 618-706
e-pasts: info@dlink.lv

CONTENIDO DEL EMPAQUE



**WIRELESS AC1200 DUAL BAND ACCESS POINT
DAP-1665**



**ADAPTADOR DE CORRIENTE 12V 1A
PROPORCIONA ENERGÍA AL DAP-1665**



**CABLE ETHERNET (CAT5 UTP)
UTILÍCELO PARA CONECTARLO A SU PC**



CD CON MANUAL DEL PRODUCTO



**NOTA DE CONFIGURACIÓN WI-FI
CONTIENE LA WI-FI POR DEFECTO DEL AP**



Si alguno de estos elementos falta en su empaque, póngase en contacto con su distribuidor.

 
INSTALACIÓN DEL PRODUCTO

INSTALACIÓN DEL PRODUCTO




UBICACIÓN DEL PUNTO DE ACCESO

Ubique el punto de acceso en un área abierta de su área de trabajo destinada a la mejor cobertura inalámbrica. Si usted lo está utilizando como un repetidor, debe asegurarse de que el punto de acceso se encuentre dentro del rango de la red inalámbrica a la que desea repetir



CONECTE LA ALIMENTACIÓN ELÉCTRICA

 Conecte el adaptador de corriente en la parte posterior del DAP-1665 y conéctelo a una toma de corriente. Pulse el interruptor de encendido en la parte posterior del punto de acceso para activar la alimentación. Espere unos 30 segundos para que el dispositivo complete el proceso de inicio.

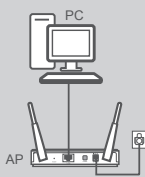

CONECTAR EL DAP-1665

Utilizando el cable Ethernet, conecte un extremo al puerto LAN en la parte posterior del DAP-1665, y el otro extremo al puerto Ethernet de su PC. Alternativamente, se puede conectar al DAP-1665 con Wi-Fi. Vaya a su PC o a la configuración Wi-Fi del dispositivo móvil. Seleccione el nombre de red (SSID) que aparece impreso en la Nota de Configuración Wi-Fi incluida (por ejemplo: **dlink-A8FA**), a continuación, introduzca la contraseña de Wi-Fi también impresa en la Nota de Configuración Wi-Fi (por ejemplo: **akbdj19368**).

CONFIGURACIÓN DEL PRODUCTO (UTILIDAD BASADA EN WEB)

Para configurar, abra un navegador web (como Internet Explorer) e introduzca **http://dlinkap** o **http://dlinkap.local** en la barra de direcciones. Esto lo dirigirá a la utilidad de configuración basada en web. El nombre de usuario predeterminado es admin y el campo de la contraseña debe dejarse en blanco. Haga clic en **Iniciar sesión (Log In)** para continuar. Una vez iniciada la sesión, haga clic en **Iniciar Asistente de configuración inalámbrica** para comenzar el proceso de instalación. Para más información sobre cómo configurar su punto de acceso, consulte el manual de usuario incluido.

URL DE INGRESO: <http://dlinkap> or <http://dlinkap.local>.

USUARIO: Admin

CONTRASEÑA: dejar espacio en blanco por defecto

Si usted tiene más de un punto de acceso, introduzca **http://dlinkapxxxx** o **http://dlinkapxxxx.local**. (donde **xxxx** representa los cuatro últimos dígitos de la dirección MAC del punto de acceso, que se encuentra en la etiqueta en la parte inferior del dispositivo).

SOLUCIÓN DE PROBLEMAS

PROBLEMAS DE INSTALACIÓN Y CONFIGURACIÓN

1. ¿POR QUÉ NO PUEDO ACCEDER A LA UTILIDAD DE CONFIGURACIÓN WEB?

- Compruebe la conexión física entre el PC y el punto de acceso. El LED LAN en el punto de acceso debe estar encendido, lo que indica que hay una conexión actual. También debe asegurarse de que el puerto Ethernet del PC está activado y funciona correctamente.
- Si utiliza Wi-Fi para conectarse al punto de acceso, asegúrese de que está conectado a la red inalámbrica correcta, y que no hay problemas de conectividad. Si aún no puede acceder a la utilidad de configuración, intente conectar al punto de acceso con el cable Ethernet incluido.

2. ¿CÓMO PUEDO RESTABLECER MI DAP-1665 A LA CONFIGURACIÓN PREDETERMINADA DE FÁBRICA?

- Asegúrese de que el punto de acceso está encendido.
- Mantenga pulsado el botón de Reset en la parte posterior del dispositivo durante 5 segundos.
Nota: Al restablecer el producto a los valores de fábrica, se borrará la configuración actual. Deberá repetir el proceso de instalación descrito en la guía de instalación para reconfigurar su punto de acceso.

3. ¿CÓMO PUEDO AÑADIR UN NUEVO CLIENTE O PC INALÁMBRICO SI HE OLVIDADO MI NOMBRE DE RED WIRELESS (SSID) O LA CLAVE WIRELESS ENCRIPTADA?

- Si no ha cambiado la configuración de Wi-Fi por defecto, se puede utilizar la información que aparece en la tarjeta de configuración Wi-Fi disponible para conectarse al punto de acceso.
- Si ha cambiado la configuración de Wi-Fi, se debe acceder a la utilidad de configuración web, como se describe en la página anterior, y complete el asistente de instalación nuevamente para renovar la configuración inalámbrica.
- Asegúrese de anotar estos valores para que pueda introducirlos en cada dispositivo conectado de forma inalámbrica.

Usted puede encontrar actualizaciones de softwares o firmwares y documentación para usuarios a través de nuestro sitio www.dlinkla.com

SOPORTE TÉCNICO PARA USUARIOS EN LATINO AMERICA

Soporte técnico a través de los siguientes teléfonos de D-Link

PAIS	NUMERO
Argentina	0800 - 12235465
Chile	800 260200
Colombia	01800 - 510070
Costa Rica	0800 - 0521478
Ecuador	1800 - 035465
El Salvador	800 - 6335
Guatemala	1800 - 8350255
México	01800 - 0626270
Panamá	011 008000525465
Perú	0800 - 00968
Venezuela	0800 - 1005767

Soporte Técnico de D-Link a través de Internet

Horario de atención Soporte Técnico en www.dlinkla.com

e-mail: soporte@dlinkla.com & consultas@dlinkla.com

CONTEÚDO DA EMBALAGEM



**PONTO DE ACESSO WIRELESS AC1200 DUAL BAND
DAP-1665**



ADAPTADOR DE ENERGIA 12V 1A
FONTE DE ALIMENTAÇÃO DO DAP-1665



 
CABO DE REDE ETHERNET (CAT5 UTP)
USE PARA CONECTAR O DAP-1665 AO SEU
COMPUTADOR OU SWITCH



MANUAL DO PRODUTO DISPONÍVEL NO CD



CARTÃO DE CONFIGURAÇÃO WI-FI
CONTÉM INFORMAÇÕES DE FÁBRICA DO PONTO DE
ACESSO

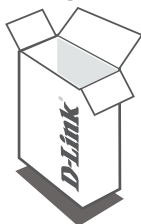

Se algum dos itens acima estiver faltando, entre em contato
com o revendedor

 
CONFIGURAÇÃO DO PRODUTO

INSTALAÇÃO




POSICIONE FISICAMENTE O PONTO DE ACESSO

Instale o ponto de acesso em uma área aberta de seu ambiente de trabalho para melhor cobertura sem fios. Se você estiver usando-o como um repetidor, você deve garantir que o ponto de acesso está dentro do alcance da rede sem fios existente que você deseja ampliar.

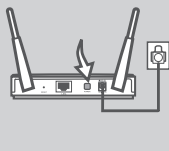

LIGUE O PRODUTO

 Conecte o adaptador de alimentação fornecido na parte de trás do DAP-1665 e conecte-o em uma tomada elétrica. Pressione o botão de energia na parte de trás do ponto de acesso para ligá-lo. Espere cerca de 30 segundos para o dispositivo para concluir os processos de inicialização.

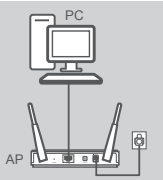

CONECTE O DAP-1665

Usando o cabo Ethernet disponível, conecte uma extremidade à porta LAN na parte traseira do DAP-1665, e ligue a outra extremidade à porta Ethernet em seu computador. Também, você pode se conectar ao DAP-1665 usando sua conexão Wi-Fi. Em seu computador, selecione o nome da rede (SSID) que está impresso no cartão de configurações Wi-Fi que acompanha o produto (ex: **dlink-A8FA**), em seguida, digite a senha de acesso Wi-Fi também impresso na Nota de Configuração Wi-Fi (ex: **akbdj19368**).

CONFIGURAÇÃO DO PRODUTO (UTILITÁRIO WEB)

Para a configuração do ponto de acesso, abra um web browser (como o Internet Explorer) e digite **http://dlinkap** ou **http://dlinkap.local** na barra de endereços. Você será redirecionado ao utilitário de configuração. O nome de usuário padrão é Admin e o campo de senha deve ser deixado em branco. Clique em **Log In** para continuar. Uma vez conectado, clique em **Launch Wireless Setup Wizard** para iniciar o processo de instalação. Para outras informações de configurações de seu produto, por favor leia o manual do usuário.

URL DO AP: <http://dlinkap> ou <http://dlinkap.local>.

NOME DE USUARIO: Admin
SENHA: (deixe o campo em branco)

Se você possui mais de um ponto de acesso, digite **http://dlinkapxxxx** ou **http://dlinkapxxxx.local**. (onde **xxx** representa os últimos quatro dígitos do endereço MAC de seu produto, localizado na etiqueta que está embaixo do dispositivo).

SOLUÇÃO DE PROBLEMAS

PROBLEMAS DE INSTALAÇÃO E CONFIGURAÇÃO

1. PORQUE NÃO CONSIGO ACESSAR O UTILITÁRIO DE CONFIGURAÇÃO WEB?

- Verifique as conexões físicas entre seu computador e seu ponto de acesso. O LED da interface LAN do ponto de acesso deve estar aceso, indicando que existe uma conexão física. Verifique também a placa de rede de seu computador, pois ela deve estar em perfeito funcionamento para as conexões serem estabelecidas.

2. COMO FAÇO PARA REDEFINIR (RESET) MEU DAP-1665 PARA AS CONFIGURAÇÕES PADRÕES DE FÁBRICA?

- Verifique se o ponto de acesso está ligado.
- Pressione e segure o botão reset na parte de trás de seu produto por 5 segundos
Nota: Redefinir o ponto de acesso para as configurações padrões de fábrica irá apagar as configurações atuais. Você deve repetir o processo de configuração descrito no guia de instalação acima para reconfigurar seu aparelho.

3. COMO FAÇO PARA ADICIONAR UM NOVO COMPUTADOR EM MINHA REDE WIRELESS SE EU ESQUECER O NOME DA REDE (SSID) OU A SENHA DE ACESSO?

- Se você manteve as configurações padrões de fábrica sem alteração, você pode usar as informações contidas no Cartão de configuração Wi-Fi disponível para se conectar ao ponto de acesso.
- Se você tiver alterado as configurações Wi-Fi, você deve acessar o utilitário de configuração baseado na interface WEB, conforme descrito na página anterior, e completar o assistente de configuração novamente para redefinir as configurações da rede sem fios.
- Anote as novas configurações para que você possa inseri-las em cada dispositivo que desejar conectar em sua rede sem fios.

SUORTE TÉCNICO

Caso tenha dúvidas na instalação do produto, entre em contato com o Suporte Técnico D-Link.

Acesse o site: www.dlink.com.br/suporte

包裝內容

內容



AC1200 雙頻無線基地台
DAP-1665



12V 1A 變壓器
DAP-1665 的外接式電源供應器



乙太網路線 (CAT5 UTP)
在設定時可用來連接電腦和基地台



光碟
內容為英文使用手冊



 
無線資料卡
顯示 DAP-1665 預設的無線網路名稱 (SSID) 和密碼 (PASSWORD)



若缺少上述任一項物品，請儘快聯絡您購買的經銷商。


產品設定

快速安裝

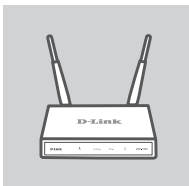


放置基地台

 請將DAP-1665放置在您想使用區域內較無阻隔物的位置，並避開微波爐、無線電話等干擾源來取得較佳的無線訊號和涵蓋範圍。若您要將DAP-1665作為無線中繼站，請確認它的位置在基地台的無線涵蓋範圍內。

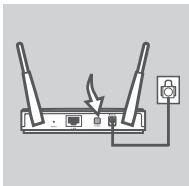

開啟電源

 請將電源供應器的一端連接至DAP-1665背面的電源孔，另一端連接至電源插座，再按下DAP-1665背面的電源開關，並等待約30秒的開機程序。

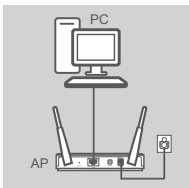

連線至DAP-1665

請將網路線的一端連接至DAP-1665背面的LAN埠，並將另一端連接至您的電腦的網路埠。

您也可以透過無線來連線至DAP-1665。請開啟電腦或行動裝置的無線功能，搜尋並選擇DAP-1665的無線名稱(印在無線資料卡上的SSID，如**dlink-A8FA**)，再輸入無線密碼(印在無線資料卡上的Password，如**akbdj19368**)。

請至電腦的「區域連線」內容(若使用無線時請至「無線連線」的內容)，將TCP/IP(IPv4)設為「使用下列IP位址」，並在IP位址欄位內輸入192.168.0.x(除了50外，1-254皆可)，子網路遮罩欄位為255.255.255.0。註：此設定僅用於設定DAP-1665時。

設定DAP-1665

請開啟網頁瀏覽器(如Internet Explorer)，在網址列輸入<http://dlinkap.local>來開啟設定網頁。出現登入畫面後，在「使用者名稱(User Name)」的欄位輸入「admin」，密碼(Password)不需輸入，再按下「登入(Log In)」按鈕，之後按下**Launch Wireless Setup Wizard**即可開始依設定精靈的引導來設定。若要更多的設定資訊請參考光碟內的使用手冊。

IP位址: <http://dlinkap> 或 <http://dlinkap.local>.

USERNAME: Admin

PASSWORD: (無)

若您有一台以上的基地台，請輸入<http://dlinkapxxx>或<http://dlinkapxxx.local>。(xxxx是DAP-1665的末4碼mac位址，您可以由設備底部的標籤查看到此資料)。

常見問題

設定和安裝的疑問

1. 我為何無法開啟設定網頁？

- (1) 請確認設備的電源指示燈已亮起。
- (2) 若使用有線連線時，請確認電腦的網路線是直接連線至DAP-1665，且設備的LAN指示燈已亮起。
- (3) 若使用無線連線時，請確認無線裝置的無線顯示已連線，且連到的名稱為DAP-1665的SSID。
- (4) 請確認電腦或行動裝置的IP位址與DAP-1665在同網段(即前三碼相同)。
- (5) 若電腦有建立寬頻連線(ADSL連線)，請確認該連線為斷線或停用狀態，且不是設為預設連線。
- (6) 若使用IE瀏覽器，請至「工具」>「網際網路選項」>「連線」選擇「永遠不撥號連線，再至「區域網路設定」內確認未勾選「Proxy伺服器」。
- (7) 請依問題2的說明將設備reset回復原廠預設值後再試一次。

2. 若要重新設定DAP-1665或忘記密碼時，我要如何將設備回復出廠預設值(RESET)?

- (1) 確認設備已連接電源並在待機中。
- (2) 用迴紋針等細物插入DAP-1665背面的reset孔約8-10秒再放開，再稍候設備重新啟動。
請注意! 此動作會將DAP-1665的設定全部清除，請在設備開機完成後依上述說明重新設定。

3. DAP-1665在AP模式下，裝置的無線網路已顯示連線但無法連上網際網路時該如何檢查?

- 若DAP-1665上端直接連接數據機:
 - (1) Cable電視寬頻(DHCP)的使用者-請確認裝置內的「無線連線」IP位址設定為「自動取得IP位址」。
 - (2) xDSL/ADSL的使用者-請確認在電腦上有執行寬頻連線(ADSL連線)，且連線的使用者名稱和密碼資料皆正確。若您使用的是行動裝置則無法適用於此種網路架構，請在DAP-1665上端加裝一台路由器，若數據機有DHCP伺服器則請將該功能啟用。
 - (3) 固定IP的使用者-請確認裝置內的「無線連線」IP位址設定為「固定IP位址(使用下列IP位址)」，並輸入由網路業者提供的IP位址。
- 若DAP-1665上端連接路由器: 請確認路由器已設定連通網際網路。

如果您還有任何本使用手冊無法協助您解決的產品相關問題，台灣地區用戶可以透過我們的網站、電子郵件或電話等方式與D-Link台灣地區技術支援工程師聯絡。

D-Link 免付費技術諮詢專線

0800-002-615

手機付費電話 (02)6600-0123#8715

服務時間：週一至週五，早上9:00到晚上9:00

(不含周六、日及國定假日)

網 站：<http://www.dlink.com.tw>

電子郵件：dssqa_service@dlink.com.tw

如果您是台灣地區以外的用戶，請參考D-Link網站，全球各地分公司的聯絡資訊以取得相關支援服務。

產品保固期限、台灣區維修據點查詢，請參考以下網頁說明：

<http://www.dlink.com.tw>

產品維修：

使用者可直接送至全省聯強直營維修站或請洽您的原購買經銷商。

ISI KEMASAN



**AKSES POIN NIRKABEL DUAL BAND AC1200
DAP-1665**



ADAPTOR DAYA 12V 1A
MEMBERIKAN DAYA KE DAP-1665



KABEL ETHERNET (UTP CAT5)
DIGUNAKAN UNTUK MENGHUBUNGKAN KE KOMPUTER
ANDA



MANUAL PERANGKAT DALAM CD



CATATAN KONFIGURASI WI-FI
BERISI INFORMASI PENGATURAN AWAL WI-FI AP



Bila salah satu dari item diatas hilang, mohon hubungi penjual Anda

 
PENGATURAN PERANGKAT

INSTALASI PERANGKAT




POSISIKAN AKSES POIN

Letakkan akses poin (AP) di area terbuka dimana Anda ingin memperluas jangkauan nirkabel Anda. Bila Anda menggunakannya sebagai repeater, Anda harus memastikan bahwa akses poin berada dalam area yang masih dapat dijangkau oleh jaringan nirkabel yang ingin anda perkuat.



MENYALAKAN DAYA

 Colokkan adaptor daya yang disediakan ke bagian belakang DAP-1665 dan hubungkan ke stopkontak. Tekan tombol Power pada bagian belakang akses poin untuk menyalakan perangkat. Tunggu sekitar 30 detik sampai perangkat selesai melakukan proses startup.

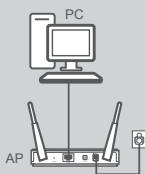

MENGHUBUNGKAN DAP-1665

Dengan menggunakan kabel Ethernet yang tersedia, colokkan satu ujung kabel tersebut ke port LAN pada bagian belakang DAP-1665 dan colokkan ujung lainnya ke PC anda. Atau Anda juga dapat terhubung ke DAP-1665 melalui nirkabel. Buka bagian pengaturan Wi-Fi pada perangkat mobile atau komputer Anda. Pilih nama jaringan (SSID) yang tertera pada catatan Wi-Fi Configuration Note (mis: **dlink-A8FA**) kemudian masukkan kata sandi Wi-Fi yang juga tertera pada catatan Wi-Fi Configuration Note (mis: **akbdj19368**).

KONFIGURASI PERANGKAT (MENGUNAKAN WEB-BASED)

Untuk melakukan konfigurasi, buka web browser (seperti Internet Explorer) dan masukkan **http://dlinkap** atau **http://dlinkap.local** pada bagian alamat. Ini akan mengarahkan anda ke web-based configuration utility. Username bawaan adalah Admin dan kolom kata sandi dibiarkan kosong. Klik **Log In** untuk melanjutkan. Setelah Anda selesai log in, klik pada **Launch Wireless Setup Wizard** untuk memulai proses pengaturan. Untuk informasi lebih lanjut mengenai cara mengkonfigurasi Akses Poin Anda, silahkan mengacu ke Manual Pengguna yang tersedia.

LOGIN URL : <http://dlinkap> atau <http://dlinkap.local>.

USERNAME: Admin

PASSWORD: (dibiarkan kosong)

Bila Anda memiliki lebih dari satu Akses Poin, masukkan **http://dlinkapxxxx**, atau **http://dlinkapxxxx.local**. (dimana xxxx mewakili empat digit terakhir dari alamat MAC Akses Poin, yang tertera pada label di bagian bawah perangkat).

PENANGANAN MASALAH

MASALAH PADA SAAT PENGATURAN DAN KONFIGURASI

1. MENGAPA SAYA TIDAK BISA MENGAKSES KONFIGURASI UTILITY BERBASIS WEB?

- Periksa sambungan fisik antara komputer dan AP. Lampu LED LAN pada AP harus menyala, yang menunjukkan bahwa sambungan aktif. Anda juga harus memastikan bahwa port Ethernet komputer Anda diaktifkan dan berfungsi dengan benar.
- Jika Anda menggunakan Wi-Fi untuk terhubung ke AP, pastikan bahwa Anda terhubung ke jaringan nirkabel yang benar, dan bahwa tidak ada masalah konektivitas. Jika Anda masih tidak dapat mengakses utilitas konfigurasi, coba hubungkan ke AP dengan menggunakan kabel Ethernet yang disertakan.

2. BAGAIMANA ME-RESET DAP-1665 AP KE BAWAAN PABRIK?

- Pastikan AP dinyalakan.
- Tekan dan tahan tombol reset pada bagian belakang perangkat selama 5 detik.
Catatan: Reset AP ke bawaan pabrik akan menghapus pengaturan konfigurasi saat ini. Anda harus mengulangi proses setup yang dijelaskan dalam panduan instalasi di atas untuk mengkonfigurasi ulang AP Anda.

3. BAGAIMANA CARA MENAMBAH KLIEN NIRKABEL ATAU PC BARU JIKA SAYA TIDAK INGAT NAMA JARINGAN NIRKABEL (SSID) ATAU PASSWORDNYA?

- Jika Anda belum mengubah pengaturan Wi-Fi Anda dari bawaan pabrik, Anda dapat menggunakan informasi yang tercantum pada catatan Wi-Fi Configuration Card untuk terhubung ke AP.
- Jika Anda telah mengubah pengaturan Wi-Fi, Anda harus mengakses utilitas konfigurasi berbasis web seperti yang dijelaskan pada halaman sebelumnya, dan menyelesaikan setup wizard lagi untuk memperbaharui pengaturan nirkabel Anda.
- Pastikan Anda menuliskan pengaturan ini sehingga Anda dapat memasukkan mereka ke dalam setiap perangkat yang terhubung secara nirkabel.

DUKUNGAN TEKNIS

Update perangkat lunak dan dokumentasi pengguna dapat diperoleh pada situs web D-Link.
Dukungan Teknis untuk pelanggan:

Dukungan Teknis D-Link melalui telepon:

Tel: +62-21-5731610

Dukungan Teknis D-Link melalui Internet:

Email : support@dlink.co.id

Website : <http://support.dlink.co.id>

パッケージ内容

パッケージ一覧



ワイヤレス AC1200 デュアルバンドアクセスポイント
DAP-1665



12V 1A 電源アダプタ
DAP-1665へ電源供給します



 
イーサネットケーブル (CAT5 UTP)
コンピュータとの接続に使用します



製品マニュアルCD



Wi-Fi設定ノート (WI-FI CONFIGURATION NOTE)
アクセスポイントのデフォルトWi-Fi情報を含みます

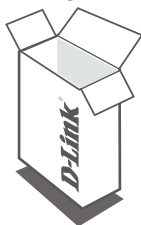

万が一、同梱物に不足がある場合には、販売店へご連絡ください。

 
製品設定

製品設置



アクセスポイントの位置

ワイヤレスの受信範囲をより広くするため、設置する場所の中でもオープンエリアにアクセスポイントを設置してください。リピータとして利用する場合には、リピータしたいネットワークのワイヤレス範囲内にアクセスポイントがあることを確認する必要があります。



電源を入れる

DAP-1665の背面に電源アダプタを接続し、電源コンセントにそれを接続します。電源を入れるためには、アクセスポイントの背面にある電源スイッチを押下します。デバイスが起動プロセスを完了するまで30秒ほどお待ちください。



DAP-1665への接続

同梱されたイーサネットケーブルを使って、DAP-1665の背面にあるLANポートに一端を接続し、他端をコンピュータのイーサネットポートに接続してください。もう一つの方法として、Wi-Fiを使ってDAP-1665に接続できます。コンピュータもしくはモバイルデバイスのWi-Fi設定に移動してください。同梱のWi-Fi設定ノートに印刷されたネットワーク名 (SSID) を選択してください (例: dlink-A8FA)。その後、Wi-Fi設定ノートに印刷されたWi-Fiパスワードを入力してください (例: akbdj19368)。

製品設定 (Webベースユーティリティ)

設定を行うには、Webブラウザ (Internet Explorerのような) を開き、アドレスバーに `http://dlinkap` もしくは `http://dlinkap.local` と入力してください。これによりWebベース設定ユーティリティを使うことができます。デフォルトのユーザ名はAdmin、パスワード欄は空欄のままにしてください。続けてLog Inをクリックしてください。ログインしてすぐに、設定プロセスを開始するためのLaunch Wireless Setup Wizardをクリックします。アクセスポイントの設定におけるより詳しい情報は、同梱のユーザマニュアルを参照してください。

ログインURL: `http://dlinkap` もしくは `http://dlinkap.local`

ユーザ名: Admin

パスワード: デフォルトは空欄

複数のアクセスポイントをお持ちの場合は、`http://dlinkapxxxx` もしくは `http://dlinkapxxxx.local` と入力してください。(xxxx部分はアクセスポイントのMACアドレスの最後の4ケタを表しています。MACアドレスはデバイスの下面のラベルに記載されています。)

トラブルシューティング

セットアップおよび設定の問題

1. Webベース設定ユーティリティにアクセスできません

- コンピュータとアクセスポイント間の物理的な接続を確認してください。接続されていることを示すアクセスポイントのLAN LEDが点灯しているはずですが、コンピュータのイーサネットポートが有効になっており正しく動作しているかも確認してください。
- アクセスポイントにWi-Fiを使って接続する場合には、正しいワイヤレスネットワークに接続し、接続状況に何も問題がないかを確認してください。それでも設定ユーティリティにアクセスできない場合には、同梱のイーサネットケーブルを使ってアクセスポイントに接続してください。

2. DAP-1665を工場出荷時設定にリセットするにはどうすればいいですか？

- アクセスポイントの電源がオンになっていることを確認してください。
 - デバイスの背面にあるリセットボタンを5秒間押下してください。
- 注意：工場出荷時設定にアクセスポイントのリセットすると、現在の設定が消去されます。アクセスポイントを再設定するには、上述の設置ガイドに記載されたセットアッププロセスを繰り返す必要があります。

3. ワイヤレスネットワーク名 (SSID) もしくはワイヤレス暗号化キーを忘れてしまった場合、新しいワイヤレスクライアントもしくはPCをどのように追加すればいいですか？

- 工場出荷時設定からWi-Fi設定を変更していない場合は、アクセスポイントに接続するために、同梱のWi-Fi設定ノートに記載された情報を使うことができます。
- Wi-Fi設定を変更している場合は、以前のページで記載したWebベース設定ユーティリティにアクセスし、ワイヤレス設定を更新するために再度セットアップウィザードを完了させる必要があります。
- ワイヤレス接続するデバイスのそれぞれに入力するための設定を書き留めているかを確認します。

この度は弊社製品をお買い上げいただき、誠にありがとうございます。

下記弊社Webサイトからユーザ登録及び新製品登録を行っていただき、ダウンロードサービスにてサポート情報、ファームウェア、ユーザマニュアルをダウンロードすることができます。

ディーリンクジャパン Webサイト

URL:<http://www.dlink-jp.com>



D-LINK GPL CODE STATEMENT

This D-Link product includes software code developed by third parties, including software code subject to the GNU General Public License ("GPL") or GNU Lesser General Public License ("LGPL"). As applicable, the terms of the GPL and LGPL, and information on obtaining access to the GPL code and LGPL code used in this product, are available to you at:

<http://tsd.dlink.com.tw/GPL.asp>

The GPL code and LGPL code used in this product are distributed WITHOUT ANY WARRANTY and is subject to the copyrights of one or more authors. For details, see the GPL code and the LGPL code for this product and the terms of the GPL and LGPL.

WRITTEN OFFER FOR GPL AND LGPL SOURCE CODE

Where such specific license terms entitle you to the source code of such software, D-Link will provide upon written request via email and/or traditional paper mail the applicable GPL and LGPL source code files via CD-ROM for a nominal cost to cover shipping and media charges as allowed under the GPL and LGPL.

Technical Support: For product support, please visit <http://support.dlink.com> for further assistance.

General Public License ("GPL") Inquiries: Please direct all GPL inquiries to the following email/address. Note that technical support inquiries will not be supported at the below address.

Email:

GPLCODE@DLink.com

Snail Mail:

Attn: GPLSOURCE REQUEST

D-Link Systems, Inc.

17595 Mt. Herrmann Street

Fountain Valley, CA 92708

GNU GENERAL PUBLIC LICENSE

Version 2, June 1991

Copyright (C) 1989, 1991 Free Software Foundation, Inc.
51 Franklin Street, Fifth Floor, Boston, MA 02110-1301, USA

Everyone is permitted to copy and distribute verbatim copies of this license document, but changing it is not allowed.

PREAMBLE

The licenses for most software are designed to take away your freedom to share and change it. By contrast, the GNU General Public License is intended to guarantee your freedom to share and change free software—to make sure the software is free for all its users. This General Public License applies to most of the Free Software Foundation's software and to any other program whose authors commit to using it. (Some other Free Software Foundation software is covered by the GNU Library General Public License instead.) You can apply it to your programs, too.

When we speak of free software, we are referring to freedom, not price. Our General Public Licenses are designed to make sure that you have the freedom to distribute copies of free software (and charge for this service if you wish), that you receive source code or can get it if you want it, that you can change the software or use pieces of it in new free programs; and that you know you can do these things.

To protect your rights, we need to make restrictions that forbid anyone to deny you these rights or to ask you to surrender the rights. These restrictions translate to certain responsibilities for you if you distribute copies of the software, or if you modify it. For example, if you distribute copies of such a program, whether gratis or for a fee, you must give the recipients all the rights that you have. You must make sure that they, too, receive or can get the source code. And you must show them these terms so they know their rights.

We protect your rights with two steps: (1) copyright the software, and (2) offer you this license which gives you legal permission to copy, distribute and/or modify the software.

Also, for each author's protection and ours, we want to make certain that everyone understands that there is no warranty for this free software. If the software is modified by someone else and passed on, we want its recipients to know that what they have is not the original, so that any problems introduced by others will not reflect on the original authors' reputations.

Finally, any free program is threatened constantly by software patents. We wish to avoid the danger that redistributors of a free program will individually obtain patent licenses, in effect making the program proprietary. To prevent this, we have made it clear that any patent must be licensed for everyone's free use or not licensed at all.

The precise terms and conditions for copying, distribution and modification follow.

GNU GENERAL PUBLIC LICENSE

TERMS AND CONDITIONS FOR COPYING, DISTRIBUTION AND MODIFICATION

0. This License applies to any program or other work which contains a notice placed by the copyright holder saying it may be distributed under the terms of this General Public License. The "Program", below, refers to any such program or work, and a "work based on the Program" means either the Program or any derivative work under copyright law: that is to say, a work containing the Program or a portion of it, either verbatim or with modifications and/or translated into another language. (Hereinafter, translation is included without limitation in the term "modification".) Each licensee is addressed as "you".

Activities other than copying, distribution and modification are not covered by this License; they are outside its scope. The act of running the Program is not restricted, and the output from the Program is covered only if its contents constitute a work based on the Program (independent of having been made by running the Program). Whether that is true depends on what the Program does.

1. You may copy and distribute verbatim copies of the Program's source code as you receive it, in any medium, provided that you conspicuously and appropriately publish on each copy an appropriate copyright notice and disclaimer of warranty; keep intact all the notices that refer to this License and to the absence of any warranty; and give any other recipients of the Program a copy of this License along with the Program.

You may charge a fee for the physical act of transferring a copy, and you may at your option offer warranty protection in exchange for a fee.

2. You may modify your copy or copies of the Program or any portion of it, thus forming a work based on the Program, and copy and distribute such modifications or work under the terms of Section 1 above, provided that you also meet all of these conditions:

- You must cause the modified files to carry prominent notices stating that you changed the files and the date of any change.
- You must cause any work that you distribute or publish, that in whole or in part contains or is derived from the Program or any part thereof, to be licensed as a whole at no charge to all third parties under the terms of this License.
- If the modified program normally reads commands interactively when run, you must cause it, when started running for such interactive use in the most ordinary way, to print or display an announcement including an appropriate copyright notice and a notice that there is no warranty (or else, saying that you provide a warranty) and that users may redistribute the program under these conditions, and telling the user how to view a copy of this License. (Exception: if the Program itself is interactive but does not normally print such an announcement, your work based on the Program is not required to print an announcement.)

These requirements apply to the modified work as a whole. If identifiable sections of that work are not derived from the Program, and can be reasonably considered independent and separate works in themselves, then this License, and its terms, do not apply to those sections when you distribute them as separate works. But when you distribute the same sections as part of a whole which is a work based on the Program, the distribution of the whole must be on the terms of this License, whose permissions for other licensees extend to the entire whole, and thus to each and every part regardless of who wrote it.

Thus, it is not the intent of this section to claim rights or contest your rights to work written entirely by you; rather, the intent is to exercise the right to control the distribution of derivative or collective works based on the Program.

In addition, mere aggregation of another work not based on the Program with the Program (or with a work based on the Program) on a volume of a storage or distribution medium does not bring the other work under the scope of this License.

3. You may copy and distribute the Program (or a work based on it, under Section 2) in object code or executable form under the terms of Sections 1 and 2 above provided that you also do one of the following:

- Accompany it with the complete corresponding machine-readable source code, which must be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- Accompany it with a written offer, valid for at least three years, to give any third party, for a charge no more than your cost of physically performing source distribution, a complete machine-readable copy of the corresponding source code, to be distributed under the terms of Sections 1 and 2 above on a medium customarily used for software interchange; or,
- Accompany it with the information you received as to the offer to distribute corresponding source code. (This alternative is allowed only for noncommercial distribution and only if you received the program in object code or executable form with such an offer, in accord with Subsection b above.)

The source code for a work means the preferred form of the work for making modifications to it. For an executable work, complete source code means all the source code for all modules it contains, plus any associated interface definition files, plus the scripts used to control compilation and installation of the executable. However, as a special exception, the source code distributed need not include anything that is normally distributed (in either source or binary form) with the major components (compiler, kernel, and so on) of the operating system on which the executable runs, unless that component itself accompanies the executable.

If distribution of executable or object code is made by offering access to copy from a designated place, then offering equivalent access to copy the source code from the same place counts as distribution of the source code, even though third parties are not compelled to copy the source along with the object code.

4. You may not copy, modify, sublicense, or distribute the Program except as expressly provided under this License. Any attempt otherwise to copy, modify, sublicense or distribute the Program is void, and will automatically terminate your rights under this License. However, parties who have received copies, or rights, from you under this License will not have their licenses terminated so long as such parties remain in full compliance.

5. You are not required to accept this License, since you have not signed it. However, nothing else grants you permission to modify or distribute the Program or its derivative works. These actions are prohibited by law if you do not accept this License. Therefore, by modifying or distributing the Program (or any work based on the Program), you indicate your acceptance of this License to do so, and all its terms and conditions for copying, distributing or modifying the Program or works based on it.

6. Each time you redistribute the Program (or any work based on the Program), the recipient automatically receives a license from the original licensor to copy, distribute or modify the Program subject to these terms and conditions. You may not impose any further restrictions on the recipients' exercise of the rights granted herein. You are not responsible for enforcing compliance by third parties to this License.

7. If, as a consequence of a court judgment or allegation of patent infringement or for any other reason (not limited to patent issues), conditions are imposed on you (whether by court order, agreement or otherwise) that contradict the conditions of this License, they do not excuse you from the conditions of this License. If you cannot distribute so as to satisfy simultaneously your obligations under this License and any other pertinent obligations, then as a consequence you may not distribute the Program at all. For example, if a patent license would not permit royalty-free redistribution of the Program by all those who receive copies directly or indirectly through you, then the only way you could satisfy both it and this License would be to refrain entirely from distribution of the Program.

If any portion of this section is held invalid or unenforceable under any particular circumstance, the balance of the section is intended to apply and the section as a whole is intended to apply in other circumstances.

It is not the purpose of this section to induce you to infringe any patents or other property right claims or to contest validity of any such claims; this section has the sole purpose of protecting the integrity of the free software distribution system, which is implemented by public license practices. Many people have made generous contributions to the wide range of software distributed through that system in reliance on consistent application of that system; it is up to the author/donor to decide if he or she is willing to distribute software through any other system and a licensee cannot impose that choice.

This section is intended to make thoroughly clear what is believed to be a consequence of the rest of this License.

8. If the distribution and/or use of the Program is restricted in certain countries either by patents or by copyrighted interfaces, the original copyright holder who places the Program under this License may add an explicit geographical distribution limitation excluding those countries, so that distribution is permitted only in or among countries not thus excluded. In such case, this License incorporates the limitation as if written in the body of this License.

9. The Free Software Foundation may publish revised and/or new versions of the General Public License from time to time. Such new versions will be similar in spirit to the present version, but may differ in detail to address new problems or concerns. Each version is given a distinguishing version number. If the Program specifies a version number of this License which applies to it and "any later version", you have the option of following the terms and conditions either of that version or of any later version published by the Free Software Foundation. If the Program does not specify a version number of this License, you may choose any version ever published by the Free Software Foundation.

10. If you wish to incorporate parts of the Program into other free programs whose distribution conditions are different, write to the author to ask for permission. For software which is copyrighted by the Free Software Foundation, write to the Free Software Foundation; we sometimes make exceptions for this. Our decision will be guided by the two goals of preserving the free status of all derivatives of our free software and of promoting the sharing and reuse of software generally.

NO WARRANTY

11. BECAUSE THE PROGRAM IS LICENSED FREE OF CHARGE, THERE IS NO WARRANTY FOR THE PROGRAM, TO THE EXTENT PERMITTED BY APPLICABLE LAW. EXCEPT WHEN OTHERWISE STATED IN WRITING THE COPYRIGHT HOLDERS AND/OR OTHER PARTIES PROVIDE THE PROGRAM "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE ENTIRE RISK AS TO THE QUALITY AND PERFORMANCE OF THE PROGRAM IS WITH YOU. SHOULD THE PROGRAM PROVE DEFECTIVE, YOU ASSUME THE COST OF ALL NECESSARY SERVICING, REPAIR OR CORRECTION.

12. IN NO EVENT UNLESS REQUIRED BY APPLICABLE LAW OR AGREED TO IN WRITING WILL ANY COPYRIGHT HOLDER, OR ANY OTHER PARTY WHO MAY MODIFY AND/OR REDISTRIBUTE THE PROGRAM AS PERMITTED ABOVE, BE LIABLE TO YOU FOR DAMAGES, INCLUDING ANY GENERAL, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF THE USE OR INABILITY TO USE THE PROGRAM (INCLUDING BUT NOT LIMITED TO LOSS OF DATA OR DATA BEING RENDERED INACCURATE OR LOSSES SUSTAINED BY YOU OR THIRD PARTIES OR A FAILURE OF THE PROGRAM TO OPERATE WITH ANY OTHER PROGRAMS), EVEN IF SUCH HOLDER OR OTHER PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

END OF TERMS AND CONDITIONS

HOW TO APPLY THESE TERMS TO YOUR NEW PROGRAMS

If you develop a new program, and you want it to be of the greatest possible use to the public, the best way to achieve this is to make it free software which everyone can redistribute and change under these terms.

To do so, attach the following notices to the program. It is safest to attach them to the start of each source file to most effectively convey the exclusion of warranty; and each file should have at least the "copyright" line and a pointer to where the full notice is found.

<one line to give the program's name and a brief idea of what it does.>

Copyright (C) <year> <name of author>

This program is free software; you can redistribute it and/or modify it under the terms of the GNU General Public License as published by the Free Software Foundation; either version 2 of the License, or (at your option) any later version.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE. See the GNU General Public License for more details.

You should have received a copy of the GNU General Public License along with this program; if not, write to the Free Software Foundation, Inc., 51 Franklin Street, Fifth Floor, Boston, MA 02110-1301, USA.

Also add information on how to contact you by electronic and paper mail.

If the program is interactive, make it output a short notice like this when it starts in an interactive mode:

Gnomovision version 69, Copyright (C) year name of author Gnomovision comes with ABSOLUTELY NO WARRANTY; for details type `show w`.

This is free software, and you are welcome to redistribute it under certain conditions; type `show c` for details.

The hypothetical commands `show w` and `show c` should show the appropriate parts of the General Public License. Of course, the commands you use may be called something other than `show w` and `show c`; they could even be mouse-clicks or menu items--whatever suits your program.

You should also get your employer (if you work as a programmer) or your school, if any, to sign a "copyright disclaimer" for the program, if necessary. Here is a sample; alter the names:

Yoyodyne, Inc., hereby disclaims all copyright interest in the program 'Gnomovision' (which makes passes at compilers) written by James Hacker.

<signature of Ty Coon>, 1 April 1989
Ty Coon, President of Vice

This General Public License does not permit incorporating your program into proprietary programs. If your program is a subroutine library, you may consider it more useful to permit linking proprietary applications with the library. If this is what you want to do, use the GNU Library General Public License instead of this License.

NOTES

WIRELESS NETWORK REMINDER

Wireless Network Name (SSID)

Wireless Network Password