Version 1.0 | 06/06/2012

D-Link[®]



User Manual

Wireless N 360° Home Network Camera

DCS-6010L

Preface

D-Link reserves the right to revise this publication and to make changes in the content hereof without obligation to notify any person or organization of such revisions or changes. Information in this document may become obsolete as our services and websites develop and change. Please refer to the www.mydlink.com website for the most current information.

Manual Revisions

Revision	Date	Description
1.0	June 6, 2012	DCS-6010L Revision A1 with firmware version 1.00

Trademarks

D-Link and the D-Link logo are trademarks or registered trademarks of D-Link Corporation or its subsidiaries in the United States or other countries. All other company or product names mentioned herein are trademarks or registered trademarks of their respective companies.

Copyright © 2012 D-Link Corporation.


All rights reserved. This publication may not be reproduced, in whole or in part, without prior expressed written permission from D-Link Corporation.

Table of Contents

Product Overview	4
Package Contents	4
Introduction	5
System Requirements	5
Features	6
Hardware Overview	7
Outside	7
Internal Ports	8
Installation	9
Wireless Installation Considerations	9
Zero Configuration Setup	10
Camera Installation Wizard	14
Manual Hardware Installation	22
Mounting the Camera	23
WPS - Push Button Setup	24
mydlink	25
Camera Status	26
Live Video	27
Playback	28
Settings	29
Recording Settings	30
Advanced Settings	32
Events	33
Configuration	34
Using the Configuration Interface	
Live Video	35

Setup	
Setup Wizard	
Network Setup	44
Wireless Setup	47
Dynamic DNS	48
Image Setup	49
Audio and Video	51
Preset	53
Motion Detection	55
Time and Date	56
Event Setup	57
SD Card	65
Advanced	66
HTTPS	66
Access List	67
Maintenance	68
Device Management	68
System	69
Firmware Upgrade	70
Status	71
Device Info	71
Logs	72
Help	73
Technical Specifications	74
Safety Statements	77

Product Overview Package Contents

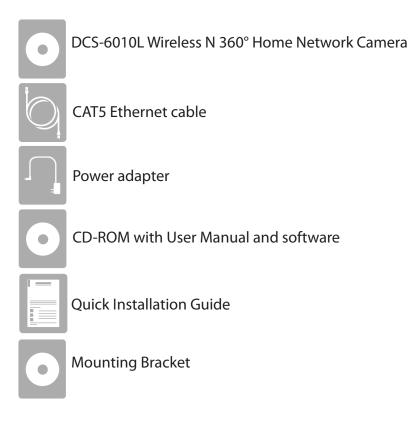

If any of the above items are missing, please contact your reseller.

Note: Using a power supply with a different voltage than the one included with your product will cause damage and void the warranty for this product.



Introduction

Congratulations on your purchase of the DCS-6010L Wireless N 360° Home Network Camera. The DCS-6010L is a versatile and unique solution for your small office or home. Unlike a standard webcam, the DCS-6010L is a complete system with a built-in CPU and web server that transmits high quality video images for security and surveillance. The DCS-6010L can be accessed remotely, and controlled from any PC/Notebook over your local network or through the Internet via a web browser. The simple installation and intuitive web-based interface offers easy integration with your Ethernet/Fast Ethernet or 802.11n/g wireless network. The DCS-6010L also comes with remote monitoring and motion detection features for a complete and cost-effective home security solution.

System Requirements

- Computer with Microsoft Windows[®] 7, Vista[®], or XP (for CD-ROM Setup Wizard), Mac OS or Linux
- PC with 1.3GHz or above; at least 128MB RAM
- Internet Explorer 7 or above , Firefox 3.5 or above, Safari 4 and Chrome 8.0 or above
- Existing 10/100 Ethernet-based network or 802.11n wireless network
- A MicroSD memory card (optional) is required for recording to onboard storage. SDHC Class 6 or above is recommended.
- Broadband Internet connection

Features

360 Degree Surveillance

The built-in fisheye lens gives you a full 360 degrees of coverage, allowing it to monitor an entire room with ease. It can also be placed on a wall for 180 degree coverage of a hallway. Distortion correction gives you a panoramic view or a normal corrected image that you can pan across easily.

Simple to Use

The DCS-6010L is a stand-alone system with a built-in CPU, requiring no special hardware or software. The DCS-6010L supports both ActiveX mode for Internet Explorer and Java mode for other browsers such as Firefox[®] and Safari[®].

Supports a Variety of Platforms

Supporting TCP/IP networking, HTTP, and other Internet related protocols. The DCS-6010L can also be integrated easily into other Internet/Intranet applications because of its standards-based features.

802.11n Wireless or Ethernet/Fast Ethernet Support

The DCS-6010L offers wireless 802.11n and Ethernet/Fast Ethernet connectivity, making the DCS-6010L easy to integrate into your existing network environment. The DCS-6010L works with a 10Mbps Ethernet based network or 100Mbps Fast Ethernet based network for traditional wired environments, and works with 802.11n routers or access points for added flexibility. The Site Survey feature also allows you to view and connect to any available wireless networks.

Web Configuration

Using a standard Web browser, administrators can configure and manage the Network Camera directly from its own Web page via Intranet or Internet. This means you can access your DCS-6010L anytime, anywhere in the world.

Broad Range of Applications

With today's high-speed Internet services, the Network Camera can provide the ideal solution for delivering live video images over the Intranet and Internet for remote monitoring. The Network Camera allows remote access using a Web browser for live image viewing, and allows the administrator to manage and control the Network Camera anytime, anywhere in the world. Many applications exist, including industrial and public monitoring of homes, offices, banks, hospitals, child-care centers, and amusement parks.

Remote Monitoring Utility

The D-ViewCam application adds enhanced features and functionality for the Network Camera and allows administrators to configure and access the Network Camera from a remote site via Intranet or Internet. Other features include image monitoring, recording images to a hard drive, viewing up to 32 cameras on one screen, and taking snapshots.


Hardware Overview

Outside



1	Camera Lens	Records video of the surrounding area
2	Camera Cover	Rotate the cover counter-clockwise to remove it and access the Ethernet port and power connector Caution : When removing the cover, remove it slowly to avoid disconnecting the microphone.
3	Microphone	Records audio from the surrounding area
4	MicroSD Card Slot	Insert a MicroSD card for Local storage for storing recorded image and video
5	WPS Status LED	Indicates the WPS connection status of the camera Indicates the camera's current status
6	Status LED	Indicates the camera's current power and connectivity status.
7	WPS Button	Press this button, then press the WPS button for 5 seconds on your router to set up a wireless connection automatically
8	Reset Button	Press and hold this button for 10 seconds to reset the camera

Internal Ports

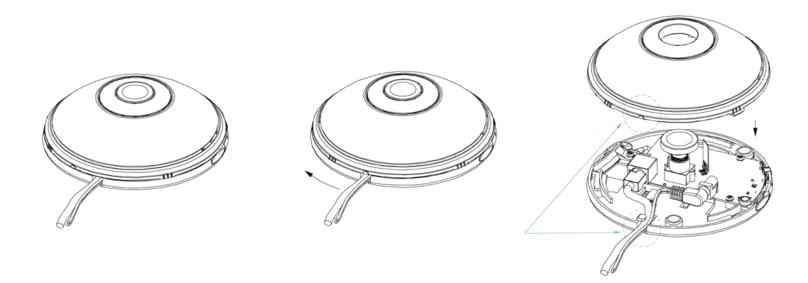

You can access the inside of the DCS-6010L by rotating the camera cover counter-clockwise, then lifting it off of the camera.

Caution: When removing the cover, remove it slowly to avoid disconnecting the microphone.

1	Ethernet Cable	Pre-attached Ethernet cable.
2	Power Cable	Pre-attached power cable.

Installation Wireless Installation Considerations

This D-Link device can connect to your wireless network from anywhere within the operating range of your wireless network. However, the number, thickness and location of walls, ceilings, or other objects that the wireless signals must pass through, may limit the range. Typical ranges vary depending on the types of materials and background RF (radio frequency) noise in your home or business. The key to maximizing wireless range is to follow these basic guidelines:

- 1. Minimize the number of walls and ceilings between your adapter and other network devices (such as your Network Camera) each wall or ceiling can reduce your adapter's range from 3-90 feet (1-30 meters).
- 2. Be aware of the direct line between network devices. A wall that is 1.5 feet thick (.5 meters), at a 45-degree angle appears to be almost 3 feet (1 meter) thick. At a 2-degree angle, it looks over 42 feet (14 meters) thick. Position your devices so that the signal will travel straight through a wall or ceiling (instead of at an angle) for better reception.
- 3. Building Materials make a difference. A solid metal door or aluminum studs may weaken the wireless signal. Try to position your access points, wireless routers, and other networking devices where the signal passes through drywall or open doorways. Materials and objects such as glass, steel, metal, walls with insulation, water (fish tanks), mirrors, file cabinets, brick, and concrete will degrade your wireless signal.
- 4. Keep your product at least 3-6 feet or 1-2 meters away from electrical devices or appliances that generate RF noise.
- 5. If you are using 2.4GHz cordless phones or other radio frequency sources (such as microwave ovens), your wireless connection may degrade dramatically or drop completely. Make sure your 2.4GHz phone base is as far away from your wireless devices as possible. The base transmits a signal even if the phone in not in use.

D-Link DCS-6010L User Manual

Zero Configuration Setup

If you have a mydlink-enabled Cloud Router, you can take advantage of Zero Configuration. Zero Configuration automatically configures your camera's settings for you, and adds it to your mydlink account automatically. This type of setup allows you to set up your camera by simply plugging it in and connecting it to your router.

Connect your camera to your mydlink-enabled Cloud Router and Zero Configuration will automatically configure your DCS-6010L and automatically add the camera to your mydlink account. After the short time it takes to do this you can remotely access your camera from the www.mydlink.com website to manage and monitor your DCS-6010L.

Connect the Ethernet Cable

Section 2: Installation


Using the pre-attached Ethernet cable connect the free-end to your network.


To use a longer ethernet cable or install a coupling adaptor, or see "Internal Ports" on page 8 for more details. for how to change the Ethernet cable.

Attach the External Power Supply

Attach the external power supply to your wall outlet or power strip.

1	Ethernet Cable	Pre attached Ethernet cable
2	Power Cable	Pre attached power cable.

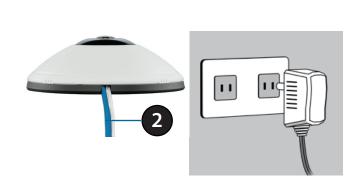

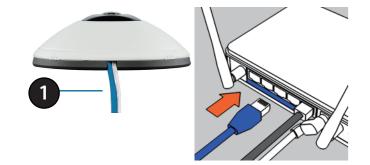

Optional: WPS Wireless Connection

Alternatively, if your router supports WPS, you can use the WPS button on the camera to easily create a secure wireless connection to your network.

To create a WPS connection:

Step 1

Press and hold the WPS button for approximately 5-6 seconds. The WPS LED will blink.

Step 2

Within 60 seconds press the WPS button on your router. On some routers, you may need to log in to the web interface and click on an on-screen button to activate the WPS feature. If you are not sure where the WPS button is on your router, please refer to your router's User Manual.

The DCS-6010L will automatically create a wireless connection to your router. While connecting, the status LED will flash. When the connection process is complete, the status LED will turn solid.


You can now remove the pre-attached Ethernet cable by removing the camera cover and disconnecting the Ethernet cable. See "Internal Ports" on page 8 for more details.

Note: If your router does not support WPS, you can still use the wired connection method on the previous page. After Zero Configuration setup is complete, your router's wireless settings will be automatically transferred to the camera.



Check Your mydlink Account

From any computer, open a web browser, go to http://www.mydlink.com and log into your account. Once mydlink detects your camera, a **New Device Found!** notice will appear in the bottom-left corner. Click on the device name to continue.

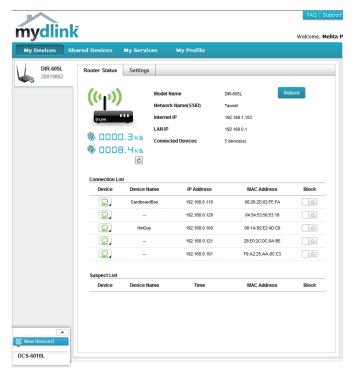

A summary and confirmation notification will appear with the automatically configured details. Make a note of the details and click **OK** to add the camera to your account.

Confirming New Device

Do you want to add this new device to your mydlink account?

Device Name: DCS-6010L mydlink Number: 44441252 Network name (SSID): ddddddd Admin Password: oic953XZ

You can change these default settings by going to **Advanced Settings** after add it to your device list.



Zero Configuration is now complete and your camera has been added to your mydlink account. You can now view your camera on the mydlink Live View tab.

If you wish to connect your camera to your router wirelessly, you can simply disconnect the Ethernet cable and move the camera to its intended location; your router's wireless settings have been automatically transferred to the camera, and no further configuration is required.

Your camera is now set up, and you can skip to "mydlink" on page 25 to learn more about the mydlink features of this camera, or to "Configuration" on page 34 for advanced configuration of your camera.




Camera Installation Wizard

Insert the Installation CD-ROM into your computer's optical drive to start the autorun program.

The CD-ROM will open the Camera Installation Wizard. Simply click **Setup Your Camera** to go through the Installation Wizard, which will guide you through the installation process from connecting your hardware to configuring your camera.



Select your preferred language for the installation from the drop down menu and click on **Start** to continue.

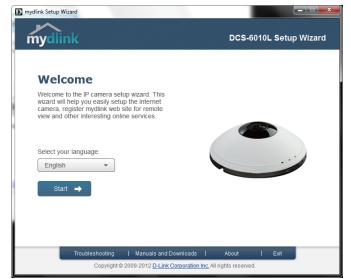


Connect the included Ethernet cable to the internal network cable connector of the DCS-6010L and attach it to the network.

Click Next to continue.




Connect the other end of the same Ethernet cable to a router.

Click Next to continue.

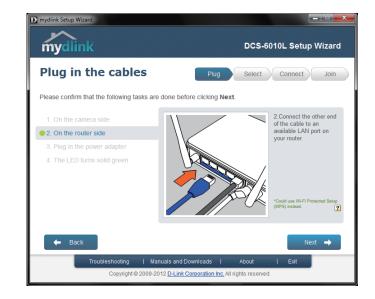

Attach the external power supply to the power connector located inside the DCS-6010L and connect it to your wall outlet or power strip.

Click Next to continue.

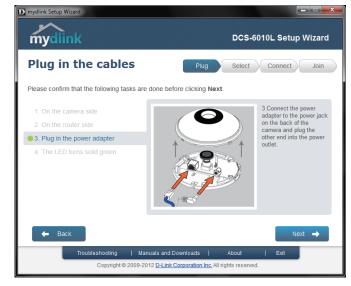

D-Link DCS-6010L User Manual

The LED on the front of the DCS-6010L will blink, then turn solid green once it successfully connects to your network. Click **Next** to proceed.

If the LED continues to stay red, check your connections or click on the "What should I do if the LED stays red?" link for more information.

Select your camera from the list, then click **Next**. If you have multiple cameras, you can identify them by the MAC ID printed on the label on the back of your camera.






If you wish to remove the camera from a previously registered mydlink account, press and hold the reset button on the rear panel for at least 10 seconds and click **Restart** to restart the wizard.




After you have selected your camera from the list, you will be asked to create and confirm a password for it. The password is case sensitive and must contain at least 2 letters.


Click Next to continue.

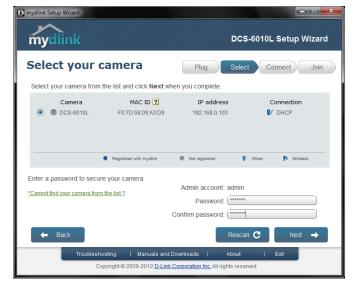


To move the camera to a wireless connection by using WPS or by selecting a wireless network, select the appropriate option then follow the steps displayed. Otherwise, click **Next** to continue.

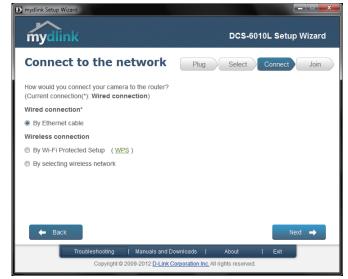


Complete the mydlink account registration form with your details making sure to select the **I accept mydlink terms and conditions box**, and click the **Next** button.

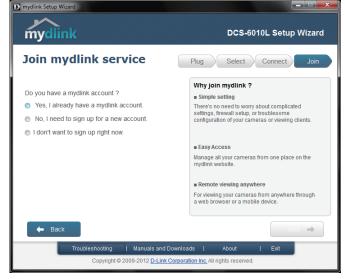

If you already have a mydlink account, enter your login details and click **Next** to proceed.

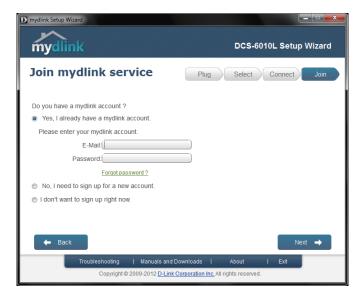

Confirm your mydlink account details and give the camera a unique name and click **Done**.

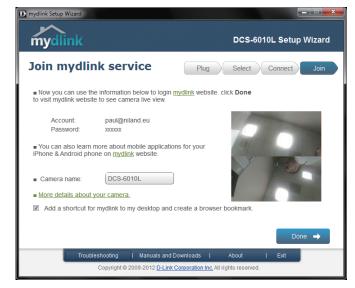

Confirm your camera login details and IP address details and click **Done**.



Your DCS-6010L camera is now set up. Log on to your mydlink account and explore the exciting benefits available to you.

Your camera is now set up, and you can skip to "mydlink" on page 25 to learn more about the mydlink features of this camera, or to "Configuration" on page 34 for advanced configuration of your camera.



Manual Hardware Installation

If you wish to set up your camera without using the Camera Setup Wizard, please follow these steps.

Note: In order to use the mydlink features of this product, you will need to go through the Camera Setup Wizard.

Connect the Ethernet Cable


Using the pre-attached Ethernet cable connect the free end to your network.

To use a longer ethernet cable or install a coupling adaptor, or see "Internal Ports" on page 8 for more details. for how to change the Ethernet cable.

Attach the External Power Supply

Attach the external power supply to your wall outlet or power strip.

1	Ethernet Cable	Pre attached Ethernet cable
2	Power Cable	Pre attached power cable.

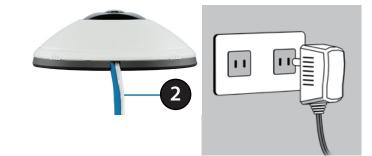

Mounting the Camera

The DCS-6010L is suitable for mounting to a ceiling, wall or desktop using the bracket provided.

Note: In order to use the mydlink features of this product, you will need to go through the Camera Setup Wizard.

Step 1

Unclip the wall bracket from the DCS-6010L by sliding the base down.

Step 2

Position the mounting bracket in the desired location and mark the surface behind it holes using the bracket as a stencil / in pencil

Step 3

Use a 6mm drill bit to make required holes approximately 25mm deep.

Step 4

Insert wall anchors.


Step 5

Affix bracket using the screws provided.

Step 6

Clip the DCS-6010L to the bracket ensuring a tight fit

Note: if mounting on a wall ensure the camera is oriented with the cables positioned to the bottom of the device.

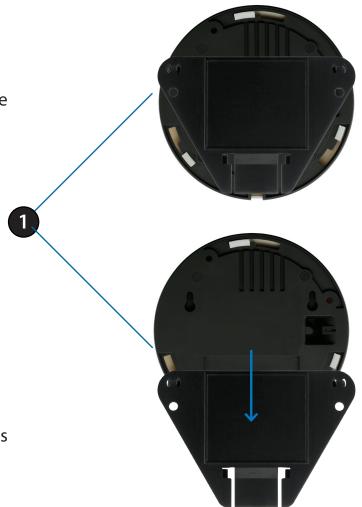

WPS - Push Button Setup

If your router supports WPS, you can use the WPS button on the camera to easily create a secure wireless connection to your network.

To create a WPS connection:

Step 1

Press and hold the WPS button for approximately 5-6 seconds. The WPS LED will blink.

Step 2

Within 60 seconds press the WPS button on your router. On some routers, you may need to log in to the web interface and click on an on-screen button to activate the WPS feature. If you are not sure where the WPS button is on your router, please refer to your router's User Manual.


The DCS-6010L will automatically create a wireless connection to your router. While connecting, the status LED will flash. When the connection process is complete, the status LED will turn solid.

Note: If your router does not support WPS, you can still use the wired connection method on the previous page.



mydlink

After registering your DCS-6010L camera with a mydlink account in the Camera Installation Wizard. You will be able to remotely access your camera from the www.mydlink.com website. After signing in to your mydlink account, you will see a screen similar to the following:

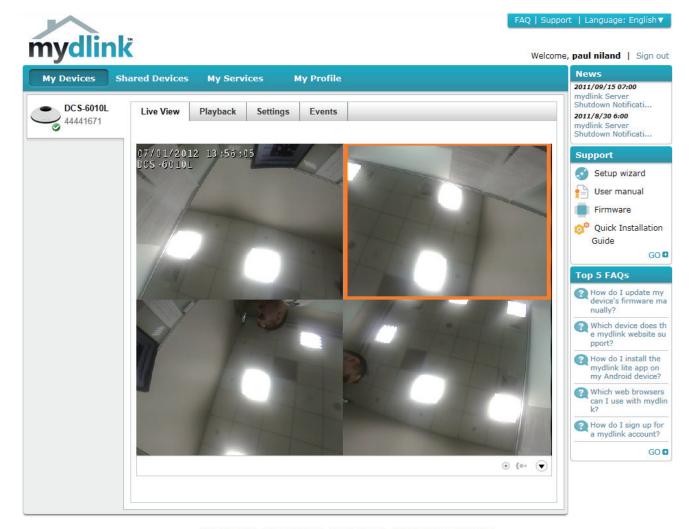

Global D-Link | About mydlink | Terms of Use | Privacy Policy | Contact Us Copyright©2008-2012 D-Link Corp. All rights reserved.

Note: The above screenshot is representative only. The mydlink website is constantly improving and so may appear different.

Camera Status

Here, you can see the online status of each of your cameras. Your online status may be one of the following:



A green checkmark indicates that your camera is online and ready to use.



A yellow exclamation point indicates that your camera is online, but the camera password has changed. You will need to enter your new camera password to access your camera again.



A red X indicates that your camera is offline and currently cannot be accessed remotely.

If your camera is offline, try the following:


- Check to make sure that the Internet connection to your camera is working properly.
- Try restarting your Internet router.
- Check your camera's Ethernet and power cable connections and make sure they are secure.
- Check to make sure that the LED on your camera is lit solid green.

If you still cannot access your camera, reset your camera and run the Camera Installation Wizard again from the CD-ROM included in your package.

Live Video

In the main part of the screen, the Live Video tab will be selected by default. If the camera is available, a Live Video feed will be displayed. Video will be shown at VGA resolution (640x480) if viewing your camera from a PC on the same local network, or at QVGA resolution (320x240) if viewing your camera from a PC on a remote network.

0	View Mode	Here, you can select between the different view modes:
		Fisheye Mode: shows the full camera view.
		Normal Mode: shows a corrected view similar to a standard camera view that you can move using the control pad.
		Panoramic Mode: This shows a corrected, full 180 view across 2 video panels.
		Multi-View with Fisheye: This shows a multiple window view, with a full fisheye view in the top- right panel.
		Hulti-View: This shows a multiple window view.
€¢	Brightness	Adjust the slider control to account for brightness.
$\bigcirc \bigcirc \bigcirc$	Zoom	Adjust the slider control to zoom in or out.

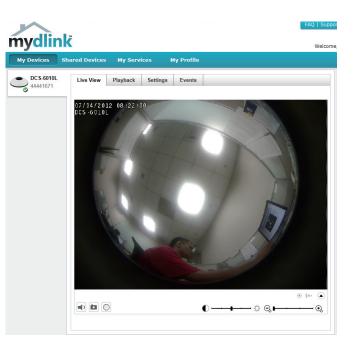


Playback

The Playback tab allows you to review pre-recorded footage captured to an inserted microSD card.

Select the date of the footage you wish to preview from the drop down menu, then choose from the recordings available for playback.



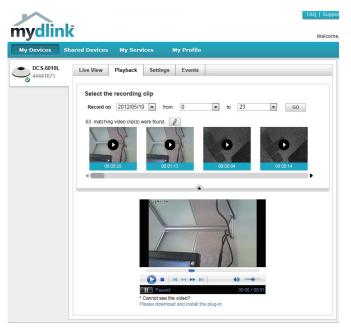

Welcom

Settings

The Settings tab contains several options for you to control how your DCS-6010L operates.

Camera Name: Click on the **Edit** button to change how the camera name appears.

mydlink No: This is the unique mydlink number for your device.

Model name: This shows the model name of the camera.

MAC: The shows the Media Access Control (MAC) address of the camera.

Camera Activated on: The date the camera was registered to the mydlink service.

Event Notification E-mail notification of events can be switched on or off. **Settings:**

Recording Settings: Each of the recording settings will open a further menu.

mydlink					FAQ Suppor
My Devices Shared D	Devices My Servi	ices My Pi	ofile		Welcome
	e View Playback		ents		
· ·	neral Information				
Ci	amera Name:	DCS-6010	-	Edit	
m	ydlink No.:	44441671			
м	odel Name:	DCS-6010	L		
м	AC:	F07D6809	A3D9		
ci	amera activated on:	2012-06-0	1 16:29:32		
Eve	ent Notification Setting	s			
Se	end alert notifications to	E-n	ail		Save
Re	cording Settings				
۲	Do not record any v	video clips.			
۲	Record video clips	when motion is de	tected.		
0	Record video clips	by schedule.			
Ad	vanced Settings				
Sele	ect your camera mounting	mode: On ceiling]		
	can click the Advanced S username and password b		ess your camera's	s advanced settings. Af	ter clicking the button, use
U	sername: admin				
Ci	amera Password:		Show password		
A	Advanced Setting				
You	i can remove your camera	by clicking Delete Ca	mera button		
	Delete Camera	by choiring Delote of	andra battori.		

Rec	ording Settings
۲	Do not record any video clips.
0	Record video clips when motion is detected.
0	Record video clips by schedule.

Recording Settings

Record video clips Select this option to enable the automatic recording when motion when motion is is detected.

	Add Detection Area: Click on this icon to draw areas that will trigger automatic recording when motion is detected.
) .	Remove Detection Area: Click on this icon to erase areas from regions that trigger automatic recording when motion is detected.
1	Clear Detection Area: This will remove all detection areas
Ç	Refresh Snapshot: This will refresh the current snapshot of the monitored area.
* **	Increase/Decrease Sensitivity Increase the motion detection sensitivity

Email Notification: Toggles notification by email on or off.

Video Clips Recording In the event that the microSD card can not store further recordings, Mode: the user can choose to record over previous recordings or to be notified and cease recording. Recording Settings

- O not record any video clips.
- Record video clips when motion is detected.

1 Motion detection



2 E-mail notification

Enable e-mail notification

3 Video clips



Save Cancel

Record Video Clips by This option enables either continuous or recurring scheduled **Schedule:** recording.

Email Notification: Toggles notification by email on or off.

Video Clips Recording In the event that the microSD card can not store further recordings, Mode: the user can choose to record over previous recordings or to be notified and cease recording.


	lecord video clips by schedule.
1	Schedule setup
	Record video:
	Ontinuously. Ontinuously.
	⊙ Only on: I Sun I Mon I Tue I Wed I Thu I Fri I Sat
	From 0:00 to 23:59
9	
4	E-mail notification
	Enable e-mail notification
	I want to send e-mail from: Other
	Sender E-mail Address:
	SMTP Mail Server:
	Port: (range 1 to 65535)
	User Name:
	Password:
	Use SSL-TLS: None
	*The notification will be sent to the e-mail address registered in mydlink.
	I want the e-mail notification to include:
	Single snapshot, with notifications sent every seconds
2	
	Video clips recording mode
	The inserted MicroSD card can store about 0 days of video maximum.
	When the MicroSD card is full:
	Continue recording & overwrite the oldest video.
	Stop recording & notify me.
	Save Cancel

Advanced Settings

Show password: Checking this box will show the password.


Advanced Settings
Select your camera mounting mode: On ceiling
You can click the Advanced Settings button to access your camera's advanced settings. After clicking the button, use the username and password below to log in.
Username: admin Camera Password: ****** Show password
Advanced Setting
You can remove your camera by clicking Delete Camera button. Delete Camera

Advanced Setting: Clicking on the Advanced Setting button will open a secondary window allowing full configuration of the DCS-6010L

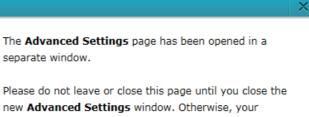





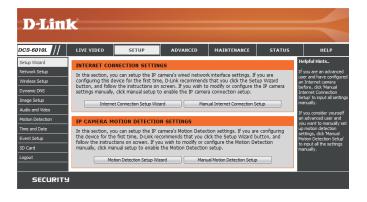

Events

The Events tab contains options for you to keep track of your DCS-6010L event notifications.

Select from the available options to manage your event log.

- Mark Page as Read: Clicking this button will mark the current page of event notifications as read.
- Mark all as Read: Clicking this button will mark all event notifications as read.

mydlin	k	FAQ Suppor
	Shared Devices My Services My Profile	weicome,
DCS.6010L 44441671	Live View Playback Settings Events	

Configuration Using the Configuration Interface

After completing the Camera Installation Wizard, you are ready to use your camera. The camera's built-in Web configuration utility is designed to allow you to easily access and configure your DCS-6010L. At the end of the wizard, click **Go To Camera**, or enter the IP address of your camera into a web browser, such as Mozilla Firefox. To log in, use the User name **admin** and the password you created in the Installation Wizard. If you did not create a password, the default password is blank. After entering your password, click **OK**.

Vindows Security					
The server 192.168.0.103 at DCS-6010L requires a username and password.					
Warning: This server is requesting that your username and password be sent in an insecure manner (basic authentication without a secure connection).					
	User name Password Remember my credentials				
	OK Cancel				


Live Video

This section shows your camera's live video. You may select any of the available icons listed below to operate the camera. You may also select your language using the drop-down menu on the left side of the screen.

You can zoom in and out on the live video image using your mouse. Right-click to zoom out or left-click to zoom in on the image.

SD Status: This option displays the status of the SD card. If no SD card has been inserted, this screen will display the message "Card Invalid."


19	Motion Trigger Indicator	This indicator will change color when a trigger event occurs. Note: The video motion feature for your camera must be
		enabled.
REC	Recording Indicator	When a recording is in progress, this indicator will change color.
	Control Pad	This control pad can be used to electronically pan, tilt, and zoom (ePTZ) within the camera's predefined view area, if one has been defined.
¢	Auto Pan	Click this button to start the automated circular rotation through a regional view (360* continuous rotation). Note: This function does not apply in a Panoramic view because a panoramic view already shows the full coverage.
×	StopClick this button to stop the Auto Pano and Auto Rota functions.	
~	Preset Path	Once you have determined a list of preset PTZ positions, click this button to consecutively display views of these positions. The DCS-6010L will display these views continuously. For more information please refer to "Preset" on page 53

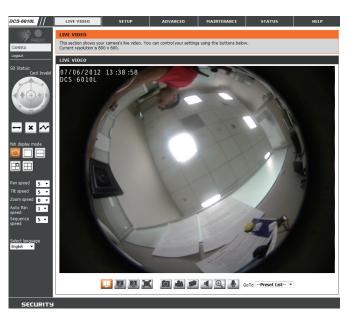

Display mode	Display Mode	Here, you can select between the different display modes:	LIVE VIDEO 07/06/2012 13:38:58 DCS-6010L
		Fisheye Mode: shows the full camera view	6 8 20 e
		Normal Mode: shows a corrected view similar to a standard camera view that you can move using the control pad.	
		Panoramic Mode: This shows a corrected, full 180 view across 2 video panels.	
		Multi-View with Fisheye: This shows a multiple window view, with a full Fisheye view in the top-right panel.	
		Multi-View: This shows a multiple window view.	

Pan/Tilt/Zoom/ You can set the speed of pan/tilt/zoom/auto pan movement and Auto Pan/ sequence changes by using the dropdown menus. Sequence Speed:

Language: You may select the interface language using this menu.

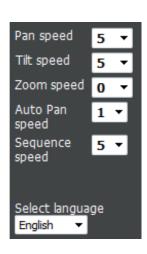

Section 4: Configuration

🛄 Video Profile 1	🔳 Record a Video Clip	LIVE VIDEO 07/06/2012 13 :38 :58
Video Profile 2	🔎 Set a Storage Folder	DCS -6010L
Video Profile 3	Listen/Stop Audio In (from microphone)	13 N
🗵 Full screen mode	Start/Stop Audio Out (to speaker)	
Take a Snapshot		


Go To: If any presets have been defined, selecting a preset from this list will (Preset List) display it.



Setup Setup Wizard

To configure your Network Camera, click **Internet Connection Setup Wizard**. Alternatively, you may click **Manual Internet Connection Setup** to manually configure your Network Camera and skip to "Network Setup" on page 44.

To quickly configure your Network Camera's motion detection settings, click **Motion Detection Setup Wizard**. If you want to enter your settings without running the wizard, click **Manual Motion Detection Setup** and skip to"Motion Detection" on page 55.

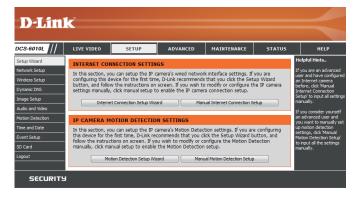


Internet Connection Setup Wizard

This wizard will guide you through a step-by-step process to configure your new D-Link Camera and connect the camera to the internet. Click **Next** to continue.



Note: Select DHCP if you are unsure of which settings to choose.

Click Next to continue.

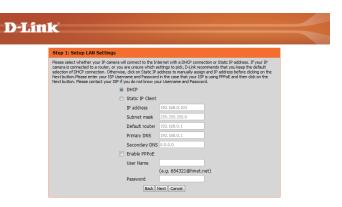

Select **Static IP** if your Internet Service Provider has provided you with connection settings, or if you wish to set a static address within your home network. Enter the correct configuration information and click **Next** to continue.


If you are using PPPoE, select **Enable PPPoE** and enter your user name and password, otherwise click **Next** to continue.

If you have a Dynamic DNS account and would like the camera to update your IP address automatically, Select **Enable DDNS** and enter your host information. Click **Next** to continue.

Enter a name for your camera and click **Next** to continue.

k		
Step 2: Setup D	DNS Settings	
If you have a Dyn enable DDNS and	namic DNS accour I enter in your ho	nt and would like the IP camera to update your IP address automatically, st information below. Please click on the Next button to continue.
	Enable DDNS	
	Server Address	www.dinkddns.com
	Host Name	
	User Name	
	Password	
	Verify Password	
	Timeout	24 (hours)



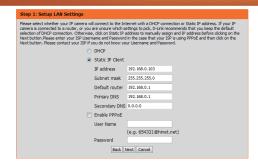

Configure the correct time to ensure that all events will be triggered as scheduled. Click **Next** to continue.

Confirm the settings are correct and click **Apply** to save them..

The settings will be saved to the DCS-6010L and the camera will restart.



D-Link

Step 4: Setup Time Zone				
Please configure the correct time to e and then click on the Next button.	ensure that all events are triggered, captured a	ind scheduled at the correct time and da		
Time Zone (GMT+08:00) Taipei 🔻				
Enable Daylight Savi	ing 📃			
	Back Next Cancel			

Motion Detection Setup Wizard

This wizard will guide you through a step-by-step process to configure your camera's motion detection functions.

Click Next to continue.

Step 1

This step will allow you to enable or disable motion detection, specify the detection sensitivity, and adjust the camera's ability to detect movement.

You may specify whether the camera should capture a snapshot or a video clip when motion is detected.

Please see the **Motion Detection** section on "Motion Detection" on page 55 for information about how to configure motion detection.

Step 2

This step allows you to enable motion detection based on a customized schedule. Specify the day and hours. You may also choose to always record whenever motion is detected.





k	
step 2: Motion Detection Schedule	
This final step alows you to specify how you receive notification of camera events. Choose between an emain notification or alternatively you can setup an FTP Notification. You will need your email account settings or FTP details. If you are unsure of this information, please contact your ISP. Once you have entered this information, please dick on the Next button.	
✓ Sun ♥ Mon ♥ Tue ♥ Wed ♥ Thu ♥ Fri ♥ Sat	
Time	
Always	
○ From 00 ▼ 00 ▼ To 23 ▼ 59 ▼	

Step 3

This step allows you to specify how you will receive event notifications from your camera. You may choose not to receive notifications, or to receive notifications via e-mail or FTP.

Please enter the relevant information for your e-mail or FTP account.

Click Next to continue.

Step 4 You have completed the Motion Detection Wizard.

Please verify your settings and click **Apply** to save them.

Please wait a few moments while the camera saves your settings and restarts.



Video Clip Sun ,Mon ,Tue ,Wed ,Thu ,Fri ,Sat ,

ou have completed your IP camera setup. Please dick the Back button if you want to review or in the Apply button to save and apply your settings.

Always

Back Apply Cancel

Motion Detection : Enable

Alerts and Notification : Email

EVENT : Schedule Day : Schedule Time :








Network Setup

Use this section to configure the network connections for your camera. All relevant information must be entered accurately. After making any changes, click the **Save Settings** button to save your changes.

- LAN Settings: This section lets you configure settings for your local area network.
 - **DHCP:** Select this connection if you have a DHCP server running on your network and would like your camera to obtain an IP address automatically.

If you choose DHCP, you do not need to fill out the IP address settings.

- Static IP Client: You may obtain a static or fixed IP address and other network information from your network administrator for your camera. A static IP address may simplify access to your camera in the future.
 - IP Address: Enter the fixed IP address in this field.
- Subnet Mask: This number is used to determine if the destination is in the same subnet. The default value is 255.255.255.0.
- **Default Gateway:** The gateway used to forward frames to destinations in a different subnet. Invalid gateway settings may cause the failure of transmissions to a different subnet.
 - **Primary DNS:** The primary domain name server translates names to IP addresses.
- Secondary DNS: The secondary DNS acts as a backup to the primary DNS.

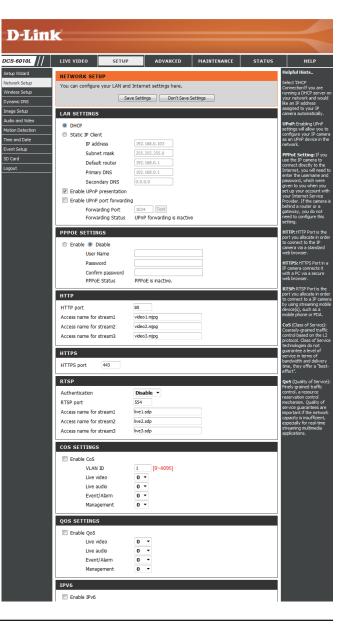

Enable UPnP Presentation: Enabling this setting allows your camera to be configured as a UPnP device on your network.

Enable UPnP Port Forwarding: Enabling this setting allows the camera to add port forwarding entries into the router automatically on a UPnP capable network.

Enable PPPoE: Enable this setting if your network uses PPPoE.

User Name / Password: Enter the username and password for your PPPoE account. Re-enter your password in the Confirm Password field. You may obtain this information from your ISP.

HTTP Port: The default port number is 80.

Access Name for Stream 1~3: The default name is video#.mjpg, where # is the number of the stream.

- **HTTPS Port:** You may use a PC with a secure browser to connect to the HTTPS port of the camera. The default port number is 443.
 - **RTSP Port:** The port number that you use for RTSP streaming to mobile devices, such as mobile phones or PDAs. The default port number is 554. You may specify the address of a particular stream. For instance, live1.sdp can be accessed at rtsp://x.x.x.v/video1.sdp where the x.x.x.x represents the ip address of your camera.

LAN SETTINGS	
OHCP	
Static IP Client	
IP address	192.168.0.103
Subnet mask	255.255.255.0
Default router	192.168.0.1
Primary DNS	192.168.0.1
Secondary DNS	0.0.0.0
Enable UPnP presentation	
🔲 Enable UPnP port forwarding	g
Forwarding Port	1024 Test
Forwarding Status	UPnP forwarding is inactive
PPPOE SETTINGS	
Enable I Disable	
User Name	
Password	
Confirm password	
PPPoE Status	PPPoE is inactive.
нттр	
HTTP port	80
Access name for stream1	video 1. mjpg
Access name for stream2	video2.mjpg
Access name for stream3	video3.mjpg
Access hand for became	
HTTPS	
HTTPS port 443	
RTSP	
Authentication	Disable 🔻
RTSP port	554
Access name for stream1	live 1.sdp
Access name for stream2	live2.sdp
Access name for stream3	live3.sdp

- **Enable CoS:** Enabling the Class of Service setting implements a best-effort policy without making any bandwidth reservations.
- **Enable QoS:** Enabling QoS allows you to specify a traffic priority policy to ensure a consistent Quality of Service during busy periods. If the Network Camera is connected to a router that itself implements QoS, the router's settings will override the QoS settings of the camera.
- **Enable IPV6:** Enable the IPV6 setting to use the IPV6 protocol. Enabling the option allows you to manually set up the address, specify an optional IP address, specify an optional router and an optional primary DNS.
- **Enable Multicast for stream** The DCS-6010L allows you to multicast each of the available streams via group address and specify the TTL value for each stream. Enter the port and TTL settings you wish to use if you do not want to use the defaults.

COS SETTINGS	
Enable CoS	
VLAN ID 1	[0~4095]
Live video	0 🔻
Live audio	
Event/Alarm (
Management (0 -
QOS SETTINGS	
Enable QoS	
_) –
	b v
	D -
Management	0 -
TDUC	
IPV6	
Enable IPv6	
IPv6 Information	
Manually setup the IP addre Optional IP address / Prefix	
Optional default router	
Optional primary DNS	
Optional primary DNS	
MULTICAST	
Enable multicast for stream 1	
Enable multicast for stream 1 Multicast group address	239.1.1.1
	239.1.1.1 6550
Multicast group address	
Multicast group address Multicast video port	6550
Multicast group address Multicast video port Multicast RTCP video port	6550
Multicast group address Multicast video port Multicast RTCP video port Multicast audio port Multicast RTCP audio port Multicast RTCP audio port	6550 6551 6552
Multicast group address Multicast video port Multicast RTCP video port Multicast audio port Multicast RTCP audio port Multicast RTCP audio port Multicast TTL [1~255]	6550 6551 6552 6553 64
Multicast group address Multicast video port Multicast RTCP video port Multicast audio port Multicast RTCP audio port Multicast RTCP audio port Multicast TTL [1~255] Enable multicast for stream 2 Multicast group address	6550 6551 6552 6553 64 239.1.1.2
Multicast group address Multicast video port Multicast RTCP video port Multicast audio port Multicast RTCP audio port Multicast RTCP audio port Multicast TTL [1~255] Enable multicast for stream 2 Multicast group address Multicast video port	6550 6551 6552 64 239.1.1.2 6554
Multicast group address Multicast video port Multicast RTCP video port Multicast audio port Multicast RTCP audio port Multicast RTCP audio port Enable multicast for stream 2 Multicast group address Multicast video port Multicast RTCP video port	6550 6551 6552 64 239.1.1.2 6554 6555
Multicast group address Multicast video port Multicast RTCP video port Multicast audio port Multicast RTCP audio port Multicast RTCP audio port Enable multicast for stream 2 Multicast group address Multicast video port Multicast RTCP video port Multicast audio port	6550 6551 6552 6553 64 239.1.1.2 6554 6555 6556
Multicast group address Multicast video port Multicast RTCP video port Multicast audio port Multicast RTCP audio port Multicast TTL [1~255] Enable multicast for stream 2 Multicast group address Multicast video port Multicast RTCP video port Multicast audio port Multicast RTCP audio port	6550 6551 6552 6553 64 239.1.1.2 6554 6555 6556 6557
Multicast group address Multicast video port Multicast RTCP video port Multicast audio port Multicast RTCP audio port Multicast RTCP audio port Enable multicast for stream 2 Multicast group address Multicast video port Multicast RTCP video port Multicast audio port Multicast RTCP audio port Multicast RTCP audio port Multicast RTCP audio port Multicast RTCP audio port Multicast TTL [1~255]	6550 6551 6552 6553 64 239.1.1.2 6554 6555 6556
Multicast group address Multicast video port Multicast RTCP video port Multicast RTCP video port Multicast RTCP audio port Multicast RTCP audio port Enable multicast for stream 2 Multicast group address Multicast video port Multicast RTCP video port Multicast audio port Multicast RTCP audio port Multicast RTCP audio port Multicast RTCP audio port Multicast TTL [1~255] Enable multicast for stream 3	6550 6551 6552 6553 64 239.1.1.2 6554 6555 6556 6557 64
Multicast group address Multicast video port Multicast RTCP video port Multicast RTCP video port Multicast RTCP audio port Multicast RTCP audio port Enable multicast for stream 2 Multicast group address Multicast video port Multicast RTCP video port Multicast audio port Multicast RTCP audio port Multicast STTL [1~255] Enable multicast for stream 3 Multicast group address	6550 6551 6552 6553 64 239.1.1.2 6554 6555 6556 6557 64 239.1.1.3
Multicast group address Multicast video port Multicast RTCP video port Multicast RTCP video port Multicast RTCP audio port Multicast RTCP audio port Enable multicast for stream 2 Multicast group address Multicast video port Multicast RTCP video port Multicast audio port Multicast RTCP audio port Multicast RTCP audio port Multicast RTCP audio port Multicast RTCP audio port Multicast STTL [1~255] Enable multicast for stream 3 Multicast group address Multicast video port	6550 6551 6552 6553 64 239.1.1.2 6554 6555 6556 6557 64 239.1.1.3
Multicast group address Multicast video port Multicast RTCP video port Multicast RTCP video port Multicast RTCP audio port Multicast RTCP audio port Multicast TTL [1~255] Enable multicast for stream 2 Multicast group address Multicast video port Multicast RTCP video port Multicast audio port Multicast RTCP audio port Multicast RTCP audio port Multicast TTL [1~255] Enable multicast for stream 3 Multicast group address Multicast video port Multicast video port Multicast RTCP video port	6550 6551 6552 6553 64 239.1.1.2 6554 6555 6555 6556 6557 64 239.1.1.3 6558 6559
Multicast group address Multicast video port Multicast RTCP video port Multicast RTCP video port Multicast RTCP audio port Multicast RTCP audio port Enable multicast for stream 2 Multicast group address Multicast video port Multicast RTCP video port Multicast audio port Multicast RTCP audio port Multicast RTCP audio port Multicast Grot stream 3 Multicast group address Multicast video port Multicast RTCP video port	6550 6551 6552 6553 64 239.1.1.2 6554 6555 6556 6557 64 239.1.1.3 6558 6559 6560
Multicast group address Multicast video port Multicast RTCP video port Multicast RTCP addio port Multicast RTCP addio port Multicast RTCP addio port Enable multicast for stream 2 Multicast group address Multicast video port Multicast rTCP video port Multicast addio port Multicast RTCP addio port Multicast TTL [1~255] Enable multicast for stream 3 Multicast group address Multicast video port Multicast RTCP video port	6550 6551 6552 6553 64 239.1.1.2 6554 6555 6556 6557 64 239.1.1.3 6558 6559 6560 6561
Multicast group address Multicast video port Multicast RTCP video port Multicast RTCP video port Multicast RTCP audio port Multicast RTCP audio port Multicast TTL [1~255] Enable multicast for stream 2 Multicast group address Multicast video port Multicast RTCP video port Multicast audio port Multicast RTCP audio port Multicast TTL [1~255] Enable multicast for stream 3 Multicast group address Multicast video port Multicast RTCP video port Multicast audio port	6550 6551 6552 6553 64 239.1.1.2 6554 6555 6556 6557 64 239.1.1.3 6558 6559 6560

Wireless Setup

This section allows you to set up and configure the wireless settings on your camera. After making any changes, click the **Save Settings** button to save your changes.

- Site Survey: Click the Rescan button to scan for available wireless networks. After scanning, you can use the drop-down box to select an available wireless network. The related information (SSID, Wireless Mode, Channel, Authentication, Encryption) will be automatically filled in for you.
 - **SSID:** Enter the SSID of the wireless access point you wish to use.
- Wireless Mode: Use the drop-down box to select the mode of the wireless network you wish to connect to. Infrastructure is normally used to connect to an access point or router. Ad-Hoc is usually used to connect directly to another computer.
 - **Channel:** If you are using Ad Hoc mode, select the channel of the wireless network you wish to connect to, or select Auto.
- Authentication: Select the authentication you use on your wireless network Open, Shared, WPA-PSK, or WPA2-PSK.
 - **Encryption:** If you use WPA-PSK or WPA2-PSK authentication, you will need to specify whether your wireless network uses TKIP or AES encryption. If you use Open or Shared authentication, WEP encryption should be the setting.
 - Key: If you use WEP, WPA-PSK, or WPA2-PSK authentication, enter the Key (also known as password) used for your wireless network.



Dynamic DNS

DDNS (Dynamic Domain Name Server) will hold a DNS host name and synchronize the public IP address of the modem when it has been modified. A user name and password are required when using the DDNS service. After making any changes, click the **Save Settings** button to save your changes.

Enable DDNS: Select this checkbox to enable the DDNS function.

Server Address: Select your Dynamic DNS provider from the pull down menu or enter the server address manually.

Host Name: Enter the host name of the DDNS server.

- User Name: Enter the user name or e-mail used to connect to your DDNS account.
 - Password: Enter the password used to connect to your DDNS server account.

Timeout: Enter the DNS timeout values you wish to use.

Status: Indicates the connection status, which is automatically determined by the system.

D-Linl	K					\prec
DCS-6010L	LIVE VIDEO	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP
Setup Wizard Network Setup Wireless Setup Dynamic DNS Image Setup Audio and Video Motion Detection	(www.yourdomai broadband Intern service, you can e address is.	i feature allows you t n.com) to access you et service providers a enter your domain nar	r IP camera with a dy ssign dynamic (changi me to connect to you at www.DLinkDDNS.c		ddress. Most sing a DDNS	Helpful Hints Dynamic DNS is useful if you have a DS. or Cable service provider that changes your modem. IP address periodically. This will allow you to assign a website domain name to your. IP camera instead of connecting through an IP address.
Time and Date Event Setup	DYNAMIC DNS	SETTING				
SD Card Logout	Enable DDNS Server Address	www.dlinkdd	ins.com	<	Ŧ	
	Host Name User Name Password Verify Password Timeout Status	24 Inactive		hours)		
		Save Setti	ngs Don't Save S	Settings		


Image Setup

In this section, you may configure the video image settings for your camera. A preview of the image will be shown in Live Video.

Mirror: This will mirror the image horizontally.

- Flip: This will flip the image vertically. When turning Flip on, you may want to consider turning Mirror on as well.
- **Power Line:** Select the frequency used by your power lines to avoid interference or distortion.
- White Balance: Use the drop-down box to change white balance settings to help balance colors for different environments. You can choose from Auto, Outdoor, Indoor, Fluorescent, and Push Hold.
- **Exposure Mode:** Changes the exposure mode. Use the drop-down box to set the camera for Indoor, Outdoor, or Night environments, or to Moving to capture moving objects. The Low Noise option will focus on creating a high-quality picture without noise. You can also create 3 different custom exposure modes. The Max Gain setting will allow you to control the maximum amount of gain to apply to brighten the picture.
 - **Denoise:** This setting controls the amount of noise reduction that will be applied to the picture.

Brightness: Adjust this setting to compensate for backlit subjects.

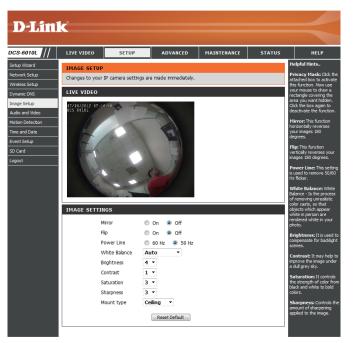

Contrast: Adjust this setting to alter the color intensity/strength.

- Saturation: This setting controls the amount of coloration, from grayscale to fully saturated.
- **Sharpness:** Specify a value from 0 to 8 to specify how much sharpening to apply to the image.
- **Reset Default** Click this button to reset the image to factory default settings.
 - Mounting: Select the correct mounting type from either **Ceiling**, **Wall**, or **Desktop** to ensure the PTZ controls respond accurately.

LIVE VIDEO



MAGE SETTINGS	
Mirror	◎ On
Flip	On Off
Power Line	60 Hz 9 50 Hz
White Balance	Auto 🔻
Brightness	4 -
Contrast	1 -
Saturation	3 •
Sharpness	3 -
Mount type	Ceiling -
	Reset Default

Audio and Video

You may configure up to 3 video profiles with different settings for your camera. Hence, you may set up different profiles for your computer and mobile display. In addition, you may also configure the two-way audio settings for your camera. After making any changes, click the **Save Settings** button to save your changes.


Number of active profiles: You can use the drop-down box to set up to 2 active profiles.

Aspect ratio: Set the aspect ratio of the video to 4:3 standard or 16:9 widescreen.

Mode: Set the video codec to be used to JPEG, MPEG-4, or H.264.

Frame size / View window area: TBD 1600 x 1200, 1200 x 900, 800 x 600, 400 x 300

- Maximum frame rate: A higher frame rate provides smoother motion for videos, and requires more bandwidth. Lower frame rates will result in stuttering motion, and requires less bandwidth.
 - Video Quality: This limits the maximum frame rate, which can be combined with the "Fixed quality" option to optimize the bandwidth utilization and video quality. If fixed bandwidth utilization is desired regardless of the video quality, choose "Constant bit rate" and select the desired bandwidth.
 - **Constant bit rate:** The bps will affect the bit rate of the video recorded by the camera. Higher bit rates result in higher video quality.

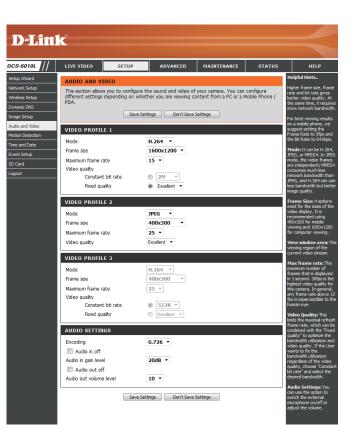

Fixed quality: Select the image quality level for the camera to try to maintain. High quality levels will result in increased bit rates.

Encoding Choose between G.726 or G.711

Audio in off: Selecting this checkbox will mute incoming audio.

Audio in gain level: This setting controls the amount of gain applied to incoming audio to increase its volume.

Audio out off: Selecting this checkbox will mute outgoing audio.

Audio out volume level: This setting controls the amount of gain applied to outgoing audio to increase its volume.

AUDIO AND VIDEO

	the sound and video of your camera. You can configure ether you are viewing content from a PC or a Mobile Phone /
Save S	ettings Don't Save Settings
VIDEO PROFILE 1	
Mode	H.264 -
Frame size	1600x1200 -
Maximum frame rate	15 -
Video quality	
Constant bit rate	© 2M ▼
Fixed quality	I Excellent ▼
VIDEO PROFILE 2	
Mode	JPEG 🔻
Frame size	400x300 -
Maximum frame rate	25 -
Video quality	Excellent 🔻
VIDEO PROFILE 3	
Mode	H.264 -
Frame size	400x300 ·
Maximum frame rate	25 *
Video quality	
Constant bit rate	◎ <u>512K</u> ▼
Fixed quality	Excellent 💌
AUDIO SETTINGS	
Encoding	6.726 -
Audio in off	
Audio in gain level	20dB 🔻
Audio out off	
Audio out volume level	10 •

Save Settings Don't Save Settings

Preset

This page allows you to set preset points for the ePTZ function of the camera, which allows you to look around the camera's viewable area by using a zoomed view. Presets allow you to quickly go to and view a specific part of the area your camera is covering, and you can create preset sequences, which will automatically change the camera's view between the different presets according to a defined order and timing you can set.

The page displays 2 video panes. The left pane shows the zoomed view, the right pane shows the entire viewable area. Select a video profile from the dropdown menu to work with, then click and drag within either pane to control the viewing area. Use the arrow buttons to fine tune the area you wish to focus on.

Video Profile: This selects which video profile to use.

Arrow Buttons and Home Button: Use these buttons to move to a specific part of the viewing area, which you can then set as a preset. Click the Home button to return to the center of the viewing area.

- Input Preset Name: Enter the name of the preset you want to create, then click the Add button to make a new preset. If an existing preset has been selected from the Preset List, you can change its name by typing in a new name, then clicking the Rename button.
 - **Preset List:** Click this drop-down box to see a list of all the presets that have been created. You can select one, then click the **GoTo** button to change the displayed camera view to the preset. Clicking the **Remove** button will delete the currently selected preset.
 - Preset Sequence: This section allows you to create a preset sequence, which automatically moves the camera's view between a set of preset views.



Preset List: To add a preset to the sequence, select it from the dropdown box at the bottom of this window, set the Dwell time to determine how long the camera view will stay at that preset, then click the Add button. The preset name will appear in the list, followed by the dwell time to view that preset for.

You can rearrange your presets in the sequence by selecting a preset in the sequence, then clicking the arrow buttons to move it higher or lower in the current sequence.

Clicking the trash can button will remove the currently selected preset from the sequence.

If you want to change the dwell time for a preset, select it from the list, enter a new dwell time, then click the **Update** button.

← Âì → ↓ Zoom +	Pan speed4 *Tilt speed0 *Zoom speed0 *Panoramic speed1 *Go to :Select *
Preset and rotate settings name : Add preset location Add	Rotate speed 4 💌
User preset locations	Rotate locations
111	111
223	223
333	333
Remove More	Remove Up down
	save

Motion Detection


Enabling Video Motion will allow your camera to use the motion detection feature. You may draw a finite motion area that will be used for monitoring. After making any changes, click the **Save Settings** button to save your changes.

Enable Video Motion: Select this box to enable the motion detection feature of your camera.

- **Sensitivity:** Specifies the measurable difference between two sequential images that would indicate motion. Please enter a value between 0 and 100.
- **Percentage:** Specifies the amount of motion in the window being monitored that is required to initiate an alert. If this is set to 100%, motion is detected within the whole window will trigger a snapshot.
- **Draw Motion Area:** Draw the motion detection area by dragging your mouse in the window (indicated by the red square).
- **Erase Motion Area:** To erase a motion detection area, simply click on the red square that you wish to remove.

Right clicking on the camera image brings up the following menu options:

Select All: Draws a motion detection area over the entire screen. Clear All: Clears any motion detection areas that have been drawn. Restore: Restores the previously specified motion detection areas.

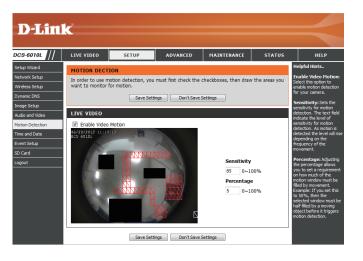

Time and Date

This section allows you to automatically or manually configure, update, and maintain the internal system clock for your camera. After making any changes, click the **Save Settings** button to save your changes.

Time Zone: Select your time zone from the drop-down menu.

Enable Daylight Saving: Select this to enable Daylight Saving Time.

Auto Daylight Saving: Select this option to allow your camera to configure the Daylight Saving settings automatically.

Set Date and Time Manually: Selecting this option allows you to configure the Daylight Saving date and time manually.

Offset: Sets the amount of time to be added or removed when Daylight Saving is enabled.

Synchronize with NTP Server: Enable this feature to obtain time automatically from an NTP server.

NTP Server: Network Time Protocol (NTP) synchronizes the DCS-6010L with an Internet time server. Choose the one that is closest to your location.


Set the Date and Time Manually: This option allows you to set the time and date manually.

Copy Your Computer's Time This will synchronize the time information from your PC. **Settings:**

T 21	-							
Lin	K							
10L ///	LIVE VIDEO	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP		
rd	TIME AND DA	TE	•			Helpful Hints		
up up S	You can set the	current time for the I		iettings		Good timekeeping is important for accurate logs and scheduled firewall rules.		
	THE CONTON		Time Zone: Select your time zone from the drop-					
		TIME CONFIGURATION						
	Time Zone (GMT			•		Enable Daylight Saving: Select this to		
	Enable Dayli					enable the daylight saving time.		
		aylight Saving				Auto Daylight Saving:		
	Set da	te and time manually	0 -			When you select it, the clock is automatically		
	Unse		h Week Day of wee	k Hour Minutes		adjusted according to the daylight saving time of		
	Start			- 00 00		the selected time zone.		
	End			• 00 00		Offset: Select the time offset, if your location observes daylight saving time.		
		TME CONFIGURAT	TION			Synchronize with NTP Server: With the option		
		with NTP Server				selected, the camera will synchronize the time		
	NTP Server	ntp.dlink.co	m.tw <	< Select NTP Saver V		settings with the NTP server over the Internet		
	SET DATE AN	D TIME MANUALL	Y			whenever the camera starts up. If the		
	Set date an	d time manually				timeserver cannot be reached, no time settings		
		12 - Mon	th 6 -	Day 30		will be applied.		
	Hour 11		ite 13 v	Second 22		NTP Server: Network Time Protocol (NTP) synchronizes the IP		
		Copy Ye	our Compulter's Time Setti	ings		camera with an Internet time server. Choose the		
						one that is closest to your location.		
		Save Sett	ings Don't Save S	iettings		Copy Your Computer's Time Settings: This will synchronize the time information from your PC		

Event Setup

In a typical application, when motion is detected, the DCS-6010L sends images to a FTP server or via e-mail as notifications. As shown in the illustration below, an event can be triggered by many sources, such as motion detection. When an event is triggered, a specified action will be performed. You can configure the Network Camera to send snapshots or videos to your e-mail address or FTP site.

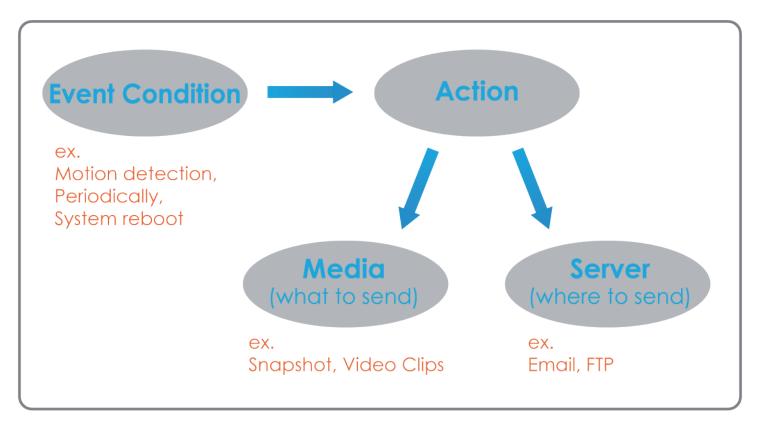

To start plotting an event, it is suggested to configure server and media columns first so that the Network Camera will know what action shall be performed when a trigger is activated.

The Event Setup page includes 4 different sections.

- Event
- Server
- Media
- Recording
- 1. To add a new item "event, server or media," click **Add**. A screen will appear and allow you to update the fields accordingly.
- 2. To delete the selected item from the pull-down menu of event, server or media, click **Delete**.
- 3. Click on the item name to pop up a window for modifying.

D-Linl	C					
DC3-6010L	LIVE VIDEO	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP
Setup Wizard Network Setup Wireless Setup Dynamic DNS Image Setup	EVENT SETUP There are four se Add to pop a win delete the select window to edit it server and 5 med	k Delete to name to pop a	Helpful Hints Suggest setting server and media first before setting event. The servers and media which selected in event list are not be able to modify or delete. Please remove			
Audio and Video Motion Detection Time and Date Event Setup	SERVER Name Typ Server1 Ema Add Server1	il mai@d.link.c				them first from the event if you want to delete or modify them. Recommend using different media in different event to make use all media be produced and received correctly. If using the same media in
SD Card		o clip Profile 1				different events and the events trigger almost smultaneously, the servers in the second triggered event will not receive any media; there would be only notifications.
	EVENT Name Status Event1 ON Add Event1 •	Sun Mon Tue W V V V Delete		Time Trigger 0:00~23:59 Motion		
	RECORDING Name Status Add - Dele		Wed Thu Fri Sat	Time Source De	estination	
SECURITY						
		Copyrigh	nt @ 2011 D-Link Corp	oration.		

Add Server

You can configure up to 5 servers to save snapshots and/or video to. After making any changes, click the **Save Settings** button to save your changes.

Server Name: Enter the unique name of your server.

- E-mail: Enter the configuration for the target e-mail server account.
 - **FTP:** Enter the configuration for the target FTP server account.

Network Storage: Specify a network storage device. Only one network storage device is supported.

SD Card: Use the camera's onboard SD card storage.

SERVER							
You can set at most 5 different servers here for different event.							
Test Save Settings	Don't Save Settings						
SERVER TYPE							
Server Name:							
Email							
Sender email address							
Recipient email address							
Server address							
User name							
Password							
Port	25						
This server requires a secure	connection (StartTLS)						
 ◎ FTP							
Server address							
Port	21						
User name							
Password							
Remote folder name							
Passive mode							
Network storage							
Network storage location							
(for example:\\my_nas\disk\folde	er)						
Workgroup							
User name							
Password							
Primary WINS server							
SD Card							

Test Save Settings Don't Save Settings

Add Media

There are three types of media, **Snapshot**, **Video Clip**, and **System Log**. After making any changes, click the **Save Settings** button to save your changes.

Media Name: Enter a unique name for media type you want to create.

Snapshot: Select this option to set the media type to snapshots.

Source: Set the video profile to use as the media source. Refer to Audio and Video on "Audio and Video" on page 51 for more information on video profiles.

Send pre-event image(s) [0~4]: Set the number of pre-event images to take. Pre-event images are images taken before the main event snapshot is taken.

Send post-event image(s) [0~7]: Set the number of post-event images to take. Post-event images are images taken after the main event snapshot is taken. You can set up to 7 post-event images to be taken.

File name prefix: The prefix name will be added on the file name.

Add date and time suffix to file Check it to add timing information as file name suffix. name:

MEDIA	
You can se	t at most 5 different media here for different event.
	Save Settings Don't Save Settings
MEDIA T	YPE
Media nai	ne:
Snapsl	not
Sour	rce: Profile 1 💌
Sen	d 1 pre-event image(s) [0~4]
Sen	d 1 post-event image(s) [0~7]
File I	Name Prefix:
	Add date and time suffix to file name
Video	Clip
Sour	rce: Profile 1 🔻
Pre-	event recording: Second(s) [0~4]
Maxi	mum duration: Second(s) [1~100]
Maxi	mum file size: Kbytes [100~5000]
File I	Name Prefix:
Syster	n log

Video clip: Select this option to set the media type to video clips.

- Source: Set the video profile to use as the media source. Refer to "Audio and Video" on page 46 for more information on video profiles.
- **Pre-event recording:** This sets how many seconds to record before the main event video clip starts. You can record up to 4 seconds of pre-event video.
- Maximum duration: Set the maximum length of video to record for your video clips.

Maximum file size: Set the maximum file size to record for your video clips.

- **File name prefix:** This is the prefix that will be added to the filename of saved video clips.
 - System log: Select this option to set the media type to system logs. This will save the event to the camera system log, but will not record any snapshots or video.

MEDIA
You can set at most 5 different media here for different event.
Save Settings Don't Save Settings
MEDIA TYPE
Media name:
 Snapshot Source: Profile 1 Send 1 pre-event image(s) [0~4] Send 1 post-event image(s) [0~7] File Name Prefix: Add date and time suffix to file name Video Clip Source: Profile 1 Pre-event recording: Second(s) [0~4] Maximum duration: Second(s) [1~100]
Maximum file size: Kbytes [100~5000]
File Name Prefix:
System log
Save Settings Don't Save Settings

Add Event

Create and schedule up to 2 events with their own settings here. After making any changes, click the **Save Settings** button to save your changes.

Event name: Enter a name for the event.

Enable this event: Select this box to activate this event.

Priority: Set the priority for this event. The event with higher priority will be executed first.

Delay: Select the delay time before checking the next event. It is used for motion detection events.

Trigger: Specify the input type that triggers the event.

Video Motion Detection: Motion is detected during live video monitoring. Select the windows that need to be monitored.

Periodic: The event is triggered in specified intervals. The trigger interval unit is in minutes.

System Boot: Triggers an event when the system boots up.

Network Lost: Triggers an event when the network connection is lost.

Passive Infrared Sensor: Triggers an event when the PIR sensor is activated by moving infrared objects even in dark environment.

Time: Select Always or enter the time interval.

Server: Specify the location where the event information should be saved to.

EVENT	
You can set at most 2 detection schedule at	2 events like motion detection or digital input trigger here and arrange the the same time.
	Save Settings Don't Save Settings
EVENT	
Event name:	
Enable this event	1
Priority: normal 🔻	
Delay for 10 secon and Passive Infrared s	nds before detecting next event [For motion detection and digital input sensor]
TRIGGER	
Video motion de	tection
Periodic	
Trigger every	1 minutes
Digital input	
System boot	
Network lost	
Passive Infrared s	ensor
EVENT SCHEDULE	
🗷 Sun 🗷 Mon 🛛	🖉 Tue 🖉 Wed 📝 Thu 📝 Fri 📝 Sat
Time	
Alway	
From	00 × 00 × To 23 × 59 ×
ACTION	
Trigger D/O for	1 seconds
Server1	
Attached medi	a: Media 1 👻

Save Settings Don't Save Settings

Add Recording

Here you can configure and schedule the recording settings. After making any changes, click the **Save Settings** button to save your changes.

Recording entry name: The unique name of the entry.

Enable this recording: Select this to enable the recording function.

Priority: Set the priority for this entry. The entry with a higher priority value will be executed first.

Source: The source of the stream.


Recording schedule: Scheduling the recording entry.

Recording settings: Configuring the setting for the recording.

Destination: Select the folder where the recording file will be stored.

Total cycling recording size: Please input a HDD volume between 1MB and 2TB for recording space. The recording data will replace the oldest record when the total recording size exceeds this value. For example, if each recording file is 6MB, and the total cyclical recording size is 600MB, then the camera will record 100 files in the specified location (folder) and then will delete the oldest file and create new file for cyclical recording.


Please note that if the free HDD space is not enough, the recording will stop. Before you set up this option please make sure your HDD has enough space, and it is better to not save other files in the same folder as recording files.

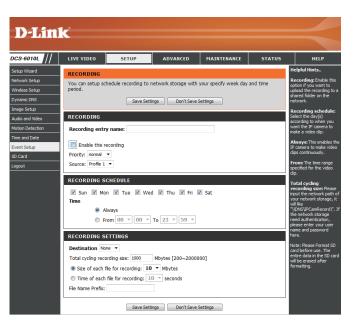

Size of each file for recording: If this is selected, files will be separated based on the file size you specify.

Time of each file for recording: If this is selected, files will be separated based on the maximum length you specify.

File Name Prefix: The prefix name will be added on the file name of the recording file(s).

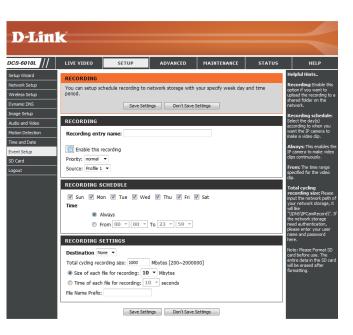

SD Card


Here you may browse and manage the recorded files which are stored on the SD card.

Format SD Card: Click this icon to automatically format the SD card and create "Picture" & "Video" folders.

View Recorded Picture: If the picture files are stored on the SD card, click on the picture folder and choose the picture file you would like to view.

Playback Recorded Video: If video files are stored on the SD card, click on the video folder and choose the video file you would like to view.

Refresh: Reloads the file and folder information from the SD card.

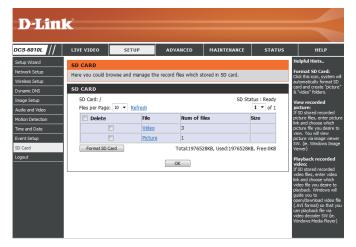

Advanced HTTPS

This page allows you to install and activate an HTTPS certificate for secure access to your camera. After making any changes, click the **Save Settings** button to save your changes.

Enable HTTPS Secure Connection: Enable the HTTPS service.

Create Certificate Method: Choose the way the certificate should be created. Three options are available:

Create a self-signed certificate automatically Create a self-signed certificate manually Create a certificate request and install

Status: Displays the status of the certificate.

Note: The certificate cannot be removed while the HTTPS is still enabled. To remove the certificate, you must first uncheck **Enable HTTPS secure connection**.



Access List

Here you can set access permissions for users to view your DCS-6010L.

- Allow list: The list of IP addresses that have the access right to the camera.
- Start IP address: The starting IP Address of the devices (such as a computer) that have permission to access the video of the camera. Click Add to save the changes made.

Note: A total of seven lists can be configured for both columns.


- **End IP address:** The ending IP Address of the devices (such as a computer) that have permission to access the video of the camera.
- **Delete allow list:** Remove the customized setting from the Allow List.
 - **Deny list:** The list of IP addresses that have no access rights to the camera.

Delete deny list: Remove the customized setting from the Delete List.

For example:

When the range of the Allowed List is set from 1.1.1.0 to 192.255.255.255 and the range of the Denied List is set from 1.1.1.0 to 170.255.255.255. Only users with IPs located between 171.0.0.0 and 192.255.255.255 can access the Network Camera.



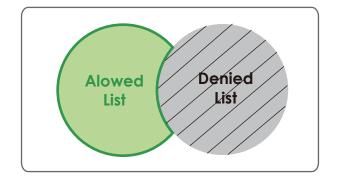

Maintenance Device Management

You may modify the name and administrator's password of your camera, as well as add and manage the user accounts for accessing the camera. You may also use this section to create a unique name and configure the OSD settings for your camera.

D

Admin Password Setting: Set a new password for the administrator's account.

Add User Account: Add new user account.

User Name: The user name for the new account.

Password: The password for the new account.

- User List: All the existing user accounts will be displayed here. You may delete accounts included in the list, but you may want to reserve at least one as a guest account.
- **Camera Name:** Create a unique name for your camera that will be added to the file name prefix when creating a snapshot or a video clip.
 - **Enable OSD:** Select this option to enable the On-Screen Display feature for your camera.
 - Label: Enter a label for the camera, which will be shown on the OSD when it is enabled.
 - **Show Time:** Select this option to enable the time-stamp display on the video screen.

LIVE VIDEO	SETUP	ADVANCED	MAINTENANCE	STATUS	н	
ADMIN					Helpful Hini	
Here you can change the administrator's password for your IP camera as well as add and/or delete user account(s). You can configure the information, such as IP camera's name and time va this page. You can also enable the GSD (On-Screen Display) feature in order to display the IP camera name and time stamp for your video recordings.						
ADMIN PASSW	ORD SETTING				For security is recommend	
					change the p your adminis	
New Password			3 characters maximum		account. Be down the ner	
Retype Password			lave		to avoid hav the IP camer event that it	
ADD USER ACC	OUNT					
User Name		20	users maximum			
New Password		63	characters maximum			
Retype Password						
	Add					
USER LIST						
User Name	User list	▼ Delete				
DEVICE SETTIN	G					
IP camera Name	DCS-6010L	63	characters maximum			
Enable OSD						
Label	DCS-6010L	63	characters maximum			
	me 🔽					

System

In this section, you may backup, restore and reset the camera configuration, or reboot the camera.

Save To Local Hard Drive: You may save your current camera configuration as a file on your computer.

Local From Local Hard Drive: Locate a pre-saved configuration by clicking Browse and then restore the pre-defined settings to your camera by clicking Load Configuration.

Restore to Factory Default: You may reset your camera and restore the factory settings by clicking **Restore Factory Defaults**.

Reboot Device: This will restart your camera.

D -Linl						
CS-6010L	LIVE VIDEO	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP
Admin System Firmware Upgrade .ogout	SYSTEM Here you may ba SYSTEM	ckup, restore, and re	boot your IP camera.			Helpful Hints After the factory's default settings have been restored, use the installation wizard software provided with
<u>.</u>	Save To Local Ha		Save Configuration	Baowze		your IP camera to search and connect to the IP camera.
	Restore To Facto	ory Defaults	Restore Factory De	faults		
	L					

Firmware Upgrade

The camera's current firmware version will be displayed on this screen. You may visit the D-Link Support Website to check for the latest available firmware version.

To upgrade the firmware on your DCS-6010L, please download and save the latest firmware version from the D-Link Support Page to your local hard drive. Locate the file on your local hard drive by clicking the **Browse** button. Select the file and click the **Upload** button to start upgrading the firmware.

Current Firmware Version: Displays the detected firmware version.

Current Product Name: Displays the camera model name.

File Path: Locate the file (upgraded firmware) on your hard drive by clicking **Browse**.

Upload: Uploads the new firmware to your camera.



Status Device Info

This page displays detailed information about your device and network connection.

6010L ///	LIVE VIDEO	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP	
e Info	DEVICE INFO					Helpful Hints	
t	All of your network displayed here.	All of your network connection details are displayed on this page. The firmware version is also displayed here.					
	INFORMATION					-	
	IP camera Name Time & Date Firmware Version MAC Address IP Address IP Subnet Mask Default Gateway Primary DNS Secondary DNS PPPOE DDNS Agent Version	DCS-6010L Sat Jun 30 11:: 0.01.13 F0:7D:68:09:A3 192.168.0.103 255.255.255.0 192.168.0.1 192.168.0.1 0.0.0.0 Disable Disable 2.0.15-b6	3:D9				

Logs

This page displays the log information of your camera. You may download the information by clicking **Download**. You may also click **Clear** to delete the saved log information.

Logout CURRENT LOG CURRENT LOG CURRENT LOG	D-Lin	k	\prec				
SYSTEM LOGYou can save the log your local hard IP can by dicking the Downly button, and you can button, and you can button.CURRENT LOG1. 2012-06-30 11:16:46 admin FROM 192.168.0.100 TURN ON LED 2. 2012-06-30 11:14:48 SD CARD SIZE 1976528 KB 7. 2012-06-30 11:14:48 SD CARD SIZE 1976528 KB 7. 2012-06-30 11:14:48 SD CARD SIZE 1976528 KB 7. 2012-06-30 11:13:17 IP CAMERA Received MOTION Trigger 10. 2012-06-30 11:13:17 IP CAMERA Received MOTION Trigger 12. 2012-06-30 11:13:17 IP CAMERA Received MOTION Trigger 12. 2012-06-30 11:12:12 admin FROM 192.168.0.100 SET PROFILE 1 FRAMERATE 15 14. 2012-06-30 11:12:12 admin FROM 192.168.0.100 SET PROFILE 1 FRAMERATE 15 14. 2012-06-30 11:12:12 admin FROM 192.168.0.100 TURN ON MASK AREA 2IS 2012-06-30 11:12:06 admin FROM 192.168.0.100 TURN ON MASK AREA 2 <th>DCS-6010L //</th> <th>LIVE VIDEO</th> <th>SETUP</th> <th>ADVANCED</th> <th>MAINTENANCE</th> <th>STATUS</th> <th>HELP</th>	DCS-6010L //	LIVE VIDEO	SETUP	ADVANCED	MAINTENANCE	STATUS	HELP
18. 2012-06-30 11:12:06 admin FROM 192.168.0.100 TURN ON MASK AREA 1 19. 2012-06-30 11:11:56 admin FROM 192.168.0.100 TURN OFF MASK AREA 2 20. 2012-06-30 11:11:56 admin FROM 192.168.0.100 TURN OFF MASK AREA 3	Device Info	SYSTEM LOG The system log r CURRENT LOG 1. 2012-06-30 2. 2012-06-30 3. 2012-06-30 4. 2012-06-30 5. 2012-06-30 6. 2012-06-30 7. 2012-06-30 10. 2012-06-30 11. 2012-06-30 12. 2012-06-30 13. 2012-06-30 15. 2012-06-30 15. 2012-06-30 18. 2012-06-30 19. 2012-06-30 19. 2012-06-30	ecords IP camera eve 11:16:53 admin FRON 11:16:46 admin FRON 11:15:59 MOTION ST 11:15:56 IP CAMERA 11:15:56 MOTION ST 11:14:48 SD CARD SI 11:14:37 IP CAMERA 11:14:31 MOTION ST 11:14:29 IP CAMERA 11:13:17 IP CAMERA 11:12:13 MOTION ST 11:12:13 MOTION ST 11:12:10 admin FRON 11:12:06 admin FRON 11:12:06 admin FRON 11:12:56 admin FRON 11:11:56 admin FRON	nts that have occurre 4 192.168.0.100 TURI 4 192.168.0.100 TURI TOPPED Received MOTION Tri TOPPED Received MOTION Tri TOPPED Received MOTION Tri TOPPED Received MOTION Tri 4 192.168.0.100 SET TOPPED Received MOTION Tri 4 192.168.0.100 TURI 4 192.168	d. N ON LED N OFF LED gger gger MOTION BLOCK TABLE PROFILE 1 FRAMERATE gger N ON MASK AREA 2 N ON MASK AREA 3 N ON MASK AREA 1 N OFF MASK AREA 2		Helpful Hints You can save the log to your local hard IP camera by dicking the Download button, and you can clear the log by dicking on the

Help


This page provides helpful information regarding camera operation.



Technical Specifications

Camera	Camera Hardware Profile	 1/3.5" 2 megapixel progressive CMOS sensor Minimum illumination: 2.0 lux Built-in microphone and speaker 10x digital zoom Focal length: 1.25 mm Aperture: F2.0 	 Angle of view: (H) 180° (V) 180° (D) 180° 			
	Image Features	 Configurable image size, quality, frame rate, and bit rate Fisheye distortion correction Time stamp and text overlays 	 Configurable privacy mask zones Configurable shutter speed, brightness, saturation, contrast, and sharpness Configurable motion detection windows 			
	Video Compression	 Simultaneous H.264/MPEG-4/MJPEG format compression H.264/MPEG-4 multicast streaming 	 JPEG for still images 			
	Video Resolution	1600 x 1200, 1200 x 900, 800 x 600, 400 x 300				
	Audio Support	G.726, G.711				
	External Device Interface= 10/100 BASE-TX Fast Ethernet port = IEEE 802.11n 2.4GHz single band wireless		 MicroSD/SDHC card slot 			
Network	Network Protocols	IPv6 IPv4 TCP/IP UDP ICMP DHCP client NTP client (D-Link) DNS client DDNS client (D-Link) SMTP client FTP client	HTTP / HTTPS Samba Client PPPoE UPnP port forwarding RTP / RTSP/ RTCP IP filtering QoS CoS Multicast IGMP ONVIF compliant			
	Security	 Administrator and user group protection Password authentication 	 HTTP and RTSP digest encryption 			

System Management	System Requirements for Web Interface	 Browser: Internet Explorer, Firefox, Chrome, Safari 		
	Event Management	 Motion detection 	Supports multiple SMTP and FTP servers	
		 Event notification and uploading of snapshots/video clips via e-mail or FTP 	Multiple event notificationsMultiple recording methods for easy backup	
	Remote Management	 Take snapshots/video clips and save to local hard drive or NAS via web browser 	 Configuration interface accessible via web browser 	
	Mobile Support	Windows 7/Vista/XP system, Pocket PC, or mobile phone	mydlink mobile app for iOS and Android mobile devices	
	D-ViewCam [™] System Requirements • Operating System: Microsoft Windows 7/Vista/XP • Web Browser: Internet Explorer 7 or higher		Protocol: Standard TCP/IP	
	D-ViewCam™• Remote management/control of up to 32 camerasSoftware Functions• Viewing of up to 32 cameras on one screen		 Supports all management functions provided in web interface Scheduled motion triggered, or manual recording options 	
General	Weight	267 g +-5%		
	External Power Adaptor	Input: 100 to 240 V AC, 50/60 Hz	Output: 5 V DC, 1.2 A	
	Power Consumption	3.9 watts max.		
	Temperature	Operating: 0 to 40 °C (32 to 104 °F)	Storage: -20 to 70 °C (-4 to 158 °F)	
	Humidity	Operating: 20% to 80% non-condensing	Storage: 5% to 95% non-condensing	
	Certifications	CE CE LVD	FCC C-Tick	

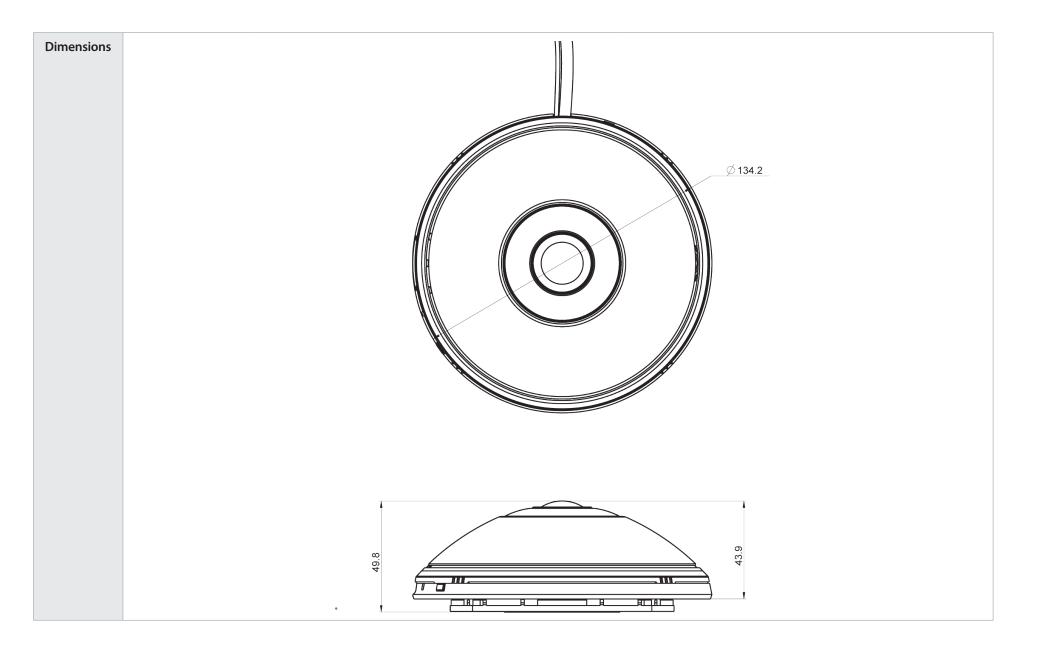

Safety Statements

CE Mark Warning:

This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTICE: FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

The availability of some specific channels and/or operational frequency bands are country dependent and are firmware programmed at the factory to match the intended destination. The firmware setting is not accessible by the end user. For detailed warranty information applicable to products purchased outside the United States, please contact the corresponding local D-Link office.

Industry Canada Notice:

This device complies with RSS-210 of the Industry Canada Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTE:

Radiation Exposure Statement:

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.