



DES-3226S

How to upgrade firmware



- *To upgrade firmware on the switch:*


1. Setup your PC on the same IP subnet as the switch. (i.e. switch IP: 10.90.90.90, your PC IP: 10.47.80.111 then you can use ping command to check link status.)

1. Open the TFTP Server in your PC.

2. Go to **Switch Utilities** folder, and click on the **TFTP** link, and then put on the **Server IP Address** and the **Path/Filename**



- Open the TFTP Server in your PC

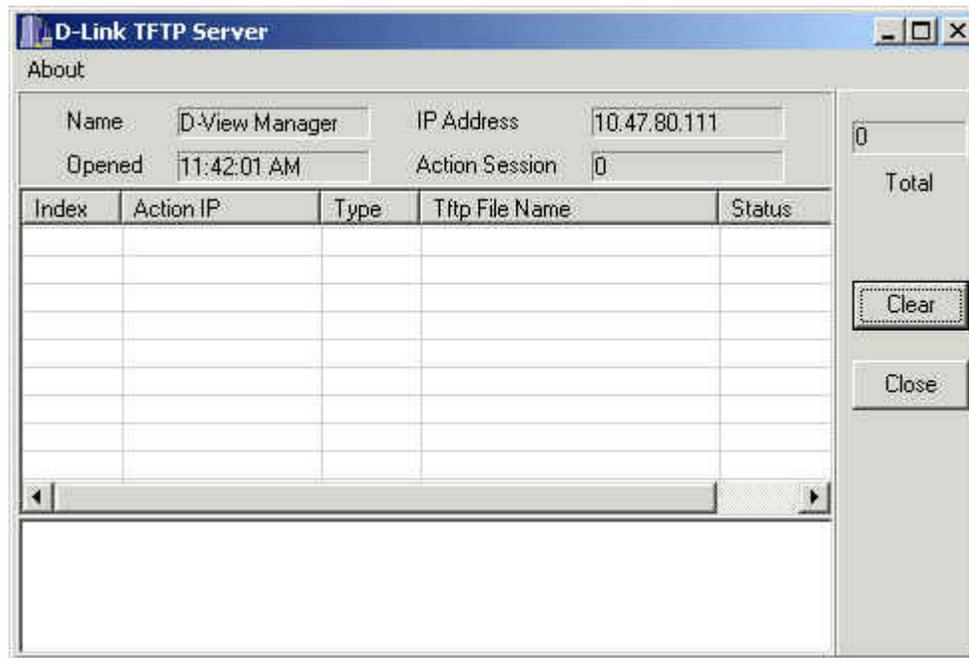



1. Download Firmware

The screenshot shows the web management interface for a D-Link DES-3226S switch. The left sidebar contains a navigation menu with the following items: Basic Setup, Switch Information, Stack Information, Basic Switch Setup, Serial Port Settings, Port Configurations, User Accounts, Network Management, Switch Utilities, TFTP Services, and Others. Under 'Switch Utilities', 'TFTP Services' is expanded, and 'Download Firmware from TFTP' is highlighted with a red circle. The main content area is titled 'Download Firmware from TFTP Server' and includes the following configuration fields:

- Select Upgrade Unit: 1
- Server IP Address: 10 . 47 . 80 . 111
- Path \ Filename: c:\des3326s-b19.had

At the bottom of the configuration area, there are two buttons: 'Download' and 'Save Settings'.



2. CLI Configuration

Format:

DES-3226S:4#**download firmware** <ipaddr> <path_filename 64> unit <1-6>\<all>

Example:

DES-3226S:4# **download firmware 10.47.80.111 c:\des3226s-b19.had unit 1**