

D-Link®

EXISTING NETWORK > NEW NETWORK



Quick Install Guide+


WIRELESS

QUICK INSTALL GUIDE



MODEL: DGL-4300

Existing Network > New Network

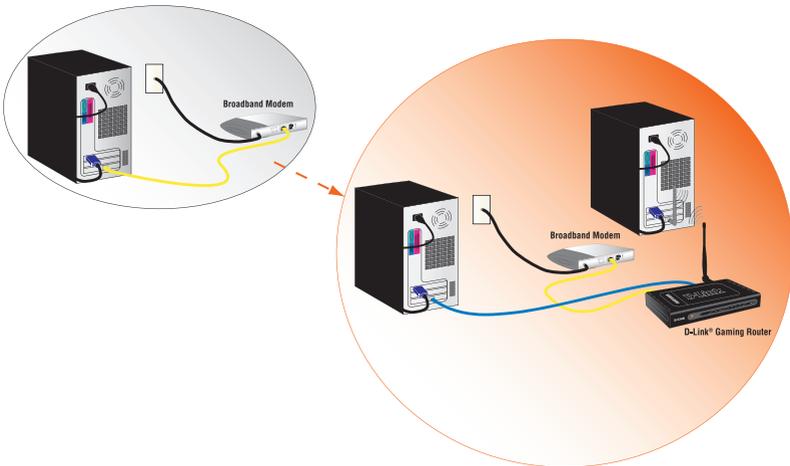


Vertical Stands and Rubber Feet

Vertical stacking stands are provided so you can place your D-Link® Gaming Router in a vertical position. Rubber Feet are provided to allow proper ventilation when the D-Link® Gaming Router is placed horizontally or stacked upon other D-Link® stackable products.

To attach the vertical stands, simply slide the vertical stands into the slotted grooves on the top and bottom panels of the D-Link® Gaming Router.

To attach the rubber feet, simply press the rubber feet into the four corners on the bottom panel of the D-Link® Gaming Router.

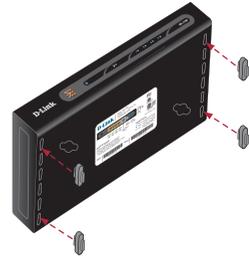

Wireless Antenna



Attach the wireless antenna to the rear panel of the DGL-4300 by turning the knob at the base of the antenna until it is fully attached.



Hardware Installation



Unplug the power from your broadband modem and shut down your computer.

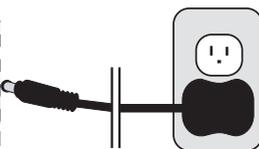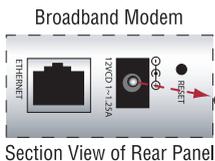


2

Disconnect the Ethernet cable connected from your computer to your broadband modem. Leave the end connected to your broadband modem attached.


3

Connect the end of the Ethernet cable removed from your computer to the WAN port on the router.

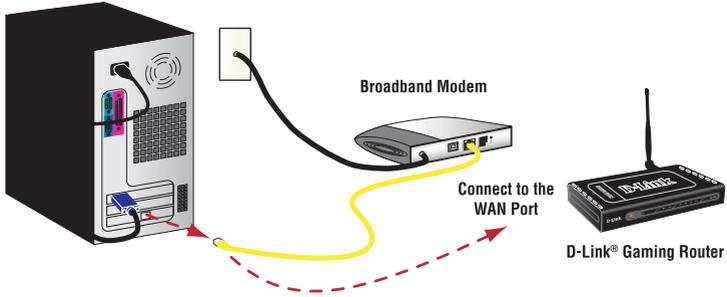


4

Connect the provided Ethernet cable from a numbered port on the router to your computer.

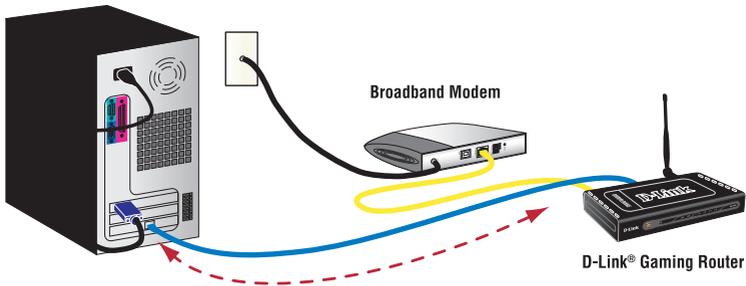

5


Plug the power back into your broadband modem and wait for the broadband modem to synchronize to the network (refer to the Modem manual for information on this).

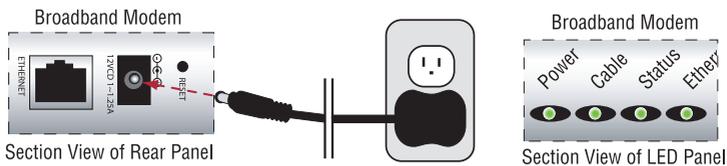

6

Plug the power adapter (provided with the router) into the router, then connect the other end to a power outlet and verify that the POWER LED on the router is on.

Note: If the Power LED is not lit, verify that the power adapter is properly connected to the D-Link® Gaming Router and to a working power outlet.

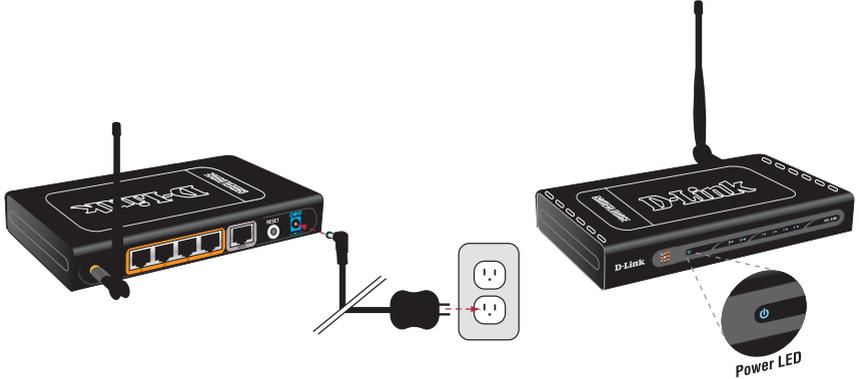

7

Power on your computer.

8

Verify that the WAN and LAN port (corresponding to where the computer was connected in step 4) LED's are on.

Note: If the WAN LED is not lit, check the connection of the Ethernet cable from the Broadband modem to the WAN port of the D-Link® Gaming Router as detailed in steps 2-3. If the LAN LED is not lit, check the connection of the Ethernet cable as detailed in step 4.





Launch your web browser and type in a web address such as **http://games.dlink.com** to verify that you have an Internet connection.



If a web address is not accessible, enter **http://192.168.0.1** in your web browser address bar. Once the main screen appears, press the button labeled **Internet Connection Setup Wizard** and proceed through the wizard.

For additional details on the Internet Connection Setup Wizard, please refer to the User Manual on the CD-ROM.

