

Document: The settings example on DI-701 with Bigpond ADSL service.

Author: Steven Sia

Rev: 1.1

IMPORTANT: Please click on "SAVE" after finish setting up all the tabs shown here.

Configure [X]

Management | Local Port | Global Port | Virtual Server

Device/Computer: []

Firmware version: 2.20

PPPoE Enabled

Username: [user@bigpond]

Password: [*****]

Change Administrator's Password

New Password: []

Confirm New Password: []

[Save] [Cancel]

Configure [X]

Management | Local Port | Global Port | Virtual Server

IP address: [192 .168 .0 .1]

SubNetmask: [255 .255 .255 .0]

Do not distribute IP address to local computer:


Distribute IP addresses to local computer:

Continuous IP address pool starts at


[192 .168 .0 .2]

Number of IP address in pool: [32]


[Save] [Cancel]

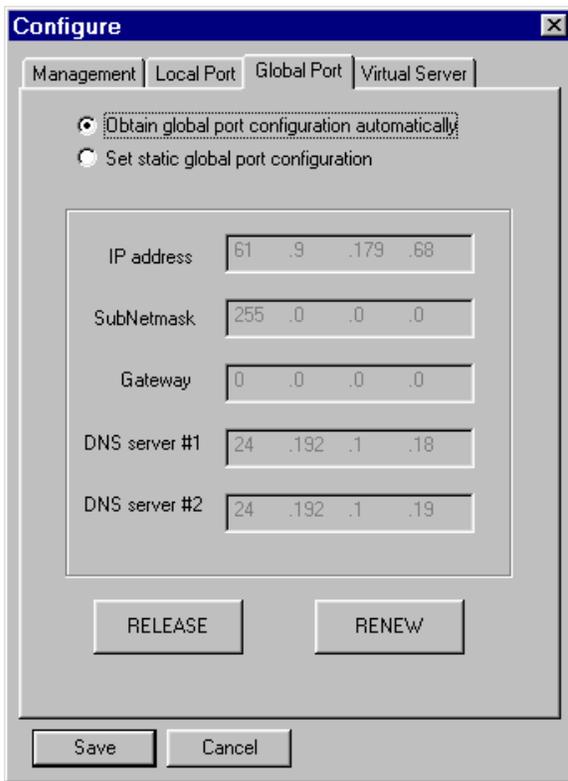


Do not worry about it if this value above change to "Set static global..." after you restarted it. It is fine. Nothing is set under Virtual Server.

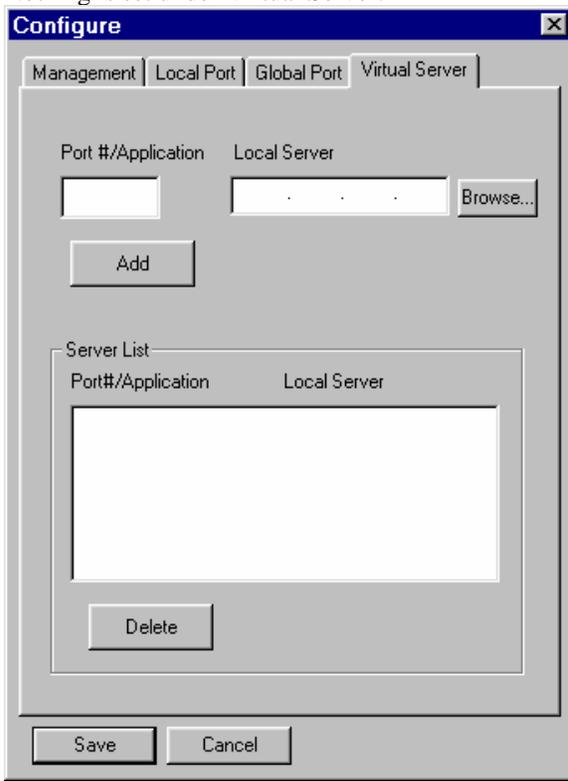


On EACH PC, you will need to assign a unique IP address, eg. 192.168.0.2, 192.168.0.3, etc...

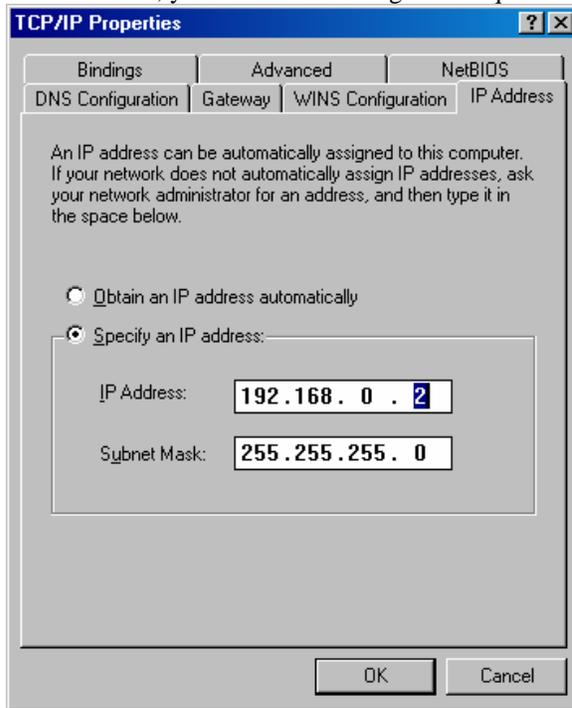


The Gateway on EACH PC has to be the IP address of DI-701 (192.168.0.1 in this example) because it is the “door” way to get out to Internet through ADSL.

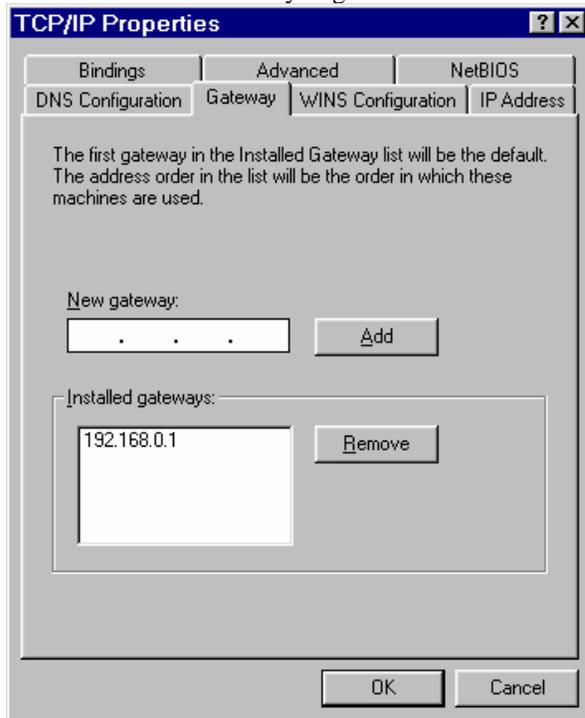

On EACH PC, you will also need to “Enable DNS” and
Host = PC1, Domain = bigpond.net.au
Add the DNS server given to you by Bigpond.

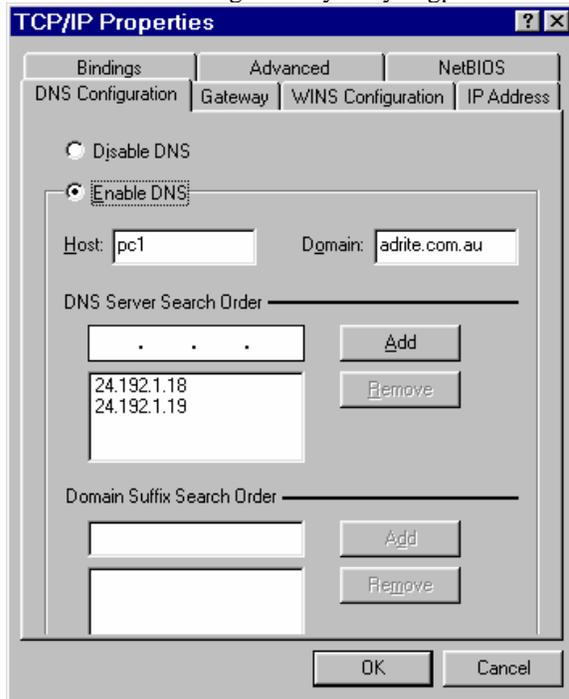

Lastly, on EACH PC’s browser (eg. I.E. 5), make sure that
under Tools > Internet Options > Connections tab > LAN Settings
Untick everything or
Tick only “Automatically detect settings”

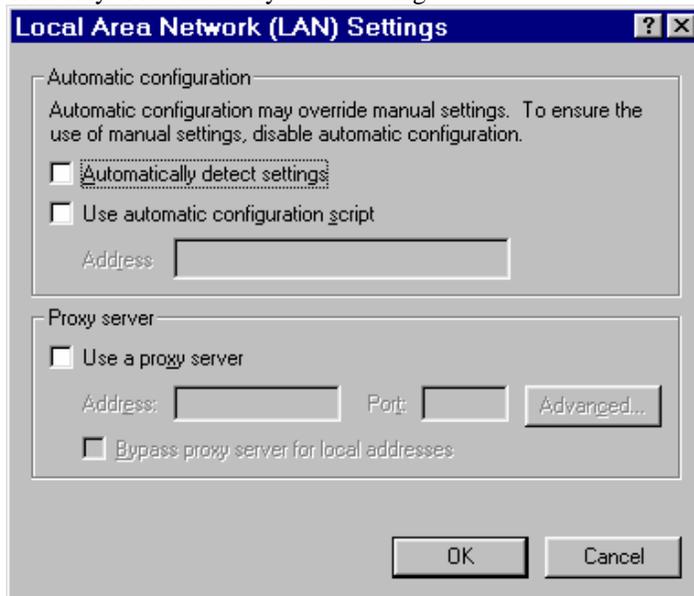

Thank you very much for reading this setup document. If you have any further queries, please write to support@dlinc.com.au with descriptions of your steps and Windows mesg shown to you.