

D-Link DI-804V to DFL-500/1000 VPN Configuration Manual

Network Configuration:

- 1. DI-804V WAN IP Address is 192.168.100.100 255.255.255.0
- 2. DI-804V LAN IP Address is 192.168.1.99 255.255.255.0
- 3. DFL-500 WAN IP Address is 192.168.100.99 255.255.255.0
- 4. DFL-500 LAN IP Address is 192.168.0.99 255.255.255.0
- 5. PC behind DI-804V with IP Address of 192.168.1.100 255.255.255.0 and Default Gateway of 192.168.1.99 255.255.255.0 (DI-804V LAN IP)
- 6. PC behind DFL-500 with IP Address of 192.168.0.167 255.255.255.0 and Default Gateway of 192.168.0.99 255.255.255.0 (DFL-500 LAN IP)

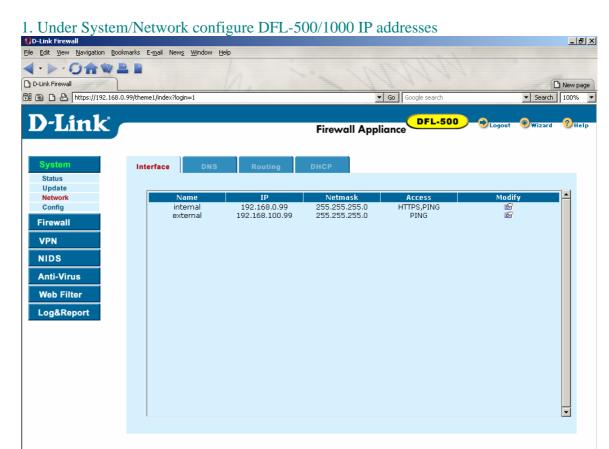

2. Under Firewall/Address configure your Internal network IP address

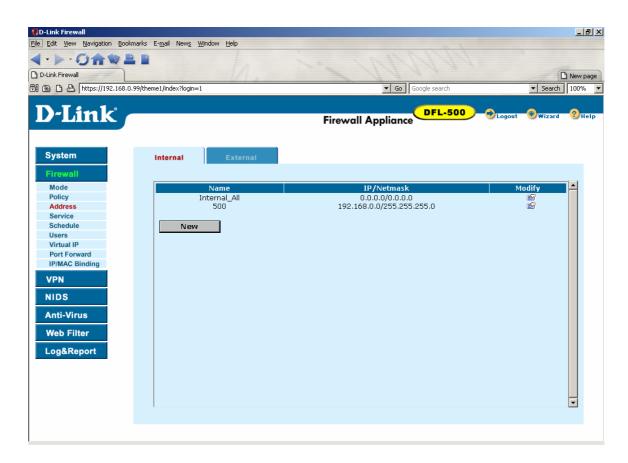


3. Under Firewall/Address configure your External network IP address _ B × Eile Edit View Navigation Bookmarks E-mail News Window Help ◆・▶・り命⇒■■ D-Link Firewall (a) https://192.168.0.99/theme1/index?login=1 ▼ Go Google search ▼ Search 100% ▼ **D-Link** DFL-500 Firewall Appliance System External Mode IP/Netmask 0.0.0.0/0.0.0.0 192.168.1.0/255.255.255.0 Policy External_All **≦** Address Service Schedule New Users Virtual IP Port Forward IP/MAC Binding VPN NIDS Anti-Virus **Web Filter** Log&Report


4. Under VPN/IPSec/Autokey IKE configure your Tunnel (Remote Gateway is DI-804V WAN

IP Address, Authentication Key should match DI-804V PreShared Key, Incoming NAT must be


ticked)

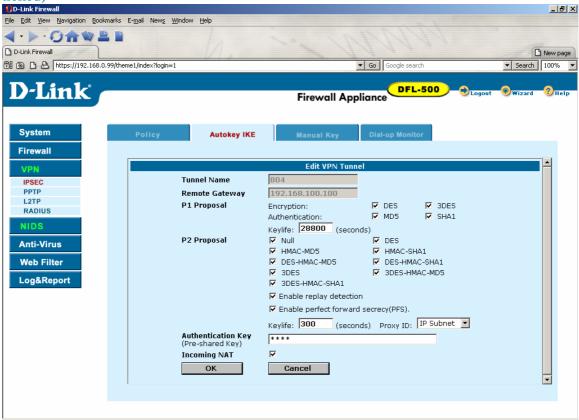


5. Create a VPN Policy (Incoming NAT must be unticked)

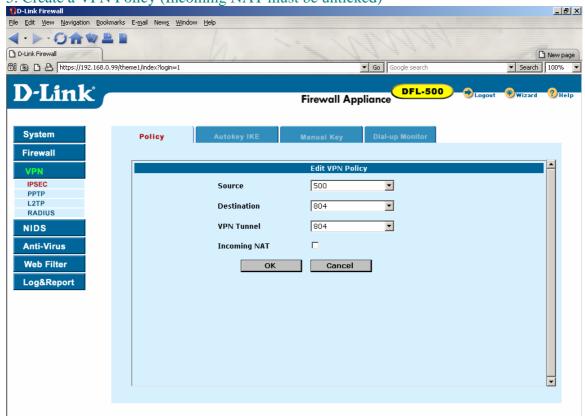

6. Configure DI-804V IP internal address

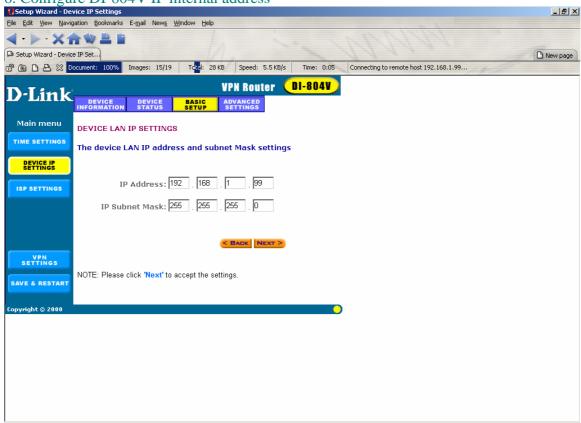


7. Configure your ISP Settings

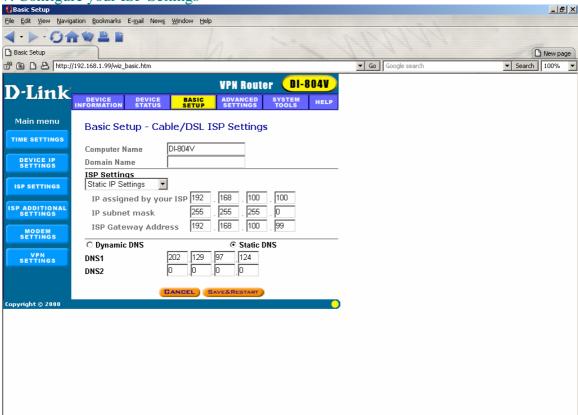


8. Configure your VPN settings (Remote Network is DFL-500/1000 Remote Network, while

Remote Gateway is DFL-500/1000 External IP address)

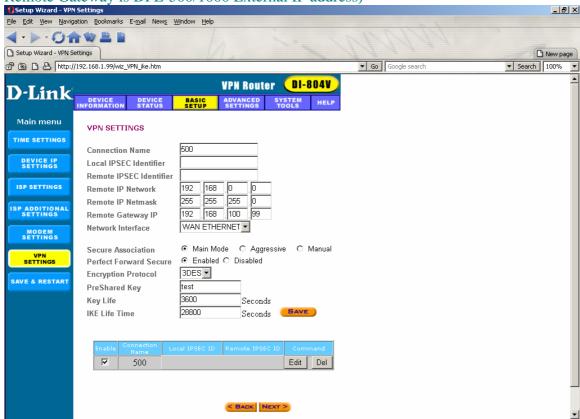

9. Try to ping a computer behind your DI-804V from your DFL-500/1000 internal network (both computers must have default gateways as DI-804V or DFL-500/1000 according

to their network)

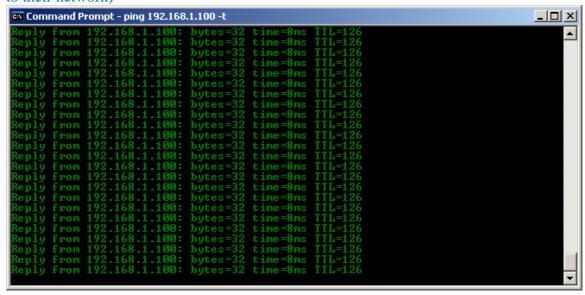


10. Go to Device Status and check your VPN STATUS, WAN Ethernet should have 1 Connection Active



11. Click on VPN Status, your will get Active Status and M->Q-Estab Status. Your VPN

Tunnel is up and running

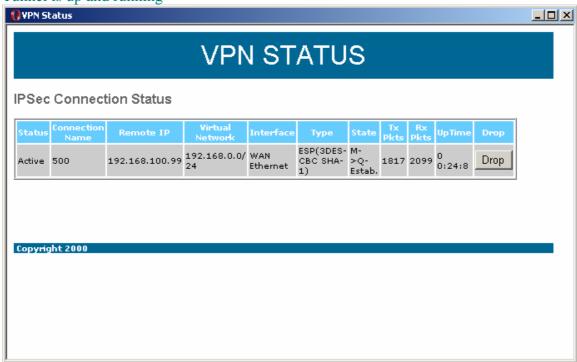

You have successfully configured a VPN Tunnel between DI-804V and DSL-500/1000.

Congratulations!