

QUICK INSTALL GUIDE

DPR-1260

VERSION 1.1



D-Link®

WIRELESS

System Requirements

- 10/100 Fast Ethernet Wired or 802.11b/g Wireless Network
- Printer with USB Port*
- Computer with:
 - Windows® XP (SP2) or Windows® 2000 (SP4)
 - Internet Explorer v6 or Mozilla Firefox
 - CD-ROM Drive
 - Network Interface Card

* For a list of compatible printers, visit <http://support.dlink.com>.

Package Contents



D-Link DPR-1260
Multi-Function Print Server



Manual and Software on CD



CAT5 Ethernet Cable




Power Adapter

Note: Using a power supply with a different voltage rating than the one included with the DPR-1260 will cause damage and void the warranty for this product.

If any of the above items are missing, please contact your reseller.

Hardware Overview

Connections

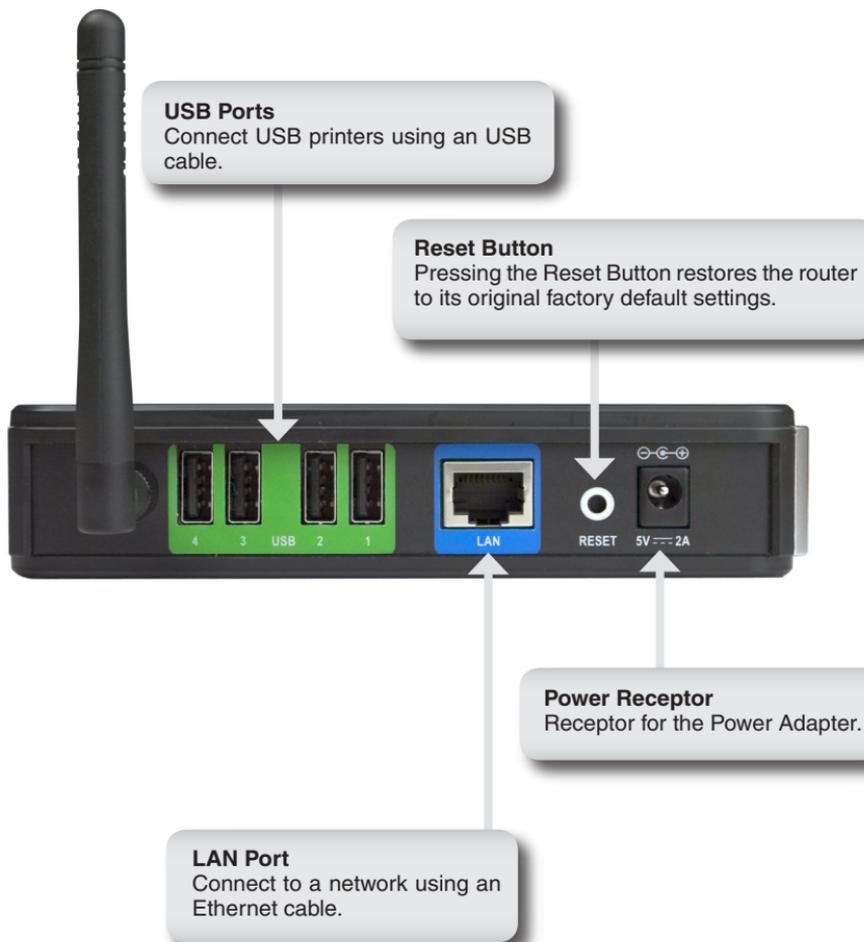

Hardware Overview

LEDs

LAN LED

A solid light indicates connection on the LAN port. This LED blinks during data transmission.



Power LED

A solid light indicates a proper connection to the power supply.

USB LEDs (1-4)

A solid light indicates connectivity to an USB printer or scanner.

WLAN LED

A solid light indicates that the wireless segment is ready. This LED blinks during wireless data transmission.

Installation

Connect an Ethernet cable to the Ethernet connector located on the Print Server's back panel and attach it to the network.

Note: *It is required that an Ethernet cable is used during initial setup. Once your wireless configuration is set, you may disconnect the Ethernet cable and begin communicating wirelessly with your DPR-1260.*


Attach the external power supply to the DC power input connector located on the Print Server's bottom panel and connect it to a power outlet or power strip.

The factory default IP address of the DPR-1260 is 192.168.0.10. The IP address of the DPR-1260 must be in the same range as your network. You can change the IP address of the DPR-1260 to match the IP address scheme of your existing network. To access the Print Server's Web configuration interface, assign an IP address on one of the wired PCs on your network to the same IP scheme as the Print Server.

Note: *Some printer software features may not work while connected to the print server such as ink level display.*

Go to **Start** > right-click on **My Network Places** > select **Properties** > right-click on the Network Connection associated with your Network Adapter and select **Properties**


Click **Internet Protocol (TCP/IP)** and click **Properties**.

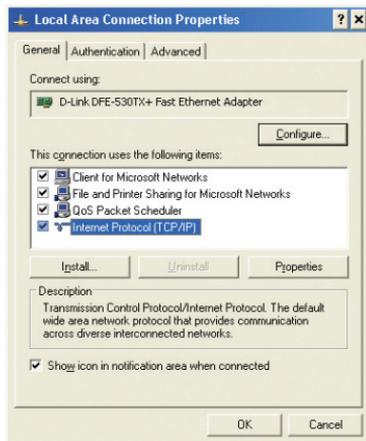

Input a static IP address in the same range as the print server (192.168.0.xx).

Select **Use the Following IP Address** and enter an IP address (192.168.0.28) and a Subnet Mask (255.255.255.0). Click **OK** to save the new IP address.

Once you are finished configuring your print server, you can change the settings back.

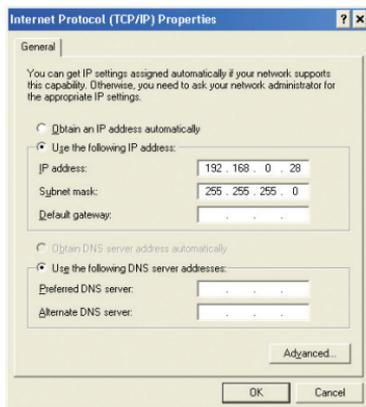

D-Link Setup Wizard

To access the configuration utility, open a web-browser such as Internet Explorer and enter the IP address of the print server (192.168.0.10).

If you get a **Page Cannot be Displayed** error, please refer to the **Troubleshooting** section of the manual for assistance.



Click **Next** to continue.

A screenshot of the D-Link printer setup wizard web interface. At the top right, it says "Hardware Version: A1 Firmware Version: 1.00". The D-Link logo is on the left. Below the logo is a navigation menu with tabs: "DPR-1260 //", "STATUS", "SCAN", "ADVANCED", "SETUP", and "SUPPORT". On the left side, there is a vertical menu with options: "PRINT WIZARD", "NETWORK SETTINGS", "WIRELESS SETTINGS", "ADMINISTRATION", and "FIRMWARE". The main content area is titled "WELCOME TO THE PRINTER SETUP WIZARD" and contains the following text:

This wizard will install a network-attached printer onto your computer. The wizard will guide you through the following steps. Click [Next](#) to begin.

- Step 1: Select a printer
- Step 2: Launch a setup executable on your computer
- Step 3: Insert the printer driver CD if requested
- Step 4: Print a test page

NOTE: You do not need to run this wizard to use a scanner -- simply browse to the [Scan](#) page.


At the bottom of the main content area are "Next" and "Cancel" buttons. On the right side, there is a "Helpful Hints..." section with the following text:

Use the WIZARD to setup a PC to be able to print through this Print Server.

If desired, run the wizard for each of printer attached to this Print Server.

It is NOT necessary to run this WIZARD to access the scanning function, simply click on the SCAN tab.

Click the radio button next to the printer you want to configure. Click **Next** to continue.

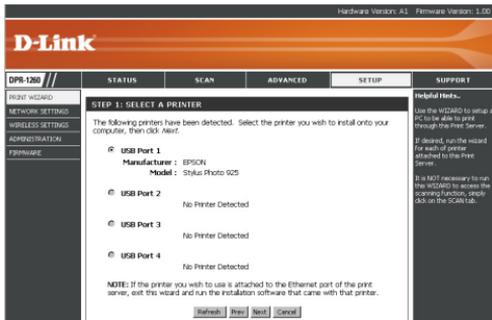

Click **Next** to continue.



You may need to insert your printer driver CD to load the drivers to your computer.

Click **Finish** to complete the setup wizard.



Wireless Settings

If you want to connect to a wireless network, click on **Setup** and then click **Wireless Settings** on the left side.

Set the *Wireless on/off* to **On**. If you want to disable the wireless feature, select **Off**.

Enter the *Wireless Network Name (SSID)* of your wireless network.

If you are connecting to an access point or wireless router, select **Infrastructure**. If you are connecting directly to a computer with a wireless adapter, click **Ad-Hoc**.


Select **None** (to use connect to an unsecure network), **WEP**, or **WPA**.



WEP Encryption

It is recommended to enable encryption on your wireless router before your wireless print server. Please establish wireless connectivity before enabling encryption. Your wireless signal may degrade when enabling encryption due to the added overhead.

1. Log into the web-based configuration by opening a web browser and entering the IP address of the print server (192.168.0.10). Click on **Setup** and then **Wireless Settings** on the left side.

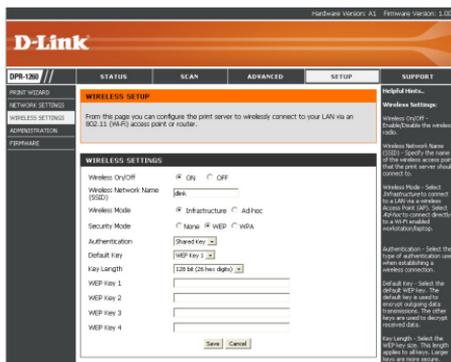

2. Next to *Security Mode*, select **WEP**.

3. Next to *Authentication*, select **Shared Key**.

4. Select either **64-bit** or **128-bit** encryption from the drop-down menu next to *WEP Encryption*.

5. Next to *Key Type*, select either **Hex** or **ASCII**.

Hex (recommended) - Letters A-F and numbers 0-9 are valid.
ASCII - All numbers and letters are valid.

6. Next to *Key 1*, enter a WEP key that you create. Make sure you enter this key exactly on all your wireless devices. You may enter up to 4 different keys.

7. Click **Save Settings** to save your settings.

WPA Encryption

It is recommended to enable encryption on your wireless router before your wireless network adapters. Please establish wireless connectivity before enabling encryption. Your wireless signal may degrade when enabling encryption due to the added overhead.

1. Log into the web-based configuration by opening a web browser and entering the IP address of the router (192.168.0.1). Click on **Wireless Settings** on the left side.



2. Next to *Security Mode*, select **WPA**.
3. Next to *Cipher Mode*, select **TKIP, AES, or TKIP and AES**.
4. Next to *PSK*, enter a key (passphrase). The key is an alpha-numeric password between 8 and 63 characters long. The password can include symbols (!?*&_) and spaces. Make sure you enter this key exactly the same as on your wireless router or access point.
5. Click **Save** to save your settings.

Technical Support

D-Link's website contains the latest user documentation and software updates for D-Link products.

U.S. and Canadian customers can contact D-Link Technical Support through our website or by phone.

United States

Telephone

(877) 453-5465

Twenty four hours a day, seven days a week.

World Wide Web

<http://support.dlink.com>

E-mail

support@dlink.com

Canada

Telephone

(800) 361-5265

Monday through Friday, 7:30am to 9:00pm EST.

World Wide Web

<http://support.dlink.ca>

E-mail

support@dlink.ca



Version 1.1
March 17, 2006

Copyright ©2006 D-Link Corporation/D-Link Systems, Inc. All rights reserved. D-Link and the D-Link logo are registered trademarks of D-Link Corporation or its subsidiaries in the United States and other countries. Other trademarks are the property of their respective owners. Maximum wireless signal rate based on IEEE Standard 802.11g specifications. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead lower actual data throughput rate. Product specifications, size and shape are subject to change without notice, and actual product appearance may differ from that depicted on the packaging. Visit www.dlink.com for more details.