
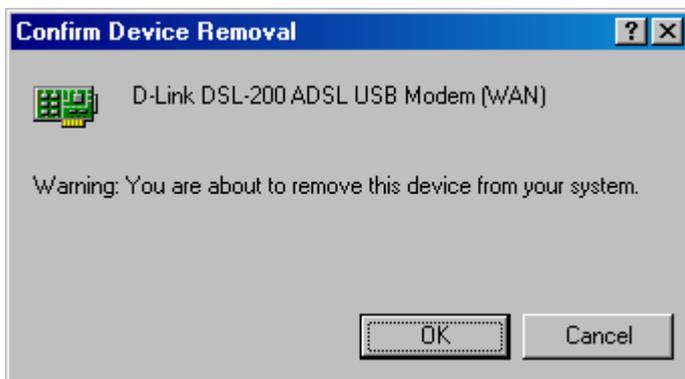


DSL-200 installation on Win98SE

Driver version: 1.03
Date: 14 May 2001
Doc Version: 1.2
Author: Steven Sia

If you have already installed DSL-200 driver on to your computer, please follow the step below to un-install it. It is better to start from fresh. *If this is the first time you are installing the driver, start from page 3.*

Go to Control Panel > System > Device Manager> Network Adapter > D-Link DSL-200 ADSL...
Right-click on “D-Link DSL-200 ADSL...”,
Select “Remove”

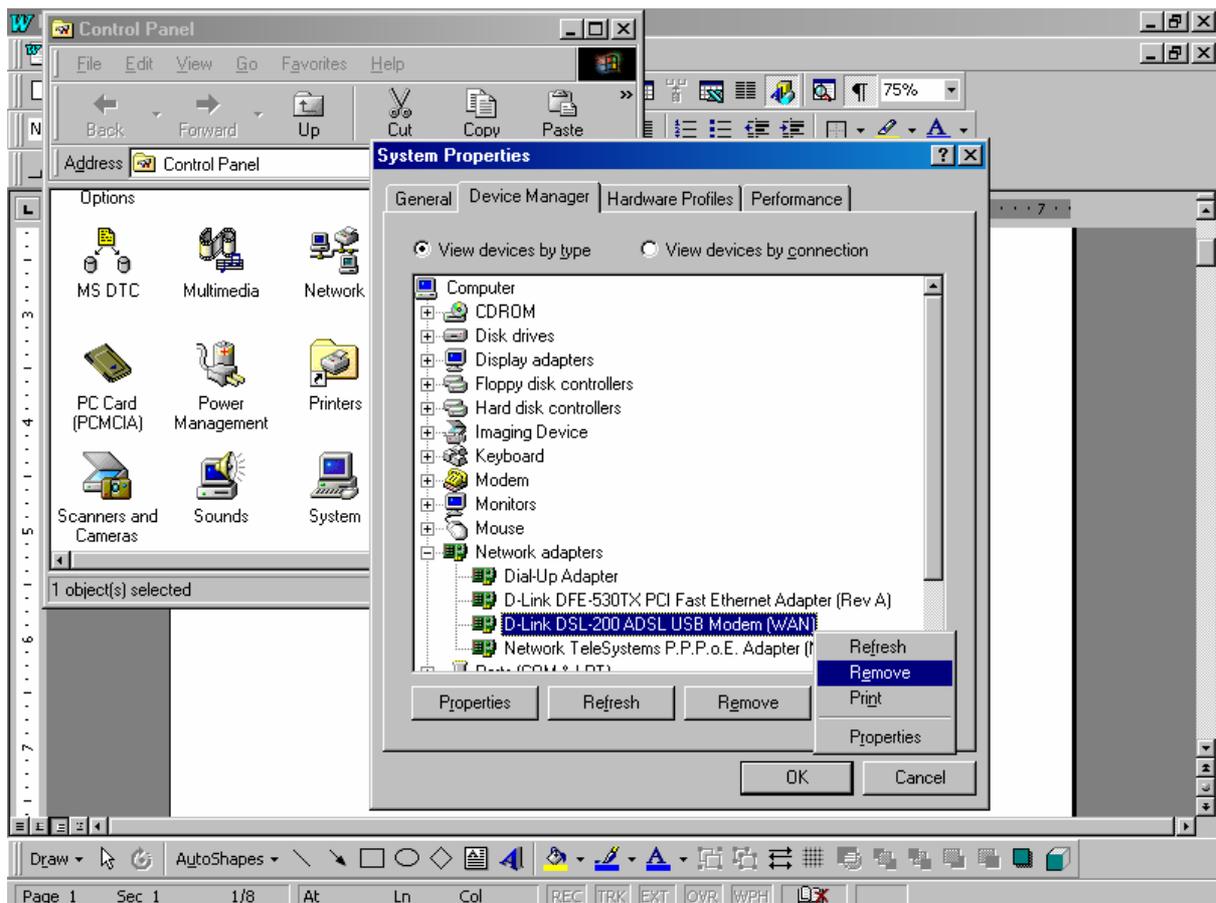

OK to confirm
DO NOT Restart your Computer now.




Click NO

Go to Start > Programs > MS-DOS Prompt

Type in the following commands (ignore the "File not found" mesg if any):

```
DEL c:\windows\system\dlfwload.sys
DEL c:\windows\inf\other\D-Linkdlwload.inf
DEL c:\windows\system\dlwusb.sys
DEL c:\windows\inf\other\dlwusb.inf
DEL c:\windows\inf\other\D-Linkdllload.inf
DEL c:\windows\system\dllusb.sys
DEL c:\windows\inf\other\dllusb.inf
```

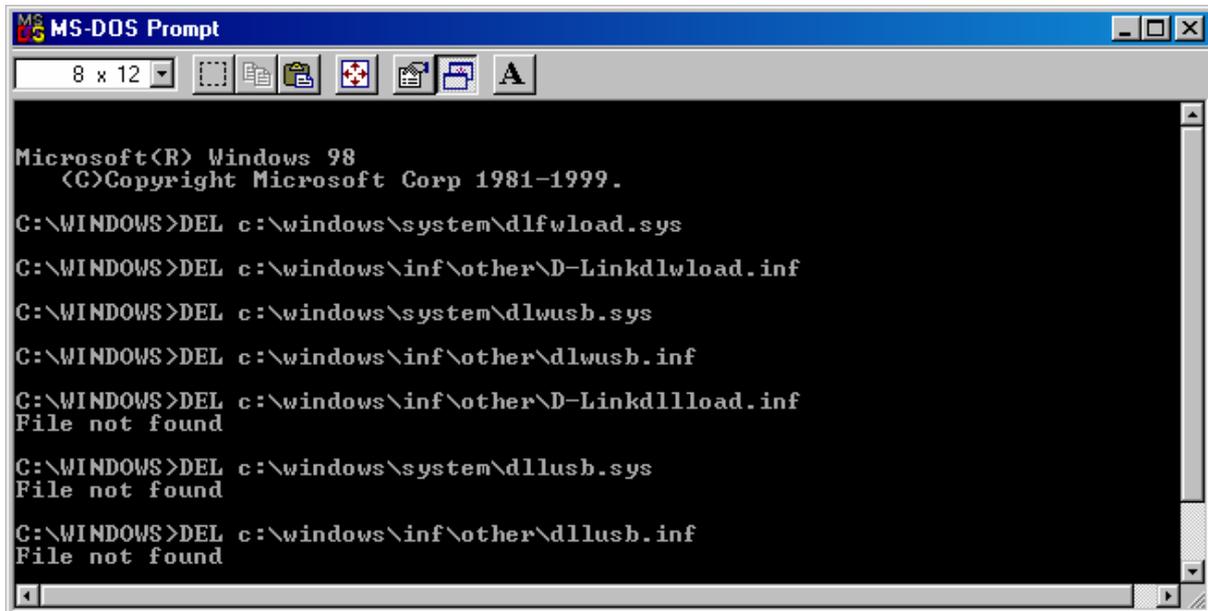

UNPLUG the DSL-200 from your PC

RESTART your PC now by going to Start > Shut Down > Restart.

After the PC finishes booting up,
Plug DSL-200 back into your PC now.

Windows will detect new hardware "New Hardware Found". Then following screen,



Next>




Next>



Select and enter info as above
Next>



Next>

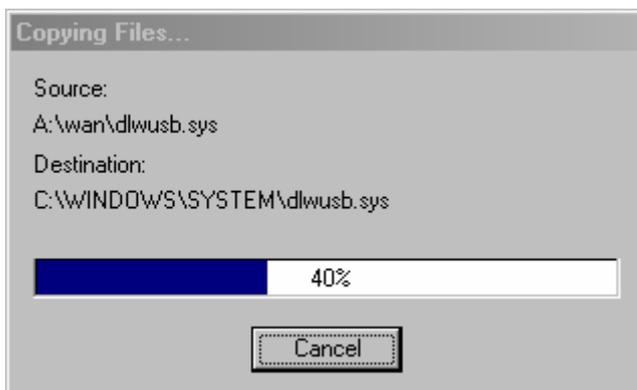

Wait till Windows finish copying files




Click Finish.


Next Window pops up. Choose the following settings

IMPORTANT!!!

for **New Zealand**, select **3) VC Multiplexing...**, VCI=100, VPI=0


For **Australia Telstra Bigpond ADSL**, select **3) VC Multiplexing...**, VCI=35, VPI=8.

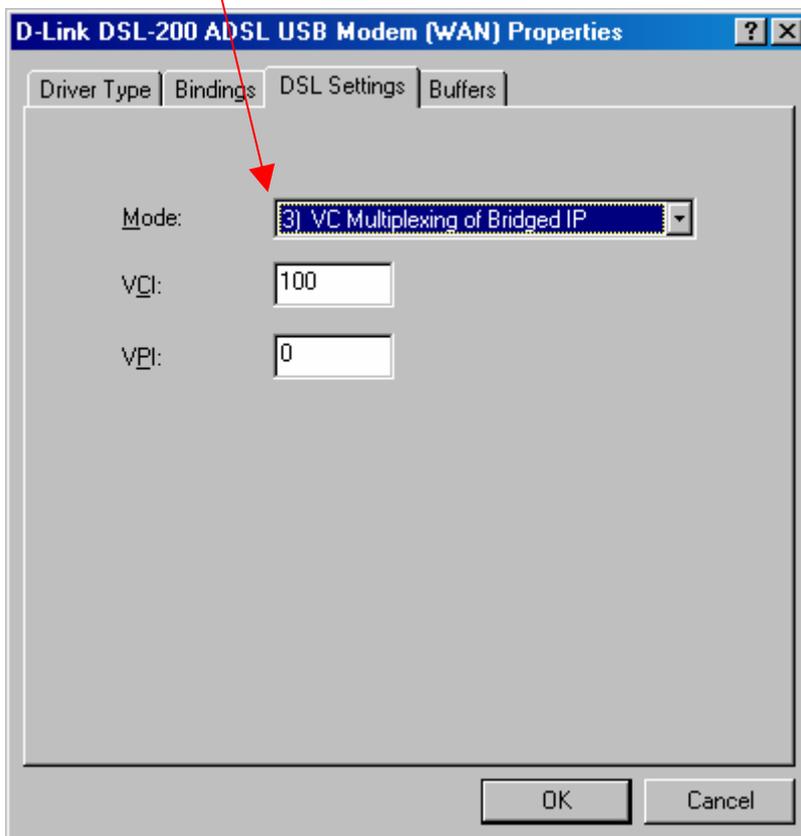

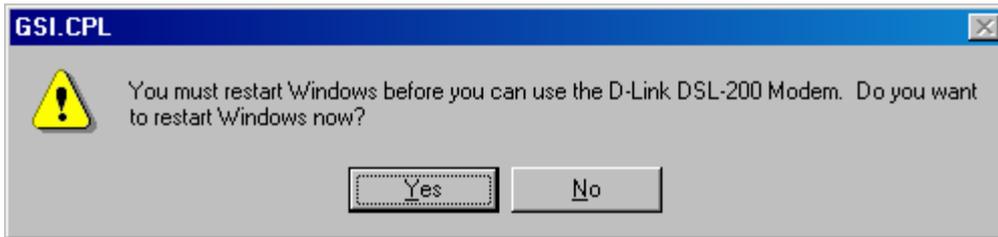


Remove the floppy disk from your disk drive.
Yes to Restart PC.

After PC completes restarting, go to My Computer > Dial-Up Networking, you will see:

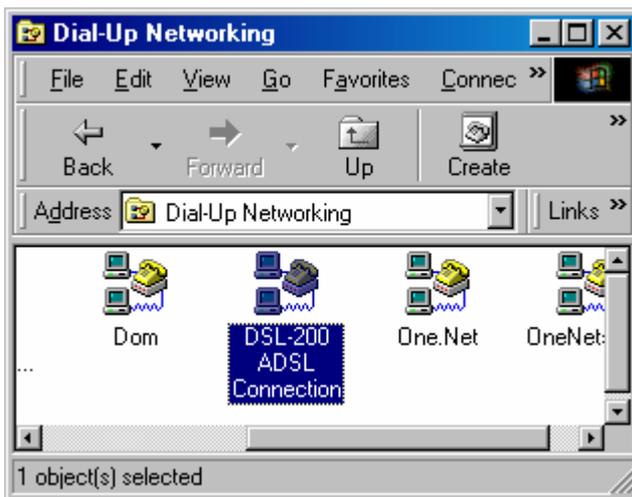

Double-click on "DSL-200 ADSL Connection":

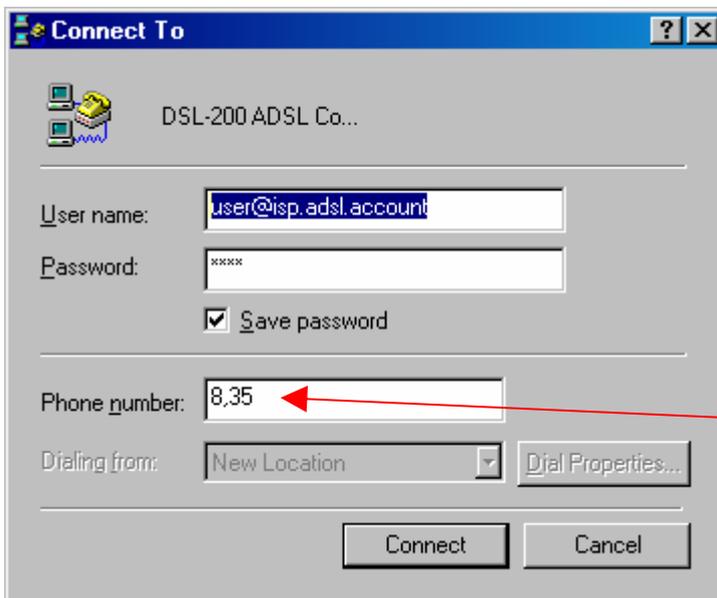


For Australia (as shown), it is: 8,35
For NZ, it is:

Enter your Username and Password according to what are given to you by your ISP.
Click Connect.
It will log on to your ISP ADSL network.



You can check the connection speed by double-click on the icon at the bottom right corner.

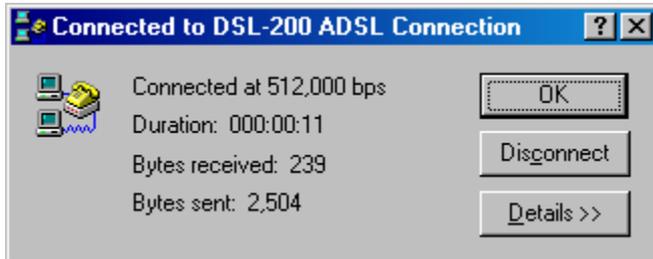


DONE!

Other settings you can see:
Under Control Panel,



Double-click on it, select USB... Click OK.

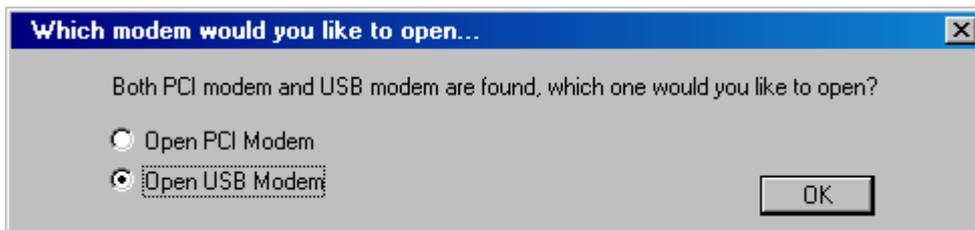

You will see some info like (depending on your ADSL line speed):



Under Configuration tab, it should be [G.DMT](#):



~ End of Document ~