


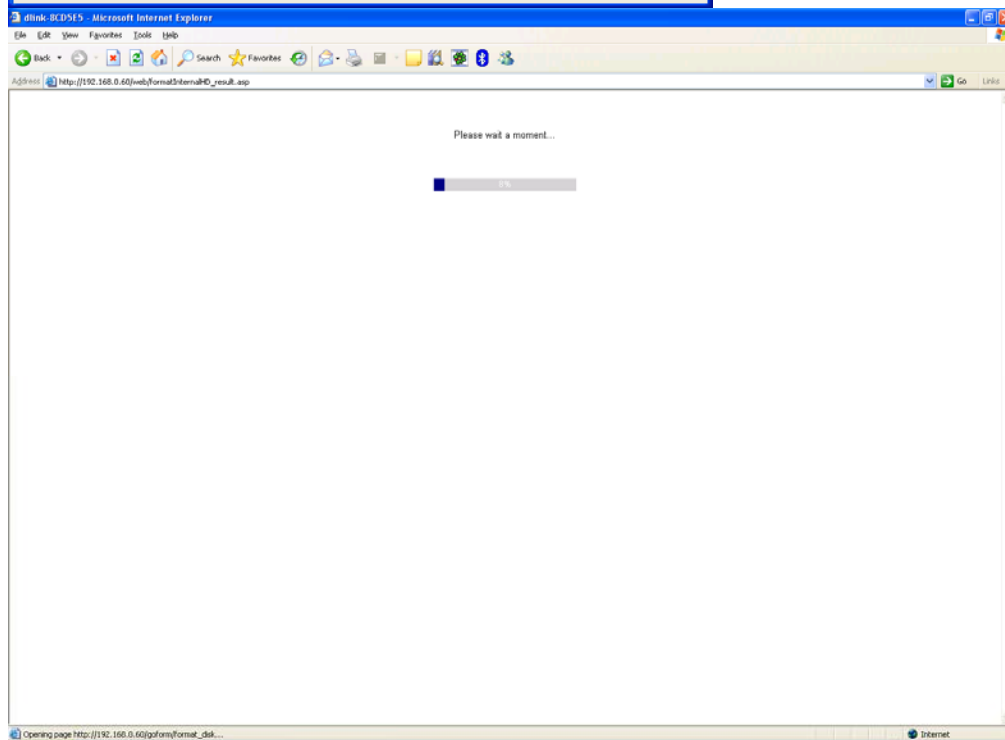
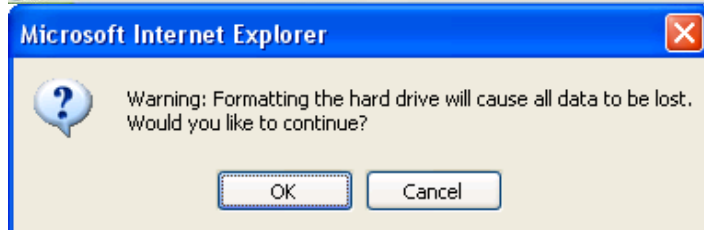
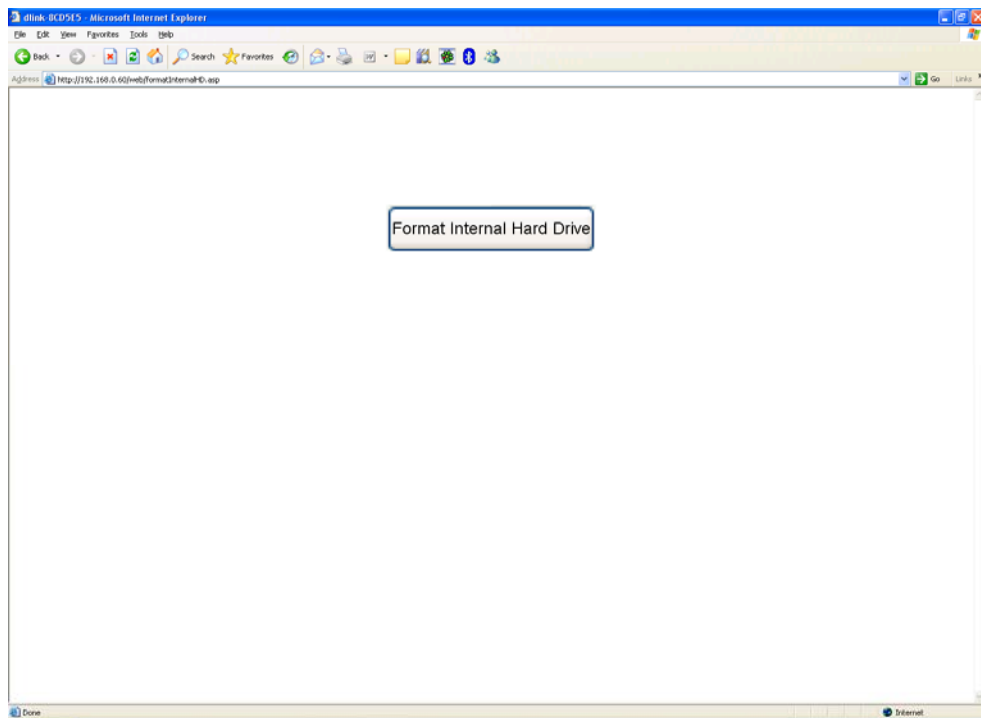
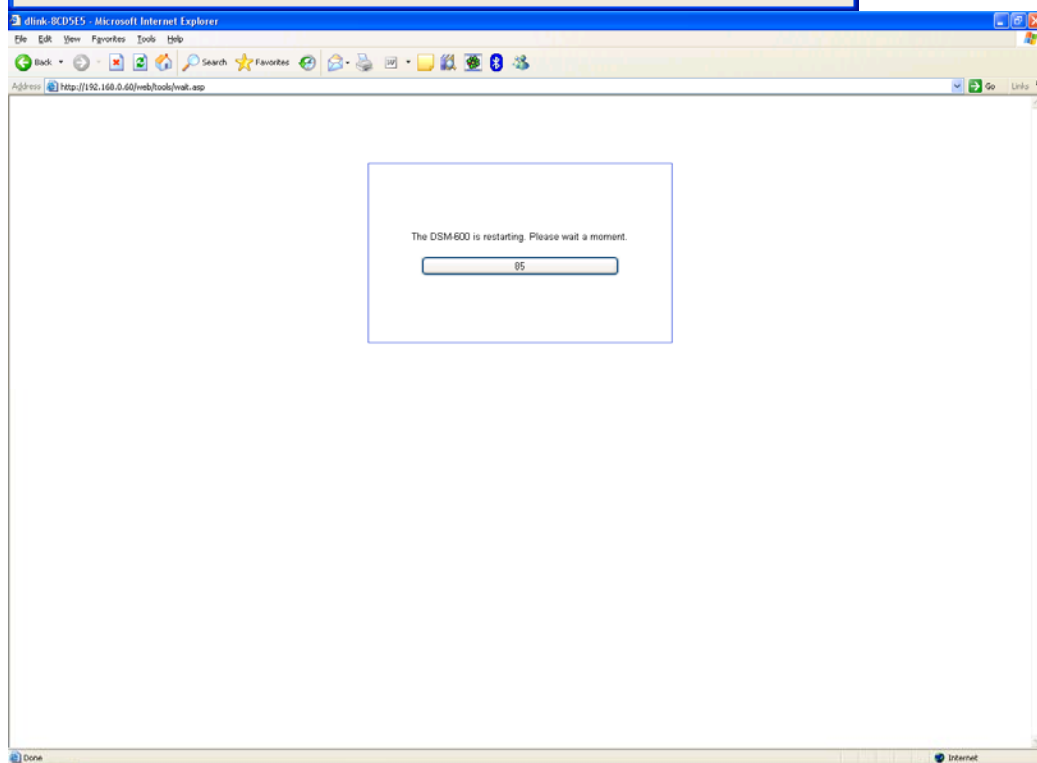
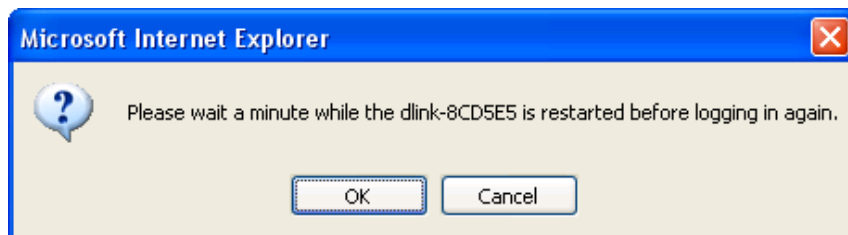


DSM-600 FW 1.02 with internal HDD

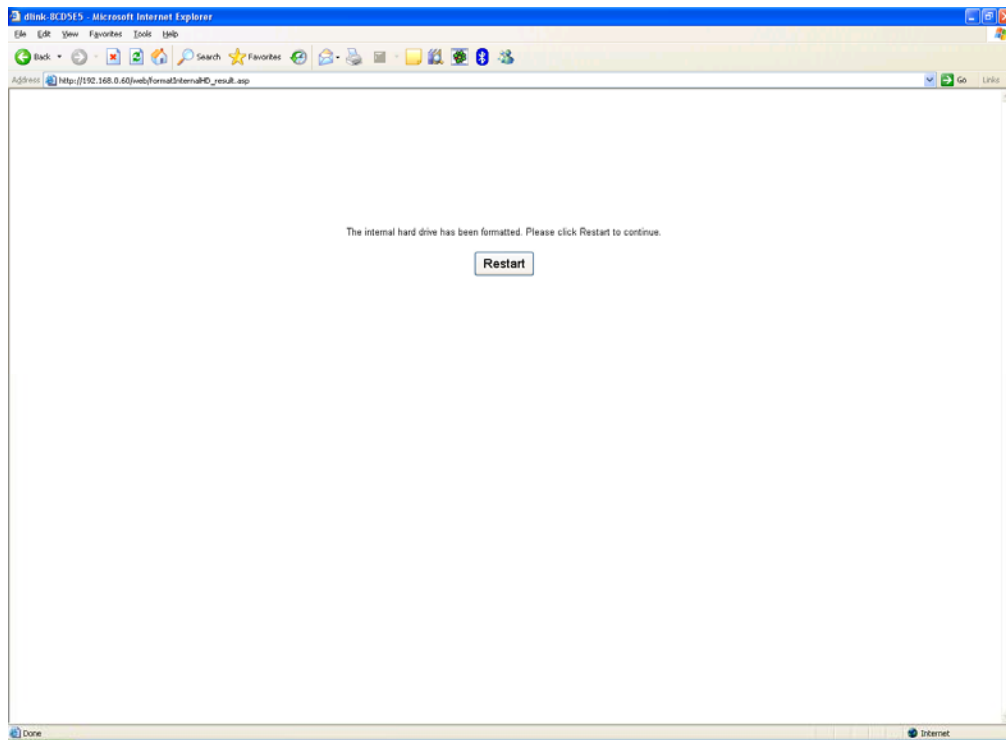

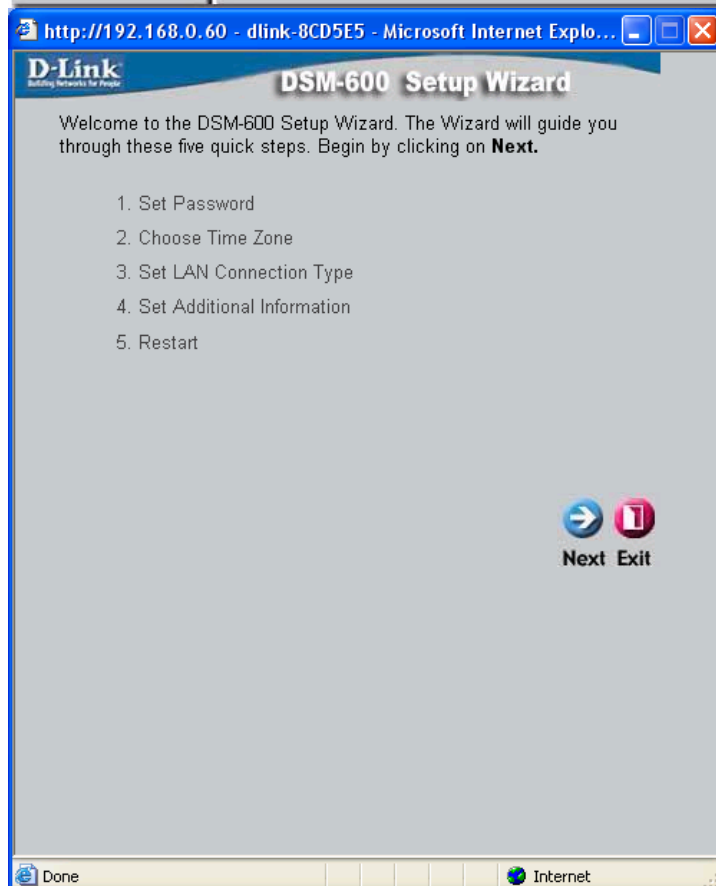

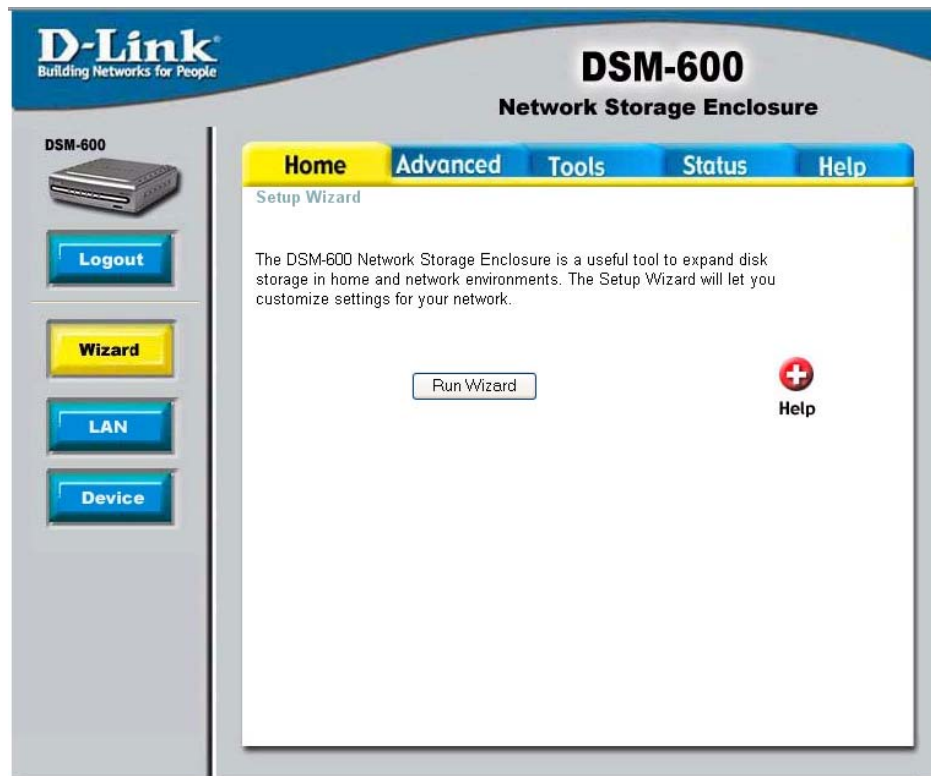

http://192.168.0.60 - dlink-8CD5E5 - Microsoft Internet Explo...

D-Link
Building Networks for People

DSM-600 Setup Wizard

Set Password

You may change the **admin** account password by entering in a new password. Click **Next** to continue.

New Password

Confirm Password

Back Next Exit

Internet

http://192.168.0.60 - dlink-8CD5E5 - Microsoft Internet Explo...

D-Link
Building Networks for People

DSM-600 Setup Wizard

Choose Time Zone

Select the appropriate time zone for your location and click **Next** to continue.

(GMT+10:00) Sydney 

Back Next Exit

Internet

http://192.168.0.60 - dlink-8CD5E5 - Microsoft Internet Explo...

D-Link
Building Networks for People

DSM-600 Setup Wizard

Select LAN Connection Type

Select your connection type and fill out the IP information if necessary.
Click **Next** to continue.

☐ DHCP Client
☒ Static IP

IP Address
Subnet Mask
Gateway IP Address
DNS1
DNS2

  
Back Next Exit

Internet

http://192.168.0.60 - dlink-8CD5E5 - Microsoft Internet Explo...

D-Link
Building Networks for People

DSM-600 Setup Wizard


Set Additional Information

Enter your Workgroup, Name, and Description for the dlink-8CD5E5.
Otherwise you may accept the default names and click **Next** to continue.

Workgroup
Name
Description

  
Back Next Exit

Done Internet

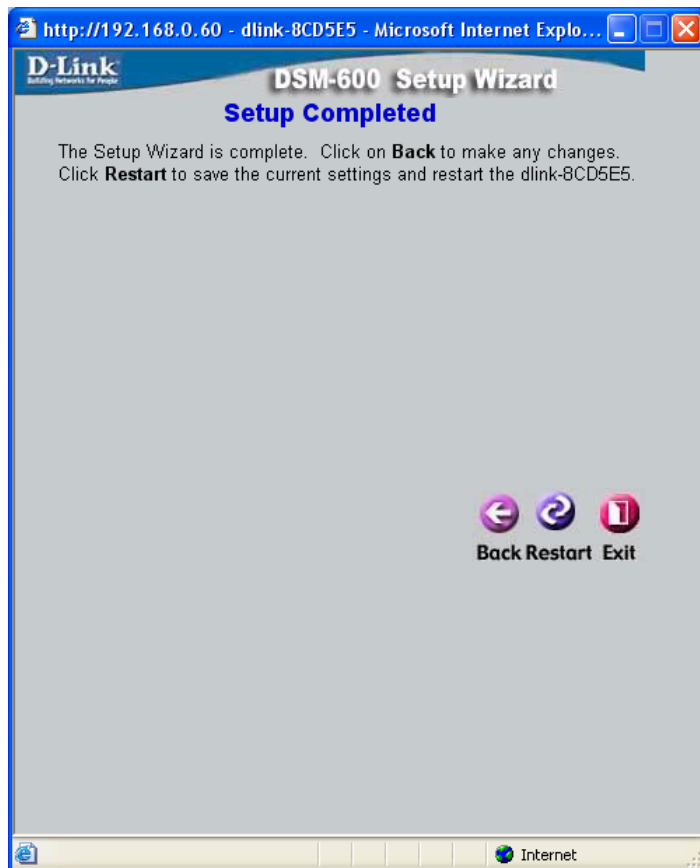

DSM-600



Logout

Wizard

LAN

Device

Home

Advanced

Tools

Status

Help

Device Settings

Workgroup
Name
Description

  
Apply Cancel Help

DSM-600



Logout

User

Network
Access

FTP Server

UPnP AV

Home

Advanced

Tools

Status

Help

User Accounts

User Name
Password
Confirm Password

  
Apply Cancel Help

User List

 Change Password  Delete

No.	User Name
-----	-----------

DSM-600



Logout

User

**Network
Access**

FTP Server

UPnP AV

Home

Advanced

Tools

Status

Help

Network Access Settings

User ☐ All accounts
Path
Authority
Comment

  
Apply Cancel Help

☒ Read/Write ☐ Read Only  Modify Setting  Delete

Share	Path	User	Comment	R/W
HDD_a	HDD_a		Hard Drive / Flash Drive / Single Function CardReader	☒  

DSM-600



Logout

User

Network
Access

FTP Server

UPnP AV

Home

Advanced

Tools

Status

Help

FTP Server Settings

User ☐ All accounts
Path ☐ root
Authority
Max User
Idle Time (1~10 Minutes)
Port (1~65535, Default: 21)
Flow Control ☒ Unlimited ☐ x 10 KBs
Path ☒ Read/Write ☐ Read Only ☐ Modify Setting
User Name Path

☒ ☐ ☐
Apply Cancel Help

FTP Server Status

Status	Stopped
Port	21
Max User	5
Flow Control	Unlimited
Idle Time	2 Minutes

DSM-600



Logout

User

Network
Access

FTP Server

UPnP AV

Home

Advanced

Tools

Status

Help

UPnP AV Settings

Path ☐ root

☒ ☐ ☐
Apply Cancel Help

**DSM-600**
Network Storage Enclosure

HomeAdvancedToolsStatusHelp

Administrator's Password
Set the administrator password here.

User Nameadmin

Password

New Password

Confirm Password



ApplyCancelHelp

DSM-600



Logout

Admin

Time

System

Firmware

Disk Utility

E-Mail Alerts

**DSM-600**
Network Storage Enclosure

HomeAdvancedToolsStatusHelp

Time
Set the DSM-600 system time.

Time16:29:01Date03/08/07

Default NTP Server (optional) Set Time

Set time from my computer. Set Time

Set the time Month03Day08Year2007
Hour16Minute28Second49 Set Time

Time Zone (GMT+11:00) Magadan, Solamon, New Caledonia

Daylight Saving Time : None



ApplyCancelHelp

DSM-600



Logout

Admin

Time

System

Firmware

Disk Utility

E-Mail Alerts

DSM-600



Logout

Admin

Time

System

Firmware

Disk Utility

E-Mail Alerts

Home

Advanced

Tools

Status

Help

System Settings

Restart

System Restart.

Restart

Defaults

Restore To Factory Default Settings.

Restore

Shutdown

System shutdown.

Shutdown

Configuration Settings

Save Configuration Settings.

Save

Load Configuration Settings.

Load

Browse...

Idle Time

Config Inactivity Timer

5

(Minutes)

Download Schedule Inactivity Timer

5

(Minutes)



Apply Cancel Help

DSM-600



Logout

Admin

Time

System

Firmware

Disk Utility

E-Mail Alerts

Home

Advanced

Tools

Status

Help

Firmware Upgrade

Please check the support site at <http://support.dlink.com.tw> for new firmware update.

How to update firmware:

- 1.Download and Save the firmware from our support site.
- 2.Click on the "Browse" bottom to select the path of the new firmware.
- 3.Click on "Apply"

Current Firmware Version : 1.02

Firmware Date : 10/23/2006

File path

Browse...



Apply Cancel Help

DSM-600



Logout

Admin

Time

System

Firmware

Disk Utility

E-Mail Alerts

Home

Advanced

Tools

Status

Help

Disk Utility

Format

Format hard disk drive.

Disk

File System
EXT2
EXT3

Scan Disk

Disk ☐ All disks ☐ Fix



Help

DSM-600



Logout

Admin

Time

System

Firmware

Disk Utility

E-Mail Alerts

Home

Advanced

Tools

Status

Help

Disk Utility

Format

Format hard disk drive.

Disk

File System
HDD_a mat

Scan Disk

Disk ☐ All disks ☐ Fix



Help

DSM-600



Logout

Admin

Time

System

Firmware

Disk Utility

E-Mail Alerts

Home

Advanced

Tools

Status

Help

E-Mail

Email Notification Settings:

Login Method ☒ Account ☐ Anonymous

User Name

Password

SMTP Server

Sender Email

Receiver Email

Send Notification:

☐ Space Status Interval: (Hours) (Minutes)

☐ Disk Full

☐ Hard Drive Failure

☐ Administrator Password Changed

☐ Firmware Upgraded

☐ Internal Hard Drive Temperature exceed °F

Test E-Mail



Apply Cancel Help