


How to setup the router to accept incoming PPTP VPN connections

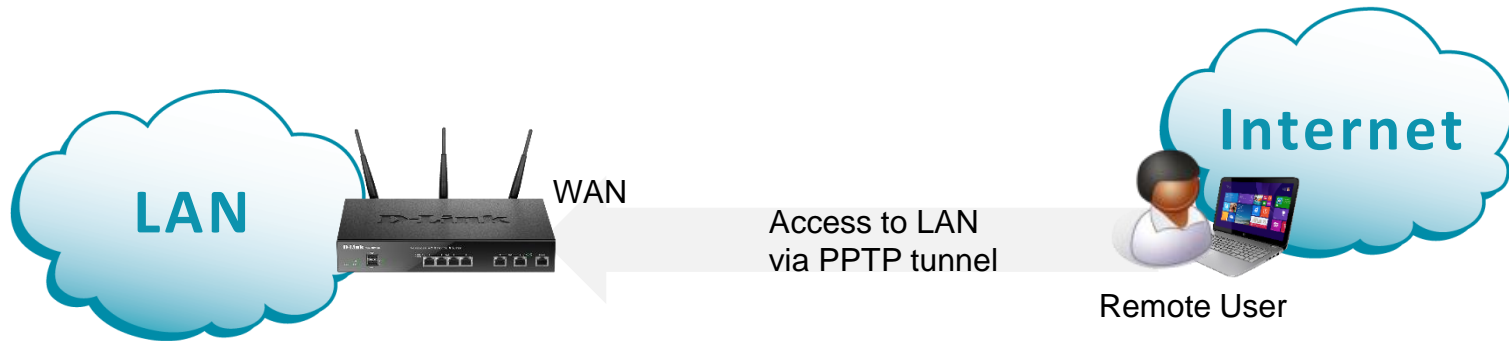

Configuration Steps:

- Create a new User Group and add users.
- Enable and setup PPPTP VPN Server.

VPN - PPTP

Go to Security > Internal User Database > Groups.
Add a new group and enable the "PPTP User" option.

Group Configuration

Group Name	<input type="text" value="PPTPUsers"/>
Description	<input type="text" value="PPTP dial in users"/>
<i>User Type</i>	
User Type	<input type="radio"/> Admin <input checked="" type="radio"/> Network <input type="radio"/> Guest
PPTP User	<input type="checkbox"/> ON
L2TP User	<input type="checkbox"/> OFF
Xauth User	<input type="checkbox"/> OFF
SSLVPN User	<input type="checkbox"/> OFF
Captive Portal User	<input type="checkbox"/> OFF
Idle Timeout	<input type="text" value="10"/> [Default: 10, Range: 1 - 999] Minutes

VPN - PPTP

Select "Users" tab and add new user(s). Select the previously created "PPTPUsers" group.

User Configuration

User Name	<input type="text" value="user1"/>
First Name	<input type="text" value="User"/>
Last Name	<input type="text" value="One"/>
Select Group	<input type="text" value="PPTPUsers"/>
Password	<input type="password" value="....."/>
Confirm Password	<input type="password" value="....."/>

VPN - PPTP

Go to VPN > PPTP VPN > Server.
Enable PPTP Server.

Status

Wireless

Network

VPN

Security

Maintenance

IPSec VPN

Policies

Tunnel Mode

DHCP Range

Certificates

Easy VPN Setup

One To One Mapping

PPTP VPN

Server

Client

Active Users

L2TP VPN

Server

Client

Active Users

SSL VPN

SSL VPN Server Policy

Portal Layouts

Resources

SSL VPN Client

Client Routes

OpenVPN

Settings

Local Networks

Remote Networks

Authentication

GRE

GRE

PPTP Server

Server Setup

Enable PPTP Server

Enable IPv4

VPN - PPTP

Enter PPTP Server settings:

PPTP Server

Server Setup

Enable PPTP Server

PPTP Routing Mode Nat Classical

Range of IP Addresses (Allocated to PPTP Clients)

Starting IP Address

Ending IP Address

Authentication Database

Authentication

Authentication Supported

PAP OFF

CHAP OFF

MS-CHAP OFF

MS-CHAPv2 ON

Encryption Supported

Mppe 40 Bit OFF

Mppe 128 Bit ON

Stateful Mppe OFF

User Time-out

Idle TimeOut [Range: 300 - 1800] Seconds

Netbios Setup

Netbios OFF

Set range of IPs
outside
your LAN IP range

Set authentication
options