How to get 802.11n 300Mb speed rate in the DSR-Series

Problem Description:

In some cases, the speed may not reach the 300Mb with the 802.11n default setting.

eneral	
Connection	
IPv4 Connectivity	y: Internet
IPv6 Connectivity	y: No Internet access
Media State:	Enabled
SSID:	fubar
Duration:	3 days 04:49:49
Speed: Signal Quality:	117.0 Mbps
Details	Wireless Properties
Activity	Sent — 駴 — Received
Bytes:	2,641,947 15,746,297
Properties	Diagnose Diagnose

Solution:

We can modify some settings in the DSR to fix this problem, in the below steps we used the DSR-1000N but the settings are the same for the DSR-500N.

Step 1) Login to the DSR-1000N. If you are unsure on how to do this please refer to the guide on accessing the DSR-1000N. Once in the unit, access **Wireless Settings > Radio Settings**. Change the Channel Spacing to 20/40MHz then click "Save settings" at the top of the page.

DSR-1000N	SETUP	ADVANCED	TOOLS	STATUS	
Wizard)					
Internet Settings	RADIO SETTINGS			LOGOUT	
Wireless Settings	Access Points	ure the bardware cetting	r for each available radio	card	
Network Settings	Profiles Don't Save Settings				
DMZ Setup	Radio Settings	bont out o county			
VPN Settings I	Radio Configuration				
USB Settings	Operating Frequency:	2.4	GHz 👻		
VLAN Settings	Mode:	ng	•		
	Channel Spacing:	20/	40MHz 👻		
	Control Side Band:	Upp	per 👻		
	Current Channel:	6 - 2	2.437GHz		
	Channel:	Au	to 👻		
	Default Transmit Pow	er: 31		(dBm)	
	Transmit Power:	14 d	íBm	10 54	
	Transmission Rate:	Be	st(Automatic) -		



How to get 802.11n 300Mb speed rate in the DSR-Series

Step 2) Click on Wireless Settings > Profiles, Next to the Profile name tick the box, then click "Edit"



Step 3) Under Security set it to WPA-WPA2, and set the Encryption to "TKIP+CCMP",

Authentication to "PSK" then under WPA Password enter in a password (Will be needed when a client tries to connect to the DSR-1000N). Once done, click "Save Settings".





Step 4) Connect to the DSR unit and check the speed, you should notice that the speed is now 300Mbps. If your PC is some distance from the DSR, please move the PC to the same room as the DSR or more the DSR to the same room as the PC. This is just a test as will help to make sure that the unit has been setup correctly.

eneral Support	
Connection	
Status:	Connecte
Network:	DSR-1000N_1-benso
Duration:	05:34:0
Speed:	300.0 Mbp
Signal Streng	th: allO
Activity	
	Sent — 🛃 — Received
Packets:	71,236 65,11
Properties	Disable View Wireless Networks

