

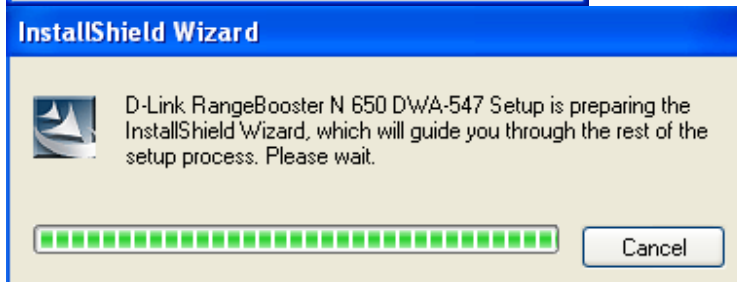



DWA-547 INSTALLATION STEPS

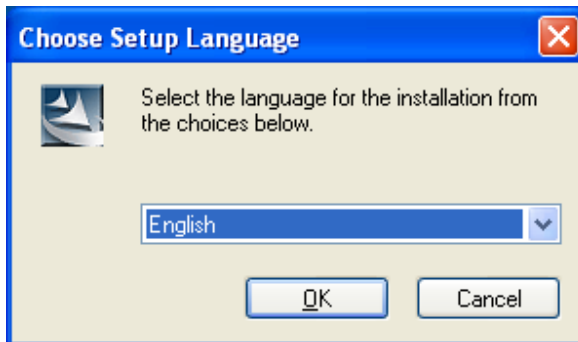

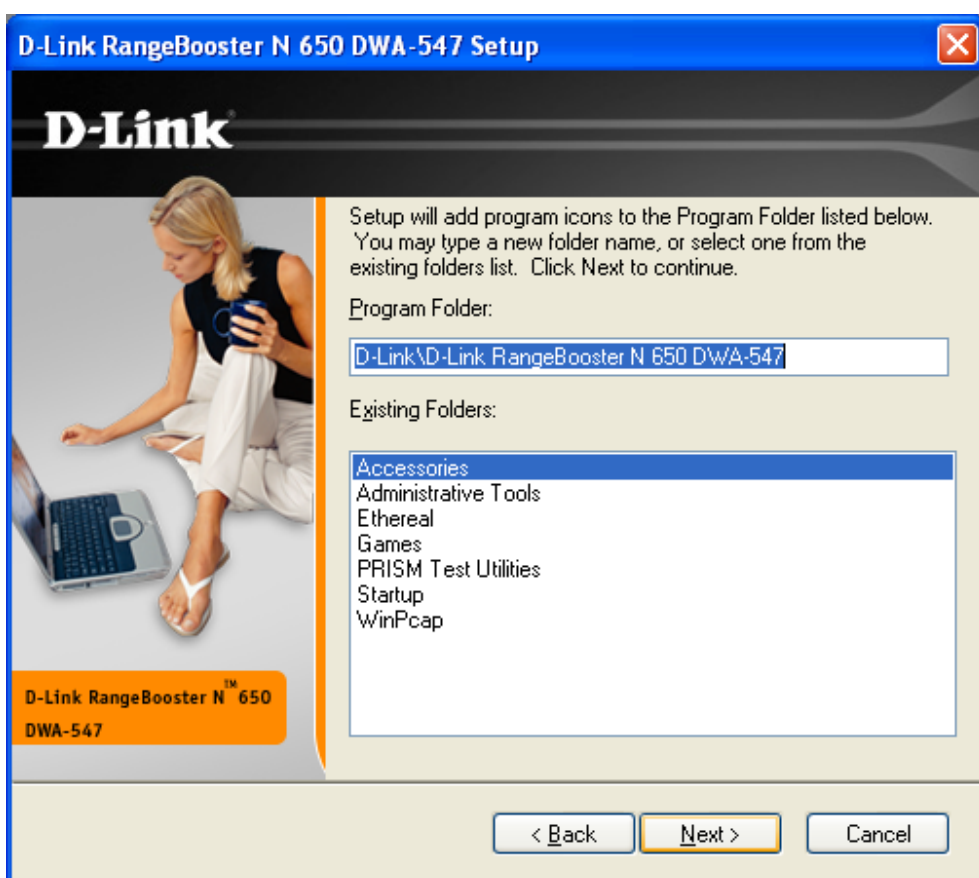

D-Link RangeBooster N 650 DWA-547 Setup


Installing



Cancel

D-Link RangeBooster N 650 DWA-547 Setup ✕

D-Link



1 %

D-Link RangeBooster N[™] 650
DWA-547

D-Link RangeBooster N 650 DWA-547 Setup



D-Link



65 %

D-Link RangeBooster N™ 650
DWA-547

Wireless Connection Wizard

D-Link



Would you like to use the Windows Zero Configuration Utility?
If not, D-Link provides a utility for you to use as well.

Yes

No

D-Link RangeBooster N™ 650
DWA-547

Exit

Back

Next

Wireless networks detected

One or more wireless networks are in range of this computer.
To see the list and connect, click this message



Recycle Bin

Paint

Wireless Connection ...

EN

10:27 PM

Wireless Connection Wizard

D-Link



D-Link RangeBooster N™ 650
DWA-547

Get Connected!

Welcome to D-Link's Wireless Connection Wizard. In the next few steps you'll be asked to enter some information about your wireless network. If you do not currently have one set up, you can always re-run this wizard to easily connect to your network when it is ready!

Wireless Network Name

If you do not know the name of your wireless network, you can scan for it by clicking the Scan button.

Scan

Exit

Back

Next

Wireless Connection Wizard

D-Link



D-Link RangeBooster N™ 650
DWA-547

Get Connected!

Please choose your wireless network from the list below.

Wireless Network	Signal	Security
repeater21	87%	
di-524upfullfunc	88%	
HTC	73%	
524	74%	
MainAP	53%	
repeater21	85%	


Exit

Back

Next



UTILITY

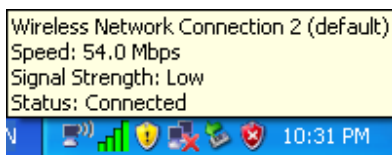

D-Link RangeBooster N 650 DWA-547 X

default 192.168.0.105 CH6 48Mbps Connected

D-Link

DWA-547 WIRELESS NETWORKS MY WIRELESS NETWORKS SUPPORT>>

SSID	MAC(BSSID)	Signal	Security	Channel
repeater21	00:17:9A:4C:B1:B7	75%		1
HTC	00:0F:3D:C2:3C:52	89%		1
di-524upfullf...	00:19:5B:2A:9F:10	93%		1
MainAP	00:11:95:E1:34:98	59%		1
repeater21	00:17:9A:75:67:E2	83%		1
524	00:0F:3D:28:D6:EB	69%		1

Refresh Connect

My Wireless Networks

default - default Activate

D-Link RangeBooster N 650 DWA-547 X

default 192.168.0.105 CH6 36Mbps Connected

D-Link

DWA-547 WIRELESS NETWORKS MY WIRELESS NETWORKS SUPPORT>>

My Wireless Network

default - default


New
 Modify
 Delete
 Activate

Profile Details

Network Name :

Network Type :

Security :

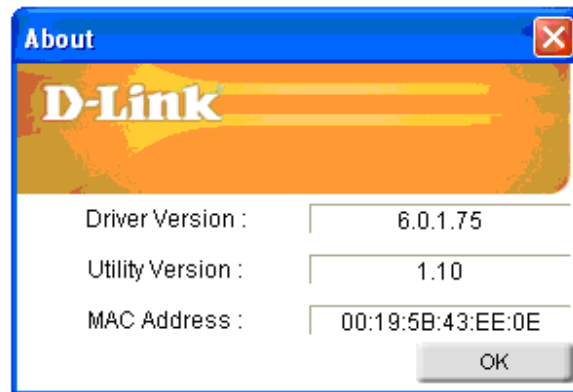

UNINSTALLATION

