



**Firmware Version:** 2.01r098

**Published Date:** 2019/11/25

---

**Content:**

Upgrading Instructions: ..... 2  
    Upgrading by using Web-UI..... 2  
New Features:..... 3  
Changes of MIB & D-View Module:..... 3  
Problems Fixed: ..... 3  
Known Issues: ..... 3  
Related Documentation: ..... 3

## Revision History and System Requirement:

Firmware Version	Date	Model	Hardware Version
1.05rc047	2016/09/29	DAP-3662	A1/A2

## Upgrading Instructions:

D-Link AP supports firmware upgrading via Web-UI. You may download the firmware from D-Link web site <http://tsd.dlink.com.tw>.

### Upgrading by using Web-UI

1. Connect a work station to the LAN port of Access Point.
2. Open the web browser of work station and entering the IP address of the AP. The system default IP address is 192.168.0.50.
3. Enter administrator's username and password, user name is "admin" and leave the password field blank by default.

To update the AP's firmware, click **Maintenance > Firmware and SSL Certification Upload**

The screenshot shows the D-Link Web-UI interface for a DAP-3662 device. The top navigation bar includes Home, Maintenance, Configuration, System, Logout, and Help. The left sidebar shows a tree view with DAP-3662, Basic Settings, Advanced Settings, and Status. The main content area displays the 'System Information' page with the following details:

Model Name	DAP-3662
Firmware Version	v2.01 16:59:33 12/30/2019
System Name	dap3662
Location	
System Time	02/20/2020 14:49:54
Up Time	0 Days, 00:29:21
Operation Mode(2.4GHz)	Access Point
Operation Mode(5GHz)	Access Point
MAC Address(2.4GHz)	ec:22:80:af:ce:90
MAC Address(5GHz)	ec:22:80:af:ce:98
IP Address	192.168.0.103

## New Features:

---

1. Use QCA's WDS
2. Remove AP Array
3. Support Nuclias Connect
4. Support DDPv5/APP
5. In default settings, the network IP address setting is Dynamic IP
6. Support MDNS
7. Modify Time zone settings
8. Update country selection table
9. Move IP filter settings page from Captive Portal to Filter folder, behind WLAN Partition (AP GUI). IP filter function is independent feature and can work with all non-captive portal attenuation
10. Default admin user name/password is admin/admin
11. Add setup Wizard when first login
12. WPA/WPA2 throughput issue

## Changes of MIB & D-View Module:

---

None

## Problems Fixed:

---

Firmware Version	Problems Fixed
V2.01	None

## Known Issues:

---

Firmware Version	Known Issues
V2.01	None

## Related Documentation:

---

DAP-3662 Manual v2.00