

DGS-1100V2 FW Ver DGS-1100V2 Boot Ver Published: 1.00.010 1.11 Dec. 10, 2019

The release notes include important information about D-Link switch firmware revisions. Please follow below steps to find version information:

- If you are installing a new switch, please check the hardware version on the device label. Make sure that your switch meets the system requirement of this firmware version. Please Refer to Revision History and System Requirement for firmware and hardware matrix.
- If the switch is powered on, you can check the hardware version by checking the device information page on the web graphic user interface.

If you plan to upgrade firmware, please refer to the <u>Upgrade Instructions</u> for the correct firmware upgrade procedure.

For detailed product information, please refer to Related Documentation.

You can also download the switch firmware and technical documentation from <a href="http://tsd.dlink.com.tw">http://tsd.dlink.com.tw</a>.

#### **Content:**

Revision History and System Requirement:	2
Upgrade Instructions:	2
Upgrade using Web-UI Upgrade using D-Link Network Assistant Chrome Edition	2 4
New Features:	ε
Changes of MIB:	6
Problem Fixed:	6
Known Issues:	6
Related Documentation:	e





# **Revision History and System Requirement:**

Firmware Version	Date	Model	Hardware Version
1.00.010	2019/12/9	DGS-1100-16V2 DGS-1100-24V2 DGS-1100-24PV2	A1

## **Upgrade Instructions:**

You can download the firmware from D-Link web site <a href="http://tsd.dlink.com.tw">http://tsd.dlink.com.tw</a>, and upgrade through Web UI or D-Link Network Assistant Utility.

#### **Upgrade using Web-UI**

- Connect a workstation installed with java SE runtime environment to any switch port of the device.
- 2. Open the web browser from the workstation and enter the IP address of the switch. The switch's default IP address is 10.90.90.90.
- 3. Enter administrator's password when prompted. The password is **admin** by default.
- To update switch's firmware or configuration file, select **Tools > Firmware Upgrade & Backup** from the banner, you can choose HTTP or TFTP upgrade.



### Click Firmware Upgrade from HTTP

dlink areen





6. Click **Chose File** to browse your inventories for a saved firmware file, and then click **Upgrade** after selecting the firmware file you want to restore



7. Wait until the "Firmware Upgrade Processing" message disappear and login again after device boots up




8. Click Firmware Upgrade from TFTP








Fill in the TFTP server IP and upgrade file name, and then click Upgrade after selecting the firmware file you want to restore

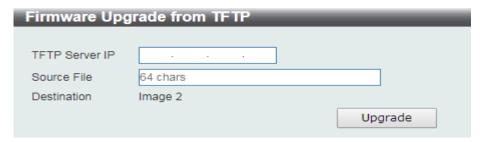


10. Wait until the "Done" message appear and login again after device boots up

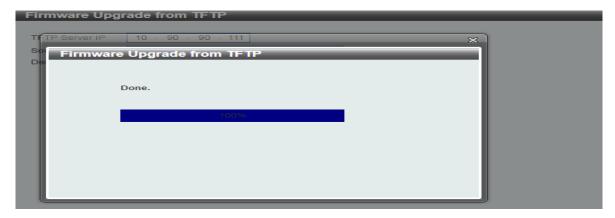


#### **Upgrade using D-Link Network Assistant Chrome Edition**

 - 1. Connect a workstation installed with java SE runtime environment to any switch port of the device
- 2. Execute D-Link Network Assistant Chrome Edition



3. Click Refresh button to search target switch

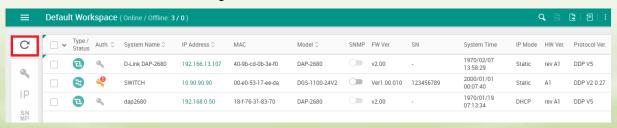





# **DGS-1100 Series Firmware Release Note**

4. Single click the icon of the column to choose the target switch




5. Click Firmware Upgrade button



6. Click Browse button and select the firmware file on your local hard drive.




7. Click "Upgrade now" button to start firmware upgrade.

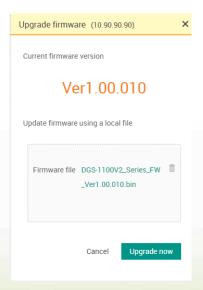

8. Once the message changed to success, the firmware upgrade is complete





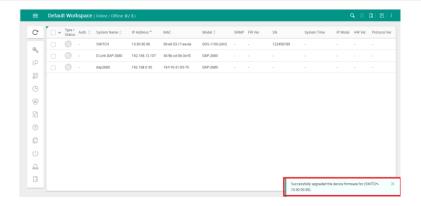

### **New Features:**

## DGS-1100-16V2/24V2/24PV2:

D 00 1100 1011	/ = · · · = / = · · · · · · · · · · · ·
Firmware Version	New Features
V1.00.010	First Release

# **Changes of MIB:**

### DGS-1100-16V2/24V2/24PV2:

Firmware Version	MIB File	New Features
V1.00.010	First Release	

## **Problem Fixed:**

## DGS-1100-16V2/24V2/24PV2:

DGS-1100-1042/2442/24442.			
Firmware	Problems Fixed		
Version			
V1.00.010	First Release		

<sup>\*</sup> D-Link tracking number is enclosed in ()

## **Known Issues:**

#### DGS-1100-16V2/24V2/24PV2:

	nware Issues sion	Workaround
V1.0	0.010 None	

## **Related Documentation:**

- DGS-1100-16V2/24V2/24PV2 A1 User Manual
- Getting Started Guide