

Default IP: 192.168.0.1
Password: nothing

DI-624S
Building Networks for People

AirPlus Xtreme G™
Wireless 108G Storage Router

Home Advanced Tools Status Help

DI-624S

Wizard

Wireless

WAN

LAN

DHCP

File Sharing

FTP

Personal Web

UPnP AV

Setup Wizard

The DI-624S is a Wireless Broadband Router ideal for home networking and small business networking. The Setup Wizard will guide you to configure the DI-624S to connect to your ISP (Internet Service Provider). The DI-624S's easy setup will allow you to have Internet access within minutes. Please follow the setup wizard step by step to configure the DI-624S.

Run Wizard

Help



http://192.168.0.1 - DI-624S - Microsoft Internet Explo...

D-Link
Building Networks for People

DI-624S Setup Wizard

Welcome to the DI-624S Setup Wizard. The Wizard will guide you through these four quick steps. Begin by clicking on **Next**.

- Step 1. Set your new password
- Step 2. Choose your time zone
- Step 3. Set Internet connection
- Step 4. Set wireless LAN connection
- Step 5. Restart

 
Next **Exit**

Done Internet

http://192.168.0.1 - DI-624S - Microsoft Internet Explo...

D-Link
Building Networks for People



DI-624S Setup Wizard

Set Password

You may change the **admin** account password by entering in a new password. Click **Next** to continue.

Password

Confirm Password

  
Back **Next** **Exit**

Internet

http://192.168.0.1 - DI-624S - Microsoft Internet Explo...

D-Link
Building Networks for People

DI-624S Setup Wizard

Choose Time Zone

Select the appropriate time zone for your location and click **Next** to continue.

(GMT-08:00) Pacific Time (US & Canada) ▼

← → ↵
Back Next Exit

Done Internet

http://192.168.0.1 - DI-624S - Microsoft Internet Explo...

D-Link
Building Networks for People

DI-624S Setup Wizard

Auto Detecting WAN

Please wait a moment ...

Opening page http://192.168.0. Internet

http://192.168.0.1 - DI-624S - Microsoft Internet Explo...




D-Link
Building Networks for People

DI-624S Setup Wizard

Select Internet Connection Type (WAN)

Select the connection type to connect to your ISP. Click **Next** to continue.

<input checked="" type="radio"/> Dynamic IP Address	Choose this option to obtain an IP address automatically from your ISP. (For most Cable modem users)
<input type="radio"/> Static IP Address	Choose this option to set static IP information provided to you by your ISP. Choose this option if your ISP uses PPPoE. (For most DSL users)
<input type="radio"/> PPPoE	
<input type="radio"/> PPTP	PPTP Client
<input type="radio"/> L2TP	L2TP Client
<input type="radio"/> BigPond	BigPond Cable

Back Next Exit

Internet

http://192.168.0.1 - DI-624S - Microsoft Internet Explo...

D-Link
Building Networks for People




DI-624S Setup Wizard

Set Dynamic IP Address

If your ISP require you to enter a specific host name or specific MAC address, please enter it in. The **Clone MAC Address** button is used to copy the MAC address of your Ethernet adapter to the DI-624S. Click **Next** to continue.

HostName (optional)

MAC : : : : : (optional)

Back Next Exit

Done Internet

http://192.168.0.1 - DI-624S - Microsoft Internet Explo...

D-Link
Building Networks for People

DI-624S Setup Wizard

Set Static IP Address

Enter the static IP information provided to you by your ISP. Click **Next** to continue.




WAN IP Address

WAN Subnet Mask

WAN Gateway Address

Primary DNS Address

Secondary DNS Address (optional)

Back Next Exit

Done Internet

http://192.168.0.1 - DI-624S - Microsoft Internet Explo...

D-Link
Building Networks for People

DI-624S Setup Wizard

Set PPPoE




The service name is optional but may be required by your ISP. Click **Next** to continue.

User Name

Password

Retype Password

Service Name(optional)

Back Next Exit

Done Internet

http://192.168.0.1 - DI-624S - Microsoft Internet Explo...

D-Link
Building Networks for People

DI-624S Setup Wizard

Set BigPond




Please set your BigPond Cable data then press **Next** to continue

UserName

Password

Retype Password

Auth Server

Back Next Exit

Done Internet

http://192.168.0.1 - DI-624S - Microsoft Internet Explo...

D-Link
Building Networks for People

DI-624S Setup Wizard

Set 802.11g Wireless LAN Connection

Enter in the SSID name, Channel number and Authentication to be used for the Wireless Access Point. Click **Next** to continue.

SSID

Channel

Authentication No Security WEP Key WPA-PSK

Back Next Exit

Internet



DI-624S Setup Wizard

Set 802.11g Wireless LAN Connection

Enter in the SSID name, Channel number and Authentication to be used for the Wireless Access Point. Click **Next** to continue.

SSID

Channel

Authentication No Security WEP Key WPA-PSK

Key

(Please Input 64 bits WEP Encryption and **Five** ASCII Characters)



Back Next Exit

http://192.168.0.1 - DI-624S - Microsoft Internet Explo...

D-Link
Building Networks for People

DI-624S Setup Wizard

Set 802.11g Wireless LAN Connection

Enter in the SSID name, Channel number and Authentication to be used for the Wireless Access Point. Click **Next** to continue.

SSID

Channel

Authentication No Security WEP Key WPA-PSK

Passphrase

(Please Input Greater Than or Equal **Eight** ASCII Characters)

Back Next Exit

Done Internet




http://192.168.0.1 - DI-624S - Microsoft Internet Explo...

D-Link
Building Networks for People

DI-624S Setup Wizard

Setup Completed

The Setup Wizard has completed. Click on **Back** to modify changes or mistakes. Click on **Restart** to save the current settings and reboot the DI-624S.

Back Restart Exit

Internet



- Wizard
- Wireless
- WAN
- LAN
- DHCP
- File Sharing
- FTP
- Personal Web
- UPnP AV

Wireless Settings

These are the wireless settings for the AP(Access Point)Portion.

WCN Enabled Disabled

Wireless Radio On Off

Wireless QoS(WMM) Enabled Disabled

SSID :

Channel : Auto Select

Super G Mode :

Authentication : Open System Shared Key WPA WPA-PSK
 WPA2 WPA2-PSK

WEP : Enabled Disabled

WEP Encryption :

Key Type :

Key1 :

Key2 :

Key3 :

Key4 :

Apply Cancel Help

Authentication : Open System Shared Key WPA WPA-PSK
 WPA2 WPA2-PSK

802.1X

RADIUS Server IP

Port

Shared Secret

Apply Cancel Help

Authentication : Open System Shared Key WPA WPA-PSK
 WPA2 WPA2-PSK

Passphrase :

Confirmed Passphrase :

Apply Cancel Help

Authentication : Open System Shared Key WPA WPA-PSK
 WPA2 WPA2-PSK

802.1X

RADIUS Server IP
Port
Shared Secret


  
Apply Cancel Help

Authentication : Open System Shared Key WPA WPA-PSK
 WPA2 WPA2-PSK

Passphrase :
Confirmed Passphrase :

  
Apply Cancel Help

DI-624S



- Wizard
- Wireless
- WAN**
- LAN
- DHCP
- File Sharing
- FTP
- Personal Web
- UPnP AV

Home

Advanced

Tools

Status

Help

WAN Settings

Please select the appropriate option to connect to your ISP.

- Dynamic IP Address Choose this option to obtain an IP address automatically from your ISP. (For most Cable modem users)
- Static IP Address Choose this option to set static IP information provided to you by your ISP.
- PPPoE Choose this option if your ISP uses PPPoE. (For most DSL users)
- Others PPTP and L2TP
 - PPTP (For Europe use only)
 - L2TP (For specific ISPs use only)
 - BigPond Cable (for Australia use only)

Dynamic IP




Host Name (optional)

MAC Address (optional)

Primary DNS Address

Secondary DNS Address (optional)

MTU

  
Apply Cancel Help



Wizard

Wireless

WAN

LAN

DHCP

File Sharing

FTP

Personal Web

UPnP AV

Home**Advanced****Tools****Status****Help****WAN Settings**

Please select the appropriate option to connect to your ISP.

- Dynamic IP Address Choose this option to obtain an IP address automatically from your ISP. (For most Cable modem users)
- Static IP Address Choose this option to set static IP information provided to you by your ISP.
- PPPoE Choose this option if your ISP uses PPPoE. (For most DSL users)
- Others PPTP and L2TP
- PPTP (For Europe use only)
- L2TP (For specific ISPs use only)
- BigPond Cable (for Australia use only)

Static IPIP Address (assigned by your ISP)Subnet Mask ISP Gateway Address MAC Address (optional)Primary DNS Address Secondary DNS Address (optional)MTU **Apply Cancel Help**



Wizard

Wireless

WAN

LAN

DHCP

File Sharing

FTP

Personal Web

UPnP AV

WAN Settings

Please select the appropriate option to connect to your ISP.

- Dynamic IP Address Choose this option to obtain an IP address automatically from your ISP. (For most Cable modem users)
- Static IP Address Choose this option to set static IP information provided to you by your ISP.
- PPPoE Choose this option if your ISP uses PPPoE. (For most DSL users)
- Others PPTP and L2TP
 - PPTP (For Europe use only)
 - L2TP (For specific ISPs use only)
 - BigPond Cable (for Australia use only)

PPPoE

- Dynamic PPPoE Static PPPoE

User Name

Password

Retype Password

Service Name (optional)

IP Address

MAC Address - - - - - (optional)

 
Primary DNS Address

Secondary DNS Address (optional)

Maximum Idle Time Minutes

MTU

Connect Mode Always-on Manual Connect-on-demand



Wizard

Wireless

WAN

LAN

DHCP

File Sharing

FTP

Personal Web

UPnP AV

Home

Advanced

Tools

Status

Help

WAN Settings

Please select the appropriate option to connect to your ISP.

- Dynamic IP Address Choose this option to obtain an IP address automatically from your ISP. (For most Cable modem users)
- Static IP Address Choose this option to set static IP information provided to you by your ISP.
- PPPoE Choose this option if your ISP uses PPPoE. (For most DSL users)
- Others PPTP, L2TP and BigPond Cable
 - PPTP (for Europe use only)
 - L2TP (for specific ISPs use only)
 - BigPond Cable (for Australia use only)

BigPond

User Name

Password

Retype Password

Auth Server

Auto Reconnect Enabled Disabled

MAC Address (optional)

MTU

DI-624S



Wizard

Wireless

WAN

LAN

DHCP

File Sharing

FTP

Personal Web

UPnP AV

Home

Advanced

Tools

Status

Help

LAN Settings

The IP address of the DI-624S.

IP Address

Subnet Mask

Local Domain Name

 (optional)

DNS Relay

Enabled Disabled



Apply



Cancel



Help



Wizard

Wireless

WAN

LAN

DHCP

File Sharing

FTP

Personal Web

UPnP AV

Home

Advanced

Tools

Status

Help

DHCP Server

The DI-624S can be setup as a DHCP Server to distribute IP addresses to the LAN network.

DHCP Server Enabled Disabled

Starting IP Address 192 . 168 . 0 .

Ending IP Address 192 . 168 . 0 .

Lease Time

Static DHCP

Static DHCP is used to allow DHCP server to assign same IP address to specific MAC address.

Enabled Disabled

Host Name

IP Address 192 . 168 . 0 .

MAC Address - - - - -

DHCP Client

**Apply Cancel Help****Static DHCP Client Lists**

0 /32 (Number / Total)

Host Name	IP Address	MAC Address

Dynamic DHCP Client Lists

1 /100 (Number / Total)

Host Name	IP Address	MAC Address	Lease Time(Spare Time)
administrator	192.168.0.100	00-05-5d-6f-f6-63	6 days 23 hours 56 minutes 30 seconds

DI-624S



Wizard

Wireless

WAN

LAN

DHCP

File Sharing

FTP

Personal Web

UPnP AV

Home

Advanced

Tools

Status

Help

File Sharing

File Sharing allows you to manage the USB storage devices that are connected to the USB ports on the back of the DI-624S.

Server Setup

User Setup

Share Setup

Server Setup

Enabled Disabled

Group

WORKGROUP

Name

DI-624S

Share type

All USB Disk without authentication

Configured User and Directory.



Apply



Cancel



Help



Wizard

Wireless

WAN

LAN

DHCP

File Sharing

FTP

Personal Web

UPnP AV

Home

Advanced

Tools

Status

Help

FTP Server

WAN Side Setting

Enabled Disabled

Port

LAN Side Setting

Enabled Disabled

Port

FTP Users

Add/ Modify FTP Users.

Anonymous

User Name

Password

Confirm Password

Directory

Privilege Read Only Read & Write



Apply Cancel Help
0 / 12 (Number / Total)

FTP User Lists

User Name	Directory Path	Privilege
-----------	----------------	-----------

DI-624S



Wizard

Wireless

WAN

LAN

DHCP

File Sharing

FTP

Personal Web

UPnP AV

Home

Advanced

Tools

Status

Help

Personal Web Server

Setting Personal Web server.

Enabled Disabled

Interface

LAN only LAN and WAN

LAN Port

8888

WAN Port

80

Web Pages Directory

Select Directory

Password Protect

Enabled Disabled

User Name

Password



Apply Cancel Help



- Wizard
- Wireless
- WAN
- LAN
- DHCP
- File Sharing
- FTP
- Personal Web
- UPnP AV

UPnP AV Server

Setting UPnP AV server.

Enabled Disabled

Share folder

Select Directory

Access Control

- Allow all device
- Deny in list,Others allow
- Allow in list,Others deny

Add/ Modify MAC Lists.

MAC Address

DHCP Client

Apply Cancel Help
0 / 12 (Number / Total)

MAC Lists

MAC Address



Virtual Server

Applications

Filters

Parental Control

Firewall

DMZ

DDNS

Printer

QoS

Performance

Home

Advanced

Tools

Status

Help

Virtual Server

Virtual Server is used to allow Internet users access to LAN services.

 Enabled Disabled

Name

Private IP

Protocol Type

Private Port

Public Port

Schedule

 Always

 From time : AM to : AM
 day to


Apply Cancel Help

13 / 32 (Number / Total)

Virtual Server Lists

Name	Private IP	Protocol	Schedule	
<input type="checkbox"/> Virtual Server FTP	0.0.0.0	TCP 21/21	Always	
<input type="checkbox"/> Virtual Server HTTP	0.0.0.0	TCP 80/80	Always	
<input type="checkbox"/> Virtual Server HTTPS	0.0.0.0	TCP 443/443	Always	
<input type="checkbox"/> Virtual Server DNS	0.0.0.0	UDP 53/53	Always	
<input type="checkbox"/> Virtual Server SMTP	0.0.0.0	TCP 25/25	Always	
<input type="checkbox"/> Virtual Server POP3	0.0.0.0	TCP 110/110	Always	
<input type="checkbox"/> Virtual Server Telnet	0.0.0.0	TCP 23/23	Always	
<input type="checkbox"/> IPsec	0.0.0.0	UDP 500/500	Always	
<input type="checkbox"/> PPTP	0.0.0.0	TCP 1723/1723	Always	
<input type="checkbox"/> NetMeeting	0.0.0.0	TCP 1720/1720	Always	
<input type="checkbox"/> DCS-1000	0.0.0.0	TCP 80/80	Always	
<input type="checkbox"/> DCS-2000	0.0.0.0	TCP 80/80	Always	
<input type="checkbox"/> DVC-1000	0.0.0.0	TCP 1720/1720	Always	



Virtual Server

Applications

Filters

Parental Control

Firewall

DMZ

DDNS

Printer

QoS

Performance

Special Application

Special Application is used to run applications that require multiple connections.

Enabled Disabled

Name

Trigger Port -

Trigger Type

Public Port

Public Type



Apply Cancel Help

6 /32 (Number / Total)

Special Application Lists

Name	Trigger	Public	
<input type="checkbox"/> Battle.net	6112	6112	
<input type="checkbox"/> Dialpad	7175	51200-51201,51210	
<input type="checkbox"/> ICU II	2019	2000-2038,2050-2051,2069,2085,3010-3030	
<input type="checkbox"/> MSN Gaming Zone	47624	2300-2400,28800-29000	
<input type="checkbox"/> PC-to-Phone	12053	12120,12122,24150-24220	
<input type="checkbox"/> Quick Time 4	554	6970-6999	



- Virtual Server
- Applications
- Filters**
- Parental Control
- Firewall
- DMZ
- DDNS
- Printer
- QoS
- Performance

Filters

Filters are used to allow or deny LAN users from accessing the Internet.

- IP Filters MAC Filters

IP Filters

Use IP Filters to deny LAN IP addresses access to the Internet.

- Enabled Disabled

IP Address -

Port -

Protocol Type

- Schedule Always

time : AM to : AM
 day to



Apply Cancel Help
7 / 32 (Number / Total)

IP Filter Lists

	IP Range	Protocol, Port	Schedule	
<input type="checkbox"/>	*	TCP, 20-21	Always	
<input type="checkbox"/>	*	TCP, 80	Always	
<input type="checkbox"/>	*	TCP, 443	Always	
<input type="checkbox"/>	*	UDP, 53	Always	
<input type="checkbox"/>	*	TCP, 25	Always	
<input type="checkbox"/>	*	TCP, 110	Always	
<input type="checkbox"/>	*	TCP, 23	Always	



Virtual Server

Applications

Filters

Parental Control

Firewall

DMZ

DDNS

Printer

QoS

Performance

Home

Advanced

Tools

Status

Help

Parental Control

Parental Control filters are used to allow or deny LAN users from accessing the Internet.

URL Blocking Domain Blocking

URL Blocking

Block those URLs which contain keywords listed below.

Enabled Disabled

URL Keyword

Apply Cancel Help
0 / 32 (Number / Total)

URL List

URL Keyword



Virtual Server

Applications

Filters

Parental Control

Firewall

DMZ

DDNS

Printer

QoS

Performance

Home

Advanced

Tools

Status

Help

Firewall Rules

Firewall Rules can be used to allow or deny traffic from passing through the DI-624S.

Enabled Disabled

Name

Action Allow Deny

Interface Start IP Address End IP Address Protocol Port Range

Source LAN

Dest WAN TCP -

Schedule Always

From time 00 : 00 AM to 00 : 00 AM

day Sun to Sun



 
Apply Cancel Help

0 / 32 (Number / Total)

Firewall Rules List

	Action	Name	Source	Dest	Protocol, Port
<input checked="" type="checkbox"/>	Allow	Default	LAN, *	*, *	*, *
<input checked="" type="checkbox"/>	Deny	Default	*, *	LAN, *	*, *

DI-624S



Virtual Server

Applications

Filters

Parental Control

Firewall

DMZ

Home

Advanced

Tools

Status

Help

DMZ

DMZ (Demilitarized Zone) is used to allow a single computer on the LAN to be exposed to the Internet.

Enabled Disabled

IP Address 192 . 168 . 0 .

Apply Cancel Help

DI-624S



Virtual Server

Applications

Filters

Parental Control

Firewall

DMZ

DDNS

Home

Advanced

Tools

Status

Help

Dynamic DNS

DDNS

Enabled Disabled

Server Address

Host Name

Username

Password

Apply Cancel Help



Virtual Server

Applications

Filters

Parental Control

Firewall

DMZ

DDNS

Printer

Printer Server

The DI-624S can be setup as a Printer Server to provide the printer that connected on USB port to the network.

Queue Name

Printer Name

Printer Enabled Disabled



Apply Cancel Help

Printer Queue Name Lists

0 / 2 (Number / Total)

Queue Name	Printers

DI-624S



Virtual Server

Applications

Filters

Parental Control

Firewall

DMZ

DDNS

Printer

QoS

Home

Advanced

Tools

Status

Help

QoS

QoS(Quality of Service).

Disabled Physical Port MAC IP Application

QoS Disable

Set the QoS(Quality of Service) Disabled.



Apply



Cancel



Help



Virtual Server

Applications

Filters

Parental Control

Firewall

DMZ

DDNS

Printer

QoS

Performance

Home

Advanced

Tools

Status

Help

Wireless Performance

These are the Wireless Performance features for the AP(Access Point)Portion.

TX Rate : Auto (Mbps)Transmit Power : 100% Beacon interval : 100 (msec, range:20~1000, default:100)RTS Threshold : 2346 (range: 1~2346, default:2346)Fragmentation : 2346 (range: 256~2346, default:2346, even number only)DTIM interval : 1 (range: 1~255, default:1)Preamble Type : Short Preamble Long PreambleSSID Broadcast : Enabled Disabled802.11g Only Mode : Enabled DisabledCTS Mode : None Always Auto  
Apply Cancel Help

DI-624S



- Admin
- Time
- System
- Firmware
- Misc.
- Cable Test

Administrator Settings

Administrators can change their login password.

Administrator (The Login Name is "admin")

New Password

Confirm Password

Remote Management

Enabled Disabled

IP Address

Port



- Admin
- Time**
- System
- Firmware
- Misc.
- Cable Test

Time

Set the DI-624S system time.

Device Time **Dec 31, 1999 16:08:08**

Synchronize the device's clock with:

- Automatic (Simple Network Time Protocol)
- Your Computer's clock
- Manual (Enter your own settings)

Time Zone (GMT-08:00) Pacific Time (US & Canada) ▼

Daylight Saving Enabled Disabled

	Month	Week	Day	Hour	Minute
Start	Apr ▼	1st ▼	Sun ▼	2 ▼	00 ▼
End	Oct ▼	Last ▼	Sun ▼	2 ▼	00 ▼

Get the Time Automatically via Network Time Protocol(NTP)

NTP Server (optional)

Interval 1 hrs ▼

Time Year: 2005 ▼ Month: Jul ▼ Day: 28 ▼

Hour: 10 ▼ Minute: 20 ▼ Second: 56 ▼

Apply Cancel Help

DI-624S

Admin

Time

System

Firmware

Misc.

Cable Test

Home

Advanced

Tools

Status

Help

System Settings

Save Settings To Local Hard Drive

Load Settings From Local Hard Drive

Restore To Factory Default Settings

Reboot the DI-624S



Help

DI-624S

Admin

Time

System

Firmware

Misc.

Cable Test

Home

Advanced

Tools

Status

Help

Firmware Upgrade

There may be new firmware for your DI-624S to improve functionality and performance.

[Click here to check for an upgrade on our support site.](#)

To upgrade the firmware, locate the upgrade file on the local hard drive with the Browse button. Once you have found the file to be used, click the Apply button below to start the firmware upgrade.

Current Firmware Version: v1.00**Firmware Date: Thu Jul 7 14:30:35 CST 2005**

Apply



Cancel



Help

**Admin****Time****System****Firmware****Misc.****Cable Test****Ping Test**

Ping Test is used to send "Ping" packets to test if a computer is on the Internet.

Host Name or IP
Address

Ping**Block WAN Ping**

When you "Block WAN Ping", you are causing the public WAN IP address on the DI-624S to not respond to ping commands. Pinging public WAN IP addresses is a common method used by hackers to test whether your WAN IP address is valid.

Discard PING from WAN side Enabled Disabled

SPI mode

You can setup this item if you want to enable SPI mode.

Enabled Disabled

UPNP Settings

You can setup this item if you want to enable UPnP.

Enabled Disabled

VPN Pass-Through

Allows VPN connections to work through the DI-624S.

PPTP Enabled Disabled

IPSec Enabled Disabled

WAN select to 10/100 Mbps

100Mbps 10Mbps 10/100Mbps Auto

**Apply Cancel Help**

DI-624S



- Admin
- Time
- System
- Firmware
- Misc.
- Cable Test

Fast Ethernet
Virtual Cable Tester (VCT)

Ports	Link Status	Link Type	
WAN		Disconnect	More Info
LAN1		Disconnect	More Info
LAN2		Disconnect	More Info
LAN3		100Full	More Info
LAN4		Disconnect	More Info

Refresh Help

DI-624S



Device Info

Log

Statistics

Wireless Info

Printer Info

Active Session

Home

Advanced

Tools

Status

Help

Device Information([View network topology](#))

System UpTime:0 days, 00:09:15

Firmware Version:v1.00, Thu Jul 7 14:30:35 CST 2005

LAN

MAC Address 00:11:95:D1:39:D3

IP Address 192.168.0.1

Subnet Mask 255.255.255.0

DHCP Server Enabled

WAN

MAC Address 00:11:95:D1:39:D4

Connection Static IP

IP Address 202.129.109.82

Subnet Mask 255.255.255.224

Default Gateway 202.129.109.65

DNS 202.129.64.198 4.2.2.2

Wireless 802.11g

MAC Address 00:11:95:D1:39:D3

SSID default


Channel 6

Encryption Disabled



Help

When you click on Device Information ([View network topology](#))

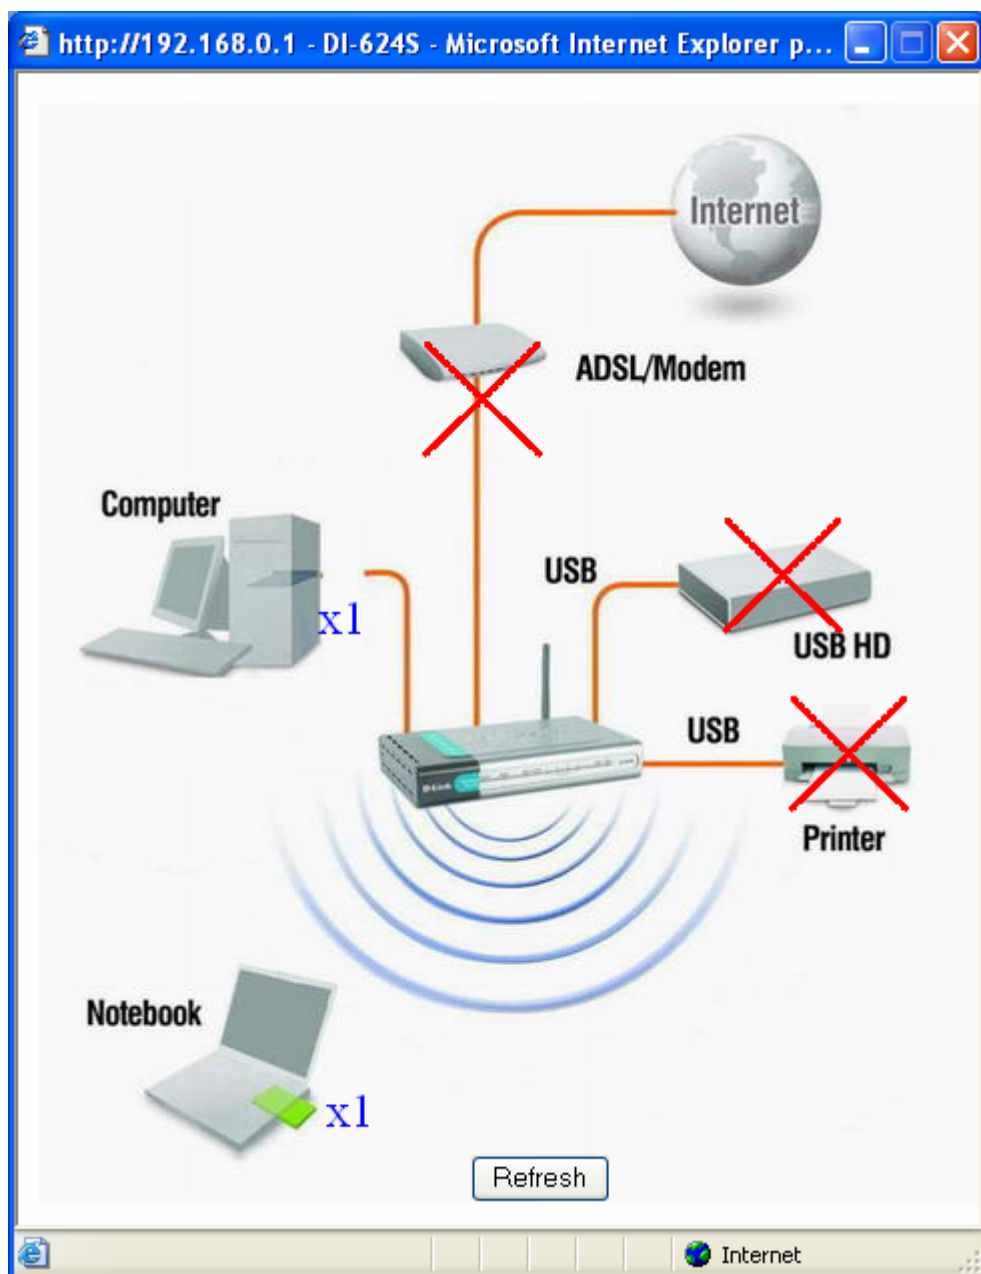

DI-624S

Device Info

Log

Statistics

Wireless Info

Printer Info

Active Session

Home

Advanced

Tools

Status

Help

View Log

View Log displays the activities occurring on the DI-624S. Click on Log Settings for advance features.

First Page

Last Page

Previous

Next

Clear

Advanced Settings



Help

page 1 of 1

Time	Message
Dec 31 16:00:05	syslogd started ! Log on system activity,attack,drop packet,notice.

DI-624S

Device Info

Log

Statistics

Wireless Info

Printer Info

Active Session

Home

Advanced

Tools

Status

Help

Traffic Statistics

Traffic Statistics display Receive and Transmit packets passing through the DI-624S.

Refresh

Reset



Help

	Receive	Transmit
WAN	0 Packets	0 Packets
LAN	2198 Packets	3498 Packets
WIRELESS	24 Packets	1073 Packets

DI-624S

Device Info

Log

Statistics

Wireless Info

Printer Info

Active Session

Home

Advanced

Tools

Status

Help

Connected Wireless Client List

The Wireless Client list below displays Wireless clients Connected to the AP (Access Point).



Help

Connected Time	MAC Address	Mode
00:11:01	00:05:5d:6f:f6:63	11b

DI-624S

Device Info

Log

Statistics

Wireless Info

Printer Info

Active Session

Home

Advanced

Tools

Status

Help

Printer Server Information



Help

Queue Name	Printer Name	Printer Server Status
------------	--------------	-----------------------

DI-624S



- Device Info
- Log
- Statistics
- Wireless Info
- Printer Info
- Active Session**

Active Session

Active Session display Source and Destination packets passing through the DI-624S.

Refresh



Help

NAPT Session

TCP Session 0

UDP Session 0

Total 0

Active Session

IP Address	TCP Session	UDP Session
------------	-------------	-------------

**Home**

- [Setup](#)
- [Wireless Settings](#)
- [WAN](#)
- [LAN](#)
- [DHCP](#)
- [File Sharing](#)
- [FTP](#)
- [Personal Web](#)
- [UPnP AV](#)

Advanced

- [Virtual Server](#)
- [Applications](#)
- [Filters](#)
- [Parental Control](#)
- [Firewall](#)
- [DMZ](#)
- [DDNS](#)
- [Printer](#)
- [QoS](#)
- [Performance](#)

Tools

- [Admin](#)
- [Time](#)
- [System](#)
- [Firmware](#)
- [Misc.](#)
- [Cable Test](#)

Status

- [Device Info](#)
- [Log](#)