DSL-200 rev.C Installation in Windows Vista

Windows Vista allows to install Windows XP drivers which come with the DSL-200 modem on the CD. It is recommended to uninstall these drivers and install the drivers for Windows Vista. You can also perform a "System Restore" to the point prior to the driver installation.

If you are upgrading from Windows XP to Windows Vista please uninstall the DSL-200 driver in Windows XP before performing the upgrade.

How to uninstall old DSL-200 driver

To uninstall the old driver go to Start > Control Panel > Programs > Uninstall a program. Select the DSL-200 and click Uninstall.

Leave the modem connected to your computer. Click on **Start** button, then right-click on **"Computer"** and select **"Manage"**.

Select **Device Manager** on the left and then look for "**Network Adapters**" or "**Other Devices**" in the right panel. Right-click on the "**DSL-200**" (or "**Unknown Device**") and select **Uninstall...** Disconnect the modem from the USB port after you have uninstalled the driver.

Internet Internet Explorer 🜆 Computer Management File Action View Help E-mail 🗢 🔿 🔁 📰 🗉 🛛 🖬 🖎 🔛 🌾 Windows Mail DAUS 🜆 Computer Management (Local 🖃 🛃 DAUS-PC Actions Welcome Center 🛓 👰 Computer a 👔 System Tools Device Manager Documents Disk drives Task Scheduler More Actions Windows Media Center Event Viewer 🗄 🖳 Display adapters Pictures 👸 Shared Folders E BVD/CD-ROM drives 🜆 Local Users and Groups 🗄 🦣 Human Interface Devices Windows Media Player Music IDE ATA/ATAPI controllers and Perform Reliab 🛃 Device Manager + Keyboards 4 Windows Ultimate Extras Games 🗄 📲 Mice and other pointing devices rag 🗄 🔟 Monitors 🗃 Disk Management Command Prompt Search 🚡 Services and Applications . Network adapters Other devices WordPad Recent Items 🛯 🔥 USB-ADSL Update Driver Software... • Devices Notepad Disa ÷ Ports (COM & LP Open Processors Uninstall Netw Windows Photo Gallery Explore 🗄 🐗 Sound, video and Scan for hardware changes 🛓 💠 Storage controller 🦌 Paint System devices Manage Properties 🚋 🖶 Universal Serial Bu Con Map Network Drive... Uninstalls the driver for the selected device Disconnect Network Drive... Defa Show on Desktop Help Rename All Programs Run Properties ρ 心 <u>∩</u> →

How to install the DSL-200 in Windows Vista

Step 1. Download the latest drivers for Windows Vista from our web site. Note where you save the driver files. Drivers normally come in compressed (zipped) format. Before you can use them you need to extract the files. To do that right-click on the file you have downloaded and select **Extract All...** This will create an uncompressed folder with the files ready to use.

Note: in the screenshots below the names of the files/folders are just examples, they will be different in your case.



Step 2. Locate the folder and files you have extracted in Step 1 and double-click on the Setup application. Click on Allow to proceed with the installation.





Step 3. Follow the Modern Setup Wizard, click "Next". In the Select Service Provider window highlight the "Other Service Provider" option. Click Next.

🤧 DSL Modem Setup Wizar	d	×
Select Service F	rovider	
D-Link	Choose your service provider from the list below, and then click Next to continue.	
DSL-200 BROADBAND	Other Service Provider America Online (Example) Conexant WAN (PPPoA) Conexant WAN (PPPoE) Conexant LAN Conexant ATM (PPPoA)	
Cus	tomize < <u>B</u> ack <u>Next</u> > <u>C</u> ance	;

Step 4. In the Select Driver Type window select the "WAN Driver" option. Click Next.

🥦 DSL Modem Setup Wizard	l	×
Select Driver Typ)e	
D-Link Disternation	Select the type of driver that will be installed. This choice depends on the service provider you are using. LAN Driver WAN Driver	
	< <u>B</u> ack <u>Next</u> > <u>C</u> ancel	



Step 5. In the Communication Settings window enter the settings as per your provider's requirements.

Usually providers in <u>Australia</u> are using the following settings: VPI: 8, VCI: 35 RFC 2516 PPPoE Encapsulation

Providers in <u>New Zealand</u> are usually using: VPI: 0, VCI: 100 RFC 2364 PPPoATM NULL Encapsulation

Australia		New Zea	aland
😼 DSL Modem Setup Wiza	rd 💽	🥵 DSL Modem Setup Wizar	rd 💽
Communication	Settings	Communication	Settings
D-Link	Enter your communication settings below. These settings are supplied by your service provider.	D-Link	Enter your communication settings below. These settings are supplied by your service provider.
	VPI: 8 VCI: 35		VPI: 0 VCI: 100
-Late	Encapsulation:	-Litte	Encapsulation:
	RFC 2516 PPPoE Encapsulation		RFC 2364 PPPoATM NULL Encapsulation
C.V.P	Modulation: Multimode		Modulation: Multimode
DSL-200		DSL-200	
BROADBAND		BROADBAND	
	< <u>B</u> ack <u>N</u> ext > <u>C</u> ancel		< <u>B</u> ack <u>N</u> ext > <u>C</u> ancel

Step 6. Continue with installation by clicking Next. If you get the publisher verification message, click on "Install this driver software anyway".

\odot	windows can even y the publisher of this driver software
	Don't install this driver software You should check your manufacturer's website for updated driver software for your device.
	Install this driver software anyway Only install driver software obtained from your manufacturer's website or disc. Unsigned software from other sources may harm your computer or steal information.



Step 7. After installing the driver you will be prompted to connect the modem: "The DSL Installer is searching for installed hardware. If your modem is not yet plugged in to your computer, please plug it in now". When you see this message, connect the DSL-200 to one of the USB ports on your computer.

🤧 DSL Modem Setup Wizard	1	×
Installing		
D-Link	The DSL Modem Setup Wizard is now installing the drivers needed by Windows to operate the modem.	
The DSL Installer is s not yet plugged in to y	earching for installed hardware. If your modem is your computer, please plug it in now.	\$
DSL-200 BROADBAND		

Step 8. After the installation is finished you will be prompted to reboot your computer.





Step 9. After your computer reboots connect the ADSL line to the modem. Give the modem a minute or two to detect the ADSL signal on your line. Confirm that the ADSL light on the modem is on. You can check the connection status by double-click on the icon which looks like two arrows in the bottom right hand corner of your screen. It should say "State: Data".



Step 10. To connect to the Internet locate the "Dial-Up PPP Connection" icon on your Desktop. Double-click on it and type in the username and password as given to you by your Internet Provider. Click on "Dial" to connect to your provider.

onexant al-Up PPP ponnection	Connect Conexant Dial-Up PPP Connection	
	User name: usemame@provider.com.au Password: ● Image: Save this user name and password for the following users: ● Image: Save this user name and password for the following users: ● Image: Save this user name and password for the following users: ● Image: Save this user name and password for the following users: ● Image: Save this user name and password for the following users: ● Image: Save this user name and password for the following users: ● Image: Save this user name and password for the following users: ● Image: Save this user name and password for the following users: ● Image: Save this user name and password for the following users: ● Image: Save this user name and password for the following users: ● Image: Save this user name and password for the following users: ● Image: Save this user name and password for the following users: ● Image: Save this user name and password for the following users: ● Image: Save this user name and password for the following users: ● Image: Save this user name and password for the following users: ● Image: Save the following users: ● Image: Save the following users: <	

Note: Even though Windows calls this connection a "Dial-Up Connection", it does not use the analogue dial-up technology when connecting via the DSL-200. It does not actually dial up a phone number like analogue modems do. Your DSL-200 is using broadband technology which does not require placing a phone call.



Di