


How to change Wireless Channel in your modem/router



This document details how to change Wi-Fi Channel to avoid interference with other Wi-Fi networks

Step 1. Open your Internet Browser and in the address field type in <http://192.168.1.1>.

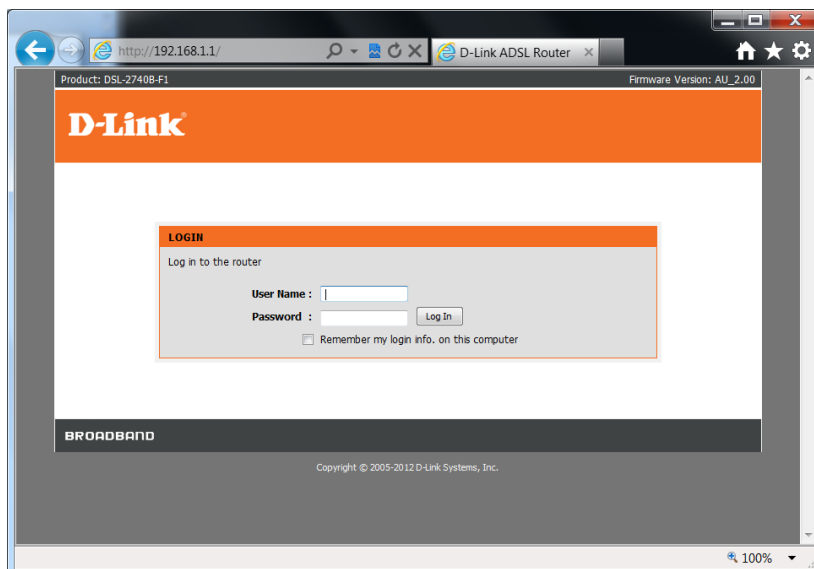


Step 2. When prompted type in the Username and Password then click on the “Log In” button. If you have not changed the password for the modem administration, the factory settings are:

Username: admin

Password: admin

Step 3. After logging in you will be presented with the modem’s configuration pages. Please click on Setup > Wireless Settings > Manual Wireless Connection Setup button:

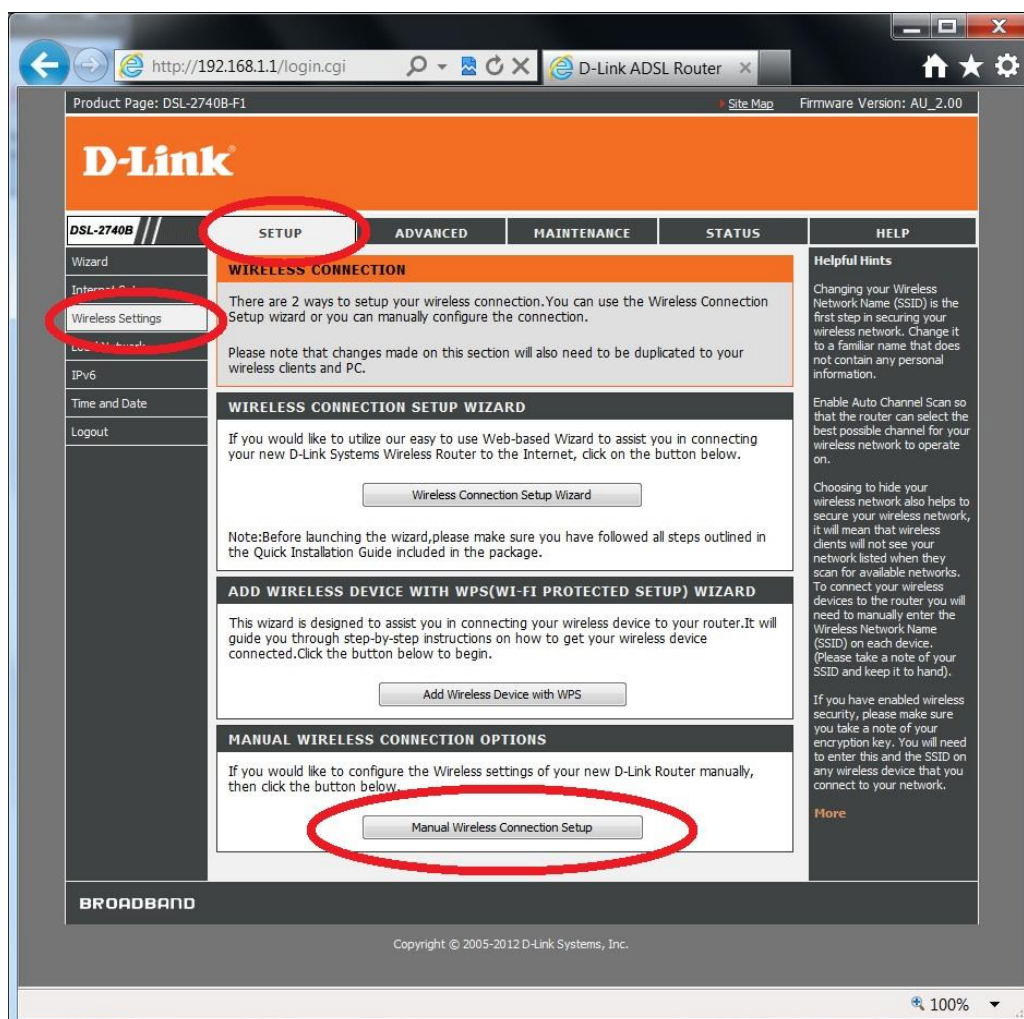

Step 4. In the first section of the page [WIRELESS NETWORK SETTINGS], please find the “Wireless Channel” option. Click on the drop down menu to select a channel number between 1 to 13.

WIRELESS NETWORK SETTINGS

Enable Wireless : Always

Wireless Network Name (SSID) : 2740B207TEST

Country : AUSTRALIA-AU

Wireless Channel : Auto

802.11 Mode : Auto 2.11n, 802.11g and 802.11b

Bandwidth : 2

Transmission Rate : Automatic (Mbit/s)

Hide Wireless Network : 5

AP Isolation : 6

WIRELESS SECURITY MODE

To protect your privacy you can configure wireless security features. This device supports three wireless security modes including: WPA, WPA2 and Auto.

The **WEP** mode is the original wireless encryption standard. WPA provides a higher level of security.

PLEASE MAKE SURE CLICK ON [Apply Settings] BUTTON AT THE BOTTOM OF THE PAGE TO SAVE THE SETTINGS.