

How to change ADSL Username and Password in your modem router

This document details how to change ADSL Username and Password settings stored in your modem

Please note: Accessing your modem's configuration pages does not require Internet connection as these pages are stored inside your modem. Your computer just needs to be connected to the modem.

Step 1. Open your Internet browser e.g. Internet Explorer, Firefox, Chrome, Safari, etc. and enter the IP address of your D-Link modem in the **address bar**: <http://192.168.1.1>.




Step 2. When prompted type in the Username and Password, enter the validation code displayed on your page and then click on the "Log In" button.

If you have not changed the password for the modem administration, the factory settings are:

Username: admin

Password: admin

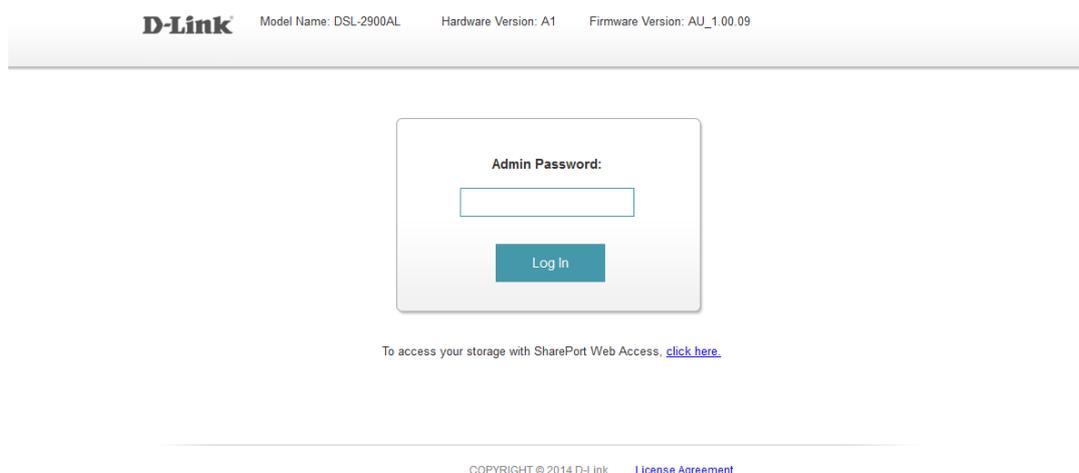

If you cannot recall the password you assigned to your modem you will need to reset the modem to factory defaults by pressing the reset button for 10 seconds. Please note that this will revert all the settings in the modem to factory settings and you will have to reconfigure it with your Internet settings and Wireless security. Make sure you have your Internet account details (given by your Internet Provider) handy.

Step 3. After logging in you will be presented with the modem's configuration pages.

Please click Settings > Internet

Type in your NEW account details as given by you Internet Service Provider:

- In the "Username" field – type in your new username given by your Internet Service Provider
- In the "Password" field – type in your new password given by your Internet Service Provider

Once done click on "Save".

Settings >> Internet

[DSL](#) | [ATM](#) | [IPv6](#) | [Save](#)

WAN Access Type:

PVC:

[Advanced Settings...](#)

Enable Tagged Vlan:

My Internet Connection is:

Username:

Password:

Reconnect Mode:

[Advanced Settings...](#)

Address Mode:

Service Name:

Primary DNS Server:

Secondary DNS Server:

MTU:

COPYRIGHT © 2014 D-Link

Step 4. Click on the Management and then on the Reboot button.

D-Link
DSL-2900AL HW:A1 FW:AU_1.00.09

Home | Settings | Features | **Management**

System

This page lets you save your router's current settings to a file, restore your settings from a file, restore your router to factory default settings, or reboot the device. Please note that restoring the settings to the factory defaults will erase all settings, including any rules you have created. [Click here for help.](#)

Management >> System [Admin](#)

Save Settings To Local Hard Drive:

Load Settings From Local Hard Drive:

Restore To Factory Default Settings:

Reboot The Device:

COPYRIGHT © 2014 D-Link

Step 5. After your modem reboots, log into it again and check the status on the modem's home page. Please wait 1-2 minutes and your modem should report status as Internet Connected.

D-Link
DSL-2900AL HW:A1 FW:AU_1.00.09

Home | Settings | Features | Management

Internet Connected

Click on any item in the diagram for more information.

Connected Clients: 2

Internet — — DSL-2900AL — Connected Clients — USB Device

Internet

DSL Status:	Connected	MAC Address:	F8:E9:03:C4:0F:E7
Link Rate:	947/11251 Kbps	IP Address:	121.45.174.35
Connection Type:	Dynamic IP (PPPoE)	Subnet Mask:	255.255.255.255
Network Status:	Connected	Default Gateway:	150.101.199.159
Connection Uptime:	0 Day 0 Hour 28 Min 49 Sec	Primary DNS Server:	192.231.203.132
		Secondary DNS Server:	192.231.203.3

[Go to settings](#)

COPYRIGHT © 2014 D-Link [Get Help](#)