How to set DSL-302G from default PPPoA mode into Bridge mode

Version: 1.0 Date: 03 June 2003

If you are going to conect the DSL-302G to your computer (no router):

Setup Your Computer

- First set your computer up to obtain IP address automatically: in Win95/98 - Control Panel > Network > TCP/IP (linked to your network card) > Properties.
- in Windows 2000/XP Control Panel > Network Connections > Local Area Connection > Properties.

Connect your computer to the DSL-302G (using straight-through cable), make sure you are getting a link light on the modem's Ethernet port.

Restart PC.

After rebooting check the IP address that you have got:

- in Win95/98 go to Start > Run > winipcfg > OK > select your adapter and look under IP Address.
- in Win2000/XP go to Start > Run > cmd > OK > ipconfig /all > look for IP Address.

It should be something like 10.1.1.x

If it is not - do the following:

- in Win95/98 go to Start > Run > winipcfg > OK > select your adapter and press Release All and then Renew All.
- in Win2000/XP go to Start > Run > cmd > OK > ipconfig /release (hit Enter) > ipconfig /renew (hit Enter)

If the modem will be connected to a router:

Connect the ethernet port of DSL-302G to Internet port (WAN port or External port) of your router. Make sure you are getting a link light on the modem's Ethernet port. If you do not get a link light you may need to change the type of cable you are using (cross-over or straight).

Set your router's WAN port to "Obtain IP address automatically" (Dynamic IP).

Connect your computer to one of the LAN ports on the router.

How to configure the DSL-302G modem:

Start your Internet browser (ensure that any proxy settings are disabled. In IE: under Tools > Internet Options > Connection > LAN Settings).Then, type the IP address of the DSL-302G (the default IP address is 10.1.1.1) into the Location (for Netscape) or Address (for IE) field and press "Enter" For example: <u>http://10.1.1.1</u>. After the connection is established, you will see the web interface of the modem. To log in, enter the username (the factory setting is "admin") and password (the factory setting is "admin").

 In this example, we will start setting the modem from its default PPPoA mode, so a default restore is required as shown below. Go to "Admin", "Save & Reboot". Select Reboot Mode as "Reboot From Default Configuration" and click on "Reboot".

🕙 DSL-302G Configuration	n Manager GUI - Microsoft Internet Explorer
<u>File E</u> dit <u>V</u> iew F <u>a</u> vorites	Iools Help 🥂
🕝 Back 🔹 🌔 - 🗙	😰 🏠 🔎 Search 🧙 Favorites 🔇 Media 🤣 🔗 - 🌺 🔯 - 🛄
Address 🙆 http://10.1.1.1/hag	/pages/home.ssi 🔽 🄂 Go Links 🎽
D-Link Building Networks For People	
🔄 D-Link	Save & Reboot
<u>Quick Configuration</u> <u>System View</u>	Use this page to save changes to system memory and reboot your system with different configurations.
⊕ <u>ian</u> ⊕ <u>ian</u> <u>wan</u>	Reboot Mode: Reboot From Default Configuration
⊕ <u>Bridging</u> ≡ ⊟ <u>⇔</u> <u>Admin</u>	Save Reboot Refresh Help
······································	Copyright © 2002 D-Link, Inc. All rights reserved.
Image Upgrade Alarm	
Diagnostics <u>Remote Access</u>	
Cone Done	🥑 Internet

2) After the modem reboots, check under "Bridging > ATM VCC". Make sure you have defined the VPI/VCI correctly. In this example, VPI/VCI = 8/35. This is typical setting for Australia (in NZ it is 0/100). Check the requirements with your ADSL provider. In some cases (e.g. TPG) you may need to change Mux Type to "LLC". In order to change that click on "pencil" icon under Action.

省 Cannot find server - Mici	crosoft Internet Explorer	
<u>File E</u> dit <u>V</u> iew F <u>a</u> vorites	Iools Help	- 🥂
🚱 Back 🝷 🕥 🕤 💌	🖻 🏠 🔎 Search 🤺 Favorites 🜒 Media 🥝 🔗 - 嫨 🖸 - 📜	
Address 🕘 http://10.1.1.1/	💌 🄁 Go	Links »
D -Link		
Building Networks For People		
	ATM VC Configuration	
LAN Config	2	
DHCP Mode	This page is used to view and configure ATM VCs	
	Tabauface UDT UCT New Ture New Duste and AALE Astics(a)	
DSL Status		
	Add Refresh Help	
NAT		
Bridging	Copyright © 2002 D-Link, Inc. All rights reserved.	
Bridging		
ATM VCC		
<		
🙆 Done	🔮 Internet	

 Go to "WAN > PPP", click on the "trashcan" icon (on the right) and "OK" to delete it. Then, click "Submit" button to save settings in temporary memory.

🗿 Canr	not f	ind se	erver -	Mic	rosoft Inter	net Exp	olorer									
<u>Eile E</u>	dit	⊻iew	F <u>a</u> voril	tes	<u>T</u> ools <u>H</u> elp											R
🕝 Ba	ck 🔻	Θ	- 1		2 🏠 🌶	🔘 Sea	rch 🤺 Fav	vorites 😢	Media	3	· 🎍 🛛	s •	_			
A <u>d</u> dress	۲	nttp://)	10.1.1.1	1										 > 	Go Lin	nks »
D Buildi)] ng Ne	Li trivorks	nk For Peop	Ĉ le												
÷-	LAN	L		^			_			1 (22)						^
	Ì	AN Co	onfig				20	INT TO POI	nt Prot	0001 (141	P) Confi	guratio	n			
) I	HCP I	Mode				This	page is us	ed to Co	nfigure and	View PPF	, interfac	es.			
	<u>WA</u>	N														
	Ì	SL Sta	<u>itus</u>			Inad	tivity Time	eOut(mins) for st	artondata	PPP Inte	erfaces:	0			
	Ì	OSL M	ode			Igno	ore WAN to	LAN traffi	c while	monitorin	g inactiv	ity:				
	Ē	PP			7		Interface	n	WAN	Gateway	Default	Use	Use	Oper.		
		<u>AO</u>			Interface	ΨC	Sec Type	Protocol	IP	IP	Route	DHCP	DNS	Status	Action	
		POA			ppp-0	aal5-	Public	PPPoA	0.0.0.0	0.0.0.0	Enable	Disable	Enable	Disconnect	X	
	1	<u>AT</u>				U									Delet	te
	Bnd P	ging														
	2 L 3 4	ndging TM U	5				\langle	Submit	Add	Refi	resh	Help				
	. 2	V IVI V	<u></u>	~	. 1										T	~
<u><</u>																2
Children (/10.1	.1.1/A	ction?id=	=318æ	ex_param1=16									🌝 Internet		

4) GO 10 VV	AN > EOA, CIICK OT AUG.	
🕙 Cannot find server - Mic	crosoft Internet Explorer	×
<u>File E</u> dit <u>V</u> iew F <u>a</u> vorites	Iools Help	ľ
🚱 Back 👻 🕥 🕤 🔀	😰 🏠 🔎 Search 🤺 Favorites 🔮 Media 🤣 🖾 - 嫨 🖾 - 📃	
Address 🕘 http://10.1.1.1/	💽 🔁 Go Links	»
D-Link Building Networks For People		
🔄 D-Link	RFC1483/Ethernet over ATM(EoA) Config	
Quick Configuration System View	This Page is used to View, Add, Modify and Delete EOA Interfaces.	
Den Lan Den Wan	Interface Interface Lower Confg IP Address Netmask Use Default Gateway Address Status Action	
DSL Status	No Interface Found!	
DSL Mode		
PPP	Add Refresh Help	
<u>EOA</u>		
IPOA NAT	Copyright © 2002 D-Link, Inc. All rights reserved.	
E Bridging		
🗄 🚞 Admin 🛛 🗸 🗸		
<		
٤	🌍 Internet	

5) Simply click "Submit" on the pop-up page (and "Close" to close the page).

🕙 EOA Interface - Add - Microsoft Internet Exp	orer 📃 🗖 🔀
EOA Int	erface - Add
EOA II	nformation
EOA Interface:	eoa-0 💌
Lower Interface:	aal5-0 💌
Conf. IP Address:	0 0 0 0
Netmask:	0 0 0 0
Use DHCP:	 ○ Enable ③ Disable
Submit	Cancel Help
Copyright © 2002 D-L	ink, Inc. All rights reserved.
<	

4) Go to "M/AN > EOA" click on "Add"

6) After that, you should see "WAN > EOA" page which looks like this:

🗿 Cannot find server - Microsoft Internet Explorer	×					
Eile Edit View Favorites Tools Help	7					
🌀 Back 🝷 💿 👻 😰 🏠 🔎 Search 🌟 Favorites 🜒 Media 🤣 😒 - چ 🔯 🗉 🖵						
Address 🙆 http://10.1.1.1/	»					
D-Link Building Networks For People	-					
D-Link RFC1483/Ethernet over ATM(EoA) Config	^					
Ouick Configuration This Page is used to View, Add, Modify and Delete EOA Interfaces. System View This Page is used to View, Add, Modify and Delete EOA Interfaces.	This Page is used to View, Add, Modify and Delete EOA Interfaces.					
Interface Lower Confg IP Netmask Use Default Gateway Status MAN MAN Sec Type Interface Address Netmask DHCP Route Address Status	Ξ					
DSL Status eoa-0 Public aal5-0 0.0.0.0 0.0.0.0 Disable Disable 0.0.0.0 🦉 2000						
DSL Mode						
PPP Add Refresh Help						
Copyright © 2002 D-Link, Inc. All rights reserved.	~					
🙋 Done 🥥 Internet						

7) Go to "WAN > NAT", select "Disable" then click "Submit".

Cannot find server - Microsoft Internet Explor	er 📃 🗖 🔀
<u>File E</u> dit <u>V</u> iew F <u>a</u> vorites <u>T</u> ools <u>H</u> elp	
🚱 Back 🝷 🐑 💌 😰 🏠 🔎 Search	📌 Favorites 🜒 Media 🤣 🎯 - 🌺 🖾 - 📙
Address 🗃 http://10.1.1.1/	🕑 🄁 Go 🛛 Links 🎽
D-Link Building Networks For People	
🔄 D-Link	Network Address Translation (NAT) Configuration
Ouick Configuration Ouick Configuration Use this page to cont System View the IP addresses	igure Network Address Translation, a security protocol in which the device translates of your LAN computers to new addresses before sending data out on the Internet.
	NAT Options: NAT Global Info 💌
DSL Status	Enable Disable
DSL Mode	
PPP	NAT Global Information
	TCP Idle Timeout(sec): 86400
	TCP Close Wait(sec): 60
□ □ Bridging	TCP Def Timeout(sec): 60
Bridging	IIDP Timeout(sec): 300
ATM VCC	
🗄 🧰 Admin	ICMP Timeout(sec): 5
	GRE Timeout(sec): 300
	Default Nat Age(sec): 240
	NAPT Port Start: 50000
	NAPT Port End: 51023
Subr	nit Global Stats Cancel Refresh Help 🗸
🙆 Done	🤣 Internet

8) Go to "Bridging > Bridging", select "eoa-0", then click "Add" followed by "Submit".

🕙 Cannot find server - Mi	crosoft Internet Explorer 📃 🗖 🔀
<u>File E</u> dit <u>V</u> iew F <u>a</u> vorites	Tools Help
🕒 Back 🔹 🐑 - 💌	😰 🏠 🔎 Search 🧙 Favorites 🔇 Media 🍪 🎯 - 嫨 🖾 - 📒
Address 🙆 http://10.1.1.1/	So Links 🎽
D-Link Building Networks For People	
🔄 D-Link	Bridge Configuration
Quick Configuration	
System View	Use this page to Add and Modify Bridging information
E IAN	
🖻 🖮 <u>WAN</u>	Interface Name Action
DSL Status	eth-0
DSL Mode	usb-0
• • • • • • • • • • • • • • • • • • •	
<u>EOA</u>	eth-0
IPOA	eoa-0 P0a-1
NAT	Submit eoa-2 Refresh Help
🖻 🔤 Bridging	e0a-3 e0a-4
Bridging	Copyright C _{eoa-6} ink, Inc. All rights reserved.
ATM VCC	eoa-7 ush-0
🗄 🛄 Admin 🔽 🔽	
🕘 Done	🔮 Internet

9) Go to "Admin > Save & Reboot", click on "Save" then "Reboot".

🕘 Cannot find server - Mi	crosoft Internet Explorer 📃 🗖 🔀				
<u>File E</u> dit <u>V</u> iew F <u>a</u> vorites	Iools Help				
🕒 Back 🝷 🐑 👻 💌	😰 🏠 🔎 Search 🤺 Favorites 🔇 Media 🚱 😥 - 🌺 🔯 - 📙				
Address 🕘 http://10.1.1.1/	V D Go Links *				
D-Link Building Networks For People					
🔄 D-Link	Save & Reboot				
Quick Configuration					
System View	Use this page to save changes to system memory and reboot your system with different configurations.				
🗄 🧰 LAN	Reboot Mode: Reboot				
🖻 🧰 <u>WAN</u>					
🗄 🧰 Bridging 📃	Save) Reboot Refresh Help				
⊡' <u>⇔</u> <u>Admin</u>					
User Config	Copyright © 2002 D-Link, Inc. All rights reserved.				
Jave & Reboot					
Alarm					
Diagnostics					
🛛 Remote Access 🗸					
< · · · · · · · · · · · · · · · · · · ·					
ど Done	🔮 Internet				

The modem configuration finished.

The final stage:

You should have a list of IP addresses from your Internet Provider: Customer IP, Subnet Mask, Default Gateway, DNS addresses. You need to apply these addresses:

If the DSL-302G is connected to your computer (no router):

Assign IP Addresses To Your Computer

- in Win95/98 Control Panel > Network > TCP/IP (linked to your network card) > Properties.
- in Windows 2000/XP Control Panel > Network Connections > Local Area Connection > Properties.

Select "Use the following address" and enter the IP addresses given by your ISP.

If the modem is connected to a router:

Set your router's WAN port to "Static IP address" and specify the IP addresses given by your ISP.

After saving the settings on your router/computer you should be able to browse the Internet. Happy browsing.

~ End of Document ~