



DSL-526B – Configuring PPPoE / PPPoA

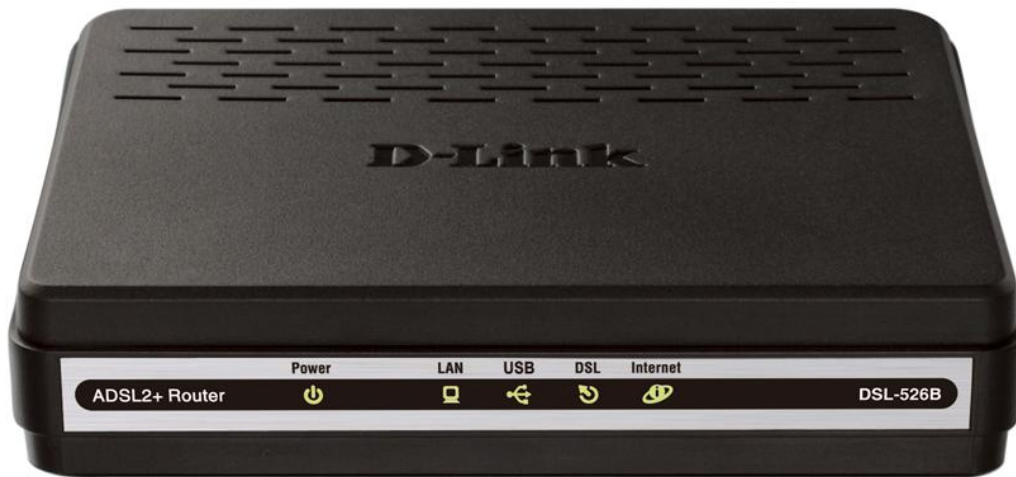


This document will detail how to configure PPPoE / PPPoA on the DSL-526B.

1. Log in to the modem with the computer connected to the modem via Ethernet.
 - URL: <http://192.168.1.1> (default)
 - Username: admin
 - Password: admin (default)
 - Validate Code: (randomly generated)

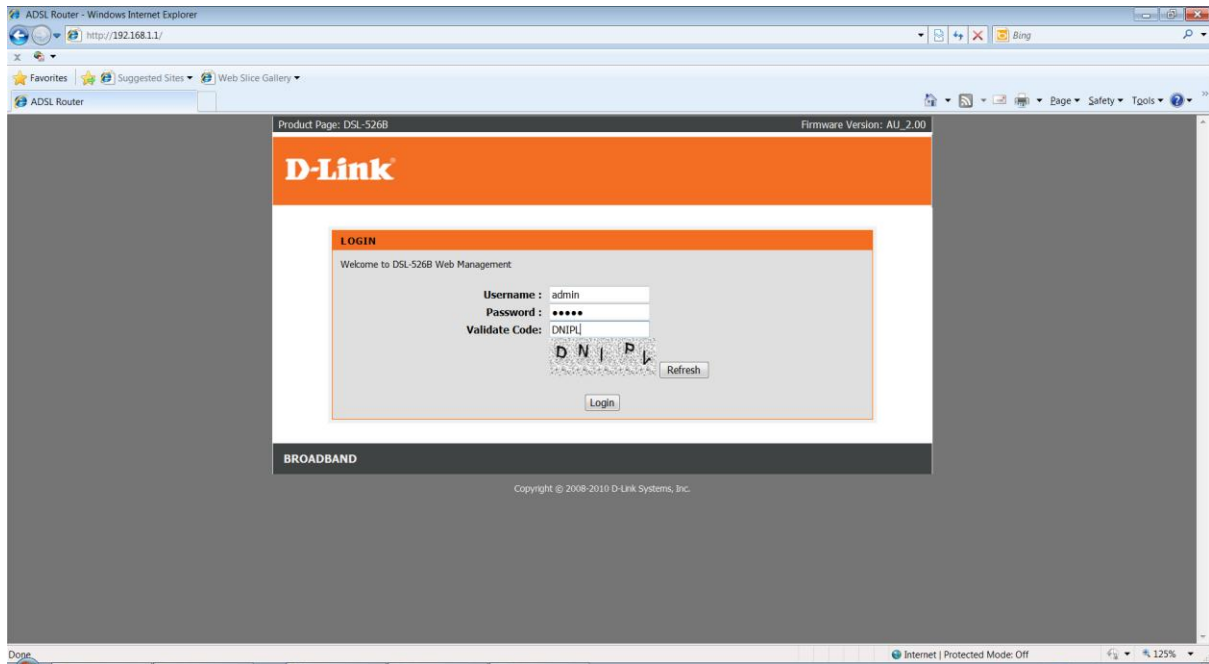


2. If it's your first time configuring an internet connection, you will be prompted to run through the **QUICK SETUP**.
3. Uncheck the 'DSL Auto-connect' option (this will save time and stop the modem from auto detecting the correct parameters).
4. Enter the correct VPI and VCI values
 - Australia: VPI is **8** and VCI is **35**
 - New Zealand: VPI is **0** and VCI is **100**

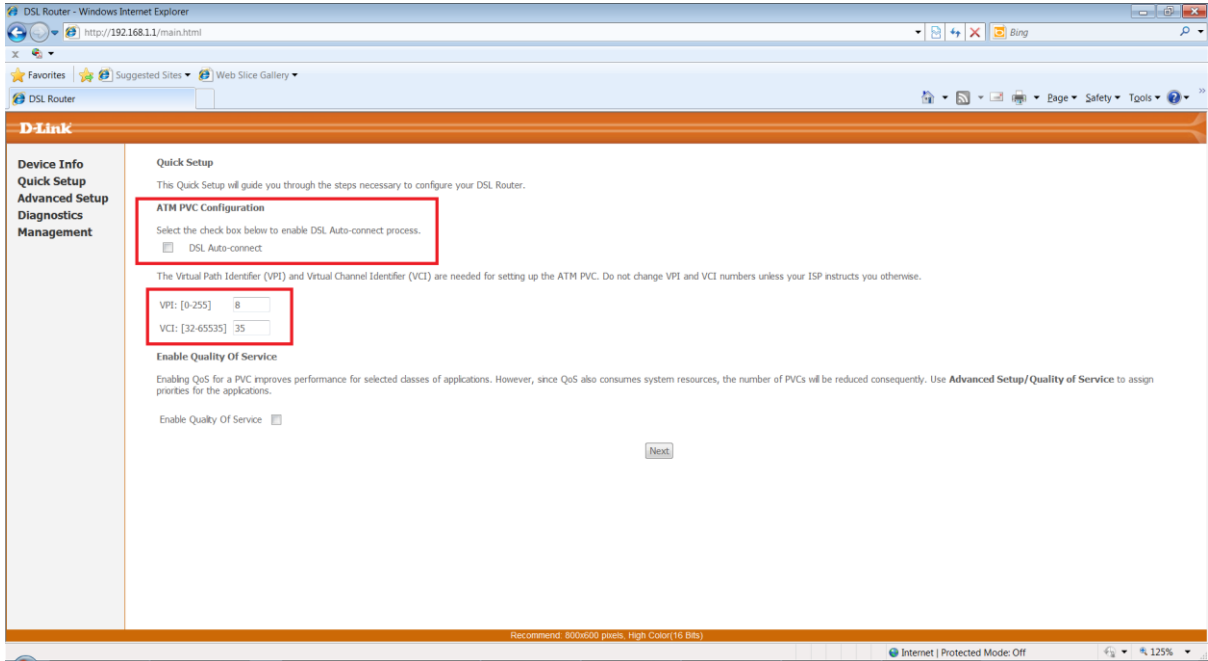


5. Select **Next**

6. Choose **PPP over Ethernet (PPPoE)** for Australia or **PPP over ATM (PPPoA)** for New Zealand.
7. Ensure the Encapsulation Mode is set to **LLC/SNAP-BRIDGING** when in PPPoE or **VC/MUX** when in PPPoA.

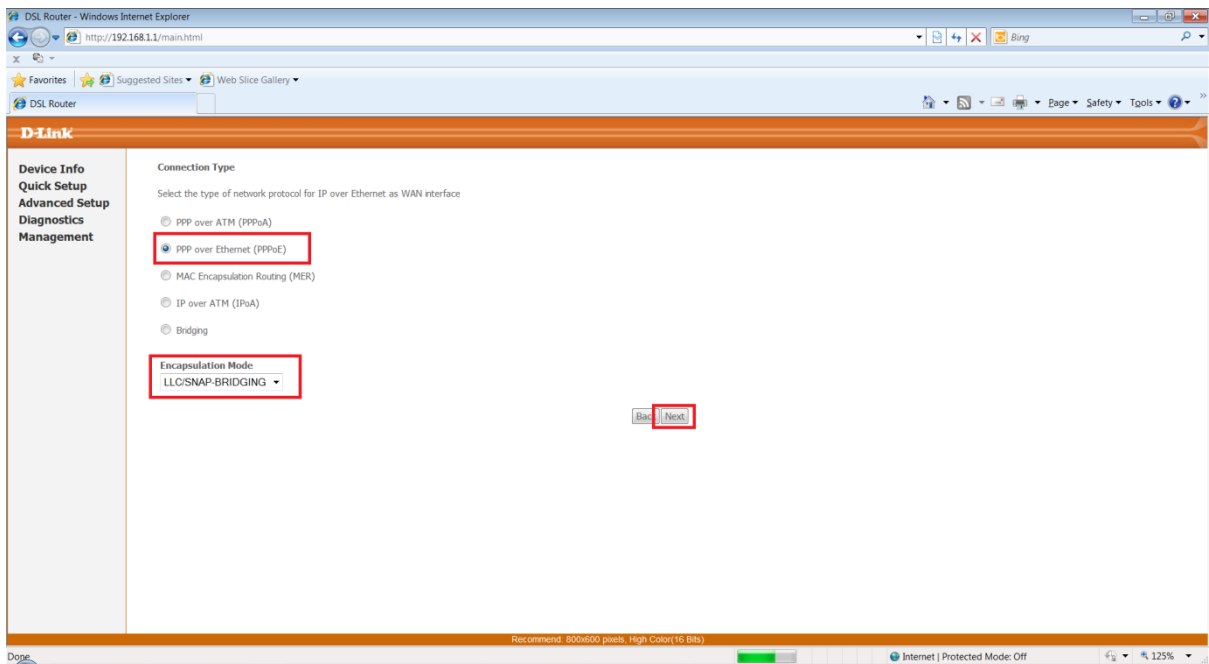


8. Select **Next**

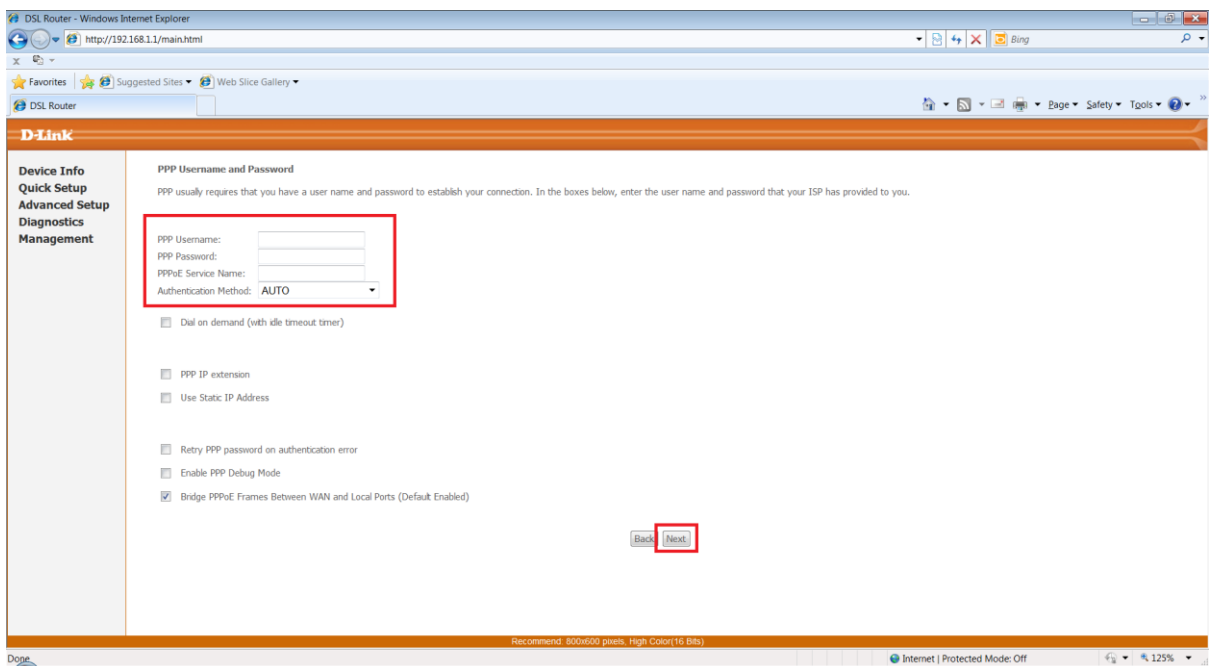


9. Enter the PPP Username and PPP Password which is provided to you by your Internet Service Provider (ISP).
 - Leave the PPPoE Service Name blank and Authentication Mode to AUTO

10. Leave all other settings as default and click **Next**.

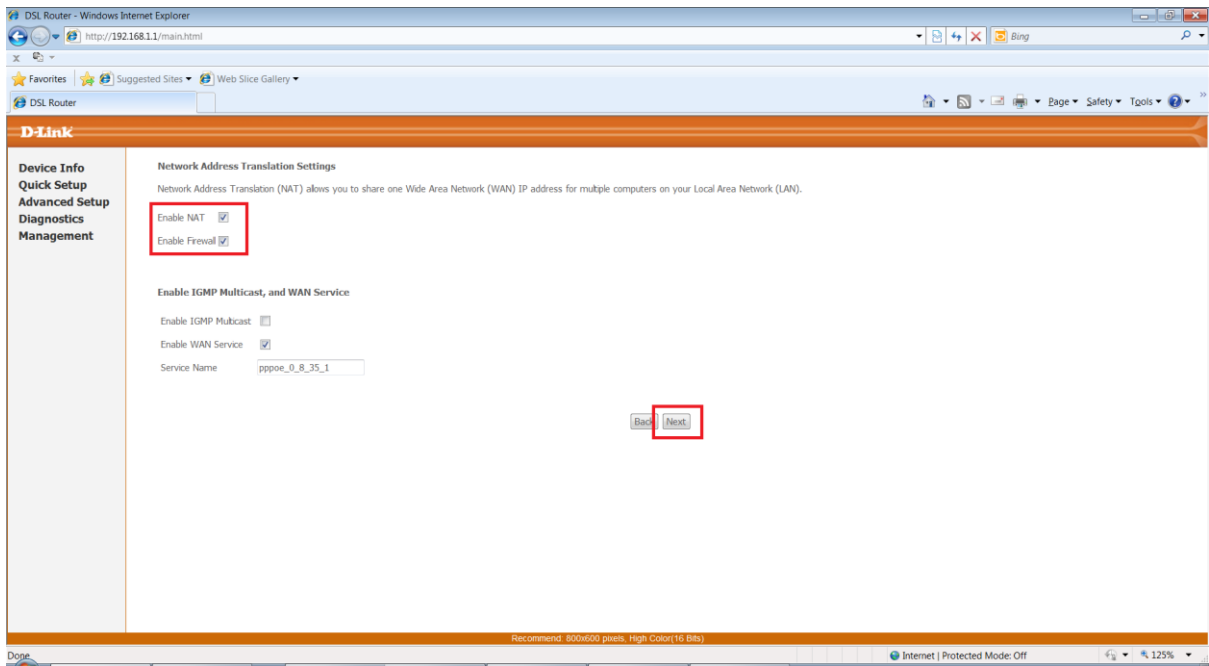

11. Ensure **Enable NAT** and **Enable Firewall** are both checked (enabled). Click **Next**.

12. Click **Next** on the 'Device Setup' unless you wish to make changes to the DHCP Scope or change the LAN IP of the modem.

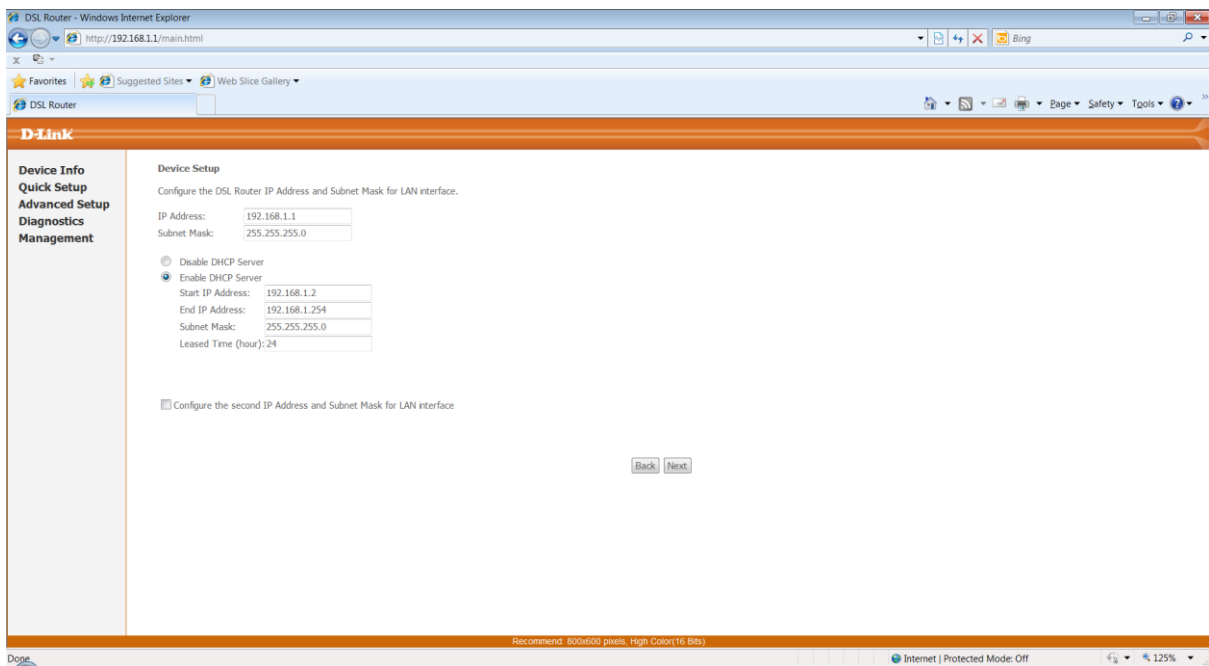

13. A summary of the settings will be displayed, select **Save/Reboot** to save and apply the changes – the modem will reboot.

