

DSL-526B – Firmware Upgrade Guide




This document will detail how to update the firmware for the DSL-526B.


Ensure you have downloaded the latest firmware for the modem from the D-Link Technical Support Website

http://www.dlink.com.au/tech/Download/download.aspx?product=DSL-526B&revision=REV_T&filetype=Firmware


1. Log in to the modem with the computer connected to the modem via Ethernet.
 - URL: <http://192.168.1.1> (default)
 - Username: admin
 - Password: admin (default)
 - Validate Code: (randomly generated)

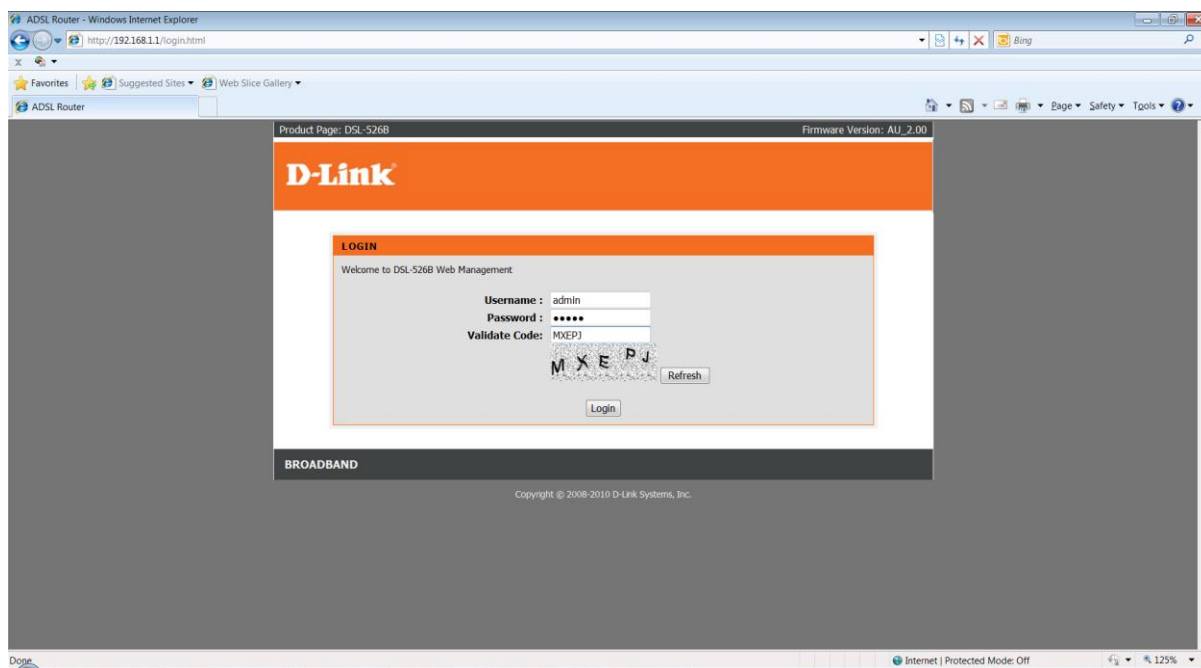


2. Select the **MANAGEMENT** from the left menu.
3. Select **UPDATE SOFTWARE** from the sub-menu.

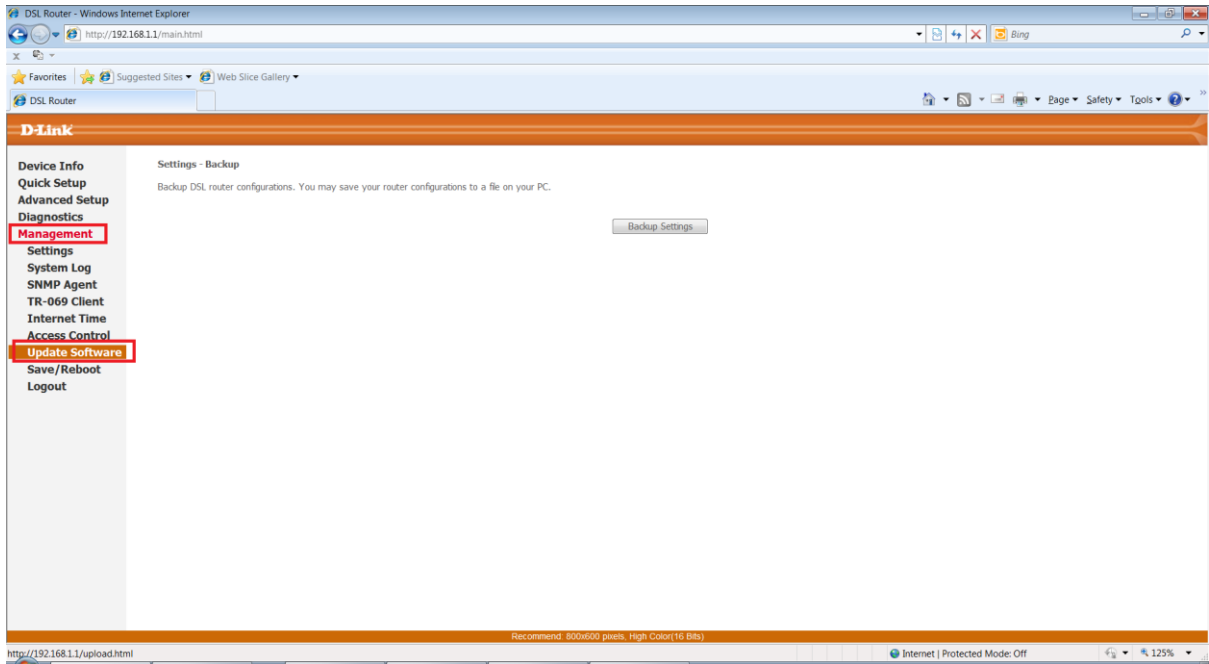


4. Select **BROWSE** to locate the file which you downloaded from the website and saved to your computer.

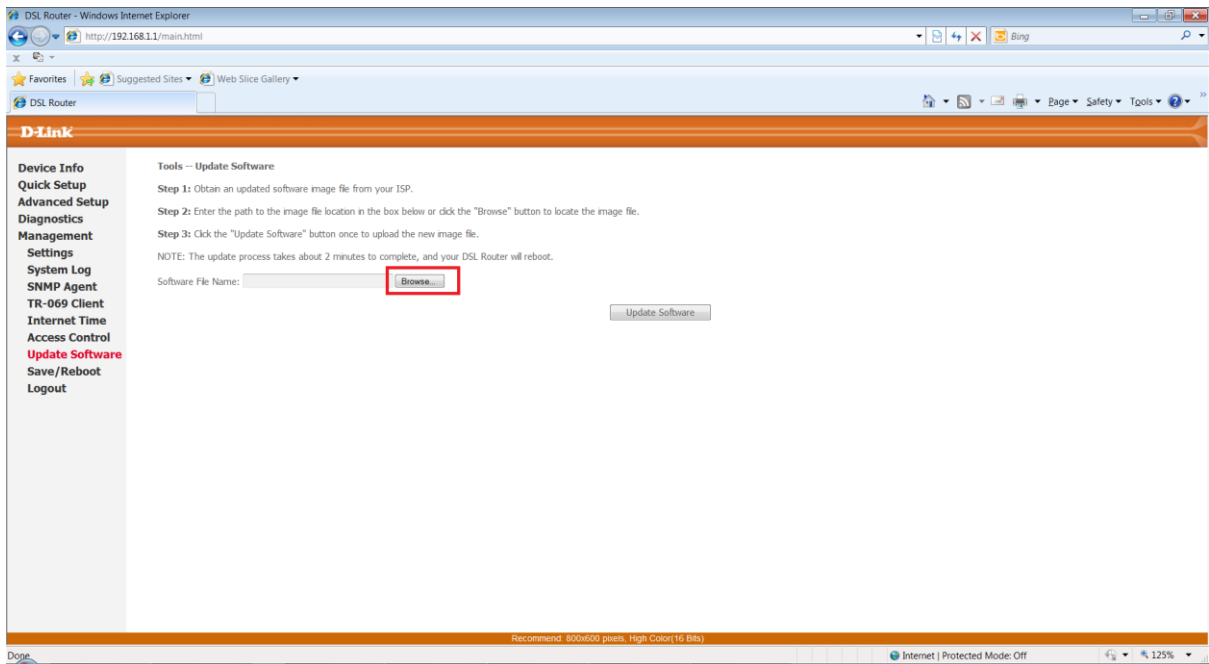

5. The 'Choose File to Upload' window will appear.
6. Choose the Firmware File which in this example is: **E5.2T01-2-DL-R1B130-AU.EN_upgrade**

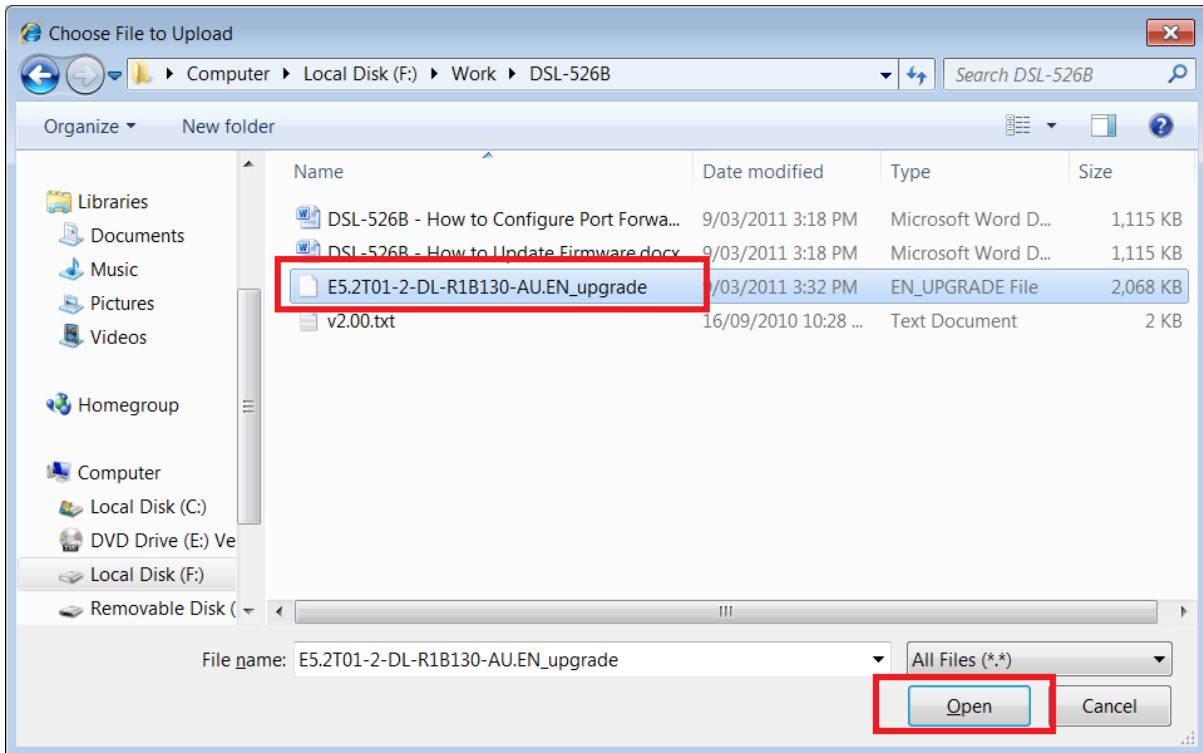

7. Select the OPEN button in this window to load the file path to the DSL-526B.
8. Click **UPDATE SOFTWARE** to begin the upgrade process.

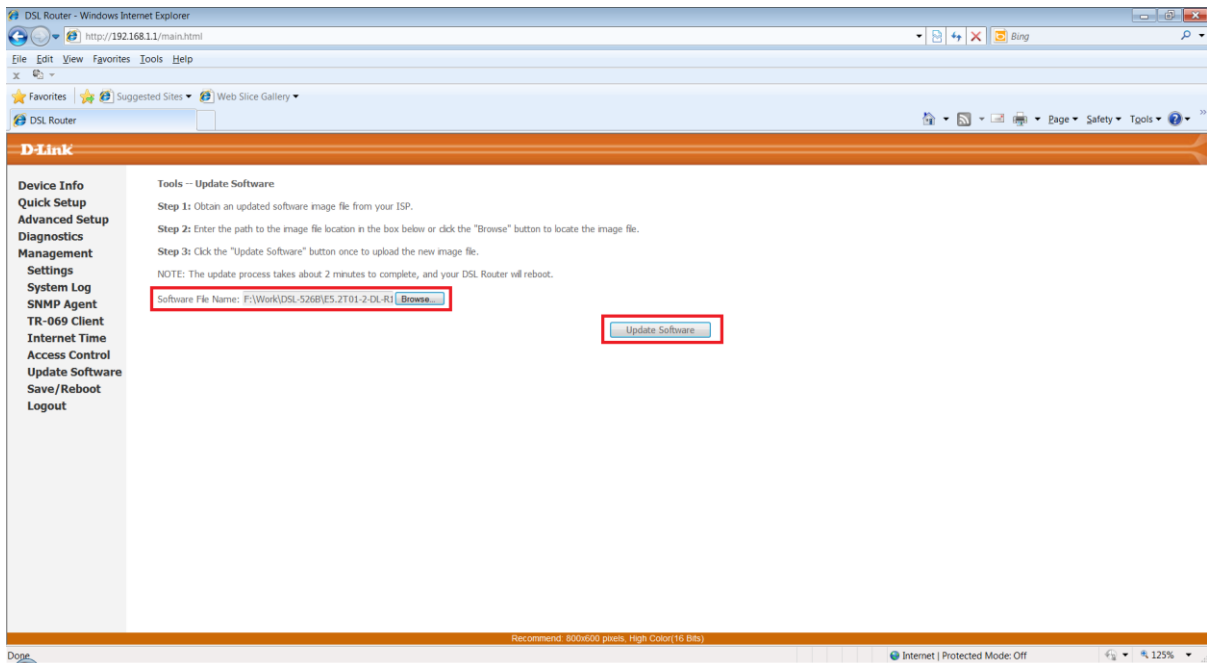

9. The modem will now upgrade and reboot when complete.

NOTE: Do not power off the modem when upgrading the firmware. Doing so can corrupt the modem and it will no longer function.