

# D-Link®



Wi-Fi 6 AX1500  
4G Cat4 LTE Router  
**DWR-M955X**

## QUICK INSTALLATION GUIDE

**Package Contents:**  
Wireless Router (DWR-M955X)  
Power Adapter  
Ethernet Cable  
Quick Installation Guide  
Warranty Card

If any of these items are missing from your packaging, contact your reseller.

### Schematic Diagram of Router Connection

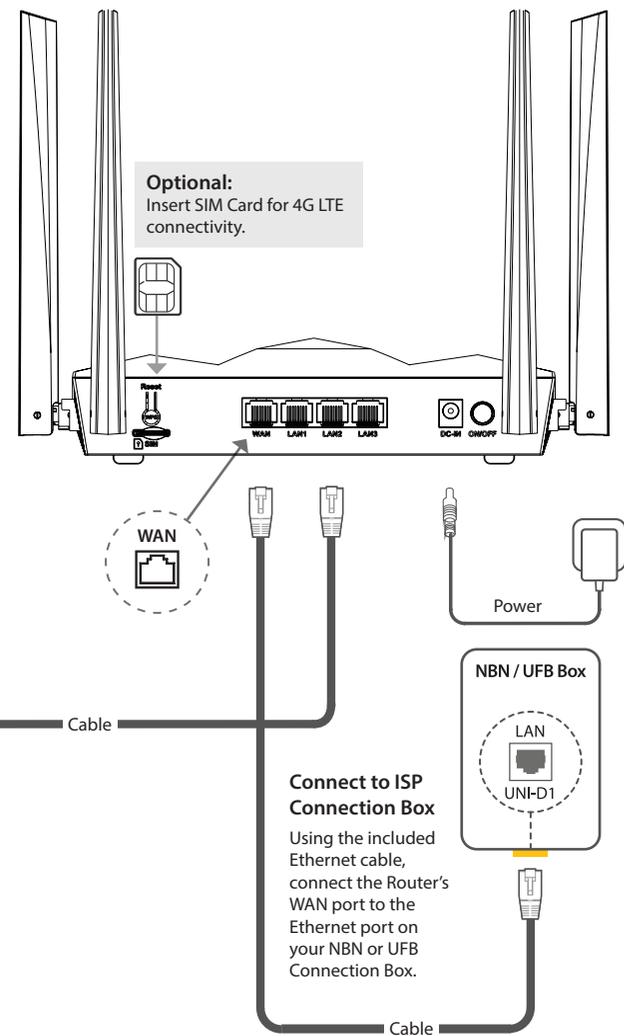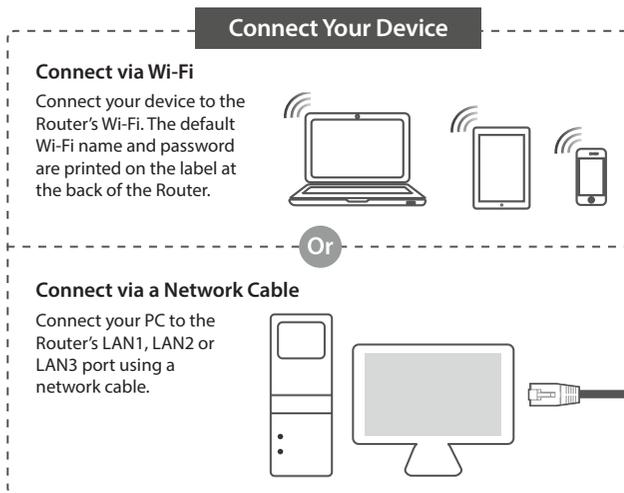

### OPTIONAL: MESH SETUP

To create a Wi-Fi mesh with multiple D-Link Routers, first select the required mode under "Easymesh" settings of each Router. The Router that connects to the Internet should be set as Controller. The Satellite Routers should be set as Agents.


Role:  Controller  Agent  Disabled

Backhaul BSS:  5G  2.4G

Device Name:

WPS Trigger:

Press the WPS button at the back of both Routers for 3 seconds. The 2.4GHz LED will flash and the Routers will wirelessly sync with each other automatically.

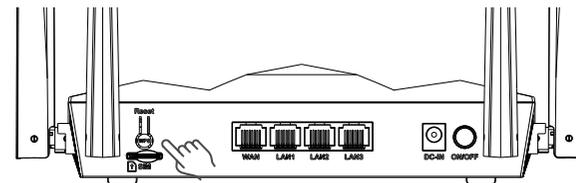

### RESET TO FACTORY DEFAULTS

To revert the Router to factory settings including Admin password, Wi-Fi name and Wi-Fi password, press the Reset (WPS) button for 10 seconds.



### TECHNICAL SUPPORT

For configuration guides and the latest software updates, please visit [support.dlink.com.au](https://support.dlink.com.au)

You can contact our **Technical Support Team:**

- Via website: <https://www.dlink.com.au/contactus>
- Via Live Chat: <https://support.dlink.com.au/>
- Via phone (24x7):

Australia: 1300 700 100  
New Zealand: 0800 900 900

## OPTION 1 - D-LINK WI-FI APP SETUP


Step 1. Install the D-Link Wi-Fi Assist App.




Step 2. Connect your phone to your Router's Wi-Fi. The Wi-Fi Name and password are printed on the label at the back of the Router.

Step 3. Open the D-Link Wi-Fi Assist app. You will be prompted to enter the Router's admin password – the factory password is printed on the label at the back of the Router.


Step 4. Tap on the Settings icon in the top right corner and then select Quick Setup.

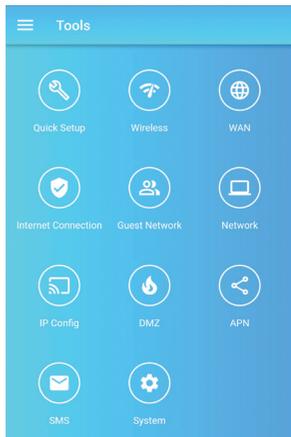

Select your Internet Connection type and enter the required details.

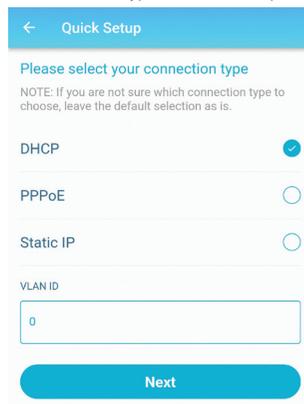

Enter your desired Wi-Fi Name and assign a secure password to your Wi-Fi.

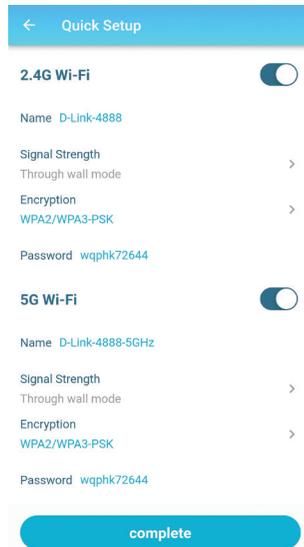


After completing the Quick Setup, the Router will restart. Reconnect to your Router's Wi-Fi using the new name and password.

## OPTION 2 - WEB BROWSER SETUP

You can also use a Web browser on your computer or on your phone to set up the Router.

Step 1. Connect your computer or phone to your Router's Wi-Fi. The Wi-Fi Name and password are printed on the label at the back of the Router. Alternatively, you can connect your computer to one of the Router's LAN ports using a network cable.

Step 2. Open your Web browser and enter http://192.168.0.1 in the address bar. You will be prompted to enter the Router's admin password – the factory password is printed on the label at the back of the router.

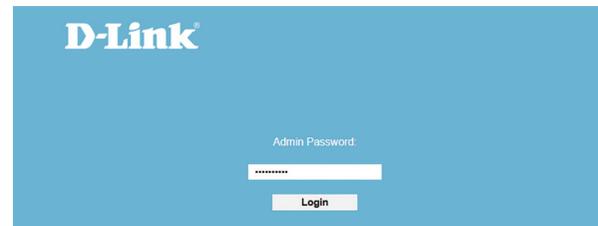


Step 3. The Setup Wizard will take you through the initial Router set up.



To begin the initial configuration of your router, click "Next."

Next>>

Select your Router's Operation Mode. "Gateway" is the most common mode.

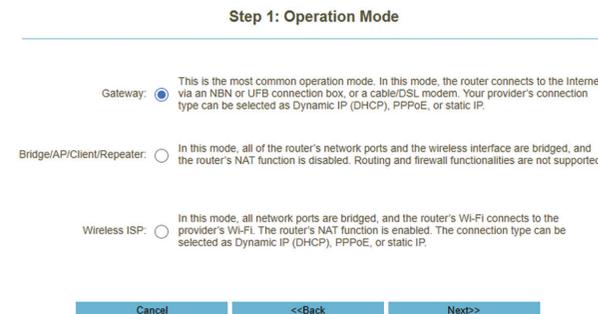

Select your Internet Connection type and enter the required details.




If required, you can change the Router's IP address.



Assign a strong system password to protect your Router from unauthorised access.



Enter your desired Wi-Fi Name and assign a secure password to your Wi-Fi.

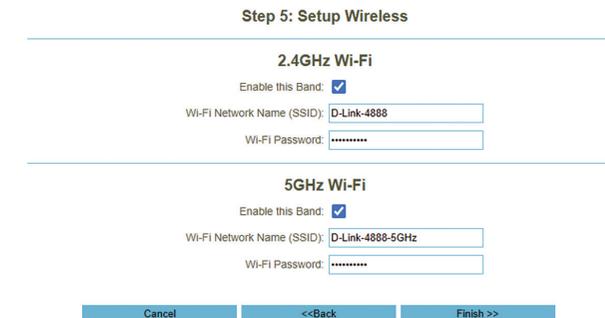

After completing the Setup Wizard, the Router will restart. Reconnect to your Router's Wi-Fi using the new name and password.