



Firmware Version: 1.00r004
Published Date: 2026/06/23

Content:

Upgrading Instructions: 2

 Upgrading by using Web-UI..... 2

New Features: 3

Changes of MIB & D-View Module: 3

Problems Fixed: 3

Known Issues: 3

Related Documentation: 3

Revision History and System Requirement:

Firmware Version	Date	Model	Hardware Version

Upgrading Instructions:

D-Link AP supports firmware upgrading via Web-UI. You may download the firmware from D-Link web site <http://tsd.dlink.com.tw>.

Please also

1. Make sure your DAP-E3620 has to manually assign a valid static IPv4 address or get a valid IPv4 address from DHCP server before upgrade FW.
2. Do not power off your DAP-E3620 when FW upgrading.

Upgrading by using Web-UI

1. Connect a work station to the LAN port of Access Point.
2. Open the web browser of work station and entering the IP address of the AP. The system default IP address setting is dynamic ip, and you can enter <https://dape3620.local> to login, if it cannot get ip address from DHCP server, it's ip address will back to 192.168.0.50.
3. Enter administrator's username and password, user name and password are "admin" by default.
To update the AP's firmware, click **Maintenance > Firmware and SSL Certification Upload**

New Features:

1. First release

Changes of MIB & D-View Module:

None

Problems Fixed:

Firmware Version	Problems Fixed
V1.00	None

Known Issues:

Firmware Version	Known Issues
V1.00	1. MLO - DUT client info will disappear on DNH

Related Documentation:

[DAP-E3620 user manual v1.00](#)