




for Windows 98/SE
DFE-690TXD
Cardbus PC Card

*Please note that you will need Cat5, RJ-45 cable to complete your network installation. Please see **Appendix B** for more information regarding cables.*

1

Inserting the DFE-690TXD Cardbus PC Card into your laptop

With the laptop turned **ON**,
Insert the **DFE-690TXD**
Cardbus PC Card
into your laptop.
Gently insert the front end of the
Cardbus PC Card
(with the yellow “arrow”
on the card pointing toward
the computer) all the way into the
Cardbus PC slot on your laptop,
until it is firmly seated.

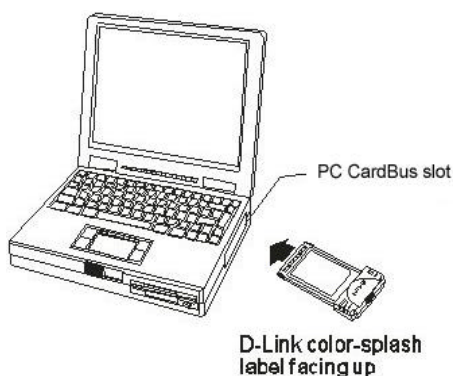


2

Running the “Add New Hardware Wizard”

Windows will automatically detect new
hardware and begin
searching for drivers.

Click Next

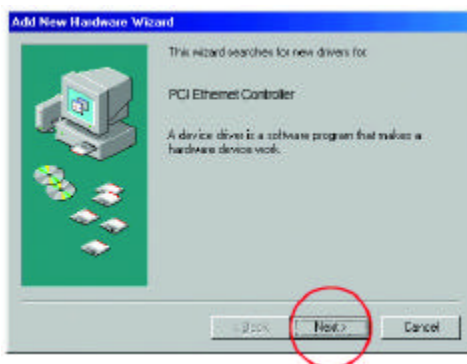

2

Running the “Add New Hardware Wizard” *continued*

At the next screen, select **“Search for the best driver for your device.”**

Click Next to continue the installation.

At the following screen, select **“CD-ROM Drive”**





Insert the CD that is included with the DFE-690TXD

Click NEXT.

The “Hardware Wizard” will find the driver for your Cardbus PC Card.

Click Next, to continue.

If prompted for the Windows 98 CD, insert the Windows 98 CD into the CD-ROM drive.
Click OK

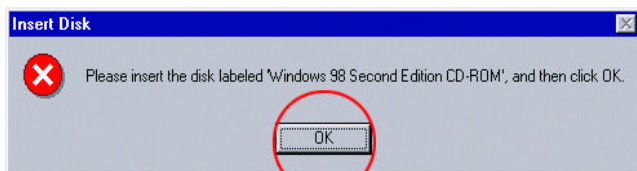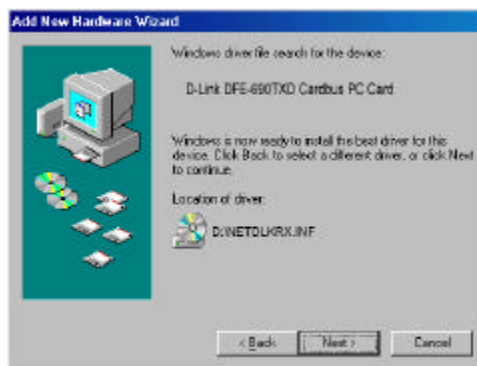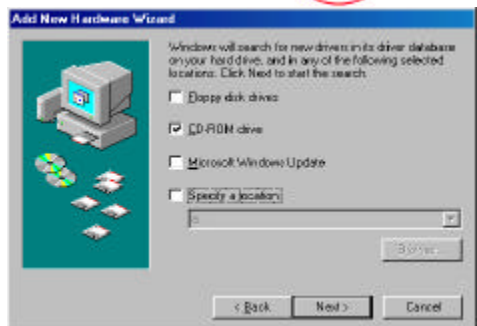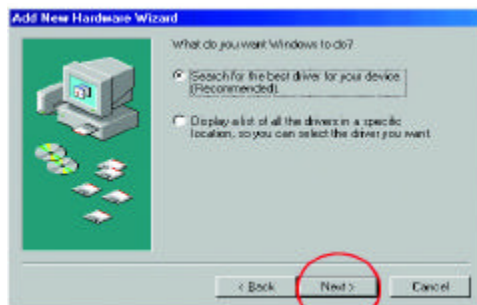

2

Running the “Add New Hardware Wizard” *continued*

Specify the correct location in the “Copy files from:” box. If the CD-ROM drive is the **D: drive**, then type **D:\Win98** in the box. (*Some computers will have the Windows98 files available in the C:\Windows\options\cabs directory.*)

After typing in the location,

Click OK




Windows will copy the necessary files.

To complete the installation,

Click Finish

At this screen,

Click Yes to restart the computer.

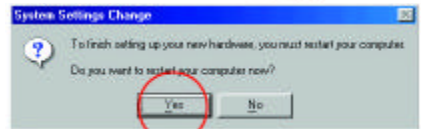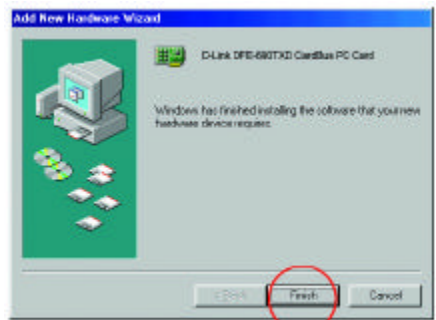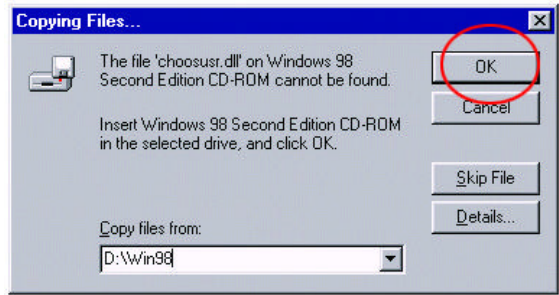


3

Connecting to your network

After the “Hardware Wizard” has completed the installation of the DFE-690TXD, you can make your network connection. Please insert one end of the RJ-45 cable into the built-in connector of the DFE-690TXD CardBus PC Card, and then insert the other end of the RJ-45 cable into your networking hub or switch.

You are now networked!

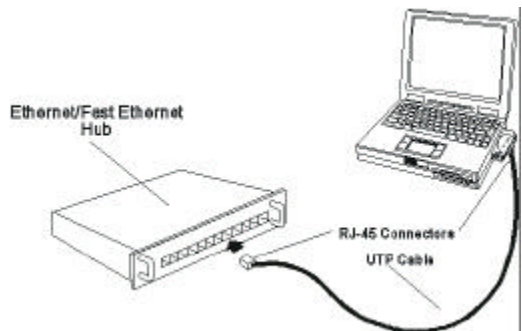


Please see **Appendix A** to check the installation.

Please see **Appendix B** for information on cables.

Appendix A

To check for proper installation of your **DFE-690TXD**, please go to **START > SETTINGS > CONTROL PANEL**. Double click on the “**System**” icon. At the “**System Properties**” window, click on the “**Device Manager**” tab. Your **DFE-690TXD** will appear under “**Network Adapters**,” as shown.

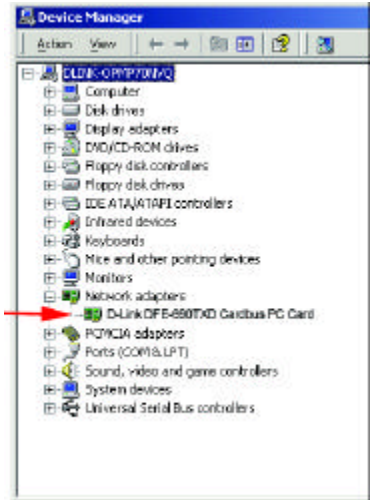

Appendix B

Connecting Your Network Cable

Category 5 UTP cable can be used for both **Fast Ethernet** cabling and for **traditional Ethernet** cabling.

Connecting for Fast Ethernet cabling

Cat5 cable is required for Fast Ethernet operation. The maximum cable length between the DFE-690TXD and the supporting hub is 300 ft. The cable must be “straight” (not a “crossover” cable), with an RJ-45 plug at each end.

Connecting for traditional (10Mbps) Ethernet cabling

Category 3, Category 4, and Category 5 UTP cable, as well as EIA/TIA-568 100-ohm STP cable, all qualify under traditional Ethernet cabling rules. The maximum cable run between the DFE-690TXD and the supporting hub is 300 ft. The cable must be “straight” (not a “crossover” cable) with RJ-45 plug at each end.

