


*Please note that you will need Cat5, RJ-45 cable to complete your network installation. Please see **Appendix B** for more information regarding cables.*

1

Inserting the DFE-690TXD Cardbus PC Card into your laptop

With the laptop turned **ON**,
insert the **DFE-690TXD**
Cardbus PC Card
into your laptop.

Gently insert the front end of the
Cardbus PC Card
(with the yellow “arrow”
on the card pointing toward
the computer) all the way into the
Cardbus PC slot on your laptop,
until it is firmly seated.

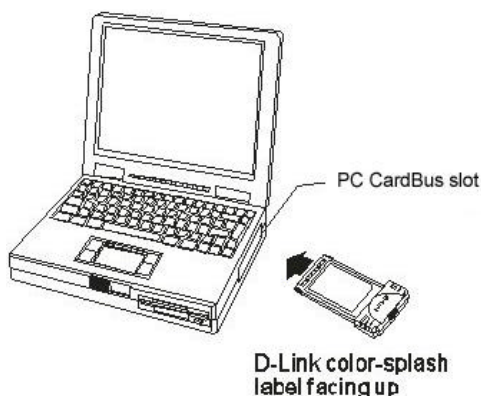


2

Running the “Add New Hardware Wizard”

Windows will automatically
detect new hardware and
begin searching for drivers.
Insert the **CD** that is included
with your purchase of the
DFE-690TXD.

**Select “Specify the location
of the driver.”**

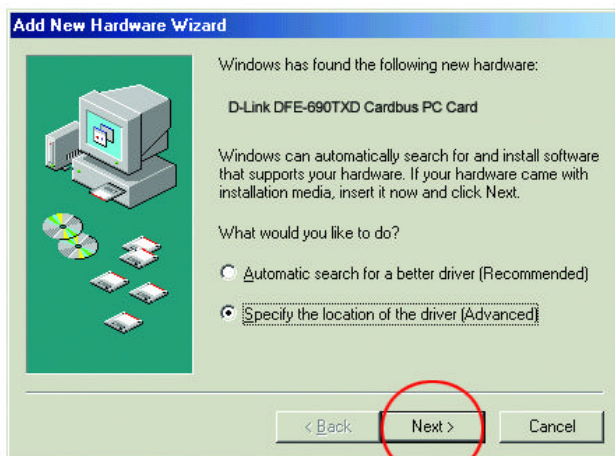


Click Next


2

Running the “Add New Hardware Wizard”

At this screen, **select “Search for the best driver for your device.”** Choose **“Specify a location.”** Type the **drive letter** for the CD-ROM into the box or choose **“Browse”** to highlight the CD-ROM drive. **Click Next**

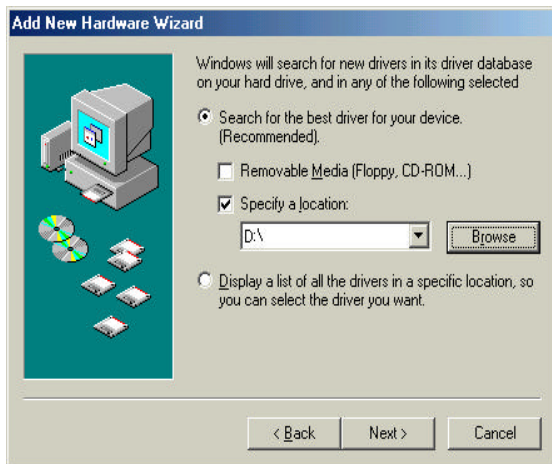


The Wizard has located the driver on the CD-ROM drive.

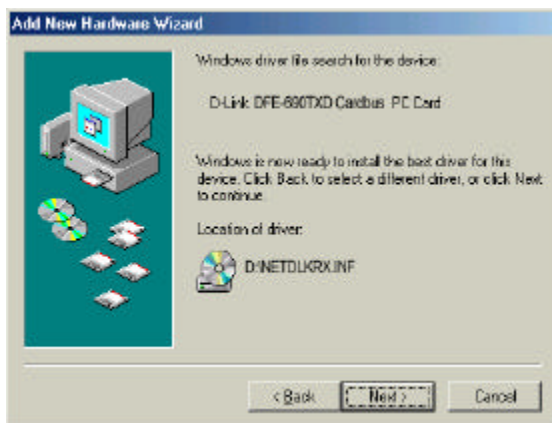


Click Next
Windows will copy the files to the hard drive.

Windows has finished installing the DFE-690TXD.

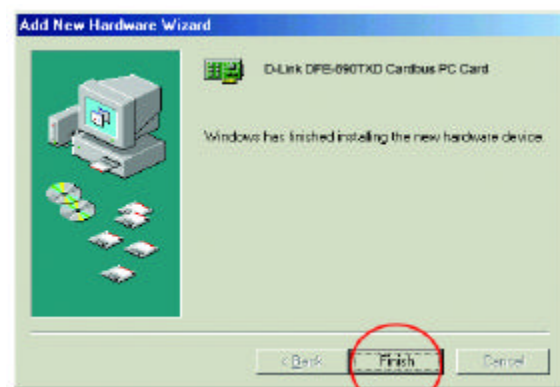

Click Finish

Select “Yes” to restart the computer.

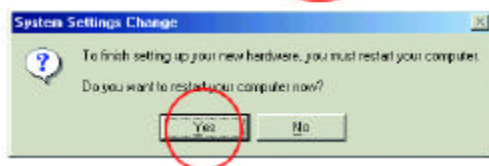


3

Connecting to your network

After the “Hardware Wizard” has completed the installation of the DFE-690TXD, you can make your network connection.

Please insert one end of the RJ-45 cable into the built-in connector of the DFE-690TXD Cardbus PC Card, and then insert the other end of the RJ-45 cable into your networking hub or switch.

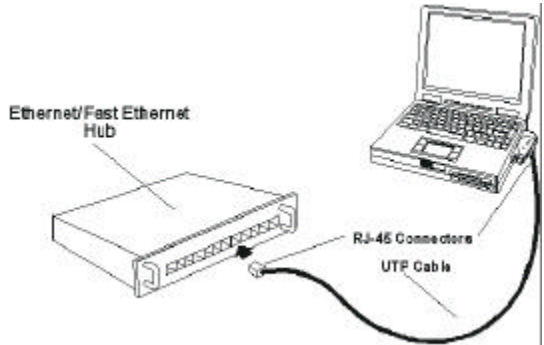

You are now networked!

Please see **Appendix A** to check the installation.

Please see **Appendix B** for information on cables.

For more information, please see your User’s Manual

Appendix A

To check the installation of your **DFE-690TXD**, please go to:


START > SETTINGS > CONTROL PANEL.

Double click on the “System” icon.

At the “System Properties” window, click on the

“Device Manager” tab.

Your **DFE-690TXD** will appear under **“Network Adapters,”** as shown.

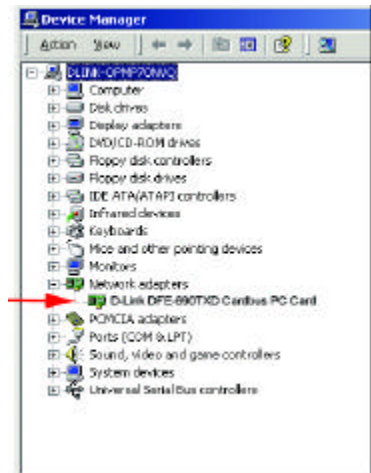

Appendix B

Connecting Your Network Cable

Category 5 UTP cable can be used for both **Fast Ethernet** cabling and for **traditional Ethernet cabling**.

Connecting for Fast Ethernet cabling

Cat5 cable is required for Fast Ethernet operation. The maximum cable length between the DFE-690TXD and the supporting hub is 300 ft. The cable must be “straight” (not a “crossover” cable), with an RJ-45 plug at each end.

Connecting for traditional (10Mbps) Ethernet cabling

Category 3, Category 4, and Category 5 UTP cable, as well as EIA/TIA-568 100-ohm STP cable, all qualify under traditional Ethernet cabling rules. The maximum cable run between the DFE-690TXD and the supporting hub is 300 ft. The cable must be “straight” (not a “crossover” cable) with RJ-45 plug at each end.

