


I-O Print Server Setup for Windows NT 4


To setup Windows NT to print to a printer attached to an I-O Print Server, use the Windows Add a Printer wizard. The following steps will guide you through the process:

From the **Start** button, select the **Settings** option, then select **Printers**.

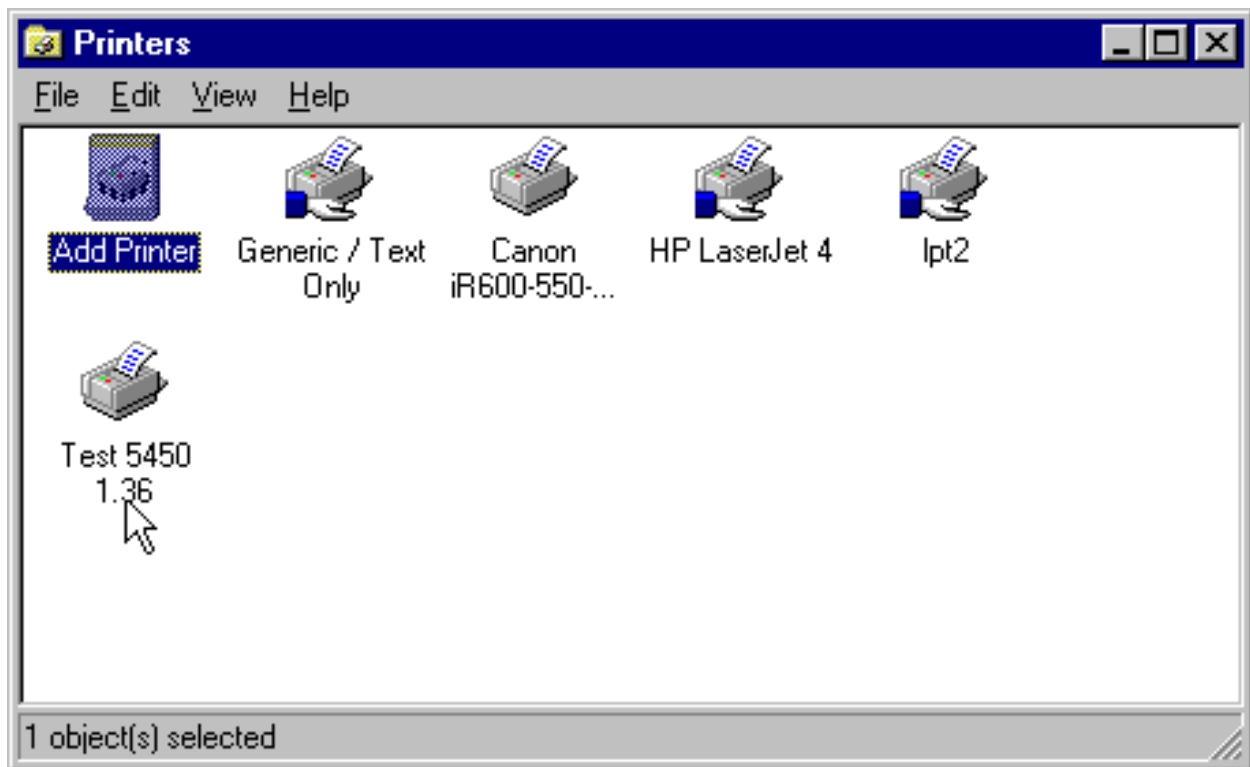

Click on the **Add Printer** icon.

Add Printer Wizard

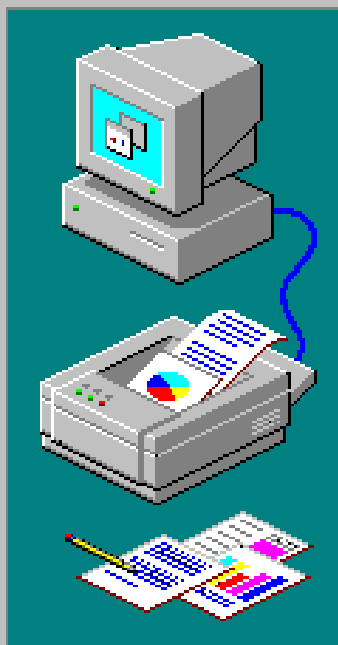

This wizard helps you install your printer or make printer connections. This printer will be managed by:

☒ **My Computer**

All settings will be managed and configured on this computer.

☐ Network printer server


Connect to a printer on another machine. All settings for this printer are managed by a print server that has been set up by an administrator.

< **B**ack


Next >

Cancel


Select **My Computer**.
Click *Next*.

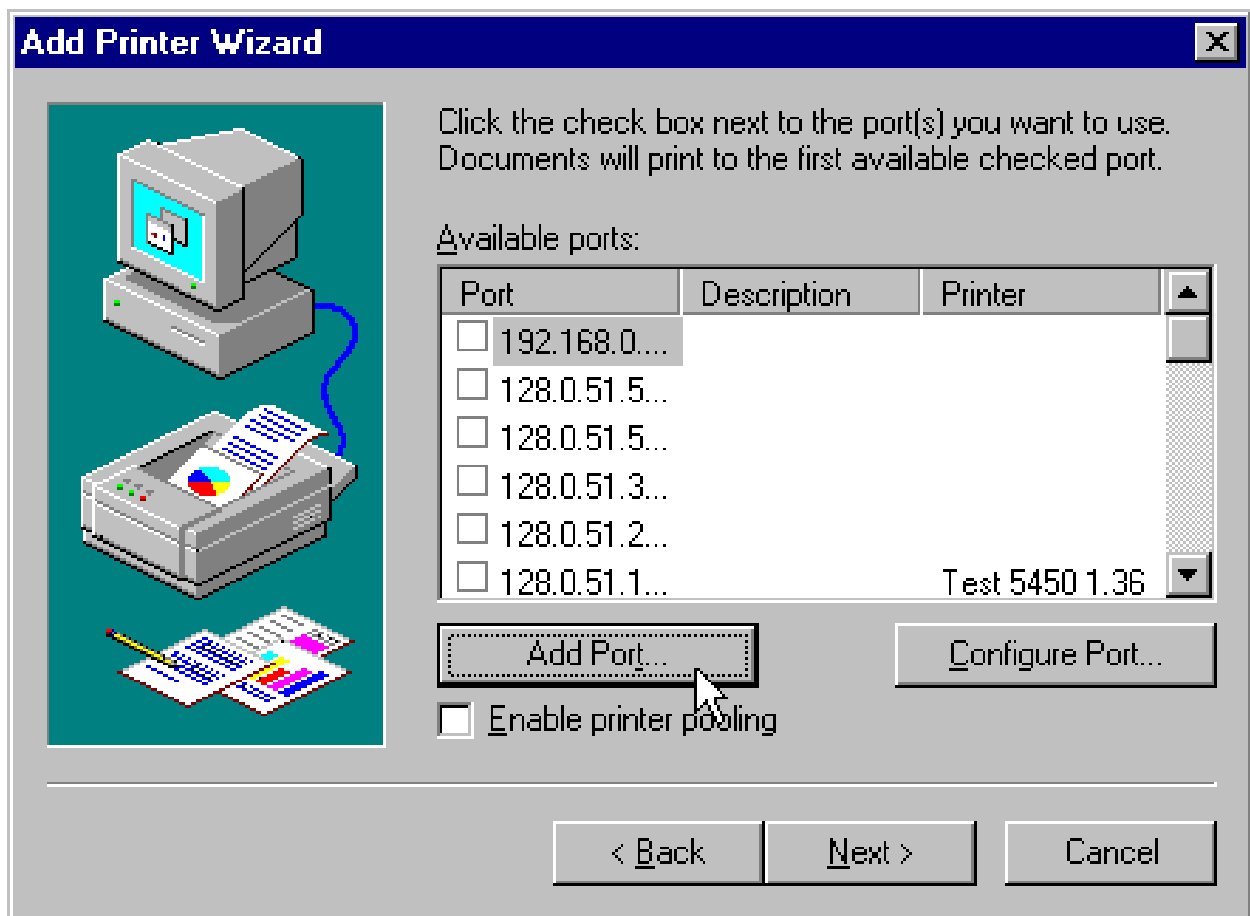


Click the **Add Port** button.

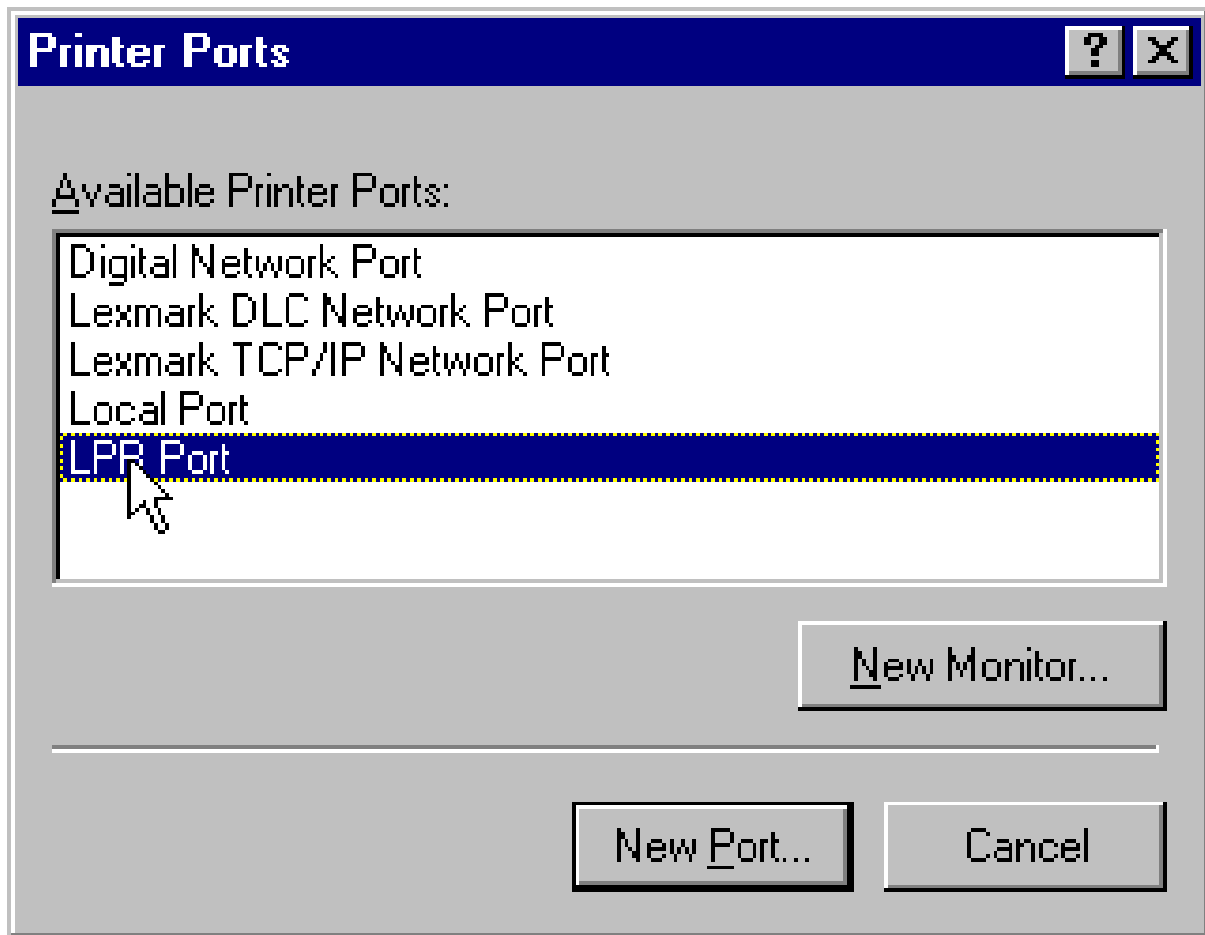


Highlight the **LPR Port** selection.
Click the *New Port* button.

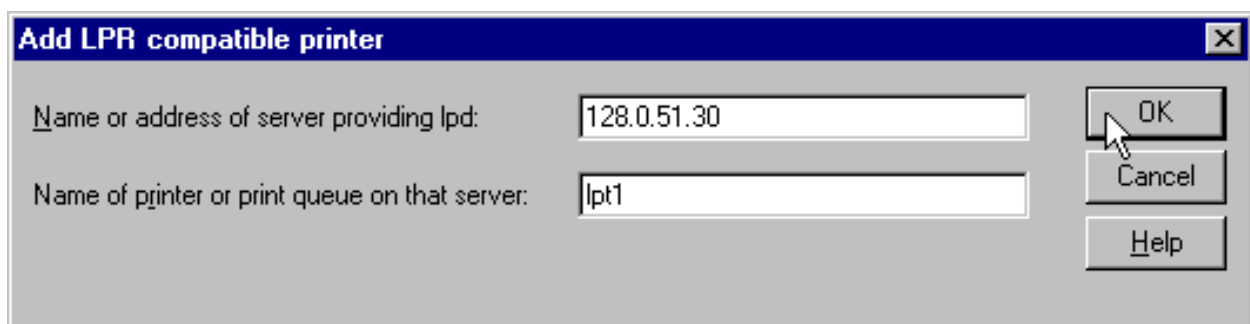

Enter the **IP address** of the **I-O Print Server**.
Enter **lpt1** or **tcp1** (depending on the need for selecting the use of banner pages, etc.)
as the name of the printer or print queue.
Click *OK*.

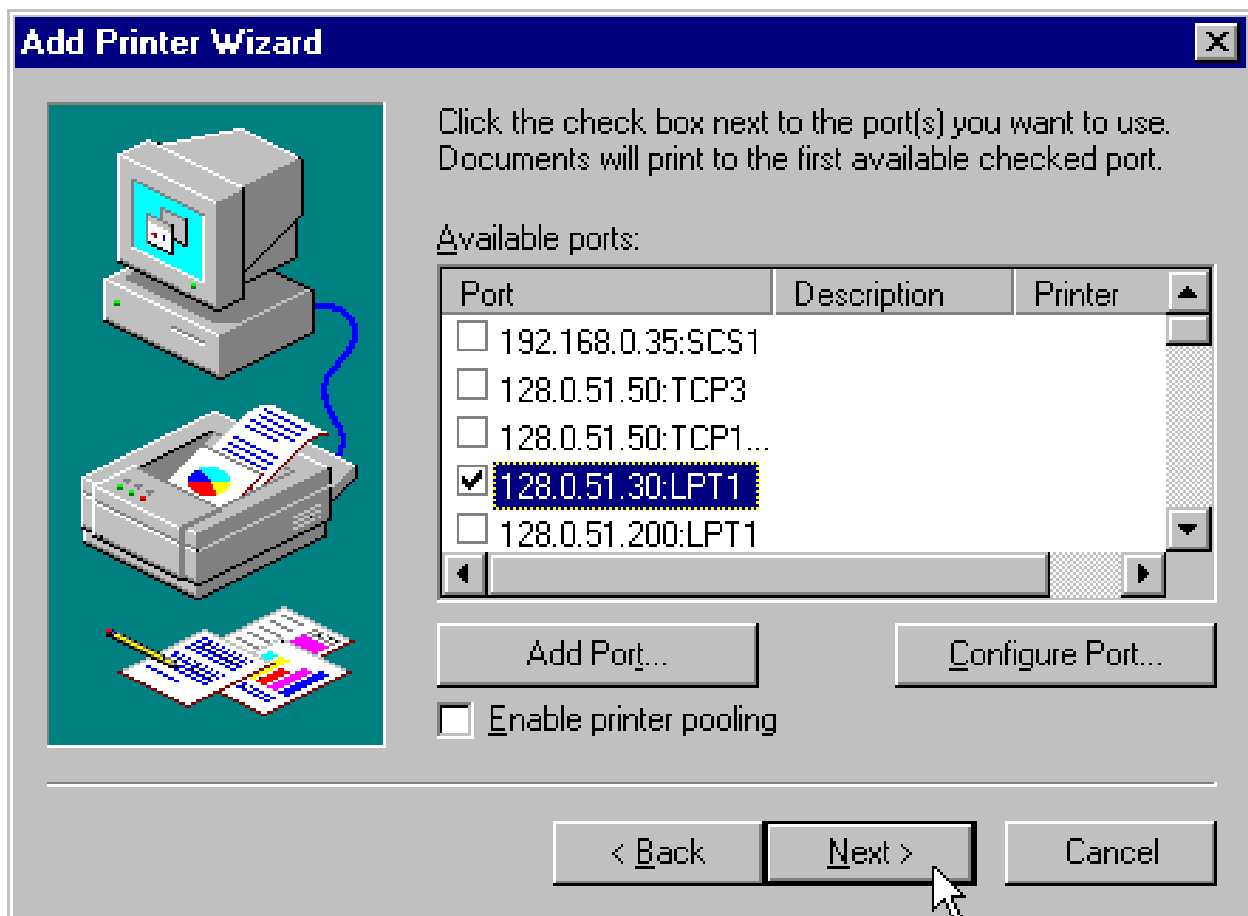

The new port will appear in the list of available ports.
Click the *Next* button.

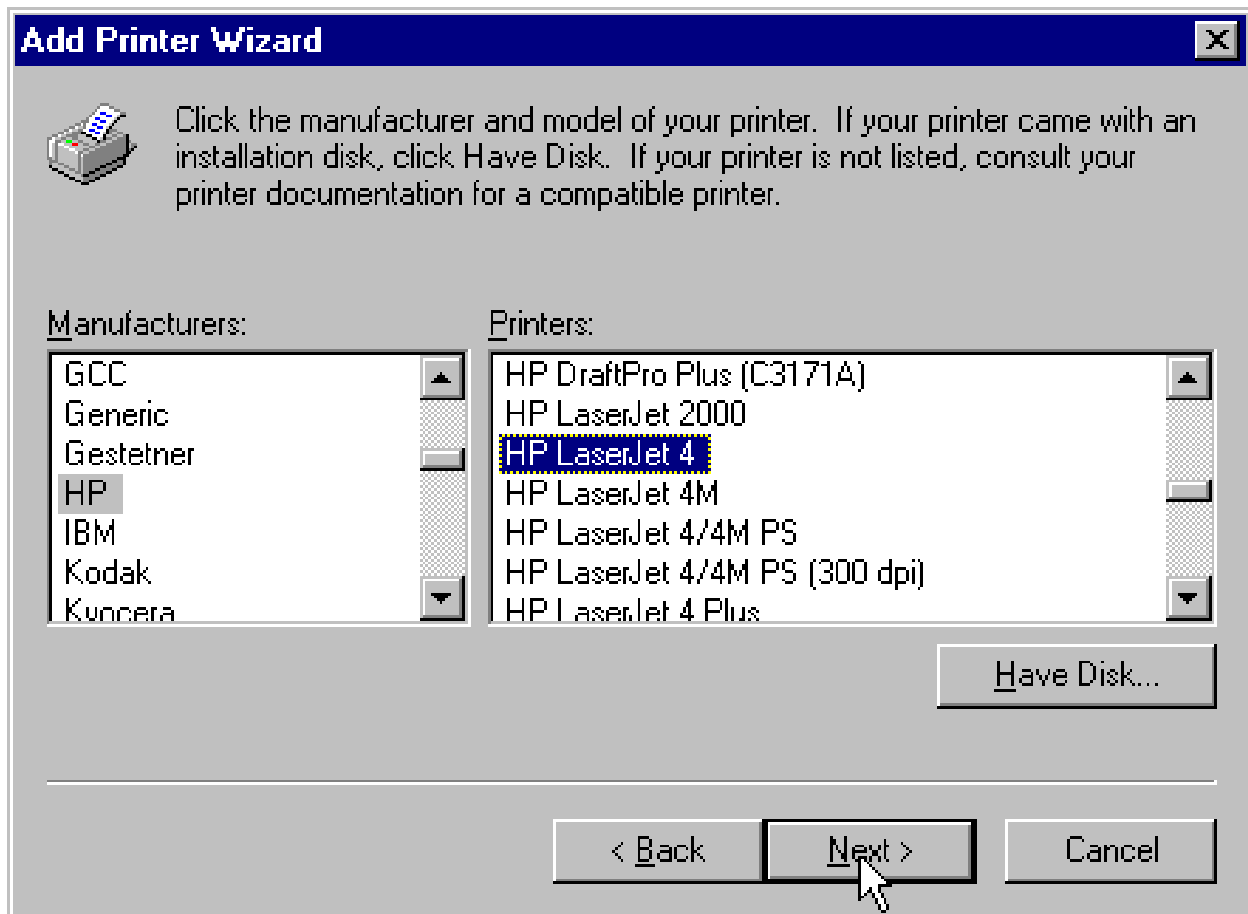

Select the printer manufacturer and model of the **printer attached to the I-O Print Server**.

From this point on, respond to the standard Add Printer Wizard's screens.

