



How to set TCP/IP configurations and use with Internet Server for Mac


1. Turn on "TCP/IP" on **Control panels**.

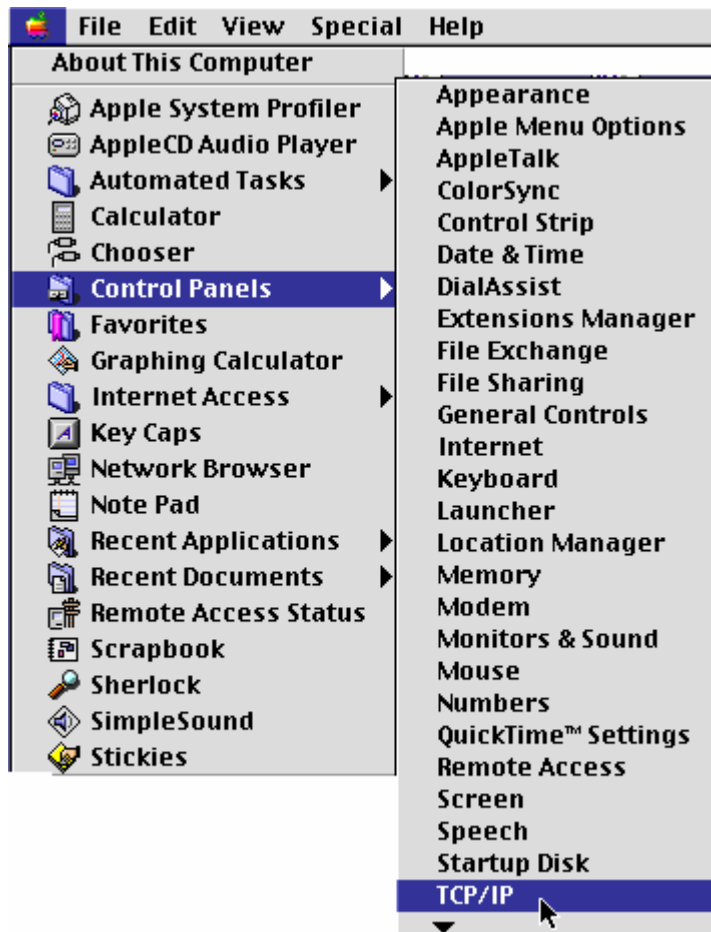

2. Select "Ethernet" on "Connect via:"

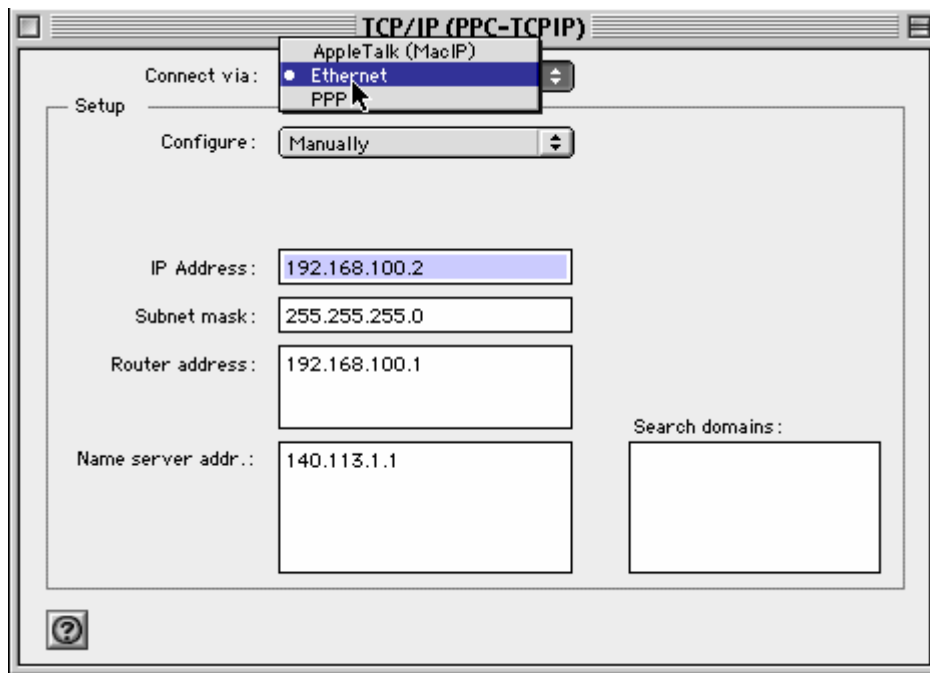


3. Select "**Manually**" on "**Configure**"

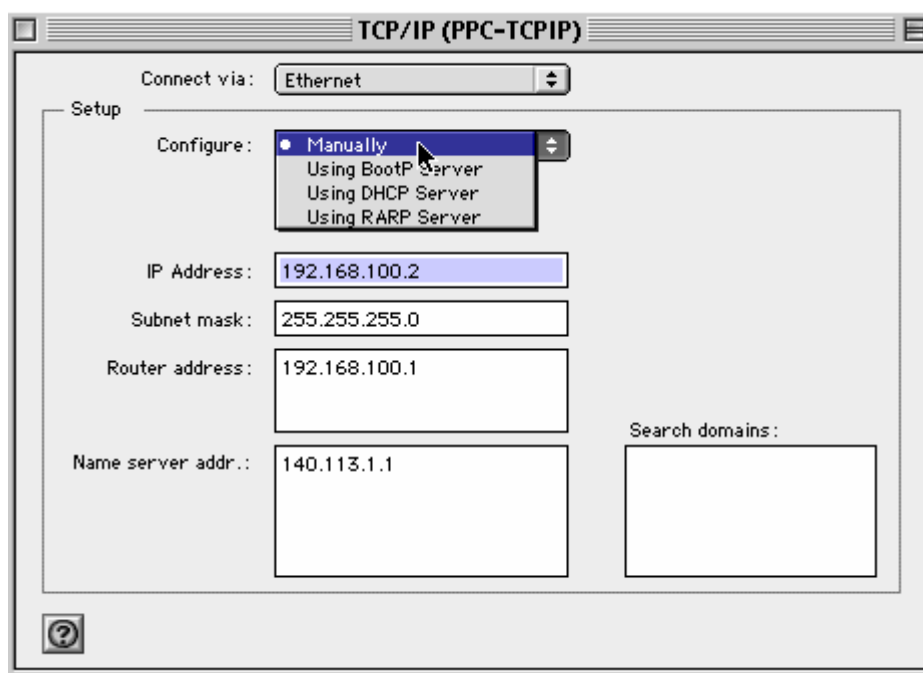

4. The default IP address of D-Link's Internet Server is 192.168.100.1. To access it, you have to assign an IP for your Mac. to be in the same subnet as the Internet Server. Example. 192.168.100.2.


5. Key in **Subnet mast** 255.255.255.0.

6. Key in the **Router address** as 192.168.100.1, which is the Internet Server Address.

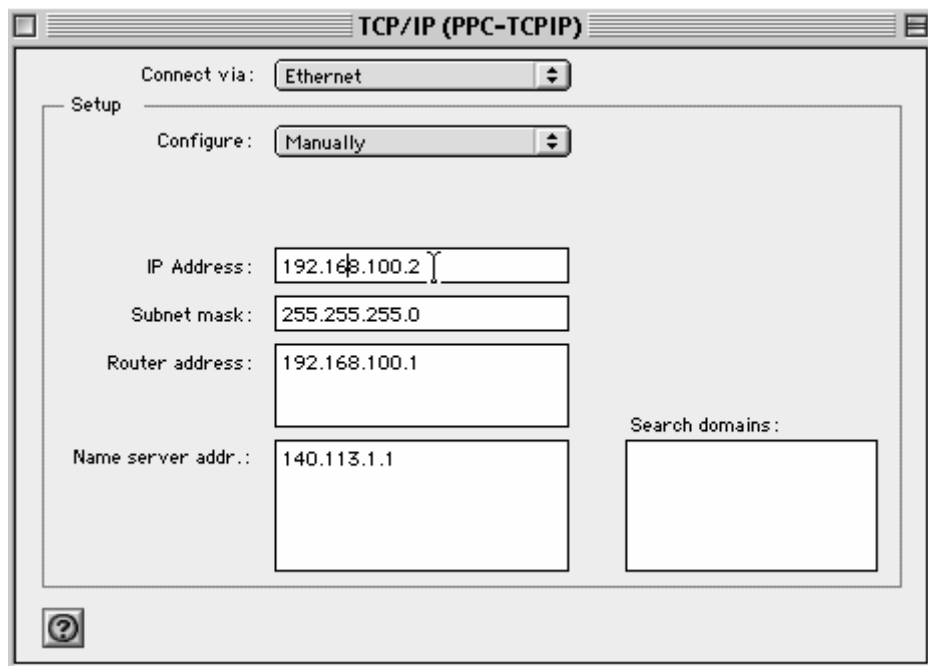

7. D-Link Internet Server support Web configuration.
You can set configuration of Internet Server using Web browser of your Mac.


8. Start "**Browse the Internet**" (Browser) and input the IP address 192.168.100.1 into "**Address:**"

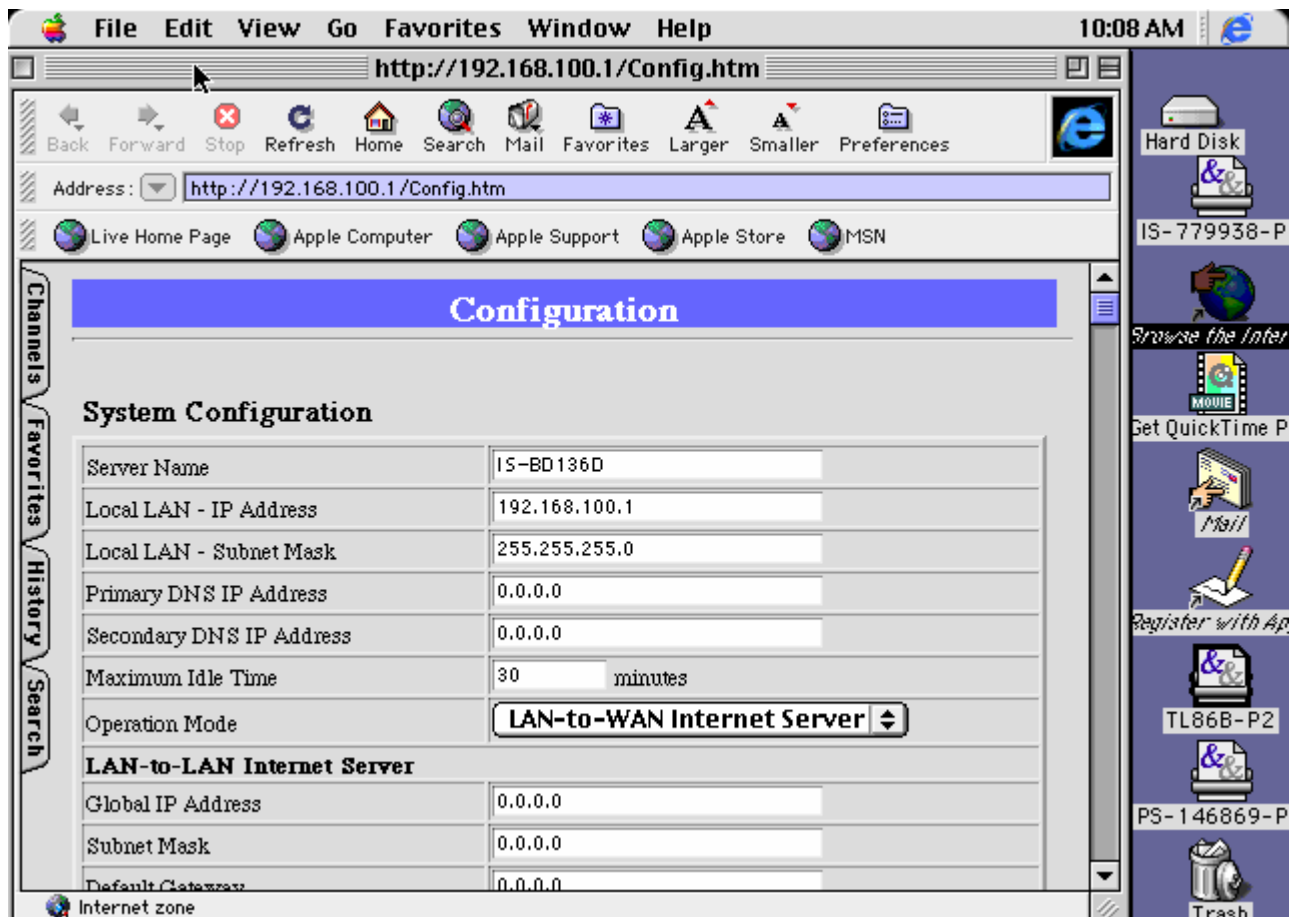


9. Please refer to **Chapter 3 System Setup** of user's guide of Internet Server. It will guide you to setup the Internet Server.

How to sharing files with others on a network for Mac


1. Turn on file sharing using **File Sharing** in control panel

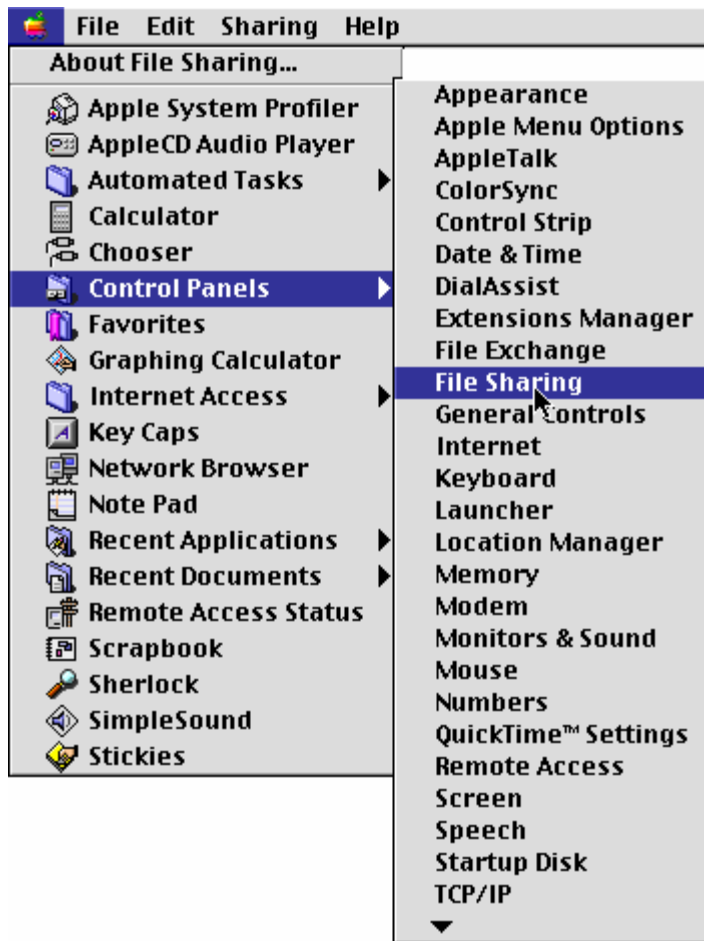


Start the **File Sharing** and **Program Linking**.

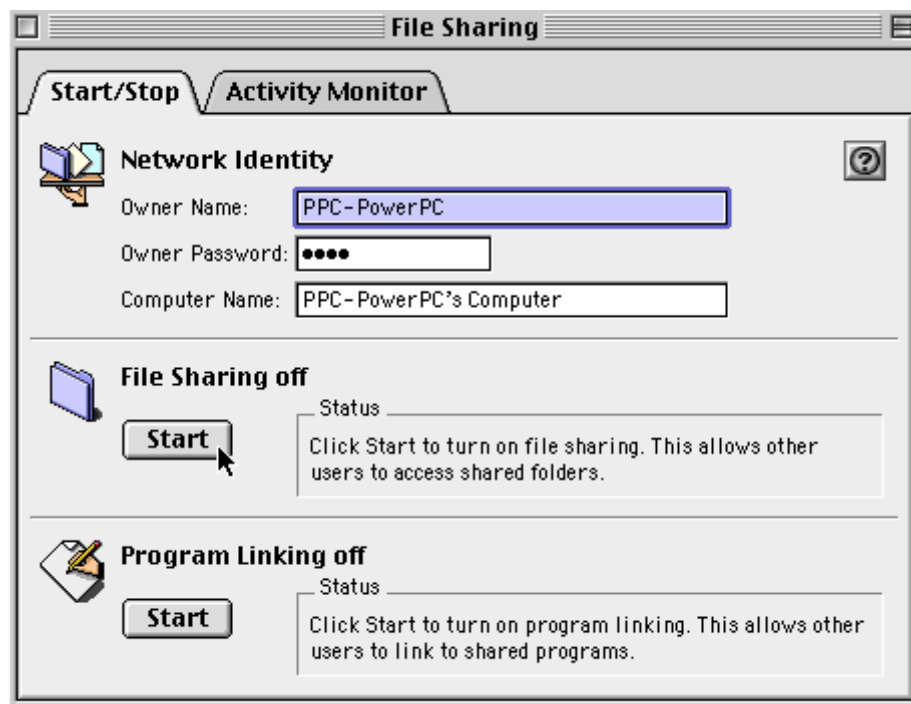


2. If necessary, create the users and groups with whom you want to share files with. Use the **Users & Groups** in control panel to do this.

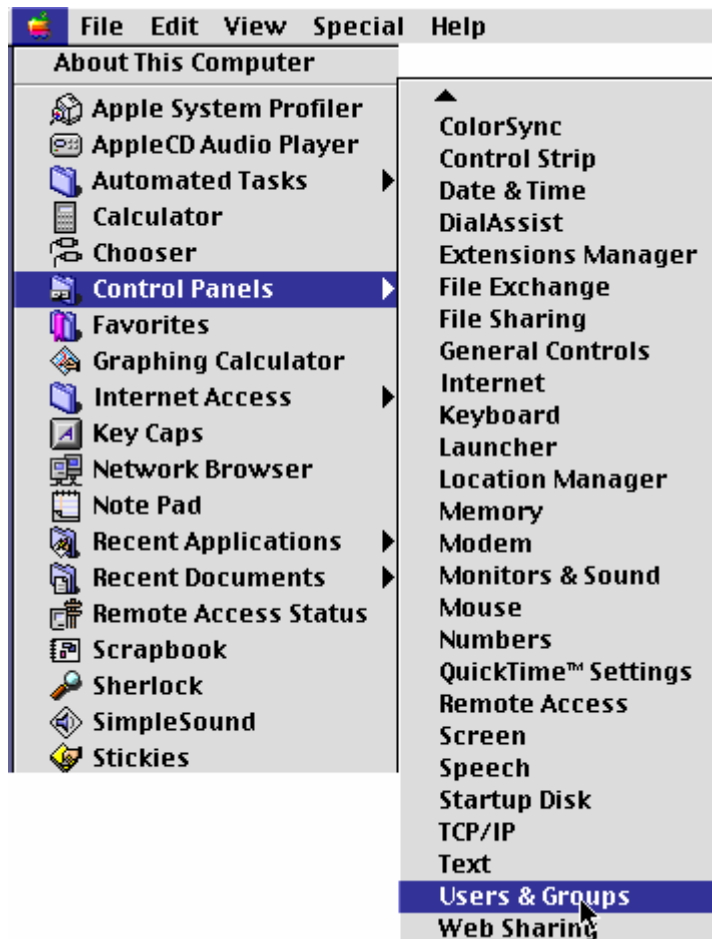


Start creating New Users and New Groups :

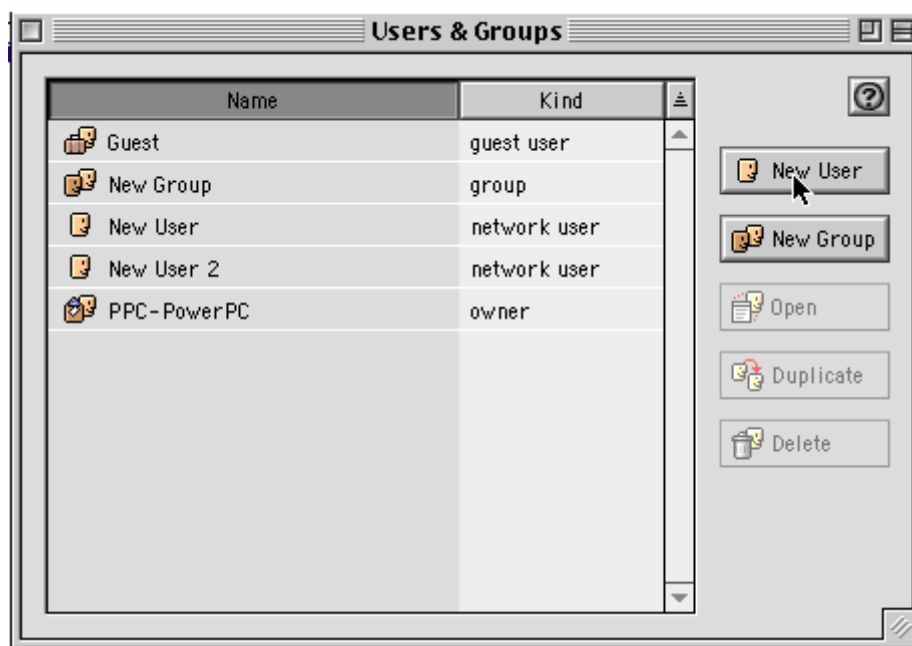

3. Share an item using the **Sharing** section of the item's Info window.
 - a. Select the folder you want to share (FTP bookmark in this example).
 - b. Select menu **File Get Info Sharing**

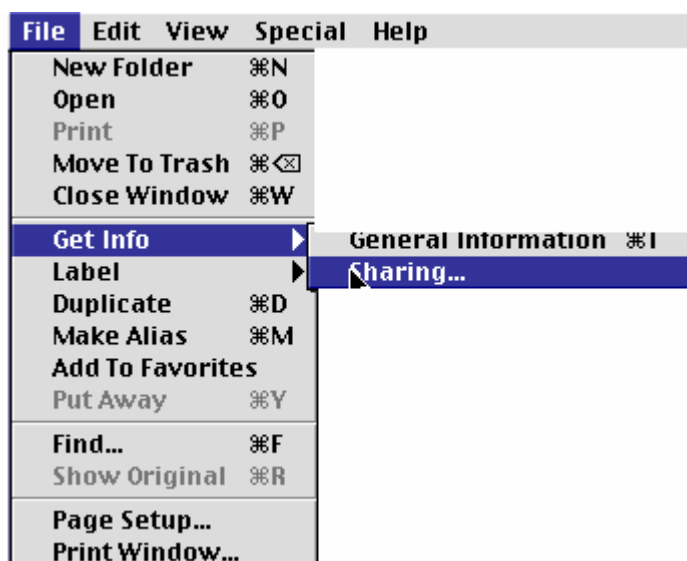

- c. Select "Sharing" on Show item.
- d. Select "User enclosing folder's Privileges".

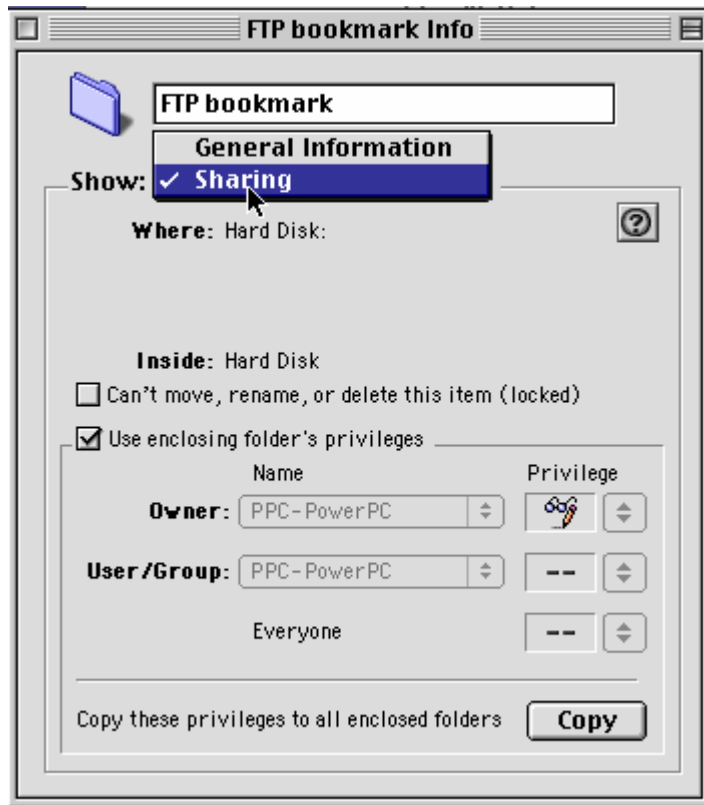

The folder sharing is done.

Last modified on 1999/10/21

Copyright by **D-Link** Corporation

----- End of Document -----