

100mm

QUICK INSTALLATION GUIDE

***Please fully charge the device before using.**

WPS Key
Press and hold for 5 seconds to quickly connect a WPS-enabled device.
Press briefly to switch screen information.

Place the SIM card into the tray with the copper contacts facing down and the cut corner on the left. Gently push the tray inward until it is flush with the device.

Connect your mobile device or computer to the device's Wi-Fi network to access the Internet.



Use your Mi-Fi Router as a power bank to charge compatible mobile devices.

	Idle
	Connecting
	Connected
	Connection Failed

Step 5:
Select Mobile and then APN. Type in your provider's APN (check with your mobile service carrier if not sure).

Step 4: Select Mobile Settings and Basic Setup. Choose your mobile provider from the list or type in your provider's APN (check with your mobile service carrier if not sure).

5. MY ROUTER TURNS ITSELF OFF. IS IT NORMAL?
Yes, this is normal. If no Wi-Fi clients are connected to the router, it may automatically power off to conserve battery power. To turn it back on, press the power button.

Australia: 1300 700 100
New Zealand: 0800 900 900