



DXS-3326GSR

High-density Layer 3 Gigabit Switch Command Line Interface Reference Manual

First Edition (July 2004)

651XS3326015

Printed In Taiwan



RECYCLABLE

Warranty and Registration Information

(All countries and regions excluding USA)

Wichtige Sicherheitshinweise

1. Bitte lesen Sie sich diese Hinweise sorgfältig durch.
2. Heben Sie diese Anleitung für den spätern Gebrauch auf.
3. Vor jedem Reinigen ist das Gerät vom Stromnetz zu trennen. Verwenden Sie keine Flüssig- oder Aerosolreiniger. Am besten dient ein angefeuchtetes Tuch zur Reinigung.
4. Um eine Beschädigung des Gerätes zu vermeiden sollten Sie nur Zubehöerteile verwenden, die vom Hersteller zugelassen sind.
5. Das Gerät ist vor Feuchtigkeit zu schützen.
6. Bei der Aufstellung des Gerätes ist auf sichern Stand zu achten. Ein Kippen oder Fallen könnte Verletzungen hervorrufen. Verwenden Sie nur sichere Standorte und beachten Sie die Aufstellhinweise des Herstellers.
7. Die Belüftungsöffnungen dienen zur Luftzirkulation die das Gerät vor Überhitzung schützt. Sorgen Sie dafür, daß diese Öffnungen nicht abgedeckt werden.
8. Beachten Sie beim Anschluß an das Stromnetz die Anschlußwerte.
9. Die Netzanschlußsteckdose muß aus Gründen der elektrischen Sicherheit einen Schutzleiterkontakt haben.
10. Verlegen Sie die Netzanschlußleitung so, daß niemand darüber fallen kann. Es sollte auch nichts auf der Leitung abgestellt werden.
11. Alle Hinweise und Warnungen die sich am Geräten befinden sind zu beachten.
12. Wird das Gerät über einen längeren Zeitraum nicht benutzt, sollten Sie es vom Stromnetz trennen. Somit wird im Falle einer Überspannung eine Beschädigung vermieden.
13. Durch die Lüftungsöffnungen dürfen niemals Gegenstände oder Flüssigkeiten in das Gerät gelangen. Dies könnte einen Brand bzw. Elektrischen Schlag auslösen.
14. Öffnen Sie niemals das Gerät. Das Gerät darf aus Gründen der elektrischen Sicherheit nur von autorisiertem Servicepersonal geöffnet werden.
15. Wenn folgende Situationen auftreten ist das Gerät vom Stromnetz zu trennen und von einer qualifizierten Servicestelle zu überprüfen:
 - a. Netzkabel oder Netzstecker sind beschädigt.
 - b. Flüssigkeit ist in das Gerät eingedrungen.
 - c. Das Gerät war Feuchtigkeit ausgesetzt.
 - d. Wenn das Gerät nicht der Bedienungsanleitung entsprechend funktioniert oder Sie mit Hilfe dieser Anleitung keine Verbesserung erzielen.
 - e. Das Gerät ist gefallen und/oder das Gehäuse ist beschädigt.
 - f. Wenn das Gerät deutliche Anzeichen eines Defektes aufweist.
16. Bei Reparaturen dürfen nur Originalersatzteile bzw. den Originalteilen entsprechende Teile verwendet werden. Der Einsatz von ungeeigneten Ersatzteilen kann eine weitere Beschädigung hervorrufen.
17. Wenden Sie sich mit allen Fragen die Service und Reparatur betreffen an Ihren Servicepartner. Somit stellen Sie die Betriebssicherheit des Gerätes sicher.
18. Zum Netzanschluß dieses Gerätes ist eine geprüfte Leitung zu verwenden, Für einen Nennstrom bis 6A und einem Gerätegewicht größer 3kg ist eine Leitung nicht leichter als H05VV-F, 3G, 0.75mm² einzusetzen.

WARRANTIES EXCLUSIVE

IF THE D-LINK PRODUCT DOES NOT OPERATE AS WARRANTED ABOVE, THE CUSTOMER'S SOLE REMEDY SHALL BE, AT D-LINK'S OPTION, REPAIR OR REPLACEMENT. THE FOREGOING WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, EITHER IN FACT OR BY OPERATION OF LAW, STATUTORY OR OTHERWISE, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. D-LINK NEITHER ASSUMES NOR AUTHORIZES ANY OTHER PERSON TO ASSUME FOR IT ANY OTHER LIABILITY IN CONNECTION WITH THE SALE, INSTALLATION MAINTENANCE OR USE OF D-LINK'S PRODUCTS.

D-LINK SHALL NOT BE LIABLE UNDER THIS WARRANTY IF ITS TESTING AND EXAMINATION DISCLOSE THAT THE ALLEGED DEFECT IN THE PRODUCT DOES NOT EXIST OR WAS CAUSED BY THE CUSTOMER'S OR ANY THIRD PERSON'S MISUSE, NEGLIGENCE, IMPROPER INSTALLATION OR TESTING, UNAUTHORIZED ATTEMPTS TO REPAIR, OR ANY OTHER CAUSE BEYOND THE RANGE OF THE INTENDED USE, OR BY ACCIDENT, FIRE, LIGHTNING OR OTHER HAZARD.

LIMITATION OF LIABILITY

IN NO EVENT WILL D-LINK BE LIABLE FOR ANY DAMAGES, INCLUDING LOSS OF DATA, LOSS OF PROFITS, COST OF COVER OR OTHER INCIDENTAL, CONSEQUENTIAL OR INDIRECT DAMAGES ARISING OUT OF THE INSTALLATION, MAINTENANCE, USE, PERFORMANCE, FAILURE OR INTERRUPTION OF A D-LINK PRODUCT, HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY. THIS LIMITATION WILL APPLY EVEN IF D-LINK HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

IF YOU PURCHASED A D-LINK PRODUCT IN THE UNITED STATES, SOME STATES DO NOT ALLOW THE LIMITATION OR EXCLUSION OF LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

Limited Warranty

Hardware:

D-Link warrants each of its hardware products to be free from defects in workmanship and materials under normal use and service for a period commencing on the date of purchase from D-Link or its Authorized Reseller and extending for the length of time stipulated by the Authorized Reseller or D-Link Branch Office nearest to the place of purchase.

This Warranty applies on the condition that the product Registration Card is filled out and returned to a D-Link office within ninety (90) days of purchase. A list of D-Link offices is provided at the back of this manual, together with a copy of the Registration Card.

If the product proves defective within the applicable warranty period, D-Link will provide repair or replacement of the product. D-Link shall have the sole discretion whether to repair or replace, and replacement product may be new or reconditioned. Replacement product shall be of equivalent or better specifications, relative to the defective product, but need not be identical. Any product or part repaired by D-Link pursuant to this warranty shall have a warranty period of not less than 90 days, from date of such repair, irrespective of any earlier expiration of original warranty period. When D-Link provides replacement, then the defective product becomes the property of D-Link.

Warranty service may be obtained by contacting a D-Link office within the applicable warranty period, and requesting a Return Material Authorization (RMA) number. If a Registration Card for the product in question has not been returned to D-Link, then a proof of purchase (such as a copy of the dated purchase invoice) must be provided. If Purchaser's circumstances require special handling of warranty correction, then at the time of requesting RMA number, Purchaser may also propose special procedure as may be suitable to the case.

After an RMA number is issued, the defective product must be packaged securely in the original or other suitable shipping package to ensure that it will not be damaged in transit, and the RMA number must be prominently marked on the outside of the package. The package must be mailed or otherwise shipped to D-Link with all costs of mailing/shipping/insurance prepaid. D-Link shall never be responsible for any software, firmware, information, or memory data of Purchaser contained in, stored on, or integrated with any product returned to D-Link pursuant to this warranty.

Any package returned to D-Link without an RMA number will be rejected and shipped back to Purchaser at Purchaser's expense, and D-Link reserves the right in such a case to levy a reasonable handling charge in addition to mailing or shipping costs.

Software:

Warranty service for software products may be obtained by contacting a D-Link office within the applicable warranty period. A list of D-Link offices is provided at the back of this manual, together with a copy of the Registration Card. If a Registration Card for the product in question has not been returned to a D-Link office, then a proof of purchase (such as a copy of the dated purchase invoice) must be provided when requesting warranty service. The term "purchase" in this software warranty refers to the purchase transaction and resulting license to use such software.

D-Link warrants that its software products will perform in substantial conformance with the applicable product documentation provided by D-Link with such software product, for a period of ninety (90) days from the date of purchase from D-Link or its Authorized Reseller. D-Link warrants the magnetic media, on which D-Link provides its software product, against failure during the same warranty period. This warranty applies to purchased software, and to replacement software provided by D-Link pursuant to this warranty, but shall not apply to any update or replacement which may be provided for download via the Internet, or to any update which may otherwise be provided free of charge.

D-Link's sole obligation under this software warranty shall be to replace any defective software product with product which substantially conforms to D-Link's applicable product documentation. Purchaser assumes responsibility for the selection of appropriate application and system/platform software and associated reference materials. D-Link makes no warranty that its software products will work in combination with any hardware, or any application or system/platform software product provided by any third party, excepting only such products as are expressly represented, in D-Link's applicable product documentation as being compatible. D-Link's obligation under this warranty shall be a reasonable effort to provide compatibility, but D-Link shall have no obligation to provide compatibility when there is fault in the third-party hardware or software. D-Link makes no warranty that operation of its software products will be uninterrupted or absolutely error-free, and no warranty that all defects in the software product, within or without the scope of D-Link's applicable product documentation, will be corrected.



Limited Warranty (USA Only)

Subject to the terms and conditions set forth herein, D-Link Systems, Inc. ("D-Link") provides this Limited warranty for its product only to the person or entity that originally purchased the product from:

- D-Link or its authorized reseller or distributor and
- Products purchased and delivered within the fifty states of the United States, the District of Columbia, U.S. Possessions or Protectorates, and U.S. Military Installations, addresses with an APO or FPO.

Limited Warranty: D-Link warrants that the hardware portion of the D-Link products described below will be free from material defects in workmanship and materials from the date of original retail purchase of the product, for the period set forth below applicable to the product type ("Warranty Period"), except as otherwise stated herein.

5-Year Limited Warranty for the Product(s) is defined as follows:

- Hardware (excluding power supplies and fans) Five (5) Years
- Power Supplies and Fans Three (3) Year
- Spare parts and spare kits Ninety (90) days

D-Link's sole obligation shall be to repair or replace the defective Hardware during the Warranty Period at no charge to the original owner or to refund at D-Link's sole discretion. Such repair or replacement will be rendered by D-Link at an Authorized D-Link Service Office. The replacement Hardware need not be new or have an identical make, model or part. D-Link may in its sole discretion replace the defective Hardware (or any part thereof) with any reconditioned product that D-Link reasonably determines is substantially equivalent (or superior) in all material respects to the defective Hardware. Repaired or replacement Hardware will be warranted for the remainder of the original Warranty Period from the date of original retail purchase. If a material defect is incapable of correction, or if D-Link determines in its sole discretion that it is not practical to repair or replace the defective Hardware, the price paid by the original purchaser for the defective Hardware will be refunded by D-Link upon return to D-Link of the defective Hardware. All Hardware (or part thereof) that is replaced by D-Link, or for which the purchase price is refunded, shall become the property of D-Link upon replacement or refund.

Limited Software Warranty: D-Link warrants that the software portion of the product ("Software") will substantially conform to D-Link's then current functional specifications for the Software, as set forth in the applicable documentation, from the date of original retail purchase of the Software for a period of ninety (90) days ("Warranty Period"), provided that the Software is properly installed on approved hardware and operated as contemplated in its documentation. D-Link further warrants that, during the Warranty Period, the magnetic media on which D-Link delivers the Software will be free of physical defects. D-Link's sole obligation shall be to replace the non-conforming Software (or defective media) with software that substantially conforms to D-Link's functional specifications for the Software or to refund at D-Link's sole discretion. Except as otherwise agreed by D-Link in writing, the replacement Software is provided only to the original licensee, and is subject to the terms and conditions of the license granted by D-Link for the Software. Software will be warranted for the remainder of the original Warranty Period from the date of original retail purchase. If a material non-conformance is incapable of correction, or if D-Link determines in its sole discretion that it is not practical to replace the non-conforming Software, the price paid by the original licensee for the non-conforming Software will be refunded by D-Link; provided that the non-conforming Software (and all copies thereof) is first returned to D-Link. The license granted respecting any Software for which a refund is given automatically terminates.

Non-Applicability of Warranty: The Limited Warranty provided hereunder for hardware and software of D-Link's products, will not be applied to and does not cover any product purchased through the inventory clearance or liquidation sale or other sales in which D-Link, the sellers, or the liquidators expressly disclaim their warranty obligation pertaining to the product and in that case, the product is being sold "As-Is" without any warranty whatsoever including, without limitation, the Limited Warranty as described herein, notwithstanding anything stated herein to the contrary.

Submitting A Claim: Any claim under this limited warranty must be submitted in writing before the end of the Warranty Period to an Authorized D-Link Service Office.

- The customer must submit as part of the claim a written description of the Hardware defect or Software nonconformance in sufficient detail to allow D-Link to confirm the same.
- The original product owner must obtain a Return Material Authorization ("RMA") number from the Authorized D-Link Service Office and, if requested, provide written proof of purchase of the product (such as a copy of the dated purchase invoice for the product) before the warranty service is provided.
- After an RMA number is issued, the defective product must be packaged securely in the original or other suitable shipping package to ensure that it will not be damaged in transit, and the RMA number must be prominently marked on the outside of the package. Do not include any manuals or accessories in the shipping package. D-Link will only replace the defective portion of the Product and will not ship back any accessories.

- The customer is responsible for all shipping charges to D-Link. No Charge on Delivery ("COD") is allowed. Products sent COD will either be rejected by D-Link or become the property of D-Link. Products should be fully insured by the customer and shipped to D-Link Systems, Inc., 53 Discovery Drive, Irvine, CA 92618. D-Link will not be held responsible for any packages that are lost in transit to D-Link. The repaired or replaced packages will be shipped via UPS Ground or any common carrier selected by D-Link, with shipping charges prepaid. Expedited shipping is available if shipping charges are prepaid by the customer.

D-Link may reject or return any product that is not packaged and shipped in strict compliance with the foregoing requirements, or for which an RMA number is not visible from the outside of the package. The product owner agrees to pay D-Link's reasonable handling and return shipping charges for any product that is not packaged and shipped in accordance with the foregoing requirements, or that is determined by D-Link not to be defective or non-conforming.

What Is Not Covered: This limited warranty provided by D-Link does not cover: Products, if in D-Link's judgment, have been subjected to abuse, accident, alteration, modification, tampering, negligence, misuse, faulty installation, lack of reasonable care, repair or service in any way that is not contemplated in the documentation for the product, or if the model or serial number has been altered, tampered with, defaced or removed; Initial installation, installation and removal of the product for repair, and shipping costs; Operational adjustments covered in the operating manual for the product, and normal maintenance; Damage that occurs in shipment, due to act of God, failures due to power surge, and cosmetic damage; Any hardware, software, firmware or other products or services provided by anyone other than D-Link; Products that have been purchased from inventory clearance or liquidation sales or other sales in which D-Link, the sellers, or the liquidators expressly disclaim their warranty obligation pertaining to the product. Repair by anyone other than D-Link or an Authorized D-Link Service Office will void this Warranty.

Disclaimer of Other Warranties: EXCEPT FOR THE LIMITED WARRANTY SPECIFIED HEREIN, THE PRODUCT IS PROVIDED "AS-IS" WITHOUT ANY WARRANTY OF ANY KIND WHATSOEVER INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT. IF ANY IMPLIED WARRANTY CANNOT BE DISCLAIMED IN ANY TERRITORY WHERE A PRODUCT IS SOLD, THE DURATION OF SUCH IMPLIED WARRANTY SHALL BE LIMITED TO NINETY (90) DAYS. EXCEPT AS EXPRESSLY COVERED UNDER THE LIMITED WARRANTY PROVIDED HEREIN, THE ENTIRE RISK AS TO THE QUALITY, SELECTION AND PERFORMANCE OF THE PRODUCT IS WITH THE PURCHASER OF THE PRODUCT.

Limitation of Liability: TO THE MAXIMUM EXTENT PERMITTED BY LAW, D-LINK IS NOT LIABLE UNDER ANY CONTRACT, NEGLIGENCE, STRICT LIABILITY OR OTHER LEGAL OR EQUITABLE THEORY FOR ANY LOSS OF USE OF THE PRODUCT, INCONVENIENCE OR DAMAGES OF ANY CHARACTER, WHETHER DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL (INCLUDING, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF GOODWILL, LOSS OF REVENUE OR PROFIT, WORK STOPPAGE, COMPUTER FAILURE OR MALFUNCTION, FAILURE OF OTHER EQUIPMENT OR COMPUTER PROGRAMS TO WHICH D-LINK'S PRODUCT IS CONNECTED WITH, LOSS OF INFORMATION OR DATA CONTAINED IN, STORED ON, OR INTEGRATED WITH ANY PRODUCT RETURNED TO D-LINK FOR WARRANTY SERVICE) RESULTING FROM THE USE OF THE PRODUCT, RELATING TO WARRANTY SERVICE, OR ARISING OUT OF ANY BREACH OF THIS LIMITED WARRANTY, EVEN IF D-LINK HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE SOLE REMEDY FOR A BREACH OF THE FOREGOING LIMITED WARRANTY IS REPAIR, REPLACEMENT OR REFUND OF THE DEFECTIVE OR NON-CONFORMING PRODUCT. THE MAXIMUM LIABILITY OF D-LINK UNDER THIS WARRANTY IS LIMITED TO THE PURCHASE PRICE OF THE PRODUCT COVERED BY THE WARRANTY. THE FOREGOING EXPRESS WRITTEN WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ANY OTHER WARRANTIES OR REMEDIES, EXPRESS, IMPLIED OR STATUTORY.

Governing Law: This Limited Warranty shall be governed by the laws of the state of California. Some states do not allow exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the foregoing limitations and exclusions may not apply. This limited warranty provides specific legal rights and the product owner may also have other rights which vary from state to state

For detailed warranty outside the United States, please contact corresponding local D-Link office.

Register online your D-Link product at <http://support.dlink.com/register/>

D-Link Offices for Registration and Warranty Service

The product's Registration Card, provided at the back of this manual, must be sent to a D-Link office. To obtain an RMA number for warranty service as to a hardware product, or to obtain warranty service as to a software product, contact the D-Link office nearest you. An address/telephone/fax/e-mail/Web site list of D-Link offices is provided in the back of this manual.

Trademarks

Copyright ©2004 D-Link Corporation.

Contents subject to change without prior notice.

D-Link is a registered trademark of D-Link Corporation/D-Link Systems, Inc. All other trademarks belong to their respective proprietors.

Copyright Statement

No part of this publication may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from D-Link Corporation/D-Link Systems Inc., as stipulated by the United States Copyright Act of 1976.

FCC Warning

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with this user's guide, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

CE Mark Warning

This is a Class A product. In a domestic environment, this product may cause radio interference in which case the user may be required to take adequate measures.

VCCI Warning

注意

この装置は、情報処理装置等電波障害自主規制協議会(VCCI)の基準に基づく第一種情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

Table of Contents

Introduction	1
Using the Console CLI	4
Command Syntax	9
Basic Switch Commands	11
Switch Port Commands	25
Port Security Commands	29
Network Management (SNMP) Commands	33
Switch Utility Commands	56
Network Monitoring Commands	62
Multiple Spanning Tree Protocol (MSTP) Commands	78
Forwarding Database Commands	92
Broadcast Storm Control Commands	102
QoS Commands	104
Port Mirroring Commands	117
VLAN Commands	122
Link Aggregation Commands	132
IP Multinetting Commands	138
IGMP Commands	144
IGMP Snooping Commands	147
MAC Notification Commands	157
Access Authentication Control Commands	162
SSH Commands	188
SSL Commands	197
802.1X Commands	204
Access Control List (ACL) Commands	226
Traffic Segmentation Commands	236
Stacking Commands	239

D-Link Single IP Management Commands.....	243
Time and SNTP Commands	255
ARP Commands	262
VRRP Commands	266
Routing Table Commands	273
Route Redistribution Commands	277
BOOTP Relay Commands	284
DNS Relay Commands	288
RIP Commands	293
DVMRP Commands.....	297
PIM Commands.....	303
IP Multicasting Commands	307
MD5 Configuration Commands	310
OSPF Configuration Commands	313
Route Preference Commands	336
Jumbo Frame Commands	340
Command History List	342
Technical Specifications	345

INTRODUCTION

The Switch can be managed through the Switch's serial port, Telnet, or the Web-based management agent. The Command Line Interface (CLI) can be used to configure and manage the Switch via the serial port or Telnet interfaces.

This manual provides a reference for all of the commands contained in the CLI. Configuration and management of the Switch via the Web-based management agent is discussed in the User's Guide.

Accessing the Switch via the Serial Port

The Switch's serial port's default settings are as follows:

- **115200 baud**
- **no parity**
- **8 data bits**
- **1 stop bit**

A computer running a terminal emulation program capable of emulating a VT-100 terminal and a serial port configured as above is then connected to the Switch's serial port via an RS-232 DB-9 cable.

With the serial port properly connected to a management computer, the following screen should be visible. If this screen does not appear, try pressing Ctrl+r to refresh the console screen.

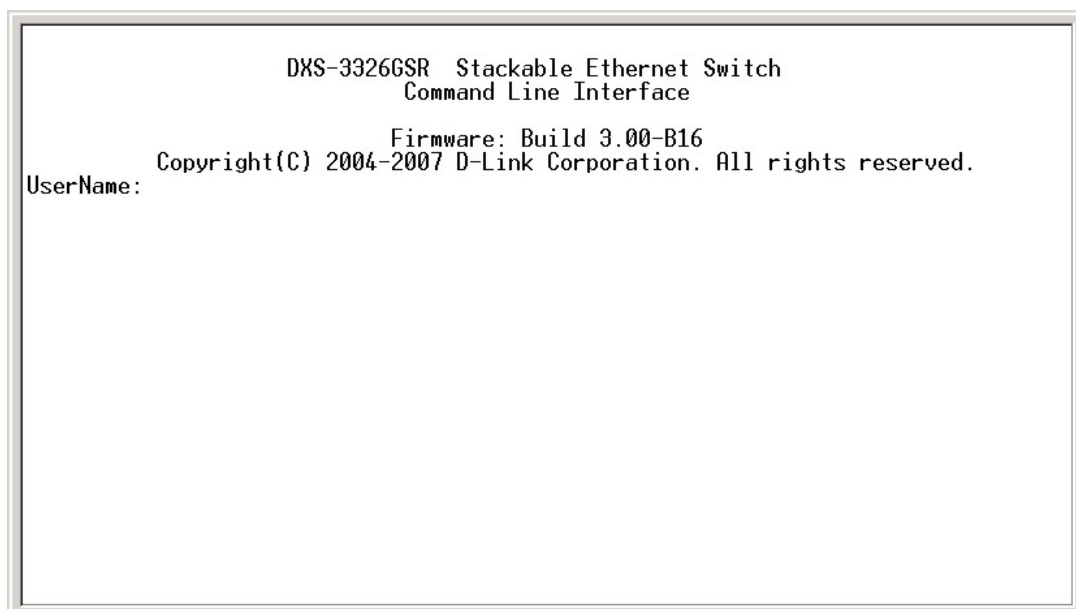


Figure 1-1. Initial CLI screen

There is no initial username or password. Just press the **Enter** key twice to display the CLI input cursor – **DXS-3326GSR:4#**. This is the command line where all commands are input.

Setting the Switch's IP Address

Each switch must be assigned its own IP Address, which is used for communication with an SNMP network manager or other TCP/IP application (for example BOOTP, TFTP). The Switch's default IP address is 10.90.90.90. You can change the default switch IP address to meet the specification of your networking address scheme.

The Switch is also assigned a unique MAC address by the factory. This MAC address cannot be changed, and can be found on the initial boot console screen – shown below.

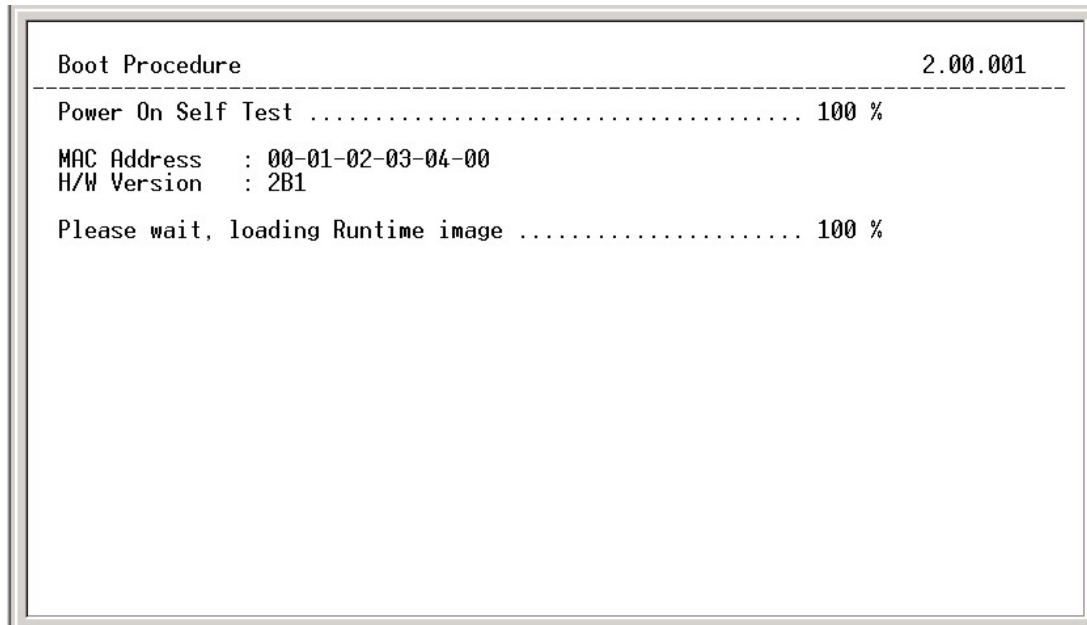


Figure 1-2. Boot Screen

The Switch's MAC address can also be found in the Web management program on the Switch Information (Basic Settings) window on the Configuration menu.

The IP address for the Switch must be set before it can be managed with the Web-based manager. The switch IP address can be automatically set using BOOTP or DHCP protocols, in which case the actual address assigned to the Switch must be known.

The IP address may be set using the Command Line Interface (CLI) over the console serial port as follows:

1. Starting at the command line prompt, enter the commands **config ipif System ipaddress xxx.xxx.xxx.xxx/yyy.yyy.yyy.yyy**. Where the **x**'s represent the IP address to be assigned to the IP interface named **System** and the **y**'s represent the corresponding subnet mask.
2. Alternatively, you can enter **config ipif System ipaddress xxx.xxx.xxx.xxx/z**. Where the **x**'s represent the IP address to be assigned to the IP interface named **System** and the **z** represents the corresponding number of subnets in CIDR notation.

The IP interface named **System** on the Switch can be assigned an IP address and subnet mask which can then be used to connect a management station to the Switch's Telnet or Web-based management agent.

```
DXS-3326GSR Stackable Ethernet Switch
Command Line Interface

Firmware: Build 3.00-B16
Copyright(C) 2004-2007 D-Link Corporation. All rights reserved.
UserName:
PassWord:

DXS-3326GSR:4#config ipif System ipaddress 10.53.13.144/255.0.0.0
Command: config ipif System ipaddress 10.53.13.144/8

Success.

DXS-3326GSR:4#
```

Figure 1-3. Assigning an IP Address

In the above example, the Switch was assigned an IP address of 10.53.13.144/8 with a subnet mask of 255.0.0.0. The system message **Success** indicates that the command was executed successfully. The Switch can now be configured and managed via Telnet and the CLI or via the Web-based management agent using the above IP address to connect to the Switch.

USING THE CONSOLE CLI

The DXS-3326GSR supports a console management interface that allows the user to connect to the Switch's management agent via a serial port and a terminal or a computer running a terminal emulation program. The console can also be used over the network using the TCP/IP Telnet protocol. The console program can be used to configure the Switch to use an SNMP-based network management software over the network.

This chapter describes how to use the console interface to access the Switch, change its settings, and monitor its operation.



Note: Switch configuration settings are saved to non-volatile RAM using the `save` command. The current configuration will then be retained in the Switch's NV-RAM, and reloaded when the Switch is rebooted. If the Switch is rebooted without using the `save` command, the last configuration saved to NV-RAM will be loaded.

Connecting to the Switch

The console interface is used by connecting the Switch to a VT100-compatible terminal or a computer running an ordinary terminal emulator program (e.g., the **HyperTerminal** program included with the Windows operating system) using an RS-232C serial cable. Your terminal parameters will need to be set to:

- **VT-100 compatible**
- **115200 baud**
- **8 data bits**
- **No parity**
- **One stop bit**
- **No flow control**

You can also access the same functions over a Telnet interface. Once you have set an IP address for your Switch, you can use a Telnet program (in VT-100 compatible terminal mode) to access and control the Switch. All of the screens are identical, whether accessed from the console port or from a Telnet interface.

After the Switch reboots and you have logged in, the console looks like this:

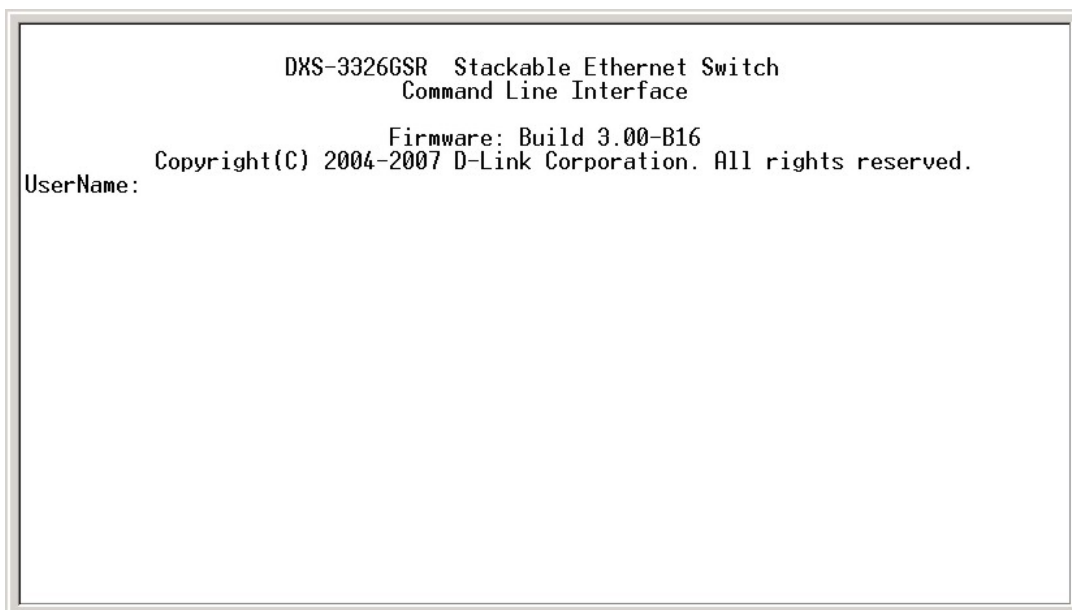


Figure 2-1. Initial Console Screen

Commands are entered at the command prompt, **DXS-3326GSR:4#**.

There are a number of helpful features included in the CLI. Entering the ? command will display a list of all of the top-level commands.

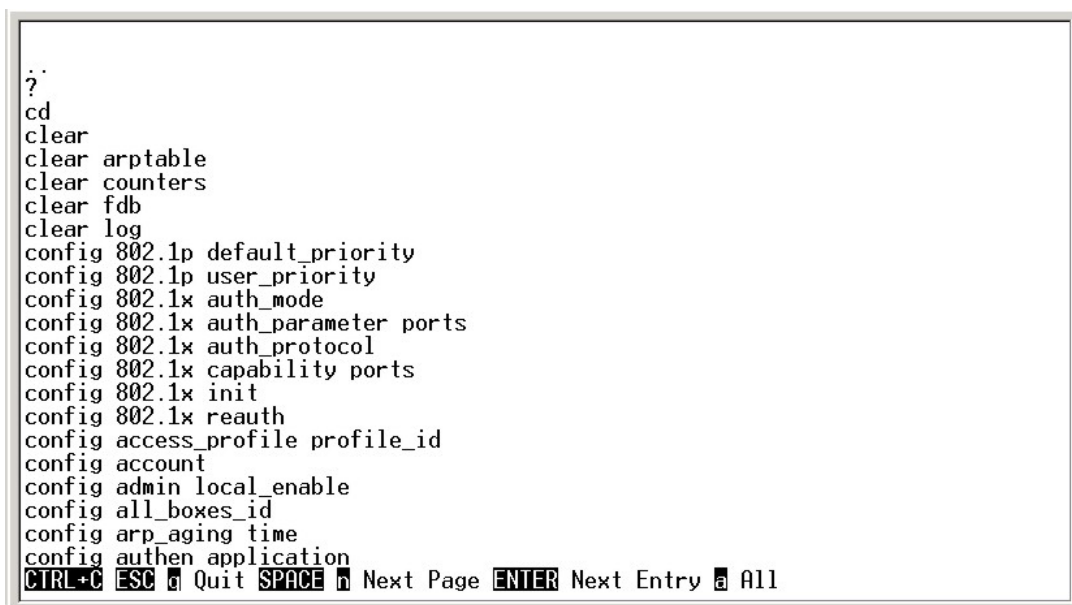


Figure 2-2. The ? Command

When you enter a command without its required parameters, the CLI will prompt you with a **Next possible completions:** message.




```
DXS-3326GSR:4#config account
Command: config account
Next possible completions:
<username>
DXS-3326GSR:4#
```

Figure 2-3. Example Command Parameter Help

In this case, the command **config account** was entered with the parameter **<username>**. The CLI will then prompt you to enter the **<username>** with the message, **Next possible completions:**. Every command in the CLI has this feature, and complex commands have several layers of parameter prompting.

In addition, after typing any given command plus one space, you can see all of the next possible sub-commands, in sequential order, by repeatedly pressing the **Tab** key.

To re-enter the previous command at the command prompt, press the up arrow cursor key. The previous command will appear at the command prompt.

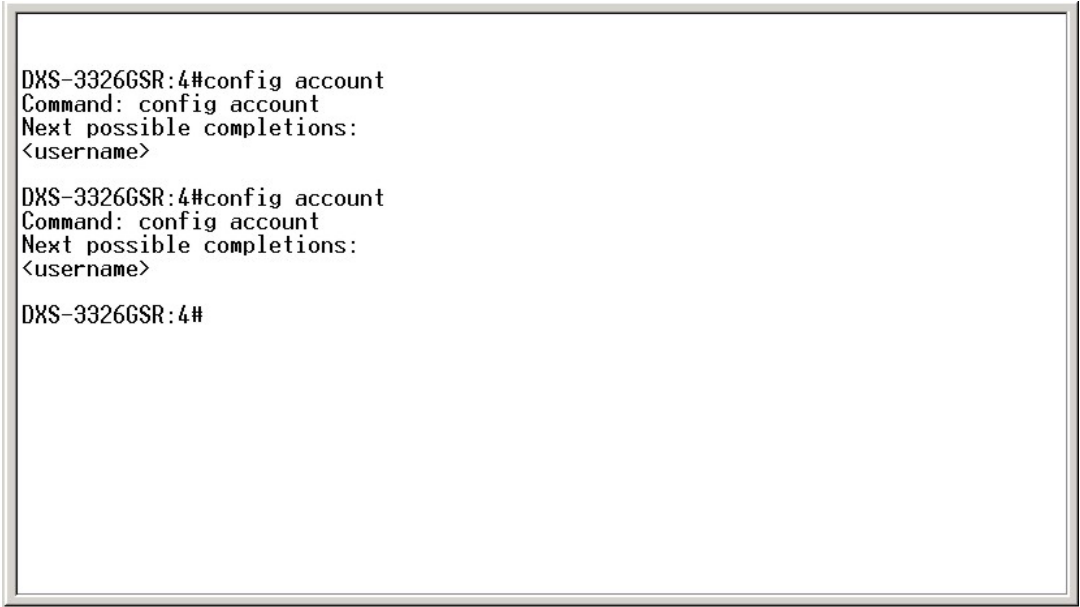

```
DXS-3326GSR:4#config account
Command: config account
Next possible completions:
<username>

DXS-3326GSR:4#config account
Command: config account
Next possible completions:
<username>

DXS-3326GSR:4#
```

Figure 2-4. Using the Up Arrow to Re-enter a Command

In the above example, the command **config account** was entered without the required parameter **<username>**, the CLI returned the **Next possible completions: <username>** prompt. The up arrow cursor control key was pressed to re-enter the previous command (**config account**) at the command prompt. Now the appropriate User name can be entered and the **config account** command re-executed.

All commands in the CLI function in this way. In addition, the syntax of the help prompts are the same as presented in this manual – angle brackets <> indicate a numerical value or character string, braces { } indicate optional parameters or a choice of parameters, and brackets [] indicate required parameters.

If a command is entered that is unrecognized by the CLI, the top-level commands will be displayed under the **Available commands:** prompt.

```

DXS-3326GSR:4#the
Available commands:
..
create          delete          clear          config
enable          login           disable        download
reboot          reconfig        logout         ping
show            traceroute      reset          save
upload

DXS-3326GSR:4#

```

Figure 2-5. The Next Available Commands Prompt

The top-level commands consist of commands such as **show** or **config**. Most of these commands require one or more parameters to narrow the top-level command. This is equivalent to **show** what? or **config** what? Where the what? is the next parameter.

For example, if you enter the **show** command with no additional parameters, the CLI will then display all of the possible next parameters.

```

DXS-3326GSR:4#show
Command: show
Next possible completions:
802.1p          802.1x          access_profile  account
acct_client     arpentry        auth_client     auth_diagnostics
auth_session_statistics
auth_enable     authen_login    auth_statistics authen
bootp_relay     command_history authen_policy   bandwidth_control
dnsmr           dvmp             config          device_status
gvrp            hol_prevention  error           fdb
ipfdb           ipif             igmp            igmp_snooping
jumbo_frame     lacp_port       ipmc            iproute
mac_notification md5              link_aggregation log
ospf            packet          mirror          multicast_fdb
ports           radius           pim             port_security
router_ports    scheduling       rip             route
serial_port     session         scheduling_mechanism
snmp            ssh             sim             snmp
stp             switch          ssl             stack_information
time           traffic         switch_mode     syslog
trusted_host    utilization     traffic_segmentation
vrrp            vrrp

DXS-3326GSR:4#

```

Figure 2-6. Next possible completions: Show Command

In the above example, all of the possible next parameters for the **show** command are displayed. At the next command prompt, the up arrow was used to re-enter the **show** command, followed by the **account** parameter. The CLI then displays the user accounts configured on the Switch.

COMMAND SYNTAX

The following symbols are used to describe how command entries are made and values and arguments are specified in this manual. The online help contained in the CLI and available through the console interface uses the same syntax.



Note: All commands are case-sensitive. Be sure to disable Caps Lock or any other unwanted function that changes text case.

<angle brackets>	
Purpose	Encloses a variable or value that must be specified.
Syntax	create ipif <ipif_name> vlan <vlan_name 32> ipaddress <network_address>
Description	In the above syntax example, you must supply an IP interface name in the <ipif_name> space, a VLAN name in the <vlan_name 32> space, and the network address in the <network_address> space. Do not type the angle brackets.
Example Command	create ipif Engineering vlan Design ipaddress 10.24.22.5/255.0.0.0

[square brackets]	
Purpose	Encloses a required value or set of required arguments. One value or argument can be specified.
Syntax	create account [admin user]
Description	In the above syntax example, you must specify either an admin or a user level account to be created. Do not type the square brackets.
Example Command	create account admin

vertical bar	
Purpose	Separates two or more mutually exclusive items in a list, one of which must be entered.
Syntax	show snmp [community detail]
Description	In the above syntax example, you must specify either community , or detail . Do not type the backslash.
Example Command	show snmp community

{braces}	
Purpose	Encloses an optional value or set of optional arguments.
Syntax	reset {[config system]}
Description	In the above syntax example, you have the option to specify config or system . It is not necessary to specify either optional value, however the effect of the system reset is dependent on which, if any, value is specified. Therefore, with this example there are three possible outcomes of performing a system reset. See the following chapter, Basic Commands for more details about the reset command.
Example command	reset config

Line Editing Key Usage

Delete	Deletes the character under the cursor and then shifts the remaining characters in the line to the left.
Backspace	Deletes the character to the left of the cursor and shifts the remaining characters in the line to the left.
Left Arrow	Moves the cursor to the left.
Right Arrow	Moves the cursor to the right.
Up Arrow	Repeat the previously entered command. Each time the up arrow is pressed, the command previous to that displayed appears. This way it is possible to review the command history for the current session. Use the down arrow to progress sequentially forward through the command history list.
Down Arrow	The down arrow will display the next command in the command history entered in the current session. This displays each command sequentially as it was entered. Use the up arrow to review previous commands.
Tab	Shifts the cursor to the next field to the left.

Multiple Page Display Control Keys

Space	Displays the next page.
CTRL+c	Stops the display of remaining pages when multiple pages are to be displayed.
ESC	Stops the display of remaining pages when multiple pages are to be displayed.
n	Displays the next page.
p	Displays the previous page.
q	Stops the display of remaining pages when multiple pages are to be displayed.
r	Refreshes the pages currently displayed.
a	Displays the remaining pages without pausing between pages.
Enter	Displays the next line or table entry.

BASIC SWITCH COMMANDS

The basic switch commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
create account	[admin user] <username 15>
config account	<username 15>
show account	
delete account	<username 15>
show config	[current_config config_in_NVRAM]
show session	
show switch	
show switch_mode	
show device status	
show serial_port	
config serial_port	{baud_rate [115200] auto_logout [never 2_minutes 5_minutes 10_minutes 15_minutes]}
enable clipaging	
disable clipaging	
enable telnet	<tcp_port_number 1-65535>
disable telnet	
enable web	<tcp_port_number 1-65535>
disable web	
save	[log all]
reboot	
reset	{[config system]}
login	
logout	

Each command is listed, in detail, in the following sections.

create account

Purpose	Used to create user accounts
Syntax	create [admin user] <username>
Description	The create account command is used to create user accounts that consist of a username of 1 to 15 characters and a password of 0 to 15 characters. Up to 8 user accounts can be created.
Parameters	<i>Admin</i> <username> <i>User</i> <username>
Restrictions	Only Administrator-level users can issue this command. Usernames can be between 1 and 15 characters.

create account

Passwords can be between 0 and 15 characters.

Example usage:

To create an administrator-level user account with the username “dlink”.

```
DXS-3326GSR:4#create account admin dlink
Command: create account admin dlink

Enter a case-sensitive new password:****
Enter the new password again for confirmation:****

Success.

DXS-3326GSR:4#
```

config account

Purpose	Used to configure user accounts
Syntax	config account <username>
Description	The config account command configures a user account that has been created using the create account command.
Parameters	<username>
Restrictions	Only Administrator-level users can issue this command. Usernames can be between 1 and 15 characters. Passwords can be between 0 15 characters.

Example usage:

To configure the user password of “dlink” account:

```
DXS-3326GSR:4#config account dlink
Command: config account dlink

Enter a old password:****
Enter a case-sensitive new password:****
Enter the new password again for confirmation:****
Success.

DXS-3326GSR:4#
```

show account

Purpose	Used to display user accounts
Syntax	show account
Description	Displays all user accounts created on the Switch. Up to 8 user accounts can exist on the Switch at one time.
Parameters	None.
Restrictions	None.

Example usage:

To display the accounts that have been created:

```
DXS-3326GSR:4#show account
```

```
Command: show account
```

```
Current Accounts:
```

```
Username      Access Level
```

```
-----
```

```
dlink         Admin
```

```
DXS-3326GSR:4#
```

delete account

Purpose	Used to delete an existing user account
Syntax	delete account <username>
Description	The delete account command deletes a user account that has been created using the create account command.
Parameters	<username>
Restrictions	Only Administrator-level users can issue this command.

Example usage:

To delete the user account "System":

```
DXS-3326GSR:4#delete account System
```

```
Command: delete account System
```

```
Success.
```

```
DXS-3326GSR:4#
```

show config

Purpose	Used to display a list of configuration commands entered into the Switch.
Syntax	show config [current_config config_in_NVRAM]
Description	This command displays a list of configuration commands entered into the Switch.
Parameters	<i>current_config</i> – Entering this parameter will display configurations entered without being saved to NVRAM. <i>config_in_NVRAM</i> - Entering this parameter will display configurations entered and saved to NVRAM.
Restrictions	None.

Example usage:

To view configurations entered on the Switch that were saved to NVRAM:

Command: show config config_in_NVRAM

```
#-----
#
#           DXS-3326GSR Configuration
#
#           Firmware: Build 3.00-B16
#           Copyright(C) 2004-2007 Corporation. All rights reserved.
#-----

# BASIC

config serial_port baud_rate 115200 auto_logout never
enable telnet 23
enable web 80
enable clipaging

# STORM

config traffic control 1:1-1:26 broadcast disable multicast disable dlf disable
threshold 128
config traffic control 2:1-2:24 broadcast disable multicast disable dlf disable

CTRL+C ESC q Quit SPACE n Next Page ENTER Next Entry a All
```

show session

Purpose	Used to display a list of currently logged-in users.
Syntax	show session
Description	This command displays a list of all the users that are logged-in at the time the command is issued.
Parameters	None
Restrictions	None.

Example usage:

To display the way that the users logged in:

```
DXS-3326GSR:4#show session
Command: show session

ID   Live Time   From           Level  Name
--   -
*8   03:36:27   Serial Port    4      Anonymous

Total Entries: 1
```

show switch

Purpose	Used to display information about the Switch.
Syntax	show switch
Description	This command displays information about the Switch.
Parameters	None.
Restrictions	None.

Example usage:

To display the Switch information:

```
DXS-3326GSR:4#show switch
Command: show switch

Device Type       : DXS-3326GSR Stackable Ethernet Switch
Unit ID           : 1
MAC Address       : DA-10-21-00-00-01
IP Address        : 10.41.44.22 (Manual)
VLAN Name         : default
Subnet Mask       : 255.0.0.0
```

```

Default Gateway      : 0.0.0.0
Boot PROM Version   : Build 2.00-B04
Firmware Version    : Build 3.00-B16
Hardware Version    : 4A1
Device S/N         :
System Name        : DXS-3326GSR_#3
System Location    : 7th_flr_east_cabinet
System Contact     : Julius_Erving_212-555-6666
Spanning Tree      : Disabled
GVRP               : Disabled
IGMP Snooping      : Disabled
RIP                : Disabled
DVMRP              : Disabled
PIM-DM             : Disabled
OSPF               : Disabled
TELNET             : Enabled (TCP 23)
WEB                : Enabled (TCP 80)
RMON               : Enabled
802.1x             : Disabled
Jumbo Frame        : Off
Clipaging          : Enabled
MAC Notification    : Disabled
Port Mirror        : Disabled
SNTP               : Disabled
Bootp Relay        : Disabled
DNSR Status        : Disabled
VRRP               : Disabled
HOL Prevention State : Enabled
Syslog Global State : Disabled
Single IP Management : Disabled
Dual Image         : Supported

```

DXS-3326GSR:4#

show switch_mode

Purpose	Used to display the current switch mode.
Syntax	show switch_mode
Description	This command displays the current mode of operation of the Switch.
Parameters	None.
Restrictions	None

Example usage:

To view the current switch mode:

```
DXS-3326GSR:4#show switch_mode
```

```
Command: show switch_mode
```

```
Switch is in Layer 3 mode
```

```
DXS-3326GSR:4#
```

show device_status

Purpose	Used to display the current status of the hardware of the Switch.
Syntax	show device_status
Description	This command displays the current status of the Switch's elements.
Parameters	None.
Restrictions	None

Example usage:

To show the current hardware status of the Switch:

```
DXS-3326GSR:4#show device_status
```

```
Command: show device_status
```

ID	Internal Power	External power	Side Fan	Back Fan
---	-----	-----	-----	-----
2	Active	Fail	OK	OK

```
DXS-3326GSR:4#
```

show serial_port

Purpose	Used to display the current serial port settings.
Syntax	show serial_port
Description	This command displays the current serial port settings.
Parameters	None.
Restrictions	None

Example usage:

To display the serial port setting:

```
DXS-3326GSR:4#show serial_port
```

```
Command: show serial_port
```

```
Baud Rate      : 115200
```

```
Data Bits      : 8
```

```
Parity Bits     : None
```

```
Stop Bits      : 1
```

```
Auto-Logout    : 10 mins
```

```
DXS-3326GSR:4#
```

config serial_port

Purpose	Used to configure the serial port.
Syntax	config serial_port {baud_rate [115200] auto_logout [never 2_minutes 5_minutes 10_minutes 15_minutes]}
Description	This command is used to configure the serial port's baud rate and auto logout settings.
Parameters	<i>baud_rate [115200]</i> – The serial bit rate that will be used to communicate with the management host. This field is fixed at 115200. <i>never</i> – No time limit on the length of time the console can be open with no user input. <i>2_minutes</i> – The console will log out the current user if there is no user input for 2 minutes. <i>5_minutes</i> – The console will log out the current user if there is no user input for 5 minutes. <i>10_minutes</i> – The console will log out the current user if there is no user input for 10 minutes. <i>15_minutes</i> – The console will log out the current user if there is no user input for 15 minutes.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To configure baud rate:

DXS-3326GSR:4#config serial_port baud_rate 115200

Command: config serial_port baud_rate 115200

Success.

DXS-3326GSR:4#

enable clipaging

Purpose	Used to pause the scrolling of the console screen when the show command displays more than one page.
Syntax	enable clipaging
Description	This command is used when issuing the show command which causes the console screen to rapidly scroll through several pages. This command will cause the console to pause at the end of each page. The default setting is enabled.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To enable pausing of the screen display when the show command output reaches the end of the page:

DXS-3326GSR:4#enable clipaging

Command: enable clipaging

Success.

DXS-3326GSR:4#

disable clipaging

Purpose	Used to disable the pausing of the console screen scrolling at the end of each page when the show command displays more than one screen of information.
Syntax	disable clipaging
Description	This command is used to disable the pausing of the console screen at the end of each page when the show command would display more than one screen of information.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To disable pausing of the screen display when show command output reaches the end of the page:

```
DXS-3326GSR:4#disable clipaging
```

```
Command: disable clipaging
```

```
Success.
```

```
DXS-3326GSR:4#
```

enable telnet

Purpose	Used to enable communication with and management of the Switch using the Telnet protocol.
Syntax	enable telnet <tcp_port_number 1-65535>
Description	This command is used to enable the Telnet protocol on the Switch. The user can specify the TCP or UDP port number the Switch will use to listen for Telnet requests.
Parameters	<i><tcp_port_number 1-65535></i> – The TCP port number. TCP ports are numbered between 1 and 65535. The “well-known” TCP port for the Telnet protocol is 23.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To enable Telnet and configure port number:

```
DXS-3326GSR:4#enable telnet 23
```

```
Command: enable telnet 23
```

```
Success.
```

```
DXS-3326GSR:4#
```

disable telnet

Purpose	Used to disable the Telnet protocol on the Switch.
Syntax	disable telnet
Description	This command is used to disable the Telnet protocol on the Switch.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To disable the Telnet protocol on the Switch:

```
DXS-3326GSR:4#disable telnet
```

Command: disable telnet

Success.

```
DXS-3326GSR:4#
```

enable web

Purpose	Used to enable the HTTP-based management software on the Switch.
Syntax	enable web <tcp_port_number 1-65535>
Description	This command is used to enable the Web-based management software on the Switch. The user can specify the TCP port number the Switch will use to listen for Telnet requests.
Parameters	<i><tcp_port_number 1-65535></i> – The TCP port number. TCP ports are numbered between 1 and 65535. The “well-known” port for the Web-based management software is 80.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To enable HTTP and configure port number:

```
DXS-3326GSR:4#enable web 80
```

Command: enable web 80

Note: SSL will be disabled if web is enabled.

Success.

```
DXS-3326GSR:4#
```

disable web

Purpose	Used to disable the HTTP-based management software on the Switch.
Syntax	disable web
Description	This command disables the Web-based management software on the Switch.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To disable HTTP:

```
DXS-3326GSR:4#disable web
```

```
Command: disable web
```

```
Success.
```

```
DXS-3326GSR:4#
```

save

Purpose	Used to save changes in the Switch's configuration to non-volatile RAM.
Syntax	save [log all]
Description	This command is used to enter the current switch configuration into non-volatile RAM. The saved switch configuration will be loaded into the Switch's memory each time the Switch is restarted.
Parameters	Entering just the save command will save only the Switch configuration to NV-Ram <i>log</i> – Entering the <i>log</i> parameter will save only the log file to NV-RAM. <i>all</i> - Entering the <i>all</i> command will save both the log file and the Switch configuration to NV-RAM.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To save the Switch's current configuration to non-volatile RAM:

```
DXS-3326GSR:4#save
```

```
Command: save
```

```
Do you want to change current box id from AUTO mode to STATIC mode? (y/n) n
```

```
Saving all configurations to NV-RAM... Done.
```

```
DXS-3326GSR:4#
```

reboot

Purpose	Used to restart the Switch.
Syntax	reboot

reboot

Description	This command is used to restart the Switch.
Parameters	None.
Restrictions	None.

Example usage:

To restart the Switch:

```
DXS-3326GSR:4#reboot
Command: reboot
Are you sure want to proceed with the system reboot? (y/n)
Please wait, the Switch is rebooting...
```

reset

Purpose	Used to reset the Switch to the factory default settings.
Syntax	reset {[config system]}
Description	This command is used to restore the Switch's configuration to the default settings assigned from the factory.
Parameters	<i>config</i> – If the keyword 'config' is specified, all of the factory default settings are restored on the Switch including the IP address, user accounts, and the Switch history log. The Switch will not save or reboot. <i>system</i> – If the keyword 'system' is specified all of the factory default settings are restored on the Switch. The Switch will save and reboot after the settings are changed to default. Rebooting will clear all entries in the Forwarding Data Base. If no parameter is specified, the Switch's current IP address, user accounts, and the Switch history log are not changed. All other parameters are restored to the factory default settings. The Switch will not save or reboot.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To restore all of the Switch's parameters to their default values:

```
DXS-3326GSR:4#reset config
Command: reset config

Success.

DXS-3326GSR:4#
```

login

Purpose	Used to log in a user to the Switch's console.
Syntax	login
Description	This command is used to initiate the login procedure. The user will be prompted for his Username and Password.
Parameters	None.
Restrictions	None.

Example usage:

To initiate the login procedure:

```
DXS-3326GSR:4#login
```

```
Command: login
```

```
UserName:
```

logout

Purpose	Used to log out a user from the Switch's console.
Syntax	logout
Description	This command terminates the current user's session on the Switch's console.
Parameters	None.
Restrictions	None.

Example usage:

To terminate the current user's console session:

```
DXS-3326GSR:4#logout
```

SWITCH PORT COMMANDS

The switch port commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
config ports	[<portlist all> [speed [auto 10_half 10_full 100_half 100_full 1000_full {[master slave]}] flow_control [enable disable] learning [enable disable] state [enable disable] description <desc 32> clear]
show ports	<portlist>

Each command is listed, in detail, in the following sections.

config ports

Purpose	Used to configure the Switch's Ethernet port settings.
Syntax	[<portlist all> [speed [auto 10_half 10_full 100_half 100_full 1000_full {[master slave]}] flow_control [enable disable] learning [enable disable] state [enable disable] description <desc 32> clear]
Description	This command allows for the configuration of the Switch's Ethernet ports. Only the ports listed in the <portlist> will be affected.
Parameters	<i>all</i> – Configure all ports on the Switch. <portlist> – Specifies a range of ports to be configured. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order. <i>auto</i> – Enables auto-negotiation for the specified range of ports. [10 100 1000] – Configures the speed in Mbps for the specified range of ports. [half full] – Configures the specified range of ports as either full- or half-duplex. [master slave] – The <i>master</i> and <i>slave</i> parameters refer to connections running a 1000BASE-T cable for connection between the Switch port and other device capable of a gigabit connection. The <i>master</i> setting will allow the port to advertise capabilities related to duplex, speed and physical layer type. The <i>master</i> setting will also determine the master and slave relationship between the two connected physical layers. This relationship is

config ports

necessary for establishing the timing control between the two physical layers. The timing control is set on a *master* physical layer by a local source. The *slave* setting uses loop timing, where the timing comes from a data stream received from the *master*. If one connection is set for *1000 master*, the other side of the connection must be set for *1000 slave*. Any other configuration will result in a link down status for both ports.

flow_control [enable | disable] – Enable or disable flow control for the specified ports.

learning [enable | disable] – Enables or disables the MAC address learning on the specified range of ports.

state [enable | disable] – Enables or disables the specified range of ports.

description <desc 32> - Enter an alphanumeric string of no more than 32 characters to describe a selected port interface.

clear – Enter this command to clear the port description of the selected port(s).

Restrictions

Only administrator-level users can issue this command.

Example usage:

To configure the speed of port 3 to be 10 Mbps, full duplex, learning and state enable:

```
DXS-3326GSR:4#config ports 1:1-1:3 speed 10_full learning
enable state enable

Command: config ports 1:1-1:3 speed 10_full learning enable
state enable

Success.

DXS-3326GSR:4#
```

show ports

Purpose	Used to display the current configuration of a range of ports.
Syntax	show ports <portlist> {description}
Description	This command is used to display the current configuration of a range of ports.
Parameters	<i><portlist></i> – Specifies a range of ports to be displayed. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between

show ports

switch 1, port 3 and switch 2, port 4 – in numerical order.

{description} – Adding this parameter to the command will allow the user to view previously configured description set on various ports on the Switch.

Restrictions

None.

Example usage:

To display the configuration of all ports on a standalone switch:

DXS-3326GSR:4#show ports

Command show ports:

Port	Port State	Settings Speed/Duplex/FlowCtrl	Connection Speed/Duplex/FlowCtrl	Address Learning
-----	-----	-----	-----	-----
1:1	Enabled	Auto/Enabled	Link Down	Enabled
1:2	Enabled	Auto/Enabled	Link Down	Enabled
1:3	Enabled	Auto/Enabled	Link Down	Enabled
1:4	Enabled	Auto/Enabled	Link Down	Enabled
1:5	Enabled	Auto/Enabled	Link Down	Enabled
1:6	Enabled	Auto/Enabled	Link Down	Enabled
1:7	Enabled	Auto/Enabled	Link Down	Enabled
1:8	Enabled	Auto/Enabled	Link Down	Enabled
1:9	Enabled	Auto/Enabled	Link Down	Enabled
1:10	Enabled	Auto/Enabled	100M/Full/802.3x	Enabled
1:11	Enabled	Auto/Enabled	Link Down	Enabled
1:12	Enabled	Auto/Enabled	Link Down	Enabled
1:13	Enabled	Auto/Disabled	Link Down	Enabled
1:14	Enabled	Auto/Disabled	Link Down	Enabled
1:15	Enabled	Auto/Disabled	Link Down	Enabled
1:16	Enabled	Auto/Disabled	Link Down	Enabled
1:17	Enabled	Auto/Disabled	Link Down	Enabled
1:18	Enabled	Auto/Disabled	Link Down	Enabled
1:19	Enabled	Auto/Disabled	Link Down	Enabled
1:20	Enabled	Auto/Disabled	Link Down	Enabled

CTRL+C ESC q Quit SPACE n Next Page p Previous Page r Refresh

Example usage;

To display port descriptions:

DXS-3326GSR:4#show ports 1:1 description**Command show ports:**

Port	Port	Settings	Connection	Address
	State	Speed/Duplex/FlowCtrl	Speed/Duplex/FlowCtrl	Learning
-----	-----	-----	-----	-----
1:1	Enabled	Auto/Enabled	Link Down	Enabled
Description: Accounting				

PORT SECURITY COMMANDS

The port security commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
config port_security ports	[<portlist> all] {admin_state [enable disable] max_learning_addr <max_lock_no 0-64> lock_address_mode [Permanent DeleteOnTimeout DeleteOnReset]}
show port_security	{ports <portlist>}
delete port_security_entry_vlan_name	<vlan_name 32> port <port> mac_address <macaddr>

Each command is listed, in detail, in the following sections.

config port_security ports

Purpose	Used to configure port security settings.
Syntax	[<portlist> all] {admin_state [enable disable] max_learning_addr <max_lock_no 0-64> lock_address_mode [Permanent DeleteOnTimeout DeleteOnReset]}
Description	This command allows for the configuration of the port security feature. Only the ports listed in the <portlist> are effected.
Parameters	<portlist> – Specifies a range of ports to be configured. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order. <i>all</i> – Configure port security for all ports on the Switch. <i>admin_state [enable disable]</i> – Enable or disable port security for the listed ports. <i>max_learning_addr <max_lock_no 0-64></i> - Use this to limit the number of MAC addresses dynamically listed in the FDB for the ports. <i>lock_address_mode [Permanent DeleteOnTimeout DeleteOnReset]</i> – Indicates the method of locking addresses. The user has three choices: ▪ <i>Permanent</i> – The locked addresses will not age out after the aging timer expires. ▪ <i>DeleteOnTimeout</i> – The locked addresses will age out

config port_security ports

after the aging timer expires.

- *DeleteOnReset* – The locked addresses will not age out until the Switch has been reset.

Restrictions

Only administrator-level users can issue this command.

Example usage:

To configure the port security:

```
DXS-3326GSR:4#config port_security ports 5:1-5:5 admin_state
enable max_learning_addr 5 lock_address_mode DeleteOnReset
Command: config port_security ports 5:1-5:5 admin_state
enable max_learning_addr 5 lock_address_mode DeleteOnReset

Success

DXS-3326GSR:4#
```

show port_security**Purpose**

Used to display the current port security configuration.

Syntax

show port_security {ports <portlist>}

Description

This command is used to display port security information of the Switch ports. The information displayed includes port security admin state, maximum number of learning address and lock mode.

Parameters

ports <portlist> – Specifies a port or range of ports to be viewed. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.

Restrictions

None.

Example usage:

To display the port security configuration:

```
DXS-3326GSR:4#show port_security ports 1:1-1:19
Command: show port_security ports 1:1-1:19
```

Port#	Admin State	Max. Learning Addr.	Lock Address Mode
1:1	Disabled	1	DeleteOnReset
1:2	Disabled	1	DeleteOnReset

1:3	Disabled	1	DeleteOnReset
1:4	Disabled	1	DeleteOnReset
1:5	Disabled	1	DeleteOnReset
1:6	Disabled	1	DeleteOnReset
1:7	Enabled	10	DeleteOnReset
1:8	Disabled	1	DeleteOnReset
1:9	Disabled	1	DeleteOnReset
1:10	Disabled	1	DeleteOnReset
1:11	Disabled	1	DeleteOnReset
1:12	Disabled	1	DeleteOnReset
1:13	Disabled	1	DeleteOnReset
1:14	Disabled	1	DeleteOnReset
1:15	Disabled	1	DeleteOnReset
1:16	Disabled	1	DeleteOnReset
1:17	Disabled	1	DeleteOnReset
1:18	Disabled	1	DeleteOnReset
1:19	Disabled	1	DeleteOnReset

DXS-3326GSR:4#

delete port_security_entry_vlan_name

Purpose	Used to delete an entry from the Switch's port security settings.
Syntax	delete port_security_entry_vlan_name <vlan_name 32> port <port> mac_address <macaddr>
Description	This command is used to remove an entry from the port security entries learned by the Switch and entered into the forwarding database.
Parameters	<vlan_name 32> - Enter the corresponding VLAN of the entry the user wishes to delete. port <port> - Enter the corresponding port of the entry to delete. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. This command can only support one port to be configured at a time. Multiple port entries require the user to repeat the command for separate ports. mac_address <macaddr> - Enter the corresponding MAC address of the entry the user wishes to delete.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To delete an entry from the port security list:

**DXS-3326GSR:4#delete port_security_entry_vlan_name default
port 1:1 mac_address 00-0C-6E-73-2B-C9**

**Command: delete port_security_entry_vlan_name default port
1:1 mac_address 00-0C-6E-73-2B-C9**

Success

DXS-3326GSR:4#

NETWORK MANAGEMENT (SNMP) COMMANDS

The network management commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

The DXS-3326GSR supports the Simple Network Management Protocol (SNMP) versions 1, 2c, and 3. You can specify which version of the SNMP you want to use to monitor and control the Switch. The three versions of SNMP vary in the level of security provided between the management station and the network device. The following table lists the security features of the three SNMP versions:

SNMP Version	Authentication Method	Description
v1	Community String	Community String is used for authentication – NoAuthNoPriv
v2c	Community String	Community String is used for authentication – NoAuthNoPriv
v3	Username	Username is used for authentication – NoAuthNoPriv
v3	MD5 or SHA	Authentication is based on the HMAC-MD5 or HMAC-SHA algorithms – AuthNoPriv
v3	MD5 DES or SHA DES	Authentication is based on the HMAC-MD5 or HMAC-SHA algorithms – AuthPriv. DES 56-bit encryption is added based on the CBC-DES (DES-56) standard

Each command is listed, in detail, in the following sections.

Command	Parameters
create snmp user	create snmp user <SNMP_name 32> <groupname 32> {encrypted [by_password auth [md5 <auth_password 8-16> sha <auth_password 8-20>] priv [none des <priv_password 8-16>] by_key auth [md5 <auth_key 32-32> sha <auth_key 40-40>] priv [none des <priv_key 32-32>]]}
delete snmp user	<SNMP_name 32>
show snmp user	
create snmp view	<view_name 32> <oid> view_type [included excluded]
delete snmp view	<view_name 32> [all oid]
show snmp view	<view_name 32>
create snmp community	<community_string 32> view <view_name 32> [read_only read_write]
delete snmp community	<community_string 32>
show snmp community	<community_string 32>
config snmp engineID	<snmp_engineID>

Command	Parameters
show snmp engineID	
create snmp group	<groupname 32> {v1 v2c v3 [noauth_nopriv auth_nopriv auth_priv]} {read_view <view_name 32> write_view <view_name 32> notify_view <view_name 32>}
delete snmp group	<groupname 32>
show snmp groups	
create snmp host	<ipaddr> {v1 v2c v3 [noauth_nopriv auth_nopriv auth_priv]} <auth_string 32>
delete snmp host	<ipaddr>
show snmp host	<ipaddr>
create trusted_host	<ipaddr>
delete trusted_host	<ipaddr>
show trusted_host	<ipaddr>
enable snmp traps	
enable snmp authenticate_traps	
show snmp traps	
disable snmp traps	
disable snmp authenticate_traps	
config snmp system contact	<sw_contact>
config snmp system location	<sw_location>
config snmp system name	<sw_name>
enable rmon	
disable rmon	

Each command is listed, in detail, in the following sections.

create snmp user

Purpose	Used to create a new SNMP user and adds the user to an SNMP group that is also created by this command.
Syntax	create snmp user <SNMP_name 32> <groupname 32> {encrypted [by_password auth [md5 <auth_password 8-16> sha <auth_password 8-20>] priv [none des <priv_password 8-16>] by_key auth [md5 <auth_key 32-32> sha <auth_key 40-40>] priv [none des <priv_key 32-32>]]}
Description	The create snmp user command creates a new SNMP user and adds the user to an SNMP group that is also created by this command. SNMP ensures:

create snmp user

Parameters

Message integrity – Ensures that packets have not been tampered with during transit.

Authentication – Determines if an SNMP message is from a valid source.

Encryption – Scrambles the contents of messages to prevent it from being viewed by an unauthorized source.

<username 32> – An alphanumeric name of up to 32 characters that will identify the new SNMP user.

<groupname 32> – An alphanumeric name of up to 32 characters that will identify the SNMP group the new SNMP user will be associated with.

encrypted – Allows the user to choose a type of authorization for authentication using SNMP. The user may choose:

- *by_password* – Requires the SNMP user to enter a password for authentication and privacy. The password is defined by specifying the *auth_password* below. This method is recommended.
- *by_key* – Requires the SNMP user to enter an encryption key for authentication and privacy. The key is defined by specifying the key in hex form below. This method is not recommended.

auth – The user may also choose the type of authentication algorithms used to authenticate the snmp user. The choices are:

- *md5* – Specifies that the HMAC-MD5-96 authentication level will be used. md5 may be utilized by entering one of the following:
 - *<auth_password 8-16>* – An alphanumeric string of between 8 and 16 characters that will be used to authorize the agent to receive packets for the host.
 - *<auth_key 32-32>* – Enter an alphanumeric string of exactly 32 characters, in hex form, to define the key that will be used to authorize the agent to receive packets for the host.
- *sha* – Specifies that the HMAC-SHA-96 authentication level will be used.
 - *<auth_password 8-20>* – An alphanumeric string of between 8 and 20 characters that will be used to authorize the agent to receive packets for the host.
 - *<auth_key 40-40>* – Enter an alphanumeric string of exactly 40 characters, in hex form, to define the key that will be used to authorize the agent to receive packets for the host.

priv – Adding the *priv* (privacy) parameter will allow for encryption in addition to the authentication algorithm for higher security. The user may choose:

- *des* – Adding this parameter will allow for a 56-bit

create snmp user

encryption to be added using the DES-56 standard using:

- *<priv_password 8-16>* - An alphanumeric string of between 8 and 16 characters that will be used to encrypt the contents of messages the host sends to the agent.
- *<priv_key 32-32>* - Enter an alphanumeric key string of exactly 32 characters, in hex form, that will be used to encrypt the contents of messages the host sends to the agent.
- *none* – Adding this parameter will add no encryption.

Restrictions

Only administrator-level users can issue this command.

Example usage:

To create an SNMP user on the Switch:

```
DXS-3326GSR:4#create snmp user dlink default encrypted
by_password auth md5 auth_password priv none
```

```
Command: create snmp user dlink default encrypted
by_password auth md5 auth_password priv none
```

Success.

```
DXS-3326GSR:4#
```

delete snmp user

Purpose Used to remove an SNMP user from an SNMP group and also to delete the associated SNMP group.

Syntax **delete snmp user <SNMP_name 32>**

Description The **delete snmp user** command removes an SNMP user from its SNMP group and then deletes the associated SNMP group.

Parameters *<SNMP_name 32>* – An alphanumeric string of up to 32 characters that identifies the SNMP user that will be deleted.

Restrictions Only administrator-level users can issue this command.

Example usage:

To delete a previously entered SNMP user on the Switch:

```
DXS-3326GSR:4#delete snmp user dlink
```

```
Command: delete snmp user dlink
```

Success.

```
DXS-3326GSR:4#
```

show snmp user

Purpose	Used to display information about each SNMP username in the SNMP group username table.
Syntax	show snmp user
Description	The show snmp user command displays information about each SNMP username in the SNMP group username table.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To display the SNMP users currently configured on the Switch:

```
DXS-3326GSR:4#show snmp user
Command: show snmp user

Username      Group Name    VerAuthPriv
-----
initial       initial       V3 None None

Total Entries: 1

DXS-3326GSR:4#
```

create snmp view

Purpose	Used to assign views to community strings to limit which MIB objects and SNMP manager can access.
Syntax	create snmp view <view_name 32> <oid> view_type [included excluded]
Description	The create snmp view command assigns views to community strings to limit which MIB objects an SNMP manager can access.
Parameters	<view_name 32> – An alphanumeric string of up to 32 characters that identifies the SNMP view that will be created. <oid> – The object ID that identifies an object tree (MIB tree) that will be included or excluded from access by an SNMP manager. included – Include this object in the list of objects that an SNMP manager can access.

create snmp view

excluded – Exclude this object from the list of objects that an SNMP manager can access.

Restrictions Only administrator-level users can issue this command.

Example usage:

To create an SNMP view:

```
DXS-3326GSR:4#create snmp view dlinkview 1.3.6 view_type included
Command: create snmp view dlinkview 1.3.6 view_type included
```

Success.

```
DXS-3326GSR:4#
```

delete snmp view

Purpose Used to remove an SNMP view entry previously created on the Switch.

Syntax **delete snmp view <view_name 32> [all | <oid>]**

Description The **delete snmp view** command is used to remove an SNMP view previously created on the Switch.

Parameters <view_name 32> – An alphanumeric string of up to 32 characters that identifies the SNMP view to be deleted.

all – Specifies that all of the SNMP views on the Switch will be deleted.

<oid> – The object ID that identifies an object tree (MIB tree) that will be deleted from the Switch.

Restrictions Only administrator-level users can issue this command.

Example usage:

To delete a previously configured SNMP view from the Switch:

```
DXS-3326GSR:4#delete snmp view dlinkview all
```

```
Command: delete snmp view dlinkview all
```

Success.

```
DXS-3326GSR:4#
```

show snmp view

Purpose	Used to display an SNMP view previously created on the Switch.
Syntax	show snmp view {<view_name 32>}
Description	The show snmp view command displays an SNMP view previously created on the Switch.
Parameters	<view_name 32> – An alphanumeric string of up to 32 characters that identifies the SNMP view that will be displayed.
Restrictions	None.

Example usage:

To display SNMP view configuration:

DXS-3326GSR:4#show snmp view
Command: show snmp view

Vacm View Table Settings

View Name	Subtree	View Type
ReadView	1	Included
WriteView	1	Included
NotifyView	1.3.6	Included
restricted	1.3.6.1.2.1.1	Included
restricted	1.3.6.1.2.1.11	Included
restricted	1.3.6.1.6.3.10.2.1	Included
restricted	1.3.6.1.6.3.11.2.1	Included
restricted	1.3.6.1.6.3.15.1.1	Included
CommunityView	1	Included
CommunityView	1.3.6.1.6.3	Excluded
CommunityView	1.3.6.1.6.3.1	Included

Total Entries: 11

DXS-3326GSR:4#

create snmp community

Purpose	Used to create an SNMP community string to define the relationship between the SNMP manager and an agent. The community string acts like a password to permit access to the agent on the Switch. One or more of the following characteristics can be associated with the community string: An Access List of IP addresses of SNMP managers that are permitted to use the community string to gain access to the Switch's SNMP agent. An MIB view that defines the subset of all MIB objects that will be accessible to the SNMP community. Read-write or read-only level permission for the MIB objects accessible to the SNMP community.
---------	---

create snmp community

Syntax	create snmp community <community_string 32> view <view_name 32> [read_only read_write]
Description	The create snmp community command is used to create an SNMP community string and to assign access-limiting characteristics to this community string.
Parameters	<community_string 32> – An alphanumeric string of up to 32 characters that is used to identify members of an SNMP community. This string is used like a password to give remote SNMP managers access to MIB objects in the Switch's SNMP agent. view <view_name 32> – An alphanumeric string of up to 32 characters that is used to identify the group of MIB objects that a remote SNMP manager is allowed to access on the Switch. read_only – Specifies that SNMP community members using the community string created with this command can only read the contents of the MIBs on the Switch. read_write – Specifies that SNMP community members using the community string created with this command can read from and write to the contents of the MIBs on the Switch.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To create the SNMP community string "dlink:"

```

DXS-3326GSR:4#create snmp community dlink view ReadView read_write
Command: create snmp community dlink view ReadView read_write

Success.

DXS-3326GSR:4#

```

delete snmp community

Purpose	Used to remove a specific SNMP community string from the Switch.
Syntax	delete snmp community <community_string 32>
Description	The delete snmp community command is used to remove a previously defined SNMP community string from the Switch.
Parameters	<community_string 32> – An alphanumeric string of up to 32 characters that is used to identify members of an SNMP community. This string is used like a password to give remote SNMP managers access to MIB objects in the Switch's SNMP agent.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To delete the SNMP community string “dlink:”

DXS-3326GSR:4#delete snmp community dlink

Command: delete snmp community dlink

Success.

DXS-3326GSR:4#

show snmp community

Purpose	Used to display SNMP community strings configured on the Switch.
Syntax	show snmp community {<community_string 32>}
Description	The show snmp community command is used to display SNMP community strings that are configured on the Switch.
Parameters	<i><community_string 32></i> – An alphanumeric string of up to 32 characters that is used to identify members of an SNMP community. This string is used like a password to give remote SNMP managers access to MIB objects in the Switch's SNMP agent.
Restrictions	None.

Example usage:

To display the currently entered SNMP community strings:

DXS-3326GSR:4#show snmp community

Command: show snmp community

SNMP Community Table

Community Name	View Name	Access Right
dlink	ReadView	read_write
private	CommunityView	read_write
public	CommunityView	read_only

Total Entries: 3

DXS-3326GSR:4#

config snmp engineID

Purpose	Used to configure a name for the SNMP engine on the Switch.
---------	---

config snmp engineID

Syntax	config snmp engineID <snmp_engineID>
Description	The config snmp engineID command configures a name for the SNMP engine on the Switch.
Parameters	<i><snmp_engineID></i> – An alphanumeric string that will be used to identify the SNMP engine on the Switch.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To give the SNMP agent on the Switch the name “0035636666”

DXS-3326GSR:4#config snmp engineID 0035636666

Command: config snmp engineID 0035636666

Success.

DXS-3326GSR:4#

show snmp engineID

Purpose	Used to display the identification of the SNMP engine on the Switch.
Syntax	show snmp engineID
Description	The show snmp engineID command displays the identification of the SNMP engine on the Switch.
Parameters	None.
Restrictions	None.

Example usage:

To display the current name of the SNMP engine on the Switch:

DXS-3326GSR:4#show snmp engineID

Command: show snmp engineID

SNMP Engine ID : 0035636666

DXS-3326GSR:4#

create snmp group

Purpose	Used to create a new SNMP group, or a table that maps SNMP users to SNMP views
---------	--

create snmp group

	users to SNMP views.
Syntax	create snmp group <groupname 32> [v1 v2c v3 [noauth_nopriv auth_nopriv auth_priv]] {read_view <view_name 32> write_view <view_name 32> notify_view <view_name 32>}
Description	The create snmp group command creates a new SNMP group, or a table that maps SNMP users to SNMP views.
Parameters	<groupname 32> – An alphanumeric name of up to 32 characters that will identify the SNMP group the new SNMP user will be associated with. v1 – Specifies that SNMP version 1 will be used. The Simple Network Management Protocol (SNMP), version 1, is a network management protocol that provides a means to monitor and control network devices. v2c – Specifies that SNMP version 2c will be used. The SNMP v2c supports both centralized and distributed network management strategies. It includes improvements in the Structure of Management Information (SMI) and adds some security features. v3 – Specifies that the SNMP version 3 will be used. SNMP v3 provides secure access to devices through a combination of authentication and encrypting packets over the network. SNMP v3 adds: ▪ Message integrity – Ensures that packets have not been tampered with during transit. ▪ Authentication – Determines if an SNMP message is from a valid source. ▪ Encryption – Scrambles the contents of messages to prevent it being viewed by an unauthorized source. noauth_nopriv – Specifies that there will be no authorization and no encryption of packets sent between the Switch and a remote SNMP manager. auth_nopriv – Specifies that authorization will be required, but there will be no encryption of packets sent between the Switch and a remote SNMP manager. auth_priv – Specifies that authorization will be required, and that packets sent between the Switch and a remote SNMP manager will be encrypted. read_view – Specifies that the SNMP group being created can request SNMP messages. write_view – Specifies that the SNMP group being created has write privileges. <view_name 32> – An alphanumeric string of up to 32 characters that is used to identify the group of MIB objects that a remote

create snmp group

SNMP manager is allowed to access on the Switch.

notify_view – Specifies that the SNMP group being created can receive SNMP trap messages generated by the Switch's SNMP agent.

Restrictions Only administrator-level users can issue this command.

Example usage:

To create an SNMP group named “sg1.”

```
DXS-3326GSR:4#create snmp group sg1 v3 noauth_nopriv
read_view v1 write_view v1 notify_view v1
Command: create snmp group sg1 v3 noauth_nopriv read_view v1
write_view v1 notify_view v1

Success.

DXS-3326GSR:4#
```

delete snmp group

Purpose Used to remove an SNMP group from the Switch.

Syntax **delete snmp group <groupname 32>**

Description The **delete snmp group** command is used to remove an SNMP group from the Switch.

Parameters <groupname 32> – An alphanumeric name of up to 32 characters that will identify the SNMP group to be deleted.

Restrictions Only administrator-level users can issue this command.

Example usage:

To delete the SNMP group named “sg1”.

```
DXS-3326GSR:4#delete snmp group sg1
Command: delete snmp group sg1

Success.

DXS-3326GSR:4#
```

show snmp groups

Purpose Used to display the group-names of SNMP groups currently configured on the Switch. The security model, level, and status of

show snmp groups

	each group are also displayed.
Syntax	show snmp groups
Description	The show snmp groups command displays the group-names of SNMP groups currently configured on the Switch. The security model, level, and status of each group are also displayed.
Parameters	None.
Restrictions	None.

Example usage:

To display the currently configured SNMP groups on the Switch:

DXS-3326GSR:4#show snmp groups
Command: show snmp groups

Vacm Access Table Settings

Group Name : Group3
ReadView Name : ReadView
WriteView Name : WriteView
Notify View Name : NotifyView
Security Model : SNMPv3
Security Level : NoAuthNoPriv

Group Name : Group4
ReadView Name : ReadView
WriteView Name : WriteView
Notify View Name : NotifyView
Security Model : SNMPv3
Security Level : authNoPriv

Group Name : Group5
ReadView Name : ReadView
WriteView Name : WriteView
Notify View Name : NotifyView
Security Model : SNMPv3
Security Level : authNoPriv

Group Name : Group6
ReadView Name : ReadView
WriteView Name : WriteView
Notify View Name : NotifyView
Security Model : SNMPv3
Security Level : authPriv

Group Name : Group7
ReadView Name : ReadView
WriteView Name : WriteView
Notify View Name : NotifyView
Security Model : SNMPv3
Security Level : authPriv

Group Name : initial
ReadView Name : restricted
WriteView Name :

```

Notify View Name      : restricted
Security Model        : SNMPv3
Security Level        : NoAuthNoPriv

Group Name           : ReadGroup
ReadView Name        : CommunityView
WriteView Name       :
Notify View Name     : CommunityView
Security Model       : SNMPv1
Security Level       : NoAuthNoPriv

Group Name           : ReadGroup
ReadView Name        : CommunityView
WriteView Name       :
Notify View Name     : CommunityView
Security Model       : SNMPv2
Security Level       : NoAuthNoPriv

Group Name           : WriteGroup
ReadView Name        : CommunityView
WriteView Name       : CommunityView
Notify View Name     : CommunityView
Security Model       : SNMPv1
Security Level       : NoAuthNoPriv

Group Name           : WriteGroup
ReadView Name        : CommunityView
WriteView Name       : CommunityView
Notify View Name     : CommunityView
Security Model       : SNMPv2
Security Level       : NoAuthNoPriv

Total Entries: 10

DXS-3326GSR:4#

```

create snmp host

Purpose	Used to create a recipient of SNMP traps generated by the Switch's SNMP agent.
Syntax	create snmp host <ipaddr> [v1 v2c v3 [noauth_nopriv auth_nopriv auth_priv] <auth_string 32>]
Description	The create snmp host command creates a recipient of SNMP traps generated by the Switch's SNMP agent.
Parameters	<ipaddr> – The IP address of the remote management station that will serve as the SNMP host for the Switch. v1 – Specifies that SNMP version 1 will be used. The Simple Network Management Protocol (SNMP), version 1, is a network management protocol that provides a means to monitor and control network devices. v2c – Specifies that SNMP version 2c will be used. The SNMP v2c supports both centralized and distributed network management strategies. It includes improvements in the Structure

create snmp host

of Management Information (SMI) and adds some security features.

v3 – Specifies that the SNMP version 3 will be used. SNMP v3 provides secure access to devices through a combination of authentication and encrypting packets over the network. SNMP v3 adds:

- **Message integrity** – Ensures that packets have not been tampered with during transit.
- **Authentication** – Determines if an SNMP message is from a valid source.
- **Encryption** – Scrambles the contents of messages to prevent it being viewed by an unauthorized source.

noauth_nopriv – Specifies that there will be no authorization and no encryption of packets sent between the Switch and a remote SNMP manager.

auth_nopriv – Specifies that authorization will be required, but there will be no encryption of packets sent between the Switch and a remote SNMP manager.

auth_priv – Specifies that authorization will be required, and that packets sent between the Switch and a remote SNMP manager will be encrypted.

<auth_string 32> – An alphanumeric string used to authorize a remote SNMP manager to access the Switch's SNMP agent.

Restrictions

Only administrator-level users can issue this command.

Example usage:

To create an SNMP host to receive SNMP messages:

```
DXS-3326GSR:4#create snmp host 10.48.74.100 v3 auth_priv public
```

```
Command: create snmp host 10.48.74.100 v3 auth_priv public
```

```
Success.
```

```
DXS-3326GSR:4#
```

delete snmp host

Purpose Used to remove a recipient of SNMP traps generated by the Switch's SNMP agent.

Syntax **delete snmp host <ipaddr>**

Description The **delete snmp host** command deletes a recipient of SNMP traps generated by the Switch's SNMP agent.

delete snmp host

traps generated by the Switch's SNMP agent.

Parameters *<ipaddr>* – The IP address of a remote SNMP manager that will receive SNMP traps generated by the Switch's SNMP agent.

Restrictions Only administrator-level users can issue this command.

Example usage:

To delete an SNMP host entry:

DXS-3326GSR:4#delete snmp host 10.48.74.100

Command: delete snmp host 10.48.74.100

Success.

DXS-3326GSR:4#

show snmp host

Purpose Used to display the recipient of SNMP traps generated by the Switch's SNMP agent.

Syntax **show snmp host {<ipaddr>}**

Description The **show snmp host** command is used to display the IP addresses and configuration information of remote SNMP managers that are designated as recipients of SNMP traps that are generated by the Switch's SNMP agent.

Parameters *<ipaddr>* – The IP address of a remote SNMP manager that will receive SNMP traps generated by the Switch's SNMP agent.

Restrictions None.

Example usage:

To display the currently configured SNMP hosts on the Switch:

DXS-3326GSR:4#show snmp host

Command: show snmp host

SNMP Host Table

Host IP Address	SNMP Version	Community Name/SNMPv3 User Name
10.48.76.23	V2c	private
10.48.74.100	V3 authpriv	public

Total Entries: 2

DXS-3326GSR:4#

create trusted_host

Purpose	Used to create the trusted host.
Syntax	create trusted_host <ipaddr>
Description	The create trusted_host command creates the trusted host. The Switch allows you to specify up to four IP addresses that are allowed to manage the Switch via in-band SNMP or TELNET based management software. These IP addresses must be members of the Management VLAN. If no IP addresses are specified, then there is nothing to prevent any IP address from accessing the Switch, provided the user knows the Username and Password.
Parameters	<ipaddr> – The IP address of the trusted host.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To create the trusted host:

```

DXS-3326GSR:4#create trusted_host 10.48.74.121
Command: create trusted_host 10.48.74.121

Success.

DXS-3326GSR:4#

```

show trusted_host

Purpose	Used to display a list of trusted hosts entered on the Switch using the create trusted_host command above.
Syntax	show trusted_host
Description	This command is used to display a list of trusted hosts entered on the Switch using the create trusted_host command above.
Parameters	none.
Restrictions	none.

Example Usage:

To display the list of trust hosts:

```
DXS-3326GSR:4#show trusted_host
```

```
Command: show trusted_host
```

```
Management Stations
```

```
IP Address
```

```
-----
```

```
10.53.13.94
```

```
Total Entries: 1
```

```
DXS-3326GSR:4#
```

delete trusted_host

Purpose	Used to delete a trusted host entry made using the create trusted_host command above.
Syntax	delete trusted_host <ipaddr>
Description	This command is used to delete a trusted host entry made using the create trusted_host command above.
Parameters	<ipaddr> – The IP address of the trusted host.
Restrictions	Only administrator-level users can issue this command.

Example Usage:

To delete a trusted host with an IP address 10.48.74.121:

```
DXS-3326GSR:4#delete trusted_host 10.48.74.121
```

```
Command: delete trusted_host 10.48.74.121
```

```
Success.
```

```
DXS-3326GSR:4#
```

enable snmp traps

Purpose	Used to enable SNMP trap support.
Syntax	enable snmp traps
Description	The enable snmp traps command is used to enable SNMP trap support on the Switch.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To enable SNMP trap support on the Switch:

DXS-3326GSR:4#enable snmp traps

Command: enable snmp traps

Success.

DXS-3326GSR:4#

enable snmp authenticate_traps

Purpose	Used to enable SNMP authentication trap support.
Syntax	enable snmp authenticate_traps
Description	This command is used to enable SNMP authentication trap support on the Switch.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example Usage:

To turn on SNMP authentication trap support:

DXS-3326GSR:4#enable snmp authenticate_traps

Command: enable snmp authenticate_traps

Success.

DXS-3326GSR:4#

show snmp traps

Purpose	Used to show SNMP trap support on the Switch .
Syntax	show snmp traps
Description	This command is used to view the SNMP trap support status currently configured on the Switch.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To view the current SNMP trap support:

DXS-3326GSR:4#show snmp traps

Command: show snmp traps

SNMP Traps : Enabled

Authenticate Traps : Enabled

DXS-3326GSR:4#

disable snmp traps

Purpose	Used to disable SNMP trap support on the Switch.
Syntax	disable snmp traps
Description	This command is used to disable SNMP trap support on the Switch.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example Usage:

To prevent SNMP traps from being sent from the Switch:

DXS-3326GSR:4#disable snmp traps

Command: disable snmp traps

Success.

DXS-3326GSR:4#

disable snmp authenticate_traps

Purpose	Used to disable SNMP authentication trap support.
Syntax	disable snmp authenticate_traps
Description	This command is used to disable SNMP authentication support on the Switch.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example Usage:

To disable the SNMP authentication trap support:

DXS-3326GSR:4#disable snmp authenticate_traps

Command: disable snmp authenticate_traps

Success.

DXS-3326GSR:4#

config snmp system_contact

Purpose	Used to enter the name of a contact person who is responsible for the Switch.
Syntax	config snmp system_contact{<sw_contact>}
Description	The config snmp system_contact command is used to enter the name and/or other information to identify a contact person who is responsible for the Switch. A maximum of 255 character can be used.
Parameters	<sw_contact> - A maximum of 255 characters is allowed. A NULL string is accepted if there is no contact.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To configure the Switch contact to “**MIS Department II**”:

DXS-3326GSR:4#config snmp system_contact MIS Department II

Command: config snmp system_contact MIS Department II

Success.

DXS-3326GSR:4#

config snmp system_location

Purpose	Used to enter a description of the location of the Switch.
Syntax	config snmp system_location {<sw_location>}
Description	The config snmp system_location command is used to enter a description of the location of the Switch. A maximum of 255 characters can be used.
Parameters	<sw_location> - A maximum of 255 characters is allowed. A NULL string is accepted if there is no location desired.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To configure the Switch location for “**HQ 5F**”:

```
DXS-3326GSR:4#config snmp system_location HQ 5F
```

```
Command: config snmp system_location HQ 5F
```

```
Success.
```

```
DXS-3326GSR:4#
```

config snmp system_name

Purpose	Used to configure the name for the Switch.
Syntax	config snmp system_name {<sw_name>}
Description	The config snmp system_name command configures the name of the Switch.
Parameters	<sw_name> - A maximum of 255 characters is allowed. A NULL string is accepted if no name is desired.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To configure the Switch name for “**DXS-3326GSR Stackable Switch**”:

```
DXS-3326GSR:4#config snmp system_name DXS-3326GSR  
Stackable Switch
```

```
Command: config snmp system_name DXS-3326GSR Stackable  
Switch
```

```
Success.
```

```
DXS-3326GSR:4#
```

enable rmon

Purpose	Used to enable RMON on the Switch.
Syntax	enable rmon
Description	This command is used, in conjunction with the disable rmon command below, to enable and disable remote monitoring (RMON) on the Switch.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example Usage:

To enable RMON:

```
DXS-3326GSR:4#enable rmon
```

```
Command: enable rmon
```

```
Success.
```

```
DXS-3326GSR:4#
```

disable rmon

Purpose	Used to disable RMON on the Switch.
Syntax	disable rmon
Description	This command is used, in conjunction with the enable rmon command above, to enable and disable remote monitoring (RMON) on the Switch.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example Usage:

To disable RMON:

```
DXS-3326GSR:4#disable rmon
```

```
Command: disable rmon
```

```
Success.
```

```
DXS-3326GSR:4#
```

SWITCH UTILITY COMMANDS

The switch utility commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
download	[firmware_fromTFTP <ipaddr> <path_filename 64> {image_id <int 1-2>} {unit [all <unitid 1-12>]} cfg_fromTFTP <ipaddr> <path_filename 64> {increment}]
config firmware image_id	<int 1-2> [delete boot_up]
show firmware information	
upload	[cfg_toTFTP <ipaddr> <path_filename 64> log_toTFTP <ipaddr> <path_filename 64>]
ping	<ipaddr> {times <value 1-255>} {timeout <sec 1-99>}
tracert	<ipaddr> {ttl <value 1-60> port <value 30000-64900> timeout <sec 1-65535> probe <value <1-9>}

Each command is listed, in detail, in the following sections.

download

Purpose	Used to download and install new firmware or a switch configuration file from a TFTP server.
Syntax	download [firmware_fromTFTP <ipaddr> <path_filename 64> {image_id <int 1-2>} {unit [all <unitid 1-12>]} cfg_fromTFTP <ipaddr> <path_filename 64> {increment}]
Description	This command is used to download a new firmware or a switch configuration file from a TFTP server.
Parameters	<i>firmware_fromTFTP</i> – Download and install new firmware on the Switch from a TFTP server. ▪ <i><ipaddr></i> – The IP address of the TFTP server. ▪ <i><path_filename></i> – The DOS path and filename of the firmware on the TFTP server. For example, C:\3226S.had. ▪ <i>image_id <int 1-2></i> – This Switch holds two places for storing firmware, labeled 1 and 2. The user may store an extra firmware file on the Switch for use at a later time. <i>image_id 1</i> will hold the current firmware in use on the Switch. Not specifying an <i>image_id</i> will automatically download the firmware to <i>image_id 1</i>. ▪ <i>unit [all <unitid 1-12>]</i> – <i>all</i> specifies all units (switches) in the switch stack, entering the <i><unitid 1-12></i> parameter will specify the unit ID of the switch that will receive the download. Entering this command without this parameter will download the firmware directly to the DXS-3326GSR.

download

cfg_fromTFTP - Download a switch configuration file from a TFTP server.

- *<ipaddr>* – The IP address of the TFTP server.
- *<path_filename 12>* – The DOS path and filename of the switch configuration file on the TFTP server. For example, C:\3226S.had.
- *increment* – Allows the download of a partial switch configuration file. This allows a file to be downloaded that will change only the switch parameters explicitly stated in the configuration file. All other switch parameters will remain unchanged.

Restrictions

The TFTP server must be on the same IP subnet as the Switch. Only administrator-level users can issue this command.

Example usage:

To download a firmware file to image_id 1:

```
DXS-3326GSR:4#download firmware_fromTFTP 10.48.74.121
c:\dgs3324gsr01.had image_id 1
Command: download firmware_fromTFTP 10.48.74.121 c:\dgs3324gsr01.had
image_id 1

Connecting to server.....Done.
Download firmware..... Done. Do not power off!
Please wait, programming flash.....Done.
Saving current settings to NV-RAM.....Done.
Please wait, the switch is rebooting...
```

Example Usage:

To download a configuration file from a TFTP server:

```
DXS-3326GSR:4#download cfg_to TFTP 10.48.74.121 c:\cfg\setting.txt
Command: download cfg_to TFTP 10.48.74.121 c:\cfg\setting.txt

Connecting to server..... Done.
Download configuration..... Done.

DXS-3326GSR:4#
```

config firmware

Purpose	To configure firmware currently in the Switch's NV-RAM.
Syntax	config firmware image_id <int 1-2> {delete boot_up}
Description	This command allows the user to configure the dual image firmware on the Switch. This Switch allows the user to hold two firmware versions in its memory, labeled as <i>image_id</i> 1 and 2. Using this command, the user may delete a firmware or set it as the boot up firmware for the Switch. If the boot up firmware is not specified by the user, <i>image_id</i> 1 will be the default boot up firmware.
Parameters	<int 1-2> - Select the ID number of the firmware in the Switch's memory to be configured. <i>delete</i> – Selecting this parameter, along with the <i>image_id</i> will delete this firmware from the Switch's memory. <i>boot_up</i> - Selecting this parameter, along with the <i>image_id</i> will set this firmware as the default boot up runtime image firmware upon the next reboot of the Switch.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To delete a firmware file from the Switch's memory:

DXS-3326GSR:4#config firmware image_id 2 delete

Command: config firmware image_id 2 delete

Success.

DXS-3326GSR:4#

Example usage:

To configure a firmware file as the boot up runtime image firmware:

DXS-3326GSR:4#config firmware image_id 2 boot_up

Command: config firmware image_id 2 boot_up

Success.

DXS-3326GSR:4#

show firmware information

Purpose	Used to display the firmware <i>image_id</i> information.
Syntax	show firmware information

show firmware information

Description	This command is used to display the firmware currently set in the Switch's memory. This Switch allows the user to hold two firmware versions in its memory, labeled as <i>image_id</i> 1 and 2.
Parameters	None.
Restrictions	None

Example usage:

To display the current firmware information on the Switch:

DXS-3326GSR:4#show firmware information

Command: show firmware information

Box	ID	Version	Size(B)	Update Time	From	User
---	--	-----	-----	-----	-----	-----
1	*1	3.00-B16	2360471	00000 days 00:00:00	Serial Port (PROM)	Unknown
1	2	3.00-B13	1052372	00000 days 00:00:56	10.53.13.94	Anonymous

**** means boot up section**

(R) means firmware update thru SerialPort (RS232)

(T) means firmware update thru TELNET

(S) means firmware update thru SNMP

(W) means firmware update thru WEB

(SIM) means firmware update thru Single IP Management

DXS-3326GSR:4#

upload

Purpose	Used to upload the current switch settings or the Switch history log to a TFTP server.
Syntax	upload [cfg_toTFTP <ipaddr> <path_filename 64> log_toTFTP <ipaddr> <path_filename 64>]
Description	This command is used to upload either the Switch's current settings or the Switch's history log to a TFTP server.
Parameters	<i>cfg_toTFTP</i> – Specifies that the Switch's current settings will be uploaded to the TFTP server. <i>log_toTFTP</i> – Specifies that the Switch's current log will be uploaded to the TFTP server. <i><ipaddr></i> – The IP address of the TFTP server. The TFTP server must be on the same IP subnet as the Switch.

upload

<path_filename 64> – Specifies the location of the Switch configuration file on the TFTP server. This file will be replaced by the uploaded file from the Switch.

Restrictions The TFTP server must be on the same IP subnet as the Switch. Only administrator-level users can issue this command.

Example usage:

To upload a configuration file:

DXS-3326GSR:4#upload cfg_toTFTP 10.48.74.121 c:\cfg\log.txt

Command: upload cfg_to TFTP 10.48.74.121 c:\cfg\log.txt

Connecting to server..... Done.

Upload configuration.....Done.

DXS-3326GSR:4#

ping

Purpose Used to test the connectivity between network devices.

Syntax **ping <ipaddr> {times <value 1-255>} {timeout <sec 1-99>}**

Description The ping command sends Internet Control Message Protocol (ICMP) echo messages to a remote IP address. The remote IP address will then “echo” or return the message. This is used to confirm connectivity between the Switch and the remote device.

Parameters

<ipaddr> - Specifies the IP address of the host.

times <value 1-255> - The number of individual ICMP echo messages to be sent. The maximum value is 255. The default is 0.

timeout <sec 1-99> - Defines the time-out period while waiting for a response from the remote device. A value of 1 to 99 seconds can be specified. The default is 1 second.

Pinging an IP address without the *times* parameter will ping the target device an infinite amount of times.

Restrictions None.

Example usage:

To ping the IP address 10.48.74.121 four times:

DXS-3326GSR:4#ping 10.48.74.121 times 4

Command: ping 10.48.74.121

Reply from 10.48.74.121, time<10ms

Reply from 10.48.74.121, time<10ms

Reply from 10.48.74.121, time<10ms

Reply from 10.48.74.121, time<10ms

Ping statistics for 10.48.74.121

Packets: Sent =4, Received =4, Lost =0

DXS-3326GSR:4#

traceroute

Purpose	Used to trace the routed path between the Switch and a destination endstation.
Syntax	<ipaddr> {ttl <value 1-60> port <value 30000-64900> timeout <sec 1-65535> probe <value <1-9>
Description	The traceroute command allows you to trace a route between the Switch and a give host on the network.
Parameters	<ipaddr> - Specifies the IP address of the host. ttl <value 1-60> - The time to live value of the trace route request. This is the maximum number of routers the traceroute command will cross while seeking the network path between two devices. port <value 30000-64900> - The port number. The value range is from 30000 to 64900 . timeout <sec 1-65535> - Defines the time-out period while waiting for a response from the remote device. The user may choose an entry between 1 and 65535 seconds. probe <value 1-9> - The probe value is the number of times the Switch will send probe packets to the next hop on the intended traceroute path. The default is 1.
Restrictions	None.

Example usage:

To trace the routed path between the Switch and 10.48.74.121.

DXS-3326GSR:4#traceroute 10.48.74.121 probe 3

Command: traceroute 10.48.74.121 probe 3

1 <10ms 10.254.254.251

2 <10ms 10.55.25.35

3 <10ms 10.22.35.1

DXS-3326GSR:4#

NETWORK MONITORING COMMANDS

The network monitoring commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
show packet ports	<portlist>
show error ports	<portlist>
show utilization	[ports cpu]
clear counters	ports <portlist>
clear log	
show log	index <value_list>
enable syslog	
disable syslog	
show syslog	
create syslog host	[<index 1-4 all >] {severity [informational warning all] facility [local0 local1 local2 local3 local4 local5 local6 local7] udp_port <udp_port_number> ipaddress <ipaddr> state [enable disable]}
config syslog host	<index 1-4> {severity [informational warning all] facility [local0 local1 local2 local3 local4 local5 local6 local7] udp_port <udp_port_number> ipaddress <ipaddr> state [enable disable]}
config syslog host all	{severity [informational warning all] facility [local0 local1 local2 local3 local4 local5 local6 local7] udp_port <udp_port_number> state [enable disable]}
delete syslog host	[<index 1-4 all>]
show syslog host	[<index 1-4>]

Each command is listed, in detail, in the following sections.

show packet ports	
Purpose	Used to display statistics about the packets sent and received by the Switch.
Syntax	show packet ports <portlist>
Description	This command is used to display statistics about packets sent and received by ports specified in the port list.
Parameters	<portlist> – Specifies a range of ports to be displayed. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end

show packet ports

of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.

Restrictions

None.

Example usage:

To display the packets analysis for port 7 of module 2:

DXS-3326GSR:4#show packet port 2:7

Port number : 2:7

Frame Size	Frame Counts	Frames/sec	Frame Type	Total	Total/sec
-----	-----	-----	-----	-----	-----
64	3275	10	RX Bytes	408973	1657
65-127	755	10	RX Frames	4395	19
128-255	316	1			
256-511	145	0	TX Bytes	7918	178
512-1023	15	0	TX Frames	111	2
1024-1518	0	0			
Unicast RX	152	1			
Multicast RX	557	2			
Broadcast RX	3686	16			

CTRL+C ESC q Quit SPACE n Next Page p Previous Page r Refresh

show error ports

Purpose	Used to display the error statistics for a range of ports.
Syntax	show error ports <portlist>
Description	This command will display all of the packet error statistics collected and logged by the Switch for a given port list.
Parameters	<portlist> – Specifies a range of ports to be displayed. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.
Restrictions	None.

Example usage:

To display the errors of the port 3 of module 1:

DXS-3326GSR:4#show errors port 1:3

	RX Frames		TX Frames
	-----		-----
CRC Error	19	Excessive Deferral	0
Undersize	0	CRC Error	0
Oversize	0	Late Collision	0
Fragment	0	Excessive Collision	0
Jabber	11	Single Collision	0
Drop Pkts	20837	Collision	0

CTRL+C ESC q Quit SPACE n Next Page p Previous Page r Refresh

show utilization

Purpose	Used to display real-time port and cpu utilization statistics.
Syntax	show utilization [ports cpu]
Description	This command will display the real-time port and cpu utilization statistics for the Switch.
Parameters	<i>cpu</i> – Entering this parameter will display the current cpu utilization of the Switch, as a percentage. <i>ports</i> - Entering this parameter will display the current utilization of all ports on the Switch.
Restrictions	None.

Example usage:

To display the port utilization statistics:

DXS-3326GSR:4#show utilization ports							
Port	TX/sec	RX/sec	Util	Port	TX/sec	RX/sec	Util
---	-----	-----	---	---	-----	-----	---
1:1	0	0	0	1:22	0	0	0
1:2	0	0	0	1:23	0	0	0
1:3	0	0	0	1:24	0	0	0
1:4	0	0	0	1:25	0	0	0
1:5	0	0	0	1:26	19	49	1
1:6	0	0	0	2:1	0	0	0
1:7	0	0	0	2:2	0	0	0
1:8	0	0	0	2:3	0	0	0
1:9	0	0	0	2:4	0	0	0
1:10	0	0	0	2:5	0	0	0
1:11	0	0	0	2:6	0	0	0
1:12	0	0	0	2:7	0	30	1
1:13	0	0	0	2:8	0	0	0
1:14	0	0	0	2:9	30	0	1
1:15	0	0	0	2:10	0	0	0
1:16	0	0	0	2:11	0	0	0
1:17	0	0	0	2:12	0	0	0
1:18	0	0	0	2:13	0	0	0
1:19	0	0	0	2:14	0	0	0
1:20	0	0	0	2:15	0	0	0
1:21	0	0	0	2:16	0	0	0
CTRL+C ESC q Quit SPACE n Next Page p Previous Page r Refresh							

To display the current cpu utilization:

DXS-3326GSR:4#show utilization cpu		
Command: show utilization cpu		
CPU utilization :		

Five seconds - 15%	One minute - 25%	Five minutes - 14%
DXS-3326GSR:4#		

clear counters

Purpose	Used to clear the Switch's statistics counters.
Syntax	clear counters {ports <portlist>}
Description	This command will clear the counters used by the Switch to compile statistics.
Parameters	<portlist> – Specifies a range of ports to be configured. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies

clear counters

switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.

Restrictions Only administrator-level users can issue this command.

Example usage:

To clear the counters:

DXS-3326GSR:4#clear counters ports 2:7-2:9

Command: clear counters ports 2:7-2:9

Success.

DXS-3326GSR:4#

clear log

Purpose Used to clear the Switch's history log.

Syntax **clear log**

Description This command will clear the Switch's history log.

Parameters None.

Restrictions Only administrator-level users can issue this command.

Example usage:

To clear the log information:

DXS-3326GSR:4#clear log

Command: clear log

Success.

DXS-3326GSR:4#

show log

Purpose Used to display the Switch history log.

Syntax **show log {index <value_list>}**

Description This command will display the contents of the Switch's history log.

Parameters *index <value_list>* – Enter a value that corresponds to an entry made in the log. Multiple entries may be made in the form of x-x

show log

where x is the number of an entry in the log. The smallest number (and therefore the earlier entry) will be first.

Restrictions None.

Example usage:

To display the Switch history log:

```
DXS-3326GSR:4#show log index 1-4
```

```
Command: show log index 1-4
```

Index	Date	Time	Log Text
----	-----	-----	-----
4	2000-03-02	01:54:53	Port 1:13 link up, 100Mbps FULL duplex
3	2000-03-02	01:54:53	Spanning Tree Protocol is enabled
2	2000-03-02	01:54:53	Unit 1, System started up
1	2000-02-28	06:06:09	Spanning Tree Protocol is disabled

```
DXS-3326GSR:4#
```

enable syslog

Purpose Used to enable the system log to be sent to a remote host.

Syntax **enable syslog**

Description The **enable syslog** command enables the system log to be sent to a remote host.

Parameters None.

Restrictions Only administrator-level users can issue this command.

Example usage:

To the syslog function on the Switch:

```
DXS-3326GSR:4#enable syslog
```

```
Command: enable syslog
```

```
Success.
```

```
DXS-3326GSR:4#
```

disable syslog

Purpose	Used to disable the system log function on the Switch.
Syntax	disable syslog
Description	The disable syslog command disables the system log function on the Switch. After disabling, Syslog entries will no longer be sent to a remote host.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To disable the syslog function on the Switch:

```
DXS-3326GSR:4#disable syslog
```

```
Command: disable syslog
```

```
Success.
```

```
DXS-3326GSR:4#
```

show syslog

Purpose	Used to display the syslog protocol status as enabled or disabled.
Syntax	show syslog
Description	The show syslog command displays the syslog status as enabled or disabled.
Parameters	None.
Restrictions	None.

Example usage:

To display the current status of the syslog function:

```
DXS-3326GSR:4#show syslog
```

```
Command: show syslog
```

```
Syslog Global State: Enabled
```

```
DXS-3326GSR:4#
```

create syslog host

Purpose	Used to create a new syslog host.																						
Syntax	create syslog host [<index 1-4>] {severity [informational warning all] facility [local0 local1 local2 local3 local4 local5 local6 local7] udp_port<int> ipaddress <ipaddr> state [enable disable]}																						
Description	The create syslog host command is used to create a new syslog host.																						
Parameters	<index 1-4> – Specifies that the command will be applied to an index of hosts. There are four available indexes, numbered 1 through 4. <i>severity</i> – Severity level indicator. These are described in the following: Bold font indicates that the corresponding severity level is currently supported on the Switch. <table> <thead> <tr> <th>Numerical Code</th><th>Severity</th></tr> </thead> <tbody> <tr> <td>0</td><td>Emergency: system is unusable</td></tr> <tr> <td>1</td><td>Alert: action must be taken immediately</td></tr> <tr> <td>2</td><td>Critical: critical conditions</td></tr> <tr> <td>3</td><td>Error: error conditions</td></tr> <tr> <td>4</td><td>Warning: warning conditions</td></tr> <tr> <td>5</td><td>Notice: normal but significant condition</td></tr> <tr> <td>6</td><td>Informational: informational messages</td></tr> <tr> <td>7</td><td>Debug: debug-level messages</td></tr> </tbody> </table> <i>informational</i> – Specifies that informational messages will be sent to the remote host. This corresponds to number 6 from the list above. <i>warning</i> – Specifies that warning messages will be sent to the remote host. This corresponds to number 4 from the list above. <i>all</i> – Specifies that all of the currently supported syslog messages that are generated by the Switch will be sent to the remote host. <i>facility</i> – Some of the operating system daemons and processes have been assigned Facility values. Processes and daemons that have not been explicitly assigned a Facility may use any of the "local use" facilities or they may use the "user-level" Facility. Those Facilities that have been designated are shown in the following: Bold font indicates the facility values the Switch currently supports. <table> <thead> <tr> <th>Numerical Code</th><th>Facility</th></tr> </thead> <tbody> <tr> <td>0</td><td>kernel messages</td></tr> </tbody> </table>	Numerical Code	Severity	0	Emergency: system is unusable	1	Alert: action must be taken immediately	2	Critical: critical conditions	3	Error: error conditions	4	Warning: warning conditions	5	Notice: normal but significant condition	6	Informational: informational messages	7	Debug: debug-level messages	Numerical Code	Facility	0	kernel messages
Numerical Code	Severity																						
0	Emergency: system is unusable																						
1	Alert: action must be taken immediately																						
2	Critical: critical conditions																						
3	Error: error conditions																						
4	Warning: warning conditions																						
5	Notice: normal but significant condition																						
6	Informational: informational messages																						
7	Debug: debug-level messages																						
Numerical Code	Facility																						
0	kernel messages																						

create syslog host

1	user-level messages
2	mail system
3	system daemons
4	security/authorization messages
5	messages generated internally by syslog
6	line printer subsystem
7	network news subsystem
8	UUCP subsystem
9	clock daemon
10	security/authorization messages
11	FTP daemon
12	NTP subsystem
13	log audit
14	log alert
15	clock daemon
16	local use 0 (local0)
17	local use 1 (local1)
18	local use 2 (local2)
19	local use 3 (local3)
20	local use 4 (local4)
21	local use 5 (local5)
22	local use 6 (local6)
23	local use 7 (local7)

local0 – Specifies that local use 0 messages will be sent to the remote host. This corresponds to number 16 from the list above.

local1 – Specifies that local use 1 messages will be sent to the remote host. This corresponds to number 17 from the list above.

local2 – Specifies that local use 2 messages will be sent to the remote host. This corresponds to number 18 from the list above.

local3 – Specifies that local use 3 messages will be sent to the remote host. This corresponds to number 19 from the list above.

local4 – Specifies that local use 4 messages will be sent to the remote host. This corresponds to number 20 from the list above.

create syslog host

local5 – Specifies that local use 5 messages will be sent to the remote host. This corresponds to number 21 from the list above.

local6 – Specifies that local use 6 messages will be sent to the remote host. This corresponds to number 22 from the list above.

local7 – Specifies that local use 7 messages will be sent to the remote host. This corresponds to number 23 from the list above.

udp_port <int> – Specifies the UDP port number that the syslog protocol will use to send messages to the remote host.

ipaddress <ipaddr> – Specifies the IP address of the remote host where syslog messages will be sent.

state [enable | disable] – Allows the sending of syslog messages to the remote host, specified above, to be enabled and disabled.

Restrictions

Only administrator-level users can issue this command.

Example usage:

To create syslog host:

```
DXS-3326GSR:4#create syslog host 1 severity all facility local0
ipaddress 10.53.13.94 state enable
```

```
Command: create syslog host 1 severity all facility local0
ipaddress 10.53.13.94 state enable
```

Success.

```
DXS-3326GSR:4#
```

config syslog host

Purpose	Used to configure the syslog protocol to send system log data to a remote host.
Syntax	config syslog host <index 1-4> [severity [informational warning all] facility [local0 local1 local2 local3 local4 local5 local6 local7] udp_port<int> ipaddress <ipaddr> state [enable disable]]
Description	The config syslog host command is used to configure the syslog protocol to send system log information to a remote host.
Parameters	<index 1-4> – Specifies that the command will be applied to an index of hosts. There are four available indexes, numbered 1 through 4. <i>severity</i> – Severity level indicator. These are described in the following: Bold font indicates that the corresponding severity level is currently supported on the Switch.

config syslog host

Numerical Code	Severity
-------------------	----------

- | | |
|----------|--|
| 0 | Emergency: system is unusable |
| 1 | Alert: action must be taken immediately |
| 2 | Critical: critical conditions |
| 3 | Error: error conditions |
| 4 | Warning: warning conditions |
| 5 | Notice: normal but significant condition |
| 6 | Informational: informational messages |
| 7 | Debug: debug-level messages |

informational – Specifies that informational messages will be sent to the remote host. This corresponds to number 6 from the list above.

warning – Specifies that warning messages will be sent to the remote host. This corresponds to number 4 from the list above.

all – Specifies that all of the currently supported syslog messages that are generated by the Switch will be sent to the remote host.

facility – Some of the operating system daemons and processes have been assigned Facility values. Processes and daemons that have not been explicitly assigned a Facility may use any of the "local use" facilities or they may use the "user-level" Facility. Those Facilities that have been designated are shown in the following: Bold font indicates the facility values the Switch currently supports.

Numerical Code	Facility
-------------------	----------

- | | |
|----|---|
| 0 | kernel messages |
| 1 | user-level messages |
| 2 | mail system |
| 3 | system daemons |
| 4 | security/authorization messages |
| 5 | messages generated internally by syslog |
| 6 | line printer subsystem |
| 7 | network news subsystem |
| 8 | UUCP subsystem |
| 9 | clock daemon |
| 10 | security/authorization messages |
| 11 | FTP daemon |

config syslog host

- 12 NTP subsystem
- 13 log audit
- 14 log alert
- 15 clock daemon
- 16 **local use 0 (local0)**
- 17 **local use 1 (local1)**
- 18 **local use 2 (local2)**
- 19 **local use 3 (local3)**
- 20 **local use 4 (local4)**
- 21 **local use 5 (local5)**
- 22 **local use 6 (local6)**
- 23 **local use 7 (local7)**

local0 – Specifies that local use 0 messages will be sent to the remote host. This corresponds to number 16 from the list above.

local1 – Specifies that local use 1 messages will be sent to the remote host. This corresponds to number 17 from the list above.

local2 – Specifies that local use 2 messages will be sent to the remote host. This corresponds to number 18 from the list above.

local3 – Specifies that local use 3 messages will be sent to the remote host. This corresponds to number 19 from the list above.

local4 – Specifies that local use 4 messages will be sent to the remote host. This corresponds to number 20 from the list above.

local5 – Specifies that local use 5 messages will be sent to the remote host. This corresponds to number 21 from the list above.

local6 – Specifies that local use 6 messages will be sent to the remote host. This corresponds to number 22 from the list above.

local7 – Specifies that local use 7 messages will be sent to the remote host. This corresponds to number 23 from the list above.

udp_port <int> – Specifies the UDP port number that the syslog protocol will use to send messages to the remote host.

ipaddress <ipaddr> – Specifies the IP address of the remote host where syslog messages will be sent.

state [enable | disable] – Allows the sending of syslog messages to the remote host, specified above, to be enabled and disabled.

Restrictions

Only administrator-level users can issue this command.

Example usage:

To configure a syslog host:

DXS-3326GSR:4#config syslog host 1 severity all facility local0

Command: config syslog host 1 severity all facility local0

Success.

DXS-3326GSR:4#

config syslog host all

Purpose	Used to configure the syslog protocol to send system log data to a remote host.																		
Syntax	config syslog host all [severity [informational warning all] facility [local0 local1 local2 local3 local4 local5 local6 local7] udp_port <int> state [enable disable]]																		
Description	The config syslog host all command is used to configure the syslog protocol to send system log information to a remote host.																		
Parameters	<i>all</i> – Specifies that the command will be applied to all hosts. <i>severity</i> – Severity level indicator. These are described in the following: Bold font indicates that the corresponding severity level is currently supported on the Switch. <table> <thead> <tr> <th>Numerical</th><th>Severity</th></tr> </thead> <tbody> <tr> <td>0</td><td>Emergency: system is unusable</td></tr> <tr> <td>1</td><td>Alert: action must be taken immediately</td></tr> <tr> <td>2</td><td>Critical: critical conditions</td></tr> <tr> <td>3</td><td>Error: error conditions</td></tr> <tr> <td>4</td><td>Warning: warning conditions</td></tr> <tr> <td>5</td><td>Notice: normal but significant condition</td></tr> <tr> <td>6</td><td>Informational: informational messages</td></tr> <tr> <td>7</td><td>Debug: debug-level messages</td></tr> </tbody> </table> <i>informational</i> – Specifies that informational messages will be sent to the remote host. This corresponds to number 6 from the list above. <i>warning</i> – Specifies that warning messages will be sent to the remote host. This corresponds to number 4 from the list above. <i>all</i> – Specifies that all of the currently supported syslog messages that are generated by the Switch will be sent to the remote host. <i>facility</i> – Some of the operating system daemons and processes have been assigned Facility values. Processes and daemons that have not been explicitly assigned a Facility may use any of the	Numerical	Severity	0	Emergency: system is unusable	1	Alert: action must be taken immediately	2	Critical: critical conditions	3	Error: error conditions	4	Warning: warning conditions	5	Notice: normal but significant condition	6	Informational: informational messages	7	Debug: debug-level messages
Numerical	Severity																		
0	Emergency: system is unusable																		
1	Alert: action must be taken immediately																		
2	Critical: critical conditions																		
3	Error: error conditions																		
4	Warning: warning conditions																		
5	Notice: normal but significant condition																		
6	Informational: informational messages																		
7	Debug: debug-level messages																		

config syslog host all

"local use" facilities or they may use the "user-level" Facility. Those Facilities that have been designated are shown in the following: Bold font indicates the facility values the Switch currently supports.

Numerical	Facility
-----------	----------

Code	
------	--

0	kernel messages
1	user-level messages
2	mail system
3	system daemons
4	security/authorization messages
5	messages generated internally by syslog
6	line printer subsystem
7	network news subsystem
8	UUCP subsystem
9	clock daemon
10	security/authorization messages
11	FTP daemon
12	NTP subsystem
13	log audit
14	log alert
15	clock daemon
16	local use 0 (local0)
17	local use 1 (local1)
18	local use 2 (local2)
19	local use 3 (local3)
20	local use 4 (local4)
21	local use 5 (local5)
22	local use 6 (local6)
23	local use 7 (local7)

local0 – Specifies that local use 0 messages will be sent to the remote host. This corresponds to number 16 from the list above.

local1 – Specifies that local use 1 messages will be sent to the remote host. This corresponds to number 17 from the list above.

local2 – Specifies that local use 2 messages will be sent to the remote host. This corresponds to number 18 from the list above.

local3 – Specifies that local use 3 messages will be sent to the remote host. This corresponds to number 19 from the list above.

config syslog host all

local4 – Specifies that local use 4 messages will be sent to the remote host. This corresponds to number 20 from the list above.

local5 – Specifies that local use 5 messages will be sent to the remote host. This corresponds to number 21 from the list above.

local6 – Specifies that local use 6 messages will be sent to the remote host. This corresponds to number 22 from the list above.

local7 – Specifies that local use 7 messages will be sent to the remote host. This corresponds to number 23 from the list above.

udp_port <int> – Specifies the UDP port number that the syslog protocol will use to send messages to the remote host.

state [*enable* | *disable*] – Allows the sending of syslog messages to the remote host, specified above, to be enabled and disabled.

Restrictions

Only administrator-level users can issue this command.

Example usage:

To configure all syslog hosts:

```
DXS-3326GSR:4#config syslog host all severity all facility local0
```

```
Command: config syslog host all severity all facility local0
```

```
Success.
```

```
DXS-3326GSR:4#
```

delete syslog host

Purpose Used to remove a syslog host, that has been previously configured, from the Switch.

Syntax **delete syslog host [<index 1-4> | all]**

Description The **delete syslog host** command is used to remove a syslog host that has been previously configured from the Switch.

Parameters <index 1-4> – Specifies that the command will be applied to an index of hosts. There are four available indexes, numbered 1 through 4.

all – Specifies that all syslog hosts will be deleted.

Restrictions Only administrator-level users can issue this command.

Example usage:

To delete a previously configured syslog host:

DXS-3326GSR:4#delete syslog host 4

Command: delete syslog host 4

Success.

DXS-3326GSR:4#

show syslog host

Purpose	Used to display the syslog hosts currently configured on the Switch.
Syntax	show syslog host {<index 1-4>}
Description	The show syslog host command is used to display the syslog hosts that are currently configured on the Switch.
Parameters	<i><index 1-4></i> – Specifies that the command will be applied to an index of hosts. There are four available indexes, numbered 1 through 4.
Restrictions	None.

Example usage:

To show syslog host information:

DXS-3326GSR:4#show syslog host

Command: show syslog host

Syslog Global State: Disabled

Host Id	Host IP Address	Severity	Facility	UDP port	Status
-----	-----	-----	-----	-----	-----
1	10.1.1.2	All	Local0	514	Disabled
2	10.40.2.3	All	Local0	514	Disabled
3	10.21.13.1	All	Local0	514	Disabled

Total Entries : 3

DXS-3326GSR:4#

MULTIPLE SPANNING TREE PROTOCOL (MSTP) COMMANDS

This switch supports three versions of the Spanning Tree Protocol; 802.1d STP, 802.1w Rapid STP and 802.1s MSTP. Multiple Spanning Tree Protocol, or MSTP, is a standard defined by the IEEE community that allows multiple VLANs to be mapped to a single spanning tree instance, which will provide multiple pathways across the network. Therefore, these MSTP configurations will balance the traffic load, preventing wide scale disruptions when a single spanning tree instance fails. This will allow for faster convergences of new topologies for the failed instance. Frames designated for these VLANs will be processed quickly and completely throughout interconnected bridges utilizing either of the three spanning tree protocols (STP, RSTP or MSTP). This protocol will also tag BPDU packets so receiving devices can distinguish spanning tree instances, spanning tree regions and the VLANs associated with them. These instances will be classified by an *instance_id*. MSTP will connect multiple spanning trees with a Common and Internal Spanning Tree (CIST). The CIST will automatically determine each MSTP region, its maximum possible extent and will appear as one virtual bridge that runs a single spanning tree. Consequentially, frames assigned to different VLANs will follow different data routes within administratively established regions on the network, continuing to allow simple and full processing of frames, regardless of administrative errors in defining VLANs and their respective spanning trees. Each switch utilizing the MSTP on a network will have a single MSTP configuration that will have the following three attributes:

- A configuration name defined by an alphanumeric string of up to 32 characters (defined in the *config stp mst_config_id* command as *name <string>*).
- A configuration revision number (named here as a *revision_level*) and;
- A 4096 element table (defined here as a *vid_range*) which will associate each of the possible 4096 VLANs supported by the Switch for a given instance.

To utilize the MSTP function on the Switch, three steps need to be taken:

- The Switch must be set to the MSTP setting (*config stp version*)
- The correct spanning tree priority for the MSTP instance must be entered (*config stp priority*).
- VLANs that will be shared must be added to the MSTP Instance ID (*config stp instance_id*).

The Multiple Spanning Tree Protocol commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
enable stp	
disable stp	
config stp version	[mstp rstp stp]
config stp	{maxage <value 6-40> maxhops <value 1-20> hellotime <value 1-10> forwarddelay <value 4-30> txholdcount <value 1-10> fbpdu [enable disable]}
config stp ports	<portlist> {externalCost [auto <value 1-200000000>] hellotime <value 1-10> migrate [yes no] edge [true false] p2p [true false auto] state [enable disable]}
create stp instance_id	<value 1-15>
config stp instance_id	<value 1-15> [add_vlan remove_vlan] <vidlist>
delete stp instance_id	<value 1-15>

Command	Parameters
config stp priority	<value 0-61440> instance_id <value 0-15>
config stp mst_config_id	{revision_level <int 0-65535> name <string>}
config stp mst_ports	<portlist> instance_id <value 0-15> {internalCost [auto value 1-200000000] priority <value 0-240>}
show stp	
show stp ports	{<portlist>}
show stp instance_id	{<value 0-15>}
show stp mst_config id	

Each command is listed, in detail, in the following sections.

enable stp

Purpose	Used to globally enable STP on the Switch.
Syntax	enable stp
Description	This command allows the Spanning Tree Protocol to be globally enabled on the Switch.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To enable STP, globally, on the Switch:

```
DXS-3326GSR:4#enable stp
Command: enable stp

Success.

DXS-3326GSR:4#
```

disable stp

Purpose	Used to globally disable STP on the Switch.
Syntax	disable stp
Description	This command allows the Spanning Tree Protocol to be globally disabled on the Switch.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To disable STP on the Switch:

DXS-3326GSR:4#disable stp

Command: disable stp

Success.

DXS-3326GSR:4#

config stp version

Purpose	Used to globally set the version of STP on the Switch.
Syntax	config stp version [mstp rstp stp]
Description	This command allows the user to choose the version of the spanning tree to be implemented on the Switch.
Parameters	<i>mstp</i> – Selecting this parameter will set the Multiple Spanning Tree Protocol (MSTP) globally on the Switch. <i>rstp</i> - Selecting this parameter will set the Rapid Spanning Tree Protocol (RSTP) globally on the Switch. <i>stp</i> - Selecting this parameter will set the Spanning Tree Protocol (STP) globally on the Switch.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To set the Switch globally for the Multiple Spanning Tree Protocol(MSTP):

DXS-3326GSR:4#config stp version mstp

Command: config stp version mstp

Success.

DXS-3326GSR:4#

config stp

Purpose	Used to setup STP, RSTP and MSTP on the Switch.
Syntax	config stp {maxage <value 6-40> maxhops <value 1-20> hellotime <1-10> forwarddelay <value 4-30> txholdcount <value 1-10> fbpdu [enable disable]}
Description	This command is used to setup the Spanning Tree Protocol (STP) for the entire switch. All commands here will be implemented for the STP version that is currently set on the Switch.

config stp**Parameters**

maxage <value 6-40> – This value may be set to ensure that old information does not endlessly circulate through redundant paths in the network, preventing the effective propagation of the new information. Set by the Root Bridge, this value will aid in determining that the Switch has spanning tree configuration values consistent with other devices on the bridged LAN. If the value ages out and a BPDU has still not been received from the Root Bridge, the Switch will start sending its own BPDU to all other switches for permission to become the Root Bridge. If it turns out that your switch has the lowest Bridge Identifier, it will become the Root Bridge. The user may choose a time between 6 and 40 seconds. The default value is 20.

maxhops <value 1-20> - The number of hops between devices in a spanning tree region before the BPDU (bridge protocol data unit) packet sent by the Switch will be discarded. Each switch on the hop count will reduce the hop count by one until the value reaches zero. The Switch will then discard the BPDU packet and the information held for the port will age out. The user may set a hop count from 1 to 20. The default is 20.

hellotime <value 1-10> – The user may set the time interval between transmission of configuration messages by the root device in STP, or by the designated router in RSTP, thus stating that the Switch is still functioning. A time between 1 and 10 seconds may be chosen, with a default setting of 2 seconds.

In MSTP, the spanning tree is configured by port and therefore, the *hellotime* must be set using the **configure stp ports** command for switches utilizing the Multiple Spanning Tree Protocol.

forwarddelay <value 4-30> – The maximum amount of time (in seconds) that the root device will wait before changing states. The user may choose a time between 4 and 30 seconds. The default is 15 seconds.

txholdcount <1-10> - the maximum number of BPDU Hello packets transmitted per interval. Default value = 3.

fbpdu [enable | disable] – Allows the forwarding of STP BPDU packets from other network devices when STP is disabled on the Switch. The default is *enable*.

Restrictions

Only administrator-level users can issue this command.

Example usage:

To configure STP with maxage 18 and maxhops of 15:

```
DXS-3326GSR:4#config stp maxage 18 maxhops 15
```

```
Command: config stp maxage 18 maxhops 15
```

```
Success.
```

```
DXS-3326GSR:4#
```

config stp ports

Purpose	Used to setup STP on the port level.
Syntax	config stp ports <portlist> {externalCost [auto <value 1-200000000>] hellotime <value 1-10> migrate [yes no] edge [true false] p2p [true false auto] state [enable disable]}
Description	This command is used to create and configure STP for a group of ports.
Parameters	<portlist> – Specifies a range of ports to be configured. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order. externalCost – This defines a metric that indicates the relative cost of forwarding packets to the specified port list. Port cost can be set automatically or as a metric value. The default value is <i>auto</i>. ▪ <i>auto</i> – Setting this parameter for the external cost will automatically set the speed for forwarding packets to the specified port(s) in the list for optimal efficiency. Default port cost: 100Mbps port = 200000. Gigabit port = 20000. ▪ <i><value 1-200000000></i> - Define a value between 1 and 200000000 to determine the external cost. The lower the number, the greater the probability the port will be chosen to forward packets. hellotime <value 1-10> – The time interval between transmission of configuration messages by the designated port, to other devices on the bridged LAN, thus stating that the Switch is still functioning. The user may choose a time between 1 and 10 seconds. The default is 2 seconds. migrate [yes no] – Setting this parameter as “yes” will set the ports to send out BDPUs packets to other bridges, requesting information on their STP setting. If the Switch is configured for RSTP, the port will be capable to migrate from 802.1d STP to 802.1w RSTP. If the Switch is configured for MSTP, the port is capable of migrating from 802.1d STP to 802.1s MSTP. RSTP and MSTP can coexist with standard STP, however the benefits of RSTP and MSTP are not realized on a port where an 802.1d network connects to an 802.1w or 802.1s enabled network. Migration should be set as yes on ports connected to network stations or segments that are capable of being upgraded to 802.1w RSTP or 802.1s MSTP on all or some portion of the segment. edge [true false] – <i>true</i> designates the port as an edge port. Edge ports cannot create loops, however an edge port can lose edge port status if a topology change creates a potential for a loop. An edge port normally should not receive BPDU packets. If a BPDU packet is received it automatically loses edge port status.

config stp ports

false indicates that the port does not have edge port status.

p2p [true | false | auto] – *true* indicates a point-to-point (P2P) shared link. P2P ports are similar to edge ports however they are restricted in that a P2P port must operate in full-duplex. Like edge ports, P2P ports transition to a forwarding state rapidly thus benefiting from RSTP. A *p2p* value of *false* indicates that the port cannot have *p2p* status. *auto* allows the port to have *p2p* status whenever possible and operate as if the *p2p* status were *true*. If the port cannot maintain this status (for example if the port is forced to half-duplex operation) the *p2p* status changes to operate as if the *p2p* value were *false*. The default setting for this parameter is *auto*.

state [enable | disable] – Allows STP to be enabled or disabled for the ports specified in the port list. The default is *enable*.

Restrictions

Only administrator-level users can issue this command.

Example usage:

To configure STP with path cost 19, hellotime set to 5 seconds, migration enable, and state enable for ports 1-5 of module 1.

```
DXS-3326GSR:4#config stp ports 1:1-1:5 externalCost 19
hellotime 5 migrate yes state enable

Command: config stp ports 1:1-1:5 externalCost 19 hellotime 5
migrate yes state enable

Success.

DXS-3326GSR:4#
```

create stp instance_id

Purpose	Used to create a STP instance ID for MSTP.
Syntax	create stp instance_id <value 1-15>
Description	This command allows the user to create a STP instance ID for the Multiple Spanning Tree Protocol. There are 16 STP instances on the Switch (one internal CIST, unchangeable) and the user may create up to 15 instance IDs for the Switch.
Parameters	<value 1-15> - Enter a value between 1 and 15 to identify the Spanning Tree instance on the Switch.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To create a spanning tree instance 2:

DXS-3326GSR:4#create stp instance_id 2

Command: create stp instance_id 2

Success.

DXS-3326GSR:4#

config stp instance_id

Purpose	Used to add or delete an STP instance ID.
Syntax	config stp instance_id <value 1-15> [add_vlan remove_vlan] <vidlist>
Description	This command is used to map VIDs (VLAN IDs) to previously configured STP instances on the Switch by creating an <i>instance_id</i>. A STP instance may have multiple members with the same MSTP configuration. There is no limit to the number of STP regions in a network but each region only supports a maximum of 16 spanning tree instances (one unchangeable default entry). VIDs can belong to only one spanning tree instance at a time. Note that switches in the same spanning tree region having the same STP <i>instance_id</i> must be mapped identically, and have the same configuration <i>revision_level</i> number and the same <i>name</i>.
Parameters	<value 1-15> - Enter a number between 1 and 15 to define the <i>instance_id</i>. The Switch supports 16 STP regions with one unchangeable default instance ID set as 0. ▪ <i>add_vlan</i> – Along with the <i>vid_range</i> <vidlist> parameter, this command will add VIDs to the previously configured STP <i>instance_id</i>. ▪ <i>remove_vlan</i> - Along with the <i>vid_range</i> <vidlist> parameter, this command will remove VIDs to the previously configured STP <i>instance_id</i>. ▪ <vidlist> - Specify the VID range from configured VLANs set on the Switch. Supported VIDs on the Switch range from ID number 1 to 4094.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To configure instance id 2 to add VID 10:

DXS-3326GSR:4#config stp instance_id 2 add_vlan 10

Command : config stp instance_id 2 add_vlan 10

Success.

```
DXS-3326GSR:4#
```

Example usage:

To remove VID 10 from instance id 2:

```
DXS-3326GSR:4#config stp instance_id 2 remove_vlan 10
```

Command : config stp instance_id 2 remove_vlan 10

Success.

```
DXS-3326GSR:4#
```

delete stp instance_id

Purpose	Used to delete a STP instance ID from the Switch.
Syntax	delete stp instance_id <value 1-15>
Description	This command allows the user to delete a previously configured STP instance ID from the Switch.
Parameters	<i><value 1-15></i> - Enter a value between 1 and 15 to identify the Spanning Tree instance on the Switch.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To delete stp instance id 2 from the Switch.

```
DXS-3326GSR:4#delete stp instance_id 2
```

Command: delete stp instance_id 2

Success.

```
DXS-3326GSR:4#
```

config stp priority

Purpose	Used to update the STP instance configuration
Syntax	config stp priority <value 0-61440> instance_id <value 0-15>
Description	This command is used to update the STP instance configuration settings on the Switch. The MSTP will utilize the priority in selecting the root bridge, root port and designated port. Assigning higher priorities to STP regions will instruct the Switch to give precedence to the selected <i>instance_id</i> for forwarding packets. The lower the priority value set, the higher the priority.
Parameters	<i>priority <value 0-61440></i> - Select a value between 0 and 61440 to specify the priority for a specified instance_id for forwarding

config stp priority

specify the priority for a specified instance id for forwarding packets. The lower the value, the higher the priority. This entry must be divisible by 4096.

instance_id <value 0-15> - Enter the value corresponding to the previously configured instance id of which the user wishes to set the priority value. An instance id of 0 denotes the default *instance_id* (CIST) internally set on the Switch.

Restrictions

Only administrator-level users can issue this command.

Example usage:

To set the priority value for instance_id 2 as 4096.

DXS-3326GSR:4#config stp priority 4096 instance_id 2

Command : config stp priority 4096 instance_id 2

Success.

DXS-3326GSR:4#

config stp mst_config_id**Purpose**

Used to update the MSTP configuration identification.

Syntax

config stp mst_config_id {revision_level <int 0-65535> | name <string 32>}

Description

This command will uniquely identify the MSTP configuration currently configured on the Switch. Information entered here will be attached to BDPU packets as an identifier for the MSTP region to which it belongs. Switches having the same *revision_level* and *name* will be considered as part of the same MSTP region.

Parameters

revision_level <int 0-65535> – Enter a number between 0 and 65535 to identify the MSTP region. This value, along with the name will identify the MSTP region configured on the Switch. The default setting is 0.

name <string> - Enter an alphanumeric string of up to 32 characters to uniquely identify the MSTP region on the Switch. This *name*, along with the *revision_level* value will identify the MSTP region configured on the Switch. If no *name* is entered, the default name will be the MAC address of the device.

Restrictions

Only administrator-level users can issue this command.

Example usage:

To configure the MSTP region of the Switch with *revision_level* 10 and the *name* “Trinity”:

DXS-3326GSR:4#config stp mst_config_id revision_level 10 name Trinity

Command : config stp mst_config_id revision_level 10 name Trinity

Success.

DXS-3326GSR:4#

config stp mst_ports

Purpose	Used to update the port configuration for a MSTP instance.
Syntax	config stp mst_ports <portlist> instance_id <value 0-15> {internalCost [auto <value 1-20000000>] `priority <value 0-240>
Description	This command will update the port configuration for a STP <i>instance_id</i> . If a loop occurs, the MSTP function will use the port priority to select an interface to put into the forwarding state. Set a higher priority value for interfaces to be selected for forwarding first. In instances where the priority value is identical, the MSTP function will implement the lowest port number into the forwarding state and other interfaces will be blocked. Remember that lower priority values mean higher priorities for forwarding packets.
Parameters	<i><portlist></i> - Specifies a port or range of ports to be configured. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order. <i>instance_id <value 0-15></i> - Enter a numerical value between 0 and 15 to identify the <i>instance_id</i> previously configured on the Switch. An entry of 0 will denote the CIST (Common and Internal Spanning Tree). <i>internalCost</i> – This parameter is set to represent the relative cost of forwarding packets to specified ports when an interface is selected within a STP instance. The default setting is <i>auto</i>. There are two options: ▪ <i>auto</i> – Selecting this parameter for the <i>internalCost</i> will set quickest route automatically and optimally for an interface. The default value is derived from the media speed of the interface. ▪ <i>value 1-20000000</i> – Selecting this parameter with a value in the range of 1-20000000 will set the quickest route when a loop occurs. A lower <i>internalCost</i> represents a quicker transmission. <i>priority <value 0-240></i> - Enter a value between 0 and 240 to set the priority for the port interface. A higher priority will designate the interface to forward packets first. A lower number denotes a higher priority.

config stp mst_ports

Restrictions	Only administrator-level users can issue this command.
--------------	--

Example usage:

To designate ports 1 through 5 on module one, with instance id 2, to have an auto internalCost and a priority of 16:

```
DXS-3326GSR:4#config stp mst_config_id ports 1:1-1:5
instance_id 2 internalCost auto priority 16

Command : config stp mst_config_id ports 1:1-1:5 instance_id 2
internalCost auto priority 16
```

Success.

DXS-3326GSR:4#

show stp

Purpose	Used to display the Switch's current STP configuration.
Syntax	show stp
Description	This command displays the Switch's current STP configuration.
Parameters	None.
Restrictions	None.

Example usage:

To display the status of STP on the Switch:

Status 1: STP enabled with STP compatible version

```
DXS-3326GSR:4#show stp
Command: show stp

STP Status           : Enabled
STP Version           : STP Compatible
Max Age               : 20
Hello Time            : 2
Forward Delay         : 15
Max Age               : 20
TX Hold Count         : 3
Forwarding BPDU       : Enabled

DXS-3326GSR:4#
```

Status 2 : STP enabled for RSTP

```
DXS-3326GSR:4#show stp
Command: show stp
```

```

STP Status          : Enabled
STP Version         : RSTP
Max Age             : 20
Hello Time          : 2
Forward Delay       : 15
Max Age             : 20
TX Hold Count       : 3
Forwarding BPDU     : Enabled

```

DXS-3326GSR:4#

Status 3 : STP enabled for MSTP

```

DXS-3326GSR:4#show stp
Command: show stp

STP Status          : Enabled
STP Version         : MSTP
Max Age             : 20
Forward Delay       : 15
Max Age             : 20
TX Hold Count       : 3
Forwarding BPDU     : Enabled

```

DXS-3326GSR:4#

show stp ports

Purpose	Used to display the Switch's current <i>instance_id</i> configuration.
Syntax	show stp ports <portlist>
Description	This command displays the STP Instance Settings and STP Instance Operational Status currently implemented on the Switch.
Parameters	<i><portlist></i> – Specifies a range of ports to be viewed. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.
Restrictions	None

Example usage:

To show stp ports 1 through 9 on switch one:

DXS-3326GSR:4#show stp ports 1:1-1:9

Command: show stp ports 1:1-1:9

MSTP Port Information

Port Index : 1:1 , **Hello Time:** 2 /2 , **Port STP enabled**
External PathCost : Auto/200000 , **Edge Port** : No /No , **P2P** : Auto /Yes

Msti	Designated Bridge	Internal PathCost	Prio	Status	Role
----	-----	-----	----	-----	-----
0	8000/0050BA7120D6	200000	128	Forwarding	Root
1	8001/0053131A3324	200000	128	Forwarding	Master

CTRL+C ESC q Quit SPACE n Next Page p Previous Page r Refresh

show stp instance_id

Purpose	Used to display the Switch's STP instance configuration
Syntax	show stp instance_id <value 0-15>
Description	This command displays the Switch's current STP Instance Settings and the STP Instance Operational Status.
Parameters	<value 0-15> - Enter a value defining the previously configured <i>instance_id</i> on the Switch. An entry of 0 will display the STP configuration for the CIST internally set on the Switch.
Restrictions	None

Example usage:

To display the STP instance configuration for instance 0 (the internal CIST) on the Switch:

DXS-3326GSR:4#show stp instance 0

Command: show stp instance 0

STP Instance Settings

Instance Type : CIST
Instance Status : Enabled
Instance Priority : 32768(bridge priority : 32768, sys ID ext : 0)

STP Instance Operational Status

Designated Root Bridge : 32766/00-90-27-39-78-E2

```

External Root Cost      : 200012
Regional Root Bridge   : 32768/00-53-13-1A-33-24
Internal Root Cost     : 0
Designated Bridge      : 32768/00-50-BA-71-20-D6
Root Port              : 1:1
Max Age                : 20
Forward Delay          : 15
Last Topology Change   : 856
Topology Changes Count : 2987

CTRL+C ESC q Quit SPACE n Next Page p Previous Page r Refresh

```

show stp mst_config_id

Purpose	Used to display the MSTP configuration identification.
Syntax	show stp mst_config_id
Description	This command displays the Switch's current MSTP configuration identification.
Parameters	None
Restrictions	None

Example usage:

To show the MSTP configuration identification currently set on the Switch:

```

DXS-3326GSR:4#show stp mst_config_id
Command: show stp mst_config_id

Current MST Configuration Identification
-----

Configuration Name : 00:53:13:1A:33:24           Revision Level :0
MSTI ID   Vid list
-----
CIST      2-4094
1         1

DXS-3326GSR:4#

```

FORWARDING DATABASE COMMANDS

The forwarding database commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
create fdb	<vlan_name 32> <macaddr> port <port>
create multicast_fdb	<vlan_name 32> <macaddr>
config multicast_fdb	<vlan_name 32> <macaddr> [add delete] <portlist>
config fdb aging_time	<sec 10-1000000>
delete fdb	<vlan_name 32> <macaddr>
clear fdb	[vlan <vlan_name 32> port <port> all]
show multicast_fdb	{vlan <vlan_name 32> mac_address <macaddr>}
show fdb	{port <port> vlan <vlan_name 32> mac_address <macaddr> static aging_time}
show ipfdb	{<ipaddr>}
config fdb destination_hit ports	[<portlist> all] {enable disable}
show fdb destination_hit ports	{<portlist>}

Each command is listed, in detail, in the following sections.

create fdb

Purpose	Used to create a static entry to the unicast MAC address forwarding table (database).
Syntax	create fdb <vlan_name 32> <macaddr> [port <port>]
Description	This command will make an entry into the Switch's unicast MAC address forwarding database.
Parameters	<vlan_name 32> – The name of the VLAN on which the MAC address resides. <macaddr> – The MAC address that will be added to the forwarding table. port <port> – The port number corresponding to the MAC destination address. The Switch will always forward traffic to the specified device through this port. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4

create fdb

specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.

Restrictions

Only administrator-level users can issue this command.

Example usage:

To create a unicast MAC FDB entry:

DXS-3326GSR:4#create fdb default 00-00-00-00-01-02 port 2:5

Command: create fdb default 00-00-00-00-01-02 port 2:5

Success.

DXS-3326GSR:4#

create multicast_fdb**Purpose**

Used to create a static entry to the multicast MAC address forwarding table (database)

Syntax

create multicast_fdb <vlan_name 32> <macaddr>

Description

This command will make an entry into the Switch's multicast MAC address forwarding database.

Parameters

<vlan_name 32> – The name of the VLAN on which the MAC address resides.

<macaddr> – The MAC address that will be added to the forwarding table.

Restrictions

Only administrator-level users can issue this command.

Example usage:

To create multicast MAC forwarding:

DXS-3326GSR:4#create multicast_fdb default 01-00-00-00-00-01

Command: create multicast_fdb default 01-00-00-00-00-01

Success.

DXS-3326GSR:4#

config multicast_fdb**Purpose**

Used to configure the Switch's multicast MAC address forwarding database.

config multicast_fdb

Syntax	config multicast_fdb <vlan_name 32> <macaddr> [add delete] <portlist>
Description	This command configures the multicast MAC address forwarding table.
Parameters	<vlan_name 32> – The name of the VLAN on which the MAC address resides. <macaddr> – The MAC address that will be added to the multicast forwarding table. [add delete] – Add will add ports to the forwarding table. Delete will remove ports from the multicast forwarding table. ▪ <portlist> – Specifies a range of ports to be configured. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To add multicast MAC forwarding:

```
DXS-3326GSR:4#config multicast_fdb default 01-00-00-00-00-01 add 1:1-1:5
Command: config multicast_fdb default 01-00-00-00-00-01 add 1:1-1:5

Success.

DXS-3326GSR:4#
```

config fdb aging_time

Purpose	Used to set the aging time of the forwarding database.
Syntax	config fdb aging_time <sec 10-1000000>
Description	The aging time affects the learning process of the Switch. Dynamic forwarding table entries, which are made up of the source MAC addresses and their associated port numbers, are deleted from the table if they are not accessed within the aging time. The aging time can be from 10 to 1000000 seconds with a default value of 300 seconds. A very long aging time can result in dynamic forwarding table entries that are out-of-date or no longer exist. This may cause incorrect packet forwarding decisions by the Switch. If the aging time is too short however, many entries may

config fdb aging_time

	be aged out too soon. This will result in a high percentage of received packets whose source addresses cannot be found in the forwarding table, in which case the Switch will broadcast the packet to all ports, negating many of the benefits of having a switch.
Parameters	<sec 10-1000000> – The aging time for the MAC address forwarding database value. The value in seconds may be between 10 and 1000000 seconds. The default is 300 seconds.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To set the fdb aging time:

```
DXS-3326GSR:4#config fdb aging_time 300
Command: config fdb aging_time 300

Success.

DXS-3326GSR:4#
```

delete fdb

Purpose	Used to delete an entry to the Switch's forwarding database.
Syntax	delete fdb <vlan_name 32> <macaddr>
Description	This command is used to delete a previous entry to the Switch's MAC address forwarding database.
Parameters	<vlan_name 32> – The name of the VLAN on which the MAC address resides. <macaddr> – The MAC address that will be deleted from the forwarding table.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To delete a permanent FDB entry:

```
DXS-3326GSR:4#delete fdb default 00-00-00-00-01-02
Command: delete fdb default 00-00-00-00-01-02

Success.

DXS-3326GSR:4#
```

Example usage:

To delete a multicast fdb entry:

DXS-3326GSR:4#delete fdb default 01-00-00-00-01-02

Command: delete fdb default 01-00-00-00-01-02

Success.

DXS-3326GSR:4#

clear fdb

Purpose	Used to clear the Switch's forwarding database of all dynamically learned MAC addresses.
Syntax	clear fdb [vlan <vlan_name 32> port <port> all]
Description	This command is used to clear dynamically learned entries to the Switch's forwarding database.
Parameters	<i>vlan <vlan_name 32></i> – The name of the VLAN on which the MAC address resides. <i>port <port></i> – The port number corresponding to the MAC destination address. The Switch will always forward traffic to the specified device through this port. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order. <i>all</i> – Clears all dynamic entries to the Switch's forwarding database.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To clear all FDB dynamic entries:

DXS-3326GSR:4#clear fdb all

Command: clear fdb all

Success.

DXS-3326GSR:4#

show multicast_fdb

Purpose	Used to display the contents of the Switch's multicast forwarding database.
Syntax	show multicast_fdb [vlan <vlan_name 32> mac_address <macaddr>]
Description	This command is used to display the current contents of the Switch's multicast MAC address forwarding database.
Parameters	<vlan_name 32> – The name of the VLAN on which the MAC address resides. <macaddr> – The MAC address that is present in the forwarding database table.
Restrictions	None.

Example usage:

To display multicast MAC address table:

```
DXS-3326GSR:4#show multicast_fdb
```

```
Command: show multicast_fdb
```

```

VLAN Name      : default
MAC Address    : 01-00-5E-00-00-00
Egress Ports   : 1:1-1:5,1:26,2:26
Mode           : Static

```

```
Total Entries   : 1
```

```
DXS-3326GSR:4#
```

show fdb

Purpose	Used to display the current unicast MAC address forwarding database.
Syntax	show fdb {port <port> vlan <vlan_name 32> mac_address <macaddr> static aging_time}
Description	This command will display the current contents of the Switch's forwarding database.
Parameters	<i>port <port></i> – The port number corresponding to the MAC destination address. The Switch will always forward traffic to the specified device through this port. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3

show fdb

specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.

<vlan_name 32> – The name of the VLAN on which the MAC address resides.

<macaddr> – The MAC address that is present in the forwarding database table.

static – Displays the static MAC address entries.

aging_time – Displays the aging time for the MAC address forwarding database.

Restrictions

None.

Example usage:

To display unicast MAC address table:

```
DXS-3326GSR:4#show fdb
Command: show fdb

Unicast MAC Address Aging Time = 300

VID  VLAN Name      MAC Address      Port      Type
---  -
1    default        00-00-39-34-66-9A  1:12      Dynamic
1    default        00-00-51-43-70-00  1:12      Dynamic
1    default        00-00-5E-00-01-01  1:12      Dynamic
1    default        00-00-74-60-72-2D  1:12      Dynamic
1    default        00-00-81-05-00-80  1:12      Dynamic
1    default        00-00-81-05-02-00  1:12      Dynamic
1    default        00-00-81-48-70-01  1:12      Dynamic
1    default        00-00-E2-4F-57-03  1:12      Dynamic
1    default        00-00-E2-61-53-18  1:12      Dynamic
1    default        00-00-E2-6B-BC-F6  1:12      Dynamic
1    default        00-00-E2-7F-6B-53  1:12      Dynamic
1    default        00-00-E2-82-7D-90  1:12      Dynamic
1    default        00-00-F8-7C-1C-29  1:12      Dynamic
1    default        00-01-02-03-04-00  CPU       Self
1    default        00-01-02-03-04-05  1:12      Dynamic
1    default        00-01-30-10-2C-C7  1:12      Dynamic
1    default        00-01-30-FA-5F-00  1:12      Dynamic
1    default        00-02-3F-63-DD-68  1:12      Dynamic
CTRL+C ESC q Quit SPACE n Next Page ENTER Next Entry a All
```

show ipfdb

Purpose	Used to display the current IP address forwarding database table.
Syntax	show ipfdb <ipaddr>
Description	This command will display the current contents of the Switch's IP forwarding database.
Parameters	<ipaddr> - The user may enter an IP address to view the table by.
Restrictions	None.

Example usage:

To view the IP forwarding database table:

DXS-3326GSR:4#show ipfdb

Command: show ipfdb

Interface	IP Address	Port	Learned
-----	-----	---	-----
System	10.0.0.1	1:13	Dynamic
System	10.0.0.2	1:13	Dynamic
System	10.0.0.3	1:13	Dynamic
System	10.0.0.4	1:13	Dynamic
System	10.0.0.7	1:13	Dynamic
System	10.0.0.30	1:13	Dynamic
System	10.0.34.1	1:13	Dynamic
System	10.0.51.1	1:13	Dynamic
System	10.0.58.4	1:13	Dynamic
System	10.0.85.168	1:13	Dynamic
System	10.1.1.1	1:13	Dynamic
System	10.1.1.99	1:13	Dynamic
System	10.1.1.101	1:13	Dynamic
System	10.1.1.102	1:13	Dynamic
System	10.1.1.103	1:13	Dynamic
System	10.1.1.152	1:13	Dynamic
System	10.1.1.157	1:13	Dynamic
System	10.1.1.161	1:13	Dynamic
System	10.1.1.162	1:13	Dynamic
System	10.1.1.163	1:13	Dynamic

CTRL+C ESC q Quit SPACE n Next Page ENTER Next Entry a All

config fdb destination_hit ports

Purpose	To set specified ports as destination hit ports for the forwarding database table.
Syntax	config fdb destination_hit ports [<portlist> all] [enable disable]
Description	This command will allow the user to define certain ports on the Switch as destination hit ports. These destination hit ports will keep FDB entries learned in the forwarding database table from aging out.

config fdb destination_hit ports

	When a packet with a destination MAC address is received by one of these ports, the packet will refresh the MAC address in the forwarding database table, once a match has been made, so that it will not age out.
Parameters	<portlist> - Specify a port or ports to be enabled or disabled as destination hit ports on the Switch. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order. <all> - Specifies that all ports on the Switch will be enabled or disabled as destination hit ports. [enable disable] – Used to enable or disable the ports listed in the <portlist> above to be destination hit ports.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To configure ports 1 to 5 as destination hit ports:

DXS-3326GSR:4#config fdb destination_hit ports 1:1-1:5 enable

Command: config fdb destination_hit ports 1:1-1:5 enable

Success.

DXS-3326GSR:4#

show fdb destination_hit ports

Purpose	To view the destination hit port status of ports on the Switch.
Syntax	show fdb destination_hit ports {<portlist>}
Description	This command will allow users to view the destination hit port status of ports listed in the portlist.
Parameters	{<portlist>} - Specify a port or ports to be displayed. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.

show fdb destination_hit ports

Entering this command without a specified *<portlist>* will allow the user to view the destination hit port status of all ports on the Switch.

Restrictions None.

Example usage:

To view the destination hit port status:

DXS-3326GSR:4#show fdb destination_hit ports 1:1-1:10

Command: show fdb destination_hit ports 1:1-1:10

Port #	Destination Hit State
---------------	------------------------------

-----	-----
-------	-------

1:1	Enabled
------------	----------------

1:2	Enabled
------------	----------------

1:3	Enabled
------------	----------------

1:4	Enabled
------------	----------------

1:5	Enabled
------------	----------------

1:6	Disabled
------------	-----------------

1:7	Disabled
------------	-----------------

1:8	Disabled
------------	-----------------

1:9	Disabled
------------	-----------------

1:10	Disabled
-------------	-----------------

CTRL+C ESC q Quit SPACE n Next Page ENTER Next Entry a All

BROADCAST STORM CONTROL COMMANDS

The broadcast storm control commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
config traffic control	[<storm_grouplist> all] { broadcast [enable disable] multicast [enable disable] dlf [enable disable] threshold <value 0-255> }
show traffic control	{group_list <storm_grouplist>}

Each command is listed, in detail, in the following sections.

config traffic control

Purpose	Used to configure broadcast/multicast traffic control.
Syntax	config traffic control [<storm_grouplist> all] {broadcast [enable disable] multicast [enable disable] dlf [enable disable] threshold <value 0-255>}
Description	This command is used to configure broadcast storm control.
Parameters	<storm_grouplist> – Used to specify a broadcast storm control group. This is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order. all – Specifies all broadcast storm control groups on the Switch. broadcast [enable disable] – Enables or disables broadcast storm control. multicast [enable disable] – Enables or disables multicast storm control. dlf [enable disable] – Enables or disables dlf traffic control. threshold <value 0-255> – The upper threshold at which the specified traffic control is switched on. The <value> is the number of broadcast/multicast/dlf packets, in Kbps, received by the Switch that will trigger the storm traffic control measures.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To configure traffic control and enable broadcast storm control system wide:

DXS-3326GSR:4#config traffic control all broadcast enable

Command: config traffic control all broadcast enable

Success.

DXS-3326GSR:4#

show traffic control

Purpose	Used to display current traffic control settings.
Syntax	show traffic control {group_list <storm_grouplist>}
Description	This command displays the current storm traffic control configuration on the Switch.
Parameters	<i>group_list <storm_grouplist></i> – Used to specify a broadcast storm control group. This is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.
Restrictions	None.

Example usage:

To display traffic control setting:

DXS-3326GSR:4#show traffic control group_list 1:1-1:5

Command: show traffic control group_list 1:1-1:5

Traffic Control

Module	Group [ports]	Threshold	Broadcast Storm	Multicast Storm	Destination Lookup Fail
-----	-----	-----	-----	-----	-----
1	1	128	Disabled	Disabled	Disabled
1	2	128	Disabled	Disabled	Disabled
1	3	128	Disabled	Disabled	Disabled
1	4	128	Disabled	Disabled	Disabled
1	5	128	Disabled	Disabled	Disabled

Total Entries: 5

DXS-3326GSR:4#

QoS COMMANDS

The DXS-3326GSR switch supports 802.1p priority queuing. The Switch has eight hardware priority queues, one of which is internal and unconfigurable. These hardware priority queues are numbered from 6 (Class 6) — the highest hardware priority queue — to 0 (Class 0) — the lowest hardware priority queue. The eight priority tags specified in IEEE 802.1p (p0 to p7) are mapped to the Switch's hardware priority queues as follows:

- Priority 0 is assigned to the Switch's Q2 queue.
- Priority 1 is assigned to the Switch's Q0 queue.
- Priority 2 is assigned to the Switch's Q1 queue.
- Priority 3 is assigned to the Switch's Q3 queue.
- Priority 4 is assigned to the Switch's Q4 queue.
- Priority 5 is assigned to the Switch's Q5 queue.
- Priority 6 is assigned to the Switch's Q6 queue.
- Priority 7 is assigned to the Switch's Q6 queue.

Priority scheduling is implemented using two types of methods, strict priority and weight fair priority. If no changes are made to the QoS priority scheduling settings the method used is strict priority.

For strict priority-based scheduling, packets residing in the higher hardware priority queues are transmitted first. Only when these queues are empty, are packets of lower hardware priority allowed to be transmitted. Higher priority tagged packets always receive precedence regardless of the amount of lower priority tagged packets in the buffer and regardless of the time elapsed since any lower priority tagged packets have been transmitted. By default, the Switch is configured to empty the buffer using strict priority.



NOTICE: The default QoS scheduling arrangement is a strict priority schedule. To customize scheduling to set up weight fair queue clearing, the MAX. Packets values need to be changed using the `config scheduling` command. See **config scheduling** below.

To use implement weight fair priority, the Switch's seven hardware priority queues can be configured to reduce the buffer in a weighted round-robin (**WRR**) fashion - beginning with the highest hardware priority queue, and proceeding to the lowest hardware priority queue before returning to the highest hardware priority queue.

The weighted-priority based scheduling alleviates the main disadvantage of strict priority-based scheduling – in that lower priority queues get starved of bandwidth – by providing a minimum bandwidth to all queues for transmission. This is accomplished by configuring the maximum number of packets allowed to be transmitted from a given priority queue and the maximum amount of time a given priority queue will have to wait before being allowed to transmit its accumulated packets. This establishes a Class of Service (CoS) for each of the Switch's eight hardware priority queues.

The possible range for maximum packets is: 0 to 15 packets.

The commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
config bandwidth_control	[<portlist> all] {rx_rate [no_limit <value 1-999>] tx_rate [no_limit <value 1-999>]}
show bandwidth_control	{<portlist>}
config scheduling	<class_id 0-6> {max_packet <value 0-15>}
show scheduling	
config 802.1p user_priority	{<priority 0-7> <class_id 0-6>}
show 802.1p user_priority	
config 802.1p default_priority	[<portlist> all] <priority 0-7>
show 802.1p default_priority	{<portlist>}
config scheduling_mechanism	[strict weight_fair]
show scheduling_mechanism	
enable hol_prevention	
disable hol_prevention	
show hol_prevention	

Each command is listed, in detail, in the following sections.

config bandwidth_control

Purpose	Used to configure bandwidth control on a by-port basis.
Syntax	config bandwidth_control [<portlist> all] {rx_rate [no_limit <value 1-999>] tx_rate [no_limit <value 1-999>]}
Description	The config bandwidth_control command is used to configure bandwidth on a by-port basis.
Parameters	<i><portlist></i> – Specifies a range of ports to be configured. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order. <i>all</i> – Choose this parameter to select all configurable ports. <i>rx_rate</i> – Specifies that one of the parameters below (<i>no_limit</i> or <i><value 1-999></i>) will be applied to the rate at which the above specified ports will be allowed to receive packets ▪ <i>no_limit</i> – Specifies that there will be no limit on the rate

config bandwidth_control

of packets received by the above specified ports.

- **<value 1-999>** – Specifies the packet limit, in Mbps, that the above ports will be allowed to receive.

tx_rate – Specifies that one of the parameters below (**no_limit** or **<value 1-999>**) will be applied to the rate at which the above specified ports will be allowed to transmit packets.

- **no_limit** – Specifies that there will be no limit on the rate of packets received by the above specified ports.
- **<value 1-999>** – Specifies the packet limit, in Mbps, that the above ports will be allowed to receive.

Restrictions

Only administrator-level users can issue this command.

Example usage:

To configure bandwidth control:

```
DXS-3326GSR:4#config bandwidth_control 1:1-1:10 tx_rate
10
Command: config bandwidth_control 1:1-1:10 tx_rate 10

Success.

DXS-3326GSR:4#
```

show bandwidth_control

Purpose	Used to display the bandwidth control configuration on the Switch.
Syntax	show bandwidth_control {<portlist>}
Description	The show bandwidth_control command displays the current bandwidth control configuration on the Switch, on a port-by-port basis.
Parameters	<portlist> – Specifies a range of ports to be configured. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order. Using this command without adding a portlist entry will show the bandwidth control for all ports in the Switch stack.
Restrictions	None.

Example usage:

To display bandwidth control settings:

```
DXS-3326GSR:4#show bandwidth_control 1:1-1:10
```

```
Command: show bandwidth_control 1:1-1:10
```

Bandwidth Control Table

Port	RX Rate (Mbit/sec)	TX_RATE (Mbit/sec)
1:1	no_limit	10
1:2	no_limit	10
1:3	no_limit	10
1:4	no_limit	10
1:5	no_limit	10
1:6	no_limit	10
1:7	no_limit	10
1:8	no_limit	10
1:9	no_limit	10
1:10	no_limit	10

```
DXS-3326GSR:4#
```

config scheduling

Purpose	Used to configure traffic scheduling for each of the Switch's hardware priority queues.
Syntax	config scheduling <class_id 0-6> {max_packet <value 0-15>}
Description	The Switch contains eight hardware priority queues per device (one is reserved as an internal queue). The Switch's default settings draw down seven hardware queues in order, from the highest priority class (Class 6) to the lowest priority class (Class 0). Starting with the highest priority class (Class 6), the highest priority queue will transmit all of the packets and empty its buffer before allowing the next lower priority queue to transmit its packets. The next highest priority queue will empty before proceeding to the next queue and so on. Lower priority queues are allowed to transmit <u>only</u> if the higher priority queue(s) in the buffer are completely emptied. Packets in the higher priority queues are always emptied before any in the lower priority queues. The default settings for QoS scheduling employ this strict priority scheme to empty priority queues. The config scheduling command can be used to specify the weighted round-robin (WRR) rotation by which these seven hardware priority queues are reduced. To use a weighted round-robin (WRR) scheme, the <i>max_packets</i> parameters must not have a value of zero (0). (See Combination Queue below.) The max_packet parameter allows you to specify the maximum

config scheduling

number of packets a given priority queue can transmit per weighted round-robin (**WRR**) scheduling cycle. This provides for a controllable CoS behavior while allowing for other queues to empty as well. A value between 0 and 15 packets can be specified per priority queue.

Entering a 0 into the *<value 0-15>* field of the *max_packet* parameter allows for the creation of a **Combination Queue** for the forwarding of packets. This **Combination Queue** allows for a combination of strict and weight-fair (weighted round-robin "**WRR**") scheduling. Priority queues that have a 0 in the *max_packet* field will forward packets with strict priority scheduling. The remaining queues, that do not have a 0 in their *max_packet* field, will follow a weighted round-robin (**WRR**) method of forwarding packets — as long as the priority queues with a 0 in their *max_packet* field are empty. When a packet arrives in a priority queue with a 0 in its *max_packet* field, this queue will automatically begin forwarding packets until it is empty. Once a priority queue with a 0 in its *max_packet* field is empty, the remaining priority queues will reset the weighted round-robin (**WRR**) cycle of forwarding packets, starting with the highest available priority queue. Priority queues with an equal level of priority and equal entries in their *max_packet* field will empty their fields based on hardware priority scheduling.

Parameters

<class_id 0-6> – Specifies which of the seven hardware priority queues the **config scheduling** command will be applied to. The seven priority queues are identified by number – from 0 to 6 – with queue 6 being the highest priority.

max_packet <value 0-15> – Specifies the maximum number of packets the above specified priority queue will be allowed to transmit per weighted round-robin (**WRR**) cycle. A value between 0 and 15 packets can be specified. A zero (0) denotes strict priority scheduling for that priority queue.

Restrictions

Only administrator-level users can issue this command.



NOTICE: The default QoS scheduling arrangement is a strict priority schedule. To customize scheduling to set up weighted or round-robin queue clearing, the *max_packets* values need to be changed.

Example usage:

To configure traffic scheduling:

```
DXS-3326GSR:4# config scheduling 0 max_packet 15
```

```
Command: config scheduling 0 max_packet 15
```

```
Success.
```

```
DXS-3326GSR:4#
```

Example usage:

To configure a Combination Queue with a Class 6 priority queue, with strict priority, and the remaining Classes as weighted round robin (WRR) scheduling:

```
DXS-3326GSR:4# config scheduling 6 max_packet 0
```

```
Command: config scheduling 6 max_packet 0
```

Success.

```
DXS-3326GSR:4#
```

show scheduling

Purpose	Used to display the currently configured traffic scheduling on the Switch.
Syntax	show scheduling
Description	The show scheduling command displays the current configuration for the maximum number of packets (<i>max_packets</i>) assigned to the seven hardware priority queues on the Switch. At this value, it will empty the seven hardware priority queues in order, from the highest priority (queue 6) to the lowest priority (queue 0).
Parameters	None.
Restrictions	None.

Example usage:

To display the current scheduling configuration with Class 1 as the strict priority queue of a Combination Queue:

```
DXS-3326GSR:4# show scheduling
```

```
Command: show scheduling
```

QOS Output Scheduling

	MAX. Packets

Class-0	1
Class-1	0
Class-2	3
Class-3	4
Class-4	5
Class-5	6
Class-6	7

DXS-3326GSR:4#

config 802.1p user_priority

Purpose	Used to map the 802.1p user priority tags of an incoming packet to one of the seven hardware queues available on the Switch.																		
Syntax	config 802.1p user_priority <priority 0-7> <class_id 0-6>																		
Description	The config 802.1p user_priority command is used to configure the way the Switch will map an incoming packet, based on its 802.1p user priority tag, to one of the seven hardware priority queues available on the Switch. The Switch's default is to map the incoming 802.1p priority values to the seven hardware priority queues according to the following chart: <table> <tr> <th>802.1p Value</th><th>Switch Hardware Priority Queue</th></tr> <tr><td>0</td><td>2</td></tr> <tr><td>1</td><td>0</td></tr> <tr><td>2</td><td>1</td></tr> <tr><td>3</td><td>3</td></tr> <tr><td>4</td><td>4</td></tr> <tr><td>5</td><td>5</td></tr> <tr><td>6</td><td>6</td></tr> <tr><td>7</td><td>6</td></tr> </table>	802.1p Value	Switch Hardware Priority Queue	0	2	1	0	2	1	3	3	4	4	5	5	6	6	7	6
802.1p Value	Switch Hardware Priority Queue																		
0	2																		
1	0																		
2	1																		
3	3																		
4	4																		
5	5																		
6	6																		
7	6																		
Parameters	<priority 0-7> – Specifies which of the eight 802.1p priority tags (0 through 7) you want to map to one of the Switch's hardware priority queues (<class_id>, 0 through 6). <class_id 0-6> – Specifies which of the Switch's hardware priority queues the 802.1p priority tags (specified above) will be mapped to.																		
Restrictions	Only administrator-level users can issue this command.																		

Example usage:

To configure 802.1p user priority on the Switch:

DXS-3326GSR:4# config 802.1p user_priority 1 3

Command: config 802.1p user_priority 1 3

Success.

DXS-3326GSR:4#

show 802.1p user_priority

Purpose	Used to display the current 802.1p user priority tags to hardware priority queue mapping in use by the Switch.
Syntax	show 802.1p user_priority
Description	The show 802.1p user_priority command will display the current 802.1p user priority tags to hardware priority queue mapping in use by the Switch.
Parameters	None.
Restrictions	None.

Example usage:

To show 802.1p user priority:

```
DXS-3326GSR:4# show 802.1p user_priority
Command: show 802.1p user_priority
```

COS Class of Traffic

```
Priority-0 -> <Class-2>
Priority-1 -> <Class-0>
Priority-2 -> <Class-1>
Priority-3 -> <Class-3>
Priority-4 -> <Class-4>
Priority-5 -> <Class-5>
Priority-6 -> <Class-6>
Priority-7 -> <Class-6>
```

```
DXS-3326GSR:4#
```

config 802.1p default_priority

Purpose	Used to specify default priority settings on the Switch. Untagged packets that are received by the Switch will be assigned a priority tag in its priority field using this command.
Syntax	config 802.1p default_priority [<portlist> all] <priority 0-7>
Description	The config 802.1p default_priority command allows you to specify the 802.1p priority value an untagged, incoming packet will be assigned before being forwarded to its destination.
Parameters	<i><portlist></i> – Specifies a range of ports to be configured. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between

config 802.1p default_priority

switch 1, port 3 and switch 2, port 4 – in numerical order.

all – Specifies that the **config 802.1p default_priority** command will be applied to all ports on the Switch.

<priority 0-7> – Specifies the 802.1p priority tag that an untagged, incoming packet will be given before being forwarded to its destination.

Restrictions

Only administrator-level users can issue this command.

Example usage:

To configure 802.1p default priority on the Switch:

```
DXS-3326GSR:4#config 802.1p default_priority all 5
```

```
Command: config 802.1p default_priority all 5
```

```
Success.
```

```
DXS-3326GSR:4#
```

show 802.1 default_priority

Purpose Used to display the currently configured 802.1p priority tags that will be assigned to incoming, untagged packets before being forwarded to its destination.

Syntax **show 802.1p default_priority {<portlist>}**

Description The **show 802.1p default_priority** command displays the currently configured 802.1p priority tag that will be assigned to an incoming, untagged packet before being forwarded to its destination.

Parameters *<portlist>* – Specifies a port or range of ports to be viewed. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.

Restrictions

None.

Example usage:

To display the current 802.1p default priority configuration on the Switch:

DXS-3326GSR:4# show 802.1p default_priority

Command: show 802.1p default_priority

Port	Priority
1:1	0
1:2	0
1:3	0
1:4	0
1:5	0
1:6	0
1:7	0
1:8	0
1:9	0
1:10	0
1:11	0
1:12	0
1:13	0
1:14	0
1:15	0
1:16	0
1:17	0
1:18	0
1:19	0
1:20	0
1:21	0
1:22	0
1:23	0
1:24	0

DXS-3326GSR:4#

config scheduling_mechanism

Purpose Used to configure the scheduling mechanism for the QoS function

Syntax **config scheduling mechanism [strict | weight_fair]**

Description The **config scheduling_mechanism** command allows the user to select between a **Weight Fair (WRR)** and a **Strict** mechanism for emptying the priority queues of the QoS function. The Switch contains 8 hardware priority queues, one of which is internal and unoperational. Incoming packets must be mapped to one of these seven hardware priority queues. This command is used to specify the rotation by which these seven hardware priority queues are emptied.

The Switch's default is to empty the seven priority queues in order – from the highest priority queue (queue 6) to the lowest priority queue (queue 0). Each queue will transmit all of the packets in its buffer before allowing the next lower priority queue to transmit its packets.

Parameters *strict* – Entering the **strict** parameter indicates that the highest queue is the first to be processed. That is, the highest queue

config scheduling_mechanism

should finish emptying before the others begin.

weight_fair – Entering the weight fair parameter indicates that the priority queues will empty packets in a weighted round-robin (**WRR**) order. That is to say that they will be emptied in an even distribution.

Restrictions Only administrator-level users can issue this command.

Example usage:

To configure the traffic scheduling mechanism for each COS queue:

DXS-3326GSR:4#config scheduling_mechanism strict

Command: config scheduling_mechanism strict

Success.

DXS-3326GSR:4#

show scheduling_mechanism

Purpose Used to display the current traffic scheduling mechanisms in use on the Switch.

Syntax **show scheduling_mechanism**

Description This command will display the current traffic scheduling mechanisms in use on the Switch.

Parameters none.

Restrictions none.

Example Usage:

To show the scheduling mechanism:

DXS-3326GSR:4#show scheduling_mechanism

Command: show scheduling_mechanism

QOS scheduling_mechanism

CLASS ID Mechanism

Class-0 strict

Class-1 strict

Class-2 strict

Class-3 strict

Class-4 strict

Class-5 strict**Class-6 strict****DXS-3326GSR:4#**

enable hol_prevention

Purpose	Used to enable HOL prevention.
Syntax	enable hol_prevention
Description	The enable hol_prevention command enables Head of Line prevention.
Parameters	None.
Restrictions	You must have administrator privileges.

Example Usage:

To enable HOL prevention:

DXS-3326GSR:4#enable hol_prevention**Command: enable hol_prevention****Success.****DXS-3326GSR:4#**

disable hol_prevention

Purpose	Used to disable HOL prevention.
Syntax	disable hol_prevention
Description	The disable hol_prevention command disables Head of Line prevention.
Parameters	None.
Restrictions	You must have administrator privileges.

Example Usage:

To disable HOL prevention:

```
DXS-3326GSR:4#disable hol_prevention
```

```
Command: disable hol_prevention
```

```
Success.
```

```
DXS-3326GSR:4#
```

show hol_prevention

Purpose	Used to show HOL prevention.
Syntax	show hol_prevention
Description	The show hol_prevention command displays the Head of Line prevention state.
Parameters	None.
Restrictions	None.

Example Usage:

To view the HOL prevention status:

```
DXS-3326GSR:4#show hol_prevention
```

```
Command: show hol_prevention
```

```
Device HOL Prevention State Enabled
```

```
DXS-3326GSR:4#
```

PORT MIRRORING COMMANDS

The port mirroring commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
config mirror port	<port> [add delete] source ports <portlist> [rx tx both]
enable mirror	
disable mirror	
show mirror	

Each command is listed, in detail, in the following sections.

config mirror port

Purpose	Used to configure a mirror port – source port pair on the Switch.
Syntax	config mirror port <port> add source ports <portlist> [rx tx both]
Description	This command allows a range of ports to have all of their traffic also sent to a designated port, where a network sniffer or other device can monitor the network traffic. In addition, you can specify that only traffic received by or sent by one or both is mirrored to the Target port.
Parameters	<i>port <port></i> – This specifies the Target port (the port where mirrored packets will be sent). The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order. <i>add source ports</i> – The port or ports being mirrored. This cannot include the Target port. ▪ <i><portlist></i> – This specifies a range of ports that will be mirrored. That is, the range of ports in which all traffic will be copied and sent to the Target port. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.

config mirror port

rx – Allows the mirroring of only packets received by (flowing into) the port or ports in the port list.

tx – Allows the mirroring of only packets sent to (flowing out of) the port or ports in the port list.

both – Mirrors all the packets received or sent by the port or ports in the port list.

Restrictions

The Target port cannot be listed as a source port. Only administrator-level users can issue this command.

Example usage:

To add the mirroring ports:

DXS-3326GSR:4# config mirror port 1:5 add source ports 1:1-1:5 both

Command: config mirror port 1:5 add source ports 1:1-1:5 both

Success.

DXS-3326GSR:4#

config mirror delete

Purpose	Used to delete a port mirroring configuration.
Syntax	config mirror port <port> delete source port <portlist> [rx tx both]
Description	This command is used to delete a previously entered port mirroring configuration.
Parameters	<i>port <port></i> – This specifies the Target port (the port where mirrored packets will be sent). The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order. <i>delete source port</i> – Adding this parameter will delete source ports according to ports entered using the <portlist>. ▪ <i><portlist></i> – This specifies a range of ports that will be mirrored. That is, the range of ports in which all traffic will be copied and sent to the Target port. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The

config mirror delete

beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.

rx – Allows the mirroring of only packets received by (flowing into) the port or ports in the port list.

tx – Allows the mirroring of only packets sent to (flowing out of) the port or ports in the port list.

both – Mirrors all the packets received or sent by the port or ports in the port list.

Restrictions

Only administrator-level users can issue this command.

Example usage:

To delete the mirroring ports:

```
DXS-3326GSR:4#config mirror port 1:5 delete source port 1:1-1:5 both
Command: config mirror 1:5 delete source 1:1-1:5 both
```

Success.

```
DXS-3326GSR:4#
```

enable mirror

Purpose Used to enable a previously entered port mirroring configuration.

Syntax **enable mirror**

Description This command, combined with the **disable mirror** command below, allows you to enter a port mirroring configuration into the Switch, and then turn the port mirroring on and off without having to modify the port mirroring configuration.

Parameters None.

Restrictions None.

Example usage:

To enable mirroring configurations:

```
DXS-3326GSR:4#enable mirror
```

```
Command: enable mirror
```

```
Success.
```

```
DXS-3326GSR:4#
```

disable mirror

Purpose	Used to disable a previously entered port mirroring configuration.
Syntax	disable mirror
Description	This command, combined with the enable mirror command above, allows you to enter a port mirroring configuration into the Switch, and then turn the port mirroring on and off without having to modify the port mirroring configuration.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To disable mirroring configurations:

```
DXS-3326GSR:4#disable mirror
```

```
Command: disable mirror
```

```
Success.
```

```
DXS-3326GSR:4#
```

show mirror

Purpose	Used to show the current port mirroring configuration on the Switch.
Syntax	show mirror
Description	This command displays the current port mirroring configuration on the Switch.
Parameters	None
Restrictions	None.

Example usage:

To display mirroring configuration:

DXS-3326GSR:4#show mirror

Command: show mirror

Current Settings

Mirror Status: Enabled

Target Port : 9

Mirrored Port

RX:

TX: 1:1-1:5

DXS-3326GSR:4#

VLAN COMMANDS

The DXS-3326GSR incorporates the idea of protocol-based VLANs. This standard, defined by the IEEE 802.1v standard maps packets to protocol-defined VLANs by examining the type octet within the packet header to discover the type of protocol associated with it. After assessing the protocol, the Switch will forward the packets to all ports within the protocol-assigned VLAN. This feature will benefit the administrator by better balancing load sharing and enhancing traffic classification. The switch supports fifteen (15) pre-defined protocols for configuring protocol-based VLANs. The user may also choose a protocol that is not one of the fifteen defined protocols by properly configuring the *userDefined* protocol VLAN. The supported protocols for the protocol VLAN function on this Switch include IP, IPX, DEC, DEC LAT, SNAP, NetBIOS, AppleTalk, XNS, SNA, IPv6, RARP and VINES.

The VLAN commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
create vlan	<vlan_name 32> {tag <vlanid 2-4094> {type {1q_vlan {advertisement} [protocol-ip protocol-ipx802dot3 protocol-ipx802dot2 protocol-ipxSnap protocol-ipxEthernet2 protocol-appleTalk protocol-decLat protocol-decOther protocol-sna802dot2 protocol-snaEthernet2 protocol-netBios protocol-xns protocol-vines protocol-ipv6 protocol-userDefined <hex0x0-0xffff> encap [ethernet llc snap all] protocol-rarp]}}
delete vlan	<vlan_name 32>
config vlan	<vlan_name 32> {[add [tagged untagged forbidden] <portlist> advertisement [enable disable]]}
config vlan	<vlan_name 32> delete <portlist>
config gvrp	[<portlist> all] {state [enable disable] ingress_checking [enable disable] acceptable_frame [tagged_only admit_all] pvid <vlanid 1-4094>}
enable gvrp	
disable gvrp	
show vlan	{<vlan_name 32>}
show gvrp	{<portlist>}

Each command is listed, in detail, in the following sections.

create vlan

Purpose	Used to create a VLAN on the Switch.
Syntax	create vlan <vlan_name 32> {tag <vlanid 2-4094> {type {1q_vlan {advertisement} [protocol-ip protocol-ipx802dot3 protocol-ipx802dot2 protocol-ipxSnap protocol-ipxEthernet2 protocol-appleTalk protocol-decLat protocol-decOther protocol-sna802dot2 protocol-snaEthernet2 protocol-netBios protocol-xns protocol-vines protocol-ipv6 protocol-userDefined <hex0x0-0xffff> encap [ethernet llc snap all] protocol-rarp]}}

create vlan

Description	This command allows you to create a VLAN on the Switch. The user may choose between an 802.1Q VLAN or a protocol-based VLAN.
Parameters	<i><vlan_name 32></i> – The name of the VLAN to be created. <i>tag <vlanid 2-4094></i> – The VLAN ID of the VLAN to be created. Allowed values = 2-4094 <i>type</i> – This parameter uses the <i>type</i> field of the packet header to determine the packet protocol and destination VLAN. There are two main choices of types for VLANs created on the Switch: ▪ <i>1q_vlan</i> – Allows the creation of a normal 802.1Q VLAN on the Switch. ▪ <i>advertisement</i> – Specifies that the VLAN is able to join GVRP. If this parameter is not set, the VLAN cannot be configured to have forbidden ports. The following parameters allow for the creation of protocol-based VLAN. The Switch supports 15 pre-configured protocol-based VLANs plus one user defined protocol based VLAN where the administrator may configure the settings for the appropriate protocol and forwarding of packets (16 total). Selecting a specific protocol will indicate which protocol will be utilized in determining the VLAN ownership of a tagged packet. Pre-set protocol-based VLANs on the Switch include: ▪ <i>protocol-ip</i> – Using this parameter will instruct the Switch to forward packets to this VLAN if the tag in the packet header is concurrent with this protocol. This packet header information is based on the Ethernet protocol. ▪ <i>protocol-ipx802dot3</i> - Using this parameter will instruct the Switch to forward packets to this VLAN if the tag in the packet header is concurrent with this protocol. This packet header information is defined by Novell NetWare 802.3 (IPX - Internet Packet Exchange). ▪ <i>protocol-ipx802dot2</i> - Using this parameter will instruct the Switch to forward packets to this VLAN if the tag in the packet header is concurrent with this protocol. This packet header information is defined by Novell NetWare 802.2 (IPX - Internet Packet Exchange). ▪ <i>protocol-ipxSnap</i> - Using this parameter will instruct the Switch to forward packets to this VLAN if the tag in the packet header is concurrent with this protocol. This packet header information is defined by Novell and the Sub Network Access Protocol (SNAP). ▪ <i>protocol-ipxEthernet2</i> - Using this parameter will instruct the Switch to forward packets to this VLAN if the tag in the packet header is concurrent with this protocol. This packet header information is defined by the Ethernet Protocol. ▪ <i>protocol-appleTalk</i> - Using this parameter will instruct the

create vlan

Switch to forward packets to this VLAN if the tag in the packet header is concurrent with this protocol. This packet header information is defined by the AppleTalk protocol.

- *protocol-decLAT* - Using this parameter will instruct the Switch to forward packets to this VLAN if the tag in the packet header is concurrent with this protocol. This packet header information is defined by the Digital Equipment Corporation (DEC) Local Area Transport (LAT) protocol.

- *protocol-decOther* - Using this parameter will instruct the Switch to forward packets to this VLAN if the tag in the packet header is concurrent with this protocol. This packet header information is defined by the Digital Equipment Corporation (DEC) Protocol.

- *protocol-sna802dot2* - Using this parameter will instruct the Switch to forward packets to this VLAN if the tag in the packet header is concurrent with this protocol. This packet header information is defined by the Systems Network Architecture(SNA) 802.2 Protocol.

- *protocol-netBios* - Using this parameter will instruct the Switch to forward packets to this VLAN if the tag in the packet header is concurrent with this protocol. This packet header information is defined by the NetBIOS Protocol.

- *protocol-xns* - Using this parameter will instruct the Switch to forward packets to this VLAN if the tag in the packet header is concurrent with this protocol. This packet header information is defined by the Xerox Network Systems (XNS) Protocol.

- *protocol-vines* - Using this parameter will instruct the Switch to forward packets to this VLAN if the tag in the packet header is concurrent with this protocol. This packet header information is defined by the Banyan Virtual Intergrated Network Service (VINES) Protocol.

- *protocol-ipV6* - Using this parameter will instruct the Switch to forward packets to this VLAN if the tag in the packet header is concurrent with this protocol. This packet header information is defined by the Internet Protocol Version 6 (IPv6) Protocol.

- *protocol – userDefined* - Using this parameter will instruct the Switch to forward packets to this VLAN if the tag in the packet header is concurrent with this protocol defined by the user. This packet header information is defined by entering the following information:

- *<hex 0x0-0xffff>* - Specifies that the VLAN will only accept packets with this hexadecimal 802.1Q Ethernet type value in the packet header.

- *encap [ethernet | llc | snap | all]* – Specifies that the Switch will examine the octet of the packet header referring to one of the protocols listed (Ethernet, LLC or SNAP), looking for a

create vlan

match of the hexadecimal value previously entered . *all* will instruct the Switch to examine the total packet header. After a match is found, the Switch will forward the packet to this VLAN.

- *protocol-rarp* - Using this parameter will instruct the Switch to forward packets to this VLAN if the tag in the packet header is concurrent with this protocol. This packet header information is defined by the Reverse Address Resolution (RARP) Protocol.

Restrictions

Each VLAN name can be up to 32 characters. If the VLAN is not given a tag, it will be a port-based VLAN. Only administrator-level users can issue this command.



NOTE: A specific protocol VLAN and a user defined protocol VLAN with the same encapsulation protocol cannot coexist and will result in a *Fail!* Message. (For example, if a user creates an *Ethernet2* protocol VLAN, the user can not create a *userDefined* protocol VLAN with an Ethernet encapsulation)

Example usage:

To create a protocol VLAN:

```
DXS-3326GSR:4#create vlan v5 tag 2 protocol-ipxSnap
create vlan v5 tag 2 protocol-ipxSnap

Success.

DXS-3326GSR:4#
```

Example usage:

To create a VLAN v1, tag 2:

```
DXS-3326GSR:4#create vlan v1 tag 2
Command: create vlan v1 tag 2

Success.

DXS-3326GSR:4#
```

delete vlan

Purpose

Used to delete a previously configured VLAN on the Switch.

Syntax

delete vlan <vlan_name 32>

Description

This command will delete a previously configured VLAN on the Switch.

delete vlan

	Switch.
Parameters	<vlan_name 32> – The VLAN name of the VLAN to delete.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To remove the vlan “v1”:

```
DXS-3326GSR:4#delete vlan v1
```

```
Command: delete vlan v1
```

```
Success.
```

```
DXS-3326GSR:4#
```

config vlan add

Purpose	Used to add additional ports to a previously configured VLAN.
Syntax	config vlan <vlan_name 32> { [add [tagged untagged forbidden] <portlist> advertisement [enable disable] }
Description	This command allows you to add ports to the port list of a previously configured VLAN. You can specify the additional ports as tagging, untagging, or forbidden. The default is to assign the ports as untagging.
Parameters	<vlan_name 32> – The name of the VLAN you want to add or delete ports to. <i>add</i> – Specifies which ports to add. The user may also specify if the ports are: ▪ <i>tagged</i> – Specifies the additional ports as tagged. ▪ <i>untagged</i> – Specifies the additional ports as untagged. ▪ <i>forbidden</i> – Specifies the additional ports as forbidden. <portlist> – A range of ports to add to the VLAN. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order. <i>advertisement [enable disable]</i> – Enables or disables GVRP on the specified VLAN.

config vlan add

Restrictions	Only administrator-level users can issue this command.
--------------	--

Example usage:

To add 4 through 8 of module 2 as tagged ports to the VLAN v1:

```
DXS-3326GSR:4#config vlan v1 add tagged 2:4-2:8
```

```
Command: config vlan v1 add tagged 2:4-2:8
```

```
Success.
```

```
DXS-3326GSR:4#
```

config vlan delete

Purpose	Used to delete ports from a previously configured VLAN.
---------	---

Syntax	config vlan <vlan_name 32> delete <portlist>
--------	---

Description	This command allows you to delete ports from the port list of a previously configured VLAN.
-------------	---

Parameters	<vlan_name 32> – The name of the VLAN to delete ports from. <portlist> – A range of ports to delete from the VLAN. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.
------------	---

Restrictions	Only administrator-level users can issue this command.
--------------	--

Example usage:

To delete ports 5-7 of module 2 of the VLAN v1:

```
DXS-3326GSR:4#config vlan v1 delete 2:5-2:7
```

```
Command: config vlan v1 delete 2:5-2:7
```

```
Success.
```

```
DXS-3326GSR:4#
```

config gvrp

Purpose	Used to configure GVRP on the Switch.
Syntax	config gvrp [<portlist> all] {state [enable disable] ingress_checking [enable disable] acceptable_frame [tagged_only admit_all] pvid <vlanid 1-4094>}
Description	This command is used to configure the Group VLAN Registration Protocol on the Switch. You can configure ingress checking, the sending and receiving of GVRP information, and the Port VLAN ID (PVID).
Parameters	<i><portlist></i> – A range of ports to configure GVRP for. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order. <i>all</i> – Specifies all of the ports on the Switch. <i>state [enable disable]</i> – Enables or disables GVRP for the ports specified in the port list. <i>ingress_checking [enable disable]</i> – Enables or disables ingress checking for the specified port list. <i>acceptable_frame [tagged_only admit_all]</i> – This parameter states the frame type that will be accepted by the Switch for this function. Tagged_only implies that only VLAN tagged frames will be accepted, while admit_all implies tagged and untagged frames will be accepted by the Switch. <i>pvid</i> – Specifies the default VLAN ID associated with the port.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To set the ingress checking status, the sending and receiving GVRP information :

```
DXS-3326GSR:4#config gvrp 1:1-1:4 state enable ingress_checking enable
acceptable_frame tagged_only pvid 2
```

```
Command: config gvrp 1:1-1:4 state enable ingress_checking enable
acceptable_frame tagged_only pvid 2
```

```
Success.
```

```
DXS-3326GSR:4#
```

enable gvrp

Purpose	Used to enable GVRP on the Switch.
Syntax	enable gvrp
Description	This command, along with disable gvrp below, is used to enable and disable GVRP globally on the Switch, without changing the GVRP configuration on the Switch.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To enable the generic VLAN Registration Protocol (GVRP):

```
DXS-3326GSR:4#enable gvrp
```

```
Command: enable gvrp
```

```
Success.
```

```
DXS-3326GSR:4#
```

disable gvrp

Purpose	Used to disable GVRP on the Switch.
Syntax	disable gvrp
Description	This command, along with enable gvrp below, is used to enable and disable GVRP on the Switch, without changing the GVRP configuration on the Switch.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To disable the Generic VLAN Registration Protocol (GVRP):

```
DXS-3326GSR:4#disable gvrp
```

```
Command: disable gvrp
```

```
Success.
```

```
DXS-3326GSR:4#
```

show vlan

Purpose	Used to display the current VLAN configuration on the Switch
Syntax	show vlan {<vlan_name 32>}
Description	This command displays summary information about each VLAN including the VLAN ID, VLAN name, the Tagging/Untagging status, and the Member/Non-member/Forbidden status of each port that is a member of the VLAN.
Parameters	<vlan_name 32> – The VLAN name of the VLAN for which you want to display a summary of settings.
Restrictions	None.

Example usage:

To display the Switch's current VLAN settings:

DXS-3326GSR:4#show vlan

Command: show vlan

```

VID          : 1          VLAN Name      : default
VLAN TYPE    : 1QVLAN     Protocol ID   :
UserDefinedPid :           Advertisement  : Enabled
Encap        :
Member ports  : 1:1-1:24,2:1-2:24
Static ports  : 1:1-1:24,2:1-2:24
Untagged ports : 1:1-1:24,2:1-2:24
Forbidden ports :

```

```

VID          : 2          VLAN Name      : v1
VLAN TYPE    : PROTOCOL   Protocol ID   : ip
UserDefinedPid :           Advertisement  : Enabled
Encap        :
Member ports  : 1:1-1:24,2:1-2:24
Static ports  : 1:24,2:24
Untagged ports :
Forbidden ports :

```

Total Entries : 2

DXS-3326GSR:4#

show gvrp

Purpose	Used to display the GVRP status for a port list on the Switch.
Syntax	show gvrp {<portlist>}
Description	This command displays the GVRP status for a port list on the Switch

show gvrp

Parameters	<i><portlist></i> – Specifies a range of ports for which the GVRP status is to be displayed. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.
Restrictions	None.

Example usage:

To display GVRP port status:

```

DXS-3326GSR:4#show gvrp
Command: show gvrp

Global GVRP : Disabled

Port      PVID    GVRP      Ingress Checking  Acceptable Frame Type
-----
1:1       1       Disabled  Enabled           All Frames
1:2       1       Disabled  Enabled           All Frames
1:3       1       Disabled  Enabled           All Frames
1:4       1       Disabled  Enabled           All Frames
1:5       1       Disabled  Enabled           All Frames
1:6       1       Disabled  Enabled           All Frames
1:7       1       Disabled  Enabled           All Frames
1:8       1       Disabled  Enabled           All Frames
1:9       1       Disabled  Enabled           All Frames
1:10      1       Disabled  Enabled           All Frames
1:11      1       Disabled  Enabled           All Frames
1:12      1       Disabled  Enabled           All Frames
1:13      1       Disabled  Enabled           All Frames
1:14      1       Disabled  Enabled           All Frames
1:15      1       Disabled  Enabled           All Frames
1:16      1       Disabled  Enabled           All Frames
1:17      1       Disabled  Enabled           All Frames
1:18      1       Disabled  Enabled           All Frames
CTRL+C ESC q Quit SPACE n Next Page p Previous Page r Refresh

```

LINK AGGREGATION COMMANDS

The link aggregation commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
create link_aggregation	group_id <value 1-32> {type [lacp static]}
delete link_aggregation	group_id <value 1-32>
config link_aggregation	group_id <value 1-32> {master_port <port> ports <portlist> state [enable disable]}
config link_aggregation algorithm	[mac_source mac_destination mac_source_dest ip_source ip_destination ip_source_dest]
show link_aggregation	{group_id <value 1-32> algorithm}
config lacp_port	<portlist> mode [active passive]
show lacp_port	{<portlist>}

Each command is listed, in detail, in the following sections.

create link_aggregation

Purpose	Used to create a link aggregation group on the Switch.
Syntax	create link_aggregation group_id <value 1-32> {type [lacp static]}
Description	This command will create a link aggregation group with a unique identifier.
Parameters	<value 1-32> – Specifies the group ID. The Switch allows up to 32 link aggregation groups to be configured. The group number identifies each of the groups. type – Specify the type of link aggregation used for the group. If the type is not specified the default type is static. ▪ lacp – This designates the port group as LACP compliant. LACP allows dynamic adjustment to the aggregated port group. LACP compliant ports may be further configured (see config lacp_ports). LACP compliant must be connected to LACP compliant devices. ▪ static – This designates the aggregated port group as static. Static port groups can not be changed as easily as LACP compliant port groups since both linked devices must be manually configured if the configuration of the trunked group is changed. If static link aggregation is used, be sure that both ends of the connection are properly configured and

create link_aggregation

that all ports have the same speed/duplex settings.

Restrictions

Only administrator-level users can issue this command.

Example usage:

To create a link aggregation group:

```
DXS-3326GSR:4#create link_aggregation group_id 1
```

```
Command: create link_aggregation group_id 1
```

```
Success.
```

```
DXS-3326GSR:4#
```

delete link_aggregation group_id

Purpose Used to delete a previously configured link aggregation group.

Syntax **delete link_aggregation group_id <value 1-32>**

Description This command is used to delete a previously configured link aggregation group.

Parameters **<value 1-32>** – Specifies the group ID. The Switch allows up to 32 link aggregation groups to be configured. The group number identifies each of the groups.

Restrictions Only administrator-level users can issue this command.

Example usage:

To delete link aggregation group:

```
DXS-3326GSR:4#delete link_aggregation group_id 6
```

```
Command: delete link_aggregation group_id 6
```

```
Success.
```

```
DXS-3326GSR:4#
```

config link_aggregation

Purpose Used to configure a previously created link aggregation group.

Syntax **config link_aggregation group_id <value 1-32> {master_port <port> | ports <portlist> | state [enable | disable]}**

Description This command allows you to configure a link aggregation group that was created with the **create link_aggregation** command above.

config link_aggregation

	The DXS-3326GSR supports link aggregation cross box which specifies that link aggregation groups may be spread over multiple switches in the Switching stack.
Parameters	<i>group_id</i> <value 1-32> – Specifies the group ID. The Switch allows up to 32 link aggregation groups to be configured. The group number identifies each of the groups. <i>master_port</i> <port> – Master port ID. Specifies which port (by port number) of the link aggregation group will be the master port. All of the ports in a link aggregation group will share the port configuration with the master port. <i>ports</i> <portlist> – Specifies a range of ports that will belong to the link aggregation group. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order. <i>state</i> [enable disable] – Allows you to enable or disable the specified link aggregation group.
Restrictions	Only administrator-level users can issue this command. Link aggregation groups may not overlap.

Example usage:

To define a load-sharing group of ports, group-id 1, master port 5 of module 1 with group members ports 5-7 plus port 9:

```

DXS-3326GSR:4#config link_aggregation group_id 1 master_port
1:5 ports 1:5-1:7, 1:9

Command: config link_aggregation group_id 1 master_port 1:5
ports 1:5-1:7, 1:9

Success.

DXS-3326GSR:4#

```

config link_aggregation algorithm

Purpose	Used to configure the link aggregation algorithm.
Syntax	config link_aggregation algorithm [mac_source mac_destination mac_source_dest ip_source ip_destination ip_source_dest]
Description	This command configures to part of the packet examined by the Switch when selecting the egress port for transmitting load-sharing data. This feature is only available using the address-based load-

config link_aggregation algorithm

	sharing algorithm.
Parameters	<i>mac_source</i> – Indicates that the Switch should examine the MAC source address. <i>mac_destination</i> – Indicates that the Switch should examine the MAC destination address. <i>mac_source_dest</i> – Indicates that the Switch should examine the MAC source and destination addresses <i>ip_source</i> – Indicates that the Switch should examine the IP source address. <i>ip_destination</i> – Indicates that the Switch should examine the IP destination address. <i>ip_source_dest</i> – Indicates that the Switch should examine the IP source address and the destination address.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To configure link aggregation algorithm for mac-source-dest:

```
DXS-3326GSR:4#config link_aggregation algorithm mac_source_dest
Command: config link_aggregation algorithm mac_source_dest

Success.

DXS-3326GSR:4#
```

show link_aggregation

Purpose	Used to display the current link aggregation configuration on the Switch.
Syntax	show link_aggregation {group_id <value> algorithm}
Description	This command will display the current link aggregation configuration of the Switch.
Parameters	<i><value 1-32></i> – Specifies the group ID. The Switch allows up to 32 link aggregation groups to be configured. The group number identifies each of the groups. <i>algorithm</i> – Allows you to specify the display of link aggregation by the algorithm.
Restrictions	None.

Example usage:

To display Link Aggregation configuration:

DXS-3326GSR:4#show link_aggregation

Command: show link_aggregation

Link Aggregation Algorithm = MAC-source-dest

Group ID : 1

Master Port : 2:17

Member Port : 1:5-1:10,2:17

Active Port:

Status : Disabled

Flooding Port : 1:5

DXS-3326GSR:4

config lacp_port

Purpose	Used to configure settings for LACP compliant ports.
Syntax	config lacp_port <portlist> mode [active passive]
Description	This command is used to configure ports that have been previously designated as LACP ports (see create link_aggregation).
Parameters	<i><portlist></i> – Specifies a range of ports to be configured. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order. <i>mode</i> – Select the mode to determine if LACP ports will initially send LACP control frames. ▪ <i>active</i> – Active LACP ports are capable of processing and sending LACP control frames. This allows LACP compliant devices to negotiate the aggregated link so the group may be changed dynamically as needs require. In order to utilize the ability to change an aggregated port group, that is, to add or subtract ports from the group, at least one of the participating devices must designate LACP ports as active. Both devices must support LACP. ▪ <i>passive</i> – LACP ports that are designated as passive cannot initially send LACP control frames, unless the port receives LACP control frames. In order to allow the linked port group to negotiate adjustments and make changes dynamically, at one end of the connection must have “active” LACP ports (see above).
Restrictions	Only administrator-level users can issue this command.

Example usage:

To configure LACP port mode settings:

```
DXS-3326GSR:4#config lacp_port 1:1-1:12 mode active
Command: config lacp_port 1:1-1:12 mode active

Success.

DXS-3326GSR:4#
```

show lacp_port

Purpose	Used to display current LACP port mode settings.
Syntax	show lacp_port {<portlist>}
Description	This command will display the LACP mode settings as they are currently configured.
Parameters	<portlist> - Specifies a range of ports that will be viewed. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To display LACP port mode settings:

```
DXS-3326GSR:4#show lacp_port 1:1-1:8
Command: show lacp_port 1:1-1:8

Port    Activity
-----  -
1:1     Active
1:2     Active
1:3     Active
1:4     Active
1:5     Active
1:6     Active
1:7     Active
1:8     Active

DXS-3326GSR:4#
```

IP MULTINETTING COMMANDS

IP Multinetting is a function that allows multiple IP interfaces to be assigned to the same subnet (or VLANs). This is beneficial to the administrator when the number of IPs on the original interface is insufficient and the network administrator wishes not to resize the interface. IP Multinetting is capable of assigning another IP interface on the same VLAN without affecting the original stations or settings of the original interface.

Two types of interfaces are configured for IP multinetting, *primary* and *secondary*, and every IP interface must be classified as one of these. A *primary* interface refers to the first interface created on a VLAN, with no exceptions. All other interfaces created will be regarded as *secondary* only, and can only be created once a *primary* interface has been configured. There may only be two interfaces per VLAN and they are, in most cases, independent of each other. *Primary* interfaces cannot be deleted if the VLAN contains a *secondary* interface. Once the user creates two interfaces for a specified VLAN (*primary* and *secondary*), that set IP interface cannot be changed to another VLAN. Both interfaces support all unicast and multicast routing protocols but only the primary interface will support the BOOTP relay agent.

IP Multinetting is a valuable tool for network administrators requiring a multitude of IP addresses, but configuring the Switch for IP multinetting may cause troubleshooting and bandwidth problems, and should not be used as a long term solution. Problems may include:

- Transmitting data within the same VLAN will need double the resources. (The same packet will be sent to two different IP interfaces on the same VLAN).
- The amount of broadcast data, such as RIP update packets and PIM hello packets, will be increased.
- If the router fails, traffic within the VLAN will also fail.

The IP multinetting commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
create ipif	<ipif_name 12> <network_address> <vlan_name 32> {secondary state [enable disable]}
config ipif	<ipif_name 12> [{ ipaddress <network_address> vlan <vlan_name 32> state [enable disable]} bootp dhcp}
enable ipif	<ipif_name 12> all
disable ipif	<ipif_name 12> all
delete ipif	<ipif_name 12> all
show ipif	<ipif_name 12>

Each command is listed, in detail, in the following sections.

create ipif

Purpose	Used to create an IP interface on the Switch.
Syntax	create ipif <ipif_name 12> <network_address> <vlan_name 32> {secondary {state [enable disable]}}
Description	This command will create an IP interface.
Parameters	<ipif_name 12> – The name for the IP interface to be created. The user may enter an alphanumeric string of up to 12 characters to

create ipif

user may enter an alphanumeric string of up to 12 characters to define the IP interface.

<network_address> – IP address and netmask of the IP interface to be created. You can specify the address and mask information using the traditional format (for example, 10.1.2.3/255.0.0.0 or in CIDR format, 10.1.2.3/8).

<vlan_name 32> – The name of the VLAN that will be associated with the above IP interface.

secondary – Enter this parameter if this configured IP interface is to be a *secondary* IP interface of the VLAN previously specified. *secondary* interfaces can only be configured if a *primary* interface is first configured.

state [enable | disable] – Allows you to enable or disable the IP interface.

Restrictions

Only administrator-level users can issue this command.

Example usage:

To create the primary IP interface, p1 on VLAN Trinity:

DXS-3326GSR:4#create ipif p1 ipaddress 10.1.1.1 Trinity state enable

Command: create ipif p1 ipaddress 10.1.1.1 Trinity state enable

Success.

DXS-3326GSR:4#

To create the secondary IP interface, s1 on VLAN Trinity:

DXS-3326GSR:4#create ipif p1 ipaddress 12.1.1.1 Trinity secondary state enable

Command: create ipif p1 ipaddress 12.1.1.1 Trinity secondary state enable

Success.

DXS-3326GSR:4#

config ipif**Purpose**

Used to configure the System IP interface.

Syntax

config ipif <ipif_name 12> [ipaddress <network_address> | vlan <vlan_name 32> | state [enable | disable] | bootp | dhcp}]

Description

This command is used to configure the System IP interface on the Switch.

Parameters

<ipif_name 12> - Enter the previously created IP interface name desired to be configured.

config ipif

desired to be configured.

ipaddress <network_address> – IP address and netmask of the IP interface to be configured. You can specify the address and mask information using the traditional format (for example, 10.1.2.3/255.0.0.0 or in CIDR format, 10.1.2.3/8).

vlan <vlan_name 32> – The name of the VLAN corresponding to the previously created IP interface. If a primary and secondary IP interface are configured for the same VLAN (subnet), the user cannot change the VLAN of the IP interface.

state [enable | disable] – Allows you to enable or disable the IP interface.

bootp – Allows the selection of the BOOTP protocol for the assignment of an IP address to the Switch's System IP interface.

dhcp – Allows the selection of the DHCP protocol for the assignment of an IP address to the Switch's System IP interface.

Restrictions

Only administrator-level users can issue this command.

Example usage:

To configure the IP interface System:

DXS-3326GSR:4#config ipif System ipaddress 10.48.74.122/8

Command: config ipif System ipaddress 10.48.74.122/8

Success.

DXS-3326GSR:4#

enable ipif

Purpose Used to enable an IP interface on the Switch.

Syntax **enable ipif {<ipif_name 12> | all}**

Description This command will enable the IP interface function on the Switch.

Parameters *<ipif_name 12>* – The name of a previously configured IP interface the user wishes to enable. Enter an alphanumeric entry of up to twelve characters to define the IP interface.

all – Entering this parameter will enable all the IP interfaces currently configured on the Switch.

Restrictions None.

Example usage:

To enable the ipif function on the Switch:

DXS-3326GSR:4#enable ipif s2

Command: enable ipif s2

Success.

DXS-3326GSR:4#

disable ipif

Purpose	Used to disable the configuration of an IP interface on the Switch.
Syntax	disable ipif <ipif_name 12> all
Description	This command will disable an IP interface on the Switch, without altering its configuration values.
Parameters	<i><ipif_name 12></i> – The name previously created to define the IP interface. <i>all</i> – Entering this parameter will disable all the IP interfaces currently configured on the Switch.
Restrictions	None.

Example usage:

To disable the IP interface named “s2”:

DXS-3326GSR:4#disable ipif s2

Command: disable ipif s2

Success.

DXS-3326GSR:4#

delete ipif

Purpose	Used to delete the configuration of an IP interface on the Switch.
Syntax	delete ipif <ipif_name 12> all
Description	This command will delete the configuration of an IP interface on the Switch.
Parameters	<i><ipif_name 12></i> – The name of the IP interface the user wishes to delete. <i>all</i> – Entering this parameter will delete all the IP interfaces currently configured on the Switch.

delete ipif

Restrictions	None.
--------------	-------

Example usage:

To delete the IP interface named s2:

```
DXS-3326GSR:4#delete ipif s2
```

```
Command: delete ipif s2
```

```
Success.
```

```
DXS-3326GSR:4#
```

show ipif

Purpose	Used to display the configuration of an IP interface on the Switch.
Syntax	show ipif <ipif_name 12>
Description	This command will display the configuration of an IP interface on the Switch.
Parameters	<ipif_name 12> – The name created for the IP interface the user wishes to view.
Restrictions	None.

Example usage:

To display IP interface settings.

```
DXS-3326GSR:4#show ipif System
```

```
Command: show ipif System
```

```
IP Interface Settings
```

```
Interface Name : System
Secondary      : FALSE
IP Address     : 10.48.74.122 (MANUAL)
Subnet Mask    : 255.0.0.0
VLAN Name     : default
Admin. State   : Disabled
Link Status    : Link UP
Member Ports   : 1:1-1:24
```

```
DXS-3326GSR:4#
```



NOTE: In the IP Interface Settings table shown above, the Secondary field will have two displays. *FALSE* denotes that the IP interface is a primary IP interface while *TRUE* denotes a secondary IP interface.

IGMP COMMANDS

The IGMP commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
config igmp	[ipif <ipif_name 12> all] {version <value 1-2> query_interval <sec 1-65535> max_response_time <sec 1-25> robustness_variable <value 1-255> last_member_query_interval <value 1-25> state [enable disable]}
show igmp	{ipif <ipif_name 12>}
show igmp group	{group <group>} {ipif <ipif_name 12>}

Each command is listed, in detail, in the following sections.

config igmp	
Purpose	Used to configure IGMP on the Switch.
Syntax	config igmp [ipif <ipif_name 12> all] {version <value 1-2> {query_interval <sec 1-65535> max_response_time <sec 1-25> robustness_variable <value 1-255> last_member_query_interval <value 1-25> state [enable disable]}
Description	This command allows you to configure IGMP snooping on the Switch.
Parameters	<ipif_name 12> – The name of the IP interface for which you want to configure IGMP. all – Specifies all the IP interfaces on the Switch. version <value 1-2> – The IGMP version number. query_interval <sec 1-65535> – The time in seconds between general query transmissions, in seconds. max_response_time <sec 1-25> – Enter the maximum time in seconds that the Switch will wait for reports from members. robustness_variable <value 1-255> – This value states the permitted packet loss that guarantees IGMP. last_member_query_interval <value 1-25> – The Max Response Time inserted into Group-Specific Queries sent in response to Leave Group messages, and is also the amount of time between Group-Specific Query messages. The default is 1 second state [enable disable] – Enables or disables IGMP for the specified IP interface.
Restrictions	Only administrator-level users can issue this command.

Example Usage:

To configure the IGMP for the IP interface System.

DXS-3326GSR:4#config igmp all version 1 state enable

Command: config igmp all version 1 state enable

Success.

DXS-3326GSR:4#

show igmp

Purpose	Used to display the IGMP configuration for the Switch of for a specified IP interface.
Syntax	show igmp {ipif <ipif_name 12>}
Description	This command will display the IGMP configuration for the Switch if no IP interface name is specified. If an IP interface name is specified, the command will display the IGMP configuration for that IP interface.
Parameters	<ipif_name 12> – The name of the IP interface for which the IGMP configuration will be displayed.
Restrictions	None.

Example Usage:

To display IGMP configurations:

DXS-3326GSR:4#show igmp

Command: show igmp

IGMP Interface Configurations

Interface	IP Address/Netmask	Ver- sion	Query	Maximum Response Time	Robust- ness Value	Last Member Query Interval	State
-----	-----	---	-----	-----	-----	-----	-----
System	10.90.90.90/8	1	125	10	2	1	Enabled
p1	20.1.1.1/8	1	125	10	2	1	Enabled

Total Entries: 2

DXS-3326GSR:4#

show igmp group

Purpose	Used to display the Switch's IGMP group table.
Syntax	show igmp group {group <group>} {ipif <ipif_name 12>}
Description	This command will display the IGMP group configuration.
Parameters	<i>group <group></i> – The multicast group ID which the user wishes to display. <i><ipif_name 12></i> – The name of the IP interface the IGMP group is part of.
Restrictions	None.

Example Usage:

To display IGMP group table:

DXS-3326GSR:4#show igmp group

Command: show igmp group

Interface Name	Multicast Group	Last Reporter	IP Querier	IP Expire Time
System	224.0.0.2	10.42.73.111	10.48.74.122	260
System	224.0.0.9	10.20.53.1	10.48.74.122	260
System	224.0.1.24	10.18.1.3	10.48.74.122	259
System	224.0.1.41	10.1.43.252	10.48.74.122	259
System	224.0.1.149	10.20.63.11	10.48.74.122	259

Total Entries: 5

DXS-3326GSR:4#

IGMP SNOOPING COMMANDS

The IGMP snooping commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
config igmp_snooping	[<vlan_name 32> all] {host_timeout <sec 1-16711450> router_timeout <sec 1-16711450> leave_timer <sec 1-16711450> state [enable disable]}
config igmp_snooping querier	[<vlan_name 32> all] {query_interval <sec 1-65535> max_response_time <sec 1-25> robustness_variable <value 1-255> last_member_query_interval <sec 1-25> state [enable disable]}
enable igmp snooping	{forward_mcrouter_only}
disable igmp snooping	{forward_mcrouter_only}
config router_ports	{vlan <vlan_name 32>} [add delete] <portlist>
config router_ports_forbidden	<vlan_name 32> [add delete] <portlist>
show router_ports	{<vlan_name 32>} {static dynamic forbidden}
show igmp_snooping	{vlan<vlan_name 32>}
show igmp_snooping group	{vlan <vlan_name 32>}
show igmp_snooping forwarding	{vlan <vlan_name 32>}

Each command is listed, in detail, in the following sections.

config igmp_snooping

Purpose	Used to configure IGMP snooping on the Switch.
Syntax	config igmp_snooping [<vlan_name 32> all] {host_timeout <sec 1-16711450> router_timeout <sec 1-16711450> leave_timer <sec 1-16711450> state [enable disable]}
Description	This command allows you to configure IGMP snooping on the Switch.
Parameters	<vlan_name 32> – The name of the VLAN for which IGMP snooping is to be configured. all – Selecting this parameter will configure IGMP snooping for all VLANs on the Switch. host_timeout <sec 1-16711450> – Specifies the maximum amount of time a host can be a member of a multicast group without the Switch receiving a host membership report. The default is 260 seconds.

config igmp_snooping

router_timeout <sec 1-16711450> – Specifies the maximum amount of time a route can be a member of a multicast group without the Switch receiving a host membership report. The default is 260 seconds.

leave_timer <sec 1-16711450> – Leave timer. The default is 2 seconds.

state [*enable* | *disable*] – Allows you to enable or disable IGMP snooping for the specified VLAN.

Restrictions

Only administrator-level users can issue this command.

Example usage:

To configure the igmp snooping:

DXS-3326GSR:4#config igmp_snooping default host_timeout 250 state enable

Command: config igmp_snooping default host_timeout 250 state enable

Success.

DXS-3326GSR:4#

config igmp_snooping querier

Purpose	This command configures IGMP snooping querier.
Syntax	config igmp_snooping querier [<vlan_name 32> all] {query_interval <sec 1-65535> max_response_time <sec 1-25> robustness_variable <value 1-255> last_member_query_interval <sec 1-25> state [enable disable]}
Description	Used to configure the time in seconds between general query transmissions, the maximum time in seconds to wait for reports from members and the permitted packet loss that guarantees IGMP snooping.
Parameters	<vlan_name 32> – The name of the VLAN for which IGMP snooping querier is to be configured. <i>all</i> – Selecting this parameter will configure the IGMP snooping querier for all VLANs on the Switch. <i>query_interval</i> <sec 1-65535> – Specifies the amount of time in seconds between general query transmissions. The default setting is 125 seconds. <i>max_response_time</i> <sec 1-25> – Specifies the maximum time in seconds to wait for reports from members. The default setting is 10 seconds. <i>robustness_variable</i> <value 1-255> – Provides fine-tuning to

config igmp_snooping querier

allow for expected packet loss on a subnet. The value of the robustness variable is used in calculating the following IGMP message intervals:

- Group member interval—Amount of time that must pass before a multicast router decides there are no more members of a group on a network. This interval is calculated as follows: (robustness variable x query interval) + (1 x query response interval).
- Other querier present interval—Amount of time that must pass before a multicast router decides that there is no longer another multicast router that is the querier. This interval is calculated as follows: (robustness variable x query interval) + (0.5 x query response interval).
- Last member query count—Number of group-specific queries sent before the router assumes there are no local members of a group. The default number is the value of the robustness variable.
- By default, the robustness variable is set to 2. You might want to increase this value if you expect a subnet to be lossy.

last_member_query_interval <sec 1-25> – The maximum amount of time between group-specific query messages, including those sent in response to leave-group messages. You might lower this interval to reduce the amount of time it takes a router to detect the loss of the last member of a group.

state [enable | disable] – Allows the Switch to be specified as an IGMP Querier or Non-querier.

Restrictions

Only administrator-level users can issue this command.

Example usage:

To configure the igmp snooping:

```
DXS-3326GSR:4#config igmp_snooping querier default query_interval 125
state enable
```

```
Command: config igmp_snooping querier default query_interval 125 state
enable
```

```
Success.
```

```
DXS-3326GSR:4#
```

enable igmp_snooping**Purpose**

Used to enable IGMP snooping on the Switch.

Syntax

enable igmp_snooping {forward_mcrouter_only}

enable igmp_snooping

Description	This command allows you to enable IGMP snooping on the Switch. If forward_mcrouter_only is specified, the Switch will only forward all multicast traffic to the multicast router, only. Otherwise, the Switch forwards all multicast traffic to any IP router.
Parameters	<i>forward_mcrouter_only</i> – Specifies that the Switch should only forward all multicast traffic to a multicast-enabled router. Otherwise, the Switch will forward all multicast traffic to any IP router.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To enable IGMP snooping on the Switch:

```
DXS-3326GSR:4#enable igmp_snooping
```

```
Command: enable igmp_snooping
```

```
Success.
```

```
DXS-3326GSR:4#
```

disable igmp_snooping

Purpose	Used to enable IGMP snooping on the Switch.
Syntax	disable igmp_snooping {forward_mcrouter_only}
Description	This command disables IGMP snooping on the Switch. IGMP snooping can be disabled only if IP multicast routing is not being used. Disabling IGMP snooping allows all IGMP and IP multicast traffic to flood within a given IP interface. If forward_mcrouter_only is specified, the Switch will forward all multicast traffic to any IP router.
Parameters	<i>forward_mcrouter_only</i> – Specifies that the Switch will forward all multicast traffic to any IP router.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To disable IGMP snooping on the Switch:

```
DXS-3326GSR:4#disable igmp_snooping
```

```
Command: disable igmp_snooping
```

```
Success.
```

```
DXS-3326GSR:4#
```

config router_ports

Purpose	Used to configure ports as router ports.
Syntax	config router_ports <vlan_name 32> [add delete] <portlist>
Description	This command allows you to designate a range of ports as being connected to multicast-enabled routers. This will ensure that all packets with such a router as its destination will reach the multicast-enabled router – regardless of protocol, etc.
Parameters	<vlan_name 32> – The name of the VLAN on which the router port resides. [add delete] – Specify if you wish to add or delete the following ports as router ports. <portlist> – Specifies a range of ports that will be configured as router ports. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To set up static router ports:

```
DXS-3326GSR:4#config router_ports default add 2:1-2:10
```

```
Command: config router_ports default add 2:1-2:10
```

```
Success.
```

```
DXS-3326GSR:4#
```

config router_ports_forbidden

Purpose	Used to configure ports as forbidden multicast router ports.
---------	--

config router_ports_forbidden

Syntax	config router_ports_forbidden <vlan_name 32> [add delete] <portlist>
Description	This command allows you to designate a port or range of ports as being forbidden to multicast-enabled routers. This will ensure that multicast packets will not be forwarded to this port – regardless of protocol, etc.
Parameters	<vlan_name 32> – The name of the VLAN on which the router port resides. [add delete] - Specifies whether to add or delete forbidden ports of the specified VLAN. <portlist> – Specifies a range of ports that will be configured as forbidden router ports. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To set up forbidden router ports:

```

DXS-3326GSR:4#config router_ports_forbidden default add 2:1-2:10
Command: config router_ports_forbidden default add 2:1-2:10

Success.

DXS-3326GSR:4#

```

show router_ports

Purpose	Used to display the currently configured router ports on the Switch.
Syntax	show router_ports {vlan <vlan_name 32>} {static dynamic forbidden}
Description	This command will display the router ports currently configured on the Switch.
Parameters	<vlan_name 32> – The name of the VLAN on which the router port resides. static – Displays router ports that have been statically configured. dynamic – Displays router ports that have been dynamically

show router_ports

configured.

forbidden – Displays router ports that have been labeled as forbidden.

Restrictions None.

Example usage:

To display the router ports.

DXS-3326GSR:4#show router_ports**Command: show router_ports****VLAN Name : default****Static router port : 2:1-2:10****Dynamic router port :****Forbidden Router Port:****VLAN Name : vlan2****Static router port :****Dynamic router port :****Forbidden Router Port:****Total Entries: 2****DXS-3326GSR:4#****show igmp_snooping**

Purpose Used to show the current status of IGMP snooping on the Switch.

Syntax **show igmp_snooping {vlan <vlan_name 32>}**

Description This command will display the current IGMP snooping configuration on the Switch.

Parameters <vlan_name 32> – The name of the VLAN for which you want to view the IGMP snooping configuration.

Restrictions None.

Example usage:

To show igmp snooping:

DXS-3326GSR:4#show igmp_snooping

Command: show igmp_snooping

IGMP Snooping Global State : Disabled

Multicast router Only : Disabled

VLAN Name : default

Query Interval : 125

Max Response Time : 10

Robustness Value : 2

Last Member Query Interval : 1

Host Timeout : 260

Route Timeout : 260

Leave Timer : 2

Querier State : Disabled

Querier Router Behavior : Non-Querier

State : Disabled

VLAN Name : vlan2

Query Interval : 125

Max Response Time : 10

Robustness Value : 2

Last Member Query Interval : 1

Host Timeout : 260

Route Timeout : 260

Leave Timer : 2

Querier State : Disabled

Querier Router Behavior : Non-Querier

State : Disabled

Total Entries: 2

DXS-3326GSR:4#

show igmp_snooping group

Purpose	Used to display the current IGMP snooping group configuration on the Switch.
Syntax	show igmp_snooping group {vlan <vlan_name 32>}
Description	This command will display the current IGMP snooping group configuration on the Switch.
Parameters	<i>vlan <vlan_name 32></i> – The name of the VLAN for which you want to view IGMP snooping group configuration information.
Restrictions	None.

Example usage:

To show igmp snooping group:

DXS-3326GSR:4#show igmp_snooping group**Command: show igmp_snooping group**

VLAN Name : default
Multicast group: 224.0.0.2
MAC address : 01-00-5E-00-00-02
Reports : 1
Port Member : 1:26,2:7

VLAN Name : default
Multicast group: 224.0.0.9
MAC address : 01-00-5E-00-00-09
Reports : 1
Port Member : 1:26,2:7

VLAN Name : default
Multicast group: 234.5.6.7
MAC address : 01-00-5E-05-06-07
Reports : 1
Port Member : 1:26,2:9

VLAN Name : default
Multicast group: 236.54.63.75
MAC address : 01-00-5E-36-3F-4B
Reports : 1
Port Member : 1:26,2:7

VLAN Name : default
Multicast group: 239.255.255.250
MAC address : 01-00-5E-7F-FF-FA
Reports : 2
Port Member : 1:26,2:7

VLAN Name : default
Multicast group: 239.255.255.254
MAC address : 01-00-5E-7F-FF-FE
Reports : 1
Port Member : 1:26,2:7

Total Entries : 6**DXS-3326GSR:4#****show igmp_snooping forwarding**

Purpose	Used to display the IGMP snooping forwarding table entries on the Switch.
Syntax	show igmp_snooping forwarding {vlan <vlan_name 32>}
Description	This command will display the current IGMP snooping forwarding table entries currently configured on the Switch.

show igmp_snooping forwarding

Parameters <vlan_name 32> – The name of the VLAN for which you want to view IGMP snooping forwarding table information.

Restrictions None.

Example usage:

To view the IGMP snooping forwarding table for VLAN “Trinity”:

```
DXS-3326GSR:4#show igmp_snooping forwarding vlan Trinity
```

```
Command: show igmp_snooping forwarding vlan Trinity
```

```
VLAN Name     : Trinity
```

```
Multicast group : 224.0.0.2
```

```
MAC address    : 01-00-5E-00-00-02
```

```
Port Member    : 1:17
```

```
Total Entries: 1
```

```
DXS-3326GSR:4#
```

MAC NOTIFICATION COMMANDS

The MAC notification commands in the Command Line Interface (CLI) are listed, in the following table, along with their appropriate parameters.

Command	Parameters
enable mac_notification	
disable mac_notification	
config mac_notification	{interval <int 1-2147483647> historysize <int 1-500>}
config mac_notification ports	[<portlist> all] [enable disable]
show mac_notification	
show mac_notification ports	<portlist>

Each command is listed, in detail, in the following sections.

enable mac_notification

Purpose	Used to enable global MAC address table notification on the Switch.
Syntax	enable mac_notification
Description	This command is used to enable MAC address notification without changing configuration.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example Usage:

To enable MAC notification without changing basic configuration:

```
DXS-3326GSR:4#enable mac_notification
```

```
Command: enable mac_notification
```

```
Success.
```

```
DXS-3326GSR:4#
```

disable mac_notification

Purpose	Used to disable global MAC address table notification on the Switch.
Syntax	disable mac_notification
Description	This command is used to disable MAC Address Notification without changing configuration.

disable mac_notification

	changing configuration.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example Usage:

To disable MAC notification without changing basic configuration:

DXS-3326GSR:4#disable mac_notification

Command: disable mac_notification

Success.

DXS-3326GSR:4#

config mac_notification

Purpose	Used to configure MAC address notification.
Syntax	config mac_notification {interval <int 1-2147483647> historysize <int 1-500>}
Description	MAC address notification is used to monitor MAC addresses learned and entered into the FDB.
Parameters	<i>interval <int 1-2147483647></i> - The time in seconds between notifications. The user may choose an interval between 1 and 2,147,483,647 seconds. <i>historysize <1 - 500></i> - The maximum number of entries listed in the history log used for notification.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To configure the Switch's MAC address table notification global settings:

DXS-3326GSR:4#config mac_notification interval 1 historysize 500

Command: config mac_notification interval 1 historysize 500

Success.

DXS-3326GSR:4#

config mac_notification ports

Purpose	Used to configure MAC address notification status settings.
Syntax	config mac_notification ports [<portlist all] [enable disable]
Description	MAC address notification is used to monitor MAC addresses learned and entered into the FDB.
Parameters	<i><portlist></i> Specify a port or range of ports to be configured. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order. <i>all</i> – Entering this command will set all ports on the system. <i>[enable disable]</i> – These commands will enable or disable MAC address table notification on the Switch.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To enable port 7 for MAC address table notification:

DXS-3326GSR:4#config mac_notification ports 1:7 enable

Command: config mac_notification ports 1:7 enable

Success.

DXS-3326GSR:4#

show mac_notification

Purpose	Used to display the Switch's MAC address table notification global settings.
Syntax	show mac_notification
Description	This command is used to display the Switch's MAC address table notification global settings.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To view the Switch's MAC address table notification global settings:

DXS-3326GSR:4#show mac_notification

Command: show mac_notification

Global Mac Notification Settings

State : Enabled

Interval : 1

History Size : 1

DXS-3326GSR:4#

show mac_notification ports

Purpose	Used to display the Switch's MAC address table notification status settings
Syntax	show mac_notification ports <portlist>
Description	This command is used to display the Switch's MAC address table notification status settings.
Parameters	<portlist> - Specify a port or group of ports to be viewed. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order. Entering this command without the parameter will display the MAC notification table for all ports.
Restrictions	None

Example usage:

To display all port's MAC address table notification status settings:

DXS-3326GSR:4#show mac_notification ports

Command: show mac_notification ports

Port # MAC Address Table Notification State

```

-----
1:1          Disabled
1:2          Disabled
1:3          Disabled
1:4          Disabled
1:5          Disabled
1:6          Disabled
1:7          Disabled

```

1:8	Disabled
1:9	Disabled
1:10	Disabled
1:11	Disabled
1:12	Disabled
1:13	Disabled
1:14	Disabled
1:15	Disabled
1:16	Disabled
1:17	Disabled
1:18	Disabled
1:19	Disabled
1:20	Disabled
CTRL+C ESC q Quit SPACE n Next Page p Previous Page r Refresh	

ACCESS AUTHENTICATION CONTROL COMMANDS

The Access Authentication Control commands let you secure access to the Switch using the TACACS / XTACACS / TACACS+ and RADIUS protocols. When a user logs in to the Switch or tries to access the administrator level privilege, he or she is prompted for a password. If TACACS / XTACACS / TACACS+ / RADIUS authentication is enabled on the Switch, it will contact a TACACS / XTACACS / TACACS+ / RADIUS server to verify the user. If the user is verified, he or she is granted access to the Switch.

There are currently three versions of the TACACS security protocol, each a separate entity. The Switch's software supports the following versions of TACACS:

- TACACS (Terminal Access Controller Access Control System) — Provides password checking and authentication, and notification of user actions for security purposes utilizing via one or more centralized TACACS servers, utilizing the UDP protocol for packet transmission.
- Extended TACACS (XTACACS) — An extension of the TACACS protocol with the ability to provide more types of authentication requests and more types of response codes than TACACS. This protocol also uses UDP to transmit packets.
- TACACS+ (Terminal Access Controller Access Control System plus) — Provides detailed access control for authentication for network devices. TACACS+ is facilitated through Authentication commands via one or more centralized servers. The TACACS+ protocol encrypts all traffic between the Switch and the TACACS+ daemon, using the TCP protocol to ensure reliable delivery.

The Switch also supports the RADIUS protocol for authentication using the Access Authentication Control commands. RADIUS or Remote Authentication Dial In User Server also uses a remote server for authentication and can be responsible for receiving user connection requests, authenticating the user and returning all configuration information necessary for the client to deliver service through the user. RADIUS may be facilitated on this Switch using the commands listed in this section.

In order for the TACACS / XTACACS / TACACS+ security function to work properly, a TACACS / XTACACS / TACACS+ server must be configured on a device other than the Switch, called a *server host* and it must include usernames and passwords for authentication. When the user is prompted by the Switch to enter usernames and passwords for authentication, the Switch contacts the TACACS / XTACACS / TACACS+ server to verify, and the server will respond with one of three messages:

- A) The server verifies the username and password, and the user is granted normal user privileges on the Switch.
- B) The server will not accept the username and password and the user is denied access to the Switch.
- C) The server doesn't respond to the verification query. At this point, the Switch receives the timeout from the server and then moves to the next method of verification configured in the method list.

The Switch has four built-in *server groups*, one for each of the TACACS, XTACACS, TACACS+ and RADIUS protocols. These built-in *server groups* are used to authenticate users trying to access the Switch. The users will set *server hosts* in a preferable order in the built-in *server group* and when a user tries to gain access to the Switch, the Switch will ask the first *server host* for authentication. If no authentication is made, the second *server host* in the list will be queried, and so on. The built-in *server group* can only have hosts that are running the specified protocol. For example, the TACACS *server group* can only have TACACS *server hosts*.

The administrator for the Switch may set up 6 different authentication techniques per user-defined *method list* (TACACS / XTACACS / TACACS+ / RADIUS / local / none) for authentication. These techniques will be listed in an order preferable, and defined by the user for normal user authentication on the Switch, and may contain up to eight authentication techniques. When a user attempts to access the Switch, the Switch will select the first technique listed for authentication. If the first technique goes through its *server hosts* and no authentication is returned, the Switch will then go to the next technique listed in the server group for authentication, until the authentication has been verified or denied, or the list is exhausted.

Please note that user granted access to the Switch will be granted normal user privileges on the Switch. To gain access to admin level privileges, the user must enter the *enable admin* command and then enter a password, which was previously configured by the administrator of the Switch.



NOTE: TACACS, XTACACS and TACACS+ are separate entities and are not compatible. The Switch and the server must be configured exactly the same, using the same protocol. (For example, if the Switch is set up for TACACS authentication, so must be the host server.)

The Access Authentication Control commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
enable authen_policy	
disable authen_policy	
show authen_policy	
create authen_login method_list_name	<string 15>
config authen_login	[default method_list_name <string 15>] method {tacacs xtacacs tacacs+ radius server_group <string 15> local none}
delete authen_login method_list_name	<string 15>
show authen_login	{default method_list_name <string 15> all}
create authen_enable method_list_name	<string 15>
config authen_enable	[default method_list_name <string 15>] method {tacacs xtacacs tacacs+ radius server_group <string 15> local_enable none}
delete authen_enable method_list_name	<string 15>
show authen_enable	[default method_list_name <string 15> all]
config authen application	{console telnet ssh http all} [login enable] [default method_list_name <string 15>]
show authen application	
create authen server_group	<string 15>
config authen server_group	[tacacs xtacacs tacacs+ radius <string 15>] [add delete] server_host <ipaddr> protocol [tacacs xtacacs tacacs+ radius]
delete authen server_group	<string 15>
show authen server_group	{<string 15>}
create authen server_host	<ipaddr> protocol [tacacs xtacacs tacacs+ radius] {port <int 1-65535> key [<key_string 254> none] timeout <int 1-255> retransmit <int 1-255>}
config authen server_host	<ipaddr> protocol [tacacs xtacacs tacacs+ radius] {port <int 1-65535> key [<key_string 254> none] timeout <int 1-255> retransmit <int 1-255>}

Command	Parameters
delete authen server_host	<ipaddr> protocol [tacacs xtacacs tacacs+ radius]
show authen server_host	
config authen parameter response_timeout	<int 1-255>
config authen parameter attempt	<int 1-255>
show authen parameter	
enable admin	
config admin local_enable	<password 15>

Each command is listed, in detail, in the following sections.

enable authen_policy

Purpose	Used to enable system access authentication policy.
Syntax	enable authen_policy
Description	This command will enable an administrator-defined authentication policy for users trying to access the Switch. When enabled, the device will check the method list and choose a technique for user authentication upon login.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To enable the system access authentication policy:

DXS-3326GSR:4#enable authen_policy

Command: enable authen_policy

Success.

DXS-3326GSR:4#

disable authen_policy

Purpose	Used to disable system access authentication policy.
Syntax	disable authen_policy
Description	This command will disable the administrator-defined authentication policy for users trying to access the Switch. When disabled, the Switch will access the local user account database for username and password verification. In addition, the Switch will now accept the local enable password as the authentication for normal users attempting to

disable authn_policy

	access administrator level privileges.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To disable the system access authentication policy:

```

DXS-3326GSR:4#disable authn_policy
Command: disable authn_policy

Success.

DXS-3326GSR:4#

```

show authn_policy

Purpose	Used to display the system access authentication policy status on the Switch.
Syntax	show authn_policy
Description	This command will show the current status of the access authentication policy on the Switch
Parameters	None.
Restrictions	None.

Example usage:

To display the system access authentication policy:

```

DXS-3326GSR:4#show authn_policy
Command: show authn_policy

Authentication Policy: Enabled

DXS-3326GSR:4#

```

create authn_login method_list_name

Purpose	Used to create a user defined method list of authentication methods for users logging on to the Switch.
Syntax	create authn_login method_list_name <string 15>
Description	This command is used to create a list for authentication techniques for user login. The Switch can support up to eight method lists, but

create authen_login method_list_name

	for user login. The Switch can support up to eight method lists, but one is reserved as a default and cannot be deleted. Multiple method lists must be created and configured separately.
Parameters	< <i>string 15</i> > - Enter an alphanumeric string of up to 15 characters to define the given <i>method list</i> .
Restrictions	Only administrator-level users can issue this command.

Example usage:

To create the method list “Trinity.”:

DXS-3326GSR:4#create authen_login method_list_name Trinity

Command: create authen_login method_list_name Trinity

Success.

DXS-3326GSR:4#

config authen_login

Purpose	Used to configure a user-defined or default <i>method list</i> of authentication methods for user login.
Syntax	config authen_login [default method_list_name <string 15>] method {tacacs xtacacs tacacs+ radius server_group <string 15> local none}
Description	This command will configure a user-defined or default <i>method list</i> of authentication methods for users logging on to the Switch. The sequence of methods implemented in this command will affect the authentication result. For example, if a user enters a sequence of methods like <i>tacacs – xtacacs – local</i>, the Switch will send an authentication request to the first <i>tacacs</i> host in the server group. If no response comes from the server host, the Switch will send an authentication request to the second <i>tacacs</i> host in the server group and so on, until the list is exhausted. At that point, the Switch will restart the same sequence with the following protocol listed, <i>xtacacs</i>. If no authentication takes place using the <i>xtacacs</i> list, the <i>local</i> account database set in the Switch is used to authenticate the user. When the local method is used, the privilege level will be dependant on the local account privilege configured on the Switch. Successful login using any of these methods will give the user a “user” privilege only. If the user wishes to upgrade his or her status to the administrator level, the user must implement the enable admin command, followed by a previously configured password. (See the enable admin part of this section for more detailed information, concerning the enable admin command.)

config_authen_login

Parameters

default – The default method list for access authentication, as defined by the user. The user may choose one or a combination of up to four (4) of the following authentication methods:

- *tacacs* – Adding this parameter will require the user to be authenticated using the TACACS protocol from the remote TACACS *server hosts* of the TACACS *server group* list.
- *xtacacs* – Adding this parameter will require the user to be authenticated using the XTACACS protocol from the remote XTACACS *server hosts* of the XTACACS *server group* list.
- *tacacs+* – Adding this parameter will require the user to be authenticated using the TACACS+ protocol from the remote TACACS+ *server hosts* of the TACACS+ *server group* list.
- *radius* - Adding this parameter will require the user to be authenticated using the RADIUS protocol from the RADIUS server listed in the *server group* list.
- *server_group* <string 15> - Adding this parameter will require the user to be authenticated using a user-defined server group previously configured on the Switch.
- *local* - Adding this parameter will require the user to be authenticated using the local *user account* database on the Switch.
- *none* – Adding this parameter will require no authentication to access the Switch.

method_list_name – Enter a previously implemented method list name defined by the user. The user may add one, or a combination of up to four (4) of the following authentication methods to this method list:

- *tacacs* – Adding this parameter will require the user to be authenticated using the TACACS protocol from a remote TACACS server.
- *xtacacs* – Adding this parameter will require the user to be authenticated using the XTACACS protocol from a remote XTACACS server.
- *tacacs+* – Adding this parameter will require the user to be authenticated using the TACACS+ protocol from a remote TACACS+ server.
- *radius* - Adding this parameter will require the user to be authenticated using the RADIUS protocol from a previously configured RADIUS server.
- *server_group* <string 15> - Adding this parameter will require the user to be authenticated using a user-defined server group previously configured on the Switch.
- *local* - Adding this parameter will require the user to be authenticated using the local *user account* database on the Switch.

config authen_login

- *none* – Adding this parameter will require no authentication to access the Switch.



NOTE: Entering *none* or *local* as an authentication protocol will override any other authentication that follows it on a method list or on the default method list.

Restrictions

Only administrator-level users can issue this command.

Example usage:

To configure the user defined method list “Trinity” with authentication methods tacacs, xtacacs and local, in that order.

```
DXS-3326GSR:4#config authen_login method_list_name Trinity method
tacacs xtacacs local

Command: config authen_login method_list_name Trinity method tacacs
xtacacs local

Success.

DXS-3326GSR:4#
```

Example usage:

To configure the default method list with authentication methods xtacacs, tacacs+ and local, in that order:

```
DXS-3326GSR:4#config authen_login default method xtacacs tacacs+
local

Command: config authen_login default method xtacacs tacacs+ local

Success.

DXS-3326GSR:4#
```

delete authen_login method_list_name

Purpose	Used to delete a previously configured user defined method list of authentication methods for users logging on to the Switch.
Syntax	delete authen_login method_list_name <string 15>
Description	This command is used to delete a list for authentication methods for user login.
Parameters	<string 15> - Enter an alphanumeric string of up to 15 characters to define the given <i>method list</i> the user wishes to delete.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To delete the method list name “Trinity”:

```
DXS-3326GSR:4#delete authen_login method_list_name Trinity
Command: delete authen_login method_list_name Trinity
```

Success.

```
DXS-3326GSR:4#
```

show authen_login

Purpose	Used to display a previously configured user defined method list of authentication methods for users logging on to the Switch.
Syntax	show authen_login [default method_list_name <string 15> all]
Description	This command is used to show a list of authentication methods for user login. The window will display the following parameters: ▪ Method List Name – The name of a previously configured method list name. ▪ Priority – Defines which order the method list protocols will be queried for authentication when a user attempts to log on to the Switch. Priority ranges from 1 (highest) to 4 (lowest). ▪ Method Name – Defines which security protocols are implemented, per method list name. ▪ Comment – Defines the type of Method. <i>User-defined Group</i> refers to server group defined by the user. <i>Built-in Group</i> refers to the TACACS, XTACACS, TACACS+ and RADIUS security protocols which are permanently set in the Switch. <i>Keyword</i> refers to authentication using a technique instead of TACACS/XTACACS/TACACS+ and RADIUS, which are local (authentication through the user account on the Switch) and none (no authentication necessary to access any function on the Switch).
Parameters	<i>default</i> – Entering this parameter will display the default method list for users logging on to the Switch. <i>method_list_name <string 15></i> - Enter an alphanumeric string of up to 15 characters to define the given <i>method list</i> the user wishes to view. <i>all</i> – Entering this parameter will display all the authentication login methods currently configured on the Switch.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To view all method list configurations:

DXS-3326GSR:4#show authen_login all

Command: show authen_login all

Method List Name	Priority	Method Name	Comment
-----	-----	-----	-----
Darren	1	tacacs+	Built-in Group
default	1	radius	Built-in Group
GoHabs!	1	Newfie	User-defined Group
Trinity	1	local	Keyword

DXS-3326GSR:4#

create authen_enable method_list_name

Purpose	Used to create a user-defined method list of authentication methods for promoting normal user level privileges to Administrator level privileges on the Switch.
Syntax	create authen_enable method_list_name <string 15>
Description	This command is used to promote users with normal level privileges to Administrator level privileges using authentication methods on the Switch. Once a user acquires normal user level privileges on the Switch, he or she must be authenticated by a method on the Switch to gain administrator privileges on the Switch, which is defined by the Administrator. A maximum of eight (8) enable method lists can be implemented on the Switch.
Parameters	<i><string 15></i> - Enter an alphanumeric string of up to 15 characters to define the given <i>enable method list</i> the user wishes to create.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To create a user-defined method list, named "Permit" for promoting user privileges to Administrator privileges:

DXS-3326GSR:4#create authen_enable method_list_name Permit

Command: create authen_enable method_list_name Permit

Success.

DXS-3326GSR:4#

config authen_enable

Purpose	Used to configure a user-defined method list of authentication methods for promoting normal user level privileges to Administrator
---------	--

config authen_enable

	level privileges on the Switch.
Syntax	config authen_enable [default method_list_name <string 15>] method {tacacs xtacacs tacacs+ radius server_group <string 15> local_enable none}
Description	This command is used to promote users with normal level privileges to Administrator level privileges using authentication methods on the Switch. Once a user acquires normal user level privileges on the Switch, he or she must be authenticated by a method on the Switch to gain administrator privileges on the Switch, which is defined by the Administrator. A maximum of eight (8) enable method lists can be implemented on the Switch. The sequence of methods implemented in this command will affect the authentication result. For example, if a user enters a sequence of methods like <i>tacacs</i> – <i>xtacacs</i> – <i>local_enable</i>, the Switch will send an authentication request to the first <i>tacacs</i> host in the server group. If no verification is found, the Switch will send an authentication request to the second <i>tacacs</i> host in the server group and so on, until the list is exhausted. At that point, the Switch will restart the same sequence with the following protocol listed, <i>xtacacs</i>. If no authentication takes place using the <i>xtacacs</i> list, the <i>local_enable</i> password set in the Switch is used to authenticate the user. Successful authentication using any of these methods will give the user an “Admin” privilege.
Parameters	<i>default</i> – The default method list for administration rights authentication, as defined by the user. The user may choose one or a combination of up to four (4) of the following authentication methods: ▪ <i>tacacs</i> – Adding this parameter will require the user to be authenticated using the TACACS protocol from the remote TACACS <i>server hosts</i> of the TACACS <i>server group</i> list. ▪ <i>xtacacs</i> – Adding this parameter will require the user to be authenticated using the XTACACS protocol from the remote XTACACS <i>server hosts</i> of the XTACACS <i>server group</i> list. ▪ <i>tacacs+</i> – Adding this parameter will require the user to be authenticated using the TACACS+ protocol from the remote TACACS+ <i>server hosts</i> of the TACACS+ <i>server group</i> list. ▪ <i>radius</i> - Adding this parameter will require the user to be authenticated using the RADIUS protocol from a remote RADIUS server previously implemented on the Switch. ▪ <i>server_group</i> <string 15> - Adding this parameter will require the user to be authenticated using a user-defined server group previously configured on the Switch. ▪ <i>local_enable</i> - Adding this parameter will require the user to be authenticated using the local <i>user account</i> database on the Switch. ▪ <i>none</i> – Adding this parameter will require no authentication to access the Switch.

config authen_enable

method_list_name – Enter a previously implemented method list name defined by the user (**create authen_enable**). The user may add one, or a combination of up to four (4) of the following authentication methods to this method list:

- *tacacs* – Adding this parameter will require the user to be authenticated using the TACACS protocol from a remote TACACS server.
- *xtacacs* – Adding this parameter will require the user to be authenticated using the XTACACS protocol from a remote XTACACS server.
- *tacacs+* – Adding this parameter will require the user to be authenticated using the TACACS+ protocol from a remote TACACS+ server.
- *radius* - Adding this parameter will require the user to be authenticated using the RADIUS protocol from a remote RADIUS server previously implemented on the Switch.
- *server_group <string 15>* - Adding this parameter will require the user to be authenticated using a user-defined server group previously configured on the Switch.
- *local_enable* - Adding this parameter will require the user to be authenticated using the local *user account* database on the Switch. The local enable password of the device can be configured using the “**config admin local_enable**” command.
- *none* – Adding this parameter will require no authentication to access the administration level privileges on the Switch.

Restrictions

Only administrator-level users can issue this command.

Example usage:

To configure the user defined method list “Trinity” with authentication methods tacacs, xtacacs and local, in that order.

```
DXS-3326GSR:4#config authen_enable method_list_name Trinity method
tacacs xtacacs local

Command: config authen_enable method_list_name Trinity method tacacs
xtacacs local

Success.

DXS-3326GSR:4#
```

Example usage:

To configure the default method list with authentication methods xtacacs, tacacs+ and local, in that order:

```
DXS-3326GSR:4#config authen_enable default method xtacacs tacacs+ local

Command: config authen_enable default method xtacacs tacacs+ local
```

Success.

DXS-3326GSR:4#

delete authen_enable method_list_name

Purpose	Used to delete a user-defined method list of authentication methods for promoting normal user level privileges to Administrator level privileges on the Switch.
Syntax	delete authen_enable method_list_name <string 15>
Description	This command is used to delete a user-defined method list of authentication methods for promoting user level privileges to Administrator level privileges.
Parameters	<i><string 15></i> - Enter an alphanumeric string of up to 15 characters to define the given <i>enable method list</i> the user wishes to delete.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To delete the user-defined method list “Permit”

DXS-3326GSR:4#delete authen_enable method_list_name Permit

Command: delete authen_enable method_list_name Permit

Success.

DXS-3326GSR:4#

show authen_enable

Purpose	Used to display the method list of authentication methods for promoting normal user level privileges to Administrator level privileges on the Switch.
Syntax	show authen_enable [default method_list_name <string 15> all]
Description	This command is used to delete a user-defined method list of authentication methods for promoting user level privileges to Administrator level privileges. The window will display the following parameters: - Method List Name – The name of a previously configured method list name. - Priority – Defines which order the method list protocols will be queried for authentication when a user attempts to log on to the Switch. Priority ranges from 1(highest) to 4 (lowest).

show authen_enable

- Method Name – Defines which security protocols are implemented, per method list name.
- Comment – Defines the type of Method. *User-defined Group* refers to *server groups* defined by the user. *Built-in Group* refers to the TACACS/XTACACS/TACACS+ and RADIUS security protocols which are permanently set in the Switch. *Keyword* refers to authentication using a technique INSTEAD of TACACS/XTACACS/TACACS+ and RADIUS which are local (authentication through the *local_enable* password on the Switch) and none (no authentication necessary to access any function on the Switch).

Parameters *default* – Entering this parameter will display the default method list for users attempting to gain access to Administrator level privileges on the Switch.

method_list_name <string 15> Enter an alphanumeric string of up to 15 characters to define the given *method list* the user wishes to view.

all – Entering this parameter will display all the authentication login methods currently configured on the Switch.

Restrictions None

Example usage:

To display all method lists for promoting user level privileges to administrator level privileges.

DXS-3326GSR:4#show authen_enable all

Command: show authen_enable all

Method List Name	Priority	Method Name	Comment
-----	-----	-----	-----
Permit	1	tacacs+	Built-in Group
	2	tacacs	Built-in Group
	3	Darren	User-defined Group
	4	local	Keyword
default	1	tacacs+	Built-in Group
	2	local	Keyword

Total Entries : 2

DXS-3326GSR:4#

config authen application

Purpose	Used to configure various applications on the Switch for authentication using a previously configured method list.
Syntax	config authen application [console telnet ssh http all] [login enable] [default method_list_name <string 15>]
Description	This command is used to configure switch configuration applications (console, telnet, ssh, web) for login at the user level and at the administration level (<i>authen_enable</i>) utilizing a previously configured method list.
Parameters	<i>application</i> – Choose the application to configure. The user may choose one of the following four applications to configure. ▪ <i>console</i> – Choose this parameter to configure the command line interface login method. ▪ <i>telnet</i> – Choose this parameter to configure the telnet login method. ▪ <i>ssh</i> - Choose this parameter to configure the SSH (Secure Shell) login method. ▪ <i>http</i> – Choose this parameter to configure the web interface login method. ▪ <i>all</i> – Choose this parameter to configure all applications (console, telnet, web, ssh) login method. <i>login</i> – Use this parameter to configure an application for normal login on the user level, using a previously configured method list. <i>enable</i> - Use this parameter to configure an application for upgrading a normal user level to administrator privileges, using a previously configured method list. <i>default</i> – Use this parameter to configure an application for user authentication using the default method list. <i>method_list_name <string 15></i> - Use this parameter to configure an application for user authentication using a previously configured method list. Enter an alphanumeric string of up to 15 characters to define a previously configured method list.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To configure the default method list for the web interface:

```

DXS-3326GSR:4#config authen application http login default
Command: config authen application http login default

Success.

DXS-3326GSR:4#

```

show authen application

Purpose	Used to display authentication methods for the various applications on the Switch.
Syntax	show authen application
Description	This command will display all of the authentication method lists (login, enable administrator privileges) for switch configuration applications (console, telnet, web) currently configured on the Switch.
Parameters	None.
Restrictions	None.

Example usage:

To display the login and enable method list for all applications on the Switch:

```
DXS-3326GSR:4#show authen application
Command: show authen application

Application  Login Method List  Enable Method List
-----
Console      default            default
Telnet       Trinity            default
SSH          default            default
HTTP         default            default

DXS-3326GSR:4#
```

create authen server_host

Purpose	Used to create an authentication server host.
Syntax	create authen server_host <ipaddr> protocol [tacacs xtacacs tacacs+ radius] {port <int 1-65535> key [<key_string 254> none] timeout <int 1-255> retransmit < 1-255>}
Description	This command will create an authentication server host for the TACACS/XTACACS/TACACS+ and RADIUS security protocols on the Switch. When a user attempts to access the Switch with authentication protocol enabled, the Switch will send authentication packets to a remote TACACS/XTACACS/TACACS+ or RADIUS server host on a remote host. The TACACS/XTACACS/TACACS+ or RADIUS server host will then verify or deny the request and return the appropriate message to the Switch. More than one authentication protocol can be run on the same physical server host but, remember that TACACS/XTACACS/TACACS+ and RADIUS are separate entities and are not compatible with each other. The maximum supported number of server hosts is 16.

create authn server_host

Parameters	<i>server_host</i> <ipaddr> - The IP address of the remote server host the user wishes to add. <i>protocol</i> – The protocol used by the server host. The user may choose one of the following: ▪ <i>tacacs</i> – Enter this parameter if the server host utilizes the TACACS protocol. ▪ <i>xtacacs</i> - Enter this parameter if the server host utilizes the XTACACS protocol. ▪ <i>tacacs+</i> - Enter this parameter if the server host utilizes the TACACS+ protocol. ▪ <i>radius</i> - Enter this parameter if the server host utilizes the RADIUS protocol. <i>port</i> <int 1-65535> - Enter a number between 1 and 65535 to define the virtual port number of the authentication protocol on a server host. The default port number is 49 for TACACS/XTACACS/TACACS+ servers but the user may set a unique port number for higher security. The default port number of the authentication protocol on the RADIUS server is 1812 <i>key</i> <key_string 254> - Authentication key to be shared with a configured TACACS+ server only. Specify an alphanumeric string up to 254 characters. <i>timeout</i> <int 1-255> - Enter the time in seconds the Switch will wait for the server host to reply to an authentication request. The default value is 5 seconds. <i>retransmit</i> <int 1-255> - Enter the value in the retransmit field to change how many times the device will resend an authentication request when the TACACS/XTACACS/TACACS+ or RADIUS server does not respond.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To create a TACACS+ authentication server host, with port number 1234, a timeout value of 10 seconds and a retransmit count of 5.

```
DXS-3326GSR:4#create authn server_host 10.1.1.121 protocol tacacs+ port 1234 timeout 10 retransmit 5
```

```
Command: create authn server_host 10.1.1.121 protocol tacacs+ port 1234 timeout 10 retransmit 5
```

Success.

```
DXS-3326GSR:4#
```

config authen server_host

Purpose	Used to configure a user-defined authentication server host.
Syntax	create authen server_host <ipaddr> protocol [tacacs xtacacs tacacs+ radius] {port <int 1-65535> key [<key_string 254> none] timeout <int 1-255> retransmit < 1-255>}
Description	This command will configure a user-defined authentication server host for the TACACS/XTACACS/TACACS+ and RADIUS security protocols on the Switch. When a user attempts to access the Switch with authentication protocol enabled, the Switch will send authentication packets to a remote TACACS/XTACACS/TACACS+/RADIUS server host on a remote host. The TACACS/XTACACS/TACACS+/RADIUS server host will then verify or deny the request and return the appropriate message to the Switch. More than one authentication protocol can be run on the same physical server host but, remember that TACACS/XTACACS/TACACS+ are separate entities and are not compatible with each other. The maximum supported number of server hosts is 16.
Parameters	<i>server_host</i> <ipaddr> - The IP address of the remote server host the user wishes to alter. <i>protocol</i> – The protocol used by the server host. The user may choose one of the following: ▪ <i>tacacs</i> – Enter this parameter if the server host utilizes the TACACS protocol. ▪ <i>xtacacs</i> - Enter this parameter if the server host utilizes the XTACACS protocol. ▪ <i>tacacs+</i> - Enter this parameter if the server host utilizes the TACACS+ protocol. ▪ <i>radius</i> - Enter this parameter if the server host utilizes the RADIUS protocol. <i>port</i> <int 1-65535> - Enter a number between 1 and 65535 to define the virtual port number of the authentication protocol on a server host. The default port number is 49 for TACACS/XTACACS/TACACS+ servers but the user may set a unique port number for higher security. The default port number for RADIUS servers is 1812. <i>key</i> <key_string 254> - Authentication key to be shared with a configured TACACS+ server only. Specify an alphanumeric string up to 254 characters or choose none. <i>timeout</i> <int 1-255> - Enter the time in seconds the Switch will wait for the server host to reply to an authentication request. The default value is 5 seconds. <i>retransmit</i> <int 1-255> - Enter the value in the retransmit field to change how many times the device will resend an authentication request when the TACACS, XTACACS or RADIUS server does not respond. This field is inoperable for the TACACS+ protocol.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To configure a TACACS authentication server host, with port number 4321, a timeout value of 12 seconds and a retransmit count of 4.

```
DXS-3326GSR:4#config authen server_host 10.1.1.121 protocol
tacacs port 4321 timeout 12 retransmit 4

Command: config authen server_host 10.1.1.121 protocol tacacs
port 4321 timeout 12 retransmit 4

Success.

DXS-3326GSR:4#
```

delete authen server_host

Purpose	Used to delete a user-defined authentication server host.
Syntax	delete authen server_host <ipaddr> protocol [tacacs xtacacs tacacs+ radius]
Description	This command is used to delete a user-defined authentication server host previously created on the Switch.
Parameters	<i>server_host <ipaddr></i> - The IP address of the remote server host the user wishes to delete. <i>protocol</i> – The protocol used by the server host the user wishes to delete. The user may choose one of the following: ▪ <i>tacacs</i> – Enter this parameter if the server host utilizes the TACACS protocol. ▪ <i>xtacacs</i> - Enter this parameter if the server host utilizes the XTACACS protocol. ▪ <i>tacacs+</i> - Enter this parameter if the server host utilizes the TACACS+ protocol. ▪ <i>radius</i> - Enter this parameter if the server host utilizes the RADIUS protocol.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To delete a user-defined TACACS+ authentication server host:

```
DXS-3326GSR:4#delete authen server_host 10.1.1.121 protocol tacacs+
Command: delete authen server_host 10.1.1.121 protocol tacacs+

Success.

DXS-3326GSR:4#
```

show authen server_host

Purpose	Used to view a user-defined authentication server host.
Syntax	show authen server_host
Description	This command is used to view user-defined authentication server hosts previously created on the Switch. The following parameters are displayed: IP address – The IP address of the authentication server host. Protocol – the protocol used by the server host. Possible results will include tacacs, xtacacs, tacacs+ and radius. Port – The virtual port number on the server host. The default value is 49. Timeout - The time in seconds the Switch will wait for the server host to reply to an authentication request. Retransmit - The value in the retransmit field denotes how many times the device will resend an authentication request when the TACACS server does not respond. This field is inoperable for the tacacs+ protocol. Key - Authentication key to be shared with a configured TACACS+ server only.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To view authentication server hosts currently set on the Switch:

```

DXS-3326GSR:4#show authen server_host
Command: show authen server_host

IP Address  Protocol  Port  Timeout  Retransmit  Key
-----
10.53.13.94  TACACS   49    5         2           -----

Total Entries : 1

DXS-3326GSR:4#

```

create authen server_group

Purpose	Used to create a user-defined authentication server group.
---------	--

create authen server_group

Syntax	create authen server_group <string 15>
Description	This command will create an authentication server group. A server group is a technique used to group TACACS/XTACACS/TACACS+ and RADIUS server hosts into user defined categories for authentication using method lists. The user may add up to eight (8) authentication server hosts to this group using the config authen server_group command.
Parameters	<string 15> - Enter an alphanumeric string of up to 15 characters to define the newly created server group.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To create the server group “group_1”:

```
DXS-3326GSR:4#create server_group group_1
```

```
Command: create server_group group_1
```

```
Success.
```

```
DXS-3326GSR:4#
```

config authen server_group

Purpose	Used to create a user-defined authentication server group.
Syntax	config authen server_group [tacacs xtacacs tacacs+ radius <string 15>] [add delete] server_host <ipaddr> protocol [tacacs xtacacs tacacs+ radius]
Description	This command will configure an authentication server group. A server group is a technique used to group TACACS/XTACACS/TACACS+ and RADIUS server hosts into user defined categories for authentication using method lists. The user may define the type of server group by protocol or by previously defined server group. Up to eight (8) authentication server hosts may be added to any particular group
Parameters	<i>server_group</i> - The user may define the group by protocol groups built into the Switch (TACACS/XTACACS/TACACS+/RADIUS), or by a user-defined group previously created using the create authen server_group command. ▪ <i>tacacs</i> – Use this parameter to utilize the built-in TACACS server protocol on the Switch. Only server hosts utilizing the TACACS protocol may be added to this group. ▪ <i>xtacacs</i> – Use this parameter to utilize the built-in XTACACS server protocol on the Switch. Only server hosts utilizing the XTACACS protocol may be added to this group. ▪ <i>tacacs+</i> – Use this parameter to utilize the built-in

config authen server_group

TACACS+ server protocol on the Switch. Only server hosts utilizing the TACACS+ protocol may be added to this group.

- *radius* - Use this parameter to utilize the built-in RADIUS server protocol on the Switch. Only server hosts utilizing the RADIUS protocol may be added to this group.
- *<string 15>* - Enter an alphanumeric string of up to 15 characters to define the previously created server group. This group may add any combination of server hosts to it, regardless of protocol.

[add | delete] – Enter the correct parameter to add or delete a server host from a server group.

server_host <ipaddr> - Enter the IP address of the previously configured server host to add or delete.

protocol – Enter the protocol utilized by the server host. There are four options:

- *tacacs* – Use this parameter to define the protocol if the server host is using the TACACS authentication protocol.
- *xtacacs* – Use this parameter to define the protocol if the server host is using the XTACACS authentication protocol.
- *tacacs+* – Use this parameter to define the protocol if the server host is using the TACACS+ authentication protocol.
- *radius* - Use this parameter to define the protocol if the server host is using the RADIUS authentication protocol.

Restrictions

Only administrator-level users can issue this command.

Example usage:

To add an authentication host to server group “group_1”:

```
DXS-3326GSR:4#config authen server_group group_1 add server_host 10.1.1.121 protocol tacacs+
```

```
Command: config authen server_group group_1 add server_host 10.1.1.121 protocol tacacs+
```

Success.

```
DXS-3326GSR:4#
```

delete authen server_group

Purpose Used to delete a user-defined authentication server group.

Syntax **delete authen server_group <string 15>**

Description This command will delete an authentication server group.

delete authn server_group

Parameters	<i><string 15></i> - Enter an alphanumeric string of up to 15 characters to define the previously created server group the user wishes to delete.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To delete the server group “group_1”:

DXS-3326GSR:4#delete server_group group_1

Command: delete server_group group_1

Success.

DXS-3326GSR:4#

show authn server_group

Purpose	Used to view authentication server groups on the Switch.
Syntax	show authn server_group <i><string 15></i>
Description	This command will display authentication server groups currently configured on the Switch. This command will display the following fields: Group Name: The name of the server group currently configured on the Switch, including built in groups and user defined groups. IP Address: The IP address of the server host. Protocol: The authentication protocol used by the server host.
Parameters	<i><string 15></i> - Enter an alphanumeric string of up to 15 characters to define the previously created server group to view. Entering this command without the <i><string></i> parameter will display all authentication server groups on the Switch.
Restrictions	None.

Example usage:

To show the authentication server group:

DXS-3326GSR:4#show authen server_group

Command: show authen server_group

Group Name	IP Address	Protocol
-----	-----	-----
radius	-----	
Darren	10.53.13.2	TACACS
tacacs	10.53.13.94	TACACS
tacacs+	-----	
xtacacs	-----	

Total Entries : 4

DXS-3326GSR:4#

config authen parameter response_timeout

Purpose	Used to configure the amount of time the Switch will wait for a user to enter authentication before timing out.
Syntax	config authen parameter response_timeout <int 0-255>
Description	This command will set the time the Switch will wait for a response of authentication from the user.
Parameters	<i>response_timeout <int 0-255></i> - Set the time, in seconds, the Switch will wait for a response of authentication from the user attempting to log in from the command line interface or telnet interface. An entry of 0 will denote that the Switch will never time out while waiting for a response of authentication. The default setting is 30 seconds.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To configure the response timeout for 60 seconds:

DXS-3326GSR:4# config authen parameter response_timeout 60

Command: config authen parameter response_timeout 60

Success.

DXS-3326GSR:4#

Example usage:

To configure the response timeout to never time out:

DXS-3326GSR:4# config authen parameter response_timeout 0

Command: config authen parameter response_timeout 0

Success.

DXS-3326GSR:4#

config authen parameter attempt

Purpose	Used to configure the maximum number of times the Switch will accept authentication attempts.
Syntax	config authen parameter attempt <int 1-255>
Description	This command will configure the maximum number of times the Switch will accept authentication attempts. Users failing to be authenticated after the set amount of attempts will be denied access to the Switch and will be locked out of further authentication attempts. Command line interface users will have to wait 60 seconds before another authentication attempt. Telnet users will be disconnected from the Switch.
Parameters	<i>parameter attempt <int 1-255></i> - Set the maximum number of attempts the user may try to become authenticated by the Switch, before being locked out. The default setting is 3 attempts.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To set the maximum number of authentication attempts at 5:

DXS-3326GSR:4#config authen parameter attempt 5

Command: config authen parameter attempt 5

Success.

DXS-3326GSR:4#

show authen parameter

Purpose	Used to display the authentication parameters currently configured on the Switch.
Syntax	show authen parameter
Description	This command will display the authentication parameters currently configured on the Switch, including the response timeout and user authentication attempts. This command will display the following fields:

show authen parameter

Response timeout – The configured time allotted for the Switch to wait for a response of authentication from the user attempting to log in from the command line interface or telnet interface.

User attempts – The maximum number of attempts the user may try to become authenticated by the Switch, before being locked out.

Parameters None.

Restrictions None.

DXS-3326GSR:4#show authen parameter

Command: show authen parameter

Response timeout: 60 seconds

User attempts : 5

DXS-3326GSR:4#

enable admin

Purpose Used to promote user level privileges to administrator level privileges

Syntax **enable admin**

Description This command is for users who have logged on to the Switch on the normal user level, to become promoted to the administrator level. After logging on to the Switch users, will have only user level privileges. To gain access to administrator level privileges, the user will enter this command and will have to enter an authentication password. Possible authentication methods for this function include TACACS/XTACACS/TACACS+, RADIUS, user defined server groups, local enable (local account on the Switch), or no authentication (none). Because XTACACS and TACACS do not support the enable function, the user must create a special account on the server host which has the username “enable”, and a password configured by the administrator that will support the “enable” function. This function becomes inoperable when the authentication policy is disabled.

Parameters None.

Restrictions Only administrator-level users can issue this command.

Example usage:

To enable administrator privileges on the Switch:

DXS-3326GSR:4#enable admin

Password: *****

DXS-3326GSR:4#**config admin local_enable**

Purpose	Used to configure the local enable password for administrator level privileges.
Syntax	config admin local_enable
Description	This command will configure the locally enabled password for the enable admin command. When a user chooses the “ <i>local_enable</i> ” method to promote user level privileges to administrator privileges, he or she will be prompted to enter the password configured here, that is set locally on the Switch.
Parameters	<password 15> - After entering this command, the user will be prompted to enter the old password, then a new password in an alphanumeric string of no more than 15 characters, and finally prompted to enter the new password again to confirm. See the example below.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To configure the password for the “local_enable” authentication method.

```

DXS-3326GSR:4#config admin local_enable
Command: config admin local_enable

Enter the old password: *****
Enter the case-sensitive new password:*****
Enter the new password again for confirmation:*****

Success.

DXS-3326GSR:4#

```

SSH COMMANDS

The steps required to use the SSH protocol for secure communication between a remote PC (the SSH Client) and the Switch (the SSH Server), are as follows:

- Create a user account with admin-level access using the **create account admin <username> <password>** command. This is identical to creating any other admin-level User account on the Switch, including specifying a password. This password is used to login to the Switch, once secure communication has been established using the SSH protocol.
- Configure the user account to use a specified authorization method to identify users that are allowed to establish SSH connections with the Switch using the **config ssh user authmode** command. There are three choices as to the method SSH will use to authorize the user, and they are password, publickey and hostbased.
- Configure the encryption algorithm that SSH will use to encrypt and decrypt messages sent between the SSH Client and the SSH Server.
- Finally, enable SSH on the Switch using the **enable ssh** command.
- After following the above steps, you can configure an SSH Client on the remote PC and manage the Switch using secure, in-band communication.

The Secure Shell (SSH) commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
enable ssh	
disable ssh	
config ssh authmode	[password publickey hostbased] [enable disable]
show ssh authmode	
config ssh server	{maxsession <int 1-3> contimeout <sec 120-600> authfail <int 2-20> rekey [10min 30min 60min never]}
show ssh server	
config ssh user	<username 15> authmode {hostbased [hostname <string 32> hostname_IP <string 32> <ipaddr>] password publickey}
show ssh user authmode	
config ssh algorithm	[3DES AES128 AES192 AES256 arcfour blowfish cast128 twofish128 twofish192 twofish256 MD5 SHA1 DSA RSA] [enable disable]
show ssh algorithm	

Each command is listed, in detail, in the following sections.

enable ssh

Purpose	Used to enable SSH.
---------	---------------------

enable ssh

Syntax	enable ssh
Description	This command allows you to enable SSH on the Switch.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Usage Example:

To enable SSH:

```
DXS-3326GSR:4#enable ssh
Command: enable ssh

Success.

DXS-3326GSR:4#
```

disable ssh

Purpose	Used to disable SSH.
Syntax	disable ssh
Description	This command allows you to disable SSH on the Switch.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Usage Example:

To disable SSH:

```
DXS-3326GSR:4# disable ssh
Command: disable ssh

Success.

DXS-3326GSR:4#
```

config ssh authmode

Purpose	Used to configure the SSH authentication mode setting.
Syntax	config ssh authmode [password publickey hostbased] [enable disable]

config ssh authmode

Description	This command will allow you to configure the SSH authentication mode for users attempting to access the Switch.
Parameters	<i>password</i> – This parameter may be chosen if the administrator wishes to use a locally configured password for authentication on the Switch. <i>publickey</i> - This parameter may be chosen if the administrator wishes to use a publickey configuration set on a SSH server, for authentication. <i>hostbased</i> - This parameter may be chosen if the administrator wishes to use a host computer for authentication. This parameter is intended for Linux users requiring SSH authentication techniques and the host computer is running the Linux operating system with a SSH program previously installed. <i>[enable disable]</i> - This allows you to enable or disable SSH authentication on the Switch.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To enable the SSH authentication mode by password:

DXS-3326GSR:4#config ssh authmode password enable

Command: config ssh authmode password enable

Success.

DXS-3326GSR:4#

show ssh authmode

Purpose	Used to display the SSH authentication mode setting.
Syntax	show ssh authmode
Description	This command will allow you to display the current SSH authentication set on the Switch.
Parameters	None.
Restrictions	None.

Example usage:

To view the current authentication mode set on the Switch:

DXS-3326GSR:4#show ssh authmode

Command: show ssh authmode

The SSH User Authentication Support**Password** : Enabled**Publickey** : Enabled**Hostbased** : Enabled**DXS-3326GSR:4#****config ssh server**

Purpose	Used to configure the SSH server.
Syntax	config ssh server {maxsession <int 1-3> contimeout <sec 120-600> authfail <int 2-20> rekey [10min 30min 60min never]
Description	This command allows you to configure the SSH server.
Parameters	<i>maxsession <int 1-3></i> - Allows the user to set the number of users that may simultaneously access the Switch. The default is 3. <i>contimeout <sec 120-600></i> - Allows the user to set the connection timeout. The user may set a time between 120 and 600 seconds. The default is 120 seconds. <i>authfail <int 2-20></i> - Allows the administrator to set the maximum number of attempts that a user may try to logon utilizing SSH authentication. After the maximum number of attempts is exceeded, the Switch will be disconnected and the user must reconnect to the Switch to attempt another login. <i>rekey [10min 30min 60min never]</i> - Sets the time period that the Switch will change the security shell encryptions.
Restrictions	Only administrator-level users can issue this command.

Usage Example:

To configure the SSH server:

DXS-3326GSR:4# config ssh server maxsession 2 contimeout 300 authfail 2**Command: config ssh server maxsession 2 contimeout 300 authfail 2****Success.****DXS-3326GSR:4#****show ssh server**

Purpose	Used to display the SSH server setting.
Syntax	show ssh server

show ssh server

Description	This command allows you to display the current SSH server setting.
Parameters	None.
Restrictions	None.

Usage Example:

To display the SSH server:

```

DXS-3326GSR:4# show ssh server
Command: show ssh server

SSH Server Status           : Disabled
SSH Max Session            : 3
Connection timeout         : 120 (sec)
Authenticate failed attempts : 2
Rekey timeout              : Never
Listened Port Number       : 22

DXS-3326GSR:4#

```

config ssh user

Purpose	Used to configure the SSH user.
Syntax	config ssh user <username 15> authmode {hostbased [hostname <string 32> hostname_IP <string 32> <ipaddr>} password publickey]
Description	This command allows you to configure the SSH user authentication method.
Parameters	<username 15> - Enter a username of no more than 15 characters to identify the SSH user. authmode – Specifies the authentication mode of the SSH user wishing to log on to the Switch. The administrator may choose between: ▪ hostbased – This parameter should be chosen if the user wishes to use a remote SSH server for authentication purposes. Choosing this parameter requires the user to input the following information to identify the SSH user. • hostname <string 32> - Enter an alphanumeric string of up to 32 characters identifying the remote SSH user. • hostname_IP <string 32> <ipaddr> - Enter the hostname and the corresponding IP

config ssh user

address of the SSH user.

- *password* – This parameter should be chosen if the user wishes to use an administrator defined password for authentication. Upon entry of this command, the Switch will prompt the user for a password, and then to retype the password for confirmation.
- *publickey* – This parameter should be chosen if the user wishes to use the publickey on a SSH server for authentication.

Restrictions

Only administrator-level users can issue this command.

Example usage:

To configure the SSH user:

DXS-3326GSR:4# config ssh user Trinity authmode password

Command: config ssh user Trinity authmode password

Success.

DXS-3326GSR:4#

show ssh user authmode

Purpose	Used to display the SSH user setting.
Syntax	show ssh user authmode
Description	This command allows you to display the current SSH user setting.
Parameters	None.
Restrictions	None.

Example usage:

To display the SSH user:

DXS-3326GSR:4#show ssh user authmode

Command: show ssh user authmode

Current Accounts: Authentication

UserName

Trinity

Publickey

DXS-3326GSR:4#



Note: To configure the SSH user, the administrator must create a user account on the Switch. For information concerning configuring a user account, please see the section of this manual entitled **Basic Switch Commands** and then the command, **create user account**.

config ssh algorithm

Purpose	Used to configure the SSH algorithm.
Syntax	config ssh algorithm [3DES AES128 AES192 AES256 arcfour blowfish cast128 twofish128 twofish192 twofish256 MD5 SHA1 DSA RSA] [enable disable]
Description	This command allows you to configure the desired type of SSH algorithm used for authentication encryption.
Parameters	<i>3DES</i> – This parameter will enable or disable the Triple_Data Encryption Standard encryption algorithm. <i>AES128</i> - This parameter will enable or disable the Advanced Encryption Standard AES128 encryption algorithm. <i>AES192</i> - This parameter will enable or disable the Advanced Encryption Standard AES192 encryption algorithm. <i>AES256</i> - This parameter will enable or disable the Advanced Encryption Standard AES256 encryption algorithm. <i>arcfour</i> - This parameter will enable or disable the Arcfour encryption algorithm. <i>blowfish</i> - This parameter will enable or disable the Blowfish encryption algorithm. <i>cast128</i> - This parameter will enable or disable the Cast128 encryption algorithm. <i>twofish128</i> - This parameter will enable or disable the twofish128 encryption algorithm. <i>twofish192</i> - This parameter will enable or disable the twofish192 encryption algorithm. <i>MD5</i> - This parameter will enable or disable the MD5 Message Digest encryption algorithm. <i>SHA1</i> - This parameter will enable or disable the Secure Hash Algorithm encryption. <i>DSA</i> - This parameter will enable or disable the Digital Signature Algorithm encryption. <i>RSA</i> - This parameter will enable or disable the RSA encryption algorithm. <i>[enable disable]</i> – This allows you to enable or disable algorithms entered in this command, on the Switch.
Restrictions	Only administrator-level users can issue this command.

Usage Example:

To configure SSH algorithm:

```
DXS-3326GSR:4# config ssh algorithm Blowfish enable
```

```
Command: config ssh algorithm Blowfish enable
```

```
Success.
```

```
DXS-3326GSR:4#
```

show ssh algorithm

Purpose	Used to display the SSH algorithm setting.
Syntax	show ssh algorithm
Description	This command will display the current SSH algorithm setting status.
Parameters	None.
Restrictions	None.

Usage Example:

To display SSH algorithms currently set on the Switch:

```
DXS-3326GSR:4#show ssh algorithm
```

```
Command: show ssh algorithm
```

Encryption Algorithm

```

3DES           :Enabled
AES128        :Enabled
AES192        :Enabled
AES256        :Enabled
ARC4          :Enabled
Blowfish       :Enabled
Cast128       :Enabled
Twofish128    :Enabled
Twofish192    :Enabled
Twofish256    :Enabled

```

Data Integrity Algorithm

```

MD5           :Enabled
SHA1          :Enabled

```

Public Key Algorithm

```

RSA           :Enabled
DSA           :Enabled

```

DXS-3326GSR:4#

SSL COMMANDS

Secure Sockets Layer or *SSL* is a security feature that will provide a secure communication path between a host and client through the use of authentication, digital signatures and encryption. These security functions are implemented through the use of a *ciphersuite*, which is a security string that determines the exact cryptographic parameters, specific encryption algorithms and key sizes to be used for an authentication session and consists of three levels:

1. **Key Exchange:** The first part of the cyphersuite string specifies the public key algorithm to be used. This switch utilizes the Rivest Shamir Adleman (RSA) public key algorithm and the Digital Signature Algorithm (DSA), specified here as the *DHE_DSS* Diffie-Hellman (DHE) public key algorithm. This is the first authentication process between client and host as they “exchange keys” in looking for a match and therefore authentication to be accepted to negotiate encryptions on the following level.
2. **Encryption:** The second part of the ciphersuite that includes the encryption used for encrypting the messages sent between client and host. The Switch supports two types of cryptology algorithms:
 - **Stream Ciphers** – There are two types of stream ciphers on the Switch, *RC4 with 40-bit keys* and *RC4 with 128-bit keys*. These keys are used to encrypt messages and need to be consistent between client and host for optimal use.
 - **CBC Block Ciphers** – CBC refers to Cipher Block Chaining, which means that a portion of the previously encrypted block of encrypted text is used in the encryption of the current block. The Switch supports the *3DES_EDE* encryption code defined by the Data Encryption Standard (DES) to create the encrypted text.
3. **Hash Algorithm:** This part of the ciphersuite allows the user to choose a message digest function which will determine a Message Authentication Code. This Message Authentication Code will be encrypted with a sent message to provide integrity and prevent against replay attacks. The Switch supports two hash algorithms, *MD5* (Message Digest 5) and *SHA* (Secure Hash Algorithm).

These three parameters are uniquely assembled in four choices on the Switch to create a three layered encryption code for secure communication between the server and the host. The user may implement any one or combination of the ciphersuites available, yet different ciphersuites will affect the security level and the performance of the secured connection. The information included in the ciphersuites is not included with the Switch and requires downloading from a third source in a file form called a *certificate*. This function of the Switch cannot be executed without the presence and implementation of the certificate file and can be downloaded to the Switch by utilizing a TFTP server. The Switch supports SSLv3. Other versions of SSL may not be compatible with this Switch and may cause problems upon authentication and transfer of messages from client to host.

Command	Parameters
enable ssl	{ciphersuite {RSA_with_RC4_128_MD5 RSA_with_3DES_EDE_CBC_SHA DHE_DSS_with_3DES_EDE_CBC_SHA RSA_EXPORT_with_RC4_40_MD5}}
disable ssl	{ciphersuite {RSA_with_RC4_128_MD5 RSA_with_3DES_EDE_CBC_SHA DHE_DSS_with_3DES_EDE_CBC_SHA RSA_EXPORT_with_RC4_40_MD5}}
config ssl cachetimeout	<value 60-86400>
show ssl	{certificate}
show ssl cachetimeout	

Command	Parameters
download certificate_fromTFTP	<ipaddr> certfilename <path_filename 64> keyfilename <path_filename 64>

Each command is listed, in detail, in the following sections.

enable ssl

Purpose	To enable the SSL function on the Switch.
Syntax	enable ssl {ciphersuite {RSA_with_RC4_128_MD5 RSA_with_3DES_EDE_CBC_SHA DHE_DSS_with_3DES_EDE_CBC_SHA RSA_EXPORT_with_RC4_40_MD5}}
Description	This command will enable SSL on the Switch by implementing any one or combination of listed ciphersuites on the Switch. Entering this command without a parameter will enable the SSL status on the Switch. Enabling SSL will disable the web-manager on the Switch.
Parameters	<i>ciphersuite</i> - A security string that determines the exact cryptographic parameters, specific encryption algorithms and key sizes to be used for an authentication session. The user may choose any combination of the following: ▪ <i>RSA_with_RC4_128_MD5</i> – This ciphersuite combines the RSA key exchange, stream cipher RC4 encryption with 128-bit keys and the MD5 Hash Algorithm. ▪ <i>RSA_with_3DES_EDE_CBC_SHA</i> - This ciphersuite combines the RSA key exchange, CBC Block Cipher 3DES_EDE encryption and the SHA Hash Algorithm. ▪ <i>DHE_DSS_with_3DES_EDE_CBC_SHA</i> - This ciphersuite combines the DSA Diffie Hellman key exchange, CBC Block Cipher 3DES_EDE encryption and SHA Hash Algorithm. ▪ <i>RSA_EXPORT_with_RC4_40_MD5</i> - This ciphersuite combines the RSA Export key exchange, stream cipher RC4 encryption with 40-bit keys. The ciphersuites are enabled by default on the Switch, yet the SSL status is disabled by default. Enabling SSL with a ciphersuite will not enable the SSL status on the Switch.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To enable SSL on the Switch for all ciphersuites:

DXS-3326GSR:4#enable ssl

Command:enable ssl

Note: Web will be disabled if SSL is enabled.

Success.

DXS-3326GSR:4#

NOTE: Upon initial configuration, enabling SSL on the Switch will enable all ciphersuites. To utilize a particular ciphersuite, the user must eliminate other ciphersuites by using the **disable ssl** command along with the appropriate ciphersuites.



NOTE: Enabling the SSL function on the Switch will disable the port for the web manager (port 80). To log on to the web based manager, the entry of your URL must begin with *https://*. (ex. *https://10.90.90.90*)

disable ssl

Purpose	To disable the SSL function on the Switch.
Syntax	disable ssl {ciphersuite {RSA_with_RC4_128_MD5 RSA_with_3DES_EDE_CBC_SHA DHE_DSS_with_3DES_EDE_CBC_SHA RSA_EXPORT_with_RC4_40_MD5}}
Description	This command will disable SSL on the Switch and can be used to disable any one or combination of listed ciphersuites on the Switch.
Parameters	<i>ciphersuite</i> - A security string that determines the exact cryptographic parameters, specific encryption algorithms and key sizes to be used for an authentication session. The user may choose any combination of the following: ▪ <i>RSA_with_RC4_128_MD5</i> – This ciphersuite combines the RSA key exchange, stream cipher RC4 encryption with 128-bit keys and the MD5 Hash Algorithm. ▪ <i>RSA_with_3DES_EDE_CBC_SHA</i> - This ciphersuite combines the RSA key exchange, CBC Block Cipher 3DES_EDE encryption and the SHA Hash Algorithm. ▪ <i>DHE_DSS_with_3DES_EDE_CBC_SHA</i> - This ciphersuite combines the DSA Diffie Hellman key exchange, CBC Block Cipher 3DES_EDE encryption and SHA Hash Algorithm. ▪ <i>RSA_EXPORT_with_RC4_40_MD5</i> - This ciphersuite combines the RSA Export key exchange, stream cipher RC4 encryption with 40-bit keys.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To disable the SSL status on the Switch:

DXS-3326GSR:4#disable ssl

Command: disable ssl

Success.

DXS-3326GSR:4#

To disable ciphersuite *RSA_EXPORT_with_RC4_40_MD5* only:

DXS-3326GSR:4#disable ssl ciphersuite RSA_EXPORT_with_RC4_40_MD5

Command: disable ssl ciphersuite RSA_EXPORT_with_RC4_40_MD5

Success.

DXS-3326GSR:4#

config ssl cachetimeout

Purpose	Used to configure the SSL cache timeout.
Syntax	config ssl cachetimeout <value 60-86400>
Description	This command will set the time between a new key exchange between a client and a host using the SSL function. A new SSL session is established every time the client and host go through a key exchange. Specifying a longer timeout will allow the SSL session to reuse the master key on future connections with that particular host, therefore speeding up the negotiation process.
Parameters	<value 60-86400> - Enter a timeout value between 60 and 86400 seconds to specify the total time an SSL key exchange ID stays valid before the SSL module will require a new, full SSL negotiation for connection. The default cache timeout is 600 seconds
Restrictions	Only administrator-level users can issue this command.

Example usage:

To set the SSL cachetimeout for 7200 seconds:

DXS-3326GSR:4#config ssl cachetimeout 7200

Command: config ssl cachetimeout 7200

Success.

DXS-3326GSR:4#

show ssl cachetimeout

Purpose	Used to show the SSL cache timeout.
Syntax	show ssl cachetimeout
Description	Entering this command will allow the user to view the SSL cache timeout currently implemented on the Switch.
Parameters	None.
Restrictions	None.

Example usage:

To view the SSL cache timeout on the Switch:

```
DXS-3326GSR:4#show ssl cachetimeout
```

```
Command: show ssl cachetimeout
```

```
Cache timeout is 600 second(s).
```

```
DXS-3326GSR:4#
```

show ssl

Purpose	Used to view the SSL status and the certificate file status on the Switch.
Syntax	show ssl {certificate}
Description	This command is used to view the SSL status on the Switch. Adding the certificate parameter will allow the user to view the certificate file information currently set on the Switch.
Parameters	<i>{certificate}</i> – Adding this parameter will allow the user to view certificate file information currently implemented on the Switch.
Restrictions	None.

Example usage:

To view the SSL status on the Switch:

DXS-3326GSR:4#show ssl

Command: show ssl

SSL status	Disabled
RSA_WITH_RC4_128_MD5	0x0004 Enabled
RSA_WITH_3DES_EDE_CBC_SHA	0x000A Enabled
DHE_DSS_WITH_3DES_EDE_CBC_SHA	0x0013 Enabled
RSA_EXPORT_WITH_RC4_40_MD5	0x0003 Enabled

DXS-3326GSR:4#

Example usage:

To view certificate file information on the Switch:

DXS-3326GSR:4# show ssl certificate

Command: show ssl certificate

Loaded with RSA Certificate!

DXS-3326GSR:4#

download certificate_fromTFTP

Purpose	Used to download a certificate file for the SSL function on the Switch.
Syntax	download certificate_fromTFTP <ipaddr> certfilename <path_filename 64> keyfilename <path_filename 64>
Description	This command is used to download a certificate file for the SSL function on the Switch from a TFTP server. The certificate file is a data record used for authenticating devices on the network. It contains information on the owner, keys for authentication and digital signatures. Both the server and the client must have consistent certificate files for optimal use of the SSL function. The Switch only supports certificate files with .der file extensions.
Parameters	<ipaddr> - Enter the IP address of the TFTP server. certfilename <path_filename 64> - Enter the path and the filename of the certificate file you wish to download. keyfilename <path_filename 64> - Enter the path and the filename of the key exchange file you wish to download.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To download a certificate file and key file to the Switch:

**DXS-3326GSR:4# DXS-3326GSR:4#download certificate_fromTFTP
10.53.13.94 certfilename c:/cert.der keyfilename c:/pkey.der**

**Command: download certificate_fromTFTP 10.53.13.94 certfilename
c:/cert.der keyfilename c:/pkey.der**

Certificate Loaded Successfully!

DXS-3326GSR:4#

802.1X COMMANDS

The DXS-3326GSR implements the server-side of the IEEE 802.1x Port-based and MAC-based Network Access Control. This mechanism is intended to allow only authorized users, or other network devices, access to network resources by establishing criteria for each port on the Switch that a user or network device must meet before allowing that port to forward or receive frames.

Command	Parameters
enable 802.1x	
disable 802.1x	
create 802.1x user	<username 15>
show 802.1x user	
delete 802.1x user	
show 802.1x auth_state	ports [<portlist> all]
show 802.1x auth_configuration	ports [<portlist> all]
config 802.1x auth_mode	[port_based mac_based]
config 802.1x capability	[ports <portlist> all] [authenticator none]
config 802.1x auth_parameter ports	[<portlist> all] [default {direction [both in] port_control [force_unauth auto force_auth] quiet_period <sec 0-65535> tx_period <sec 1-65535> supp_timeout <sec 1-65535> server_timeout <sec 1-65535> max_req <value 1-10> reauth_period <sec 1-65535> enable_reauth [enable disable]}]
config 802.1x auth_protocol	[local radius eap]
config 802.1x init	{port_based ports [<portlist> all]} mac_based [ports [<portlist> all] {mac_address <macaddr>}]
config 802.1x reauth	{port_based ports [<portlist> all]} [<portlist> all] {mac_address <macaddr>}]
config radius add	<server_index 1-3> <server_ip> key <passwd 32> [default {auth_port <udp_port_number 1-65535> acct_port <udp_port_number 1-65535>}]
config radius delete	<server_index 1-3>
config radius	<server_index 1-3> {ipaddress <server_ip> key <passwd 32> [auth_port <udp_port_number 1-65535> acct_port <udp_port_number 1-65535>]}
show radius	
show acct_client	

Command	Parameters
show auth_client	
show auth_diagnostics	{ports [<portlist> all]}
show auth_session statistics	{ports [<portlist> all]}
show auth_statistics	{ports [<portlist> all]}

Each command is listed, in detail, in the following sections.

enable 802.1x

Purpose	Used to enable the 802.1x server on the Switch.
Syntax	enable 802.1x
Description	The enable 802.1x command enables the 802.1x Port-based or MAC-based Network Access control server application on the Switch.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To enable 802.1x switch wide:

```
DXS-3326GSR:4#enable 802.1x
```

```
Command: enable 802.1x
```

```
Success.
```

```
DXS-3326GSR:4#
```

disable 802.1x

Purpose	Used to disable the 802.1x server on the Switch.
Syntax	disable 802.1x
Description	The disable 802.1x command is used to disable the 802.1x Port-based or MAC-based Network Access control server application on the Switch.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To disable 802.1x on the Switch:

DXS-3326GSR:4#disable 802.1x

Command: disable 802.1x

Success.

DXS-3326GSR:4#

create 802.1x user

Purpose	Used to create a new 802.1x user.
Syntax	create 802.1x user <username 15>
Description	The create 802.1x user command is used to create new 802.1x users.
Parameters	<i><username 15></i> – A username can be as many as 15 alphanumeric characters.
Restrictions	Only administrator-level users can issue this command.

Example Usage:

To create an 802.1x user:

DXS-3326GSR:4#create 802.1x user dtremblett

Command: create 802.1x user dtremblett

Enter a case-sensitive new password:*****

Enter the new password again for confirmation:*****

Success.

DXS-3326GSR:4#

show 802.1x user

Purpose	Used to display the 802.1x user accounts on the Switch.
Syntax	show 802.1x user
Description	The show 802.1x user command is used to display the 802.1x Port-based or MAC-based Network Access control local users currently configured on the Switch.
Parameters	None.
Restrictions	None.

Example usage:

To view 802.1X users currently configured on the Switch:

DXS-3326GSR:4#show 802.1x user

Command: show 802.1x user

Current Accounts:

Username	Password
-----	-----
Darren	Trinity

Total entries: 1

DXS-3326GSR:4#

delete 802.1x user

Purpose	Used to delete an 802.1x user account on the Switch.
Syntax	delete 802.1x user <username 15>
Description	The delete 802.1x user command is used to display the 802.1x Port-based or MAC-based Network Access control local users currently configured on the Switch.
Parameters	<i><username 15></i> – A username can be as many as 15 alphanumeric characters.
Restrictions	Only administrator-level users can issue this command.

Example Usage:

To delete 802.1x users:

DXS-3326GSR:4#delete 802.1x user

Command: delete 802.1x user dtremblett

Success.

DXS-3326GSR:4#

show 802.1x auth_configuration

Purpose	Used to display the current configuration of the 802.1x server on the Switch.
Syntax	show 802.1x auth_configuration {ports [<portlist> all]}
Description	The show 802.1x command is used to display the current configuration of the 802.1x Port-based Network Access Control server application on the Switch.

show 802.1x auth_configuration

The following details will be displayed:

802.1x Enabled/Disabled – Shows the current status of 802.1x functions on the Switch.

Authentication Protocol: Radius_Eap – Shows the authentication protocol suite in use between the Switch and a RADIUS server.

Authentication Mode: Displays the type of authentication mode of the 802.1x function on the Switch. This field may read Port_based or MAC-based.

Port number – Shows the physical port number on the Switch.

Capability: Authenticator/None – Shows the capability of 802.1x functions on the port number displayed above. There are two 802.1x capabilities that can be set on the Switch: Authenticator and None.

AdminCtlDir: Both/In – Shows whether a controlled Port that is unauthorized will exert control over communication in both receiving and transmitting directions, or just the receiving direction.

OpenCtlDir: Both/In – Shows whether a controlled Port that is unauthorized will exert control over communication in both receiving and transmitting directions, or just the receiving direction.

Port Control: ForceAuth/ForceUnauth/Auto – Shows the administrative control over the port's authorization status. ForceAuth forces the Authenticator of the port to become Authorized. ForceUnauth forces the port to become Unauthorized.

QuietPeriod – Shows the time interval between authentication failure and the start of a new authentication attempt.

TxPeriod – Shows the time to wait for a response from a supplicant (user) to send EAP Request/Identiy packets.

SuppTimeout – Shows the time to wait for a response from a supplicant (user) for all EAP packets, except for the Request/Identity packets.

ServerTimeout – Shows the length of time to wait for a response from a RADIUS server.

MaxReq – Shows the maximum number of times to retry sending packets to the supplicant.

ReAuthPeriod – Shows the time interval between successive re-authentications.

ReAuthenticate: Enabled/Disabled – Shows whether or not to re-authenticate.

Parameters

ports

- *<portlist>* – Specifies a range of ports. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest

show 802.1x auth_configuration

port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.

- *all* – denotes all ports on the Switch.

Restrictions

Only administrator-level users can issue this command.

Example usage:

To display the 802.1x rustication states (stacking disabled):

DXS-3326GSR:4#show 802.1x auth_configuration ports 1:1

Command: show 802.1x auth_configuration ports 1:1

```

802.1X           : Enabled
Authentication Mode : Port_based
Authentication Protocol : Radius_EAP

Port number      : 1:1
Capability        : None
AdminCrIDir      : Both
OpenCrIDir       : Both
Port Control      : Auto
QuietPeriod       : 60  sec
TxPeriod          : 30  sec
SuppTimeout       : 30  sec
ServerTimeout     : 30  sec
MaxReq            : 2   times
ReAuthPeriod      : 3600 sec
ReAuthenticate    : Disabled

```

CTRL+C **ESC** **q** Quit **SPACE** **n** Next Page **Enter** Next Entry **a** All

show 802.1x auth_state

Purpose	Used to display the current authentication state of the 802.1x server on the Switch.
Syntax	show 802.1x auth_state {ports [<portlist all>]}
Description	The show 802.1x auth_state command is used to display the current authentication state of the 802.1x Port-based or MAC-

show 802.1x auth_state

based Network Access Control server application on the Switch.

The following details will be displayed:

Port number – Shows the physical port number on the Switch.

Auth PAE State: Initialize / Disconnected / Connecting / Authenticating / Authenticated / Held / ForceAuth / ForceUnauth – Shows the current state of the Authenticator PAE.

Backend State: Request / Response / Fail / Idle / Initialize / Success / Timeout – Shows the current state of the Backend Authenticator.

Port Status: Authorized / Unauthorized – Shows the result of the authentication process. Authorized means that the user was authenticated, and can access the network. Unauthorized means that the user was not authenticated, and cannot access the network.

Parameters

ports <portlist> – Specifies a range of ports. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 3 would specify port 3. 4 specifies port 4. 3-4 specifies all of the ports between port 3 and port 4 – in numerical order.

all – denotes all ports on the Switch

Restrictions

Only administrator-level users can issue this command.

Example usage:

To display the 802.1x auth state for port-based 802.1x:

DXS-3326GSR:4#show 802.1x auth_state

Command: show 802.1x auth_state

Port	Auth PAE State	Backend State	Port Status
-----	-----	-----	-----
1:1	ForceAuth	Success	Authorized
1:2	ForceAuth	Success	Authorized
1:3	ForceAuth	Success	Authorized
1:4	ForceAuth	Success	Authorized
1:5	ForceAuth	Success	Authorized
1:6	ForceAuth	Success	Authorized
1:7	ForceAuth	Success	Authorized
1:8	ForceAuth	Success	Authorized
1:9	ForceAuth	Success	Authorized
1:10	ForceAuth	Success	Authorized
1:11	ForceAuth	Success	Authorized
1:12	ForceAuth	Success	Authorized
1:13	ForceAuth	Success	Authorized
1:14	ForceAuth	Success	Authorized
1:15	ForceAuth	Success	Authorized

1:16	ForceAuth	Success	Authorized
1:17	ForceAuth	Success	Authorized
1:18	ForceAuth	Success	Authorized
1:19	ForceAuth	Success	Authorized
1:20	ForceAuth	Success	Authorized

CTRL+C **ESC** **q** Quit **SPACE** **n** Next Page **Enter** Next Entry **a** All

Example usage:

To display the 802.1x auth state for MAC-based 802.1x:

DGS-3324SRi:4#show 802.1x auth_state				
Command: show 802.1x auth_state				
Port number : 1:1				
Index	MAC Address	Auth PAE State	Backend State	Port Status
-----	-----	-----	-----	-----
1	00-08-02-4E-DA-FA	Authenticated	Idle	Authorized
2				
3				
4				
5				
6				
7				
8				
9				
10				
11				
12				
13				
14				
15				
16				

CTRL+C **ESC** **q** Quit **SPACE** **n** Next Page **Enter** Next Entry **a** All

config 802.1x auth_mode

Purpose	Used to configure the 802.1x authentication mode on the Switch.
Syntax	config 802.1x auth_mode {port_based mac_based}
Description	The config 802.1x authentication mode command is used to enable either the port-based or MAC-based 802.1x authentication feature on the Switch.

config 802.1x auth_mode

Parameters	<i>[port_based mac_based ports]</i> – The Switch allows you to authenticate 802.1x by either port or MAC address.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To configure 802.1x authentication by MAC address:

DXS-3326GSR:4#config 802.1x auth_mode mac_based

Command: config 802.1x auth_mode mac_based

Success.

DXS-3326GSR:4#

config 802.1x capability ports

Purpose	Used to configure the 802.1x capability of a range of ports on the Switch.
Syntax	config 802.1x capability ports [<portlist> all] [authenticator none]
Description	The config 802.1x command has two capabilities that can be set for each port, <i>authenticator</i> and <i>none</i> .
Parameters	<i><portlist></i> – Specifies a range of ports. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order. <i>all</i> – Specifies all of the ports on the Switch. <i>authenticator</i> – A user must pass the authentication process to gain access to the network. <i>none</i> – The port is not controlled by the 802.1x functions.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To configure 802.1x capability on ports 1-10 on switch 1:

DXS-3326GSR:4#config 802.1x capability ports 1:1 – 1:10 authenticator

Command: config 802.1x capability ports 1:1 – 1:10 authenticator

Success.

DXS-3326GSR:4#

config 802.1x auth_parameter

Purpose	Used to configure the 802.1x Authentication parameters on a range of ports. The default parameter will return all ports in the specified range to their default 802.1x settings.
Syntax	config 802.1x auth_parameter ports [<portlist> all] [default {direction [both in] port_control [force_unauth auto force_auth] quiet_period <sec 0-65535> tx_period <sec 1-65535> supp_timeout <sec 1-65535> server_timeout <sec 1-65535> max_req <value 1-10> reauth_period <sec 1-65535> enable_reauth [enable disable]]}]
Description	The config 802.1x auth_parameter command is used to configure the 802.1x authentication parameters on a range of ports. The default parameter will return all ports in the specified range to their default 802.1x settings.
Parameters	<i><portlist></i> – Specifies a range of ports. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order. <i>all</i> – Specifies all of the ports on the Switch. <i>default</i> – Returns all of the ports in the specified range to their 802.1x default settings. <i>direction [both in]</i> – Determines whether a controlled port blocks communication in both the receiving and transmitting directions, or just the receiving direction. <i>port_control</i> – Configures the administrative control over the authentication process for the range of ports. The user has the following authentication options: • <i>force_auth</i> – Forces the Authenticator for the port to become authorized. Network access is allowed. • <i>auto</i> – Allows the port's status to reflect the outcome of the authentication process. • <i>force_unauth</i> – Forces the Authenticator for the port to become unauthorized. Network access will be blocked. <i>quiet_period <sec 0-65535></i> – Configures the time interval between authentication failure and the start of a new authentication attempt.

config 802.1x auth_parameter

tx_period <sec 1-65535> - Configures the time to wait for a response from a supplicant (user) to send EAP Request/Identity packets.

supp_timeout <sec 1-65535> - Configures the time to wait for a response from a supplicant (user) for all EAP packets, except for the Request/Identity packets.

server_timeout <sec 1-65535> - Configure the length of time to wait for a response from a RADIUS server.

max_req <value 1-10> – Configures the number of times to retry sending packets to a supplicant (user).

reauth_period <sec 1-65535> – Configures the time interval between successive re-authentications.

enable_reauth [*enable* | *disable*] – Determines whether or not the Switch will re-authenticate. Enabled causes re-authentication of users at the time interval specified in the Re-authentication Period field, above.

Restrictions

Only administrator-level users can issue this command.

Example usage:

To configure 802.1x authentication parameters for ports 1 – 20 of switch 1:

DXS-3326GSR:4#config 802.1x auth_parameter ports 1:1 – 1:20 direction both
Command: config 802.1x auth_parameter ports 1:1-1:20 direction both

Success.

DXS-3326GSR:4#

config 802.1x auth_protocol

Purpose	Used to configure the 802.1x authentication protocol on the Switch.
Syntax	config 802.1x auth_protocol [<i>local</i> <i>radius_eap</i>]
Description	The config 802.1x auth_protocol command enables you to configure the authentication protocol.
Parameters	<i>[local radius_eap]</i> – Specify the type of authentication protocol desired.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To configure the authentication protocol on the Switch:

DXS-3326GSR:4# config 802.1x auth_protocol local

Command: config 802.1x auth_protocol local

Success.

DXS-3326GSR:4#

config 802.1x init

Purpose	Used to initialize the 802.1x function on a range of ports.
Syntax	config 802.1x init [port_based ports [<portlist all>] mac_based [ports] [<portlist> all] {mac_address <macaddr>}]
Description	The config 802.1x init command is used to immediately initialize the 802.1x functions on a specified range of ports or for specified MAC addresses operating from a specified range of ports.
Parameters	<i>port_based</i> – This instructs the Switch to initialize 802.1x functions based only on the port number. Ports approved for initialization can then be specified. ▪ <i><portlist></i> – Specifies a range of ports. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order. ▪ <i>all</i> – Specifies all of the ports on the Switch. <i>mac_based</i> - This instructs the Switch to initialize 802.1x functions based on the MAC address of a device on a specific port or range of ports. MAC address approved for initialization can then be specified. ▪ <i><portlist></i> – Specifies a range of ports. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order. ▪ <i>all</i> – Specifies all of the ports on the Switch. <i>mac_address <macaddr></i> - Specifies the MAC address of the client to be added.

config 802.1x init

Restrictions	Only administrator-level users can issue this command.
--------------	--

Example usage:

To initialize the authentication state machine of some or all:

```
DXS-3326GSR:4# config 802.1x init port_based ports all
```

```
Command: config 802.1x init port_based ports all
```

```
Success.
```

```
DXS-3326GSR:4#
```

config 802.1x reauth ports

Purpose	Used to configure the 802.1x re-authentication feature of the Switch.
Syntax	config 802.1x reauth [port_based ports [<portlist all>] mac_based [ports] [<portlist> all] {mac_address <macaddr>}
Description	The config 802.1x reauth command is used to re-authenticate a previously authenticated device based on port number or MAC address.
Parameters	<i>port_based</i> – This instructs the Switch to re-authorize 802.1x function based only on the port number. Ports approved for re-authorization can then be specified. ▪ <i>ports <portlist></i> – Specifies a range of ports. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order. ▪ <i>all</i> – Specifies all of the ports on the Switch. <i>mac-based</i> - This instructs the Switch to re-authorize 802.1x function based on a specific MAC address. Ports approved for re-authorization can then be specified. ▪ <i><portlist></i> – Specifies a range of ports. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the

config 802.1x reauth ports

ports between switch 1, port 3 and switch 2, port 4 – in numerical order.

- *all* – Specifies all of the ports on the Switch.

mac_address <macaddr> - Specifies the MAC address of the client the user wishes to add.

Restrictions

Only administrator-level users can issue this command.

Example usage:

To configure 802.1x reauthentication for ports 1-18:

```
DXS-3326GSR:4#config 802.1x reauth port_based ports 1:1-1:18
```

```
Command: config 802.1x reauth port_based ports 1:1-1:18
```

```
Success.
```

```
DXS-3326GSR:4#
```

config radius add**Purpose**

Used to add a new RADIUS server.

Syntax

```
config radius add <server_index 1-3> <server_ip> key  
<passwd 32> [default | {auth_port <udp_port_number 1-  
65535> | acct_port <udp_port_number 1-65535>}]
```

Description

The **config radius add** command is used to add RADIUS servers to the Switch.

Parameters

<server_index 1-3> – Assigns a number to the current set of RADIUS server settings. Up to 3 groups of RADIUS server settings can be entered on the Switch. The lowest index number will have a higher authenticative priority

<server_ip> – The IP address of the RADIUS server.

key – Specifies that a password and encryption key will be used between the Switch and the RADIUS server.

- *<passwd 32>* – The shared-secret key used by the RADIUS server and the Switch. Up to 32 characters can be used.

default – Uses the default UDP port number in both the “auth_port” and “acct_port” settings.

auth_port <udp_port_number> – The UDP port number for authentication requests. The default is 1812.

acct_port <udp_port_number> – The UDP port number for accounting requests. The default is 1813.

config radius add

Restrictions	Only administrator-level users can issue this command.
--------------	--

Example usage:

To configure the RADIUS server communication settings:

```
DXS-3326GSR:4#config radius add 1 10.48.74.121 key dlink default
```

```
Command: config radius add 1 10.48.74.121 key dlink default
```

```
Success.
```

```
DXS-3326GSR:4#
```

config radius delete

Purpose	Used to delete a previously entered RADIUS server configuration.
Syntax	config radius delete <server_index 1-3>
Description	The config radius delete command is used to delete a previously entered RADIUS server configuration.
Parameters	<server_index 1-3> – A number identifying the current set of RADIUS server settings the user wishes to delete. Up to 3 groups of RADIUS server settings can be entered on the Switch.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To delete previously configured RADIUS server communication settings:

```
DXS-3326GSR:4#config radius delete 1
```

```
Command: config radius delete 1
```

```
Success.
```

```
DXS-3326GSR:4#
```

config radius

Purpose	Used to configure the Switch's RADIUS settings.
Syntax	config radius <server_index 1-3> {ipaddress <server_ip> key <passwd 32> auth_port <udp_port_number 1-65535> acct_port <udp_port_number 1-65535>}
Description	The config radius command is used to configure the Switch's RADIUS settings.
Parameters	<server_index 1-3> – Assigns a number to the current set of RADIUS server settings. Up to 3 groups of RADIUS server settings can be entered on the Switch. <i>ipaddress</i> <server_ip> – The IP address of the RADIUS server. <i>key</i> – Specifies that a password and encryption key will be used between the Switch and the RADIUS server. ▪ <passwd 32> – The shared-secret key used by the RADIUS server and the Switch. Up to 32 characters can be used. <i>auth_port</i> <udp_port_number> – The UDP port number for authentication requests. The default is 1812. <i>acct_port</i> <udp_port_number> – The UDP port number for accounting requests. The default is 1813.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To configure the RADIUS settings:

```

DXS-3326GSR:4#config radius 1 10.48.74.121 key dlink default
Command: config radius 1 10.48.74.121 key dlink default

Success.

DXS-3326GSR:4#

```

show radius

Purpose	Used to display the current RADIUS configurations on the Switch.
Syntax	show radius
Description	The show radius command is used to display the current RADIUS configurations on the Switch.
Parameters	None.
Restrictions	None.

Example usage:

To display RADIUS settings on the Switch:

```

DXS-3326GSR:4#show radius
Command: show radius

  Idx  IP Address      Auth-Port  Acct-Port  Status  Key
      -----
  1    10.1.1.1      1812      1813      Active  switch
  2    20.1.1.1      1800      1813      Active  des3226
  3    30.1.1.1      1812      1813      Active  dlink

Total Entries : 3

DXS-3326GSR:4#

```

show acct_client

Purpose	Used to display the current RADIUS accounting client.
Syntax	show acct_client
Description	The show acct_client command is used to display the current RADIUS accounting client currently configured on the Switch.
Parameters	None.
Restrictions	None.

Example usage:

To view the current RADIUS accounting client:

```

DXS-3326GSR:4#show acct_client
Command: show acct_client

radiusAcctClient
-----
radiusAcctClientInvalidServerAddresses      0
radiusAcctClientIdentifier                  D-Link
-----
radiusAccServerIndex                        1
radiusAccServerAddress                      10.53.13.199
radiusAccClientServerPortNumber             0
radiusAccClientRoundTripTime                0

```

radiusAccClientRequests	0
radiusAccClientRetransmissions	0
radiusAccClientResponses	0
radiusAccClientMalformedResponses	0
radiusAccClientBadAuthenticators	0
radiusAccClientPendingRequests	0
radiusAccClientTimeouts	0
radiusAccClientUnknownTypes	0
radiusAccClientPacketsDropped	0

CTRL+C **ESC** **q** Quit **SPACE** **n** Next Page **Enter** Next Entry **a** All

show auth_client

Purpose	Used to display the current RADIUS authentication client.
Syntax	show auth_client
Description	The show auth_client command is used to display the current RADIUS authentication client currently configured on the Switch.
Parameters	None.
Restrictions	None.

Example usage:

To view the current RADIUS authentication client:

```
DXS-3326GSR:4#show auth_client
Command: show auth_client

radiusAuthClient
-----
radiusAuthClientInvalidServerAddresses    0
radiusAuthClientIdentifier                 D-Link
-----

radiusAuthServerIndex                     : 1
radiusAuthServerAddress                   : 0.0.0.0
radiusAuthClientServerPortNumber          0
radiusAuthClientRoundTripTime             0
radiusAuthClientAccessRequests            0
radiusAuthClientAccessRetransmissions     0
radiusAuthClientAccessAccepts             0
radiusAuthClientAccessRejects             0
radiusAuthClientAccessChallenges          0
```

```

radiusAuthClientMalformedAccessResponses 0
radiusAuthClientBadAuthenticators        0
radiusAuthClientPendingRequests          0
radiusAuthClientTimeouts                 0
radiusAuthClientUnknownTypes             0
radiusAuthClientPacketsDropped           0
CTRL+C ESC q Quit SPACE n Next Page Enter Next Entry a All

```

show auth_diagnostics

Purpose	Used to display the current authentication diagnostics.
Syntax	show auth_diagnostics {ports [<portlist> all]}
Description	The show auth_diagnostics command is used to display the current authentication diagnostics of the Switch on a per port basis.
Parameters	<i>ports <portlist></i> – Specifies a range of ports. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order. <i>all</i> – Specifies that all ports will be viewed.
Restrictions	None.

Example usage:

To display the current authentication diagnostics for port 16:

```

DXS-3326GSR:4#show auth_diagnostics ports 1:16
Command: show auth_diagnostics ports 1:16

```

Port number : 1:16

```

EntersConnecting          0
EapLogoffsWhileConnecting 0
EntersAuthenticating      0
SuccessWhileAuthenticating 0
TimeoutsWhileAuthenticating 0
FailWhileAuthenticating   0
ReauthsWhileAuthenticating 0
EapStartsWhileAuthenticating 0
EapLogoffWhileAuthenticating 0

```

ReauthsWhileAuthenticated	0
EapStartsWhileAuthenticated	0
EapLogoffWhileAuthenticated	0
BackendResponses	0
BackendAccessChallenges	0
BackendOtherRequestsToSupplicant	0
BackendNonNakResponsesFromSupplicant	0
BackendAuthSuccesses	0
BackendAuthFails	0
CTRL+C ESC q Quit SPACE n Next Page Enter Next Entry a All	

show auth_session_statistics

Purpose	Used to display the current authentication session statistics.
Syntax	show auth_session_statistics {ports [<portlist> all]}
Description	The show auth_session_statistics command is used to display the current authentication session statistics of the Switch on a per port basis.
Parameters	<i>ports <portlist></i> – Specifies a range of ports. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order. <i>all</i> – Specifies that all ports will be viewed.
Restrictions	None.

Example usage:

To display the current authentication session statistics for port 16:

DXS-3326GSR:4#show auth_session_statistics ports 1:16

Command: show auth_session_statistics ports 1:16

Port number : 1:16

SessionOctetsRx	0
SessionOctetsTx	0
SessionFramesRx	0
SessionFramesTx	0
SessionId	
SessionAuthenticMethod	Remote Authentication Server
SessionTime	0
SessionTerminateCause	SupplicantLogoff
SessionUserName	Trinity

CTRL+C **ESC** **q** Quit **SPACE** **n** Next Page **Enter** Next Entry **a** All

show auth_statistics

Purpose	Used to display the current authentication statistics.
Syntax	show auth_statistics {ports <portlist>}
Description	The show auth_statistics command is used to display the current authentication statistics of the Switch on a per port basis.
Parameters	<i>ports <portlist></i> – Specifies a range of ports. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order. <i>all</i> – Specifies that all ports will be viewed.
Restrictions	None.

Example usage:

To display the current authentication statistics for port 16:

DXS-3326GSR:4#show auth_statistics ports 1:16

Command: show auth_statistics ports 1:16

Port number : 1:16

EapolFramesRx	0
EapolFramesTx	0
EapolStartFramesRx	0
EapolReqIdFramesTx	0
EapolLogoffFramesRx	0
EapolReqFramesTx	0
EapolRespIdFramesRx	0
EapolRespFramesRx	0
InvalidEapolFramesRx	0
EapLengthErrorFramesRx	0
LastEapolFrameVersion	0
LastEapolFrameSource	00-00-00-00-00-00

CTRL+C **ESC** **q** Quit **SPACE** **n** Next Page **Enter** Next Entry **a** All

ACCESS CONTROL LIST (ACL) COMMANDS

The DXS-3326GSR implements Access Control Lists that enable the Switch to deny network access to specific devices or device groups based on IP settings or MAC address.

Command	Parameters
create access_profile	[ethernet {vlan source_mac <macmask> destination_mac <macmask> 802.1p ethernet_type} ip {vlan source_ip_mask <netmask> destination_ip_mask <netmask> dscp [icmp {type code} igmp {type} tcp {src_port_mask <hex 0x0-0xffff> dst_port_mask <hex 0x0-0xffff> flag_mask [all {urg ack psh rst syn fin}]] udp {src_port_mask <hex 0x0-0xffff> dst_port_mask <hex 0x0-0xffff> protocol_id {user_mask <hex 0x0-0xffffffff> }]] packet_content_mask {offset_0-15 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> offset_16-31 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> offset_32-47 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> offset_48-63 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> offset_64-79 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> }]] {port [<portlist> all] profile_id <value 1-8>}
delete access_profile profile_id	<value 1-8>
config access_profile profile_id	<value 1-8> [add access_id <value 1-50> [ethernet {vlan <vlan_name 32> source_mac <macaddr> destination_mac <macaddr> 802.1p <value 0-7> ethernet_type <hex 0x0-0xffff> } ip {vlan <vlan_name 32> source_ip <ipaddr> destination_ip <ipaddr> dscp <value 0-63> [icmp {type <value 0-255> code <value 0-255>} igmp {type <value 0-255>} tcp {src_port <value 0-65535> dst_port <value 0-65535> {urg ack psh rst syn fin} udp {src_port <value 0-65535> dst_port <value 0-65535>} protocol_id <value 0 - 255> {user_define <hex 0x0-0xffffffff> }]] packet_content {offset_0-15 <hex0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> offset_16-31 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> offset_32-47 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> offset_48-63 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> offset_64-79 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> }]] [permit { priority <value 0-7> {replace_priority} replace_dscp <value 0-63> } deny] delete <value 1-50>]
show access_profile	{profile_id <value 1-8>}

Due to a chipset limitation, the Switch currently supports a maximum of 8 access profiles, each containing a maximum of 50 rules – with the additional limitation of 50 rules total for all 8 access profiles.

Access profiles allow you to establish criteria to determine whether or not the Switch will forward packets based on the information contained in each packet's header. These criteria can be specified on a VLAN-by-VLAN basis.

Creating an access profile is divided into two basic parts. First, an access profile must be created using the **create access_profile** command. For example, if you want to deny all traffic to the subnet 10.42.73.0 to 10.42.73.255, you must first **create** an access profile that instructs the Switch to examine all of the relevant fields of each frame:

```
create access_profile ip source_ip_mask 255.255.255.0 profile_id 1
```

Here we have created an access profile that will examine the IP field of each frame received by the Switch. Each source IP address the Switch finds will be combined with the **source_ip_mask** with a logical AND operation. The **profile_id** parameter is used to give the access profile an identifying number – in this case, **1**. The **deny** parameter instructs the Switch to filter any frames that meet the criteria – in this case, when a logical AND operation between an IP address specified in the next step and the **ip_source_mask** match.

The default for an access profile on the Switch is to **permit** traffic flow. If you want to restrict traffic, you must use the **deny** parameter.

Now that an access profile has been created, you must add the criteria the Switch will use to decide if a given frame should be forwarded or filtered. Here, we want to filter any packets that have an IP source address between 10.42.73.0 and 10.42.73.255:

```
config access_profile profile_id 1 add access_id 1 ip source_ip 10.42.73.1 deny
```

Here we use the **profile_id 1** which was specified when the access profile was created. The **add** parameter instructs the Switch to add the criteria that follows to the list of rules that are associated with access profile 1. For each rule entered into the access profile, you can assign an **access_id** that both identifies the rule and establishes a priority within the list of rules. A lower **access_id** gives the rule a higher priority. In case of a conflict in the rules entered for an access profile, the rule with the highest priority (lowest **access_id**) will take precedence.

The **ip** parameter instructs the Switch that this new rule will be applied to the IP addresses contained within each frame's header. **source_ip** tells the Switch that this rule will apply to the source IP addresses in each frame's header. Finally, the IP address **10.42.73.1** will be combined with the **source_ip_mask 255.255.255.0** to give the IP address 10.42.73.0 for any source IP address between 10.42.73.0 to 10.42.73.255.

create access_profile

Purpose	Used to create an access profile on the Switch and to define which parts of each incoming frame's header the Switch will examine. Masks can be entered that will be combined with the values the Switch finds in the specified frame header fields. Specific values for the rules are entered using the config access_profile command, below.
Syntax	[ethernet {vlan source_mac <macmask> destination_mac <macmask> 802.1p ethernet_type} ip {vlan source_ip_mask <netmask> destination_ip_mask <netmask> dscp icmp {type code} igmp {type} tcp {src_port_mask <hex 0x0-0xffff> dst_port_mask <hex 0x0-0xffff> flag_mask [all {urg ack psh rst syn fin}]} udp {src_port_mask <hex 0x0-0xffff> dst_port_mask <hex 0x0-0xffff>} protocol_id {user_mask <hex 0x0-0xffffffff> }}] packet_content_mask {offset_0-15 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> offset_16-31 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> offset_32-47 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> offset_48-63 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> offset_64-79 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff>}] {port [<portlist> all] profile_id <value 1-8>}
Description	The create access_profile command is used to create an access profile on the Switch and to define which parts of each incoming

create access_profile**Parameters**

profile on the Switch and to define which parts of each incoming frame's header the Switch will examine. Masks can be entered that will be combined with the values the Switch finds in the specified frame header fields. Specific values for the rules are entered using the **config access_profile** command, below.

ethernet – Specifies that the Switch will examine the layer 2 part of each packet header.

- *vlan* – Specifies that the Switch will examine the VLAN part of each packet header.
- *source_mac* <macmask> – Specifies a MAC address mask for the source MAC address. This mask is entered in the following hexadecimal format:

- **000000000000-FFFFFFFFFFFF**

- *destination_mac* <macmask> – Specifies a MAC address mask for the destination MAC address. This mask is entered in the following hexadecimal format:

- **000000000000-FFFFFFFFFFFF**

- *802.1p* – Specifies that the Switch will examine the 802.1p priority value in the frame's header.
- *ethernet_type* – Specifies that the Switch will examine the Ethernet type value in each frame's header.

ip – Specifies that the Switch will examine the IP address in each frame's header.

- *vlan* – Specifies a VLAN mask.
- *source_ip_mask* <netmask> – Specifies an IP address mask for the source IP address.
- *destination_ip_mask* <netmask> – Specifies an IP address mask for the destination IP address.
- *dscp* – Specifies that the Switch will examine the DiffServ Code Point (DSCP) field in each frame's header.
 - *icmp* – Specifies that the Switch will examine the Internet Control Message Protocol (ICMP) field in each frame's header.
 - *type* – Specifies that the Switch will examine each frame's ICMP Type field.
 - *code* – Specifies that the Switch will examine each frame's ICMP Code field.
- *igmp* – Specifies that the Switch will examine each frame's Internet Group Management Protocol (IGMP) field.
 - *type* – Specifies that the Switch will examine each frame's IGMP Type field.

create access_profile

- *tcp* – Specifies that the Switch will examine each frames Transport Control Protocol (TCP) field.
 - *src_port_mask* <hex 0x0-0xffff> – Specifies a TCP port mask for the source port.
 - *dst_port_mask* <hex 0x0-0xffff> – Specifies a TCP port mask for the destination port.
- *flag_mask* [*all* | { *urg* | *ack* | *psh* | *rst* | *syn* | *fin* }] – Enter the appropriate flag_mask parameter. All incoming packets have TCP port numbers contained in them as the forwarding criterion. These numbers have flag bits associated with them which are parts of a packet that determine what to do with the packet. The user may deny packets by denying certain flag bits within the packets. The user may choose between **all**, **urg** (urgent), **ack** (acknowledgement), **psh** (push), **rst** (reset), **syn** (synchronize) and **fin** (finish).
- *udp* – Specifies that the Switch will examine each frame's Universal Datagram Protocol (UDP) field.
 - *src_port_mask* <hex 0x0-0xffff> – Specifies a UDP port mask for the source port.
 - *dst_port_mask* <hex 0x0-0xffff> – Specifies a UDP port mask for the destination port.
- *protocol_id* – Specifies that the Switch will examine each frame's Protocol ID field.
 - *user_define* <hex 0x0-0xffffffff> – Enter a hexadecimal value that will identify the protocol to be discovered in the packet header.
- *packet_content_mask* – Specifies that the Switch will mask the packet header beginning with the offset value specified as follows:
 - *offset_0-15* – Enter a value in hex form to mask the packet from the beginning of the packet to the 15th byte.
 - *offset_16-31* - Enter a value in hex form to mask the packet from byte 16 to byte 31.
 - *offset_32-47* - Enter a value in hex form to mask the packet from byte 32 to byte 47.
 - *offset_48-63* - Enter a value in hex form to mask the packet from byte 48 to byte 63.
 - *offset_64-79* - Enter a value in hex form to mask the packet from byte 64 to byte 79.

port <portlist> - Specifies a port or range of ports to be configured. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For

create access_profile

example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.

all – Denotes all ports on the Switch.

profile_id <value 1-8> – Specifies an index number that will identify the access profile being created with this command.

Restrictions

Only administrator-level users can issue this command.

Example usage:

To create an access list rules:

```
DXS-3326GSR:4#create access_profile ip vlan source_ip_mask 20.0.0.0
destination_ip_mask 10.0.0.0 dscp icmp type code permit profile_id 101
```

```
Command: create access_profile ip vlan source_ip_mask 20.0.0.0
destination_ip_mask 10.0.0.0 dscp icmp type code permit profile_id 101
```

Success.

DXS-3326GSR

delete access_profile**Purpose**

Used to delete a previously created access profile.

Syntax

delete access_profile [profile_id <value 1-8>]

Description

The **delete access_profile** command is used to delete a previously created access profile on the Switch.

Parameters

profile_id <value 1-8> – Enter an integer between 1 and 8 that is used to identify the access profile that will be deleted with this command. This value is assigned to the access profile when it is created with the **create access_profile** command.

Restrictions

Only administrator-level users can issue this command.

Example usage:

To delete the access profile with a profile ID of 1:

```
DXS-3326GSR:4# delete access_profile profile_id 1
```

```
Command: delete access_profile profile_id 1
```

Success.

DXS-3326GSR:4#

config access_profile

Purpose	Used to configure an access profile on the Switch and to define specific values that will be used to by the Switch to determine if a given packet should be forwarded or filtered. Masks entered using the create access_profile command will be combined, using a logical AND operation, with the values the Switch finds in the specified frame header fields. Specific values for the rules are entered using the config access_profile command, below.
Syntax	<pre><value 1-8> [add access_id <value 1-50> [ethernet {vlan <vlan_name 32> source_mac <macaddr> destination_mac <macaddr> 802.1p <value 0-7> ethernet_type <hex 0x0-0xffff> } ip {vlan <vlan_name 32> source_ip <ipaddr> destination_ip <ipaddr> dscp <value 0-63> [icmp {type <value 0-255> code <value 0-255>} igmp {type <value 0-255>} tcp {src_port <value 0-65535> dst_port <value 0-65535> {urg ack psh rst syn fin} udp {src_port <value 0-65535> dst_port <value 0-65535>} protocol_id <value 0 - 255> {user_define <hex 0x0-0xffffffff> }}] packet_content {offset_0-15 <hex0x0-0xffffffff> <hex 0x0- 0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> offset_16-31 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> offset_32-47 <hex 0x0-0xffffffff> <hex 0x0- 0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> offset_48-63 <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> <hex 0x0-0xffffffff> offset_64-79 <hex 0x0-0xffffffff> <hex 0x0- 0xffffffff> <hex 0x0-0xffffffff> <hex0x0-0xffffffff>}] [permit { priority <value 0-7> {replace_priority} replace_dscp <value 0- 63> } deny] delete <value 1-50>]</pre>
Description	The config access_profile command is used to configure an access profile on the Switch and to enter specific values that will be combined, using a logical AND operation, with masks entered with the create access_profile command, above.
Parameters	<i>profile_id</i> <value 1-8> – Enter an integer between 1 and 8 that is used to identify the access profile that will be deleted with this command. This value is assigned to the access profile when it is created with the create access_profile command. <i>add access_id</i> <value 1-50> – Adds an additional rule to the above specified access profile. The value specifies the relative priority of the additional rule. The lower the profile ID, the higher the priority the rule will be given. <i>ethernet</i> – Specifies that the Switch will look only into the layer 2 part of each packet. <i>vlan</i> <vlan_name 32> – Specifies that the access profile will apply to only to this VLAN. <i>source_mac</i> <macaddr> – Specifies that the access profile will apply to only packets with this source MAC address. This mask is entered in the following hexadecimal format: 000000000000-FFFFFFFFFFFF <i>destination_mac</i> <macaddr> – Specifies that the access profile will apply to only packets with this destination MAC address. This mask is entered in the following hexadecimal format:

config access_profile

- **000000000000-FFFFFFFFFFFF**

- *802.1p <value 0-7>* – Specifies that the access profile will apply only to packets with this 802.1p priority value.
- *ethernet_type <hex 0x0-0xffff>* – Specifies that the access profile will apply only to packets with this hexadecimal 802.1Q Ethernet type value in the packet header.

ip – Specifies that the Switch will look into the IP fields in each packet.

- *vlan <vlan_name 32>* – Specifies that the access profile will apply to only to this VLAN.
- *source_ip <ipaddr>* – Specifies that the access profile will apply to only packets with this source IP address.
- *destination_ip <ipaddr>* – Specifies that the access profile will apply to only packets with this destination IP address.
- *dscp <value 0-63>* – Specifies that the access profile will apply only to packets that have this value in their Type-of-Service (DiffServ code point, DSCP) field in their IP packet header.
- *icmp* – Specifies that the Switch will examine the Internet Control Message Protocol (ICMP) field within each packet.
 - *type <value 0-255>* – Specifies that the access profile will apply to this ICMP type value.
 - *code <value 0-255>* – Specifies that the access profile will apply to this ICMP code.
- *igmp* – Specifies that the Switch will examine the Internet Group Management Protocol (IGMP) field within each packet.
 - *type <value 0-255>* – Specifies that the access profile will apply to packets that have this IGMP type value.
- *tcp* – Specifies that the Switch will examine the Transmission Control Protocol (TCP) field within each packet.
 - *src_port <value 0-65535>* – Specifies that the access profile will apply only to packets that have this TCP source port in their TCP header.
 - *dst_port <value 0-65535>* – Specifies that the access profile will apply only to packets that have this TCP destination port in their TCP header.
- *flag_mask* – Enter the type of TCP flag to be masked. The choices are:
 - *urg*: TCP control flag (urgent)
 - *ack*: TCP control flag (acknowledgement)
 - *psh*: TCP control flag (push)

config access_profile

- *rst*: TCP control flag (reset)
- *syn*: TCP control flag (synchronize)
- *fin*: TCP control flag (finish)
- *udp* – Specifies that the Switch will examine the Universal Datagram Protocol (UDP) field in each packet.
 - *src_port* <value 0-65535> – Specifies that the access profile will apply only to packets that have this UDP source port in their header.
 - *dst_port* <value 0-65535> – Specifies that the access profile will apply only to packets that have this UDP destination port in their header.
- *protocol_id* <value 0-255> – Specifies that the Switch will examine the Protocol field in each packet and if this field contains the value entered here, apply the following rules.
 - *user_define* <hex 0x0-0xffffffff> – Enter a hexadecimal value that will identify the protocol to be discovered in the packet header.
- *packet_content* – Specifies that the Switch will mask the packet header beginning with the offset value specified as follows:
 - *offset_0-15* – Enter a value in hex form to mask the packet from the beginning of the packet to the 15th byte.
 - *offset_16-31* – Enter a value in hex form to mask the packet from byte 16 to byte 31.
 - *offset_32-47* – Enter a value in hex form to mask the packet from byte 32 to byte 47.
 - *offset_48-63* – Enter a value in hex form to mask the packet from byte 48 to byte 63.
 - *offset_64-79* – Enter a value in hex form to mask the packet from byte 64 to byte 79.

permit – Specifies that packets that match the access profile are permitted to be forwarded by the Switch.

- *priority* <value 0-7> – This parameter is specified if you want to re-write the 802.1p user priority of a packet, which meets the criteria specified previously in this command, before forwarding it on to the next destination. Otherwise, a packet will have its incoming 802.1p user priority re-written to its original value before being transmitted from the Switch.
- *{replace_priority}* – This parameter is specified if you want to re-write the 802.1p user priority of a packet, which meets the criteria specified previously in this command, before forwarding it on to the next destination. Otherwise, a packet will have its incoming 802.1p user priority re-written to its original value before being transmitted from the Switch.

config access_profile

replace_dscp <value 0-63> – Allows you to specify a value to be written to the DSCP field of an incoming packet that meets the criteria specified in the first part of the command. This value will over-write the value in the DSCP field of the packet.

deny – Specifies that packets that do not match the access profile are not permitted to be forwarded by the Switch and will be filtered.

delete access_id <value 1-50> – Specifies the access ID of a rule you want to delete.

Restrictions

Only administrator-level users can issue this command.

Example usage:

To configure the access profile with the profile ID of 1 to filter frames that have IP addresses in the range between 10.42.73.0 to 10.42.73.255:

```
DXS-3326GSR:4# config access_profile profile_id 2 add access_id 1 ip
source_ip 10.42.73.1 deny
```

```
Command: config access_profile profile_id 1 add access_id 1 ip
source_ip 10.42.73.1 deny
```

Success.

```
DXS-3326GSR:4#
```

show access_profile

Purpose	Used to display the currently configured access profiles on the Switch.
Syntax	show access_profile
Description	The show access_profile command is used to display the currently configured access profiles.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To display all of the currently configured access profiles on the Switch:

Command: show access_profile

Access Profile ID: 1	TYPE : Ethernet
Ports: 1:1	

VLAN

0

Ports: 1:1-1:24,2:1-2:24

255.255.255.0

DXS-3326GSR:4#

TRAFFIC SEGMENTATION COMMANDS

Traffic segmentation allows you to further sub-divide VLANs into smaller groups of ports that will help to reduce traffic on the VLAN. The VLAN rules take precedence, and then the traffic segmentation rules are applied.

Command	Parameters
config traffic_segmentation	[<portlist> all] forward_list [null all <portlist>]
show traffic_segmentation	{<portlist>}

Each command is listed, in detail, in the following sections.

config traffic_segmentation

Purpose	Used to configure traffic segmentation on the Switch.
Syntax	config traffic_segmentation [<portlist> all] forward_list [null all <portlist>]
Description	The config traffic_segmentation command is used to configure traffic segmentation on the Switch.
Parameters	<portlist> – Specifies a range of ports that will be configured for traffic segmentation. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order. all – Specifies all ports on the Switch. forward_list – Specifies a range of ports that will receive forwarded frames from the ports specified in the portlist, above. null – no ports are specified <portlist> – Specifies a range of ports for the forwarding list. This list must be on the same switch previously specified for traffic segmentation (i.e. following the <portlist> specified above for config traffic_segmentation). The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.

config traffic_segmentation

Restrictions	Only administrator-level users can issue this command.
--------------	--

Example usage:

To configure ports 1 through 10 to be able to forward frames to port 11 through 15:

```
DXS-3326GSR:4# config traffic_segmentation 1:1-1:10 forward_list 1:11-1:15
```

```
Command: config traffic_segmentation 1:1-1:10 forward_list 1:11-1:15
```

Success.

```
DXS-3326GSR:4#
```

show traffic_segmentation

Purpose	Used to display the current traffic segmentation configuration on the Switch.
Syntax	show traffic_segmentation <portlist>
Description	The show traffic_segmentation command is used to display the current traffic segmentation configuration on the Switch.
Parameters	<portlist> – Specifies a range of ports for which the current traffic segmentation configuration on the Switch will be displayed. The port list is specified by listing the lowest switch number and the beginning port number on that switch, separated by a colon. Then the highest switch number, and the highest port number of the range (also separated by a colon) are specified. The beginning and end of the port list range are separated by a dash. For example, 1:3 specifies switch number 1, port 3. 2:4 specifies switch number 2, port 4. 1:3-2:4 specifies all of the ports between switch 1, port 3 and switch 2, port 4 – in numerical order.
Restrictions	The port lists for segmentation and the forward list must be on the same switch.

Example usage:

To display the current traffic segmentation configuration on the Switch.

```
DXS-3326GSR:4#show traffic_segmentation
```

```
Command: show traffic_segmentation
```

Traffic Segmentation Table

Port	Forward Portlist
1:1	1:1-1:24,2:1-2:24

1:2 1:1-1:24,2:1-2:24

1:3 1:1-1:24,2:1-2:24

1:4 1:1-1:24,2:1-2:24

1:5 1:1-1:24,2:1-2:24

1:6 1:1-1:24,2:1-2:24

1:7 1:1-1:24,2:1-2:24

1:8 1:1-1:24,2:1-2:24

1:9 1:1-1:24,2:1-2:24

1:10 1:1-1:24,2:1-2:24

1:11 1:1-1:24,2:1-2:24

1:12 1:1-1:24,2:1-2:24

1:13 1:1-1:24,2:1-2:24

1:14 1:1-1:24,2:1-2:24

1:15 1:1-1:24,2:1-2:24

1:16 1:1-1:24,2:1-2:24

1:17 1:1-1:24,2:1-2:24

1:18 1:1-1:24,2:1-2:24

CTRL+C **ESC** **q** Quit **SPACE** **n** Next Page **Enter** Next Entry **a** All

STACKING COMMANDS

The stacking configuration commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
config box_priority	current_box_id <value 1-12> priority <value 1-16>
config box_id	current_box_id <value 1-12> new_box_id [AUTO 1 2 3 4 5 6 7 8 9 10 11 12]
config box_type	current_box_id <value 1-12> type [DGS-3324SR DXS-3350SR DXS-3326GSR BOX_NOTEXIST]
config all_boxes_id	[static_mode auto_mode]
show stack_information	

Each command is listed, in detail, in the following sections.

config box_priority

Purpose	Used to configure box priority, which determines which box becomes master. Lower numbers have higher priority.
Syntax	config box_priority {current_box_id <value 1-12> priority <value 1-16>}
Description	This command configures box (switch) priority.
Parameters	<i>current_box_id <value 1-12></i> – Identifies the Switch being configured. Range is 1-12. <i>priority <value 1-16></i> – Assigns a priority value to the box, with lower numbers having higher priority. Range is 1-16.
Restrictions	Only administrator-level users can issue this command.

Usage Example:

To configure box priority:

```

DXS-3326GSR:4#config box_priority current_box_id 1 priority 1
Command: config box_priority current_box_id 1 priority 1

Success.

DXS-3326GSR:4#
```

config box_id

Purpose	Used to configure box ID. Users can use this command to reassign box IDs.
Syntax	config box_id {current_box_id <value 1-12> new_box_id [AUTO 1 2 3 4 5 6 7 8 9 10 11 12]}
Description	This command will assign box IDs to switches in a stack.
Parameters	<i>current_box_id</i> – Identifies the Switch being configured. Range is 1-12. <i>new_box_id</i> – The new ID being assigned to the Switch (box). Range is 1-12. ▪ <i>auto</i> – Allows the box ID to be assigned automatically.
Restrictions	Administrator privileges are needed to issue this command.

Usage Example:

To change a box ID:

```
DXS-3326GSR:4#config box_id current_box_id 1 new_box_id 2
```

```
Command: config box_id current_box_id 1 new_box_id 2
```

Success.

```
DXS-3326GSR:4#
```

config box_type

Purpose	Used to configure box type.
Syntax	config box_type {current_box_id <value 1-12> type [DGS-3324SR DXS-3350SR DXS-3326GSR BOX_NOTEXIST]}
Description	This command will pre-assign the box type of switches in a stack.
Parameters	<i>current_box_id</i> – Identifies the Switch being configured. Range is 1-12. <i>type</i> – Enter the type of switch to be configured. The user may choose between the following: • <i>DGS-3324SR</i> – Name of a switch that can be set in the stack. • <i>DXS-3350SR</i> - Name of a switch that can be set in the stack. • <i>DXS-3326GSR</i> - Name of a switch that can be set in the stack. • <i>BOX_NOTEXIST</i> – Identifies a switch which may be added

config box_type

to the stack in future. A **box_type** may be assigned to this box, in effect to pre-configure it, as it is added to the stack. If **box_type** is not assigned, box is identified as *BOX_NOTEXIST* and box type will be identified automatically.

Restrictions

Only administrator-level users can issue this command.

Usage Example:

To configure box type:

```
DXS-3326GSR:4#config box_type current_box_id 3 type
BOX_NOTEXIST
```

```
Command: config box_type current_box_id 3 type BOX_NOTEXIST
```

```
Success.
```

```
DXS-3326GSR:4#
```

config all_boxes_id

Purpose

Used to configure box IDs for switches in a stack.

Syntax

config all_boxes_id [static_mode | auto_mode]

Description

This command will determine the mode of assigning box IDs.

Parameters

static_mode – Box IDs assigned by the user

auto_mode – Box IDs are assigned automatically

Restrictions

Only administrator-level users can issue this command.

Usage Example:

To configure box type:

```
DXS-3326GSR:4#config all_boxes_id auto_mode
```

```
Command: config all_boxes_id auto_mode
```

```
Success.
```

```
DXS-3326GSR:4#
```

show stack_information

Purpose

Used to display the stack information table.

show stack_information

Syntax	show stack_information
Description	This command display stack information.
Parameters	None.
Restrictions	None.

Usage Example:

To display stack information:

DXS-3326GSR:4#show stack_information

Command: show stack_information

Box ID	User Set	Type	Exist	Prio- rity	Prom version	Runtime version	H/W version
1	AUTO	DXS-3326GSR	exist	16	1.00-B05	3.00-B16	4A1
2	AUTO	DXS-3326GSR	exist	16	1.00-B05	3.00-B16	4A1
3	-	USR-NOT-CFG	no				
4	-	USR-NOT-CFG	no				
5	-	USR-NOT-CFG	no				
6	-	USR-NOT-CFG	no				
7	-	USR-NOT-CFG	no				
8	-	USR-NOT-CFG	no				
9	-	USR-NOT-CFG	no				
10	-	USR-NOT-CFG	no				
11	-	USR-NOT-CFG	no				
12	-	USR-NOT-CFG	no				

Topology :DUPLICATION

My Box ID :1

Current state :MASTER

Box Count :1

DXS-3326GSR:4#

D-LINK SINGLE IP MANAGEMENT COMMANDS

Simply put, D-Link Single IP Management is a concept that will stack switches together over Ethernet instead of using stacking ports or modules. Switches using Single IP Management (labeled here as SIM) must conform to the following rules:

- SIM is an optional feature on the Switch and can easily be enabled or disabled. SIM grouping has no effect on the normal operation of the Switch in the user's network.
- There are three classifications for switches using SIM. The **Commander Switch (CS)**, which is the master switch of the group, **Member Switch (MS)**, which is a switch that is recognized by the CS as a member of a SIM group, and a **Candidate Switch (CaS)**, which is a switch that has a physical link to the SIM group but has not been recognized by the CS as a member of the SIM group.
- A SIM group can only have one Commander Switch (CS).
- All switches in a particular SIM group must be in the same IP subnet (broadcast domain). Members of a SIM group cannot cross a router.
- A SIM group accepts up to 32 switches (numbered 0-31), including the Commander Switch (numbered 0).
- There is no limit to the number of SIM groups in the same IP subnet (broadcast domain), however a single switch can only belong to one group.
- If multiple VLANs are configured, the SIM group will only utilize the default VLAN on any switch.
- SIM allows intermediate devices that do not support SIM. This enables the user to manage a switch that are more than one hop away from the CS.

The SIM group is a group of switches that are managed as a single entity. The Switch may take on three different roles:

Commander Switch(CS) – This is a switch that has been manually configured as the controlling device for a group, and takes on the following characteristics:

- It has an IP Address.
- It is not a command switch or member switch of another Single IP group.
- It is connected to the member switches through its management VLAN.

Member Switch(MS) – This is a switch that has joined a single IP group and is accessible from the CS, and it takes on the following characteristics:

- It is not a CS or MS of another IP group.
- It is connected to the CS through the CS management VLAN.

Candidate Switch(CaS) – This is a switch that is ready to join a SIM group but is not yet a member of the SIM group. The Candidate Switch may join the SIM group through an automatic function of the Switch, or by manually configuring it to be a MS of a SIM group. A switch configured as a CaS is not a member of a SIM group and will take on the following characteristics:

- It is not a CS or MS of another Single IP group.
- It is connected to the CS through the CS management VLAN

The following rules also apply to the above roles:

1. Each device begins in a Commander state.

2. CS's must change their role to CaS and then to MS, to become a MS of a SIM group. Thus the CS cannot directly be converted to a MS.
3. The user can manually configure a CS to become a CaS.
4. A MS can become a CaS by:
 - a. Being configured as a CaS through the CS.
 - b. If report packets from the CS to the MS time out.
5. The user can manually configure a CaS to become a CS
6. The CaS can be configured through the CS to become a MS.

After configuring one switch to operate as the CS of a SIM group, additional switches may join the group by either an automatic method or by manually configuring the Switch to be a MS. The CS will then serve as the in band entry point for access to the MS. The CS's IP address will become the path to all MS's of the group and the CS's Administrator's password, and/or authentication will control access to all MS's of the SIM group.

With SIM enabled, the applications in the CS will redirect the packet instead of executing the packets. The applications will decode the packet from the administrator, modify some data, then send it to the MS. After execution, the CS may receive a response packet from the MS, which it will encode and send it back to the administrator.

When a CS becomes a MS, it automatically becomes a member of first SNMP community (include read/write and read only) to which the CS belongs. However if a MS has its own IP address, it can belong to SNMP communities to which other switches in the group, including the CS, do not belong.

The D-Link Single IP Management commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
enable sim	
disable sim	
show sim	{[candidates {<candidate_id 1-100>} members {<member_id 1-32>} group {commander_mac <macaddr>} neighbor]}
reconfig	[member_id <value 1-32> exit]
config sim_group	[add <candidate_id 1-100> {<password>} delete <member_id 1-32>]
config sim	{[commander { group_name <groupname 64> candidate] dp_interval <sec 30-90> hold_time <sec 100-255>}
download sim_ms	[firmware configuration] <ipaddr> <path_filename> [members <mslist 1-32> all]
upload sim_ms configuration	<ipaddr> <path_filename> <member_id 1-32>

Each command is listed, in detail, in the following sections.

enable sim

Purpose	Used to enable Single IP Management (SIM) on the Switch
Syntax	enable sim

enable sim

Description	This command will enable SIM globally on the Switch. SIM features and functions will not function properly unless this function is enabled.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To enable SIM on the Switch:

```
DXS-3326GSR:4#enable sim
```

```
Command: enable sim
```

```
Success.
```

```
DXS-3326GSR:4#
```

disable sim

Purpose	Used to disable Single IP Management (SIM) on the Switch
Syntax	disable sim
Description	This command will disable SIM globally on the Switch.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To disable SIM on the Switch:

```
DXS-3326GSR:4#disable sim
```

```
Command: disable sim
```

```
Success.
```

```
DXS-3326GSR:4#
```

show sim

Purpose	Used to view the current information regarding the SIM group on the Switch.
Syntax	show sim {[candidates {<candidate_id 1-100>} members {<member_id 1-32>} group {commander_mac <macaddr>}}

show sim**neighbor}}****Description**

This command will display the current information regarding the SIM group on the Switch, including the following:

SIM Version - Displays the current Single IP Management version on the Switch.

Firmware Version - Displays the current Firmware version on the Switch.

Device Name - Displays the user-defined device name on the Switch.

MAC Address - Displays the MAC Address of the Switch.

Capabilities – Displays the type of switch, be it Layer 2 (L2) or Layer 3 (L3).

Platform – Switch Description including name and model number.

SIM State – Displays the current Single IP Management State of the Switch, whether it be enabled or disabled.

Role State – Displays the current role the Switch is taking, including Commander, Member or Candidate. A stand-alone switch will always have the candidate role.

Discovery Interval - Time in seconds the Switch will send discovery packets out over the network.

Hold time – Displays the time in seconds the Switch will hold discovery results before dropping it or utilizing it.

Parameters

candidates <candidate_id 1-100> - Entering this parameter will display information concerning candidates of the SIM group. To view a specific candidate, include that candidate's id number, listed from 1 to 100.

members <member_id 1-32> - Entering this parameter will display information concerning members of the SIM group. To view a specific member, include that member's ID number, listed from 1 to 32.

group commander_mac <macaddr> - Entering this parameter will display information concerning the SIM group of a commander device, identified by its MAC address.

neighbor – Entering this parameter will display neighboring devices of the Switch. A SIM neighbor is defined as a switch that is physically connected to the Switch but is not part of the SIM group. This screen will produce the following results:

- **Port** – Displays the physical port number of the commander switch where the uplink to the neighbor switch is located.
- **MAC Address** – Displays the MAC Address of the neighbor switch.

show sim

- Role – Displays the role (CS, CaS, MS) of the neighbor switch.

Restrictions Only administrator-level users can issue this command.

Example usage:

To show the SIM information in detail:

```
DXS-3326GSR:4#show sim
Command: show sim

SIM Version       : VER-1
Firmware Version  : Build 3.00-B16
Device Name       :
MAC Address       : 00-35-26-11-11-00
Capabilities      : L3
Platform          : DXS-3326GSR L3 Switch
SIM State         : Enabled
Role State        : Commander
Discovery Interval : 30 sec
Hold Time         : 100 sec

DXS-3326GSR:4#
```

To show the candidate information in summary, if the candidate id is specified:

```
DXS-3326GSR:4#show sim candidates
Command: show sim candidates

ID  MAC Address      Platform /      Hold   Firmware  Device Name
   -----          Capability      Time    Version
---  -----
1   00-01-02-03-04-00 DGS-3324SR L3 Switch 40     3.00-B16   The Man
2   00-55-55-00-55-00 DGS-3324SR L3 Switch 140    3.00-B16   default master

Total Entries: 2

DXS-3326GSR:4#
```

To show the member information in summary, if the member id is specified:

```
DXS-3326GSR:4#show sim members
Command: show sim members
```

ID	MAC Address	Platform / Capability	Hold Time	Firmware Version	Device Name
---	-----	-----	----	-----	-----
1	00-01-04-03-04-00	DGS-3324SR L3 Switch	40	3.00-B16	The Man
2	00-55-35-00-55-00	DGS-3324SR L3 Switch	140	3.00-B16	default master

Total Entries: 2

DXS-3326GSR:4#

To show other groups information in summary, if group is specified:

DXS-3326GSR:4#show sim group

Command: show sim group

SIM Group Name : default

ID	MAC Address	Platform / Capability	Hold Time	Firmware Version	Device Name
---	-----	-----	----	-----	-----
*1	00-01-02-03-04-00	DGS-3324SR L3 Switch	40	3.00-B16	Trinity

SIM Group Name : default

ID	MAC Address	Platform / Capability	Hold Time	Firmware Version	Device Name
---	-----	-----	----	-----	-----
2	00-55-55-00-55-00	DES-3550 L2 Switch	140	3.00-B08	Enrico

SIM Group Name : SIM2

ID	MAC Address	Platform / Capability	Hold Time	Firmware Version	Device Name
---	-----	-----	----	-----	-----
*1	00-01-02-03-04-00	DES-3526 L2 Switch	40	3.00-B08	Neo
2	00-55-55-00-55-00	DES-3550 L2 Switch	140	3.00-B08	default master

“*” means commander switch.

DXS-3326GSR:4#

Example usage:

To view SIM neighbors:

DXS-3326GSR:4#show sim neighbor

Command: show sim neighbor

Neighbor Info Table

Port	MAC Address	Role
-----	-----	-----
23	00-35-26-00-11-99	Commander
23	00-35-26-00-11-91	Member
24	00-35-26-00-11-90	Candidate

Total Entries: 3

DXS-3326GSR:4#

reconfig

Purpose	Used to connect to a member switch, through the commander switch using telnet.
Syntax	reconfig [member_id <value 1-32 exit]
Description	This command is used to reconnect to a member switch using telnet.
Parameters	<i>member_id</i> <value 1-32> - Select the ID number of the member switch the user desires to configure. <i>exit</i> – This command is used to exit from managing the member switch and will return to managing the commander switch.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To connect to the MS, with member id 2, through the CS, using the command line interface:

DXS-3326GSR:4#reconfig member_id 2

Command: reconfig member_id 2

DXS-3326GSR:4#

config sim_group

Purpose	Used to add candidates and delete members from the SIM group.
---------	---

config sim_group

Syntax	config sim_group [add <candidate_id 1-100> {<password>} delete <member_id 1-32>]
Description	This command is used to add candidates and delete members from the SIM group by ID number.
Parameters	<i>add <candidate_id 1-100> <password></i> - Use this parameter to change a candidate switch (CaS) to a member switch (MS) of a SIM group. The CaS may be defined by its ID number and a password (if necessary). <i>delete <member_id 1-32></i> - Use this parameter to delete a member switch of a SIM group. The member switch should be defined by its ID number.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To add a member:

DXS-3326GSR:4#config sim_group add 2

Command: config sim_group add 2

Please wait for ACK...

SIM Config Success !!!

Success.

DXS-3326GSR:4#

To delete a member:

DXS-3326GSR:4#config sim delete 1

Command: config sim delete 1

Please wait for ACK...

Success.

DXS-3326GSR:4#

config sim

Purpose	Used to configure role parameters for the SIM protocol on the Switch.
Syntax	config sim [{[commander {group_name <groupname 64> candidate} dp_interval <30-90> hold_time <sec 100-255>}]

config sim

Description	This command is used to configure parameters of switches of the SIM.
Parameters	<i>commander</i> – Use this parameter to configure the commander switch for the following parameters: ▪ <i>group_name</i> <groupname 64> - Used to update the name of the group. Enter an alphanumeric string of up to 64 characters to rename the SIM group. ▪ <i>dp_interval</i> <30-90> – The user may set the discovery protocol interval, in seconds that the Switch will send out discovery packets. Returning information to the commander switch will include information about other switches connected to it. (Ex. MS, CaS). The user may set the discovery protocol interval from 30 to 90 seconds. ▪ <i>hold time</i> <sec 100-255> – Using this parameter, the user may set the time, in seconds, the Switch will hold information sent to it from other switches, utilizing the discovery interval protocol. The user may set the hold time from 100 to 255 seconds. <i>candidate</i> – Used to change the role of a commander switch to a candidate switch. ▪ <i>dp_interval</i> <30-90>– The user may set the discovery protocol interval, in seconds that the Switch will send out discovery packets. Returning information to the commander switch will include information about other switches connected to it. (Ex. MS, CaS). The user may set the <i>dp_interval</i> from 30 to 90 seconds. ▪ <i>hold time</i> <sec 100-255>– Using this parameter, the user may set the time, in seconds, the Switch will hold information sent to it from other switches, utilizing the discovery interval protocol. The user may set the hold time from 100 to 255 seconds.
Restrictions	Only administrator-level users can issue this command.

To change the time interval of the discovery protocol:

```

DXS-3326GSR:4#config sim commander dp_interval 30
Command:config sim commander dp_interval 30

Success.

DXS-3326GSR:4#

```

To change the hold time of the discovery protocol:

```

DXS-3326GSR:4# config sim commander hold_time 120
Command: config sim commander hold_time 120

```

Success.

DXS-3326GSR:4#

To transfer the commander switch to be a candidate:

DXS-3326GSR:4#config sim candidate

Command: config sim candidate

Success.

DXS-3326GSR:4#

To transfer the Switch to be a commander:

DXS-3326GSR:4#config sim commander

Command: config sim commander

Success.

DXS-3326GSR:4#

To update the name of a group:

DXS-3326GSR:4#config sim commander group_name Trinity

Command: config sim commander group_name Trinity

Success.

DXS-3326GSR:4#

download sim_ms

Purpose	Used to download firmware or configuration file to an indicated device.
Syntax	download sim_ms [firmware configuration] <ipaddr> <path_filename> {members <mslist 1-32> all}
Description	This command will download a firmware file or configuration file to a specified device from a TFTP server.
Parameters	<i>firmware</i> – Specify this parameter if the user wishes to download firmware to members of a SIM group. <i>configuration</i> - Specify this parameter if the user wishes to download a switch configuration to members of a SIM group. <i>ipaddr</i> – Enter the IP address of the TFTP server. <i>path_filename</i> – Enter the path and the filename of the firmware or

download sim_ms

switch on the TFTP server.

members – Enter this parameter to specify the members the user prefers to download firmware or switch configuration files to. The user may specify a member or members by adding one of the following:

- *<mslist 1-32>* - Enter a value, or values to specify which members of the SIM group will receive the firmware or switch configuration.
- *all* – Add this parameter to specify all members of the SIM group will receive the firmware or switch configuration.

Restrictions

Only administrator-level users can issue this command.

Example usage:

To download firmware:

```
DXS-3326GSR:4# download sim firmware 10.53.13.94 c:/dgssri.had
members all

Command: download sim firmware 10.53.13.94 c:/dgssri.had members
all

This device is updating firmware. Please wait...

Download Status :
```

ID	MAC Address	Result
1	00-01-02-03-04-00	Success
2	00-07-06-05-04-03	Success
3	00-07-06-05-04-03	Success

```
DXS-3326GSR:4#
```

To download configuration files:

```
DXS-3326GSR:4#download sim configuration 10.53.13.94 c:/dgssri.txt
members all

Command: download sim configuration 10.53.13.94 c:/dgssri.txt
members all

This device is updating configuration. Please wait...

Download Status :
```

ID	MAC Address	Result
----	-------------	--------

```

---
1  00-01-02-03-04-00  Success
2  00-07-06-05-04-03  Success
3  00-07-06-05-04-03  Success

```

```
DXS-3326GSR:4#
```

upload sim_ms configuration

Purpose	User to upload a configuration file to a TFTP server from a specified member of a SIM group.
Syntax	upload sim_ms configuration <ipaddr> <path_filename> <member_id 1-32>
Description	This command will upload a configuration file to a TFTP server from a specified member of a SIM group.
Parameters	<i><ipaddr></i> - Enter the IP address of the TFTP server the user wishes to upload a configuration file to. <i><path_filename></i> – Enter a user-defined path and file name on the TFTP server the user wishes to upload configuration files to. <i><member_id 1-32></i> - Enter this parameter to specify the member the user prefers to upload a switch configuration file to. The user may specify a member or members by adding the ID number of the specified member.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To upload configuration files to a TFTP server:

```

DXS-3326GSR:4#upload sim_ms configuration 10.55.47.1 D:\configuration.txt
1
Command: upload sim_ms configuration 10.55.47.1 D:\configuration.txt 1

Success.

DXS-3326GSR:4#

```

TIME AND SNTP COMMANDS

The Simple Network Time Protocol (SNTP) {an adaptation of the Network Time Protocol (NTP)} commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
config sntp	{primary <ipaddr> secondary <ipaddr> poll-interval <int 30-99999>}
show sntp	
enable sntp	
disable sntp	
config time	<date ddmthyyy > <time hh:mm:ss>
config time_zone	{operator [+ -] hour <gmt_hour 0-13> min <minute 0-59>}
config dst	[disable repeating {s_week <start_week 1-4,last> s_day <start_day sun-sat> s_mth <start_mth 1-12> s_time <start_time hh:mm> e_week <end_week 1-4,last> e-day <end_day sun-sat> e_mth <end_mth 1-12> e_time <end_time hh:mm> offset [30 60 90 120]} annual {s_date <start_date 1-31> s_mth <start_mth 1-12> s_time <start_time hh:mm> e_date <end_date 1-31> e_mth <end_mth 1-12> e_time <end_time hh:mm> offset [30 60 90 120]}]
show time	

Each command is listed, in detail, in the following sections.

config sntp

Purpose	Used to setup SNTP service.
Syntax	config sntp {primary <ipaddr> secondary <ipaddr> poll-interval <int 30-99999>}
Description	Use this command to configure SNTP service from an NTP server. SNTP must be enabled for this command to function (See enable sntp).
Parameters	<i>primary</i> – This is the primary server the SNTP information will be taken from. ▪ <i><ipaddr></i> – The IP address of the primary server. <i>secondary</i> – This is the secondary server the SNTP information will be taken from in the event the primary server is unavailable. ▪ <i><ipaddr></i> – The IP address for the secondary server. <i>poll-interval <int 30-99999></i> – This is the interval between requests for updated SNTP information. The polling interval ranges from 30 to 99,999 seconds.
Restrictions	Only administrator-level users can issue this command. SNTP service must be enabled for this command to function (enable

config sntp

service must be enabled for this command to function (enable sntp).

Example usage:

To configure SNTP settings:

```
DXS-3326GSR:4#config sntp primary 10.1.1.1 secondary 10.1.1.2 poll-interval 30
Command: config sntp primary 10.1.1.1 secondary 10.1.1.2 poll-interval 30
```

Success.

```
DXS-3326GSR:4#
```

show sntp

Purpose	Used to display the SNTP information.
Syntax	show sntp
Description	This command will display SNTP settings information including the source IP address, time and poll interval.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To display SNTP configuration information:

```
DXS-3326GSR:4#show sntp
Command: show sntp

Current Time Source : System Clock
SNTP : Disabled
SNTP Primary Server   : 10.1.1.1
SNTP Secondary Server : 10.1.1.2
SNTP Poll Interval   : 720 sec

DXS-3326GSR:4#
```

enable sntp

Purpose	Enables SNTP server support.
Syntax	enable sntp

enable sntp

Description	This will enable SNTP support. SNTP service must be separately configured (see config sntp). Enabling and configuring SNTP support will override any manually configured system time settings.
Parameters	None.
Restrictions	Only administrator-level users can issue this command. SNTP settings must be configured for SNTP to function (config sntp).

Example usage:

To enable the SNTP function:

```
DXS-3326GSR:4#enable sntp
```

```
Command: enable sntp
```

```
Success.
```

```
DXS-3326GSR:4#
```

disable sntp

Purpose	Disables SNTP server support.
Syntax	disable sntp
Description	This will disable SNTP support. SNTP service must be separately configured (see config sntp).
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example:

To stop SNTP support:

```
DXS-3326GSR:4#disable sntp
```

```
Command: disable sntp
```

```
Success.
```

```
DXS-3326GSR:4#
```

config time

Purpose	Used to manually configure system time and date settings.
---------	---

config time

Syntax	config time date <date ddmthyyy> <time hh:mm:ss>
Description	This will configure the system time and date settings. These will be overridden if SNTP is configured and enabled.
Parameters	<i>date</i> – Express the date using two numerical characters for the day of the month, three alphabetical characters for the name of the month, and four numerical characters for the year. For example: 03aug2003. <i>time</i> – Express the system time using the format hh:mm:ss, that is, two numerical characters each for the hour using a 24-hour clock, the minute and second. For example: 19:42:30.
Restrictions	Only administrator-level users can issue this command. Manually configured system time and date settings are overridden if SNTP support is enabled.

Example usage:

To manually set system time and date settings:

```
DXS-3326GSR:4#config time 30jun2003 16:30:30
```

```
Command: config time 30jun2003 16:30:30
```

```
Success.
```

```
DXS-3326GSR:4#
```

config time_zone

Purpose	Used to determine the time zone used in order to adjust the system clock.
Syntax	config time_zone {operator [+ -] hour <gmt_hour 0-13> min <minute 0-59>}
Description	This will adjust system clock settings according to the time zone. Time zone settings will adjust SNTP information accordingly.
Parameters	<i>operator</i> – Choose to add (+) or subtract (-) time to adjust for time zone relative to GMT. <i>hour <gmt_hour 0-13></i> – Select the number hours different from GMT. <i>min <minute 0-59></i> – Select the number of minutes difference added or subtracted to adjust the time zone.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To configure time zone settings:

DXS-3326GSR:4#config time_zone operator + hour 2 min 30

Command: config time_zone operator + hour 2 min 30

Success.

DXS-3326GSR:4#

config dst

Purpose	Used to enable and configure time adjustments to allow for the use of Daylight Savings Time (DST).
Syntax	<pre>config dst [disable repeating {s_week <start_week 1-4,last> s_day <start_day sun-sat> s_mth <start_mth 1-12> s_time <start_time hh:mm> e_week <end_week 1-4,last> e-day <end_day sun-sat> e_mth <end_mth 1-12> e_time <end_time hh:mm> offset [30 60 90 120]} annual {s_date <start_date 1-31> s_mth <start_mth 1-12> s_time <start_time hh:mm> e_date <end_date 1-31> e_mth <end_mth 1-12> e_time <end_time hh:mm> offset [30 60 90 120]}]</pre>
Description	DST can be enabled and configured using this command. When enabled this will adjust the system clock to comply with any DST requirement. DST adjustment effects system time for both manually configured time and time set using SNTP service.
Parameters	<i>disable</i> - Disable the DST seasonal time adjustment for the Switch. <i>repeating</i> - Using repeating mode will enable DST seasonal time adjustment. Repeating mode requires that the DST beginning and ending date be specified using a formula. For example, specify to begin DST on Saturday during the second week of April and end DST on Sunday during the last week of October. <i>annual</i> - Using annual mode will enable DST seasonal time adjustment. Annual mode requires that the DST beginning and ending date be specified concisely. For example, specify to begin DST on April 3 and end DST on October 14. <i>s_week</i> - Configure the week of the month in which DST begins. <i><start_week 1-4,last></i> - The number of the week during the month in which DST begins where 1 is the first week, 2 is the second week and so on, last is the last week of the month. <i>e_week</i> - Configure the week of the month in which DST ends. <i><end_week 1-4,last></i> - The number of the week during the month in which DST ends where 1 is the first week, 2 is the second week and so on, last is the last week of the month. <i>s_day</i> - Configure the day of the week in which DST begins. <i><start_day sun-sat></i> - The day of the week in which DST begins expressed using a three character

config dst

abbreviation (sun, mon, tue, wed, thu, fri, sat)

e_day - Configure the day of the week in which DST ends.

- *<end_day sun-sat>* - The day of the week in which DST ends expressed using a three character abbreviation (sun, mon, tue, wed, thu, fri, sat)

s_mth - Configure the month in which DST begins.

- *<start_mth 1-12>* - The month to begin DST expressed as a number.

e_mth - Configure the month in which DST ends.

- *<end_mth 1-12>* - The month to end DST expressed as a number.

s_time - Configure the time of day to begin DST.

- *<start_time hh:mm>* - Time is expressed using a 24-hour clock, in hours and minutes.

e_time - Configure the time of day to end DST.

- *<end_time hh:mm>* - Time is expressed using a 24-hour clock, in hours and minutes.

s_date - Configure the specific date (day of the month) to begin DST.

- *<start_date 1-31>* - The start date is expressed numerically.

e_date - Configure the specific date (day of the month) to begin DST.

- *<end_date 1-31>* - The end date is expressed numerically.

offset [30 | 60 | 90 | 120] - Indicates number of minutes to add or to subtract during the summertime. The possible offset times are 30, 60, 90, 120. The default value is 60.

Restrictions

Only administrator-level users can issue this command.

Example usage:

To configure daylight savings time on the Switch:

```
DXS-3326GSR:4#config dst repeating s_week 2 s_day tue s_mth 4
s_time 15:00 e_week 2 e_day wed e_mth 10 e_time 15:30 offset 30
Command: config dst repeating s_week 2 s_day tue s_mth 4 s_time
15:00 e_week 2 e_day wed e_mth 10 e_time 15:30 offset 30

Success.

DXS-3326GSR:4#
```

show time

Purpose	Used to display the current time settings and status.
Syntax	show time
Description	This will display system time and date configuration as well as display current system time.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To show the time currently set on the Switch's System clock:

```

DXS-3326GSR:4#show time
Command: show time

Current Time Source : System Clock
Boot Time          : 2 Jul 2003 10:59:59
Current Time       : 10 Jul 2003 01:43:41
Time Zone          : GMT +02:30
Daylight Saving Time : Repeating
Offset in Minutes   : 60
    Repeating From   : Apr 2nd Tue 15:00
                   To : Oct 2nd Wed 15:30
    Annual   From    : 29 Apr 00:00
                   To : 12 Oct 00:00

DXS-3326GSR:4#

```

ARP COMMANDS

The ARP commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
create arpentry	<ipaddr> <macaddr>
delete arpentry	[<ipaddr> all]
show arpentry	{ipif <ipif_name 12> ipaddress <ipaddr> static}
config arp_aging time	<value 0-65535>
clear arptable	

Each command is listed, in detail, in the following sections.

create arpentry

Purpose	Used to make a static entry into the ARP table.
Syntax	create arpentry <ipaddr> <macaddr>
Description	This command is used to enter an IP address and the corresponding MAC address into the Switch's ARP table.
Parameters	<ipaddr> – The IP address of the end node or station. <macaddr> – The MAC address corresponding to the IP address above.
Restrictions	Only administrator-level users can issue this command.

Example Usage:

To create a static ARP entry for the IP address 10.48.74.121 and MAC address 00:50:BA:00:07:36:

```

DXS-3326GSR:4#create arpentry 10.48.74.121 00-50-BA-00-07-36
Command: create arpentry 10.48.74.121 00-50-BA-00-07-36

Success.

DXS-3326GSR:4#

```

delete arpentry

Purpose	Used to delete a static entry into the ARP table.
Syntax	delete arpentry {<ipaddr> all}

delete arpentry

Description	This command is used to delete a static ARP entry, made using the create arpentry command above, by specifying either the IP address of the entry or all. Specifying all clears the Switch's ARP table.
Parameters	<i><ipaddr></i> – The IP address of the end node or station. <i>all</i> – deletes all ARP entries.
Restrictions	Only administrator-level users can issue this command.

Example Usage:

To delete an entry of IP address 10.48.74.121 from the ARP table:

```
DXS-3326GSR:4#delete arpentry 10.48.74.121
Command: delete arpentry 10.48.74.121

Success.

DXS-3326GSR:4#
```

config arp_aging

Purpose	Used to configure the age-out timer for ARP table entries on the Switch.
Syntax	config arp_aging time <value 0-65535 >
Description	This command sets the maximum amount of time, in minutes, that an ARP entry can remain in the Switch's ARP table, without being accessed, before it is dropped from the table.
Parameters	<i>time <value 0-65535></i> – The ARP age-out time, in minutes. The value may be set in the range of 0-65535 minutes with a default setting of 20 minutes.
Restrictions	Only administrator-level users can issue this command.

Example Usage:

To configure ARP aging time:

```
DXS-3326GSR:4#config arp_aging time 30
Command: config arp_aging time 30

Success.

DXS-3326GSR:4#
```

show arpentry

Purpose	Used to display the ARP table.
Syntax	show arpentry {ipif <ipif_name 12> ipaddress <ipaddr> static}
Description	This command is used to display the current contents of the Switch's ARP table.
Parameters	<ipif_name 12> – The name of the IP interface the end node or station for which the ARP table entry was made, resides on. <ipaddr> – The network address corresponding to the IP interface name above. static – Displays the static entries to the ARP table.
Restrictions	None.

Example Usage:

To display the ARP table:

```

DXS-3326GSR:4#show arpentry
Command: show arpentry

ARP Aging Time : 30

Interface      IP Address      MAC Address      Type
-----
System         10.0.0.0        FF-FF-FF-FF-FF-FF Local/Broadcast
System         10.1.1.169      00-50-BA-70-E4-4E Dynamic
System         10.1.1.254      00-01-30-FA-5F-00 Dynamic
System         10.9.68.1       00-A0-C9-A4-22-5B Dynamic
System         10.9.68.4       00-80-C8-2E-C7-45 Dynamic
System         10.10.27.51     00-80-C8-48-DF-AB Dynamic
System         10.11.22.145    00-80-C8-93-05-6B Dynamic
System         10.11.94.10     00-10-83-F9-37-6E Dynamic
System         10.14.82.24     00-50-BA-90-37-10 Dynamic
System         10.15.1.60      00-80-C8-17-42-55 Dynamic
System         10.17.42.153    00-80-C8-4D-4E-0A Dynamic
System         10.19.72.100    00-50-BA-38-7D-5E Dynamic
System         10.21.32.203    00-80-C8-40-C1-06 Dynamic
System         10.40.44.60     00-50-BA-6B-2A-1E Dynamic
System         10.42.73.221    00-01-02-03-04-00 Dynamic
System         10.44.67.1      00-50-BA-DA-02-51 Dynamic
System         10.47.65.25     00-50-BA-DA-03-2B Dynamic
System         10.50.8.7       00-E0-18-45-C7-28 Dynamic
System         10.90.90.90     00-01-02-03-04-00 Local
System         10.255.255.255  FF-FF-FF-FF-FF-FF Local/Broadcast

Total Entries = 20

DXS-3326GSR:4#

```

clear arptable

Purpose	Used to remove all dynamic ARP table entries.
Syntax	clear arptable
Description	This command is used to remove dynamic ARP table entries from the Switch's ARP table. Static ARP table entries are not affected.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example Usage:

To remove dynamic entries in the ARP table:

```
DXS-3326GSR:4#clear arptable
```

```
Command: clear arptable
```

```
Success.
```

```
DXS-3326GSR:4#
```

VRRP COMMANDS

VRRP or Virtual Routing Redundancy Protocol is a function on the Switch that dynamically assigns responsibility for a virtual router to one of the VRRP routers on a LAN. The VRRP router that controls the IP address associated with a virtual router is called the Master, and will forward packets sent to this IP address. This will allow any Virtual Router IP address on the LAN to be used as the default first hop router by end hosts. Utilizing VRRP, the administrator can achieve a higher available default path cost without needing to configure every end host for dynamic routing or routing discovery protocols.

Statically configured default routes on the LAN are prone to a single point of failure. VRRP is designed to eliminate these failures by setting an election protocol that will assign a responsibility for a virtual router to one of the VRRP routers on the LAN. When a virtual router fails, the election protocol will select a virtual router with the highest priority to be the Master router on the LAN. This retains the link and the connection is kept alive, regardless of the point of failure.

To configure VRRP for virtual routers on the Switch, an IP interface must be present on the system and it must be a part of a VLAN. VRRP IP interfaces may be assigned to every VLAN, and therefore IP interface, on the Switch. VRRP routers within the same VRRP group must be consistent in configuration settings for this protocol to function optimally.

The VRRP commands in the Command Line Interface (CLI) are listed, along with the appropriate parameters, in the following table.

Command	Parameters
enable vrrp	{ping}
disable vrrp	{ping}
create vrrp vrid	vrid <vrid 1-255> <ipif_name 12> ipaddress <ipaddr> {state [enable disable] priority <int 1-254> advertisement_interval <int 1-255> preempt [true false] critical_ip <ipaddr> critical_ip_state [enable disable]}
config vrrp vrid	vrid <vrid 1-255> {state [enable disable] priority <int 1-254> ipaddress <ipaddr> advertisement_interval <int 1-255> preempt [true false] critical_ip <ipaddr> critical_ip_state [enable disable]}
config vrrp ipif	<ipif_name 12> [authtype [none simple authdata <string 8> ip authdata <string 16>]]
show vrrp	{ipif <ipif_name 12> {vrid <vrid 1-255>}}

Each command is listed, in detail, in the following sections.

enable vrrp

Purpose	To enable a VRRP interface configuration.
Syntax	enable vrrp {ping}
Description	This command will enable the VRRP interface configuration on the Switch.
Parameters	<i>{ping}</i> – Adding this parameter to the command will allow the virtual IP address to be pinged from other host end nodes to verify connectivity. This will only enable the ping connectivity check function. To enable the VRRP protocol on the Switch, omit this parameter. This command is disabled by default.

enable vrrp

Restrictions	Only administrator-level users can issue this command.
--------------	--

Example Usage:

To enable VRRP globally on the Switch:

DXS-3326GSR:4#enable vrrp

Command: enable vrrp

Success.

DXS-3326GSR:4#

Example usage:

To enable the virtual IP address to be pinged:

DXS-3326GSR:4#enable vrrp ping

Command: enable vrrp ping

Success.

DXS-3326GSR:4#

disable vrrp

Purpose	To disable a VRRP interface configuration.
Syntax	disable vrrp {ping}
Description	This command will disable the VRRP interface configuration on the Switch.
Parameters	<i>{ping}</i> - Adding this parameter to the command will stop the virtual IP address from being pinged from other host end nodes to verify connectivity. This will only disable the ping connectivity check function. To disable the VRRP protocol on the Switch, omit this parameter.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To disable the VRRP function globally on the Switch:

DXS-3326GSR:4#disable vrrp

Command: disable vrrp

Success.

```
DXS-3326GSR:4#
```

Example usage:

To disable the virtual IP address from being pinged:

```
DXS-3326GSR:4#disable vrrp ping
```

Command: disable vrrp ping

Success.

```
DXS-3326GSR:4#
```

create vrrp vrid

Purpose	To create a VRRP IP interface on the Switch.
Syntax	vrid <vrid 1-255> <ipif_name 12> ipaddress <ipaddr> {state [enable disable] priority <int 1-254> advertisement_interval <int 1-255> preempt [true false] critical_ip <ipaddr> critical_ip_state [enable disable]}
Description	This command is used to create a VRRP interface on the Switch.
Parameters	<i>vrid <vrid 1-255></i> - Enter a value between 1 and 255 to uniquely identify this VRRP group on the Switch. All routers participating in this group must be assigned the same <i>vrid</i> value. This value MUST be different from other VRRP groups set on the Switch. <i><ipif_name 12></i> - Enter the name of a previously configured IP interface that you wish to create a VRRP entry for. This IP interface must be assigned to a VLAN on the Switch. <i>ipaddress <ipaddr></i> - Enter the virtual IP address that will be assigned to the VRRP entry. This IP address is also the default gateway that will be statically assigned to end hosts and must be set for all routers that participate in this group. <i>state [enable disable]</i> – Used to enable and disable the VRRP IP interface on the Switch. <i>priority <int 1-254></i> - Enter a value between 1 and 254 to indicate the router priority. The VRRP Priority value may determine if a higher priority VRRP router overrides a lower priority VRRP router. A higher priority will increase the probability that this router will become the Master router of the group. A lower priority will increase the probability that this router will become the backup router. VRRP routers that are assigned the same priority value will elect the highest physical IP address as the Master router. The default value is 100. (The value of 255 is reserved for the router that owns the IP address associated with the virtual router and is therefore set automatically.) <i>advertisement_interval <int 1-255></i> - Enter a time interval value, in seconds, for sending VRRP message packets. This value must be consistent with all routers participating within the same VRRP group

create vrrp vrid

and is used to troubleshoot misconfigured routers. The default is 1 second.

preempt [true | false] – This entry will determine the behavior of backup routers within the VRRP group by controlling whether a higher priority backup router will preempt a lower priority Master router. A *true* entry, along with having the backup router's priority set higher than the masters priority, will set the backup router as the Master router. A *false* entry will disable the backup router from becoming the Master router. This setting must be consistent with all routers participating within the same VRRP group. The default setting is *true*.

critical_ip <ipaddr> - Enter the IP address of the physical device that will provide the most direct route to the Internet or other critical network connections from this virtual router. This must be a real IP address of a real device on the network. If the connection from the virtual router to this IP address fails, a new Master will be elected from the backup routers participating in the VRRP group. If the connection to the backup fails, this backup router cannot assume the Master router role. Different critical IP addresses may be assigned to different routers participating in the VRRP group, and can therefore define multiple routes to the Internet or other critical network connections.

critical_ip_state [enable | disable] – This parameter is used to enable or disable the critical IP address entered above. The default is *disable*.

Restrictions

Only administrator-level users can issue this command.

Example usage:

To create a VRRP entry:

```
DXS-3326GSR:4#create vrrp vrid 1 ipif Darren ipaddress 11.1.1.1 state
enable priority 200 advertisement_interval 1 preempt true critical_ip
10.53.13.224 critical_ip_state enable
```

```
Command: create vrrp vrid 1 ipif Darren ipaddress 11.1.1.1 state enable
priority 200 advertisement_interval 1 preempt true critical_ip 10.53.13.224
critical_ip_state enable
```

Success.

```
DXS-3326GSR:4#
```

config vrrp vrid**Purpose**

To configure a VRRP IP interface on the Switch.

Syntax

```
vrid <vrid 1-255> {state [enable | disable] | priority <int 1-254> |
ipaddress <ipaddr> | advertisement_interval <int 1-255> |
preempt [true | false] | critical_ip <ipaddr> | critical_ip_state
[enable | disable]}
```

config vrrp vrid

Description	This command is used to configure a previously configured VRRP interface on the Switch.
Parameters	<i>vrid</i> <<i>vrid</i> 1-255> - Enter a value between 1 and 255 that uniquely identifies the VRRP group you wish to configure. All routers participating in this group must be assigned the same <i>vrid</i> value. This value MUST be different from other VRRP groups set on the Switch. <i>state</i> [<i>enable</i> <i>disable</i>] – Used to enable and disable the VRRP IP interface on the Switch. <i>priority</i> <<i>int</i> 1-254> - Enter a value between 1 and 254 to indicate the router priority. The VRRP Priority value may determine if a higher priority VRRP router overrides a lower priority VRRP router. A higher priority will increase the probability that this router will become the Master router of the group. A lower priority will increase the probability that this router will become the backup router. VRRP routers that are assigned the same priority value will elect the highest physical IP address as the Master router. The default value is 100. (The value of 255 is reserved for the router that owns the IP address associated with the virtual router and is therefore set automatically.) <i>ipaddress</i> <<i>ipaddr</i>> - Enter the virtual IP address that will be assigned to the VRRP entry. This IP address is also the default gateway that will be statically assigned to end hosts and must be set for all routers that participate in this group. <i>advertisement_interval</i> <<i>int</i> 1-255> - Enter a time interval value, in seconds, for sending VRRP message packets. This value must be consistent with all routers participating within the same VRRP group and is used to troubleshoot misconfigured routers. The default is 1 second. <i>preempt</i> [<i>true</i> <i>false</i>] – This entry will determine the behavior of backup routers within the VRRP group by controlling whether a higher priority backup router will preempt a lower priority Master router. A <i>true</i> entry, along with having the backup router's priority set higher than the masters priority, will set the backup router as the Master router. A <i>false</i> entry will disable the backup router from becoming the Master router. This setting must be consistent with all routers participating within the same VRRP group. The default setting is <i>true</i>. <i>critical_ip</i> <<i>ipaddr</i>> - Enter the IP address of the physical device that will provide the most direct route to the Internet or other critical network connections from this virtual router. This must be a real IP address of a real device on the network. If the connection from the virtual router to this IP address fails, a new Master will be elected from the backup routers participating in the VRRP group. If the connection to the backup fails, this backup router cannot assume the Master router role. Different critical IP addresses may be assigned to different routers participating in the VRRP group, and can therefore define multiple routes to the Internet or other critical network connections. <i>critical_ip_state</i> [<i>enable</i> <i>disable</i>] – This parameter is used to enable or disable the critical IP address entered above. The default is

config vrrp vrid*disable.***Restrictions**

Only administrator-level users can issue this command.

Example usage:

To configure a VRRP entry:

```
DXS-3326GSR:4#config vrrp vrid 1 state enable priority
100 advertisement_interval 2
```

```
Command: config vrrp vrid 1 state enable priority 100
advertisement_interval 2
```

```
Success.
```

```
DXS-3326GSR:4#
```

config vrrp ipif**Purpose**

To configure the authentication type for a VRRP entry.

Syntax

```
config vrrp ipif <ipif_name 12> [authtype [none | simple
authdata <string 8> | ip authdata <string 16>]
```

Description

This command is used to set the authentication type for a VRRP entry on the Switch.

Parameters

ipif <*ipif_name* 12> - Enter the name of a previously configured IP interface that you wish to configure the VRRP entry for. This IP interface must be assigned to a VLAN on the Switch.

authtype – Specifies the type of authentication used. The *authtype* must be consistent with all routers participating within the VRRP group. The user may choose between:

- *none* – Entering this parameter indicates that VRRP protocol exchanges will not be authenticated.
- *simple authdata* <*string* 8> - This parameter, along with an alphanumeric string of no more than eight characters, to set a simple password for comparing VRRP message packets received by a router. If the two passwords are not exactly the same, the packet will be dropped.
- *ip authdata* <*string* 16> - This parameter will require the user to set an alphanumeric authentication string of no more than 16 characters to generate a MD5 message digest for authentication in comparing VRRP messages received by the router. If the two values are inconsistent, the packet will be dropped.

Restrictions

Only administrator-level users can issue this command.

Example usage:

To set the authentication type for a VRRP entry:

```
DXS-3326GSR:4#config vrrp ipif Trinity authtype simple authdata tomato
```

```
Command: config vrrp ipif Trinity authtype simple authdata tomato
```

```
Success.
```

```
DXS-3326GSR:4#
```

ROUTING TABLE COMMANDS

The routing table commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
create iproute	<network_address> <ipaddr> {<metric 1-65535>} {[primary backup]}
create iproute default	<ipaddr> {<metric 1-65535>}
delete iproute default	<ipaddr>
delete iproute	<network_address> <ipaddr> {[primary backup]}
show iproute	{<network_address>} {[static rip ospf]}

Each command is listed, in detail, in the following sections.

create iproute

Purpose	Used to create IP route entries to the Switch's IP routing table.
Syntax	create iproute <network_address> <ipaddr> {<metric 1-65535>} {[primary backup]}
Description	This command is used to create a primary and backup IP route entry to the Switch's IP routing table.
Parameters	<network_address> – IP address and netmask of the IP interface that is the destination of the route. You can specify the address and mask information using the traditional format (for example, 10.1.2.3/255.0.0.0 or in CIDR format, 10.1.2.3/8). <ipaddr> – The gateway IP address for the next hop router. <metric 1-65535> – Allows the entry of a routing protocol metric entry, representing the number of routers between the Switch and the IP address above. The default setting is 1. [primary backup] - The user may choose between <i>Primary</i> and <i>Backup</i>. If the Primary Static/Default Route fails, the Backup Route will support the entry. Please take note that the Primary and Backup entries cannot have the same Gateway.
Restrictions	Only administrator-level users can issue this command.

Example Usage:

To add a single static address 10.48.74.121, mask 255.0.0.0 and gateway 10.1.1.254 to the routing table:

```
DXS-3326GSR:4#create iproute 10.48.74.121/255.0.0.0 10.1.1.254 1
```

```
Command: create iproute 10.48.74.121/8 10.1.1.254 1
```

Success.

```
DXS-3326GSR:4#
```

create iproute default

Purpose	Used to create IP route entries to the Switch's IP routing table.
Syntax	create iproute default <ipaddr> {<metric>}
Description	This command is used to create a default static IP route entry to the Switch's IP routing table.
Parameters	<ipaddr> – The gateway IP address for the next hop router. <metric> – Allows the entry of a routing protocol metric entry representing the number of routers between the Switch and the IP address above. The default setting is 1.
Restrictions	Only administrator-level users can issue this command.

Example Usage:

To add the default static address 10.48.74.121, with a metric setting of 1, to the routing table:

```
DXS-3326GSR:4#create iproute default 10.48.74.121 1
```

```
Command: create iproute default 10.48.74.121 1
```

Success.

```
DXS-3326GSR:4#
```

delete iproute

Purpose	Used to delete an IP route entry from the Switch's IP routing table.
Syntax	delete iproute <network_address> <ipaddr> [primary backup]
Description	This command will delete an existing entry from the Switch's IP routing table.
Parameters	<network_address> – IP address and netmask of the IP interface that is the destination of the route. You can specify the address and mask information using the traditional format (for example, 10.1.2.3/255.0.0.0 or in CIDR format, 10.1.2.3/8). <ipaddr> – The gateway IP address for the next hop router. [primary backup] – The user may choose between <i>Primary</i> and

delete iproute

Backup. If the Primary Static/Default Route fails, the Backup Route will support the entry. Please take note that the Primary and Backup entries cannot have the same Gateway.

Restrictions Only administrator-level users can issue this command.

Example Usage:

To delete a backup static address 10.48.75.121, mask 255.0.0.0 and gateway (ipaddr) entry of 10.1.1.254 from the routing table:

DXS-3326GSR:4#delete iproute 10.48.74.121/8 10.1.1.254

Command: delete iproute 10.48.74.121/8 10.1.1.254

Success.

DXS-3326GSR:4#

delete iproute default

Purpose Used to delete a default IP route entry from the Switch's IP routing table.

Syntax **delete iproute default <ipaddr>**

Description This command will delete an existing default entry from the Switch's IP routing table.

Parameters <ipaddr> - The gateway IP address for the next hop router.

Restrictions Only administrator-level users can issue this command.

Example usage:

To delete the default IP route 10.53.13.254:

DXS-3326GSR:4#delete iproute default 10.53.13.254

Command: delete iproute default 10.53.13.254

Success.

DXS-3326GSR:4#

show iproute

Purpose Used to display the Switch's current IP routing table.

Syntax **show iproute {<network_address>} {[static | rip | ospf]}**

show iproute

Description	This command will display the Switch's current IP routing table.
Parameters	<i><network_address></i> – IP address and netmask of the IP interface that is the destination of the route. You can specify the address and mask information using the traditional format (for example, 10.1.2.3/255.0.0.0 or in CIDR format, 10.1.2.3/8). <i>static</i> – Use this parameter to display static iproute entries. <i>rip</i> – Use this parameter to display RIP iproute entries. <i>ospf</i> – Use this parameter to display OSPF iproute entries.
Restrictions	None.

Example Usage:

To display the contents of the IP routing table:

```

DXS-3326GSR:4#show iproute
Command: show iproute

IP Address/Netmask  Gateway      Interface    Cost  Protocol
-----
0.0.0.0             10.1.1.254   System       1     Default
10.0.0.0/8          10.48.74.122 System       1     Local

Total Entries: 2

DXS-3326GSR:4#

```

ROUTE REDISTRIBUTION COMMANDS

The route redistribution commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
create route redistribute dst ospf src	[static rip local] {mettype [1 2] metric <value 0-65535>}
create route redistribute dst rip src	[local static ospf {all internal external type_1 type_2 inter+e1 inter+e2}] {metric <value 0-65535>}
config route redistribute dst ospf src	[static rip local] {mettype [1 2] metric <value 0-65535>}
config route redistribute dst rip src	[local static ospf {all internal external type_1 type_2 inter+e1 inter+e2}] {metric <value 0-65535>}
delete route redistribute	{dst [rip ospf] src [rip local static ospf]}
show route redistribute	{dst [rip ospf] src [rip static local ospf]}

Each command is listed, in detail, in the following sections.

create route redistribute dst ospf src

Purpose	Used to add route redistribution settings for the exchange of RIP routes to OSPF routes on the Switch.
Syntax	create route redistribute dst ospf src [static rip local] {mettype [1 2] metric <value 0-65535>}
Description	This command will redistribute routing information between the OSPF and RIP routing protocols to all routers on the network that are running OSPF or RIP. Routing information entered into the Static Routing Table on the local DXS-3326GSR switch is also redistributed.
Parameters	<i>src</i> [static rip local] – Allows for the selection of the protocol for the source device. <i>mettype</i> [1 2] – Allows for the selection of one of two methods of calculating the metric value. ▪ Type-1 calculates (for RIP to OSPF) by adding the destination's interface cost to the metric entered in the Metric field. ▪ Type-2 uses the metric entered in the Metric field without change. this field applies only when the destination field is OSPF. <i>metric</i> <value 0-65535> – Allows the entry of an OSPF interface cost. This is analogous to a Hop Count in the RIP routing protocol.
Restrictions	Only administrator-level users can issue this command.

Routing information source – RIP, the Static Route table, and the Local interface routing information. Routing information will be redistributed to OSPF.

Route Source	Metric	Metric Type
RIP	0 to 16777214	mettype 1 mettype 2
Static	0 to 16777214	mettype 1 mettype 2
Local	0 to 16777214	mettype 1 mettype 2

Allowed Metric Type combinations are **mettype 1** or **mettype 2**. The metric value **0** above will be redistributed in OSPF as the metric **20**.

Example Usage:

To add route redistribution settings:

```
DXS-3326GSR:4#create route redistribute dst ospf src rip
Command: create route redistribute dst ospf src rip

Success.

DXS-3326GSR:4#
```

create route redistribute dst rip src

Purpose	Used to add route redistribution settings for the exchange of OSPF routes to RIP routes on the Switch.
Syntax	create route redistribute dst rip src {all internal external type_1 type_2 inter+e1 inter+e2}] {metric <value>}
Description	This command will redistribute routing information between the OSPF and RIP routing protocols to all routers on the network that are running OSPF or RIP. Routing information entered into the Static Routing Table on the local DXS-3326GSR switch is also redistributed
Parameters	<i>src {all internal external type_1 type_2 inter+e1 inter+e2}</i> – Allows the selection of the protocol of the source device. The user may choose between: ▪ <i>all</i> – Specifies both internal and external. ▪ <i>internal</i> – Specifies the internal protocol of the source device. ▪ <i>external</i> – Specifies the external protocol of the source device. ▪ <i>type_1</i> – Calculates the metric (for RIP to OSPF) by adding the destination's interface cost to the metric entered in the

create route redistribute dst rip src

Metric field.

- *type_2* - Uses the metric entered in the Metric field without change. This field applies only when the destination field is OSPF.
- *inter+e1* – Specifies the internal protocol AND type 1 of the external protocol.
- *inter+e2* – Specifies the internal protocol AND type 2 of the external protocol.

metric <value> – Allows the entry of an OSPF interface cost. This is analogous to a HOP Count in the RIP routing protocol.

Restrictions

Only administrator-level users can issue this command.

Routing information source – OSPF and the Static Route table. Routing information will be redistributed to RIP. The following table lists the allowed values for the routing metrics and the types (or forms) of the routing information that will be redistributed.

Route Source	Metric	Type
OSPF	0 to 16	all type_1 type_2 inter+e1 inter+e2 external internal
Static	0 to 16	not applicable

Entering the **Type** combination – **internal type_1 type_2** is functionally equivalent to **all**. Entering the combination **type_1 type_2** is functionally equivalent to **external**. Entering the combination **internal external** is functionally equivalent to **all**.

Entering the metric **0** specifies transparency.

Example Usage:

To add route redistribution settings:

```
DXS-3326GSR:4#create route redistribute dst rip src ospf all metric 2
Command: create route redistribute dst rip src ospf all metric 2

Success.

DXS-3326GSR:4#
```

config route redistribute dst ospf src

Purpose	Used configure route redistribution settings for the exchange of RIP routes to OSPF routes on the Switch.
Syntax	config route redistribute dst ospf src [static rip local] {mettype [1 2] metric <value 0-65535>}
Description	Route redistribution allows routers on the network – that are running different routing protocols to exchange routing information. This is accomplished by comparing the routes stored in the various router's routing tables and assigning appropriate metrics. This information is then exchanged among the various routers according to the individual routers current routing protocol. The Switch can redistribute routing information between the OSPF and RIP routing protocols to all routers on the network that are running OSPF or RIP. Routing information entered into the Static Routing Table on the local switch is also redistributed.
Parameters	<i>src [static rip local]</i> – Allows the selection of the protocol of the source device. <i>mettype</i> – allows the selection of one of the methods for calculating the metric value. ▪ Type-1 calculates the metric (for RIP to OSPF) by adding the destination's interface cost to the metric entered in the Metric field. ▪ Type-2 uses the metric entered in the Metric field without change. This field applies only when the destination field is OSPF. <i>metric <value 0-65535></i> – Allows the entry of an OSPF interface cost. This is analogous to a Hop Count in the RIP routing protocol.
Restrictions	Only administrator-level users can issue this command.

Routing information source – RIP: the Static Route table, and the Local interface routing information. Routing information will be redistributed to OSPF. The following table lists the allowed values for the routing metrics and the types (or forms) of the routing information that will be redistributed.

Route Source	Metric	Metric Type
RIP	0 to 16777214	mettype 1 mettype 2
Static	0 to 16777214	mettype 1 mettype 2
Local	0 to 16777214	mettype 1 mettype 2

Allowed Metric Type combinations are **mettype 1** or **mettype 2**. The metric value **0** above will be redistributed in OSPF as the metric **20**.

Example Usage:

To configure route redistributions:

```
DXS-3326GSR:4#config route redistribute dst ospf src all metric 2
```

```
Command: config route redistribute dst ospf src all metric 2
```

```
Success.
```

```
DXS-3326GSR:4#
```

config route redistribute dst rip src

Purpose	Used configure route redistribution settings for the exchange of RIP routes to OSPF routes on the Switch.
Syntax	config route redistribute dst rip src [local static ospf [all internal external type_1 type_2 inter+e1 inter+e2]] {metric <value>}
Description	Route redistribution allows routers on the network that are running different routing protocols to exchange routing information. This is accomplished by comparing the routes stored in the various router's routing tables and assigning appropriate metrics. This information is then exchanged among the various routers according to the individual routers current routing protocol. The switch can redistribute routing information between the OSPF and RIP routing protocols to all routers on the network that are running OSPF or RIP. Routing information entered into the Static Routing Table on the local switch is also redistributed.
Parameters	<i>src {all internal external type_1 type_2 inter+e1 inter+e2}</i> – Allows the selection of the protocol of the source device. The user may choose between: ▪ <i>all</i> – Specifies both internal an external. ▪ <i>internal</i> – Specifies the internal protocol of the source device. ▪ <i>external</i> - Specifies the external protocol of the source device. ▪ <i>type_1</i> - Calculates the metric (for RIP to OSPF) by adding the destination's interface cost to the metric entered in the Metric field. ▪ <i>type_2</i> - Uses the metric entered in the Metric field without change. This field applies only when the destination field is OSPF. ▪ <i>inter+e1</i> – Specifies the internal protocol AND type 1 of the external protocol. ▪ <i>inter+e2</i> – Specifies the internal protocol AND type 2 of the external protocol. <i>metric <value></i> – Allows the entry of an OSPF interface cost. This is analogous to a Hop Count in the RIP routing protocol.

config route redistribute dst rip src

Restrictions	Only administrator-level users can issue this command.
--------------	--

Example Usage:

To configure route redistributions:

```
DXS-3326GSR:4#config route redistribute dst ospf src rip mettype
type_1 metric 2
```

```
Command: config route redistribute dst ospf src rip mettype
type_1 metric 2
```

Success.

```
DXS-3326GSR:4#
```

delete route redistribute

Purpose	Used to delete an existing route redistribute configuration on the Switch.
Syntax	delete route redistribute {dst [rip ospf] src [rip static local ospf]}
Description	This command will delete the route redistribution settings on this switch.
Parameters	<i>dst [rip ospf]</i>– Allows the selection of the protocol on the destination device. The user may choose between RIP and OSPF. <i>src [rip static local ospf]</i> – Allows the selection of the protocol on the source device. The user may choose between RIP, static, local or OSPF.
Restrictions	Only administrator-level users can issue this command.

Example Usage:

To delete route redistribution settings:

```
DXS-3326GSR:4#delete route redistribute dst rip src ospf
```

```
Command: delete route redistribute dst rip src ospf
```

Success.

```
DXS-3326GSR:4#
```

show route redistribute

Purpose	Used to display the route redistribution on the Switch.
---------	---

show route redistribute

Syntax	show route redistribute {dst [rip ospf] src [rip static local ospf]}
Description	Displays the current route redistribution settings on the Switch.
Parameters	<i>src [rip static local ospf]</i> – Allows the selection of the routing protocol on the source device. The user may choose between RIP, static, local or OSPF. <i>dst [rip ospf]</i> – Allows the selection of the routing protocol on the destination device. The user may choose between RIP and OSPF.
Restrictions	None.

Example Usage:

To display route redistributions:

DXS-3326GSR:4#show route redistribute

Command: show route redistribute

Source Protocol	Destination Protocol	Type	Metric
-----	-----	-----	-----
STATIC	RIP	All	1
LOCAL	OSPF	Type-2	20

Total Entries : 2

DXS-3326GSR:4#

BOOTP RELAY COMMANDS

The BOOTP relay commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
config bootp_relay	{hops <value 1-16> time <sec 0-65535>}
config bootp_relay add ipif	<ipif_name 12> <ipaddr>
config bootp_relay delete ipif	<ipif_name 12> <ipaddr>
enable bootp_relay	
disable bootp_relay	
show bootp_relay	{ipif <ipif_name 12>}

Each command is listed, in detail, in the following sections.

config bootp_relay

Purpose	Used to configure the BOOTP relay feature of the Switch.
Syntax	config bootp_relay {hops <value 1-16>} {time <sec 0-65535>}
Description	This command is used to configure the BOOTP relay feature.
Parameters	<i>hops <value 1-16></i> – Specifies the maximum number of relay agent hops that the BOOTP packets can cross. <i>time <sec 0-65535></i> – If this time is exceeded, the Switch will relay the BOOTP packet.
Restrictions	Only administrator-level users can issue this command.

Example Usage:

To configure bootp relay status.

```
DXS-3326GSR:4#config bootp_relay hops 4 time 2
```

```
Command: config bootp_relay hops 4 time 2
```

```
Success.
```

```
DXS-3326GSR:4#
```

config bootp_relay add

Purpose	Used to add an IP destination address to the Switch's BOOTP relay table.
---------	--

config bootp_relay add

	relay table.
Syntax	config bootp_relay add ipif <ipif_name 12> <ipaddr>
Description	This command adds an IP address as a destination to forward (relay) BOOTP packets to.
Parameters	<ipif_name 12> – The name of the IP interface in which BOOTP relay is to be enabled. <ipaddr> – The BOOTP server IP address.
Restrictions	Only administrator-level users can issue this command.

Example Usage:

To add a BOOTP relay.

```
DXS-3326GSR:4#config bootp_relay add ipif System 10.43.21.12
Command: config bootp_relay add ipif System 10.43.21.12

Success.

DXS-3326GSR:4#
```

config bootp_relay delete

Purpose	Used to delete an IP destination addresses from the Switch's BOOTP relay table.
Syntax	config bootp_relay delete ipif <ipif_name 12> <ipaddr>
Description	This command is used to delete an IP destination addresses in the Switch's BOOTP relay table.
Parameters	<ipif_name 12> – The name of the IP interface that contains the IP address below. <ipaddr> – The BOOTP server IP address.
Restrictions	Only administrator-level users can issue this command.

Example Usage:

To delete a BOOTP relay:

```
DXS-3326GSR:4#config bootp_relay delete ipif System 10.43.21.12
Command: config bootp_relay delete ipif System 10.43.21.12

Success.

DXS-3326GSR:4#
```

enable bootp_relay

Purpose	Used to enable the BOOTP relay function on the Switch.
Syntax	enable bootp_relay
Description	This command, in combination with the disable bootp_relay command below, is used to enable and disable the BOOTP relay function on the Switch.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example Usage:

To enable the BOOTP relay function:

```
DXS-3326GSR:4#enable bootp_relay
Command: enable bootp_relay

Success.

DXS-3326GSR:4#
```

disable bootp_relay

Purpose	Used to disable the BOOTP relay function on the Switch.
Syntax	disable bootp_relay
Description	This command, in combination with the enable bootp_relay command above, is used to enable and disable the BOOTP relay function on the Switch.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example Usage:

To disable the BOOTP relay function:

```
DXS-3326GSR:4#disable bootp_relay
Command: disable bootp_relay

Success.

DXS-3326GSR:4#
```

show bootp_relay

Purpose	Used to display the current BOOTP relay configuration.
Syntax	show bootp_relay {ipif <ipif_name 12>}
Description	This command will display the current BOOTP relay configuration for the Switch, or if an IP interface name is specified, the BOOTP relay configuration for that IP interface.
Parameters	<ipif_name 12> – The name of the IP interface for which you want to display the current BOOTP relay configuration.
Restrictions	None.

Example Usage:

To display bootp relay status:

```

DXS-3326GSR:4#show bootp_relay
Command: show bootp_relay

Bootp Relay Status      : Disabled
Bootp Hops Count Limit  : 4
Bootp Relay Time Threshold : 0

Interface  Server 1    Server 2    Server 3    Server 4
-----
System     10.48.74.122  10.23.12.34  10.12.34.12  10.48.75.121

Total Entries: 1

DXS-3326GSR:4#

```

DNS RELAY COMMANDS

The DNS relay commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
config dnsr	{[primary secondary] nameserver <ipaddr> [add delete] static <domain_name 32> <ipaddr>}
enable dnsr	{cache static}
disable dnsr	{cache static}
show dnsr	{static}

Each command is listed, in detail, in the following sections.

config dnsr

Purpose	Used to configure the DNS relay function.
Syntax	config dnsr {[primary secondary] nameserver <ipaddr> [add delete] static <domain_name 32> <ipaddr>}
Description	This command is used to configure the DNS relay function on the Switch.
Parameters	<i>primary</i> – Indicates that the IP address below is the address of the primary DNS server. <i>secondary</i> – Indicates that the IP address below is the address of the secondary DNS server. <i>nameserver <ipaddr></i> – The IP address of the DNS nameserver. <i>[add delete]</i> – Indicates if the user wishes to add or delete the DNS relay function. <i><domain_name 32></i> – The domain name of the entry. <i><ipaddr></i> – The IP address of the entry.
Restrictions	Only administrator-level users can issue this command.

Example Usage:

To set IP address 10.43.21.12 of primary.

DXS-3326GSR:4#config dnsr primary 10.43.21.12

Command: config dnsr primary 10.43.21.12

Success

```
DXS-3326GSR:4#
```

Example Usage:

To add an entry domain name dns1, IP address 10.43.21.12 to DNS static table:

```
DXS-3326GSR:4#config dnsr add static dns1 10.43.21.12
```

```
Command: config dnsr add static dns1 10.43.21.12
```

```
Success.
```

```
DXS-3326GSR:4#
```

Example Usage:

To delete an entry domain name dns1, IP address 10.43.21.12 from DNS static table.

```
DXS-3326GSR:4#config dnsr delete static dns1 10.43.21.12
```

```
Command: config dnsr delete static dns1 10.43.21.12
```

```
Success.
```

```
DXS-3326GSR:4#
```

enable dnsr

Purpose	Used to enable DNS relay.
Syntax	enable dnsr {cache static}
Description	This command is used, in combination with the disable dnsr command below, to enable and disable DNS Relay on the Switch.
Parameters	<i>cache</i> - This parameter will allow the user to enable the cache lookup for the DNS relay on the Switch. <i>static</i> - This parameter will allow the user to enable the static table lookup for the DNS relay on the Switch.
Restrictions	Only administrator-level users can issue this command.

Example Usage:

To enable status of DNS relay:

DXS-3326GSR:4#enable dnsr

Command: enable dnsr

Success.

DXS-3326GSR:4#

Example Usage:

To enable cache lookup for DNS relay.

DXS-3326GSR:4#enable dnsr cache

Command: enable dnsr cache

Success.

DXS-3326GSR:4#

Example Usage:

To enable static table lookup for DNS relay.

DXS-3326GSR:4#enable dnsr static

Command: enable dnsr static

Success.

DXS-3326GSR:4#

disable dnsr

Purpose	Used to disable DNS relay on the Switch.
Syntax	disable dnsr {cache static}
Description	This command is used, in combination with the enable dnsr command above, to enable and disable DNS Relay on the Switch.
Parameters	<i>cache</i> – This parameter will allow the user to disable the cache lookup for the DNS rely on the Switch. <i>static</i> - This parameter will allow the user to disable the static table lookup for the DNS rely on the Switch.
Restrictions	Only administrator-level users can issue this command.

Example Usage:

To disable status of DNS relay.

DXS-3326GSR:4#disable dnsr

Command: disable dnsr

Success.

DXS-3326GSR:4#

Example Usage:

To disable cache lookup for DNS relay.

DXS-3326GSR:4#disable dnsr cache

Command: disable dnsr cache

Success.

DXS-3326GSR:4#

Example Usage:

To disable static table lookup for DNS relay.

DXS-3326GSR:4#disable dnsr static

Command: disable dnsr static

Success.

DXS-3326GSR:4#

show dnsr

Purpose	Used to display the current DNS relay status.
Syntax	show dnsr {static}
Description	This command is used to display the current DNS relay status.
Parameters	<i>static</i> – Allows the display of only the static entries into the DNS relay table. If this parameter is omitted, the entire DNS relay table will be displayed.
Restrictions	None.

Example Usage:

To display DNS relay status:

DXS-3326GSR:4#show dnsr**Command: show dnsr****DNSR Status : Disabled****Primary Name Server : 0.0.0.0****Secondary Name Server : 0.0.0.0****DNSR Cache Status : Disabled****DNSR Static Cache Table Status : Disabled****DNS Relay Static Table**

Domain Name	IP Address
-----	-----
www.123.com.tw	10.12.12.123
bbs.ntu.edu.tw	140.112.1.23

Total Entries: 2**DXS-3326GSR:4#**

RIP COMMANDS

The RIP commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
config rip	[ipif <ipif_name 12> all] {authentication [enable <password 16> disable] tx_mode [disable v1_only v1_compatible v2_only] rx_mode [v1_only v2_only v1_or_v2 disable] state [enable disable]}
enable rip	
disable rip	
show rip	ipif <ipif_name 12>

Each command is listed, in detail, in the following sections.

config rip	
Purpose	Used to configure RIP on the Switch.
Syntax	config rip [ipif <ipif_name 12> all] {authentication [enable <password 16> disable] tx_mode [disable v1_only v1_compatible v2_only] rx_mode [v1_only v2_only v1_or_v2 disable] state [enable disable]}
Description	This command is used to configure RIP on the Switch.
Parameters	<ipif_name 12> – The name of the IP interface. <i>all</i> – To configure all RIP receiving mode for all IP interfaces. <i>authentication [enable disable]</i> – Enables or disables authentication for RIP on the Switch. ▪ <i><password 16></i> – Allows the specification of a case-sensitive password. <i>tx_mode</i> – Determines how received RIP packets will be interpreted – as RIP version <i>V1 only</i>, <i>V2 Only</i>, or <i>V1 Compatible (V1 and V2)</i>. This entry specifies which version of the RIP protocol will be used to transfer RIP packets. The disabled entry prevents the reception of RIP packets. ▪ <i>disable</i> – Prevents the transmission of RIP packets. ▪ <i>v1_only</i> – Specifies that only RIP v1 packets will be transmitted. ▪ <i>v1_compatible</i> – Specifies that only RIP v1 compatible packets will be transmitted. ▪ <i>v2_only</i> – Specifies that only RIP v2 packets will be

config rip

transmitted.

rx_mode – Determines how received RIP packets will be interpreted – as RIP version *V1 only*, *V2 Only*, or *V1 or V2*. This entry specifies which version of the RIP protocol will be used to receive RIP packets. The Disabled entry prevents the reception of RIP packets.

- *v1_only* – Specifies that only RIP v1 packets will be transmitted.
- *v2_only* - Specifies that only RIP v2 packets will be transmitted.
- *v1_or_v2* - Specifies that only RIP v1 or v2 packets will be transmitted.

state [enable | disable] – Allows RIP to be enabled and disabled on the Switch.

Restrictions

Only administrator-level users can issue this command.

Example Usage:

To change the RIP receive mode for the IP interface System:

DXS-3326GSR:4#config rip ipif System rx_mode v1_only

Command: config rip ipif System rx_mode v1_only

Success.

DXS-3326GSR:4#

enable rip

Purpose Used to enable RIP.

Syntax **enable rip**

Description This command is used to enable RIP on the Switch.

Parameters None.

Restrictions Only administrator-level users can issue this command.

Example Usage:

To enable RIP:

DXS-3326GSR:4#enable rip

Command: enable rip

Success.

DXS-3326GSR:4#

disable rip

Purpose	Used to disable RIP.
Syntax	disable rip
Description	This command is used to disable RIP on the Switch.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example Usage:

To disable rip:

DXS-3326GSR:4#disable rip

Command: disable rip

Success.

DXS-3326GSR:4#

show rip

Purpose	Used to display the RIP configuration and statistics for the Switch.
Syntax	show rip {ipif <ipif_name 12>}
Description	This command will display the RIP configuration and statistics for a given IP interface or for all IP interfaces.
Parameters	<i>ipif <ipif_name 12></i> – The name of the IP interface for which you want to display the RIP configuration and settings. If this parameter is not specified, the show rip command will display the global RIP configuration for the Switch.
Restrictions	None.

Example Usage:

To display RIP configuration:

DXS-3326GSR:4#show rip**Command: show rip****RIP Global State : Disabled****RIP Interface Settings**

Interface	IP Address	TX Mode	RX Mode	Authen- tication	State
-----	-----	-----	-----	-----	-----
System	10.41.44.33/8	Disabled	Disabled	Disabled	Disabled

Total Entries : 1**DXS-3326GSR:4#**

DVMRP COMMANDS

The DVMRP commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
config dvmrp	[ipif <ipif_name 12> all] {metric <value 1-31> probe <sec 1-65535> neighbor_timeout <sec 1-65535> state [enable disable]}
enable dvmrp	
disable dvmrp	
show dvmrp neighbor	{ipif <ipif_name 12> ipaddress <network_address>}
show dvmrp nexthop	{ipaddress <network_address> ipif <ipif_name 12>}
show dvmrp routing_table	{ipaddress <network_address>}
show dvmrp	{ipif <ipif_name 12>}

Each command is listed, in detail, in the following sections.

config dvmrp

Purpose	Used to configure DVMRP on the Switch.
Syntax	config dvmrp [ipif <ipif_name 12> all] {metric <value 1-31> probe <sec 1-65535> neighbor_timeout <sec 1-65535> state [enable disable]}
Description	This command is used to configure DVMRP on the Switch.
Parameters	<i><ipif_name 12></i> – The name of the IP interface for which DVMRP is to be configured. <i>all</i> – Specifies that DVMRP is to be configured for all IP interfaces on the Switch. <i>metric <value 1-31></i> – Allows the assignment of a DVMRP route cost to the above IP interface. A DVMRP route cost is a relative number that represents the real cost of using this route in the construction of a multicast delivery tree. It is similar to, but not defined as, the hop count in RIP. The default is 1. <i>probe <second 1-65535></i> – DVMRP defined an extension to IGMP that allows routers to query other routers to determine if a DVMRP neighbor is present on a given subnetwork or not. This is referred to as a 'probe'. This entry will set an intermittent probe (in seconds) on the device that will transmit dvmrp messages, depending on the time specified. This probe is also used to "keep alive" the connection between DVMRP enabled devices. The default value is 10 seconds. <i>neighbor_timeout <second 1-65535></i> – The time period for

config dvmrp

which DVMRP will hold Neighbor Router reports before issuing poison route messages. The default value is 35 seconds.

state [enable | disable] – Allows DVMRP to be enabled or disabled.

Restrictions Only administrator-level users can issue this command.

Example Usage:

To configure DVMRP configurations of IP interface System:

DXS-3326GSR:4#config dvmrp ipif System neighbor_timeout 30 metric 1 probe 5

Command: config dvmrp ipif System neighbor_timeout 30 metric 1 probe 5

Success

DXS-3326GSR:4#

enable dvmrp

Purpose Used to enable DVMRP.

Syntax **enable dvmrp**

Description This command, in combination with the **disable dvmrp** below, to enable and disable DVMRP on the Switch.

Parameters None.

Restrictions Only administrator-level users can issue this command.

Example Usage:

To enable DVMRP:

DXS-3326GSR:4#enable dvmrp

Command: enable dvmrp

Success.

DXS-3326GSR:4#

disable dvmrp

Purpose Used to disable DVMRP.

Syntax **disable dvmrp**

Description This command, in combination with the **enable dvmrp** above, to enable and disable DVMRP on the Switch.

disable dvmrp

	to enable and disable DVMRP on the Switch.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Example Usage:

To disable DVMRP:

DXS-3326GSR:4#disable dvmrp

Command: disable dvmrp

Success.

DXS-3326GSR:4#

show dvmrp routing_table

Purpose	Used to display the current DVMRP routing table.
Syntax	show dvmrp routing table [ipaddress <network_address>]
Description	The command is used to display the current DVMRP routing table.
Parameters	<i>ipaddress <network_address></i> – The IP address and netmask of the destination. You can specify the IP address and netmask information using the traditional format or the CIDR format. For example, 10.1.2.3/255.255.0.0 or 10.2.3.4/16.
Restrictions	None.

Example Usage:

To display DVMRP routing table:

DXS-3326GSR:4#show dvmrp routing_table

Command: show dvmrp routing_table

DVMRP Routing Table

Source Address/Netmask	Upstream Neighbor	Metric	Learned	Interface	Expire
-----	-----	---	-----	-----	-----
10.0.0.0/8	10.90.90.90	2	Local	System	-
20.0.0.0/8	20.1.1.1	2	Local	ip2	117
30.0.0.0/8	30.1.1.1	2	Dynamic	ip3	106

Total Entries: 3

DXS-3326GSR:4#

show dvmrp neighbor

Purpose	Used to display the DVMRP neighbor table.
Syntax	show dvmrp neighbor {ipif <ipif_name 12> ipaddress <network_address>}
Description	This command will display the current DVMRP neighbor table.
Parameters	<i><ipif_name 12></i> – The name of the IP interface for which you want to display the DVMRP neighbor table. <i>ipaddress <network_address></i> – The IP address and netmask of the destination. You can specify the IP address and netmask information using the traditional format or the CIDR format. For example, 10.1.2.3/255.255.0.0 or 10.2.3.4/16.
Restrictions	None.

Example Usage:

To display DVMRP neighbor table:

DXS-3326GSR:4#show dvmrp neighbor

Command: show dvmrp neighbor

DVMRP Neighbor Address Table

Interface	Neighbor Address	Generation ID	Expire Time
-----	-----	-----	-----
System	10.2.1.123	2	250

Total Entries: 1

DXS-3326GSR:4#

show dvmrp nexthop

Purpose	Used to display the current DVMRP routing next hop table.
Syntax	show dvmrp nexthop {ipaddress <network_address> ipif <ipif_name 12>}
Description	This command will display the DVMRP routing next hop table.
Parameters	<i>ipaddress <network_address></i> – The IP address and netmask of the destination. You can specify the IP address and netmask information using the traditional format or the CIDR format. For example, 10.1.2.3/255.255.0.0 or 10.2.3.4/16. <i>ipif <ipif_name 12></i> – The name of the IP interface for which you want to display the current DVMRP routing next hop table.
Restrictions	None.

Example Usage:

To display DVMRP routing next hop table:

DXS-3326GSR:4#show dvmrp nexthop

Command: show dvmrp nexthop

Source IP Address/Netmask	Interface Name	Type
-----	-----	-----
10.0.0.0/8	ip2	Leaf
10.0.0.0/8	ip3	Leaf
20.0.0.0/8	System	Leaf
20.0.0.0/8	ip3	Leaf
30.0.0.0/8	System	Leaf
30.0.0.0/8	ip2	Leaf

Total Entries: 6

DXS-3326GSR:4#

show dvmrp

Purpose	Used to display the current DVMRP settings on the Switch.
Syntax	show dvmrp {<ipif_name 12>}
Description	The command will display the current DVMRP configurations set on the Switch.
Parameters	<ipif_name 12> – Using this parameter with this command will display the DVRMP configurations for the specified IP interface.
Restrictions	None.

Example Usage:

To show DVMRP configurations:

```

DXS-3326GSR:4#show dvmrp
Command: show dvmrp

DVMRP Global State : Disabled

Interface  IP Address      Neighbor Timeout  Probe  Metric  State
-----  -
System    10.90.90.90/8   35               10     1       Disabled

Total Entries: 1

DXS-3326GSR:4#

```

PIM COMMANDS

The PIM commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
config pim	[ipif <ipif_name 12> all] { hello <sec 1-18724> jp_interval <sec 1-18724> state [enable disable] }
enable pim	
disable pim	
show pim neighbor	{ipif <ipif_name 12> ipaddress <network_address>}
show pim	{ipif <ipif_name 12>}

Each command is listed, in detail, in the following sections.

config pim	
Purpose	Used to configure PIM settings for the Switch or for specified IP interfaces.
Syntax	config pim [ipif <ipif_name 12> all] { hello <sec 1-18724> jp_interval <sec 1-18724> state [enable disable]}
Description	The config pim command is used to configure PIM settings and enable or disable PIM settings for specified IP interfaces. PIM must also be globally enabled to function (see enable pim).
Parameters	<i>ipif <ipif_name 12></i> – Name assigned to the specific IP interface being configured for PIM settings. <i>all</i> – Used to configure PIM settings for all IP interfaces. <i>hello <sec 1-18724></i> - The time, in seconds, between issuing hello packets to find neighboring routers. <i>jp_interval <sec 1-18724></i>– The join/prune interval is the time value (seconds) between transmitting (flooding to all interfaces) multicast messages to downstream routers, and automatically ‘pruning’ a branch from the multicast delivery tree. The <i>jp_interval</i> is also the interval used by the router to automatically remove prune information from a branch of a multicast delivery tree and begin to flood multicast messages to all branches of that delivery tree. These two actions are equivalent. The range is between 1 and 18724 seconds. The default is 60 seconds. <i>state [enable disable]</i> – This can enable or disable PIM for the specified IP interface. The default is disabled. Note that PIM settings must also be enabled globally for the Switch with the enable pim described below for PIM to operate on any configured IP interfaces.
Restrictions	Only administrator-level users can issue this command.

Usage Example:

To configure PIM settings for IP interface “System”:

```
DXS-3326GSR:4#config pim ipif System hello 35 jp_interval 70 state
enable
Command: config pim ipif System hello 35 jp_interval 70 state enable

Success.

DXS-3326GSR:4#
```

enable pim

Purpose	Used to enable PIM function on the Switch.
Syntax	enable pim
Description	This command will enable PIM for the Switch. PIM settings must first be configured for specific IP interfaces using the config pim command.
Parameters	None.
Restrictions	Only administrator-level users can use this command.

Usage Example:

To enable PIM as previously configured on the Switch:

```
DXS-3326GSR:4#enable pim
Command: enable pim

Success.

DXS-3326GSR:4#
```

disable pim

Purpose	Used to disable PIM function on the Switch.
Syntax	disable pim
Description	This command will disable PIM for the Switch. Any previously configured PIM settings will remain unchanged and may be enabled at a later time with the enable pim command.
Parameters	None.
Restrictions	Only administrator-level users can use this command.

Usage Example:

To disable PIM on the Switch:

```
DXS-3326GSR:4#disable pim
```

Command: disable pim

Success.

```
DXS-3326GSR:4#
```

show pim neighbor

Purpose	Used to display PIM neighbor router table entries.
Syntax	show pim neighbor {ipif <ipif_name 12> ipaddress <network_address>}
Description	This command will list current entries in the PIM neighbor table for a specified IP interface or destination router IP address.
Parameters	<i>ipif <ipif_name 12></i> – The name of an IP interface for which you want to view the PIM neighbor router table. <i>ipaddress <network_address></i> - The IP address and netmask of the destination routing device for which you want to view the neighbor router table. You can specify the IP address and netmask information using the traditional format or the CIDR format. For example, 10.1.2.3/255.255.0.0 or 10.2.3.4/16. If no parameters are specified, all PIM neighbor router tables are displayed.
Restrictions	None.

Example usage:

To display PIM settings as configured on the Switch:

```
DXS-3326GSR:4#show pim neighbor
```

Command: show pim neighbor

PIM Neighbor Address Table

Interface Name	Neighbor Address	Expire Time
----------------	------------------	-------------

-----	-----	-----
-------	-------	-------

System	10.48.74.122	5
--------	--------------	---

Total Entries : 1

```
DXS-3326GSR:4#
```

show pim

Purpose	Used to display current PIM configuration.
Syntax	show pim {ipif <ipif_name 12>}
Description	This command will list current PIM configuration settings for a specified IP interface or all IP interfaces.
Parameters	<i>ipif <ipif_name 12></i> – The name of an IP interface for which PIM settings are listed. If no parameters are specified, all PIM settings are displayed for all interfaces.
Restrictions	None.

Usage Example:

To display PIM settings as configured on the Switch:

```

DXS-3326GSR:4#show pim
Command: show pim

PIM Global State : Disabled

PIM-DM Interface Table

Interface      IP Address      Hello      Join/Prune
-----      -
System        10.90.90.90/8   35         60         Enabled

Total Entries : 1

DXS-3326GSR:4#

```

IP MULTICASTING COMMANDS

The IP multicasting commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
show ipmc cache	{group <group>} {ipaddress <network_address>}
show ipmc	{ipif <ipif_name 12> [inactive pim dvmrp]}

Each command is listed, in detail, in the following sections.

show ipmc cache

Purpose	Used to display the current IP multicast forwarding cache.
Syntax	show ipmc cache {group <group>} {ipaddress <network_address>}
Description	This command will display the current IP multicast forwarding cache.
Parameters	<i>group <group></i> – The multicast group IP address. <i>ipaddress <network_address></i> – The IP address and netmask of the source. You can specify the IP address and netmask information using the traditional format or the CIDR format. For example, 10.1.2.3/255.255.0.0 or 10.2.3.4/16.
Restrictions	None.

Usage Example:

To display the current IP multicast forwarding cache:

DXS-3326GSR:4#show ipmc cache

Command: show ipmc cache

Multicast Group	Source Address/Netmask	Upstream Neighbor	Expire Time	Routing Protocol
-----	-----	-----	-----	-----
224.1.1.1	10.48.74.121/32	10.48.75.63	30	dvmrp
224.1.1.1	20.48.74.25 /32	20.48.75.25	20	dvmrp
224.1.2.3	10.48.75.3 /3	10.48.76.6	30	dvmrp

Total Entries: 3

DXS-3326GSR:4#

show ipmc

Purpose	Used to display the IP multicast interface table.
Syntax	show ipmc {ipif <ipif_name 12> protocol [inactive pim dvmrp]}
Description	This command will display the current IP multicast interface table.
Parameters	<i><ipif_name 12></i> – The name of the IP interface for which you want to display the IP multicast interface table for. <i>protocol</i> – Allows the user to specify whether or not to use one of the available protocols to display the IP multicast interface table. For example, if DVMRP is specified, the table will display only those entries that are related to the DVMRP protocol. ▪ <i>inactive</i> – Specifying this parameter will display only those entries that are inactive. ▪ <i>pim</i> - Specifying this parameter will display only those entries that are related to the PIM protocol. ▪ <i>dvmrp</i> – Specifying this parameter will display only those entries that are related to the DVMRP protocol.
Restrictions	None.

Usage Example

To display the current IP multicast interface table by DVMRP entry:

DXS-3326GSR:4#show ipmc ipif System protocol dvmrp

Command: show ipmc ipif System protocol dvmrp

Interface Name	IP Address	Multicast Routing
-----------------------	-------------------	--------------------------

-----	-----	-----
-------	-------	-------

System	10.90.90.90	DVMRP
---------------	--------------------	--------------

Total Entries: 1

DXS-3326GSR:4#

MD5 CONFIGURATION COMMANDS

The MD5 configuration commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
create md5 key	<key_id 1-255> <password 16>
config md5 key	<key_id 1-255> <password 16>
delete md5 key	<key_id 1-255>
show md5 key	<key_id 1-255>

Each command is listed, in detail, in the following sections.

create md5 key

Purpose	Used to create a new entry in the MD5 key table.
Syntax	create md5 key <key_id 1-255> <password 16>
Description	This command is used to create an entry for the MD5 key table.
Parameters	<key_id 1-255> – The MD5 key ID. The user may enter a key ranging from 1 to 255. <password> – An MD5 password of up to 16 bytes.
Restrictions	Only administrator-level users can issue this command.

Usage Example

To create an entry in the MD5 key table:

```
DXS-3326GSR:4# create md5 key 1 dlink
```

```
Command: create md5 key 1 dlink
```

```
Success.
```

```
DXS-3326GSR:4#
```

config md5 key

Purpose	Used to enter configure the password for an MD5 key.
Syntax	config md5 key <key_id 1-255> <password 16>
Description	This command is used to configure an MD5 key and password.
Parameters	<key_id 1-255> – The previously defined MD5 key ID.

config md5 key

<password 16> – The user may change the MD5 password for the md5 key. A new password of up to 16 characters can be created.

Restrictions

Only administrator-level users can issue this command.

Usage Example

To configure an MD5 Key password:

```
DXS-3326GSR:4#config md5 key 1 taboo
```

```
Command: config md5 key 1 taboo
```

```
Success.
```

```
DXS-3326GSR:4#
```

delete md5 key**Purpose**

Used to delete an entry in the MD5 key table.

Syntax

delete md5 key <key_id 1-255>

Description

This command is used to delete a specific entry in the MD5 key table.

Parameters

<key_id 1-255> – The MD5 key ID the user wishes to delete.

Restrictions

Only administrator-level users can issue this command.

Usage Example

The delete an entry in the MD5 key table:

```
DXS-3326GSR:4# delete md5 key 1
```

```
Command: delete md5 key 1
```

```
Success.
```

```
DXS-3326GSR:4#
```

show md5**Purpose**

Used to display an MD5 key table.

Syntax

show md5 {key <key_id 1-255>}

Description

This command will display the current MD5 key table.

show md5

Parameters	<key_id 1-255> – The MD5 key ID to view this table by. Entering this command without this parameters will display all md5 keys set.
Restrictions	None.

Usage Example

To display the current MD5 key:

```
DXS-3326GSR:4#show md5
Command: show md5

MD5 Key Table Configurations

Key-ID   Key
-----
1        dlink
2        develop
3        fireball
4        intelligent

Total Entries: 4

DXS-3326GSR:4#
```

OSPF CONFIGURATION COMMANDS

The OSPF configuration commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
config ospf router_id	<ipaddr>
enable ospf	
disable ospf	
show ospf	
create ospf area	<area_id> type [normal stub {stub_summary [enable disable] metric <value 0-65535>}]
delete ospf area	<area_id>
config ospf area	<area_id> type [normal stub {stub_summary [enable disable] metric <value 0-65535>}]
show ospf area	{<area_id>}
create ospf host_route	<ipaddr> {area <area_id> metric <value 1-65535>}
delete ospf host_route	<ipaddr>
config ospf host_route	<ipaddr> {area <area_id> metric <value 1-65535>}
show ospf host_route	<ipaddr>
create ospf aggregation	<area_id> <network_address> lsdb_type summary {advertise [enabled disabled]}
delete ospf aggregation	<area_id> <network_address> lsdb_type summary
config ospf aggregation	<area_id> <network_address> lsdb_type summary {advertise [enable disable]}
show ospf aggregation	<area_id>
show ospf lsdb	{area <area_id> advertise_router <ipaddr> type [rtrlink netlink summary assummary asexmlink]}
show ospf neighbor	<ipaddr>
show ospf virtual_neighbor	{<area_id> <neighbor_id>}
config ospf ipif	<ipif_name 12> {area <area_id> priority <value> hello_interval <sec 1-65535> dead_interval <sec 1-65535> authentication [none simple <password 8> md5 <key_id 1-255>] metric <value 1-65535> state [enable disable]}
config ospf all	{area <area_id> priority <value> hello_interval <1-65535 sec> dead_interval <1-65535 sec> authentication [none simple <password 8> md5 <key_id 1-255>] metric <value 1-65535> state [enable disable]}

Command	Parameters
show ospf ipif	<ipif_name 12>
show ospf all	
create ospf virtual_link	<area_id> <neighbor_id> {hello_interval <sec 1-65535> dead_interval <sec 1-65535> authentication [none simple <password 8> md5 <key_id 1-255>]}
config ospf virtual_link	<area_id> <neighbor_id> {hello_interval <sec 1-65535> dead_interval <sec 1-65535> authentication [none simple <password 8> md5 <key_id 1-255>]}
delete ospf virtual_link	<area_id> <neighbor_id>
show ospf virtual_link	<area_id> <neighbor_id>

Each command is listed, in detail, in the following sections.

config ospf router_id

Purpose	Used to configure the OSPF router ID.
Syntax	config ospf router_id <ipaddr>
Description	This command is used to configure the OSPF router ID.
Parameters	<ipaddr> – The IP address of the OSPF router.
Restrictions	Only administrator-level users can issue this command.

Usage Example

To configure the OSPF router ID:

```

DXS-3326GSR:4#config ospf router_id 10.48.74.122
Command: config ospf router_id 10.48.74.122

Success.

DXS-3326GSR:4#
```

enable ospf

Purpose	Used to enable OSPF on the Switch.
Syntax	enable ospf
Description	This command, in combination with the disable ospf command below, is used to enable and disable OSPF on the Switch.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Usage Example

To enable OSPF on the Switch:

```
DXS-3326GSR:4#enable ospf
```

```
Command: enable ospf
```

```
Success.
```

```
DXS-3326GSR:4#
```

disable ospf

Purpose	Used to disable OSPF on the Switch.
Syntax	disable ospf
Description	This command, in combination with the enable ospf command above, is used to enable and disable OSPF on the Switch.
Parameters	None.
Restrictions	Only administrator-level users can issue this command.

Usage Example

To disable OSPF on the Switch:

```
DXS-3326GSR:4#disable ospf
```

```
Command: disable ospf
```

```
Success.
```

```
DXS-3326GSR:4#
```

show ospf

Purpose	Used to display the current OSPF state on the Switch.
Syntax	show ospf
Description	This command will display the current state of OSPF on the Switch, divided into the following categories: - General OSPF settings - OSPF Interface settings - OSPF Area settings - OSPF Virtual Interface settings - OSPF Area Aggregation settings

show ospf

OSPF Host Route settings

Parameters	None.
Restrictions	None.

Usage Example:

To show OSPF state:

DXS-3326GSR:4#show ospf

Command: show ospf

OSPF Router ID : 10.1.1.2

State : Enabled

OSPF Interface Settings

Interface	IP Address	Area ID	State	Link Status	Metric
-----	-----	-----	-----	-----	-----
System	10.90.90.90/8	0.0.0.0	Disabled	Link DOWN	1
ip2	20.1.1.1/8	0.0.0.0	Disabled	Link DOWN	1
ip3	30.1.1.1/8	0.0.0.0	Disabled	Link DOWN	1

Total Entries : 3

OSPF Area Settings

Area ID	Type	Stub Import Summary LSA	Stub Default Cost
-----	-----	-----	-----
0.0.0.0	Normal	None	None
10.0.0.0	Normal	None	None
10.1.1.1	Normal	None	None
20.1.1.1	Stub	Enabled	1

Total Entries : 4

Virtual Interface Configuration

Transit Area ID	Virtual Neighbor Router	Hello Interval	Dead Interval	Authentication	Link Status
-----------------	-------------------------	----------------	---------------	----------------	-------------

-----	-----	-----	-----	-----	-----
10.0.0.0	20.0.0.0	10	60	None	DOWN
10.1.1.1	20.1.1.1	10	60	None	DOWN

Total Entries : 2

OSPF Area Aggregation Settings

Area ID	Aggregated Network Address	LSDB Type	Advertise
-----	-----	-----	-----

Total Entries : 0

OSPF Host Route Settings

Host Address	Metric	Area ID
-----	-----	-----
10.3.3.3	1	10.1.1.1

Total Entries : 1

DXS-3326GSR:4#

create ospf area

Purpose	Used to configure OSPF area settings.
Syntax	create ospf area <area_id> type [normal stub {stub_summary [enable disable] metric <value 0-65535>}]
Description	This command is used to create an OSPF area and configure its settings.
Parameters	<area_id> – The OSPF area ID. The user may enter a 32-bit number in the form of an IP address (xxx.xxx.xxx.xxx) that uniquely identifies the OSPF area in the OSPF domain. type [normal stub] – The OSPF area mode of operation – stub or normal. stub_summary [enable disable] – Enables or disables the OSPF area to import summary LSA advertisements. metric <value 0-65535> – The OSPF area cost between 0 and 65535. 0 denotes that the value will be automatically assigned. The default setting is 0.

create ospf area

Restrictions	Only administrator-level users can issue this command.
--------------	--

Usage Example:

To create an OSPF area:

DXS-3326GSR:4#create ospf area 10.48.74.122 type normal

Command: create ospf area 10.48.74.122 type normal

Success.

DXS-3326GSR:4#

delete ospf area

Purpose	Used to delete an OSPF area.
Syntax	delete ospf area <area_id>
Description	This command is used to delete an OSPF area.
Parameters	<area_id> – A 32-bit number in the form of an IP address (xxx.xxx.xxx.xxx) that uniquely identifies the OSPF area in the OSPF domain.
Restrictions	Only administrator-level users can issue this command.

Usage Example:

To delete an OSPF area:

DXS-3326GSR:4#delete ospf area 10.48.74.122

Command: delete ospf area 10.48.74.122

Success.

DXS-3326GSR:4#

config ospf area

Purpose	Used to configure an OSPF area's settings.
Syntax	config ospf area <area_id> type [normal stub {stub_summary [enable disable] metric <value 0-65535>}]
Description	This command is used to configure an OSPF area's settings.
Parameters	<area_id> – The OSPF area ID. The user may enter a 32-bit number in the form of an IP address (xxx.xxx.xxx.xxx) that

config ospf area

uniquely identifies the OSPF area in the OSPF domain.

type [normal | stub] – Allows the specification of the OSPF mode of operation – stub or normal.

stub_summary [enable | disable] – Allows the OSPF area import of LSA advertisements to be enabled or disabled.

metric <value 0-65535> – The OSPF area stub default cost.

Restrictions

Only administrator-level users can issue this command.

Usage Example

To configure an OSPF area's settings:

DXS-3326GSR:4#config ospf area 10.48.74.122 type stub stub_summary enable metric 1

Command: config ospf area 10.48.74.122 type stub stub_summary enable metric 1

Success.

DXS-3326GSR:4#

show ospf area**Purpose**

Used to display an OSPF area's configuration.

Syntax

show ospf area {<area_id>}

Description

This command will display the current OSPF area configuration.

Parameters

<area_id> – A 32-bit number in the form of an IP address (xxx.xxx.xxx.xxx) that uniquely identifies the OSPF area in the OSPF domain.

Restrictions

None.

Usage Example

To display an OSPF area's settings:

DXS-3326GSR:4#show ospf area

Command: show ospf area

Area Id	Type	Stub	Import Summary LSA	Stub	Default Cost
0.0.0.0	Normal	None		None	None
10.48.74.122	Stub	Enabled		Enabled	1

Total Entries: 2

DXS-3326GSR:4#

create ospf host_route

Purpose	Used to configure OSPF host route settings.
Syntax	create ospf host_route <ipaddr> {area <area_id> metric <value 1-65535>}
Description	This command is used to configure the OSPF host route settings.
Parameters	<ipaddr> – The host's IP address. <area_id> – A 32-bit number in the form of an IP address (xxx.xxx.xxx.xxx) that uniquely identifies the OSPF area in the OSPF domain. metric <value 1-65535> – A metric between 1 and 65535, which will be advertised.
Restrictions	Only administrator-level users can issue this command.

Usage Example

To configure the OSPF host route settings:

DXS-3326GSR:4#create ospf host_route 10.48.74.122 area 10.1.1.1 metric 2

Command: create ospf host_route 10.48.74.122 area 10.1.1.1 metric 2

Success.

DXS-3326GSR:4#

delete ospf host_route

Purpose	Used to delete an OSPF host route.
Syntax	delete ospf host_route <ipaddr>

delete ospf host_route

Description	This command is used to delete an OSPF host route.
Parameters	<i><ipaddr></i> – The IP address of the OSPF host.
Restrictions	Only administrator-level users can issue this command.

Usage Example

To delete an OSPF host route:

```
DXS-3326GSR:4#delete ospf host_route 10.48.74.122
```

```
Command: delete ospf host_route 10.48.74.122
```

```
Success.
```

```
DXS-3326GSR:4#
```

config ospf host_route

Purpose	Used to configure OSPF host route settings.
Syntax	config ospf host_route <ipaddr> {area <area_id> metric <value>}
Description	This command is used to configure an OSPF host route settings.
Parameters	<i><ipaddr></i> – The IP address of the host. <i><area_id></i> – A 32-bit number in the form of an IP address (xxx.xxx.xxx.xxx) that uniquely identifies the OSPF area in the OSPF domain. <i><value></i> – A metric between 1 and 65535 that will be advertised for the route.
Restrictions	Only administrator-level users can issue this command.

Usage Example

To configure an OSPF host route:

```
DXS-3326GSR:4#config ospf host_route 10.48.74.122 area 10.1.1.1 metric 2
```

```
Command: config ospf host_route 10.48.74.122 area 10.1.1.1 metric 2
```

```
Success.
```

```
DXS-3326GSR:4#
```

show ospf host_route

Purpose	Used to display the current OSPF host route table.
Syntax	show ospf host_route {<ipaddr>}
Description	This command will display the current OSPF host route table.
Parameters	<ipaddr> – The IP address of the host.
Restrictions	None.

Usage Example:

To display the current OSPF host route table:

DXS-3326GSR:4#show ospf host_route

Command: show ospf host_route

Host Address	Metric	Area_ID
10.48.73.21	2	10.1.1.1
10.48.74.122	1	10.1.1.1

Total Entries: 2

DXS-3326GSR:4#

create ospf aggregation

Purpose	Used to configure OSPF area aggregation settings.
Syntax	create ospf aggregation <area_id> <network_address> lsdb_type summary {advertise [enable disable]}
Description	This command is used to create an OSPF area aggregation.
Parameters	<area_id> – A 32-bit number in the form of an IP address (xxx.xxx.xxx.xxx) that uniquely identifies the OSPF area in the OSPF domain. <network_address> – The 32-bit number in the form of an IP address that uniquely identifies the network that corresponds to the OSPF Area. lsdb_type summary – The type of address aggregation. advertise [enable disable] – Allows for the advertisement trigger to be enabled or disabled.
Restrictions	Only administrator-level users can issue this command.

Usage Example:

To create an OSPF area aggregation:

```
DXS-3326GSR:4#create ospf aggregation 10.1.1.1 10.48.76.122/16
lsdb_type summary advertise enable

Command: create ospf aggregation 10.1.1.1 10.48.76.122/16
lsdb_type summary advertise enable

Success.

DXS-3326GSR:4#
```

delete ospf aggregation

Purpose	Used to delete an OSPF area aggregation configuration.
Syntax	delete ospf aggregation <area_id> <network_address> lsdb_type summary
Description	This command is used to delete an OSPF area aggregation configuration.
Parameters	<area_id> – A 32-bit number in the form of an IP address (xxx.xxx.xxx.xxx) that uniquely identifies the OSPF area in the OSPF domain. <network_address> – The 32-bit number in the form of an IP address that uniquely identifies the network that corresponds to the OSPF Area. lsdb_type summary – Specifies the type of address aggregation.
Restrictions	Only administrator-level users can issue this command.

Usage Example

To configure the OSPF area aggregation settings:

```
DXS-3326GSR:4#delete ospf aggregation 10.1.1.1 10.48.76.122/16 lsdb_type summary
Command: delete ospf aggregation 10.1.1.1 10.48.76..122/16 lsdb_type summary

Success.

DXS-3326GSR:4#
```

config ospf aggregation

Purpose	Used to configure the OSPF area aggregation settings.
Syntax	config ospf aggregation <area_id> <network_address> lsdb_type summary {advertise [enable disable]}
Description	This command is used to configure the OSPF area aggregation settings.

config ospf aggregation

	settings.
Parameters	<area_id> – A 32-bit number in the form of an IP address (xxx.xxx.xxx.xxx) that uniquely identifies the OSPF area in the OSPF domain. <network_address> – The 32-bit number in the form of an IP address that uniquely identifies the network that corresponds to the OSPF Area. lsdb_type summary – Specifies the type of address aggregation. advertise [enable disable] – Allows for the advertisement trigger to be enabled or disabled.
Restrictions	Only administrator-level users can issue this command.

Usage Example

To configure the OSPF area aggregation settings:

```
DXS-3326GSR:4#config ospf aggregation 10.1.1.1 10.48.76.122/16 lsdb_type  
summary advertise enable
```

```
Command: config ospf aggregation 10.1.1.1 10.48.76.122/16 lsdb_type  
summary advertise enable
```

Success.

```
DXS-3326GSR:4#
```

show ospf aggregation

Purpose	Used to display the current OSPF area aggregation settings.
Syntax	show ospf aggregation {<area_id>}
Description	This command will display the current OSPF area aggregation settings.
Parameters	<area_id> – Enter this parameter to view this table by a specific OSPF area ID.
Restrictions	None.

Usage Example

To display OSPF area aggregation settings:

DXS-3326GSR:4#show ospf aggregation

Command: show ospf aggregation

OSPF Area Aggregation Settings

Area ID	Aggregated Network Address	LSDB Type	Advertise
-----	-----	-----	-----
10.1.1.1	10.0.0.0/8	Summary	Enabled
10.1.1.1	20.2.0.0/16	Summary	Enabled

Total Entries: 2

DXS-3326GSR:4#

show ospf lsdb

Purpose	Used to display the OSPF Link State Database (LSDB).
Syntax	show ospf lsdb {area_id <area_id> advertise_router <ipaddr> type [rtrlink netlink summary assummary asexmlink]}
Description	This command will display the current OSPF Link State Database (LSDB).
Parameters	<i>area_id <area_id></i> – A 32-bit number in the form of an IP address (xxx.xxx.xxx.xxx) that uniquely identifies the OSPF area in the OSPF domain. <i>advertise_router <ipaddr></i> – The router ID of the advertising router. <i>type [rtrlink netlink summary assummary asexmlink]</i> – The type of link.
Restrictions	None.



NOTE: When this command displays a “*” (a star symbol) in the OSPF LSDB table for the *area_id* or the *Cost*, this is interpreted as “no area ID” for external LSAs, and as “no cost given” for the advertised link.

Usage Example:

To display the link state database of OSPF:

DXS-3326GSR:4#show ospf lsdb

Command: show ospf lsdb

Area ID	LSDB Type	Advertising Router ID	Link State ID	Cost	Sequence Number
0.0.0.0	RTRLink	50.48.75.73	50.48.75.73	*	0x80000002
0.0.0.0	Summary	50.48.75.73	10.0.0.0/8	1	0x80000001
1.0.0.0	RTRLink	50.48.75.73	50.48.75.73	*	0x80000001
1.0.0.0	Summary	50.48.75.73	40.0.0.0/8	1	0x80000001
1.0.0.0	Summary	50.48.75.73	50.0.0.0/8	1	0x80000001
*	ASExtLink	50.48.75.73	1.2.0.0/16	20	0x80000001

Total Entries: 5

DXS-3326GSR:4#

show ospf neighbor

Purpose	Used to display the current OSPF neighbor router table.
Syntax	show ospf neighbor {<ipaddr>}
Description	This command will display the current OSPF neighbor router table.
Parameters	<ipaddr> – The IP address of the neighbor router.
Restrictions	None.

Usage Example

To display the current OSPF neighbor router table:

DXS-3326GSR:4#show ospf neighbor

Command: show ospf neighbor

IP Address of Neighbor	Router ID of Neighbor	Neighbor Priority	Neighbor State
10.48.74.122	10.2.2.2	1	Initial

DXS-3326GSR:4#

show ospf virtual neighbor

Purpose	Used to display the current OSPF virtual neighbor router table.
Syntax	show ospf virtual_neighbor {<area_id> <neighbor id>}
Description	This command will display the current OSPF virtual neighbor router table.
Parameters	<area_id> – A 32-bit number in the form of an IP address (xxx.xxx.xxx.xxx) that uniquely identifies the OSPF area in the OSPF domain. <neighbor_id> – The OSPF router ID for the neighbor. This is a 32-bit number in the form of an IP address (xxx.xxx.xxx.xxx) that uniquely identifies the remote area's Area Border Router.
Restrictions	None.

Usage Example

To display the current OSPF virtual neighbor table:

```
DXS-3326GSR:4#show ospf virtual_neighbor
Command: show ospf virtual_neighbor
```

Transit Area ID	Router ID of Virtual Neighbor	IP Address of Virtual Neighbor	Virtual Neighbor State
-----	-----	-----	-----
10.1.1.1	10.2.3.4	10.48.74.111	Exchange

Total Entries : 1

```
DXS-3326GSR:4#
```

config ospf ipif

Purpose	Used to configure the OSPF interface settings.
Syntax	config ospf ipif <ipif_name 12> {area <area_id> priority <value> hello_interval <sec 1-65535> dead_interval <sec 1-65535> authentication [none simple <password 8> md5 <key_id 1-255>] metric <value 1-65535> state [enable disable]}
Description	This command is used to configure the OSPF interface settings.
Parameters	<ipif_name 12> – The name of the IP interface. area <area_id> - A 32-bit number in the form of an IP address (xxx.xxx.xxx.xxx) that uniquely identifies the OSPF area in the OSPF domain. priority <value> – The priority used in the election of the

config ospf ipif

Designated Router (DR). A number between 0 and 255.

hello_interval <sec 1-65535> – Allows the specification of the interval between the transmission of OSPF Hello packets, in seconds. Between 1 and 65535 seconds can be specified. The Hello Interval, Dead Interval, Authorization Type, and Authorization Key should be the same for all routers on the same network.

dead_interval <sec 1-65535> – Allows the specification of the length of time between the receipt of Hello packets from a neighbor router before the selected area declares that router down. An interval between 1 and 65535 seconds can be specified. The Dead Interval must be evenly divisible by the Hello Interval.

metric <value 1-65535> – The interface metric (1 to 65535). Entering a 0 will allow automatic calculation of the metric.

authentication – Enter the type of authentication preferred. The user may choose between:

- *none* – Choosing this parameter will require no authentication.
- *simple* <password 8> – Choosing this parameter will set a simple authentication which includes a case-sensitive password of no more than 8 characters.
- *md5* <key_id 1-255> – Choosing this parameter will set authentication based on md5 encryption. A previously configured MD5 key ID (1 to 255) is required.

metric <value 1-65535> – This field allows the entry of a number between 1 and 65,535 that is representative of the OSPF cost of reaching the selected OSPF interface. The default metric is 1.

state [*enable* | *disable*] – Used to enable or disable this function.

Restrictions

Only administrator-level users can issue this command.

Usage Example

To configure OSPF interface settings:

```
DXS-3326GSR:4#config ospf ipif System priority 2 hello_interval 15
metric 2 state enable
```

```
Command: config ospf ipif System priority 2 hello_interval 15
metric 2 state enable
```

```
Success.
```

```
DXS-3326GSR:4#
```

config ospf all

Purpose	Used to configure all of the OSPF interfaces on the Switch at one time.
Syntax	config ospf all {area <area_id> priority <value> hello_interval <sec 1-65535> dead_interval <sec 1-65535> authentication [none simple <password 8> md5 <key_id 1-255>] metric <value 1-65535> state [enable disable]}
Description	This command is used to configure all of the OSPF interfaces on the Switch, using a single group of parameters, at one time.
Parameters	<i>area <area_id></i> - A 32-bit number in the form of an IP address (xxx.xxx.xxx.xxx) that uniquely identifies the OSPF area in the OSPF domain. <i>priority <value></i> - The priority used in the election of the Designated Router (DR). A number between 0 and 255. <i>hello_interval <sec 1-65535></i> - Allows the specification of the interval between the transmission of OSPF Hello packets, in seconds. Between 1 and 65535 seconds can be specified. The Hello Interval, Dead Interval, Authorization Type, and Authorization Key should be the same for all routers on the same network. <i>dead_interval <sec 1-65535></i> - Allows the specification of the length of time between the receipt of Hello packets from a neighbor router before the selected area declares that router down. An interval between 1 and 65535 seconds can be specified. The Dead Interval must be evenly divisible by the Hello Interval. <i>metric <value 1-65535></i> - The interface metric (1 to 65535). Entering a 0 will allow automatic calculation of the metric. <i>authentication</i> - Enter the type of authentication preferred. The user may choose between: ▪ <i>none</i> - Choosing this parameter will require no authentication. ▪ <i>simple <password 8></i> - Choosing this parameter will set a simple authentication which includes a case-sensitive password of no more than 8 characters. ▪ <i>md5 <key_id 1-255></i> - Choosing this parameter will set authentication based on md5 encryption. A previously configured MD5 key ID (1 to 255) is required. <i>metric <value 1-65535></i> - This field allows the entry of a number between 1 and 65,535 that is representative of the OSPF cost of reaching the selected OSPF interface. The default metric is 1. <i>state [enable disable]</i> - Used to enable or disable this function.
Restrictions	Only administrator-level users can issue this command.

Usage Example

To configure all of the OSPF interfaces on the Switch with a single group of parameters:

```
DXS-3326GSR:4#config ospf all state enable
```

```
Command: config ospf all state enable
```

```
Success.
```

```
DXS-3326GSR:4#
```

show ospf ipif

Purpose	Used to display the current OSPF interface settings for the specified interface name.
Syntax	show ospf ipif {<ipif_name 12>}
Description	This command will display the current OSPF interface settings for the specified interface name.
Parameters	<ipif_name 12> – The IP interface name for which you want to display the current OSPF interface settings.
Restrictions	None.

Usage Example

To display the current OSPF interface settings, for a specific OSPF interface:

```
DXS-3326GSR:4#show ospf ipif ipif2
```

```
Command: show ospf ipif ipif2
```

Interface Name: ipif2	IP Address: 123.234.12.34/24 ((Link Up))
Network Medium Type: BROADCAST	Metric: 1
Area ID: 1.0.0.0	Administrative State: Enabled
Priority: 1	DR State: DR
DR Address: 123.234.12.34	Backup DR Address: None
Hello Interval: 10	Dead Interval: 40
Transmit Delay: 1	Retransmit Time: 5
Authentication: None	

```
Total Entries: 1
```

```
DXS-3326GSR:4#
```

show ospf all

Purpose	Used to display the current OSPF settings of all the OSPF interfaces on the Switch.
Syntax	show ospf all
Description	This command will display the current OSPF settings for all OSPF interfaces on the Switch.

show ospf all

interfaces on the Switch.

Parameters None.

Restrictions None.

Usage Example:

To display the current OSPF interface settings, for all OSPF interfaces on the Switch:

DXS-3326GSR:4#show ospf all

Command: show ospf all

Interface Name: System

Network Medium Type: BROADCAST

Area ID: 0.0.0.0

Priority: 1

DR Address: 10.42.73.10

Hello Interval: 10

Transmit Delay: 1

Authentication: None

IP Address: 10.42.73.10/8 (Link Up)

Metric: 1

Administrative State: Enabled

DR State: DR

Backup DR Address: None

Dead Interval: 40

Retransmit Time: 5

Interface Name: ipif2

Network Medium Type: BROADCAST

Area ID: 1.0.0.0

Priority: 1

DR Address: 123.234.12.34

Hello Interval: 10

Transmit Delay: 1

Authentication: None

IP Address: 123.234.12.34/24 ((Link Up)

Metric: 1

Administrative State: Enabled

DR State: DR

Backup DR Address: None

Dead Interval: 40

Retransmit Time: 5

Total Entries: 2

DXS-3326GSR:4#

create ospf virtual_link

Purpose Used to create an OSPF virtual interface.

Syntax **create ospf virtual_link <area_id> <neighbor_id>**
{hello_interval <sec 1-65535> | dead_interval <sec 1-65535> |
authentication [none | simple <password 8> | md5 <key_id 1-
255>]}

Description This command is used to create an OSPF virtual interface.

Parameters **<area_id>** – A 32-bit number in the form of an IP address (xxx.xxx.xxx.xxx) that uniquely identifies the OSPF area in the OSPF domain.

<neighbor_id> – The OSPF router ID for the remote area. This is a 32-bit number in the form of an IP address (xxx.xxx.xxx.xxx) that uniquely identifies the remote area's Area Border Router.

create ospf virtual_link

	The router ID of the neighbor router.
	<i>hello_interval</i> <sec 1-65535> – Allows the specification of the interval between the transmission of OSPF Hello packets, in seconds. Between 1 and 65535 seconds can be specified. The Hello Interval, Dead Interval, Authorization Type, and Authorization Key should be the same for all routers on the same network.
Parameters	<i>dead_interval</i> <sec 1-65535> – Allows the specification of the length of time between the receipt of Hello packets from a neighbor router before the selected area declares that router down. An interval between 1 and 65535 seconds can be specified. The Dead Interval must be evenly divisible by the Hello Interval. <i>authentication</i> – Enter the type of authentication preferred. The user may choose between: ▪ <i>none</i> – Choosing this parameter will require no authentication. ▪ <i>simple</i> <password 8> – Choosing this parameter will set a simple authentication which includes a case-sensitive password of no more than 8 characters. <i>md5</i> <key_id 1-255> – Choosing this parameter will set authentication based on md5 encryption. A previously configured MD5 key ID (1 to 255) is required.
Restrictions	Only administrator-level users can issue this command.

Usage Example

To create an OSPF virtual interface:

```
DXS-3326GSR:4#create ospf virtual_link 10.1.12 20.1.1.1 hello_interval 10
Command: create ospf virtual_link 10.1.12 20.1.1.1 hello_interval 10

Success.

DXS-3326GSR:4#
```

config ospf virtual_link

Purpose	Used to configure the OSPF virtual interface settings.
Syntax	config ospf virtual_link <area_id> <neighbor_id> { <i>hello_interval</i> <sec 1-65535> <i>dead_interval</i> <sec 1-65535> <i>authentication</i> [none simple <password 8> <i>md5</i> <key_id 1-255>]}
Description	This command is used to configure the OSPF virtual interface settings.

config ospf virtual_link**Parameters**

<area_id> – A 32-bit number in the form of an IP address (xxx.xxx.xxx.xxx) that uniquely identifies the OSPF area in the OSPF domain.

<neighbor_id> – The OSPF router ID for the remote area. This is a 32-bit number in the form of an IP address (xxx.xxx.xxx.xxx) that uniquely identifies the remote area's Area Border Router.

hello_interval <sec 1-65535> – Allows the specification of the interval between the transmission of OSPF Hello packets, in seconds. Between 1 and 65535 seconds can be specified. The Hello Interval, Dead Interval, Authorization Type, and Authorization Key should be the same for all routers on the same network.

dead_interval <sec 1-65535> – Allows the specification of the length of time between the receipt of Hello packets from a neighbor router before the selected area declares that router down. An interval between 1 and 65535 seconds can be specified. The Dead Interval must be evenly divisible by the Hello Interval.

authentication – Enter the type of authentication preferred. The user may choose between:

- **none** – Choosing this parameter will require no authentication.
- **simple <password 8>** – Choosing this parameter will set a simple authentication which includes a case-sensitive password of no more than 8 characters.
- **md5 <key_id 1-255>** – Choosing this parameter will set authentication based on md5 encryption. A previously configured MD5 key ID (1 to 255) is required.

Restrictions

Only administrator-level users can issue this command.

Usage Example

To configure the OSPF virtual interface settings:

```
DXS-3326GSR:4#config ospf virtual_link 10.1.1.2 20.1.1.1 hello_interval 10
```

```
Command: config ospf virtual_link 10.1.1.2 20.1.1.1 hello_interval 10
```

```
Success.
```

```
DXS-3326GSR:4#
```

delete ospf virtual_link**Purpose**

Used to delete an OSPF virtual interface.

delete ospf virtual_link

Syntax	delete ospf virtual_link <area_id> <neighbor_id>
Description	This command will delete an OSPF virtual interface from the Switch.
Parameters	<area_id> – A 32-bit number in the form of an IP address (xxx.xxx.xxx.xxx) that uniquely identifies the OSPF area in the OSPF domain. <neighbor_id> – The OSPF router ID for the remote area. This is a 32-bit number in the form of an IP address (xxx.xxx.xxx.xxx) that uniquely identifies the remote area's Area Border Router. The router ID of the neighbor router.
Restrictions	Only administrator-level users can issue this command.

Usage Example:

To delete an OSPF virtual interface from the Switch:

DXS-3326GSR:4#delete ospf virtual_link 10.1.12 20.1.1.1

Command: delete ospf virtual_link 10.1.12 20.1.1.1

Success.

DXS-3326GSR:4#

show ospf virtual_link

Purpose	Used to display the current OSPF virtual interface configuration.
Syntax	show ospf virtual_link {<area_id> <neighbor_id>}
Description	This command will display the current OSPF virtual interface configuration.
Parameters	<area_id> – A 32-bit number in the form of an IP address (xxx.xxx.xxx.xxx) that uniquely identifies the OSPF area in the OSPF domain. <neighbor_id> – The OSPF router ID for the remote area. This is a 32-bit number in the form of an IP address (xxx.xxx.xxx.xxx) that uniquely identifies the remote area's Area Border Router. This is the router ID of the neighbor router.
Restrictions	None.

Usage Example:

To display the current OSPF virtual interface configuration:

DXS-3326GSR:4#show ospf virtual_link

Transit Area ID	Virtual Neighbor Router	Hello Interval	Dead Interval	Authentication	Link Status
10.0.0.0	20.0.0.0	10	60	None	DOWN

Total Entries: 1**DXS-3326GSR:4#**

ROUTE PREFERENCE COMMANDS

Route Preference is a way for routers to select the best path when there are two or more different routes to the same destination from two different routing protocols. The majority of routing protocols are not compatible when used in conjunction with each other. This Switch supports and may be configured for many routing protocols, as a stand alone switch or more importantly, in utilizing the stacking function and Single IP Management of the Switch. Therefore the ability to exchange route information and select the best path is essential to optimal use of the Switch and its capabilities.

The first decision the Switch will make in selecting the best path is to consult the Route Preference Settings table of the Switch. This table can be viewed using the **show route preference** command, and it holds the list of possible routing protocols currently implemented in the Switch, along with a reliability value which determines which routing protocol will be the most dependable to route packets. Below is a list of the default route preferences set on the Switch.

Route Type	Validity Range	Default Value
Local	0 – Permanently set on the Switch and unconfigurable.	0
Static	1 – 999	60
OSPF Intra	1 – 999	80
OSPF Inter	1 – 999	90
RIP	1 – 999	100
OSPF ExtT1	1 – 999	110
OSPF ExtT2	1 – 999	115

As shown above, *Local* will always be the first choice for routing purposes and the next most reliable path is *Static* due to the fact that it has the next lowest value. To set a higher reliability for a route, change its value to a number less than the value of a route preference that has a greater reliability value using the **config route preference** command. For example, if the user wishes to make RIP the most reliable route, the user can change its value to one that is less than the lowest value (Static - 60) or the user could change the other route values to more than 100.

The user should be aware of three points before configuring the route preference.

1. No two route preference values can be the same. Entering the same route preference may cause the Switch to crash due to indecision by the Switch.
2. If the user is not fully aware of all the features and functions of the routing protocols on the Switch, a change in the default route preference value may cause routing loops or black holes.
3. After changing the route preference value for a specific routing protocol, that protocol needs to be restarted because the previously learned routes have been dropped from the Switch. The Switch must learn the routes again before the new settings can take affect.

The Route Preference commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
config route preference	[static rip ospfIntra ospfInter ospfExt1 ospfExt2] <value 1-999>
show route preference	{[local static rip ospfIntra ospfInter ospfExt1 ospfExt2]}

Each command is listed, in detail, in the following sections.

config route preference

Purpose	Used to configure the route preference of each route type.
Syntax	config route preference [static rip ospfIntra ospfInter ospfExt1 ospfExt2] <value 1-999>
Description	This command is used to set the route preference value for each routing protocol listed. A lower value will denote a better chance that the specified protocol is the best path for routing packets.
Parameters	The user may set a preference value for a specific route by first choosing one of the following and then adding an alternate preference value: ▪ <i>static</i> – Choose this parameter if you wish to configure the preference value for the <i>static</i> route. ▪ <i>rip</i> - Choose this parameter if you wish to configure the preference value for the <i>RIP</i> route. ▪ <i>ospfIntra</i> - Choose this parameter if you wish to configure the preference value for the <i>OSPF Intra</i> route. ▪ <i>ospfInter</i> - Choose this parameter if you wish to configure the preference value for the <i>OSPF Inter</i> route. ▪ <i>ospfExtT1</i> - Choose this parameter if you wish to configure the preference value for the <i>OSPF ExtT1</i> route. ▪ <i>ospfExtT2</i> - Choose this parameter if you wish to configure the preference value for the <i>OSPF ExtT2</i> route. <value 1-999> - Enter a value between 1 and 999 to set the route preference for a particular route. The lower the value, the higher the chance the specified protocol will be chosen as the best path for routing packets.
Restrictions	Only administrator-level users can issue this command.

Example usage:

To configure the route preference value for RIP as 50:

DXS-3326GSR:4#config route preference rip 50

Command: config route preference rip 50

Success.

DXS-3326GSR:4#

show route preference

Purpose	Used to display the route preference of each route type.
---------	--

show route preference

Syntax	show route preference {[local static rip ospfIntra ospfInter ospfExt1 ospfExt2]}
Description	This command will display the Route Preference Settings table. The user may view all route preference settings by entering the command without any parameters or choose a specific type by adding the route parameter to the command.
Parameters	<i>local</i> – Enter this parameter if you wish to view the route preference settings for the <i>local</i> route. <i>static</i> - Enter this parameter if you wish to view the route preference settings for the <i>static</i> route. <i>rip</i> - Enter this parameter if you wish to view the route preference settings for the <i>RIP</i> route. <i>ospfIntra</i> - Enter this parameter if you wish to view the route preference settings for the <i>OSPF Intra</i> route. <i>ospfInter</i> - Enter this parameter if you wish to view the route preference settings for the <i>OSPF Inter</i> route. <i>ospfExtT1</i> - Enter this parameter if you wish to view the route preference settings for the <i>OSPF ExtT1</i> route. <i>ospfExtT2</i> - Enter this parameter if you wish to view the route preference settings for the <i>OSPF ExtT2</i> route. Entering this command with no parameters will display the route preference for all routes.
Restrictions	None.

Example usage:

To view the route preference values for all routes:

DXS-3326GSR:4# show route preference

Command: show route preference

Route Preference Settings

Route Type	Preference
------------	------------

-----	-----
-------	-------

RIP	100
OSPF Intra	80
STATIC	60
LOCAL	0
OSPF Inter	90
OSPF ExtT1	110
OSPF ExtT2	115

DXS-3326GSR:4#

Example usage:

To view the route preference values for the RIP route:

```
DXS-3326GSR:4# show route preference rip
```

```
Command: show route preference rip
```

Route Preference Settings

Route Type	Preference
-------------------	-------------------

-----	-----
-------	-------

RIP	100
------------	------------

```
DXS-3326GSR:4#
```

JUMBO FRAME COMMANDS

Certain switches can support jumbo frames (frames larger than the standard Ethernet frame size of 1518 bytes). To transmit frames of up to 9K (and 9004 bytes tagged), the user can increase the maximum transmission unit (MTU) size from the default of 1522 by enabling the Jumbo Frame command.

The jumbo frame commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
enable jumbo_frame	
disable jumbo_frame	
show jumbo_frame	

Each command is listed, in detail, in the following sections.

enable jumbo_frame

Purpose	Used to enable the jumbo frame function on the Switch.
Syntax	enable jumbo_frame
Description	This command will allow ethernet frames larger than 1536 bytes to be processed by the Switch. The maximum size of the jumbo frame may not exceed 9k.
Parameters	None.
Restrictions	None.

Example usage:

To enable the jumbo frame function on the Switch:

```
DXS-3326GSR:4#enable jumbo_frame
```

```
Command: enable jumbo_frame
```

```
Success.
```

```
DXS-3326GSR:4#
```

disable jumbo_frame

Purpose	Used to disable the jumbo frame function on the Switch.
Syntax	disable jumbo_frame
Description	This command will disable the jumbo frame function on the Switch.

disable jumbo_frame

Parameters	None.
Restrictions	None.

Example usage:

To enable the jumbo frame function on the Switch:

```
DXS-3326GSR:4#disable jumbo_frame
```

```
Command: disable jumbo_frame
```

```
Success.
```

```
DXS-3326GSR:4#
```

show jumbo_frame

Purpose	Used to show the status of the jumbo frame function on the Switch.
Syntax	show jumbo_frame
Description	This command will show the status of the jumbo frame function on the Switch.
Parameters	None.
Restrictions	None.

Usage Example:

To show the jumbo frame status currently configured on the Switch:

```
DXS-3326GSR:4#show jumbo_frame
```

```
Command: show jumbo_frame
```

```
Off.
```

```
DXS-3326GSR:4#
```

COMMAND HISTORY LIST

The command history list commands in the Command Line Interface (CLI) are listed (along with the appropriate parameters) in the following table.

Command	Parameters
?	
show command_history	
config command_history	<value 1-40>

Each command is listed, in detail, in the following sections.

?	
Purpose	Used to display all commands in the Command Line Interface (CLI).
Syntax	?
Description	This command will display all of the commands available through the Command Line Interface (CLI).
Parameters	None.
Restrictions	None.

Example usage

To display all of the commands in the CLI:

```

DXS-3326GSR:4#?
..
?
clear
clear arptable
clear counters
clear fdb
clear log
config 802.1p default_priority
config 802.1p user_priority
config 802.1x auth_mode
config 802.1x auth_parameter ports
config 802.1x auth_protocol
config 802.1x capability ports
config 802.1x init
config 802.1x reauth
config access profile profile_id
config account
config admin local_enable
config all_boxes_id
config arp_aging time
config authen_application
CTRL+C ESC q Quit SPACE n Next Page ENTER Next Entry a All

```

show command_history

Purpose	Used to display the command history.
Syntax	show command_history
Description	This command will display the command history.
Parameters	None.
Restrictions	None.

Example usage

To display the command history:

```
DXS-3326GSR:4#show command_history
Command: show command_history

?
? show
show vlan
config router_ports vlan2 add 1:1-1:10
config router_ports vlan2 add
config router_ports vlan2
config router_ports
show vlan
create vlan vlan2 tag 3
create vlan vlan2 tag 2
show router_ports
show router ports
login

DXS-3326GSR:4#
```

config command_history

Purpose	Used to configure the command history.
Syntax	config command_history <value 1-40>
Description	This command is used to configure the command history.
Parameters	<i><value 1-40></i> – The number of previously executed commands maintained in the buffer. Up to 40 of the latest executed commands may be viewed.
Restrictions	None.

Example usage

To configure the command history:

DXS-3326GSR:4#config command_history 20

Command: config command_history 20

Success.

DXS-3326GSR:4#

TECHNICAL SPECIFICATIONS

Physical and Environmental	
AC input & External Redundant power Supply:	100 – 120; 200 - 240 VAC, 50/60 Hz (internal universal power supply)
Power Consumption:	66 watts maximum
DC fans:	2 built-in 40 x 40 x10 mm fans
Operating Temperature:	0 to 40 degrees Celsius
Storage Temperature:	-25 to 55 degrees Celsius
Humidity:	Operating: 5% to 95% RH non-condensing; Storage: 0% to 95% RH non-condensing
Dimensions:	445 mm x 430 mm x 45 mm
Weight:	5.5 kg
EMC:	FCC Part 15 Class A / IECES-003 Class (Canada) EN55022 Class A / EN55024
Safety:	CSA International

General	
Standards:	IEEE 802.3u 100BASE-TX Fast Ethernet IEEE 802.3ab 1000BASE-T Gigabit Ethernet IEEE 802.1 P/Q VLAN IEEE 802.3x Full-duplex Flow Control IEEE 802.3 Nway auto-negotiation
Protocols:	CSMA/CD
Data Transfer Rates:	Half-duplex Full-duplex
Ethernet	10 Mbps 20Mbps
Fast Ethernet	100Mbps 200Mbps
Gigabit Ethernet	n/a 2000Mbps

General	
Fiber Optic	SFP (Mini GBIC) Support IEEE 802.3z 1000BASE-LX (DEM-310GT transceiver) IEEE 802.3z 1000BASE-SX (DEM-311GT transceiver) IEEE 802.3z 1000BASE-LH (DEM-314GT transceiver) IEEE 802.3z 1000BASE-ZX (DEM-315GT transceiver)
Network Cables: 10BASE-T: 100BASE-TX:	UTP Cat.5, Cat.5 Enhanced for 1000Mbps UTP Cat.5 for 100Mbps UTP Cat.3, 4, 5 for 10Mbps EIA/TIA-568 100-ohm screened twisted-pair (STP)(100m)
Number of Ports:	24 SFP ports 4 1000BASE-T Combo ports 2 10-Gigabit stacking ports

Performance	
Transmission Method:	Store-and-forward
RAM Buffer:	2 MB per device
Filtering Address Table:	16K MAC address per device
Packet Filtering Forwarding Rate:	Full-wire speed for all connections. 148,810 pps per port (for 100Mbps) 1,488,100 pps per port (for 1000Mbps)
MAC Address Learning:	Automatic update.
Forwarding Table Age Time:	Max age: 10 - 1000000 seconds. Default = 300.