


D-Link

Quick Installation Guide

DFE-528TX

10/100Mb Ethernet
PCI Adapter

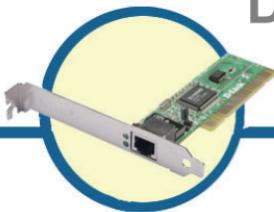

Check Your Package Contents



- DFE-528TX 10/100Mb Ethernet PCI Adapter



- CD with Manual and Drivers

If any of the above items are missing, please contact your reseller.

The DFE-528TX supports drivers for the following operating systems:

Microsoft Windows 95/98/ME	Macintosh 10.1.X
Microsoft Windows NT4.0	Netware Server 3.12/4.1X/5.00
Microsoft Windows 2000	Netware DOS ODI Client
Microsoft Windows 2003	DOS NDIS
Microsoft Windows XP	Microsoft Network client 3.0 for DOS
Microsoft Windows Vista x86	Microsoft LAN Manager Workstation/Server
Microsoft Windows Vista x64	SCO Unix 5.0
Linux 2.2	Packet Driver

For Microsoft Windows

DO NOT insert the DFE-528TX into the computer's PCI slot before installing the drivers.

1

Installing the DFE-528TX Drivers

- Turn **ON** the computer.
- Insert the **driver CD**, which is included with the DFE-528TX, into the CD-ROM drive.

The following window will appear.




Click on "Install Drivers".

For **Windows 2000, Windows XP, Windows 2003, Windows Vista x86** and **Vista x64** users, the following screen will appear.



Click OK

For Windows 98SE and Windows ME users, this screen will be displayed.

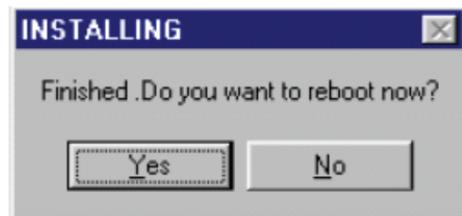


Click Yes

Next, TURN OFF the computer and unplug the power cord.

2

Installing the DFE-528TX into the computer's PCI slot

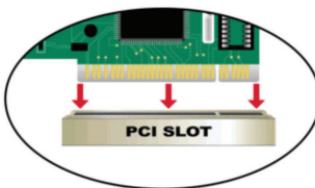

Caution: To avoid damage caused by static electricity, make sure to properly ground yourself by first touching a metal part of your computer to discharge any static electricity before working with the DFE-528TX Ethernet Adapter.

- Turn off your computer and unplug the power cord.
- Remove the back cover of your computer. (Refer to your computer's manual if needed.)
- Locate an available PCI slot. PCI slots are usually white or cream colored.
- Remove the backplate (the small piece of metal that covers the opening for the PCI card on the back cover that you just removed.)
- Insert the DFE-528TX carefully and firmly into the PCI slot.
- Secure the DFE-528TX with the screw from the backplate.
- Replace your computer's cover.

3

Finishing the Installation

TURN ON the computer.

For **Windows 98SE** and **Windows ME** users, the following screen will appear.




Click Yes, to restart the computer.

4

Checking the Installation

Go to:

START>CONTROL PANEL>SYSTEM>HARDWARE>DEVICE MANAGER.

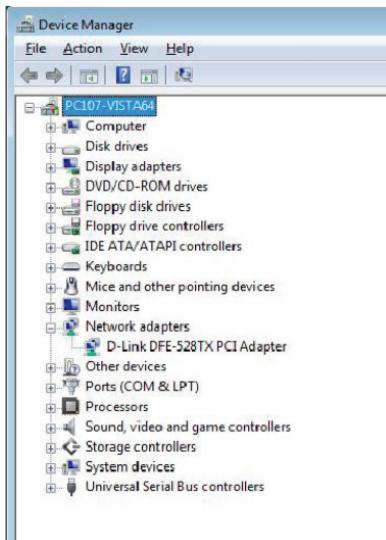

To check that the installation of the **DFE-528TX** was successful, scroll down and click on "**Network Adapters**."

You have a successful installation when "**D-Link DFE-528TX**" appears (with no errors) as shown at left.

Technical Support

You can find software updates and user documentation on the D-Link website.

Tech Support for customers within Australia:

D-Link Technical Support over the Telephone:

1300-766-868

Monday to Friday 8:00am to 8:00pm EST

Saturday 9:00am to 1:00pm EST

D-Link Technical Support over the Internet:

<http://www.dlink.com.au>

email:support@dlink.com.au

Tech Support for customers within New Zealand:

D-Link Technical Support over the Telephone:

0800-900-900

Monday to Friday 8:30am to 8:30pm

Saturday 9:00am to 5:00pm

D-Link Technical Support over the Internet:

<http://www.dlink.co.nz>

email:support@dlink.co.nz

D-Link®
Building Networks for People