DI-764 Setup for Optus Cable

Compiled by: Scott Howell

This guide has been provided to help Optus cable users connect to the Optus network. Please find that we will need the following before we can continue:

- An activated Optus cable account
- This Guide

Now that we have the necessities we can continue with the setup. Please connect the cable modem to the WAN port on the DI-764 and a network cable to your PC. It should be as below:

CABLE MODEM → DI-764 → COMPUTERS NETWORK CARD

Once connected as shown above, we will need to setup a Static IP address on your PC. Do the following to set this up (you can also use a dynamic IP address if you like):

• Windows 98/ME:

Start > Settings > Control Panel > Network > TCP/IP (Network Card) > PropertiesFrom here we will need to setup your IP addressing, please enter it as below:IP:192.168.0.2SUBNET MASK:255.255.255.0GATEWAY:192.168.0.1DNS:192.168.0.1Now apply these settings, reboot your PC and continue below:

• Windows 2000/XP:

Start > Control Panel > Network Connections > Local Area Connection > Properties > TCP/IP From here we will need to setup your IP addressing, please enter it as below:

IP:	192.168.0.2	
SUBNET MASK:	255.255.255.0	
GATEWAY:	192.168.0.1	
DNS:	192.168.0.1	
Now apply these s	settings and continue belo	ow:

We now need to follow the below steps in order to get an internet connection:

- 1. Login to the router by opening your Internet Browser and typing 192.168.0.1 into the address bar.
- 2. You will now need to login to the router using the password and username that has been specified, or the defaults if left untouched.
- 3. Now go to Home > WAN, in this page setup as below:

Home Advo	nced Tools	Statu	s Help	
WAN Settings				
Please select the appropria	ate option to connect	to your ISP.		
 Dynamic IP Address 	Choose this option to obtain an IP address automatically from your ISP. (For most Cable modem users)			
C Static IP Address	Choose this option to set static IP information provided to you by your ISP			
C PPP₀E	Choose this option if your ISP uses PPPoE. (For most DSL users)			
C Others	PPTP and BigPor	nd Cable		
C PPTP	(for Europe use of	nly)		
Dynamic IP				
Host Name	DI-764 Wireless	Router	(optional)	
MAC Address	00 . 80 . 0	. 03 . 21	- C1 (optional)	
	Clone MAC.	Address		
Primary DNS Address	61.9.192.14			
Secondary DNS Address	61.9.192.15	(ontional)		

- 4. One thing of recent that is vital is the cloning of your PCs MAC address. This is what Optus will assign an IP to. If you have the wrong MAC address you will be unable to connect. This MAC address must be from the PC that was originally setup and working with the cable modem.
- 5. Now that all of the above is done we can now get an IP address off Optus. This is done by going to the Status page and then clicking on DHCP Renew. You should get something similar to what is below:

Home	Advanced	Tools	Status	Help
Device Informat	tion			
	Firmware Version	: 2.13 , Tue 2	28 Jan 2003	
LAN				
MAC Addre	ss 00-80-C8-03-21-C0			
IP Addre	ss 192.168.0.15			
Subnet Ma	sk 255.255.255.0			
DHCP Serv	er Disabled			
WAN				
MAC Addre	ss 00-80-C8-03-21-C1			
	DHCP Client Conne	ected		
Connectio	DHCP Release	e DHCP	Renew	
IP Addre	ss 144.136.118.11	22	27	
Subnet Ma	sk 255.255.255.254			
Default Gatewa	ay 144.136.118.1			
DN	IS 61 9 192 14 61 9 19	92.15		

6. You should now be able to open your Internet browser and open a favourite or go to a web address.

Happy browsing.

Regards, Technical Support D-Link Australia