1. Using an Internet Browser type into the URL:

http://192.168.0.1

Product Page : D	IR-815	Firmv	vare Version : 1.01_patch02
D-Li	nk		
	LOGIN		
	Login to the router :		
		User Name : admin Password : Login	
WIRELES	55		
		Copyright © 2008-2010 D-Link Systems, Inc.	

Type in your Password if you have changed it, or leave it blank and then click on the Login button.

2. Before proceeding, you will need to know the actual Ports that your application requires.

You will also need to know the IP Address of the computer/laptop that you would like the Ports to be binded to. It is not recommended to have a Port Forward entry on a connected computer/laptop without a Static IP Address assigned and or a DHCP Reservation setup on the DIR-815. This guide will advise on the DHCP Reservation setup. To ensure your computer/laptop always get the same IP Address, see below:

Product Page : DIR-815 Firmware Version : 1.01_patch02						
D-Lini	¢				\prec	
DIR-815	SETUP ADV	ANCED	TOOLS	STATUS	SUPPORT	
INTERNET	NETWORK SETTINGS				Helpful Hints	
WIRELESS SETTINGS NETWORK SETTINGS IPV6	Use this section to configure the internal network settings of your router and also to configure the built-in DHCP server to assign IP addresses to computers on your network. The IP address that is configured here is the IP address that you use to access the Web-based management interface. If you change the IP address in this section, you may need to adjust your PC's network settings to access the network again.					
	Please note that this section is settings here to get your netwo	optional and rk up and ru	you do not need to char nning.	nge any of the	Enable DHCP Server to disable this feature.	
	Save Settings Don't Save Settings On you on you					
	ROUTER SETTINGS					
	Use this section to configure the internal network settings of your router. The IP address that is configured here is the IP address that you use to access the Web-based management interface. If you change the IP address here, you may need to adjust your PC's network settings to access the network again.					
	Router IP Address	: 192.168.0.1				
	Default Subnet Mask	: 255.255.255	.0			
	Host Name	dlinkrouter				
	Local Domain Name	•	(optional)			
	Enable DNS Relay	•				
	DHCP SERVER SETTINGS					
	Use this section to configure the bu	ilt-in DHCP ser	ver to assign IP address to	the computers on your		

Click on SETUP > NETWORK SETTINGS menu

Refer	down	the	nage	to the	heading	DHCP	RESER	VATION
Refer	uown	une	page	to the	neaung	DICI	RESER	VATION.

25 - DHCP RESERVATION							
Ren	Remaining number of rules that can be created: 25						
	Computer Name	IP Address	MAC Address				
				<< Computer Name			
				<			
				< Computer Name			
				<< Computer Name			
				< Computer Name			
				< Computer Name			
				< Computer Name			
				< Computer Name			
				<			
				< Computer Name			
				<< Computer Name			

Under the Computer Name drop down, select your Computer Name, as you can see the computer used was "Test-PC". It is important to remember the IP Address as well. Now click on the "<<" button, and tick the checkbox to enable this obtain. Now click on the Save Settings button either at the top or bottom of the Web Configuration. You should now see as example the below:

25 - DHCP RESERVATION							
Remaining number of rules that can be created: 25							
	Computer Name	IP Address	MAC Address				
	Test-PC	192.168.0.101	00:1c:c4:d1:f3:93	<< Computer Name			
				Computer Name Sector 2010 Computer Name DCS-930L (192.168.0.100)			
				Test-PC (192.168.0.101) <			
				< Computer Name			
				<< Computer Name			
				< Computer Name			