

D-Link®



AC1900 Wi-Fi Router Quick Install Guide

Краткое руководство по установке

Guía de Instalación Rápida

Guia de Instalação Rápida

快速安裝指南

Petunjuk Pemasangan Cepat

DIR-879

CONTENTS OF PACKAGING



AC1900 WI-FI ROUTER

DIR-879



POWER ADAPTER

12V / 2A



CAT5 ETHERNET CABLE

CONNECTS THE ROUTER TO YOUR PC DURING SETUP



WI-FI CONFIGURATION CARD

CONTAINS THE DEFAULT WI-FI INFORMATION




If any of these items are missing from your packaging, contact your reseller.

SYSTEM REQUIREMENTS

- A broadband Internet connection
- Mobile device or tablet with iOS 7 or above, Android 2.3.3 or above
- Computer with:
 - Microsoft Windows® 10/8/7/Vista or Mac with OS X 10.7 or higher
 - Internet Explorer 11, Firefox 28, Safari 7, or Chrome 33 or higher version with Java installed and enabled

PRODUCT SETUP

ROUTER MODE HARDWARE SETUP

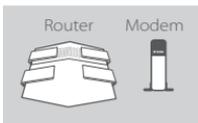


Step 1

Position your DIR-879 near your Internet-connected modem. Keep the router in an open area for better wireless coverage.




Step 2

Fully extend the antennas to provide optimal wireless coverage.

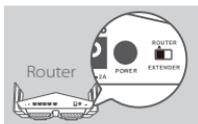


Step 3

Inspect the mode switch button to ensure that it is in the factory default **ROUTER** position. Adjust the switch if necessary.

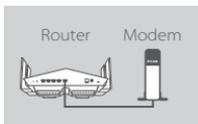


Step 4

Turn off or unplug your modem. Use the included Ethernet cable to connect your modem to the port labeled **INTERNET** on the router. Turn on or plug your modem back in and wait approximately one minute before proceeding onward.

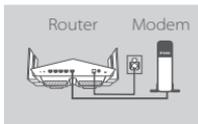

Step 5

Connect the supplied power adapter to the router and a power outlet, press the power button, and wait approximately one minute until the LED indicator on the front of the device changes from orange to solid white.

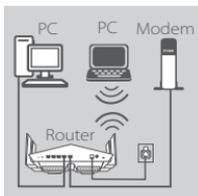

Step 6

If you are configuring the DIR-879 wirelessly from a PC, connect to a Wi-Fi network printed on the included Wi-Fi Configuration Card. You can also find the Wi-Fi network names and passwords printed on the label attached to the bottom your router.

If you are configuring the DIR-879 from a PC with a wired Ethernet connection, plug one end of an Ethernet cable into the port labeled **1** on the back of the router, and the other end into the Ethernet port on your computer.

CONFIGURATION

ROUTER MODE CONFIGURATION


To set up and manage your DIR-879, you can use the free QRS Mobile app, or you can use the built-in web interface. To use as Access Point or Extender, please refer to the User Manual, available at <http://dlink.com>.

USING THE QRS MOBILE APP



Step 1

On your mobile device, go to the Apple App Store or Google Play and search for the free **QRS Mobile** app and download it.

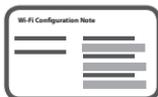

Step 2

Connect your mobile device to the Wi-Fi network printed on the included Wi-Fi Configuration Card. You can also find the Wi-Fi network name and password printed on the label attached to the bottom your router.



Step 3

Run the QRS Mobile app on your mobile device. It will guide you step by step through the configuration of your router.

USING THE BUILT-IN WEB INTERFACE



To configure your DIR-879, open a browser on a connected computer. If you are not automatically directed to the D-Link Setup Wizard, go to [http://dlinkrouter.local./](http://dlinkrouter.local/) and follow the onscreen instructions. Use **Admin** as your username and leave the password blank.

TROUBLESHOOTING

SETUP AND CONFIGURATION PROBLEMS

1. HOW DO I CONFIGURE MY DIR-879 ROUTER MANUALLY?

- Connect your PC to the router wirelessly or using an Ethernet cable.
- Open a web browser and enter the address '<http://dlinkrouter.local/>' or '**192.168.0.1**'.
- The router password should be left blank by default.
- If you have changed the password and can not remember it, reset the router to return to an empty password field.

2. HOW DO I RESET MY DIR-879 ROUTER TO FACTORY DEFAULT SETTINGS?

- Ensure the router is powered on.
- Using a paper clip, press and hold the reset button on the back of the device for 3 seconds.
Note: Resetting the router to factory default will erase the current configuration settings.
To re-configure your settings, log into the router as outlined in question 1 and run the setup wizard.

3. I CANNOT CONNECT TO THE ROUTER USING THE WEB INTERFACE OR QRS MOBILE APPLICATION.

If you cannot connect to your DIR-879, check the following:

- Make sure the mode switch is in the **Router** position.
- Ensure the router's power adapter is plugged in and the device is powered on.
- Verify that your network cables are firmly attached.
- Make sure you are connected the wireless network printed on the Wi-Fi Configuration Card.
- If you are still having difficulty, reset the DIR-879 to the factory default settings as described in question 2 above.

4. HOW DO I ADD A NEW WIRELESS CLIENT OR PC IF I HAVE FORGOTTEN MY WI-FI NAME (SSID) OR WI-FI PASSWORD?

- For each device that needs to connect to the router wirelessly, you will need to ensure you use the correct Wi-Fi Name (SSID) and Wi-Fi password.
- Use the web-based user interface (as described in question 1 above) to check or configure your wireless settings.
- Make sure you write down these settings so that you can enter them for each wirelessly connected device. The back of this document features an area to record this important information.

5. WHY CAN'T I GET AN INTERNET CONNECTION?

- For ADSL users, please contact your ISP to make sure the service has been enabled/connected by your ISP and that your ISP username and password is correct.

6. HOW DO I USE MY DIR-879 AS AN EXTENDER OR ACCESS POINT?

- This Quick Installation Guide covers the installation of the DIR-879 for use as a Router. Please refer to the User Manual, available at <http://dlink.com> for instructions on configuring your DIR-879 to use as Access Point or Extender.

Extender mode support will be available via firmware update in early 2016.

You can find software updates and user documentation on the D-Link website.

Tech Support for customers in

Australia:

Tel: 1300-700-100
24/7 Technical Support
Web: <http://www.dlink.com.au>
E-mail: support@dlink.com.au

India:

Tel: +91-832-2856000
Toll Free 1800-233-0000
Web: www.dlink.co.in
E-Mail: helpdesk@dlink.co.in

Singapore, Thailand, Indonesia, Malaysia, Philippines, Vietnam:

Singapore - www.dlink.com.sg
Thailand - www.dlink.co.th
Indonesia - www.dlink.co.id
Malaysia - www.dlink.com.my
Philippines - www.dlink.com.ph
Vietnam - www.dlink.com.vn

Korea:

Tel : +82-2-2028-1810
Monday to Friday 9:00am to 6:00pm
Web : <http://d-link.co.kr>
E-mail : g2b@d-link.co.kr

New Zealand:

Tel: 0800-900-900
24/7 Technical Support
Web: <http://www.dlink.co.nz>
E-mail: support@dlink.co.nz

South Africa and Sub Sahara Region:

Tel: +27 12 661 2025
08600 DLINK (for South Africa only)
Monday to Friday 8:30am to 9:00pm South Africa Time
Web: <http://www.d-link.co.za>
E-mail: support@d-link.co.za

D-Link Middle East - Dubai, U.A.E.

Plot No. S31102,
Jebel Ali Free Zone South,
P.O.Box 18224, Dubai, U.A.E.
Tel: +971-4-8809022
Fax: +971-4-8809066 / 8809069
Technical Support: +971-4-8809033
General Inquiries: info.me@dlinkmea.com
Tech Support: support.me@dlinkmea.com

Egypt

1, Makram Ebeid Street -
City Light Building - floor 5
Nasrcity - Cairo, Egypt
Tel.: +2 02 23521593 - +2 02 23520852
Technical Support: +2 02 26738470
General Inquiries: info.eg@dlinkmea.com
Tech Support: support.eg@dlinkmea.com

Kingdom of Saudi Arabia

Office # 84 ,
Al Khaleej Building (Mujamathu Al-Khaleej)
Opp. King Fahd Road, Olaya
Riyadh - Saudi Arabia
Tel: +966 1121 70008
Technical Support:
+966 1121 70009
General Inquiries: info.sa@dlinkmea.com
Tech Support: support.sa@dlinkmea.com

Pakistan

Islamabad Office:
61-A, Jinnah Avenue, Blue Area,
Suite # 11, EBC, Saudi Pak Tower,
Islamabad - Pakistan
Tel.: +92-51-2800397, 2800398
Fax: +92-51-2800399

Karachi Office:

D-147/1, KDA Scheme # 1,
Opposite Mudassir Park, Karsaz Road,
Karachi – Pakistan
Phone: +92-21-34548158, 34326649
Fax: +92-21-4375727
Technical Support: +92-21-34548310, 34305069
General Inquiries: info.pk@dlinkmea.com
Tech Support: support.pk@dlinkmea.com

Iran

Unit 5, 5th Floor, No. 20, 17th Alley , Bokharest
St. , Argentine Sq. ,
Tehran IRAN
Postal Code : 1513833817
Tel: +98-21-88880918,19
+98-21-88706653,54
General Inquiries: info.ir@dlinkmea.com
Tech Support: support.ir@dlinkmea.com

ישראל

מטלון סנטר
רח' המגשימים 20
קרית מטלון, פ"ת 49348, ת"ד 7060
טל: 03-9215173
טל: 073-7962797
דוא"ל כללי: info@dlink.co.il
דוא"ל תמיכה: support@dlink.co.il

Morocco

M.I.T.C
Route de Nouaceur angle RS et CT 1029
Bureau N° 312 ET 337
Casablanca , Maroc
Phone : +212 663 72 73 24
Email: support.na@dlinkmea.com

Lebanon RMA center

Dbayeh/Lebanon
PO Box:901589
Tel: +961 4 54 49 71 Ext:14
Fax: +961 4 54 49 71 Ext:12
Email: taoun@dlinkmea.com

Bahrain

Technical Support: +973 1 3332904

Kuwait:

Technical Support: + 965 22453939 / +965
22453949

Türkiye

Büyükdere Cad. Ferro Plaza No:155
D: 1 K: 1 Zincirlikuyu / Istanbul
Tel: +90 (212) 289-56-59
Email: info.tr@dlink.com.tr

