## **DSC-350 Installation in Windows XP**

Before connecting the camera run Setup file from the driver set.



Click on START.



Click on "Continue Anyway" Windows will start copying files.

Digital Still Camera TWAIN Drive	er Installation Copying 📓
	$\triangleright$
ksproxy.ax	
To C:\WINDOWS\System32	
(	Cancel
	Cancer



Click on OK.

Now connect your camera to the USB port. Windows will detect new hardware:



Select "Install from a specific location (Advanced). Click on Next.

Found New Hardware Wizard	
Please choose your search and installation options.	
Use the check boxes below to limit or expand the default search, which includes local paths and removable media. The best driver found will be installed.	
Search removable media (floppy, CD-ROM)	
✓ Include this location in the search:	
C:\Driver\dsc-350\WinXP Scowse	
Don't search. I will choose the driver to install.	
Choose this option to select the device driver from a list. Windows does not guarantee that the driver you choose will be the best match for your hardware.	
< <u>B</u> ack <u>N</u> ext > Cancel	

Put a tick next to "Include this location in the search" and click on BROWSE.

Open the folder where you have extracted the drivers to (in our example it is C:\Driver\dsc-350\WinXP)

Click on Next.





Click on "Continue Anyway"

Found New Hardware Wizard		
	Completing the Found New Hardware Wizard	
	D-Link, WDM Video Capture	
	Click Finish to close the wizard.	
	< <u>B</u> ack <b>Finish</b> Cancel	

Click on Finish.

After a short while a new device will be detected:



Select "Install from a specific location (Advanced). Click on Next.

ound New Hardware Wizard
Please choose your search and installation options.
Search for the best driver in these locations. Use the check boxes below to limit or expand the default search, which includes local paths and removable media. The best driver found will be installed.
<ul> <li>Search removable media (floppy, CD-ROM)</li> <li>Include this location in the search:</li> </ul>
C:\Driver\dsc-350\WinXP Browse
Don't search. I will choose the driver to install.
Choose this option to select the device driver from a list. Windows does not guarantee that the driver you choose will be the best match for your hardware.
< <u>B</u> ack <u>N</u> ext > Cancel

Found New Hardware Wizard	
Please choose your search and installation options.	
Use the check boxes below to limit or expand the default search, which includes local paths and removable media. The best driver found will be installed.	
Search removable media (floppy, CD-ROM)	
✓ Include this location in the search:	
C:\Driver\dsc-350\WinXP Scowse	
Don't search. I will choose the driver to install.	
Choose this option to select the device driver from a list. Windows does not guarantee that the driver you choose will be the best match for your hardware.	
< <u>B</u> ack <u>N</u> ext > Cancel	

Put a tick next to "Include this location in the search" and click on BROWSE.

Open the folder where you have extracted the drivers to (in our example it is C:\Driver\dsc-350\WinXP)

Click on Next.

Hardware	e Installation
<u>.</u>	The software you are installing for this hardware: D-Link, WDM Still Image Capture has not passed Windows Logo testing to verify its compatibility with Windows XP. (Tell me why this testing is important.) Continuing your installation of this software may impair or destabilize the correct operation of your system either immediately or in the future. Microsoft strongly recommends that you stop this installation now and contact the hardware vendor for software that has passed Windows Logo testing.
	Continue Anyway

Click on "Continue Anyway"



After that you should be able to see the camera under Control Panel > System > Hardware > Device Manager:

