How to open ports (setup port forwarding) in the DVA-2800 modem router

This document details how to setup port forwarding rules in your modem/router firewall



Please note: It is recommended to set the device you are opening ports for (PC, Xbox, PlayStation, etc.) with a static IP address. Please see your device instructions on how to manually set an IP address.

Step 1. Open your Internet browser e.g. Internet Explorer, Firefox, Chrome, Safari, etc. and enter the IP address of your D-Link modem in the **address bar**: <u>http://192.168.1.1</u>

	Admin Pas	ssword:	
	Log	In	

Step 2. When prompted type in the Password, on the page and then click on the "Log In" button.

If you have not changed the password for the modem administration, the factory settings are:

Password: admin

If you cannot recall the password you assigned to your modem you will need to reset the modem to factory defaults by pressing the reset button for 10 seconds. Please note that this will revert all the settings in the modem to factory settings and you will have to reconfigure it with your Internet settings and Wireless security. Make sure you have your Internet account details (given by your Internet Provider) handy.





Step 3. After logging in you will be presented with the modem's configuration pages. Click on **Features > Virtual Server**

Click on the "Add Rule" button

•		A	Your router he clients in your server, that ro	elps share a single l r home. Virtual serve pute traffic to a spec	P address assigned ers are preset port r ified client inside.	l by your Interne nappings for po	et service provider ar pular services, like a	nong se a web or	veral e-mail
dvanced	d >> Virtu	ual Serv	er					Sa	ve
Status	Name L	ocal IP	Protocol	External Port	internal Port	Interface	NAT Loopback	Edit	Delete
		amaining	15						

Step 4. Fill in the details for your new port forwarding rule (we are opening ports for **Remote Desktop** service as an **example**)

Name:	REMOTE DESKTOP	REMOTE DESKTOP	\sim
Local IP:	192.168.1.2	192.168.1.2 (DESKTOP-	\sim
Protocol:	ТСР	~	
External Port:	3389		
Internal Port:	3389		
Interface:	ATM0	~	
NAT Loopback:	Off	~	

- Service: Enter a Name for your service or click the Drop-down menu on the right for a pre-defined service
- Local IP: type in the IP address of the device you are opening ports for (PC, Xbox, PlayStation, etc.). or You can select the IP address in the drop-down list on the right.
- **Protocol:** TCP (or UDP): In this example its TCP
- External /Internal Ports: port number that you are opening. In our example the Remote Desktop service requires port 3389 to be opened. You can specify multiple ports or a range of ports (e.g. 24, 1009, 3000-4000).

 Interface: You must select (one) service which is active: ATMO for ADSL, PTMO for VDSL and ETHO for Cable/NBN. (In this example, we have an ADSL connection so we will choose ATMO)

ternal Port:	3389	
Interface:	ATM0	^
T Loopback	PTM0	
	ATMO	
	Eth0	

• NAT Loopback: You can have it either on or off.

Click on the Apply button.

When finished please make sure you click on **Save** in the top right corner of the screen to save the settings.

