

New Firmware Upgrade Procedure

Note: If the device is with old firmware as follows, please follow up the upgrade procedure to upgrade to the latest firmware.

Model	Old F/W	The latest F/W
DGS-1216T	V4.00.xx	V4.20.11
DGS-1224T	V4.00.xx	V4.20.11
DES-1228P	V1.00.xx or V1.10.xx or V1.20.xx	V1.30.08
DES-1228	V1.00.xx	V1.10.08
DES-1252	V1.00.xx	V1.10.08

Upgrade Procedure:

User has to upgrade **three** different firmware files (FWU.hex, WSSldr.hex, FWN.hex) in order to accomplish new firmware upgraded. Please find the firmware file in the attached file as below.

File Requirement :

General Name	DGS-1216T v.D1/D2	DGS-1224T v.D1/D2
FWU.hex	1216TFWU.hex	1224TFWU.hex
WSSldr.hex	1216Tldr.hex	1224Tldr.hex
FWN.hex	DGS-1216T_DX_42010.hex	DGS-1224T_DX_42010.hex
Firmware File		


General Name	DGS-1228P v.A1	DGS-1228 v.A1
FWU.hex	1228PFWU.hex	1228FWU.hex
WSSldr.hex	1228Pldr.hex	1228ldr.hex
FWN.hex	DES-1228P_A1_13008.hex	DES-1228_A1_11008.hex
Firmware File		

General Name	DGS-1252 v.A1
FWU.hex	1252FWU.hex
WSSldr.hex	1252ldr.hex
FWN.hex	DES-1252_A1_11008.hex
Firmware File	


Users can upgrade firmware either through SmartConsole Utility or Web GUI, please follow up the steps as follows.

1. Upgrade firmware through SmartConsole Utility (Please refer to below step. i-xi)


i. Execute smart console utility

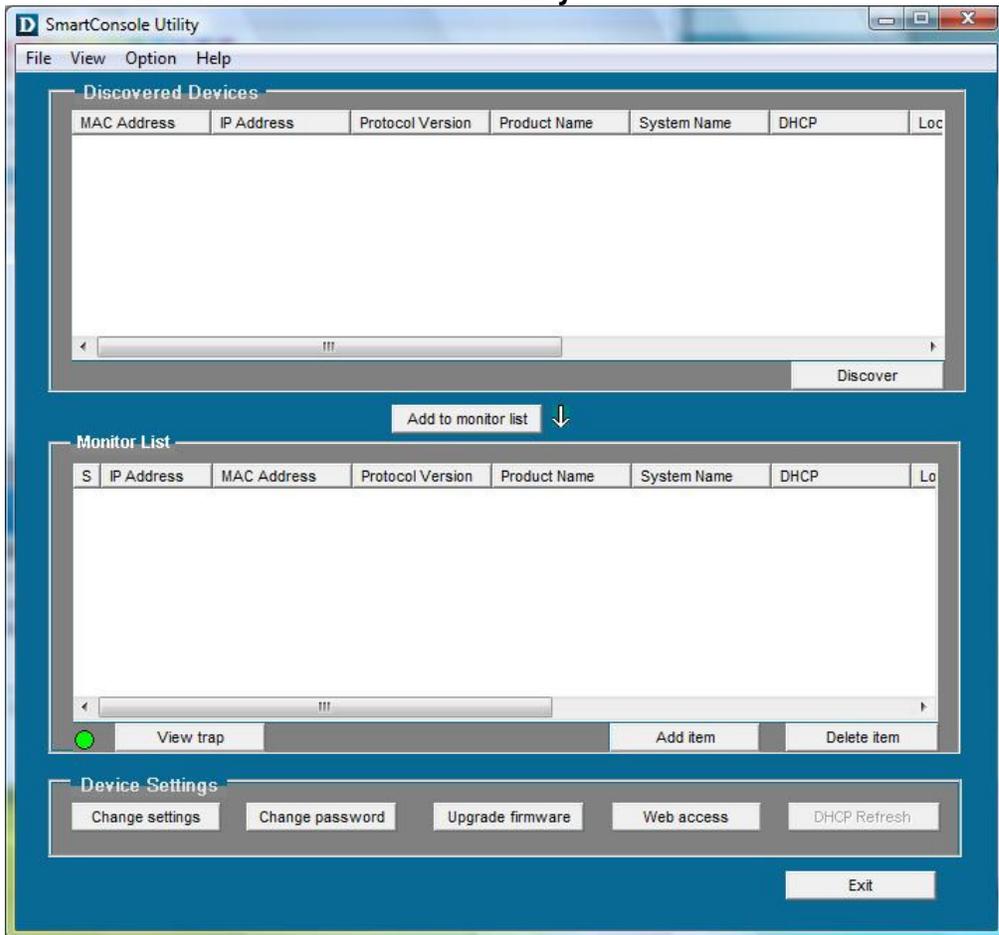


ii. Click Discovery button to search target switch

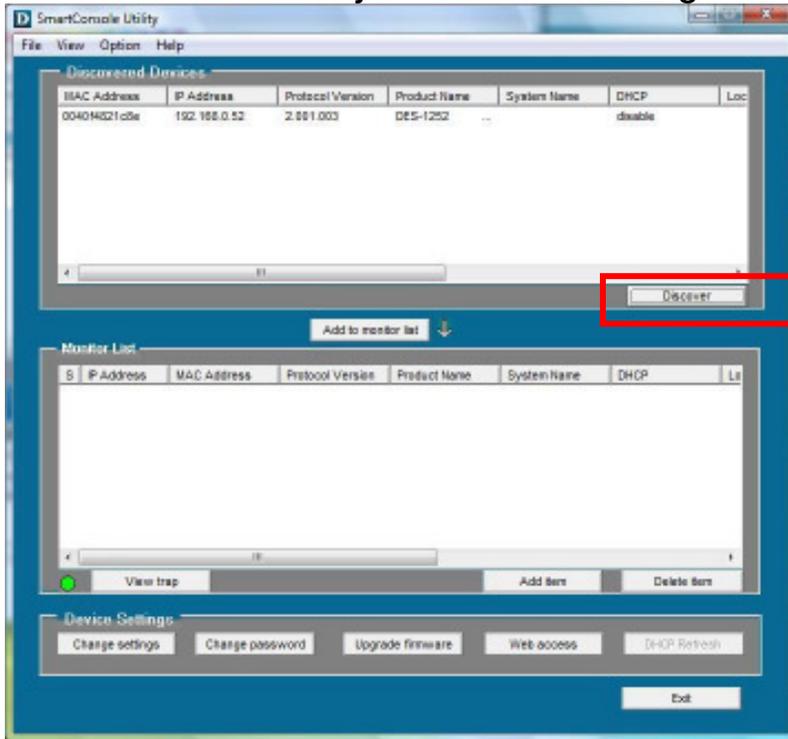


iii. Double click target switch to add to monitor list

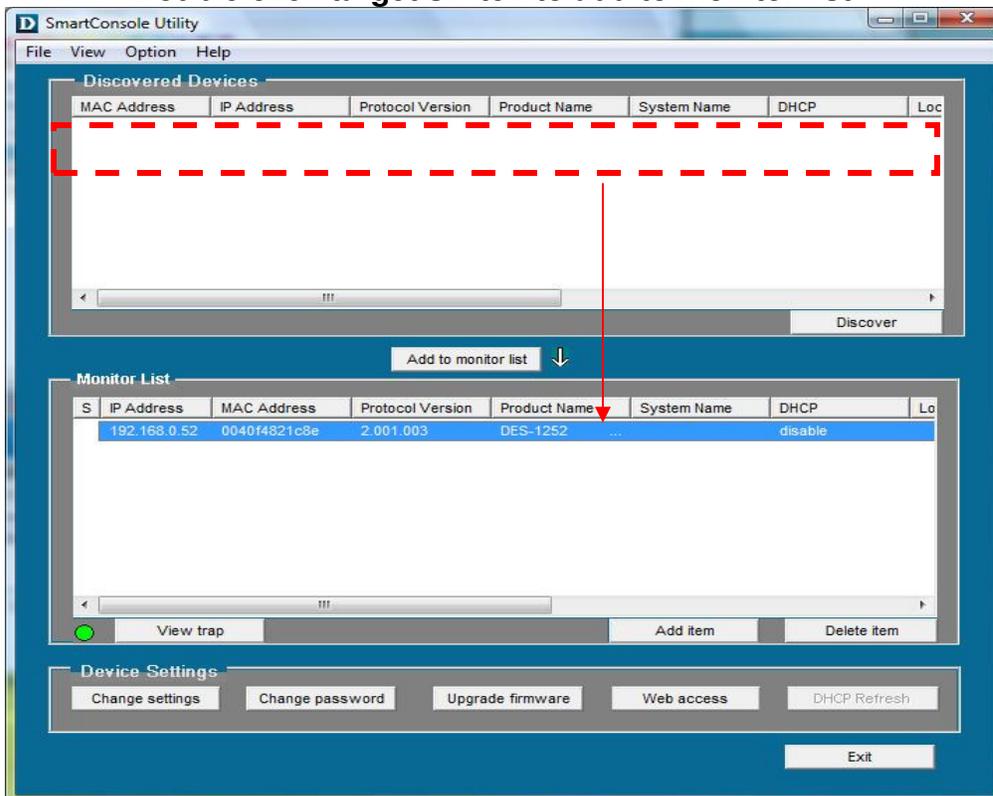


iv. Click firmware upgrade button

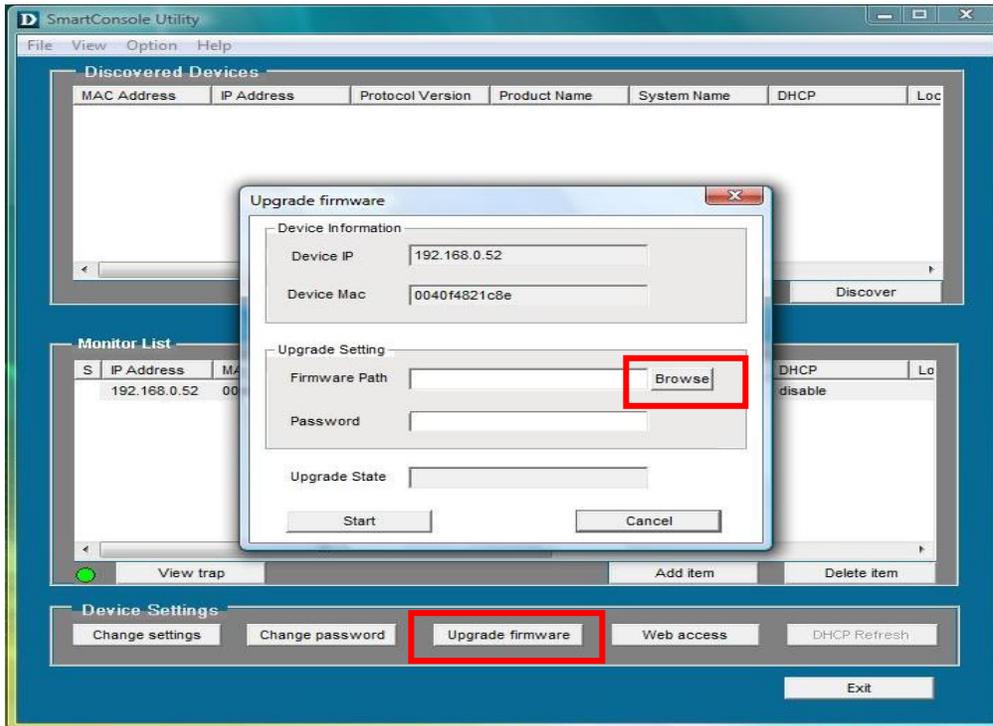


v. Click Browse button to search fwu.hex firmware file from user's local PC

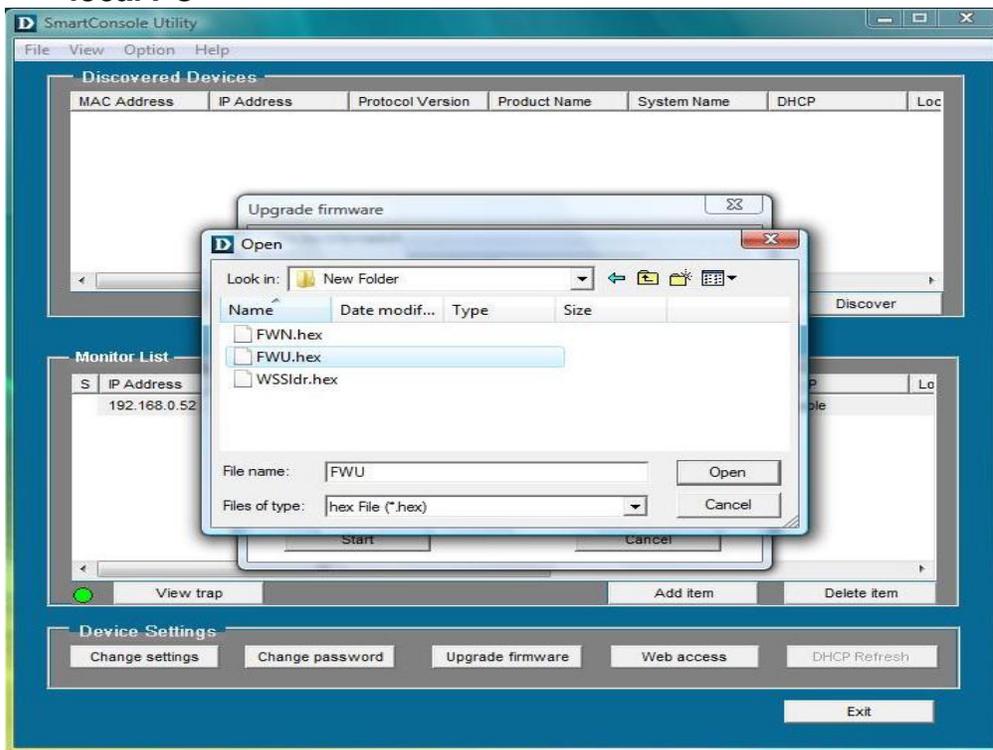


vi. Enter password and click start button to start firmware upgrade

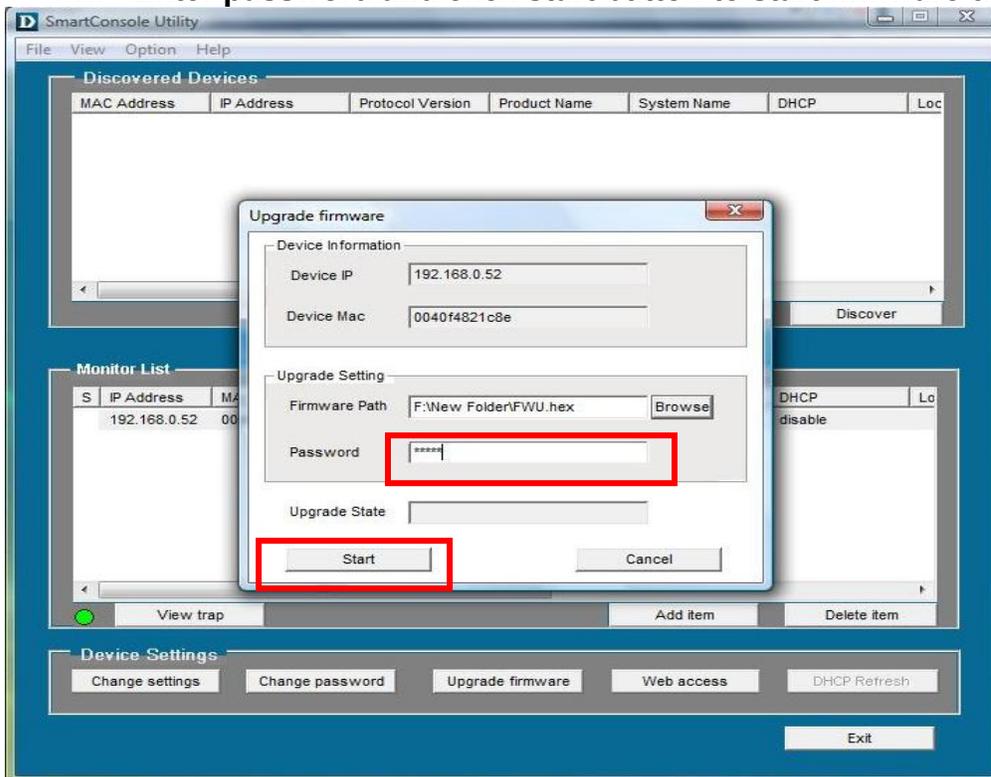


vii. Wait for firmware upgrade complete

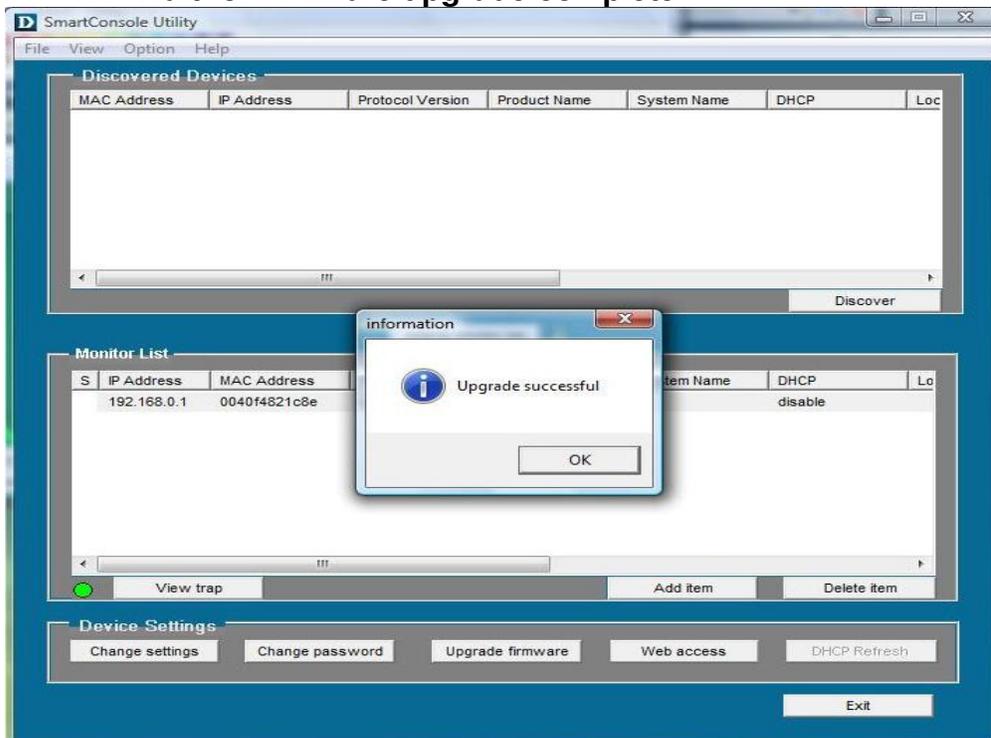

viii. Repeat step.i ~ step.vii, but choose WSSldr.hex to upgrade in step.v

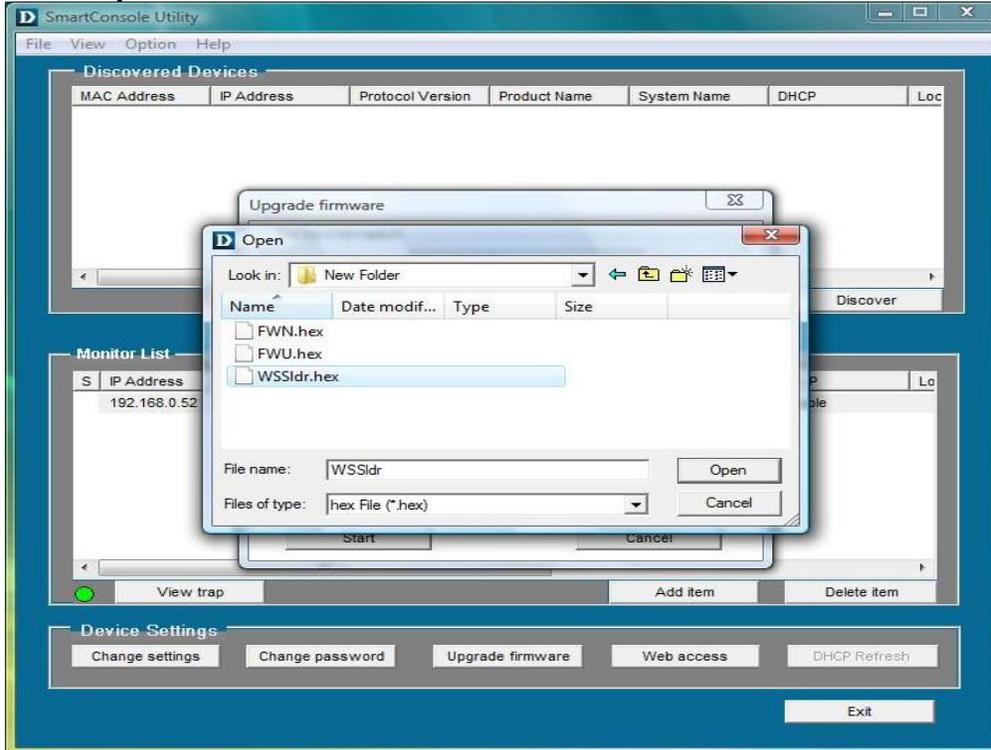


ix. Repeat step.i ~ step.vii , but choose fwn.hex to upgrade in step.v

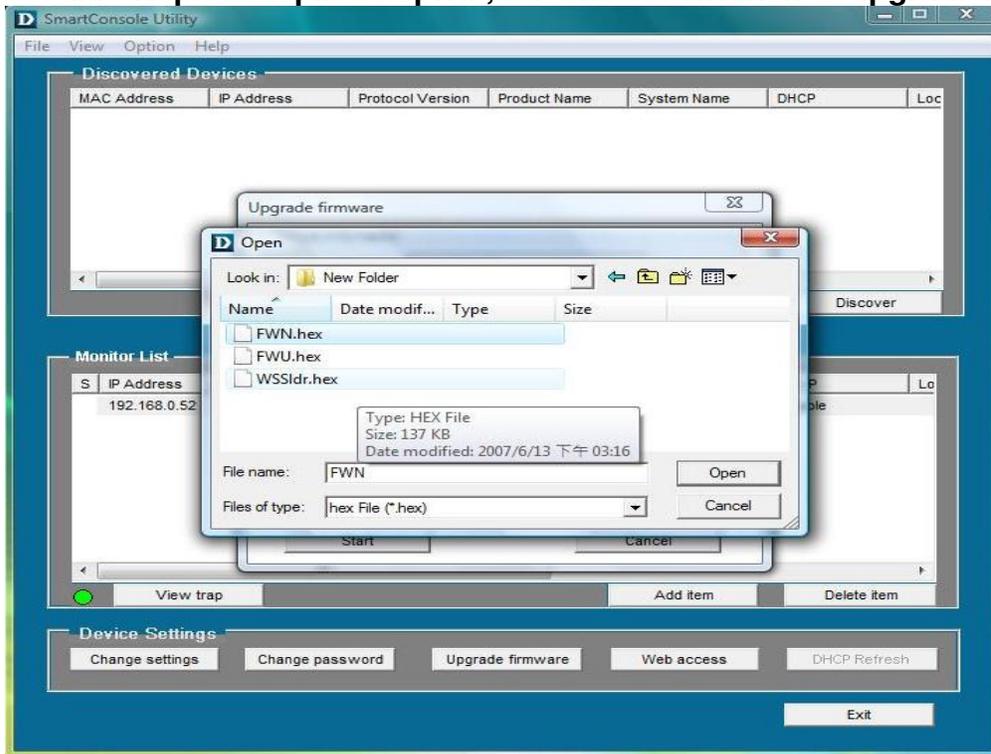


2. Upgrade firmware through Web GUI (Please refer to below step. i-vi)


i. Open web GUI , clicking tool and choosing Firmware Backup & Upload

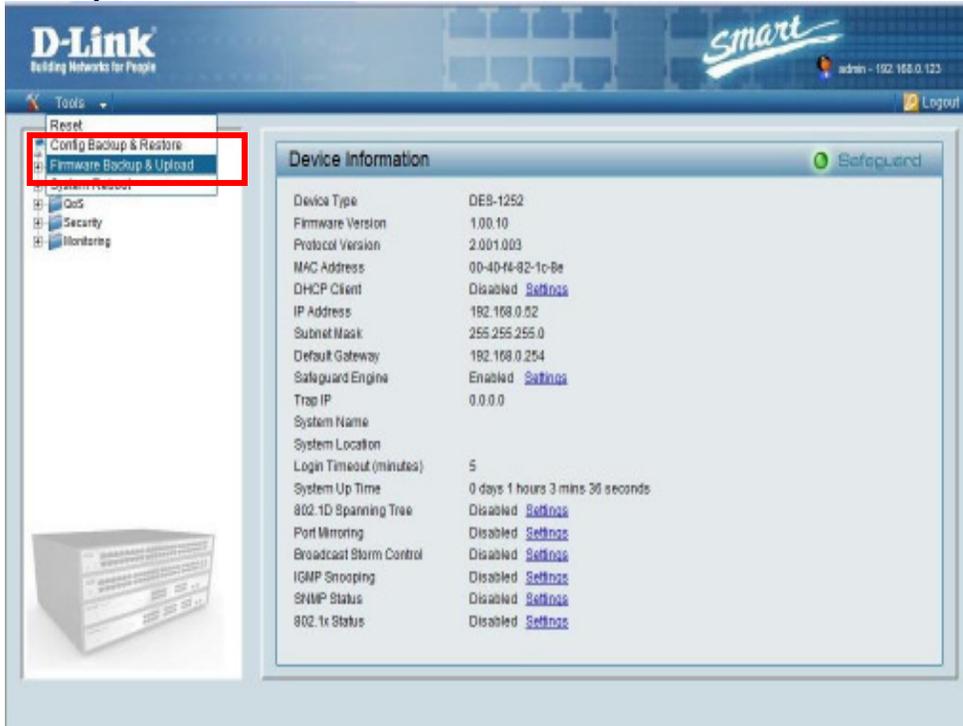

ii. Click browse button and choose fwu.hex firmware file from local user's PC

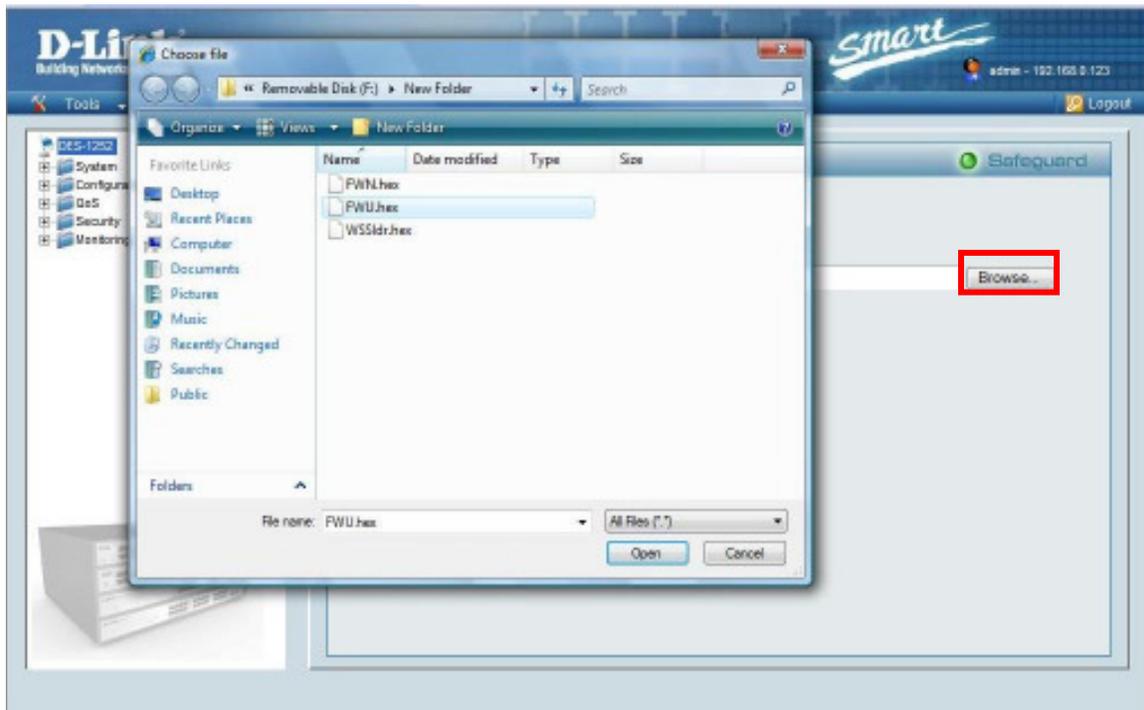


iii. Click Upload button to start upgrade firmware

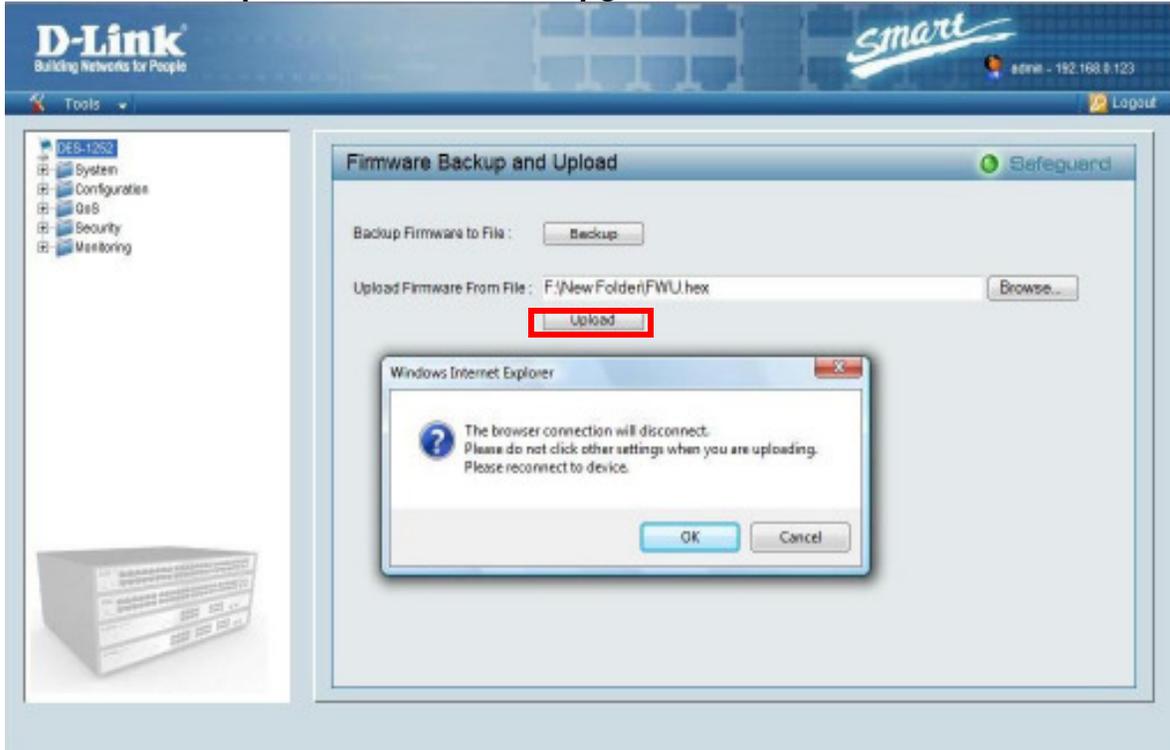

iv. Wait for firmware upgrade complete then restart Web GUI

v. Repeat step.i ~ step.iv , but choose WSSldr.hex in step.ii

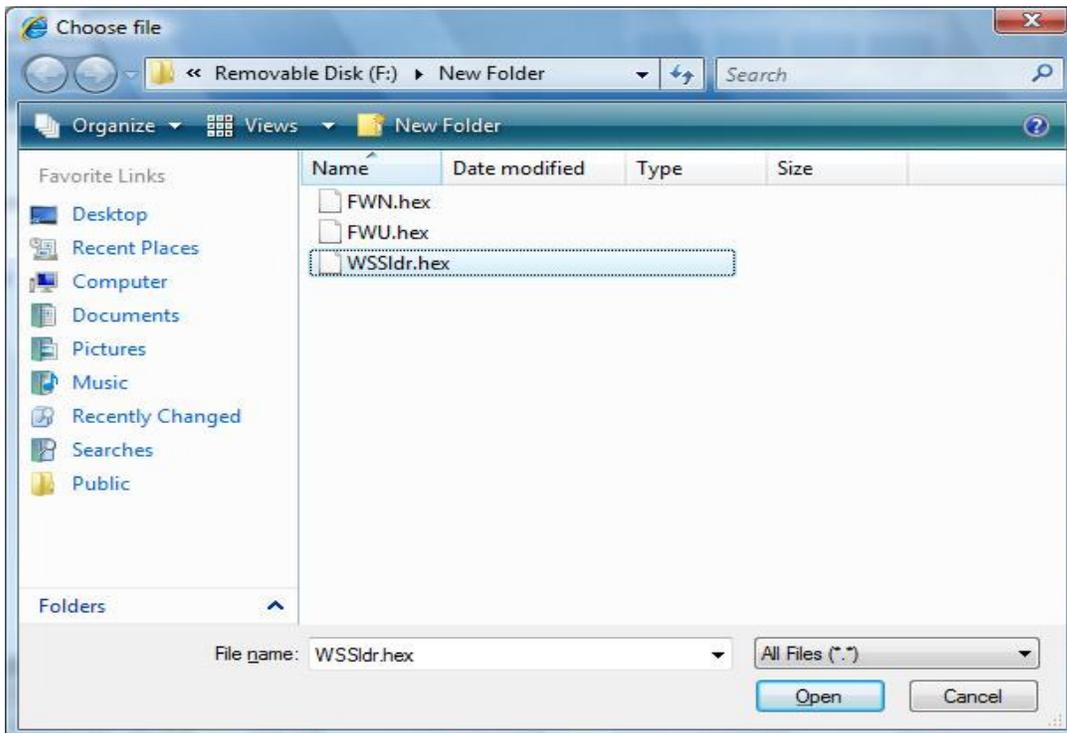

vi. Repeat step.i ~ step.iv , but choose fwn.hex in step.ii

