




 **NETDEFEND**

NETWORK SECURITY UTM FIREWALL

This Quick Guide will guide you through the installation Process. You are only moments away from using your new D-Link Network Security Product

DFL-260

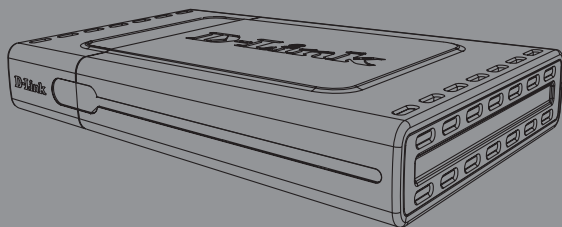

1. Before You Begin

1.1 Check Your Package Contents.....	1
--------------------------------------	---

2. Identifying Components

2.1 Front View.....	2
2.2 Rear View.....	2
2.3 LED Indicators.....	3
2.4 Default Interface Attribute Definition.....	3

3. Connecting the DFL-260

3.1 Setting up Firewall to your Network.....	4
--	---

4. Configure DFL-260

4.1 Configure your Computer's IP.....	5
4.2 Using the Setup Wizard.....	6

5. Appendix

5.1 How to Configure Static IP Manually on Microsoft Windows XP.....	14
5.2 How to Configure Static IP Manually on Apple MAC OSX.....	15

6. Statement

DFL-260 Before You Begin

1

1.1 Check Your Package Contents

Your NetDefend Network Security UTM Firewall package should contain all the items listed below. If any of these items is found damaged or missing in your package, report it to your reseller immediately for replacement.

- DFL-260 NetDefend™ Network Security UTM Firewall
- 5V DC Power Adapter
- Console Cable (RS-232 cable)
- Ethernet (CAT5 UTP/Straight Through) Cable
- Ethernet (CAT5 UTP/Cross-over) Cable
- CD-ROM (containing QIG/Manual)
- 2 x NetDefend UTM Subscription (IPS & Anti-Virus)



DFL-260



Power Adapter



NetDefend UTM
Subscription



Ethernet Cable
(Cross-over)



Ethernet Cable
(Straight-Through)



Console Cable



CD-ROM

Identifying Components

2

The following illustrates the front panel of the DFL-260 and explains the front panel's key components:

2.1 Front View



- | | |
|----------------------|--|
| 1. Power LED | Power indication of the DFL-260. |
| 2. Status LED | System status indication of the DFL-260. |
| 3. WAN LED | WAN port status indication of the DFL-260. |
| 4. DMZ LED | DMZ port status indication of the DFL-260. |
| 5. LAN LED | LAN port status indication of the DFL-260. |

2.2 Rear View



- | | |
|--------------------------|--|
| 1. Console Port | Connects to RS-232 console cable that connects to PC. |
| 2. LAN Ports | These are for the connection of Ethernet cables to the internal network. |
| 3. DMZ Port | This is for the connection of an Ethernet cable to an DMZ network. |
| 4. WAN Port | This is for the connection of an Ethernet cable to a Cable or DSL modem. |
| 5. Reset | This is for resetting system configuration to factory defaults. |
| 6. Power Receptor | This is for the connection of the power adapter to a wall outlet or power strip. |

Note:

WAN interface do not support Auto MDI/MDI-X (Automatic cable detection for Straight-through and Crossover function).

2.3 LED Indicators

LED	Status	Color	Description
Power	Solid green	Green	The device is powered on.
	Light off		The device is powered off.
Status	Solid green	Green	System is operating properly.
	Light off		The device is not working.
	Blinking green		System is defective, such as firmware upgrade fail.
WAN	Solid green	Green	Link present
	Blinking green		Port is sending or receiving data.
	Light off		No link
DMZ	Solid green	Green	Link present
	Blinking green		Port is sending or receiving data.
	Light off		No link
LAN	Solid green	Green	Link present
	Blinking green		Port is sending or receiving data.
	Light off		No link

2.4 Default Interface Attribute Definition

Wording on Front plate	Default name in firewall	Default interface type definition	Default interface IP Address	Default DHCP Status
WAN	WAN	DHCP client	N/A	Enabled
DMZ	DMZ	Static IP	172.17.100.254/24	Disable
Ports: 1~4	LAN	Static IP	192.168.1.1/24	Disable

Note:

For security reason, default only allow LAN interface (192.168.1.1) that can login into firewall GUI from Web browser. You also can modify this configuration after login into firewall GUI. About the detail set up procedure, please refer to the user's manual.

3.1 Connecting Firewall to Your Network

- A. First, connect the power cord to the receptor on the back panel of the DFL-260 and then plug the other end of the power cord to a wall outlet or power strip. After the power LED turns on, you need to wait 1-2 minutes for the DFL-260 to boot up completely.
- B. Connect an Ethernet cable from the DFL-260 to your Cable/DSL modem. If the Cable/DSL modem is powered on, wait for the WAN LED on the DFL-260 to light up to show a proper connection. Otherwise, turn off your Cable/DSL modem, connect the Ethernet cable from the DFL-260 to your Cable/DSL modem, and turn on the Cable/DSL modem. Some Cable/DSL modems may not have an on/off switch and will require you to unplug the power adapter.

 **Note:**


The default management IP address of the DFL-260 is 192.168.1.1. If you are using a router that uses DHCP, there may be a conflict if the router uses the same IP address as the DFL-260. If this is the case, either disconnect the DFL-260 from the router and change the management IP address of the DFL-260, or change the DHCP settings on your router.

- C. Insert an Ethernet cable to the LAN1 port on the rear panel of the DFL-260 and connect it to a port on your network hub or switch. The LAN port LED light on the DFL-260 will illuminate to indicate proper connection
- D. Connecting the computer that you will use to configure the DFL-260 to the network hub or switch.

4.1 Configure Your Computer's IP Address

Make sure that the network adapter in your computer is configured to use a static IP address with 192.168.1.1 as default gateway and 255.255.255.0 as netmask. Instructions on how to configure the network adapter can be found in the appendix.


When you have completed the steps in this *Quick Installation Guide*, your connected network should look similar to this:

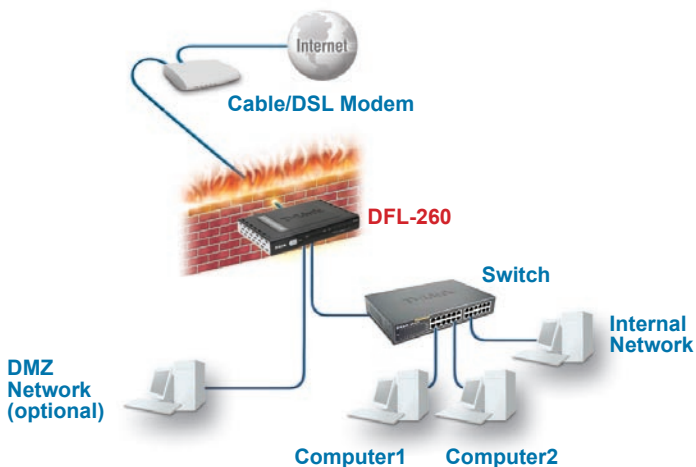

4.2 Using the Setup Wizard

The DFL-260 provides Web based configuration. You can configure your DFL-260 through Internet Explorer 6 and later or Firefox 1.0 and later browser in MS Windows, Macintosh or UNIX based platforms. Activate your browser. Then type the IP address of the DFL-260 into the Location/Address field and press "Enter."

Open your Web browser and type **https://192.168.1.1 /** into the URL address box. Then press the Enter or Return key.

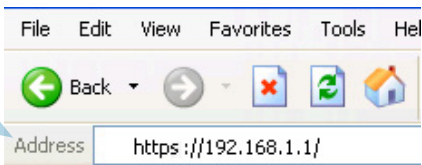

⚠ Note:

DFL-260 allows either HTTP or a secure HTTPS connection from any management host. However, for security reasons, by default only a secure HTTPS connection is allowed. For more information about configuring connection setting, please refer to the Firewall User Manual.

(The IP Address shown in the example above is the default setting. If you have changed the IP Address of the DFL-260 to conform to a network, then input that IP Address in the web browser, instead of the default IP Address shown.)

Log on to the DFL-260 web interface.

To start using the DFL-260 web interface you need to log on using the default username and password.

Type the default Username/Password
 Username: admin
 Password: admin
 and click Login

Authentication Required

Please enter your username and password.

Username:

Password:


Optimized for Internet Explorer (IE) 6.0 and Firefox

⚠ Note:

In order for the Setup Wizard to run properly, make sure IE Pop-Up Blocker is turned off or click **Temporarily Allow Pop-ups** when the Information Bar in IE notifies you that a pop-up has been blocked.

Step1 - Welcome to the DFL-260 setup wizard!

This wizard will guide you through the setup of your DFL-260

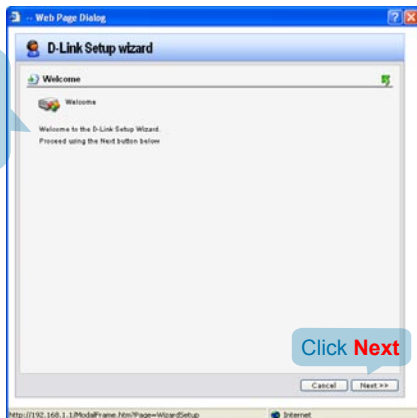


Step2 - Set up firewall administrator password

First **Enter** the username that you want to use for the admin account.

Enter the password that you want to use for the admin account.




Step 3 - Set up time and date

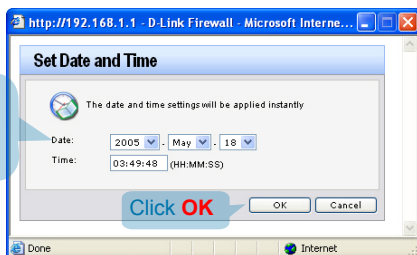


Step 4 - Set up timezone

Select the appropriate timezone.
Enter the appropriate daylight saving time settings.

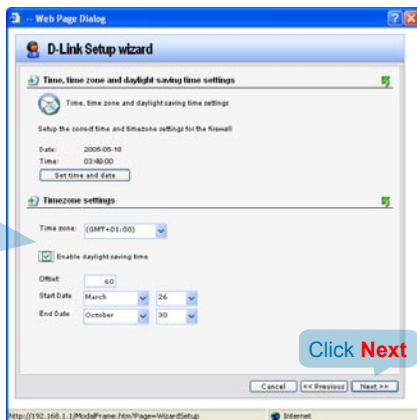


Step 5 - Select WAN interface

Select the WAN interface that you want to use.

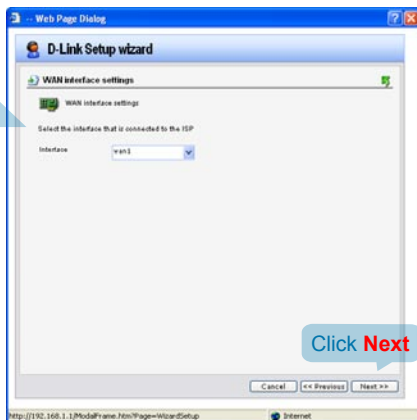

Step 6 - Configure WAN interface

Select the appropriate configuration for the WAN interface, Click **Next** and continue to step 7.1 further down.

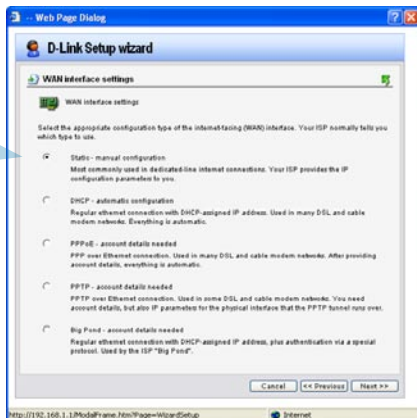


Note:

If you are unsure of which setting to select, please contact your Internet Service Provider.


Step 7.1 - WAN Interface Type is Static IP

If you selected Static IP you have to fill out the IP address information provided to you by your ISP. You will need to complete all the required fields except for Secondary DNS Server.

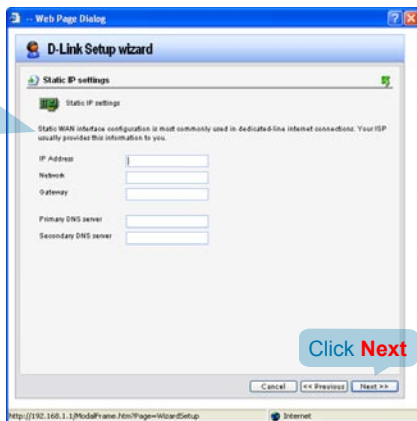

Step 7.2 - WAN Interface Type is PPPoE

If you selected PPPoE (Point-to-Point Protocol over Ethernet) you will have to fill out the user name and password provided to you by your ISP. The PPPoE Service Name field should be left blank unless your ISP informs you otherwise.

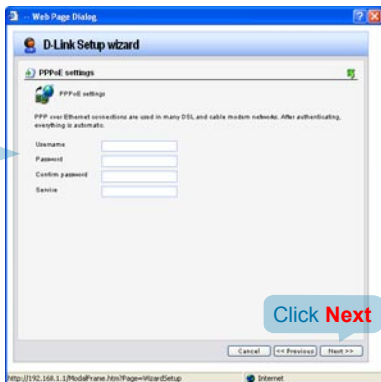


Step 7.3 - WAN Interface Type is PPTP

Enter Username, Password and the PPTP Server IP address provided by your ISP.


DHCP: If your ISP provider is using DHCP you should select the DHCP radio button.

Static IP: If your Internet Service Provider is using Static IP you should select the Static IP radio button and enter IP Address, choose a Subnet Mask and enter the Gateway IP address.

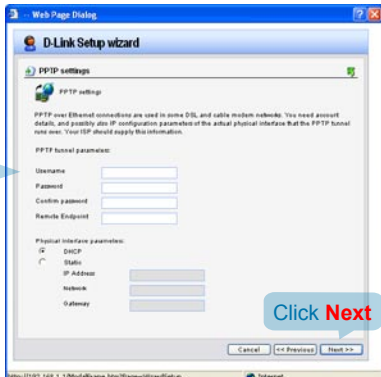


Step 7.4 - WAN Interface Type is Big Pond

If you selected Big Pond you will have to fill out the user name and password provided to you by your ISP. Click **Next** and continue to step 8.

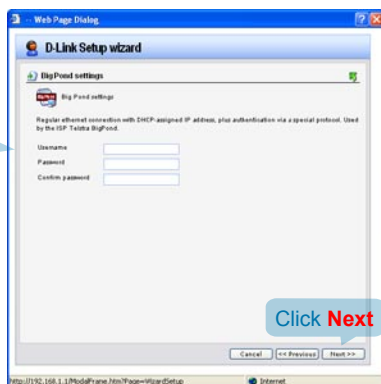

Step 8 - Set up built-in DHCP server

If you want to use the built-in DHCP Server in the DFL-260, choose **Enable DHCP Server** in this screen. You then need to specify a range of IP addresses to hand out to the DHCP clients. This range is entered in the format "**Start IP - Stop IP**" i.e. 192.168.0.100 - 192.168.0.200. If you don't want to use the built-in DHCP Server or configure it later, choose Disable DHCP Server.

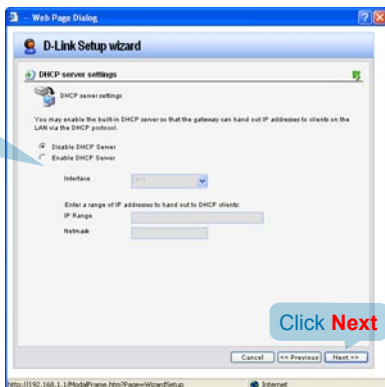


Step 9 - Configure helper servers

NTP Servers

If enabled, specify which NTP Servers that should be used to synchronize the firewall time


Syslog Servers

If enabled, specify where the firewall should log, you can specify up to two Syslog receivers

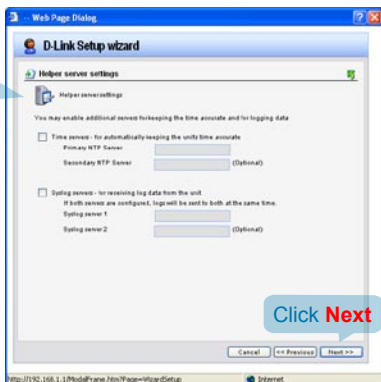

Step 10 - Setup Wizard Complete


Click **Activate** to complete your configuration.

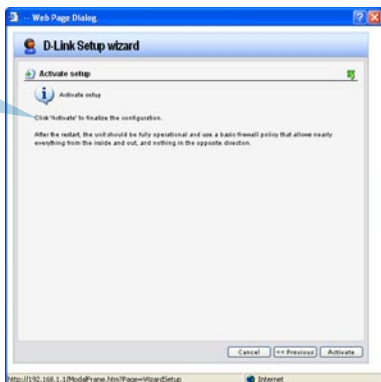


To connect to the DFL-260 Network Security UTM Firewall, make sure the network adapter in your computer is configured properly. Here is how to configure the network adapter manually to the correct IP-address.

5.1 How to configure Static IP Manually on Microsoft Windows XP

 
Go to **Start > right click on My Network Places > select Properties > Right-click on the Network Connection** of the Ethernet adapter connecting to the DFL-260 and select **Properties**.



Click **Internet Protocol (TCP/IP)**
Click **Properties**

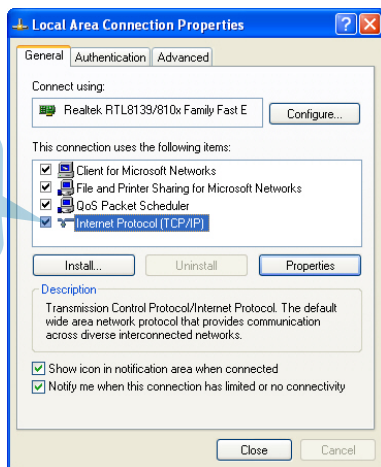

Select **Use the following IP address**
Set IP address to **192.168.1.30**,
Subnet mask to **255.255.255.0**
and Default gateway to **192.168.1.1**
Click **OK**

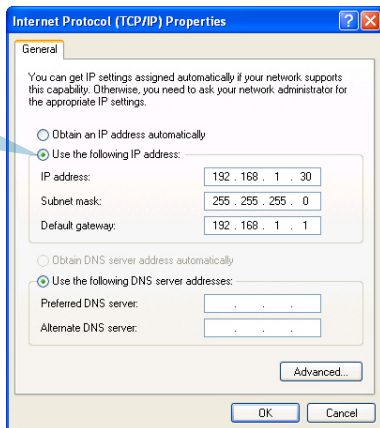

Note:

Except for 192.168.1.1, you could set your PC with any IP addresses that same as the 192.168.1.0/ 255.255.255.0 subnet.

5.2 How to Configure Static IP Manually on Apple Mac OS X


Go to the **Apple Menu**
Click on **Network**
and **Select System Preferences**
Click on **Network**



Select **Built-in Ethernet** in the show pull down menu
Select **Manually** in the Configure pull down menu



Set IP Address to **192.168.1.30**,
Subnet Mask to **255.255.255.0**
and Router to **192.168.1.1**.
Click on **Apply Now**

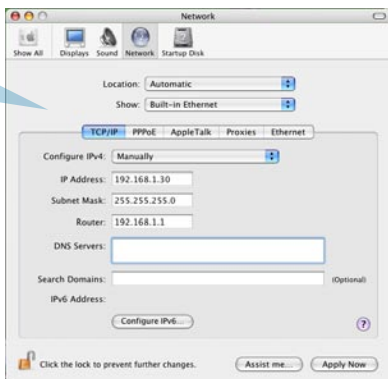

EMI Statement

FCC Warning

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with this manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

CE Mark Warning

This is a Class A product. In a domestic environment, this product may cause radio interference in which case the user may be required to take adequate measures.

Warnung!

Dies ist ein Produkt der Klasse A. Im Wohnbereich kann dieses Produkt Funkstörungen verursachen. In diesem Fall kann vom Benutzer verlangt werden, angemessene Massnahmen zu ergreifen.

Precaución!

Este es un producto de Clase A. En un entorno doméstico, puede causar interferencias de radio, en cuyo caso, puede requerirse al usuario para que adopte las medidas adecuadas.

Attention!

Ceci est un produit de classe A. Dans un environnement domestique, ce produit pourrait causer des interférences radio, auquel cas l'utilisateur devrait prendre les mesures adéquates.

Attenzione!

Il presente prodotto appartiene alla classe A. Se utilizzato in ambiente domestico il prodotto può causare interferenze radio, nel cui caso è possibile che l'utente debba assumere provvedimenti adeguati.

VCCI Warning

この装置は、クラス A 情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

BSMI Warning

警告使用表

這是甲類的資訊產品，在居住的環境中使用時，可能會造成射頻干擾，在這種情況下使用者會被要求採取某些適當的對策。