

Web UI Reference Guide

Product Model: DGS-3630 Series

Layer 3 Stackable Managed Switch

Release 2.25



Information in this document is subject to change without notice. Reproduction of this document in any manner, without the written permission of the D-Link Corporation, is strictly forbidden.

Trademarks used in this text: D-Link and the D-Link logo are trademarks of the D-Link Corporation; Microsoft and Windows are registered trademarks of the Microsoft Corporation.

Other trademarks and trade names may be used in this document to refer to either as the entities claiming the marks and the names or their products. D-Link Corporation disclaims any proprietary interest in trademarks and trade names other than its own.

© 2021 D-Link Corporation. All rights reserved.

Table of Contents

1. Introduction	1
Audience.....	1
Other Documentation.....	1
Conventions.....	1
Notes, Notices, and Cautions.....	1
2. Web-based Switch Configuration	3
Management Options.....	3
Areas of the User Interface.....	5
3. System	7
Device Information.....	7
System Information Settings.....	7
Peripheral Settings.....	8
Port Configuration.....	9
Port Settings.....	9
Port Status.....	11
Port GBIC.....	12
Port Auto Negotiation.....	13
Error Disable Settings.....	13
Jumbo Frame.....	14
Interface Description.....	15
Loopback Test.....	16
PoE.....	16
PoE System.....	17
PoE Status.....	18
PoE Configuration.....	19
PD Alive.....	20
PoE Statistics.....	20
PoE Measurement.....	21
PoE LLDP Classification.....	22
System Log.....	22
System Log Settings.....	22
System Log Discriminator Settings.....	25
System Log Server Settings.....	26
System Log.....	27
System Attack Log.....	27
Time and SNTP.....	28
Clock Settings.....	28
Time Zone Settings.....	28
SNTP Settings.....	30
Time Range.....	31
PTP (Precise Time Protocol).....	32
PTP Global Settings.....	32
PTP Port Global Settings.....	34
PTP Boundary Port Settings.....	35
PTP P2P Transparent Port Settings.....	36
PTP Clock Information.....	37
PTP Port Information.....	37
PTP Foreign Master Records Port Information.....	38
USB Console Settings.....	38

SRM	39
SRM Prefer Current Settings	39
SRM Prefer Mode	40
Switch Controller Settings	41
4. Management	42
Command Logging	42
User Accounts Settings	42
CLI Alias Settings	44
Password Encryption	45
Password Recovery	45
Login Method	46
SNMP	47
SNMP Global Settings	48
SNMP Linkchange Trap Settings	49
SNMP View Table Settings	50
SNMP Community Table Settings	51
SNMP Group Table Settings	52
SNMP Engine ID Local Settings	53
SNMP User Table Settings	54
SNMP Host Table Settings	55
SNMP Context Mapping Table Settings	57
RMON	57
RMON Global Settings	57
RMON Statistics Settings	58
RMON History Settings	59
RMON Alarm Settings	59
RMON Event Settings	60
Telnet/Web	61
Session Timeout	62
DHCP	63
Service DHCP	63
DHCP Class Settings	64
DHCP Server	65
DHCPv6 Server	73
DHCP Relay	78
DHCPv6 Relay	87
DHCP Auto Configuration	95
DHCP Auto Image Settings	96
DNS	97
DNS Global Settings	97
DNS Name Server Settings	98
DNS Host Settings	99
NTP	99
NTP Global Settings	99
NTP Server Settings	101
NTP Peer Settings	101
NTP Access Group Settings	102
NTP Key Settings	103
NTP Interface Settings	105
NTP Associations	105
NTP Status	106
IP Source Interface	106

File System	108
Stacking	110
Physical Stacking	114
Stacking Bandwidth	115
Virtual Stacking (SIM)	116
Single IP Settings	118
Topology	119
Firmware Upgrade	125
Configuration File Backup/Restore	125
Upload Log File	126
D-Link Discovery Protocol	126
SMTP Settings	127
Reboot Schedule Settings	129
NLB FDB Settings	130
SD Card Management	131
SD Card Backup Settings	131
SD Card Execute Settings	132
5. Layer 2 Features	134
FDB	134
Static FDB	134
MAC Address Table Settings	135
MAC Address Table	137
MAC Notification	138
VLAN	140
VLAN Configuration Wizard	140
802.1Q VLAN	142
VLAN Interface	143
802.1v Protocol VLAN	146
GVRP	148
MVRP	151
Asymmetric VLAN	153
MAC VLAN	153
L2VLAN Interface Description	154
Subnet VLAN	155
Super VLAN	156
Auto Surveillance VLAN	157
Voice VLAN	160
Private VLAN	163
VLAN Tunnel	165
Dot1q Tunnel	165
VLAN Mapping	167
VLAN Mapping Profile	168
STP	173
STP Global Settings	175
STP Port Settings	176
MST Configuration Identification	178
STP Instance	179
MSTP Port Information	180
ERPS (G.8032)	180
ERPS	181
ERPS Profile	185
Loopback Detection	186

Link Aggregation	188
MLAG	190
MLAG Settings	191
MLAG Group	192
Flex Links.....	193
L2 Protocol Tunnel.....	193
L2 Multicast Control	196
IGMP Snooping	196
MLD Snooping	206
Multicast VLAN	215
PIM Snooping	220
Multicast Filtering Mode.....	223
LLDP	223
LLDP Global Settings	223
LLDP Port Settings	225
LLDP Management Address List.....	226
LLDP Basic TLVs Settings	226
LLDP Dot1 TLVs Settings.....	227
LLDP Dot3 TLVs Settings.....	228
LLDP-MED Port Settings.....	229
LLDP-DCBX Port Settings.....	230
LLDP Statistics Information	230
LLDP Local Port Information	231
LLDP Neighbor Port Information	233
6. Layer 3 Features	236
ARP	236
ARP Elevation	236
ARP Aging Time	237
Static ARP	237
ARP Force Aging IP Address	238
Proxy ARP	238
ARP Table	239
Gratuitous ARP	240
IPv6 Neighbor	240
Interface	242
IPv4 Interface	242
IPv6 Interface	245
Loopback Interface	249
Null Interface	250
UDP Helper	250
IP Forward Protocol	250
IP Helper Address	251
IPv4 Static/Default Route.....	252
IPv4 Static Route BFD	253
IPv4 Route Table	254
IPv6 Static/Default Route.....	254
IPv6 Static Route BFD	255
IPv6 Route Table	256
Route Preference.....	257
ECMP Settings	258
IPv6 General Prefix.....	258
IPv6 Device Monitor Settings.....	259

IP Tunnel Settings	260
URPF Settings	261
VRF	263
VRF Settings	263
VRF Interface Settings	265
RIP	267
RIP Settings.....	267
RIP Distribute List.....	269
RIP Interface Settings.....	270
RIP Database	271
RIPng.....	271
RIPng Settings.....	271
RIPng Interface Settings.....	273
RIPng Database	274
OSPF	274
OSPFv2	274
OSPFv3	291
IP Multicast Routing Protocol.....	305
IGMP.....	305
MLD	310
IGMP Proxy	314
MLD Proxy	317
DVMRP	319
PIM	321
IPMC.....	353
IPv6MC	359
BGP	363
BGP Global Settings.....	363
BGP Aggregate Address Settings	365
BGP Network Settings.....	366
BGP Route Redistribution Settings	367
BGP Route Preference Settings.....	369
BGP Dampening Settings.....	370
BGP Dampening Dampened Paths Table.....	372
BGP Dampening Flap Statistics Table	373
BGP Reflector Settings.....	375
BGP Confederation Settings	376
BGP AS Path Access List Settings	376
BGP Community List Settings	377
BGP Extended Community List Settings.....	378
BGP Clear Settings	380
BGP Summary Table.....	381
BGP Routing Table.....	382
BGP Labels Table	384
BGP Neighbor	385
BFD.....	398
BFD Settings	398
BFD Neighbor Table.....	400
ISIS	401
ISIS Global Settings	401
ISIS Router Settings	405
ISIS Interface Settings.....	408

ISIS Redistribute Settings.....	411
ISIS Redistribute ISIS Settings.....	412
ISIS Route Table	413
ISIS Database	414
ISIS Topology.....	415
ISIS Hostname	415
ISIS Neighbors	415
IP Route Filter.....	416
IP Prefix List	416
Route Map	417
Policy Route.....	423
VRRP Settings	424
VRRPv3 Settings.....	426
7. Quality of Service (QoS).....	430
Basic Settings	430
Port Default CoS.....	430
Port Scheduler Method.....	430
Queue Settings.....	432
CoS to Queue Mapping.....	432
Port Rate Limiting	433
Queue Rate Limiting.....	434
Queue Statistics Table	435
Advanced Settings.....	436
DSCP Mutation Map.....	436
Port Trust State and Mutation Binding	437
DSCP CoS Mapping.....	438
CoS Color Mapping	439
DSCP Color Mapping	439
Class Map.....	440
Aggregate Policer	442
Policy Map	445
Policy Binding.....	448
QoS PFC.....	449
Network QoS Class Map	449
Network QoS Policy Map.....	450
Network QoS Policy Binding.....	451
PFC Port Settings.....	452
WRED	453
WRED Profile	454
WRED Queue.....	455
WRED Drop Counter	456
iSCSI.....	456
iSCSI Settings	457
iSCSI Sessions.....	458
8. Access Control List (ACL).....	459
ACL Configuration Wizard	459
Step 1 - Create/Update.....	459
Step 2 - Select Packet Type	460
Step 3 - Add Rule	461
Step 4 - Apply Port	468
ACL Access List.....	469
Standard IP ACL.....	471

Extended IP ACL	472
Standard IPv6 ACL	475
Extended IPv6 ACL	476
Extended MAC ACL	478
Extended Expert ACL	480
ACL Interface Access Group	483
ACL VLAN Access Map	484
ACL VLAN Filter	486
CPU ACL	487
9. Security.....	490
Port Security	490
Port Security Global Settings.....	490
Port Security Port Settings	491
Port Security Address Entries.....	493
802.1X.....	493
802.1X Global Settings	498
802.1X Port Settings.....	498
Authentication Sessions Information	500
Authenticator Statistics	500
Authenticator Session Statistics	501
Authenticator Diagnostics.....	501
AAA.....	502
AAA Global Settings	502
Application Authentication Settings	503
Application Accounting Settings	503
Authentication Settings.....	505
Accounting Settings	508
Server RADIUS Dynamic Author Settings.....	510
RADIUS	511
RADIUS Global Settings.....	511
RADIUS Server Settings	512
RADIUS Group Server Settings	513
RADIUS Statistic	515
TACACS+	515
TACACS+ Global Settings	515
TACACS+ Server Settings	516
TACACS+ Group Server Settings	517
TACACS+ Statistic	518
IMPB	519
IPv4.....	519
IPv6.....	533
DHCP Server Screening.....	542
DHCP Server Screening Global Settings	542
DHCP Server Screening Port Settings.....	543
ARP Spoofing Prevention	544
BPDU Attack Protection.....	545
NetBIOS Filtering.....	546
MAC Authentication	547
Web-based Access Control	549
Web Authentication	551
WAC Port Settings.....	551
WAC Customize Page.....	552

Japanese Web-based Access Control	553
JWAC Global Settings	553
JWAC Port Settings	556
JWAC Customize Page Language	556
JWAC Customize Page	557
Network Access Authentication	558
Guest VLAN	558
Network Access Authentication Global Settings	558
Network Access Authentication Port Settings	560
Network Access Authentication Sessions Information	561
Safeguard Engine	562
Safeguard Engine Settings	563
CPU Protect Counters	564
CPU Protect Sub-Interface	565
CPU Protect Type	565
Trusted Host	566
Traffic Segmentation Settings	567
Storm Control Settings	567
DoS Attack Prevention Settings	570
Zone Defense Settings	571
SSH	572
SSH Global Settings	572
Host Key	573
SSH Server Connection	574
SSH User Settings	574
SSH Client Settings	575
SSL	576
SSL Global Settings	577
Crypto PKI Trustpoint	577
SSL Service Policy	578
SFTP Server Settings	579
Network Protocol Port Protect Settings	580
10. OAM	581
CFM	581
CFM Settings	581
CFM Port Settings	591
CFM Loopback Test	592
CFM Linktrace Settings	593
CFM Packet Counter	594
CFM Counter CCM	595
CFM MIP CCM Table	595
CFM MEP Fault Table	595
Cable Diagnostics	596
Ethernet OAM	597
Ethernet OAM Settings	597
Ethernet OAM Configuration Settings	598
Ethernet OAM Event Log Table	601
Ethernet OAM Statistics Table	601
Ethernet OAM DULD Settings	602
DDM	604
DDM Settings	604
DDM Temperature Threshold Settings	605

DDM Voltage Threshold Settings	605
DDM Bias Current Threshold Settings	606
DDM TX Power Threshold Settings	607
DDM RX Power Threshold Settings	607
DDM Status Table	608
11. MPLS.....	609
MPLS LDP Information Settings	609
MPLS LSP Trigger Information	612
MPLS Forwarding Settings	612
MPLS LDP Neighbor Password Settings	614
MPLS LDP Neighbor Targeted Settings	614
MPLS LDP Neighbor Information	615
MPLS Global Settings.....	616
MPLS LDP Interface Settings	617
MPLS LDP Session Information	618
MPLS LDP Statistic	619
MPLS LDP Binding Table	620
MPLS LDP Discovery Information	620
MPLS QoS Settings.....	621
Ping MPLS.....	625
Traceroute MPLS IPv4	626
12. MPLS L2VPN	628
VPWS Settings	628
L2VC Interface Description.....	631
VPLS Settings.....	632
VPLS MAC Address Table	636
13. Monitoring	638
VLAN Counter.....	638
Utilization	639
Port Utilization	639
History Utilization.....	639
Statistics.....	641
Port	641
CPU Port.....	642
Interface Counters	643
Interface History Counters.....	645
Counters	647
Mirror Settings	649
sFlow.....	651
sFlow Agent Information.....	651
sFlow Receiver Settings	651
sFlow Sampler Settings.....	652
sFlow Poller Settings	653
Device Environment.....	654
External Alarm Settings	655
14. Green.....	657
Power Saving.....	657
EEE.....	658
15. OpenFlow.....	660
OpenFlow Settings	660
16. Save and Tools	663

Save Configuration	663
Firmware Upgrade & Backup.....	663
Firmware Upgrade from HTTP	663
Firmware Upgrade from TFTP.....	664
Firmware Upgrade from FTP.....	664
Firmware Upgrade from RCP	665
Firmware Upgrade from SFTP	666
Firmware Backup to HTTP	667
Firmware Backup to TFTP.....	667
Firmware Backup to FTP.....	668
Firmware Backup to RCP	669
Firmware Backup to SFTP	670
Configuration Restore & Backup	670
Configuration Restore from HTTP	670
Configuration Restore from TFTP	671
Configuration Restore from FTP	672
Configuration Restore from RCP.....	673
Configuration Restore from SFTP	673
Configuration Backup to HTTP.....	674
Configuration Backup to TFTP	675
Configuration Backup to FTP	675
Configuration Backup to RCP	676
Configuration Backup to SFTP	677
Certificate & Key Restore & Backup.....	678
Certificate & Key Restore from HTTP	678
Certificate & Key Restore from TFTP.....	679
Certificate & Key Restore from FTP.....	679
Certificate & Key Restore from RCP	680
Certificate & Key Restore from SFTP.....	681
Certificate & Key Backup to HTTP	682
Certificate & Key Backup to TFTP.....	682
Certificate & Key Backup to FTP.....	683
Certificate & Key Backup to RCP	684
Certificate & Key Backup to SFTP	685
Log Backup.....	685
Log Backup to HTTP	685
Log Backup to TFTP.....	686
Log Backup to RCP	687
Log Backup to SFTP	687
Ping.....	688
Trace Route	690
Reset.....	692
Reboot System	693
DLMS Settings	694
Appendix A - Password Recovery Procedure.....	695
Appendix B - System Log Entries	696
Appendix C - Trap Entries	738
Appendix D - RADIUS Attributes Assignment	754
Appendix E - IETF RADIUS Attributes Support.....	759

1. Introduction

This manual's feature descriptions are based on the software release **2.25**, running in the **MPLS Image (MI) Mode**. The features listed here are the subset of features that are supported by the DGS-3630 Series Switch.

Audience

This reference manual is intended for network administrators and other IT networking professionals responsible for managing the Switch by using the Web User Interface (Web UI). The Web UI is the secondary management interface to the DGS-3630 Series Switch, which will be generally be referred to simply as the "**Switch**" within this manual. This manual is written in a way that assumes that you already have the experience and knowledge of Ethernet and modern networking principles for Local Area Networks.

Other Documentation

The documents below are a further source of information in regards to configuring and troubleshooting the Switch. All the documents are available from the D-Link website. Other documents related to this Switch are:

- *DGS-3630 Series Hardware Installation Guide*
- *DGS-3630 Series CLI Reference Guide*

Conventions

Convention	Description
Boldface Font	Indicates a button, a toolbar icon, menu, or menu item. For example: Open the File menu and choose Cancel . Used for emphasis. May also indicate system messages or prompts appearing on screen. For example: You have mail . Bold font is also used to represent filenames, program names and commands. For example: use the copy command.
Initial capital letter	Indicates a window name. Names of keys on the keyboard have initial capitals. For example: Click Enter.
Menu Name > Menu Option	Indicates the menu structure. Device > Port > Port Properties means the Port Properties menu option under the Port menu option that is located under the Device menu.
<i>Blue Courier Font</i>	This convention is used to represent an example of a screen console display including example entries of CLI command input with the corresponding output.

Notes, Notices, and Cautions

Below are examples of the three types of indicators used in this manual. When administering your Switch using the information in this document, you should pay special attention to these indicators. Each example below provides an explanatory remark regarding each type of indicator.



NOTE: A note indicates important information that helps you make better use of your device.



NOTICE: A notice indicates either potential damage to hardware or loss of data and tells you how to avoid the problem.



CAUTION: A caution indicates a potential for property damage, personal injury, or death.

2. Web-based Switch Configuration

Management Options
Logging into the Web UI
Web User Interface (Web UI)

Management Options

The Switch provides multiple access platforms that can be used to configure, manage, and monitor networking features available on this Switch. Currently there are three management platforms available, which are described below.

Command Line Interface (CLI)

The Switch can be managed, out-of-band, by using the console port or the MGMT port on the front panel of the Switch. Alternatively, the Switch can also be managed, in-band, by using a Telnet connection to any of the LAN ports on the Switch. The command line interface provides complete access to all Switch management features.

Refer to the *DGS-3630 Series CLI Reference Guide* for more detailed information about the CLI.

SNMP-based Management

The Switch can be managed with an SNMP-compatible Network Management System (NMS). The Switch supports SNMP v1/v2c/v3. The SNMP agent on the Switch decodes the incoming SNMP messages and responds to requests with MIB objects stored in the database. The SNMP agent on the Switch updates the MIB objects to generate statistics and counters.

Web User Interface (Web UI)

The Web UI can be accessed from any computer running web browsing software from its MGMT port or LAN port when it is connected to any of the RJ45 or SFP/SFP+ ports. The Web UI on the Switch can also be accessed using an HTTPS (SSL) connection.

This management interface is a graphical representation of the features that can be viewed and configured on the Switch. Most of the features available through the CLI can be accessed through the Web UI. Web browsers like Microsoft Internet Explorer, Mozilla Firefox, or Google Chrome can be used.



NOTE: The Command Line Interface (CLI) provides the functionality of managing, configuring, and monitoring **all** of the software features that are available on the Switch.

Logging into the Web UI

To access the Web UI open a standard web browser and enter the IP address of the Switch into the address bar of the browser and press the ENTER key.



NOTE: The factory default IP address of the Switch is 10.90.90.90 (subnet mask of 255.0.0.0) for normal ports and 192.168.0.1 (subnet mask of 255.255.255.0) is for the management port.



Figure 2-1 Displays entering the IP address in Internet Explorer

After pressing the ENTER key, the following authentication window should appear, as shown below.

Connect to 10.90.90.90

User Name

Password

Language ▼

Login Reset

Figure 2-2 Web UI Login Window

When connecting to the Web UI of the Switch for the first time, leave the **User Name** and **Password** fields blank and click **Login** since there are no login user accounts created by default on the Switch.



NOTE: After a user account was created, login credentials will be required to access the Web UI. During the sending and receiving of the login password to and from the Switch, this information will be protected using TLS/SSL to prevent attackers from snooping this information to gain unauthorized access to the Switch.



NOTE: The Switch only supports ASCII characters for input values.

Web User Interface (Web UI)

The Web UI provides access to various Switch configuration and management windows. It allows the user to view performance statistics, and permits graphical monitoring of the system's status.

Areas of the User Interface

The figure below shows the user interface. Four distinct areas that divide the user interface, as described in the table.

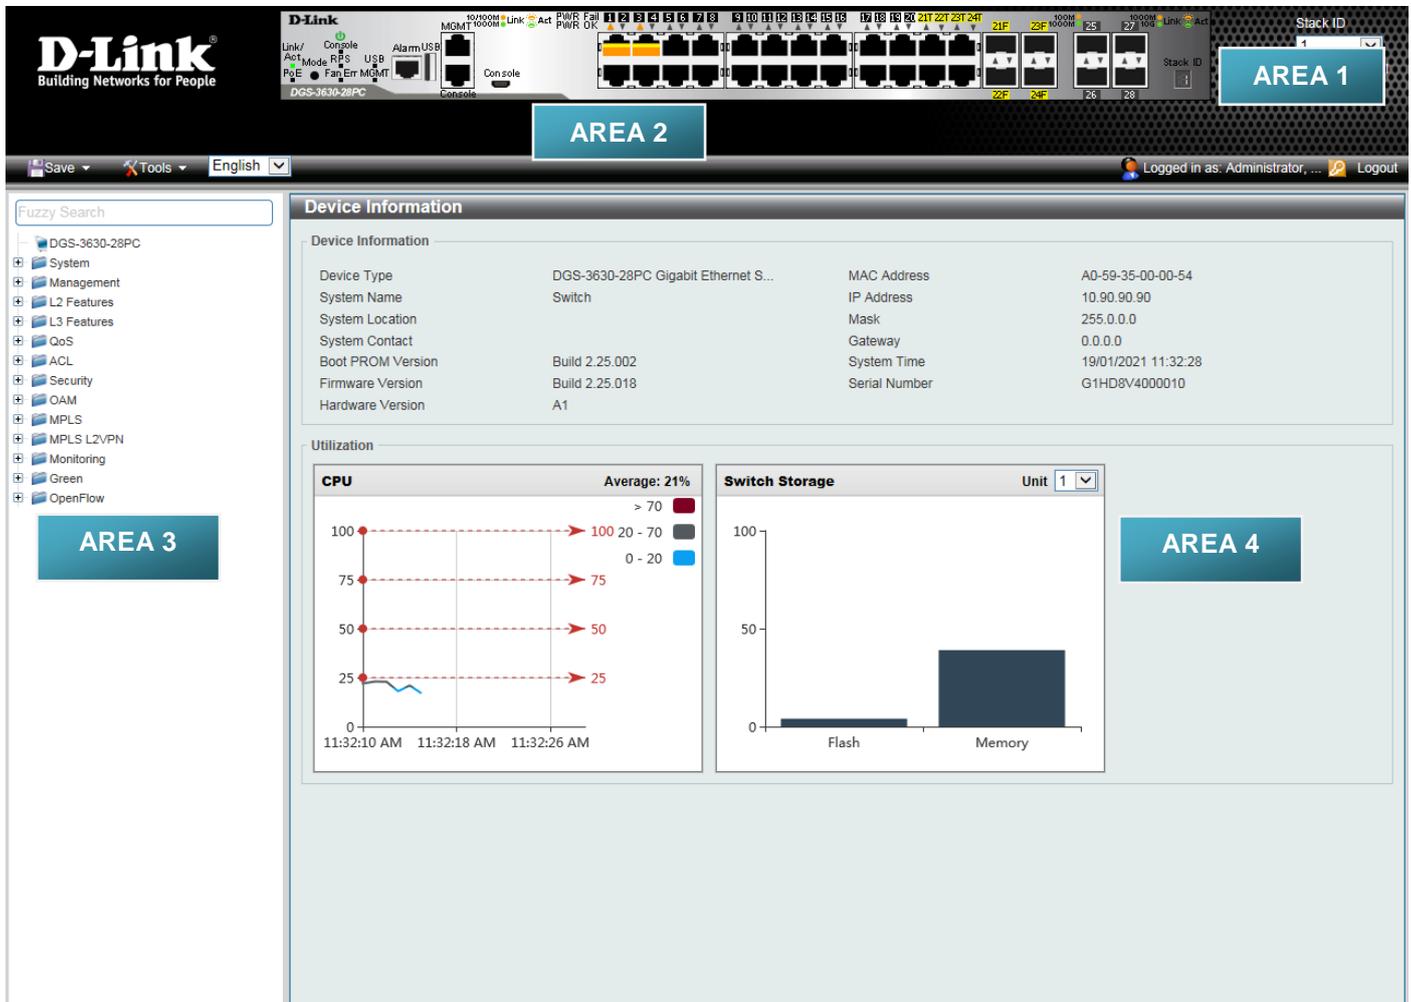


Figure 2-3 Main Web UI Window

Area Number	Description
AREA 1	This area displays a graphical, near real-time image of the front panel of the Switch. This area displays the Switch's ports and expansion modules. It also shows port activity based on a specific mode. Some management functions, including port monitoring, are accessible from here. Click the D-Link logo to go to the D-Link website.
AREA 2	This area displays a toolbar used to access Save and Tools menus.
AREA 3	This area displays a file explorer-type menu tree with all configurable options. Select the folder or window to display. Open folders and click the hyperlinked window buttons and subfolders contained within them to display information pertaining to that category.
AREA 4	In this area, the Switch's configuration page can be found, based on the selection made in AREA 3 .



NOTE: The best screen resolution for viewing the Web UI is 1280 x 1024 pixels.

3. System

[Device Information](#)
[System Information Settings](#)
[Peripheral Settings](#)
[Port Configuration](#)
[Interface Description](#)
[Loopback Test](#)
[PoE](#)
[System Log](#)
[Time and SNTP](#)
[Time Range](#)
[PTP \(Precise Time Protocol\)](#)
[USB Console Settings](#)
[SRM](#)
[Switch Controller Settings](#)

Device Information

In the Device Information section, the user can view a list of basic information regarding the Switch. It appears automatically when you log on to the Switch. To return to the Device Information window after viewing other windows, click the **DGS-3630-28PC** link.

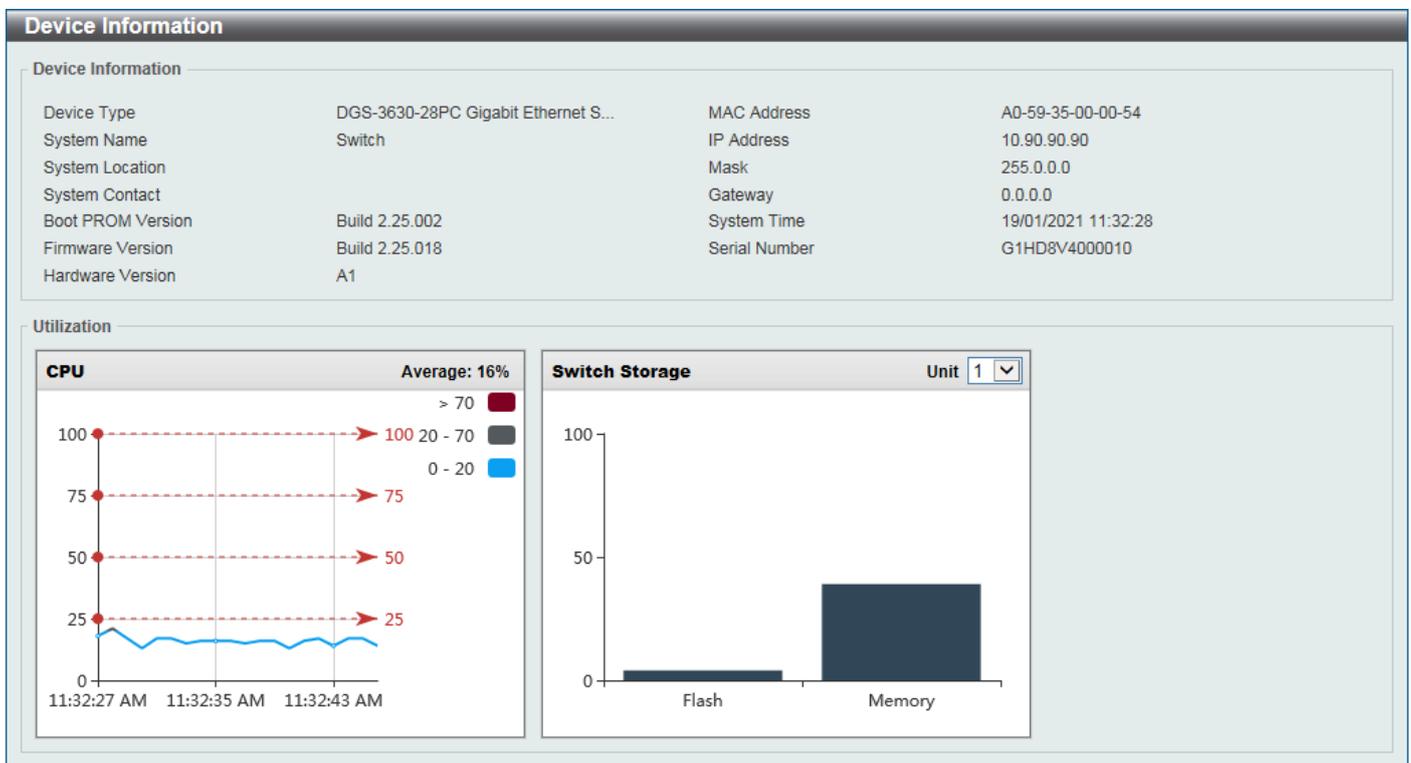


Figure 3-1 Device Information Window

System Information Settings

This window is used to display and configure the system information settings and management interface configuration settings.

To view the following window, click **System > System Information Settings**, as shown below:

Figure 3-2 System Information Settings Window

The fields that can be configured in **System Information Settings** are described below:

Parameter	Description
System Name	Enter a system name for the Switch, if so desired. This name will identify it in the Switch network.
System Location	Enter the location of the Switch, if so desired.
System Contact	Enter a contact name for the Switch, if so desired.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Management Interface** are described below:

Parameter	Description
State	Select to enable or disable the state of the management interface here.
IPv4 Address	Enter the IPv4 address for this interface here.
Subnet Mask	Enter the IPv4 subnet mask for this interface here.
Gateway	Enter the gateway IPv4 address for this interface here.
Description	Enter the description for the management interface here. This can be up to 64 characters long.

Click the **Apply** button to accept the changes made.

Peripheral Settings

This window is used to display and configure the environment trap settings and environment temperature threshold settings.

To view the following window, click **System > Peripheral Settings**, as shown below:

Figure 3-3 Peripheral Settings Window

The fields that can be configured in **Environment Trap Settings** are described below:

Parameter	Description
Fan Trap	Select to enable or disable the fan trap state for warning fan event (fan failed or fan recover).
Power Trap	Select to enable or disable the power trap state for warning power event (power failed or power recover).
Temperature Trap	Select to enable or disable the temperature trap state for warning temperature event (temperature thresholds exceeded or temperature recover).

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Environment Temperature Threshold Settings** are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
Thermal	Select the thermal sensor ID.
High Threshold	Enter the high threshold value of the warning temperature setting. The range is from -100 to 200 degrees Celsius. Tick the Default check box to return to the default value.
Low Threshold	Enter the low threshold value of the warning temperature setting. The range is from -100 to 200 degrees Celsius. Tick the Default check box to return to the default value.

Click the **Apply** button to accept the changes made.

Port Configuration

Port Settings

This window is used to display and configure the Switch's port settings.



NOTE: The **10M** and **100M** speed options are only applicable when connecting to the **Management Port** (Mgmt 0).

To view the following window, click **System > Port Configuration > Port Settings**, as shown below:

Port	Link Status	Medium	State	MDIX	Flow Control		Duplex	Speed	Auto Downgrade	Link Status Log	Description
					Send	Receive					
eth1/0/1	Up	-	Enabled	Auto-MDIX	Off	Off	Auto-duplex	Auto-speed	Disabled	On	
eth1/0/2	Down	-	Enabled	Auto-MDIX	Off	Off	Auto-duplex	Auto-speed	Disabled	On	
eth1/0/3	Up	-	Enabled	Auto-MDIX	Off	Off	Auto-duplex	Auto-speed	Disabled	On	
eth1/0/4	Down	-	Enabled	Auto-MDIX	Off	Off	Auto-duplex	Auto-speed	Disabled	On	
eth1/0/5	Down	-	Enabled	Auto-MDIX	Off	Off	Auto-duplex	Auto-speed	Disabled	On	
eth1/0/6	Down	-	Enabled	Auto-MDIX	Off	Off	Auto-duplex	Auto-speed	Disabled	On	
eth1/0/7	Down	-	Enabled	Auto-MDIX	Off	Off	Auto-duplex	Auto-speed	Disabled	On	
eth1/0/8	Down	-	Enabled	Auto-MDIX	Off	Off	Auto-duplex	Auto-speed	Disabled	On	

Figure 3-4 Port Settings Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the stacking unit ID of the Switch that will be configured here.
From Port - To Port	Select the appropriate port range used for the configuration here.
Media Type	Select the port media type here. Options to choose from are Auto , RJ45 , and SFP . Selecting the SFP option includes the use of SFP+ transceivers for 10G connectivity.
State	Select to enable or disable the physical port state here.
Flow Control	Select to turn flow control On or Off here. Note: This feature will not work through Switches that are physically stacked.
Link Status Log	Select to enable or disable the link status log function here.
Description	Select the checkbox and enter the description for the corresponding port here. This can be up to 64 characters long.
Auto Downgrade	Select to enable or disable the feature to automatically downgrade the advertised speed in the event that a link cannot be established at the available speed.
MDIX	Select the Medium Dependent Interface Crossover (MDIX) option here. Options to choose from are: <ul style="list-style-type: none"> • Auto - Select this option for auto-sensing of the optimal type of cabling. • Normal - Select this option for normal cabling. If this option is selected, the port is in the MDIX mode and can be connected to a PC NIC using a straight-through cable or a port (in the MDI mode) on another Switch through a cross-over cable. • Cross - Select this option for cross-over cabling. If this option is selected, the port is in the MDI mode and can be connected to a port (in the MDIX mode) on another Switch through a straight cable.
Duplex	Select the duplex mode used here. Options to choose from are Auto and Full . The half-duplex mode is not supported on the Switch.
Speed	Select the port speed option here. This option will manually force the connection speed on the selected port to connect at the specified speed only.

Parameter	Description
	<p>The Master setting will allow the port to advertise capabilities related to duplex, speed and physical layer type. The master setting will also determine the master and slave relationship between the two connected physical layers. This relationship is necessary for establishing the timing control between the two physical layers. The timing control is set on a master physical layer by a local source.</p> <p>The Slave setting uses loop timing, where the timing comes from a data stream received from the master. If one connection is set for master, the other side of the connection must be set for slave. Any other configuration will result in a 'link down' status for both ports.</p> <p>Options to choose from are:</p> <ul style="list-style-type: none"> • Auto - Specifies that for copper ports, auto-negotiation will start to negotiate the speed and flow control with its link partner. For fiber ports, auto-negotiation will start to negotiate the clock and flow control with its link partner. • 10M - Specifies to force the port speed to 10 Mbps. This option is only available for 10 Mbps copper connections. • 100M - Specifies to force the port speed to 100 Mbps. This option is only available for 100 Mbps copper connections. • 1000M - Specifies to force the port speed to 1 Gbps. This option is only available for 1 Gbps fiber connections. • 1000M Master - Specifies to force the port speed to 1 Gbps and operates as the master, to facilitate the timing of transmit and receive operations. This option is only available for 1 Gbps copper connections. • 1000M Slave - Specifies to force the port speed to 1 Gbps and operates as the slave, to facilitate the timing of transmit and receive operations. This option is only available for 1 Gbps copper connections. • 10G - Specifies to force the port speed to 10 Gbps. This option is only available for 10 Gbps fiber connections. • 10G Master - Specifies to force the port speed to 10 Gbps and operates as the master, to facilitate the timing of transmit and receive operations. This option is only available for 10 Gbps copper connections. • 10G Slave - Specifies to force the port speed to 10 Gbps and operates as the slave, to facilitate the timing of transmit and receive operations. This option is only available for 10 Gbps copper connections.
Capability Advertised	When the Speed is set to Auto , these capabilities are advertised during auto-negotiation.

Click the **Apply** button to accept the changes made.

Port Status

This window is used to view the Switch's physical port status and settings.

To view the following window, click **System > Port Configuration > Port Status**, as shown below:

Port	Status	MAC Address	VLAN	Flow Control Operator		Duplex	Speed	Type	Last LinkChange
				Send	Receive				
eth1/0/1	Connected	80-26-89-8D-A8-00	1	Off	Off	Auto-Full	Auto-1000M	1000BASE-T	0:1:41:43
eth1/0/2	Not-Connected	80-26-89-8D-A8-01	1	Off	Off	Auto	Auto	1000BASE-T	0:0:0:0
eth1/0/3	Not-Connected	80-26-89-8D-A8-02	1	Off	Off	Auto	Auto	1000BASE-T	0:0:0:0
eth1/0/4	Not-Connected	80-26-89-8D-A8-03	1	Off	Off	Auto	Auto	1000BASE-T	0:0:0:0
eth1/0/5	Not-Connected	80-26-89-8D-A8-04	1	Off	Off	Auto	Auto	1000BASE-T	0:0:0:0
eth1/0/6	Not-Connected	80-26-89-8D-A8-05	1	Off	Off	Auto	Auto	1000BASE-T	0:0:0:0
eth1/0/7	Not-Connected	80-26-89-8D-A8-06	1	Off	Off	Auto	Auto	1000BASE-T	0:0:0:0
eth1/0/8	Not-Connected	80-26-89-8D-A8-07	1	Off	Off	Auto	Auto	1000BASE-T	0:0:0:0

Figure 3-5 Port Status Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the stacking unit ID of the Switch that will be displayed here.

Port GBIC

This window is used to view active GBIC information found on each applicable physical port of this Switch.

To view the following window, click **System > Port Configuration > Port GBIC**, as shown below:

Port	Interface Type
eth1/0/1	1000BASE-T
eth1/0/2	1000BASE-T
eth1/0/3	1000BASE-T
eth1/0/4	1000BASE-T
eth1/0/5	1000BASE-T
eth1/0/6	1000BASE-T
eth1/0/7	1000BASE-T

Figure 3-6 Port GBIC Window


The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this display here.

Port Auto Negotiation

This window is used to view detailed port auto-negotiation information.

To view the following window, click **System > Port Configuration > Port Auto Negotiation**, as shown below:

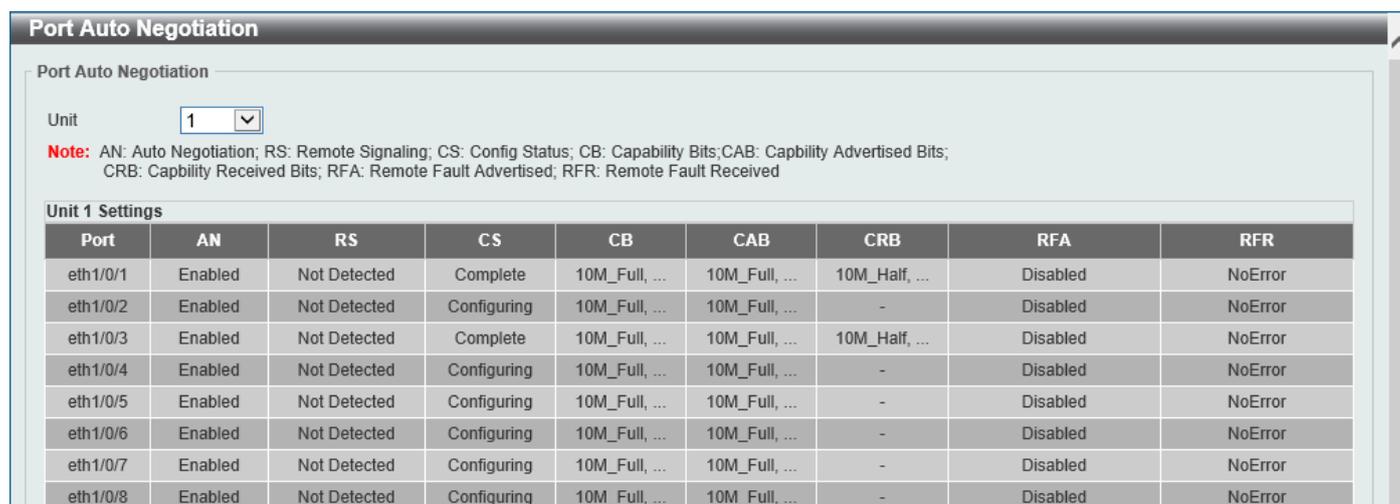

The screenshot shows the 'Port Auto Negotiation' window. At the top, there is a 'Unit' dropdown menu set to '1'. Below it is a note: 'Note: AN: Auto Negotiation; RS: Remote Signaling; CS: Config Status; CB: Capability Bits; CAB: Capability Advertised Bits; CRB: Capability Received Bits; RFA: Remote Fault Advertised; RFR: Remote Fault Received'. The main content is a table titled 'Unit 1 Settings' with the following data:

Port	AN	RS	CS	CB	CAB	CRB	RFA	RFR
eth1/0/1	Enabled	Not Detected	Complete	10M_Full, ...	10M_Full, ...	10M_Half, ...	Disabled	NoError
eth1/0/2	Enabled	Not Detected	Configuring	10M_Full, ...	10M_Full, ...	-	Disabled	NoError
eth1/0/3	Enabled	Not Detected	Complete	10M_Full, ...	10M_Full, ...	10M_Half, ...	Disabled	NoError
eth1/0/4	Enabled	Not Detected	Configuring	10M_Full, ...	10M_Full, ...	-	Disabled	NoError
eth1/0/5	Enabled	Not Detected	Configuring	10M_Full, ...	10M_Full, ...	-	Disabled	NoError
eth1/0/6	Enabled	Not Detected	Configuring	10M_Full, ...	10M_Full, ...	-	Disabled	NoError
eth1/0/7	Enabled	Not Detected	Configuring	10M_Full, ...	10M_Full, ...	-	Disabled	NoError
eth1/0/8	Enabled	Not Detected	Configuring	10M_Full, ...	10M_Full, ...	-	Disabled	NoError

Figure 3-7 Port Auto Negotiation Window


The fields that can be configured are described below:

Parameter	Description
Unit	Select the stacking unit ID of the Switch that will be displayed here.

Error Disable Settings

This window is used to display and configure the recovery from the Error Disable causes and to configure the recovery interval.

To view the following window, click **System > Port Configuration > Error Disable Settings**, as shown below:

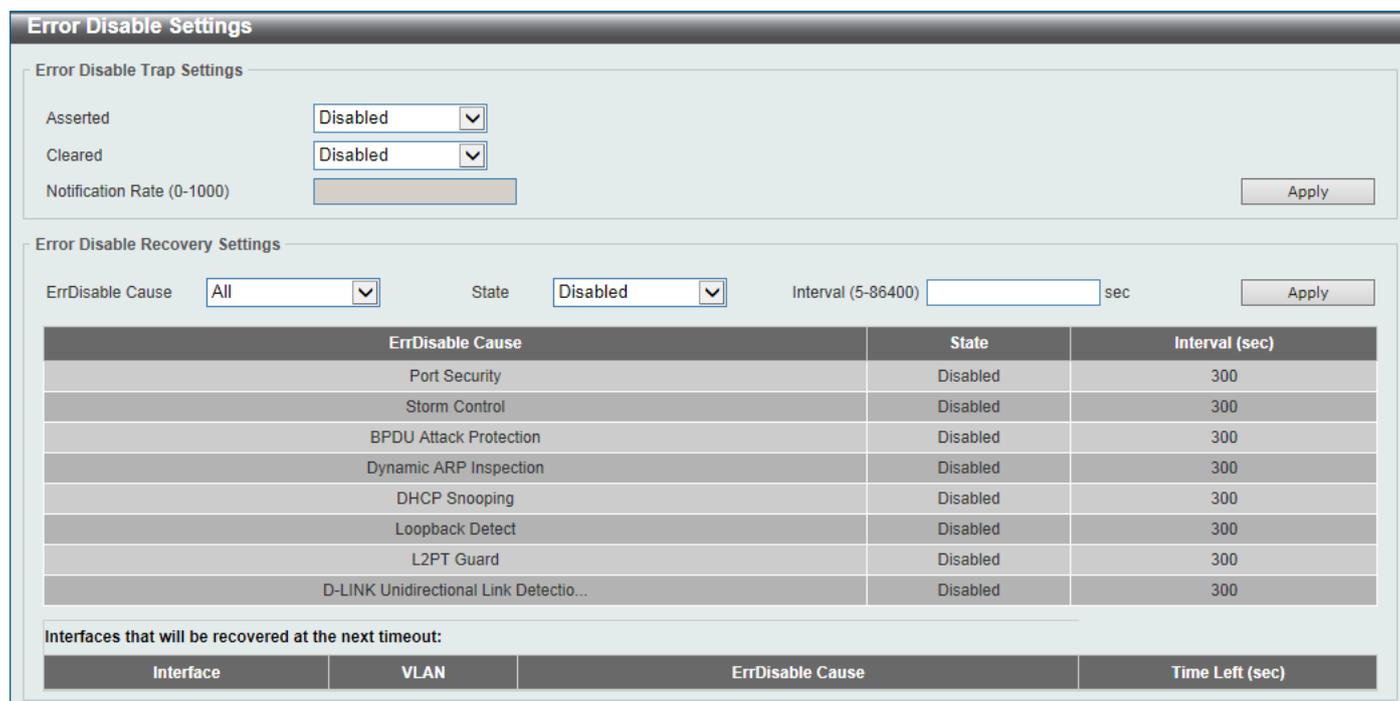

Error Disable Settings

Error Disable Trap Settings

Asserted: Disabled

Cleared: Disabled

Notification Rate (0-1000):

Apply

Error Disable Recovery Settings

ErrDisable Cause: All State: Disabled Interval (5-86400) sec

Apply

ErrDisable Cause	State	Interval (sec)
Port Security	Disabled	300
Storm Control	Disabled	300
BPDU Attack Protection	Disabled	300
Dynamic ARP Inspection	Disabled	300
DHCP Snooping	Disabled	300
Loopback Detect	Disabled	300
L2PT Guard	Disabled	300
D-LINK Unidirectional Link Detectio...	Disabled	300

Interfaces that will be recovered at the next timeout:

Interface	VLAN	ErrDisable Cause	Time Left (sec)
-----------	------	------------------	-----------------

Figure 3-8 Error Disable Settings Window

The fields that can be configured for **Error Disable Trap Settings** are described below:

Parameter	Description
Asserted	Specifies to enable or disable notifications for entering into the error disabled state.
Cleared	Specifies to enable or disable notifications for exiting from the error disabled state.
Notification Rate	Enter the notification rate value here. This sets the number of traps per minute. The packets that exceed the rate will be dropped. The range is from 0 to 1000. The default value (0) indicates that an SNMP trap will be generated for every change of the error disabled state.

Click the **Apply** button to accept the changes made.

The fields that can be configured for **Error Disable Recovery Settings** are described below:

Parameter	Description
ErrDisable Cause	Select the error disabled cause here. Options to choose from are Port Security , Storm Control , BPDU Attack Protection , Dynamic ARP Inspection , DHCP Snooping , Loopback Detect , L2PT Guard , and DULD .
State	Select to enable or disable the error disabled recovery feature here.
Interval	Enter the time, in seconds, to recover the port from the error state caused by the specified module. The range is from 5 to 86400.

Click the **Apply** button to accept the changes made.

Jumbo Frame

This window is used to display and configure the jumbo frame size and settings. The Switch supports jumbo frames. Jumbo frames are Ethernet frames with more than 1,518 bytes of payload. The Switch supports jumbo frames with a maximum frame size of up to 12,288 bytes.

To view the following window, click **System > Port Configuration > Jumbo Frame**, as shown below:

Port	Maximum Receive Frame Size (bytes)
eth1/0/1	1536
eth1/0/2	1536
eth1/0/3	1536
eth1/0/4	1536
eth1/0/5	1536
eth1/0/6	1536
eth1/0/7	1536
eth1/0/8	1536

Figure 3-9 Jumbo Frame Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the stacking unit ID of the Switch that will be configured here.
From Port - To Port	Select the appropriate port range used for the configuration here.
Maximum Receive Frame Size	Enter the maximum receive frame size value here. This value must be between 64 and 12288 bytes. By default, this value is 1536 bytes.

Click the **Apply** button to accept the changes made.

Interface Description

This window is used to display the status, administrative status, and description of each port on the Switch.

To view the following window, click **System > Interface Description**, as shown below:

Interface	Status	Administrative	Description
eth1/0/1	up	enabled	
eth1/0/2	down	enabled	
eth1/0/3	up	enabled	
eth1/0/4	down	enabled	
eth1/0/5	down	enabled	
eth1/0/6	down	enabled	
eth1/0/7	down	enabled	
eth1/0/8	down	enabled	
eth1/0/9	down	enabled	
eth1/0/10	down	enabled	

Figure 3-10 Interface Description Window

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

Loopback Test

This window is used to display and configure the loopback settings of the physical port interfaces and to perform loopback tests.

To view the following window, click **System > Loopback Test**, as shown below:

Port	Loopback Mode	64 Bytes		512 Bytes		1024 Bytes		1536 Bytes	
		TX	RX	TX	RX	TX	RX	TX	RX
eth1/0/1	None	0	0	0	0	0	0	0	0
eth1/0/2	None	0	0	0	0	0	0	0	0
eth1/0/3	None	0	0	0	0	0	0	0	0
eth1/0/4	None	0	0	0	0	0	0	0	0
eth1/0/5	None	0	0	0	0	0	0	0	0
eth1/0/6	None	0	0	0	0	0	0	0	0
eth1/0/7	None	0	0	0	0	0	0	0	0
eth1/0/8	None	0	0	0	0	0	0	0	0

Figure 3-11 Loopback Settings Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the appropriate port range used for the configuration here.
Loopback Mode	Select the loopback mode here. Options to choose from are: <ul style="list-style-type: none"> • None - Specifies not to enable the loopback mode. • Internal MAC - Specifies the internal loopback mode at the MAC layer. • Internal PHY Default - Specifies the internal loopback mode at the PHY layer to test the default medium. • Internal PHY Copper - Specifies the internal loopback mode at the PHY layer to test the copper medium. • Internal PHY Fiber - Specifies the internal loopback mode at the PHY layer to test the fiber medium. • External MAC - Specifies the external loopback mode at the MAC layer. • External PHY Default - Specifies the external loopback mode at the PHY layer to test the default medium. • External PHY Copper - Specifies the external loopback mode at the PHY layer to test the copper medium. • External PHY Fiber - Specifies the external loopback mode at the PHY layer to test the fiber medium.

Click the **Apply** button to accept the changes made.

PoE

The **DGS-3630-28PC** and **DGS-3630-52PC** switches support Power over Ethernet (PoE) as defined by the IEEE 802.3af and 802.3at. All ports can support PoE up to 30W. The Switch ports can supply about 48 VDC power to Powered Devices (PDs) over Category 5 or Category 3 UTP Ethernet cables. The Switch follows the standard Power

Sourcing Equipment (PSE) pin-out Alternative A, whereby power is sent out over pins 1, 2, 3 and 6. The Switches work with all D-Link 802.3af capable devices.

The Switch includes the following PoE features:

- Auto-discovery recognizes the connection of a PD and automatically sends power to it.
- The auto-disable feature occurs under two conditions:
 - If the total power consumption exceeds the system power limit
 - If the per-port power consumption exceeds the per port power limit
- Active circuit protection automatically disables the port if there is a short. Other ports will remain active.

Based on IEEE 802.3af/at, power is received and supplied according to the following classifications:

Class	Maximum power used by the PD	Maximum power supplied by the Switch
0	12.95 Watts	16.2 Watts
1	3.84 Watts	4.2 Watts
2	6.49 Watts	7.4 Watts
3	12.95 Watts	16.2 Watts
4	25.5 Watts	31.6 Watts

PoE System

This window is used to configure the PoE system and display the detailed power information and PoE chip parameters for PoE modules.

To view the following window, click **System > PoE > PoE System**, as shown below:

Unit	Delivered (W)	Power Budget (W)	Usage Threshold (%)	Policy Preempt	Trap State
1	0	370	99	Disabled	Disabled

Figure 3-12 PoE System Window


The fields that can be configured for **PoE System** are described below:

Parameter	Description
Unit	Select the stacking unit ID of the Switch that will be configured here.
Usage Threshold	Enter the usage threshold to generate a log and send the corresponding standard notification. The range is from 1 to 99 percent.
Policy Preempt	Select this option to enable or disable the disconnection of the Powered Device (PD) which is power-provisioned with a lower priority in order to release the power to the new connected PD with higher priority under power shortage conditions.
Trap State	Select this option to enable or disable the sending of PoE trap notifications.

Click the **Apply** button to accept the changes made.

Click the **Show Detail** button to see the PoE system Parameters table at the bottom of the window.

After clicking the **Show Detail** button, the following window will appear.

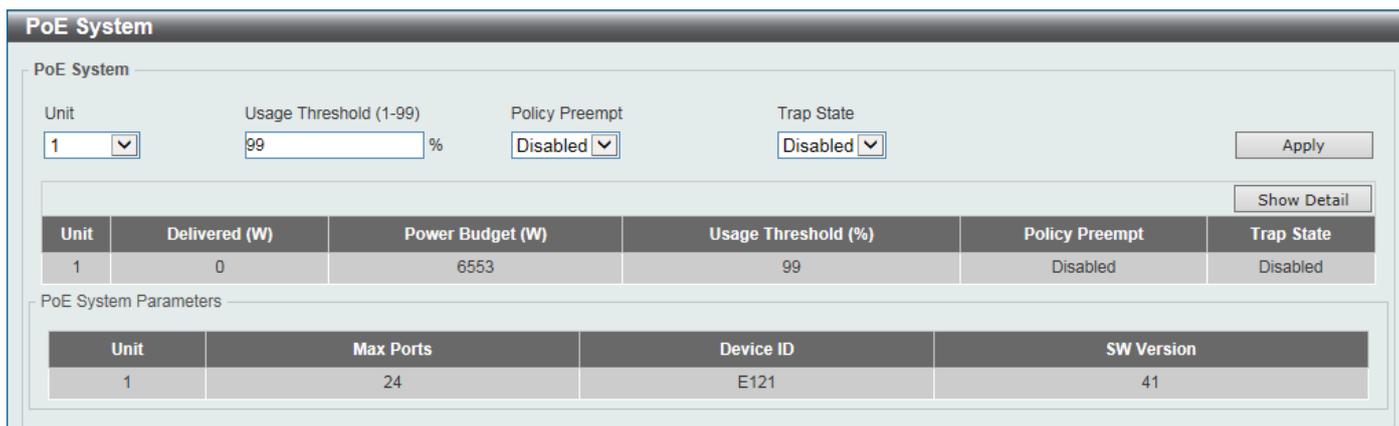

PoE System

PoE System

Unit: 1 | Usage Threshold (1-99): 99 % | Policy Preempt: Disabled | Trap State: Disabled |

Unit	Delivered (W)	Power Budget (W)	Usage Threshold (%)	Policy Preempt	Trap State
1	0	6553	99	Disabled	Disabled

PoE System Parameters


Unit	Max Ports	Device ID	SW Version
1	24	E121	41

Figure 3-13 PoE System (Show Detail) Window

PoE Status

This window is used to configure the description and display the PoE status of each port.

To view the following window, click **System > PoE > PoE Status**, as shown below:

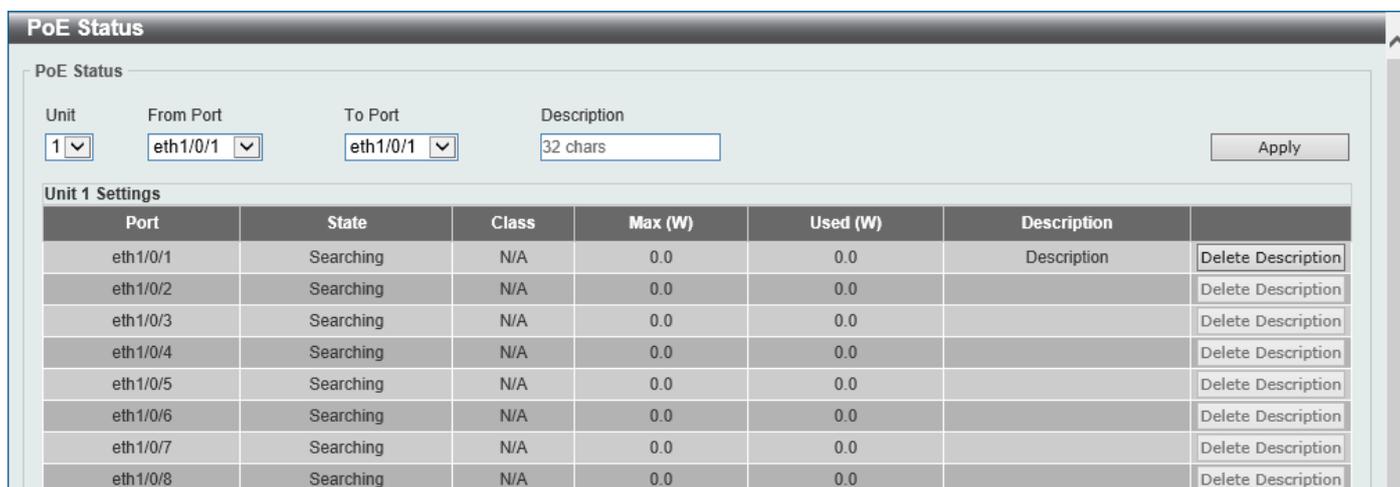

PoE Status

PoE Status

Unit: 1 | From Port: eth1/0/1 | To Port: eth1/0/1 | Description: 32 chars |

Unit 1 Settings

Port	State	Class	Max (W)	Used (W)	Description	
eth1/0/1	Searching	N/A	0.0	0.0	Description	Delete Description
eth1/0/2	Searching	N/A	0.0	0.0		Delete Description
eth1/0/3	Searching	N/A	0.0	0.0		Delete Description
eth1/0/4	Searching	N/A	0.0	0.0		Delete Description
eth1/0/5	Searching	N/A	0.0	0.0		Delete Description
eth1/0/6	Searching	N/A	0.0	0.0		Delete Description
eth1/0/7	Searching	N/A	0.0	0.0		Delete Description
eth1/0/8	Searching	N/A	0.0	0.0		Delete Description

Figure 3-14 PoE Status Window

The fields that can be configured for **PoE Status** are described below:

Parameter	Description
Unit	Select the stacking unit ID of the Switch that will be configured here.
From Port - To Port	Select the appropriate port range used for the configuration here.
Description	Enter the text that describes the PD connected to a PoE interface. The maximum length is 32 characters.

Click the **Apply** button to accept the changes made.

Click the **Delete Description** button to remove the description from the entry.

PoE Configuration

This window is used to display and configure the PoE configuration settings.



NOTE: If the Switch failed to supply power to the IEEE 802.3at Powered Device (PD),

- Check if the PD connected to the port supports the IEEE 802.3at standard
- Manually configure the PoE power limit value to 30 Watts for the corresponding port

To view the following window, click **System > PoE > PoE Configuration**, as shown below:

The screenshot shows the PoE Configuration window with the following configuration options:

- Unit: 1
- From Port: eth1/0/1
- To Port: eth1/0/1
- Priority: Low
- Legacy Support: Disabled
- Mode: Auto
- Max Wattage (1000-30000): []
- Time Range: []

Below the configuration options is a table titled "Unit 1 Settings" with the following data:

Port	Admin	Priority	Legacy Support	Time Range	
eth1/0/1	Auto	Low	Disabled	Weekdays	Delete Time Range
eth1/0/2	Auto	Low	Disabled		Delete Time Range
eth1/0/3	Auto	Low	Disabled		Delete Time Range
eth1/0/4	Auto	Low	Disabled		Delete Time Range
eth1/0/5	Auto	Low	Disabled		Delete Time Range
eth1/0/6	Auto	Low	Disabled		Delete Time Range
eth1/0/7	Auto	Low	Disabled		Delete Time Range
eth1/0/8	Auto	Low	Disabled		Delete Time Range

Figure 3-15 PoE Configuration Window

The fields that can be configured for **PoE Configuration** are described below:

Parameter	Description
Unit	Select the stacking unit ID of the Switch that will be configured here.
From Port - To Port	Select the appropriate port range used for the configuration here.
Priority	Select the priority for provisioning power to the port. Options to choose from are Critical , High , and Low .
Legacy Support	Select this option to enable or disable the support of legacy PD.
Mode	Select the power management mode for the PoE ports. Options to choose from are Auto and Never .
Max Wattage	When selecting Auto in the Mode drop-down list, this option appears. Select the check box and enter the maximum wattage of power that can be provisioned to the auto-detected PD. If the value is not entered, the class of the PD automatically determines the maximum wattage which can be provisioned. The valid range for maximum wattage is between 1000 mW and 30000 mW.
Time Range	When selecting Auto in the Mode drop-down list, this option appears. Select the check box and enter the name of the time range to determine the activation period.

Click the **Apply** button to accept the changes made.

Click the **Delete Time Range** button remove the time range association for the entry.

PD Alive

This window is used to display and configure the PoE PD alive settings. The PoE alive feature provides the solution when PD devices stop working or are not responding using the ping mechanism.

To view the following window, click **System > PoE > PD Alive**, as shown below:

PD Alive Configuration

Unit: 1 From Port: eth1/0/1 To Port: eth1/0/1 PD Alive State: Disabled PD IP Address: . . .

Poll Interval (10-300): 30 sec Retry Count (0-5): 2 Waiting Time (30-300): 90 sec Action: Both

Unit 1 Settings

Port	PD Alive State	PD IP Address	Poll Interval	Retry Count	Waiting Time	Action
eth1/0/1	Disabled	0.0.0.0	30	2	90	Both
eth1/0/2	Disabled	0.0.0.0	30	2	90	Both
eth1/0/3	Disabled	0.0.0.0	30	2	90	Both
eth1/0/4	Disabled	0.0.0.0	30	2	90	Both
eth1/0/5	Disabled	0.0.0.0	30	2	90	Both
eth1/0/6	Disabled	0.0.0.0	30	2	90	Both
eth1/0/7	Disabled	0.0.0.0	30	2	90	Both
eth1/0/8	Disabled	0.0.0.0	30	2	90	Both

Figure 3-16 PD Alive Window

The fields that can be configured for **PD Alive Configuration** are described below:

Parameter	Description
Unit	Select the stacking unit ID of the Switch that will be configured here.
From Port - To Port	Select the appropriate port range used for the configuration here.
PD Alive State	Select to enable or disable the state of the PoE alive function on the specified port(s) here.
PD IP Address	Enter the IPv4 address of the target PD here.
Poll Interval	Enter the poll interval value here. The range is from 10 to 300 seconds. This is the interval at which ping requests will be sent to the target PD to check the status.
Retry Count	Enter the retry count value here. The range is from 0 to 5. This is the amount of times that the ping request will be resend if the target PD does not respond.
Waiting Time	Enter the waiting time value here. The range is from 30 to 300 seconds. This is the time the Switch will wait for the PD to recover from rebooting.
Action	Select the action that will be taken here. Options to choose from are: <ul style="list-style-type: none"> • Reset - Specifies to reset the PoE port state. • Notify - Specifies to send logs and traps to notify the administrator. • Both - Specifies to send logs and traps and then to reset the PoE port state.

Click the **Apply** button to accept the changes made.

PoE Statistics

This window is used to display and clear the PoE statistics on the Switch ports.

To view the following window, click **System > PoE > PoE Statistics**, as shown below:

PoE Statistics Table

Unit: 1

Unit 1 Settings

Port	MPS Absent	Overload	Short	Power Denied	Invalid Signature	
eth1/0/1	0	0	0	0	117	Clear
eth1/0/2	0	0	0	0	152	Clear
eth1/0/3	0	0	0	0	152	Clear
eth1/0/4	0	0	0	0	152	Clear
eth1/0/5	0	0	0	0	152	Clear
eth1/0/6	0	0	0	0	152	Clear
eth1/0/7	0	0	0	0	152	Clear
eth1/0/8	0	0	0	0	153	Clear

Figure 3-17 PoE Statistics Window

The fields that can be configured for **PoE Statistics Table** are described below:

Parameter	Description
Unit	Select the stacking unit ID of the Switch that will be used here.

Click the **Clear All** button to clear PoE statistics for all ports.

Click the **Clear** button to clear the PoE statistics for the corresponding port.

PoE Measurement

This window is used to display the PoE measurement information on the Switch ports.

To view the following window, click **System > PoE > PoE Measurement**, as shown below:

PoE Measurement Table

Unit: 1

Unit 1 Settings

Port	Voltage (V)	Current (mA)	Temperature (C)	Power (W)
eth1/0/1	N/A	N/A	N/A	N/A
eth1/0/2	N/A	N/A	N/A	N/A
eth1/0/3	N/A	N/A	N/A	N/A
eth1/0/4	N/A	N/A	N/A	N/A
eth1/0/5	N/A	N/A	N/A	N/A
eth1/0/6	N/A	N/A	N/A	N/A
eth1/0/7	N/A	N/A	N/A	N/A
eth1/0/8	N/A	N/A	N/A	N/A

Figure 3-18 PoE Measurement Window

The fields that can be configured for **PoE Measurement Table** are described below:

Parameter	Description
Unit	Select the stacking unit ID of the Switch that will be used here.

PoE LLDP Classification

This window is used to display the PoE Link Layer Discovery Protocol (LLDP) classification.

To view the following window, click **System > PoE > PoE LLDP Classification**, as shown below:

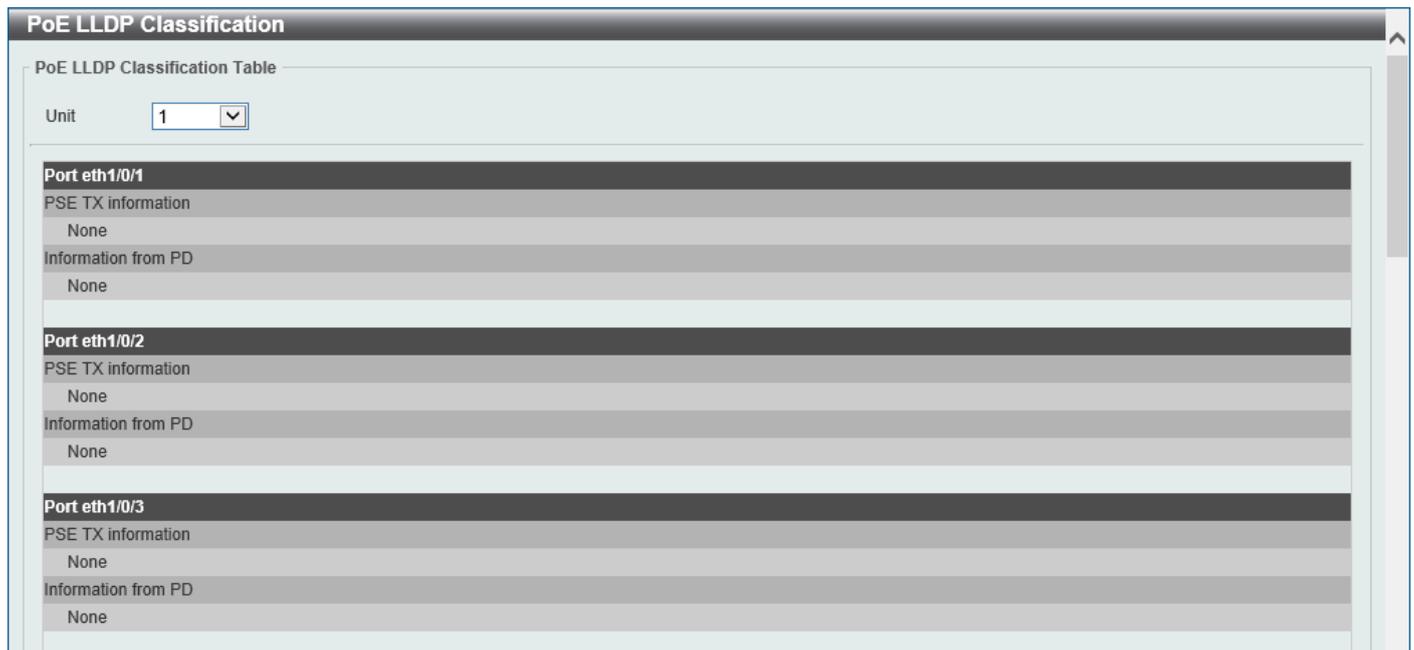


Figure 3-19 PoE LLDP Classification Window

The fields that can be configured for **PoE LLDP Classification Table** are described below:

Parameter	Description
Unit	Select the stacking unit ID of the Switch that will be used here.

System Log

System Log Settings

This window is used to display and configure the system log settings.

To view the following window, click **System > System Log > System Log Settings**, as shown below:

System Log Settings

Log State

Log State: Enabled [v] [Apply]

Source Interface Settings

Source Interface State: Enabled [v]
 Type: VLAN [v] Interface ID (1-4094): 1 [text] [Apply]

Buffer Log Settings

Buffer Log State: Enabled [v]
 Severity: 4(Warnings) [v]
 Discriminator Name: 15 chars [text]
 Write Delay (0-65535): 300 [text] sec Infinite [Apply]

Console Log Settings

Console Log State: Disabled [v]
 Severity: 4(Warnings) [v]
 Discriminator Name: 15 chars [text] [Apply]

SMTP Log Settings

SMTP Log State: Disabled [v]
 Severity: 4(Warnings) [v]
 Discriminator Name: 15 chars [text] [Apply]

Monitor Log Settings

Monitor Log State: Disabled [v]
 Severity: 4(Warnings) [v]
 Discriminator Name: 15 chars [text] [Apply]

Figure 3-20 System Log Settings Window

The fields that can be configured for **Log State** are described below:

Parameter	Description
Log State	Select the enable or disable the global system log state here.

Click the **Apply** button to accept the changes made.

The fields that can be configured for **Source Interface Settings** are described below:

Parameter	Description
Source Interface State	Select this option to enable or disable the global source interface state.
Type	Select the type of interface that will be used. Options to choose from are Loopback , Mgmt , and VLAN .
Interface ID	Enter the interface ID used here. For loopback interfaces this ID can be from 1 to 8. For the management (Mgmt) interface this value is always 0. For VLAN interfaces this value is from 1 to 4094.

Click the **Apply** button to accept the changes made.

The fields that can be configured for **Buffer Log Settings** are described below:

Parameter	Description
Buffer Log State	Select to globally enable or disable the buffer log state here. Options to choose from are Enable , Disabled , and Default . When selecting the Default option, the global buffer log state will follow the default behavior.
Severity	Select the severity value of the type of information that will be logged. Options to choose from are 0 (Emergencies) , 1 (Alerts) , 2 (Critical) , 3 (Errors) , 4 (Warnings) , 5 (Notifications) , 6 (Informational) , and 7 (Debugging) .
Discriminator Name	Enter the discriminator name used here. This name can be up to 15 characters long. This specifies the name of the discriminator profile that will be used to filter buffer log messages based on the filtering criteria specified within that profile.
Write Delay	Enter the log write delay value here. This value must be between 0 and 65535 seconds. By default, this value is 300 seconds. Tick the Infinite option, to disable the write delay feature.

Click the **Apply** button to accept the changes made.

The fields that can be configured for **Console Log Settings** are described below:

Parameter	Description
Console Log State	Select to globally enable or disable the console log state here.
Severity	Select the severity value of the type of information that will be logged. Options to choose from are 0 (Emergencies) , 1 (Alerts) , 2 (Critical) , 3 (Errors) , 4 (Warnings) , 5 (Notifications) , 6 (Informational) , and 7 (Debugging) .
Discriminator Name	Enter the discriminator name used here. This name can be up to 15 characters long. This specifies the name of the discriminator profile that will be used to filter console log messages based on the filtering criteria specified within that profile.

Click the **Apply** button to accept the changes made.

The fields that can be configured for **SMTP Log Settings** are described below:

Parameter	Description
SMTP Log State	Select to globally enable or disable the SMTP log state here.
Severity	Select the severity value of the type of information that will be logged. Options to choose from are 0 (Emergencies) , 1 (Alerts) , 2 (Critical) , 3 (Errors) , 4 (Warnings) , 5 (Notifications) , 6 (Informational) , and 7 (Debugging) .
Discriminator Name	Enter the discriminator name used here. This name can be up to 15 characters long. This specifies the name of the discriminator profile that will be used to filter SMTP log messages based on the filtering criteria specified within that profile.

Click the **Apply** button to accept the changes made.

The fields that can be configured for **Monitor Log Settings** are described below:

Parameter	Description
Monitor Log State	Select to globally enable or disable the monitor log state here.
Severity	Select the severity value of the type of information that will be logged. Options to choose from are 0 (Emergencies) , 1 (Alerts) , 2 (Critical) , 3 (Errors) , 4 (Warnings) , 5 (Notifications) , 6 (Informational) , and 7 (Debugging) .
Discriminator Name	Enter the discriminator name used here. This name can be up to 15 characters long. This specifies the name of the discriminator profile that will be used to

Parameter	Description
	filter monito log messages based on the filtering criteria specified within that profile.

Click the **Apply** button to accept the changes made.

System Log Discriminator Settings

This window is used to display and configure the system log discriminator settings.

To view the following window, click **System > System Log > System Log Discriminator Settings**, as shown below:

Figure 3-21 System Log Discriminator Settings Window

The fields that can be configured are described below:

Parameter	Description
Discriminator Name	Enter the name of the discriminator profile here. This name can be up to 15 characters long.
Action	Select the facility behavior option and the type of facility that will be associated with the selected behavior here. Behavior options to choose from are Drops and Includes .
Severity	Select the severity behavior option and the value of the type of information that will be logged. Behavior options to choose from are Drops and Includes . Severity value options to choose from are 0 (Emergencies) , 1 (Alerts) , 2 (Critical) , 3 (Errors) , 4 (Warnings) , 5 (Notifications) , 6 (Informational) , and 7 (Debugging) .

Click the **Apply** button to accept the changes made.

Click the **Delete** button to delete the specified entry.

System Log Server Settings

This window is used to display and configure the system log server settings.

To view the following window, click **System > System Log > System Log Server Settings**, as shown below:

System Log Server Settings

Log Server

Host IPv4 Address
 Host IPv6 Address

UDP Port (514,1024-65535)
 Severity

Facility
 Discriminator Name

VRF Name

Total Entries: 1

Server IP	VRF Name	Severity	Facility	Discriminator Name	UDP Port
192.168.70.1		Warnings	23		514

Figure 3-22 System Log Server Settings Window

The fields that can be configured are described below:

Parameter	Description																																																
Host IPv4 Address	Enter the system log server IPv4 address here.																																																
Host IPv6 Address	Enter the system log server IPv6 address here.																																																
UDP Port	Enter the system log server UDP port number here. This value must be either 514 or between 1024 and 65535. By default, this value is 514.																																																
Severity	Select the severity value of the type of information that will be logged. Options to choose from are 0 (Emergencies) , 1 (Alerts) , 2 (Critical) , 3 (Errors) , 4 (Warnings) , 5 (Notifications) , 6 (Informational) , and 7 (Debugging) .																																																
Facility	Select the facility number that will be logged here. The range is from 0 to 23 . Each facility number is associated with a specific facility. See the table below:																																																
	<table border="1"> <thead> <tr> <th>Facility Number</th> <th>Facility Name</th> <th>Facility Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>kern</td> <td>Kernel messages</td> </tr> <tr> <td>1</td> <td>user</td> <td>User-level messages</td> </tr> <tr> <td>2</td> <td>mail</td> <td>Mail system</td> </tr> <tr> <td>3</td> <td>daemon</td> <td>System daemons</td> </tr> <tr> <td>4</td> <td>auth1</td> <td>Security/authorization messages</td> </tr> <tr> <td>5</td> <td>syslog</td> <td>Messages generated internally by the SYSLOG</td> </tr> <tr> <td>6</td> <td>lpr</td> <td>Line printer sub-system</td> </tr> <tr> <td>7</td> <td>news</td> <td>Network news sub-system</td> </tr> <tr> <td>8</td> <td>uucp</td> <td>UUCP sub-system</td> </tr> <tr> <td>9</td> <td>clock1</td> <td>Clock daemon</td> </tr> <tr> <td>10</td> <td>auth2</td> <td>Security/authorization messages</td> </tr> <tr> <td>11</td> <td>ftp</td> <td>FTP daemon</td> </tr> <tr> <td>12</td> <td>ntp</td> <td>NTP subsystem</td> </tr> <tr> <td>13</td> <td>logaudit</td> <td>Log audit</td> </tr> <tr> <td>14</td> <td>logalert</td> <td>Log alert</td> </tr> </tbody> </table>	Facility Number	Facility Name	Facility Description	0	kern	Kernel messages	1	user	User-level messages	2	mail	Mail system	3	daemon	System daemons	4	auth1	Security/authorization messages	5	syslog	Messages generated internally by the SYSLOG	6	lpr	Line printer sub-system	7	news	Network news sub-system	8	uucp	UUCP sub-system	9	clock1	Clock daemon	10	auth2	Security/authorization messages	11	ftp	FTP daemon	12	ntp	NTP subsystem	13	logaudit	Log audit	14	logalert	Log alert
Facility Number	Facility Name	Facility Description																																															
0	kern	Kernel messages																																															
1	user	User-level messages																																															
2	mail	Mail system																																															
3	daemon	System daemons																																															
4	auth1	Security/authorization messages																																															
5	syslog	Messages generated internally by the SYSLOG																																															
6	lpr	Line printer sub-system																																															
7	news	Network news sub-system																																															
8	uucp	UUCP sub-system																																															
9	clock1	Clock daemon																																															
10	auth2	Security/authorization messages																																															
11	ftp	FTP daemon																																															
12	ntp	NTP subsystem																																															
13	logaudit	Log audit																																															
14	logalert	Log alert																																															

Parameter	Description		
	15	clock2	Clock daemon
	16	local0	Local use 0 (local0)
	17	local1	Local use 1 (local1)
	18	local2	Local use 2 (local2)
	19	local3	Local use 3 (local3)
	20	local4	Local use 4 (local4)
	21	local5	Local use 5 (local5)
	22	local6	Local use 6 (local6)
	23	local7	Local use 7 (local7)
Discriminator Name	Enter the name of the discriminator that will be used to filter messages sent to the log server here. This name can be up to 15 characters long.		
VRF Name	Enter the name of the Virtual Routing and Forwarding (VRF) instance here. This name can be up to 12 characters long.		

Click the **Apply** button to accept the changes made.

Click the **Delete** button to delete the specified entry.

System Log

This window is used to view and clear the system log.

To view the following window, click **System > System Log > System Log**, as shown below:

The screenshot shows the 'System Log' window. At the top right, there is a 'Clear Log' button. Below it, the text 'Total Entries: 5' is displayed. A table with the following columns is shown: Index, Time, Level, and Log Description. The table contains five entries, all with a level of CRIT(2). At the bottom right of the table, there are navigation controls including a page indicator '1/1', left and right arrow buttons, a page number '1', and a 'Go' button.

Index	Time	Level	Log Description
5	2018-03-12 11:54:36	CRIT(2)	Stacking topology is...
4	2018-03-12 11:54:36	CRIT(2)	Unit 1, System start...
3	2018-03-12 11:54:36	CRIT(2)	Unit 1, System warm ...
2	2018-03-12 11:50:38	CRIT(2)	System started up
1	2018-03-12 11:50:38	CRIT(2)	System warm start

Figure 3-23 System Log Window

Click the **Clear Log** button to clear the system log entries displayed in the table.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

System Attack Log

This window is used to view and clear the system attack log.

To view the following window, click **System > System Log > System Attack Log**, as shown below:

Figure 3-24 System Attack Log Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the stacking unit ID of the Switch that will be displayed here.

Click the **Clear Attack Log** button to clear the system attack log entries displayed in the table.

Time and SNTP

Clock Settings

This window is used to display and configure the time settings for the Switch.

To view the following window, click **System > Time and SNTP > Clock Settings**, as shown below:

Figure 3-25 Clock Settings Window

The fields that can be configured are described below:

Parameter	Description
Time	Enter the current time in hours (HH), minutes (MM), and seconds (SS) here. For example, 18:30:30.
Date	Enter the current day (DD), month (MM), and year (YYYY) here. For example, 30/04/2015.

Click the **Apply** button to accept the changes made.

Time Zone Settings

This window is used to display and configure time zones and Daylight Savings Time settings for SNTP.

To view the following window, click **System > Time and SNTP > Time Zone Settings**, as shown below:

Time Zone Settings

Summer Time State: Disabled

Time Zone: + 00 00

Recurring Settings

From: Week of the Month: Last

From: Day of the Week: Sun

From: Month: Jan

From: Time (HH:MM): 00 00

To: Week of the Month: Last

To: Day of the Week: Sun

To: Month: Jan

To: Time (HH:MM): 00 00

Offset (30-120): 60

Date Settings

From: Date of the Month: 01

From: Month: Jan

From: Year: [Empty]

From: Time (HH:MM): 00 00

To: Date of the Month: 01

To: Month: Jan

To: Year: [Empty]

To: Time (HH:MM): 00 00

Offset (30-120): 60

Apply

Figure 3-26 Time Zone Settings Window

The fields that can be configured are described below:

Parameter	Description
Summer Time State	Select the summer time setting. Options to choose from are Disabled , Recurring Setting , and Date Setting . <ul style="list-style-type: none"> • Disabled - Select to disable the summer time setting. • Recurring Settings - Select to configure the summer time that should start and end on the specified week day of the specified month. • Date Settings - Select to configure the summer time that should start and end on the specified date of the specified month.
Time Zone	Select to specify your local time zone offset from Coordinated Universal Time (UTC).

The fields that can be configured in **Recurring Settings** are described below:

Parameter	Description
From: Week of the Month	Select week of the month that summer time will start.
From: Day of the Week	Select the day of the week that summer time will start.
From: Month	Select the month that summer time will start.
From: Time	Select the time of the day that summer time will start.
To: Week of the Month	Select week of the month that summer time will end.

Parameter	Description
To: Day of the Week	Select the day of the week that summer time will end.
To: Month	Select the month that summer time will end.
To: Time	Select the time of the day that summer time will end.
Offset	Enter the number of minutes to add during summer time. The default value is 60. The range of this offset is from 30 to 120.

The fields that can be configured in **Date Settings** are described below:

Parameter	Description
From: Date of the Month	Select date of the month that summer time will start.
From: Month	Select the month that summer time will start.
From: Year	Enter the year that the summer time will start.
From: Time	Select the time of the day that summer time will start.
To: Date of the Month	Select date of the month that summer time will end.
To: Month	Select the month that summer time will end.
To: Year	Enter the year that the summer time will end.
To: Time	Select the time of the day that summer time will end.
Offset	Enter the number of minutes to add during summer time. The default value is 60. The range of this offset is from 30 to 120.

Click the **Apply** button to accept the changes made.

SNTP Settings

The Simple Network Time Protocol (SNTP) is a protocol for synchronizing computer clocks through the Internet. It provides comprehensive mechanisms to access national time and frequency dissemination services, coordinate the SNTP subnet of servers and clients, and adjust the system clock on each participant.

This window is used to display and configure the SNTP settings for the Switch.

To view the following window, click **System > Time and SNTP > SNTP Settings**, as shown below:

Figure 3-27 SNTP Settings Window

The fields that can be configured in **SNTP Global Settings** are described below:

Parameter	Description
SNTP State	Select this option to enable or disable SNTP.
Poll Interval	Enter the synchronizing interval in seconds. The value is from 30 to 99999 seconds. The default interval is 720 seconds.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **SNTP Server Settings** are described below:

Parameter	Description
IPv4 Address	Enter the IPv4 address of the SNTP server which provides the SNTP reference.
IPv6 Address	Enter the IPv6 address of the SNTP server which provides the SNTP reference.
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long.

Click the **Add** button to add the SNTP server.

Click the **Delete** button to remove the specified entry.

Time Range

This window is used to display and configure the time profile settings.

To view the following window, click **System > Time Range**, as shown below:

Figure 3-28 Time Range Window

The fields that can be configured are described below:

Parameter	Description
Range Name	Enter the time profile range name here. This name can be up to 32 characters long.
From Week - To Week	Select the starting and ending days of the week that will be used for this time profile. Select the Daily check box to use this time profile for every day of the week. Select the End Week Day check box to use this time profile from the starting day of the week until the end of the week.

Parameter	Description
From Time - To Time	Select the starting and ending time of the day that will be used for this time profile. The first drop-down menu selects the hour and the second drop-down menu selects the minute.

Click the **Apply** button to accept the changes made.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Delete Periodic** button to delete the periodic entry.

Click the **Delete** button to delete the specified entry.

PTP (Precise Time Protocol)

The Precision Time Protocol (PTP) system is able to synchronize the distributed clocks with an accuracy of less than 1 microsecond via Ethernet networks.

PTP is a technology that enables precise synchronization of clocks in network systems. PTP is applicable to systems communicating by Local Area Networks supporting multicast messaging including Ethernet and UDP. PTP enables heterogeneous systems that include clocks of various inherent precision, resolution and stability to synchronize to a grandmaster clock.

The synchronization is divided into two processes. The Best Master Clock (BMC) algorithm determines the PTP status (master/slave) of all local ports. The synchronization algorithm computes the clock offset between the master and slave clock. There are two mechanisms, Delay Request-response Mechanism and Peer Delay Mechanism, for measuring the propagation time of an event message.

The PTP system has three types of PTP devices, boundary clock, end-to-end transparent clock, and peer-to-peer transparent clock. Only the boundary clock can participate in the selection of the best master clock.

When the stacking mode is enabled and the member ports of a trunk group exists in different stack units, the PTP function will:

- Execute normally when the sending and receiving of PTP messages are to member ports that are on the same stack unit.
- Execute abnormally, when the sending and receiving of PTP messages are to member ports that are on different stack units.

PTP Global Settings

This window is used to display and configure the global Precise Time Protocol (PTP) settings.

To view the following window, click **System > PTP (Precise Time Protocol) > PTP Global Settings**, as shown below:

Figure 3-29 PTP Global Settings Window

The fields that can be configured in **PTP Global Settings** are described below:

Parameter	Description
PTP State	Select to enable or disable the PTP feature here. When the PTP function is enabled, the Switch port will add residence time to correct the field. When the PTP function is disabled, all Switch ports will forward the PTP packets according to the multicast filtering configuration.
PTP Mode	Select the PTP mode here. Options to choose from are: <ul style="list-style-type: none"> • Boundary - Specifies the Switch as a Boundary Clock. • P2P Transparent - Specifies the Switch as a Peer-to-Peer Transparent Clock. This is a clock that provides Precision Time Protocol (PTP) event transit time information and also provides corrections for the propagation delay of the link. The link, in this case, is connected to the port that is receiving the PTP event messages. Ports on peer-to-peer transparent clocks use the peer delay mechanism to calculate the propagation delay between PTP ports. • E2E Transparent - Specifies the Switch as an End-to-End Transparent Clock. An End-to-End Transparent Clock supports the use of an end-to-end delay measurement mechanism between the slave clock and the master clock. Ports on end-to-end transparent clocks are independent of propagation delay mechanisms.
PTP Transport Protocol	Select the PTP transport protocol here. Options to choose from are: <ul style="list-style-type: none"> • Ethernet - Specifies the transport protocol of PTP as IEEE802.3 Ethernet. • UDP - Specifies the transport protocol of PTP as UDP over IPv4.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **PTP Clock Domain Settings** are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
PTP Clock Domain Number	Enter the PTP clock domain number here. All PTP messages, data sets, state machines, and all other PTP entities are always associated with a particular domain number. The range is from 0 to 127.
PTP Clock Domain Name	Enter the PTP clock domain name here. The name is used for user reference. This name can be up to 32 characters long.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **PTP Boundary Clock Settings** are described below:

Parameter	Description
Priority 1	Enter the PTP boundary clock Priority 1 value here. The priority 1 attribute is used in the execution of the Best Master Clock algorithm. A lower value takes precedence. Zero indicates the highest precedence. The range is from 0 to 255.
Priority 2	Enter the PTP boundary clock Priority 2 value here. The priority 2 attribute is used in the execution of the Best Master Clock algorithm. A lower value takes precedence. In the event that the BMC algorithm fails to order the clocks based on the values of priority 1, the clock's class, and the clock's accuracy; the priority 2 attribute will allow the creation of lower values compared to the other devices. Zero indicates the highest precedence. The range is from 0 to 255.

Click the **Apply** button to accept the changes made.

When the stacking mode is enabled and the member ports of the trunk group exist in different stack units, the PTP function may not function properly.

For example:

- The PTP feature will function properly when the member ports receive and send PTP messages on the same stacked unit.
- The PTP feature will not function properly when the member ports receive and send PTP messages on different stacked units.

Therefore, it is recommended not to enable the PTP feature on a trunk group that exists in different stack units.

PTP Port Global Settings

This window is used to display and configure the PTP interface settings.

To view the following window, click **System > PTP (Precise Time Protocol) > PTP Port Global Settings**, as shown below:

PTP Port Global Settings

PTP Port Global Settings

Unit: 1 | From Port: eth1/0/1 | To Port: eth1/0/1 | State: Disabled | Apply

Port	State
eth1/0/1	Disabled
eth1/0/2	Disabled
eth1/0/3	Disabled
eth1/0/4	Disabled
eth1/0/5	Disabled
eth1/0/6	Disabled
eth1/0/7	Disabled
eth1/0/8	Disabled
eth1/0/9	Disabled
eth1/0/10	Disabled

Figure 3-30 PTP Port Global Settings Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the range of ports that will be used for this configuration here.
State	Select to enable or disable the PTP feature on the port(s) specified here.

Click the **Apply** button to accept the changes made.

PTP Boundary Port Settings

This window is used to display and configure the attributes of the PTP boundary clock. The configuration takes effect when the PTP device is of the 'boundary' type.

To view the following window, click **System > PTP (Precise Time Protocol) > PTP Boundary Port Settings**, as shown below:

PTP Boundary Port Settings

PTP Boundary Port Settings

Unit: 1 (dropdown)

From Port: eth1/0/1 (dropdown)

To Port: eth1/0/1 (dropdown)

Announce Interval (1-16): 2 sec

Announce Receipt Timeout (2-10): 3

Delay Mechanism: E2E (dropdown)

Delay Request Interval (0-5): 0

Pdelay Request Interval (1-32): 1 sec

Synchronization Interval (1-2): 1 sec Half Second

Apply

Note: DM: Delay Mechanism; AI: Announce Interval; CART: The Coefficient of Announce Receipt Timeout; SI: Synchronization Interval; EDRI: The Exponent of Delay Request Interval; PDRI: Pdelay Request Interval
The Announce Interval value and Pdelay Request Interval value are represented as the logarithm to the base 2.
The Delay Request Interval value is an exponent of 2.

Unit 1 Settings

Port	DM	AI	CART	SI	EDRI	PDRI
eth1/0/1	E2E	2	3	1.00	0	1
eth1/0/2	E2E	2	3	1.00	0	1
eth1/0/3	E2E	2	3	1.00	0	1
eth1/0/4	E2E	2	3	1.00	0	1
eth1/0/5	E2E	2	3	1.00	0	1
eth1/0/6	E2E	2	3	1.00	0	1
eth1/0/7	E2E	2	3	1.00	0	1
eth1/0/8	E2E	2	3	1.00	0	1

Figure 3-31 PTP Boundary Port Settings Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the range of ports that will be used for this configuration here.
Announce Interval	Enter the announce interval value here. This specifies the mean-time interval between successive announce messages, referred to as the announce interval. In line with the IEEE 1588 protocol, the value of the announce interval is represented as the logarithm to the power of 2 of this time measured in seconds. The range is from 1 to 16 seconds.
Announce Receipt Timeout	Enter the announce receipt timeout value here. This specifies the announce interval number that has to pass without receiving an announce message before the <code>ANNOUNCE_RECEIPT_TIMEOUT_EXPIRES</code> event. This value is multiplied by the announce interval value and is equal to the interval time of the announce receipt timeout. The range is from 2 to 10.
Delay Mechanism	Select the delay mechanism here. Option to choose from are:

Parameter	Description
	<ul style="list-style-type: none"> E2E - This indicates that the port is configured to use the delay request-response mechanism. P2P - This indicates that the port is configured to use the peer delay mechanism.
Delay Request Interval	Enter the delay request interval value here. This specifies the permitted mean time interval between successive delay request messages which are sent by a slave to a specific port on the master. This value is determined and advertised by the master. In line with the IEEE 1588 protocol, the value of delay request interval shall be an exponent of 2. In addition, this interval must be an integer with the minimum value being the sync-interval, and the maximum value being 32 times the sync-interval value. If the sync-interval is half a second and the delay request interval is 0, then the permitted time interval between successive delay request messages will be automatically adjusted to one second. The range is from 0 to 5.
Pdelay Request Interval	Enter the peer delay request interval value here. This specifies the permitted mean-time interval between successive peer delay request messages. In line with the IEEE 1588 protocol, this value must be represented as the logarithm to the base of 2 of this time, measured in seconds. The range is from 1 to 32 seconds.
Synchronization Interval	Enter the synchronization interval value here. This specifies the mean-time interval between successive synchronization messages. In line with the IEEE 1588 protocol, this value must be represented as the logarithm to the base of 2 of this time, measured in seconds. The range is from 1 to 2 seconds. Select the Half Second option to set 0.5 seconds as this value.

Click the **Apply** button to accept the changes made.

PTP P2P Transparent Port Settings

This window is used to display and configure the peer delay request message interval on the P2P transparent clock port(s) specified.

To view the following window, click **System > PTP (Precise Time Protocol) > PTP P2P Transparent Port Settings**, as shown below:

PTP P2P Transparent Port Settings

PTP P2P Transparent Port Settings

Unit: 1 From Port: eth1/0/1 To Port: eth1/0/1 P2P Transparent Pdelay Request Interval (1-32): 1 [Apply]

Port	P2P Transparent Pdelay Request Interval
eth1/0/1	1
eth1/0/2	1
eth1/0/3	1
eth1/0/4	1
eth1/0/5	1
eth1/0/6	1
eth1/0/7	1
eth1/0/8	1

Figure 3-32 PTP P2P Transparent Port Settings Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.

Parameter	Description
From Port - To Port	Select the range of ports that will be used for this configuration here.
P2P Transparent Pdelay Request Interval	Enter the P2P transparent peer delay request interval value here. The range is from 1 to 32.

Click the **Apply** button to accept the changes made.

PTP Clock Information

This window is used to view PTP clock information. This is used to display the active attributes of the PTP clock.

To view the following window, click **System > PTP (Precise Time Protocol) > PTP Clock Information**, as shown below:

PTP Clock Information

PTP Clock Information

Unit: 1

PTP Boundary Clock Information

PTP State	Disabled
PTP Clock Mode	End-to-End Transparent Clock
PTP Transport Protocol	UDP
PTP Clock Domain Number	0
PTP Clock Domain Name	
PTP Clock Identity	0000000000000000
PTP Clock Class	-
PTP Steps Removed	-
PTP Last Offset	-
PTP Mean Path Delay	-
PTP Enabled Ports	

PTP Clock Parent Information

PTP Parent Port Identity	-
PTP Parent Port Number	-
PTP Grandmaster Identity	-
PTP Grandmaster Clock Class	-
PTP Grandmaster Clock Accuracy	-
PTP Grandmaster Priority 1	-
PTP Grandmaster Priority 2	-

Figure 3-33 PTP Clock Information Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used here.

PTP Port Information

This window is used to view PTP port information.

To view the following window, click **System > PTP (Precise Time Protocol) > PTP Port Information**, as shown below:

Port	Role	DM	AI	ART	SI	DRIM	DRIS	PDRI	PMPD	State
eth1/0/1	Disabled	E2E	2	0	1.00	1	0	1	0	Disabled
eth1/0/2	Disabled	E2E	2	0	1.00	1	0	1	0	Disabled
eth1/0/3	Disabled	E2E	2	0	1.00	1	0	1	0	Disabled
eth1/0/4	Disabled	E2E	2	0	1.00	1	0	1	0	Disabled
eth1/0/5	Disabled	E2E	2	0	1.00	1	0	1	0	Disabled
eth1/0/6	Disabled	E2E	2	0	1.00	1	0	1	0	Disabled
eth1/0/7	Disabled	E2E	2	0	1.00	1	0	1	0	Disabled
eth1/0/8	Disabled	E2E	2	0	1.00	1	0	1	0	Disabled
eth1/0/9	Disabled	E2E	2	0	1.00	1	0	1	0	Disabled
eth1/0/10	Disabled	E2E	2	0	1.00	1	0	1	0	Disabled

Figure 3-34 PTP Port Information Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used here.

PTP Foreign Master Records Port Information

This window is used to view PTP Foreign Master Records port information.

To view the following window, click **System > PTP (Precise Time Protocol) > PTP Foreign Master Records Port Information**, as shown below:

Port	FM Port Identity	FM Port Number	FM Announce Messages
------	------------------	----------------	----------------------

Figure 3-35 PTP Foreign Master Records Port Information Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used here.

USB Console Settings

This window is used to display and configure the USB console settings.

To view the following window, click **System > USB Console Settings**, as shown below:

Figure 3-36 USB Console Settings Window

The fields that can be configured are described below:

Parameter	Description
USB Console State	Select to enable or disable the USB console state here.
USB Inactivity Timeout	Enter the USB inactivity timeout value here. The range is from 1 to 240 minutes. Select the Active option to disable the timeout feature.

Click the **Apply** button to accept the changes made.



NOTE: When an active console connection is made to both the RJ45 console port and the mini-USB console port at the same time, the mini-USB console port will have higher priority.

SRM

The Switch Resource Management (SRM) feature provides a large number of resources that can be distributed and optimized as needed by applications. It provides resource configuration flexibility that allows users to allocate more resources for tables that require more entries and prevents wasting resources on unused functions.

SRM Prefer Current Settings

This window is used to display and configure the SRM settings. This window is used to specify the SRM mode to be used on the Switch for optimizing resources for various functions.

To view the following window, click **System > SRM > SRM Prefer Current Settings**, as shown below:

Figure 3-37 SRM Prefer Current Settings Window

The fields that can be configured are described below:

Parameter	Description
SRM Prefer Mode	Select the SRM prefer mode here. Options to choose from are: <ul style="list-style-type: none"> LAN - Specifies that the Switch prefers the LAN Switch mode. IP - Specifies that the Switch prefer the IP route mode.

Parameter	Description
	<ul style="list-style-type: none"> L2VPN - Specifies that the Switch prefer the Layer 2 VPN mode.

Click the **Apply** button to accept the changes made.



NOTE: When the SRM mode was modified and the Switch was rebooted, the table size will be changed. If the number of static entries saved in the startup configuration exceeds the number of static entries in the new table size, the exceeded number of entries will be removed.



NOTE: When Switches are physically stacked, ensure that all Switches in the stack are configured to use the same SRM mode.

SRM Prefer Mode

This window is used to view the SRM preferred mode settings. The entries in this table are fixed values indicating the maximum number of entries allowed per feature.

To view the following window, click **System > SRM > SRM Prefer Mode**, as shown below:

SRM Prefer Mode Detail	
L2 Forwarding Table Size	
Max number of mac table entries	68K
L3 Host Table /Multicast Size	
Max number of ipv4 host entries	69632
Max number of ipv6 host entries	16K
Max number of ipv4 multicast groups entries	16384
Max number of ipv6 multicast groups entries	8192
MPLS Table Size	
Max number of MPLS entries	8192
Max number of L2VPN entries	4096
Max number of L3VPN entries	4K
Ingress VLAN Translate Table Size	
Max number of mac based VLAN entries	2944
Max number of VLAN translate entries	1024
Max number of I2 tunnel entries	3072
Egress VLAN Translate Table Size	
Max number of egress VLAN translate entries	1024
	4K
	3072

Figure 3-38 SRM Prefer Mode Window

The fields that can be configured are described below:

Parameter	Description
SRM Prefer Mode	Select the SRM prefer mode that will be used in the display here. Options to choose from are LAN , IP , and L2VPN .

Click the **Find** button to generate the display based on the selections made.

Switch Controller Settings

This window is used to display and configure the switch controller settings.

To view the following window, click **System > Switch Controller Settings**, as shown below:



The screenshot shows a web interface window titled "Switch Controller Settings". Inside the window, there is a sub-section also titled "Switch Controller Settings". Under this sub-section, the "HOL Prevention State" is configured. There are two radio buttons: "Enabled" (which is selected) and "Disabled". An "Apply" button is located on the right side of the window.

Figure 3-39 Switch Controller Settings Window

The fields that can be configured are described below:

Parameter	Description
HOL Prevention State	Select to enable or disable the HOL blocking prevention state here.

Click the **Apply** button to accept the changes made.


4. Management

[Command Logging](#)
[User Accounts Settings](#)
[CLI Alias Settings](#)
[Password Encryption](#)
[Password Recovery](#)
[Login Method](#)
[SNMP](#)
[RMON](#)
[Telnet/Web](#)
[Session Timeout](#)
[DHCP](#)
[DHCP Auto Configuration](#)
[DHCP Auto Image Settings](#)
[DNS](#)
[NTP](#)
[IP Source Interface](#)
[File System](#)
[Stacking](#)
[Virtual Stacking \(SIM\)](#)
[D-Link Discovery Protocol](#)
[SMTP Settings](#)
[Reboot Schedule Settings](#)
[NLB FDB Settings](#)
[SD Card Management](#)

Command Logging

This window is used to display and configure the command logging function. The command logging function is used to log the commands that have successfully been configured on the Switch via the command line interface. The command, along with information about the user that entered the command, is included in the system log. Commands that do not cause a change in the Switch configuration or operation (such as 'show' commands) are not logged.

To view the following window, click **Management > Command Logging**, as shown below:

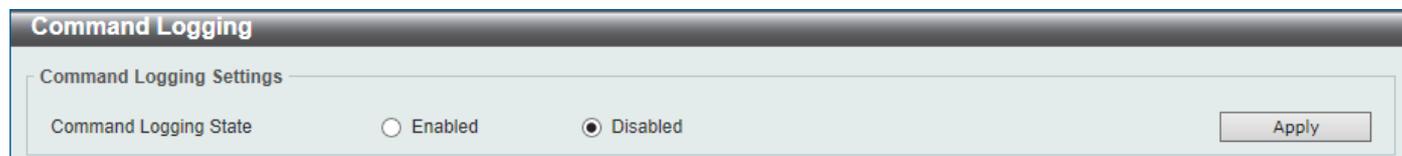

The screenshot shows a window titled "Command Logging". Inside, there is a section for "Command Logging Settings". Under this section, the "Command Logging State" is set to "Disabled" (indicated by a selected radio button). There is an "Apply" button to the right of the radio buttons.

Figure 4-1 Command Logging Window

The fields that can be configured are described below:

Parameter	Description
Command Logging State	Select to enable or disable the command logging function here.

Click the **Apply** button to accept the changes made.

User Accounts Settings

On this page, user accounts can be created and updated. Active user account sessions can also be viewed on this page.

There are several configuration options available in the Web User Interface (Web UI). The set of configuration options available to the user depends on the account's **Privilege Level**.



NOTE: By default, there are no user accounts created on the Switch.

To view the following window, click **Management > User Accounts Settings**, as shown below:

After selecting the **User Management Settings** tab, the following page will appear.

User Name	Privilege	Password
admin	15	*****

Figure 4-2 User Accounts Settings Window

The fields that can be configured are described below:

Parameter	Description
User Name	Enter the user account name here. This name can be up to 32 characters long.
Privilege	Enter the privilege level for this account here. The range is from 1 to 15.
Password Type	Select the password type for this user account here. Options to choose from are None , Plain Text , Encrypted-SHA1 , and Encrypted-MD5 .
Password	After selecting Plain Text , Encrypted-SHA1 , or Encrypted-MD5 as the password type, enter the password for this user account here.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to delete the specified user account entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After selecting the **Session Table** tab, the following page will appear.

ID	Type	User Name	Privilege	Login Time	IP Address
0	console	Anonymous	1	12M11S	10.90.90.1
19	* web	Anonymous	15	18S	10.90.90.1

Figure 4-3 Session Table Window

On this page, a list of active user account session will be displayed.

Click the **Edit** button to access and configure the User Privilege settings.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After selecting the **Edit** button, the following page will appear.

Figure 4-4 User Privilege Window

The fields that can be configured are described below:

Parameter	Description
Action	Select to enable or disable user level security.
Privilege	Select the privilege level here. The range is from 1 to 15.
Password	Enter the password here. This can be up to 35 characters long.

Click the **Apply** button to accept the changes made.

Click the **Back** button to return to the previous page.

CLI Alias Settings

This window is used to display and configure the CLI alias settings. A CLI alias command is a custom string that can be associated with a specific CLI command. This is useful if repeated use of long commands are needed in the CLI.

To view the following window, click **Management > CLI Alias Settings**, as shown below:

Figure 4-5 CLI Alias Settings Window

The fields that can be configured are described below:

Parameter	Description
Mode	Select the command mode of the original command here.
Alias Command	Enter the alias command here. This can be up to 16 characters long.
Original Command	Enter the original command here. This can be up to 128 characters long.

Click the **Apply** button to accept the changes made.

Click the **Find** button to find and displays the CLI alias commands based on the command mode selected.

Click the **Delete** button to delete the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

Password Encryption

This window is used to display and configure whether to save the encryption of the password in the configuration file.

To view the following window, click **Management > Password Encryption**, as shown below:

Figure 4-6 Password Encryption Window

The fields that can be configured are described below:

Parameter	Description
Password Encryption State	Select this option to enable or disable the encryption of the password before being stored in the configuration file.
Password Type	When the state is enabled, select the password encryption type here. Options to choose from are: <ul style="list-style-type: none"> • Encrypted-SHA1 - Specifies that the password is encrypted using SHA-1. • Encrypted-MD5 - Specifies that the password is encrypted using MD5.

Click the **Apply** button to accept the changes made.

Password Recovery

This window is used to display and configure the password recovery settings. For example, the administrator may need to update a user account because the password has been forgotten.

To view the following window, click **Management > Password Recovery**, as shown below:

Figure 4-7 Password Recovery Window

The fields that can be configured are described below:

Parameter	Description
Password Recovery State	Select to enable or disable the password recovery feature here. Enabling this feature allows access to the reset configuration mode in the CLI. From the reset configuration mode, user accounts can be updated, the enable password feature can be updated for administrator privilege levels, and the AAA feature

Parameter	Description
	can be disabled to allow local authentication. The running configuration can then be saved as the startup configuration. A reboot is required.

Click the **Apply** button to accept the changes made.

Login Method

This window is used to display and configure the login method for each management interface that is supported by the Switch.

To view the following window, click **Management > Login Method**, as shown below:

The screenshot shows the 'Login Method' configuration window. It is divided into three sections:

- Enable Password:** Contains a 'Level' dropdown set to '15', a 'Password Type' dropdown set to 'Plain Text', and a 'Password' text box containing '32 chars'. An 'Apply' button is on the right.
- Login Method:** A table with three columns: 'Application', 'Login Method', and 'Edit'.

Application	Login Method	Edit
Console	No Login	Edit
Telnet	Login	Edit
SSH	Login	Edit
- Login Password:** Contains an 'Application' dropdown set to 'Console', a 'Password Type' dropdown set to 'Plain Text', and a 'Password' text box containing '32 chars'. An 'Apply' button is on the right. Below this is a table with three columns: 'Application', 'Password', and 'Delete'.

Application	Password	Delete
SSH	*****	Delete

Figure 4-8 Login Method Window

The fields that can be configured in **Enable Password** are described below:

Parameter	Description
Level	Select the privilege level for the user here. The range is from 1 to 15.
Password Type	Select the password type for the user here. Options to choose from are: <ul style="list-style-type: none"> • Plain Text - Specifies that the password will be in plain text. This is the default option. • Encrypted - Specifies that the password will be encrypted based on SHA-1. • Encrypted-MD5 - Specifies that the password will be encrypted based on MD5.
Password	Enter the password for the user account here. In the plain-text form, the password can be up to 32 characters long, is case-sensitive, and can contain spaces. In the encrypted form, the password must be 35 bytes long and is case-sensitive. In the encrypted MD5 form, the password must be 31 bytes long and is case-sensitive.

Click the **Apply** button to accept the changes made.

Click the **Edit** button to re-configure the specified entry.

The fields that can be configured in **Login Method** are described below:

Parameter	Description
Login Method	<p>After clicking the Edit button, this parameter can be configured. Select the login method for the specified application here. Options to choose from are No Login, Login and Login Local.</p> <ul style="list-style-type: none"> • No Login requires no login authentication to access the specified application. • Login will require the user to at least enter a password when trying to access the application specified. • Login Local requires the user to enter a username and a password to access the specified application.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Login Password** are described below:

Parameter	Description
Application	Select the application that will be configured here. Options to choose from are Console , Telnet and SSH .
Password Type	Select the password encryption type that will be used here. Options to choose from are Plain Text , Encrypted , and Encrypted-MD5 .
Password	Enter the password for the selected application here. This password will be used when the Login Method for the specified application is set as Login . In the plain-text form, the password can be up to 32 characters long, is case-sensitive, and can contain spaces. In the encrypted form, the password must be 35 bytes long and is case-sensitive. In the encrypted MD5 form, the password must be 31 bytes long and is case-sensitive.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the password from the specified application.

SNMP

Simple Network Management Protocol (SNMP) is an OSI Layer 7 (Application Layer) designed specifically for managing and monitoring network devices. SNMP enables network management stations to read and modify the settings of gateways, routers, switches, and other network devices. Use SNMP to configure system features, monitor performance, and detect potential problems with the Switch, switch group, or network.

Managed devices that support SNMP include software (referred to as an agent) which runs locally on the device. A defined set of variables (managed objects) is maintained by the SNMP agent and used to manage the device. These objects are defined in a Management Information Base (MIB), which provides a standard presentation of the information controlled by the on-board SNMP agent. SNMP defines both the format of the MIB specifications and the protocol used to access this information over the network.

The Switch supports the SNMP versions 1, 2c, and 3. The three versions of SNMP vary in the level of security provided between the management station and the network device.

In SNMPv1 and SNMPv2c, user authentication is accomplished using 'community strings', which function like passwords. The remote user SNMP application and the Switch SNMP must use the same community string. SNMP packets from any station that has not been authenticated are ignored (dropped). The default community strings for the Switch used for SNMPv1 and SNMPv2c management access are:

- **public** - Allows authorized management stations to retrieve MIB objects.
- **private** - Allows authorized management stations to retrieve and modify MIB objects.

The SNMPv3 protocol uses a more sophisticated authentication process that is separated into two parts. The first part maintains a list of users and their attributes that are allowed to act as SNMP managers. The second part describes what each user in that list can do as an SNMP manager. The SNMPv3 protocol also provides an additional layer of security that can be used to encrypt SNMP messages.

The Switch allows groups of users to be listed and configured with a shared set of privileges. The SNMP version may also be set for a listed group of SNMP managers. Thus, you may create a group of SNMP managers that are allowed to view read-only information or receive traps using SNMPv1 while assigning a higher level of security to another group, granting read/write privileges using SNMPv3.

Using SNMPv3, users or groups can be allowed or be prevented from performing specific SNMP management functions. These are defined using the Object Identifier (OID) associated with a specific MIB.

MIBs

A Management Information Base (MIB) stores management and counter information. The Switch uses the standard MIB-II Management Information Base module, and so values for MIB objects can be retrieved using any SNMP-based network management software. In addition to the standard MIB-II, the Switch also supports its own proprietary enterprise MIB as an extended Management Information Base. Specifying the MIB Object Identifier may also retrieve the proprietary MIB. MIB values can be either read-only or read-write.

The Switch incorporates a flexible SNMP management system which can be customized to suit the needs of the networks and the preferences of the network administrator. The three versions of SNMP vary in the level of security provided between the management station and the network device. SNMP settings are configured using the menus located in the **SNMP** folder of the Web UI.

Traps

Traps are messages that alert network personnel of events that occur on the Switch. The events can be as serious as a reboot (someone accidentally turned the Switch off/unplugged the Switch), or less serious like a port status change. The Switch generates traps and sends them to the trap recipient (or network manager). Typical traps include trap messages for Authentication Failure, Topology Change and Broadcast/Multicast Storm.

SNMP Global Settings

This window is used to display and configure the global SNMP and trap settings.

To view the following window, click **Management > SNMP > SNMP Global Settings**, as shown below:

Figure 4-9 SNMP Global Settings Window

The fields that can be configured in **SNMP Global Settings** are described below:

Parameter	Description
SNMP Global State	Select this option to enable or disable the SNMP feature.
SNMP Response Broadcast Request	Select this option to enable or disable the server to response to broadcast SNMP GetRequest packets.
SNMP UDP Port	Enter the SNMP UDP port number.
Trap Source Interface	Enter the interface whose IP address will be used as the source address for sending the SNMP trap packet.

The fields that can be configured in **Trap Settings** are described below:

Parameter	Description
Trap Global State	Select this option to enable or disable the sending of all or specific SNMP notifications.
SNMP Authentication Trap	Tick this option to control the sending of SNMP authentication failure notifications. An <i>authenticationFailuretrap</i> trap is generated when the device receives an SNMP message that is not properly authenticated. The authentication method depends on the version of SNMP being used. For SNMPv1 or SNMPv2c, authentication failure occurs if packets are formed with an incorrect community string.
Port Link Up	Tick this option to control the sending of port link up notifications. A <i>linkUp</i> trap is generated when the device recognizes that one of the communication links has come up.
Port Link Down	Tick this option to control the sending of port link down notifications. A <i>linkDown</i> trap is generated when the device recognizes that a one of the communication links is down.
Coldstart	Tick this option to control the sending of SNMP <i>coldStart</i> notifications.
Warmstart	Tick this option to control the sending of SNMP <i>warmStart</i> notifications.

Click the **Apply** button to accept the changes made.

SNMP Linkchange Trap Settings

This window is used to display and configure the SNMP link change trap settings.

To view the following window, click **Management > SNMP > SNMP Linkchange Trap Settings**, as shown below:

Port	Trap Sending	Trap State
eth1/0/1	Enabled	Enabled
eth1/0/2	Enabled	Enabled
eth1/0/3	Enabled	Enabled
eth1/0/4	Enabled	Enabled
eth1/0/5	Enabled	Enabled
eth1/0/6	Enabled	Enabled
eth1/0/7	Enabled	Enabled

Figure 4-10 SNMP Linkchange Trap Settings Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the appropriate port range used for the configuration here.
Trap Sending	Select this option to enable or disable the sending of the SNMP notification traps that are generated by the system.
Trap State	Select this option to enable or disable the SNMP <i>linkChange</i> trap.

Click the **Apply** button to accept the changes made.

SNMP View Table Settings

This window is used to assign views to community strings that define which MIB objects can be accessed by a remote SNMP manager. The SNMP sub-tree OID created with this table maps SNMP users to the views created in the **SNMP User Table Settings** window.

To view the following window, click **Management > SNMP > SNMP View Table Settings**, as shown below:

SNMP View Table Settings

SNMP View Settings

View Name *

Subtree OID *

View Type ▼

* Mandatory Field

Total Entries: 8

View Name	Subtree OID	View Type	
restricted	1.3.6.1.2.1.1	Included	<input type="button" value="Delete"/>
restricted	1.3.6.1.2.1.11	Included	<input type="button" value="Delete"/>
restricted	1.3.6.1.6.3.10.2.1	Included	<input type="button" value="Delete"/>
restricted	1.3.6.1.6.3.11.2.1	Included	<input type="button" value="Delete"/>
restricted	1.3.6.1.6.3.15.1.1	Included	<input type="button" value="Delete"/>
CommunityView	1	Included	<input type="button" value="Delete"/>
CommunityView	1.3.6.1.6.3	Excluded	<input type="button" value="Delete"/>
CommunityView	1.3.6.1.6.3.1	Included	<input type="button" value="Delete"/>

Figure 4-11 SNMP View Table Settings Window

The fields that can be configured are described below:

Parameter	Description
View Name	Type an alphanumeric string of up to 32 characters. This is used to identify the new SNMP view being created.
Subtree OID	Type the Object Identifier (OID) sub-tree for the view. The OID identifies an object tree (MIB tree) that will be included or excluded from access by an SNMP manager.
View Type	Select the view type here. Options to choose from are Included and Excluded . <ul style="list-style-type: none"> • Included - Select to include this object in the list of objects that an SNMP manager can access. • Excluded - Select to exclude this object from the list of objects that an SNMP manager can access.

Click the **Add** button to add a new entry based on the information entered.

Click the **Delete** button to remove the specified entry.

SNMP Community Table Settings

This window is used to create an SNMP community string to define the relationship between the SNMP manager and an agent. The community string acts like a password to permit access to the agent on the Switch. One or more of the following characteristics can be associated with the community string:

- An access list containing IP addresses of SNMP managers that are permitted to use the community string to gain access to the Switch's SNMP agent.
- Any MIB view that defines the subset of MIB objects that will be accessible to the SNMP community.
- Read-write or read-only level permissions for the MIB objects accessible to the SNMP community.

To view the following window, click **Management > SNMP > SNMP Community Table Settings**, as shown below:

Community Name	View Name	Access Right	IP Access-List Name	Context Name	
public	CommunityView	ro			Delete
private	CommunityView	rw			Delete

Figure 4-12 SNMP Community Table Settings Window

The fields that can be configured are described below:

Parameter	Description
Key Type	Select the key type for the SNMP community. Options to choose from are Plain Text , and Encrypted .
Community Name	Enter an alphanumeric string that is used to identify members of an SNMP community. This string is used like a password to give remote SNMP managers access to MIB objects in the Switch's SNMP agent.
View Name	Enter an alphanumeric string of up to 32 characters that is used to identify the group of MIB objects that a remote SNMP manager is allowed to access on the Switch. The view name must exist in the SNMP View Table.
Access Right	Select the access right here. Options to choose from are Read Only and Read Write . <ul style="list-style-type: none"> Read Only - SNMP community members using the community string created can only read the contents of the MIBs on the Switch. Read Write - SNMP community members using the community string created can read from, and write to the contents of the MIBs on the Switch.
IP Access-List Name	Enter the name of the standard access list to restrict the users that can use this community string to access to the SNMP agent.
Context Name	Enter the context name here. This name can be up to 32 characters long.

Click the **Add** button to add a new entry based on the information entered.

Click the **Delete** button to remove the specified entry.

SNMP Group Table Settings

An SNMP group created with this table maps SNMP users to the views created in the **SNMP View Table Settings** window.

To view the following window, click **Management > SNMP > SNMP Group Table Settings**, as shown below:

SNMP Group Table Settings

SNMP Group Settings

Group Name * Read View Name

User-based Security Model Write View Name

Security Level Notify View Name

IP Access-List Name Context Name

* Mandatory Field

Total Entries: 5

Group Name	Read View Name	Write View Name	Notify View Name	Security Model	Security Level	IP Access-List Name	Context Name	
public	CommunityV...		CommunityV...	v1				<input type="button" value="Delete"/>
public	CommunityV...		CommunityV...	v2c				<input type="button" value="Delete"/>
initial	restricted		restricted	v3	NoAuthNoPriv			<input type="button" value="Delete"/>
private	CommunityV...	CommunityV...	CommunityV...	v1				<input type="button" value="Delete"/>
private	CommunityV...	CommunityV...	CommunityV...	v2c				<input type="button" value="Delete"/>

Figure 4-13 SNMP Group Table Settings Window

The fields that can be configured are described below:

Parameter	Description
Group Name	Enter the SNMP group name here. This name can be up to 32 characters long. Spaces are not allowed.
Read View Name	Enter the read view name that users of the group can access.
User-based Security Model	Select the security model here. Options to choose from are SNMPv1 , SNMPv2c , and SNMPv3 . <ul style="list-style-type: none"> • SNMPv1 - Select to allow the group to use the SNMPv1 security model. • SNMPv2c - Select to allow the group to use the SNMPv2c security model. • SNMPv3 - Select to allow the group to use the SNMPv3 security model.
Write View Name	Enter the write view name that the users of the group can access.
Security Level	When selecting SNMPv3 in the User-based Security Model drop-down list, this option is available. <ul style="list-style-type: none"> • NoAuthNoPriv - Specify that there will be no authorization and no encryption of packets sent between the Switch and a remote SNMP manager. • AuthNoPriv - Specify that authorization will be required, but there will be no encryption of packets sent between the Switch and a remote SNMP manager. • AuthPriv - Specify that authorization will be required, and that packets sent between the Switch and a remote SNMP manager will be encrypted.
Notify View Name	Enter the notify view name that users of the group can access. The notify view describes the object that can be reported its status via trap packets to the group user.
IP Access-List Name	Enter the standard IP access control list (ACL) to associate with the group.
Context Name	Enter the context name here. This name can be up to 32 characters long.

Click the **Add** button to add a new entry based on the information entered.

Click the **Delete** button to remove the specified entry.

SNMP Engine ID Local Settings

The Engine ID is a unique identifier used for SNMPv3 implementations on the Switch.

To view the following window, click **Management > SNMP > SNMP Engine ID Local Settings**, as shown below:

The screenshot shows the 'SNMP Engine ID Local Settings' window. It features a text input field for 'Engine ID' containing the value '800000ab038026898da'. Below the field is a warning icon and text: 'Engine ID length is 24, the accepted character is from 0 to F.' To the right of the input field are two buttons: 'Default' and 'Apply'.

Figure 4-14 SNMP Engine ID Local Settings Window

The fields that can be configured are described below:

Parameter	Description
Engine ID	Enter the SNMP engine ID string here. This string can be up to 24 characters long.

Click the **Default** button to revert the engine ID to the default.

Click the **Apply** button to accept the changes made.

SNMP User Table Settings

This window is used to display and configure the SNMP users that are currently configured on the Switch.

To view the following window, click **Management > SNMP > SNMP User Table Settings**, as shown below:

The screenshot shows the 'SNMP User Table Settings' window. It contains several configuration fields: 'User Name *' (32 chars), 'Group Name *' (32 chars), 'SNMP Version' (v1), 'SNMP V3 Encryption' (None), 'Auth-Protocol by Password' (MD5), 'Priv-Protocol by Password' (None), 'Auth-Protocol by Key' (MD5), 'Priv-Protocol by Key' (None), and 'IP Access-List Name' (32 chars). There are also fields for 'Password (8-16 chars)' and 'Key (32 chars)' for both authentication and privacy protocols. An 'Add' button is located at the bottom right. Below the configuration fields is a table showing the current state of SNMP users.

Total Entries: 1							
User Name	Group Name	Security Model	Authentication Protocol	Privacy Protocol	Engine ID	IP Access-List Name	
initial	initial	V3	None	None	800000ab03...		Delete

Figure 4-15 SNMP User Table Settings Window

The fields that can be configured are described below:

Parameter	Description
User Name	Enter SNMP user name here. This name can be up to 32 characters long. This is used to identify the SNMP user.
Group Name	Enter the SNMP group name to which the user belongs. This name can be up to 32 characters long. Spaces are not allowed.
SNMP Version	Select the SNMP version. Options to choose from are v1 , v2c , and v3 .

Parameter	Description
SNMP V3 Encryption	When selecting v3 in the SNMP Version drop-down list, this option is available. Options to choose from are None , Password , and Key .
Auth-Protocol by Password	When selecting v3 in the SNMP Version drop-down list, and selecting Password in the SNMP V3 Encryption drop-down list, this option is available. Select the authentication level. Options to choose from are the following: <ul style="list-style-type: none"> • MD5 - Select to use the HMAC-MD5-96 authentication level. This field will require the user to enter a password or key. • SHA - Specify that the HMAC-SHA authentication protocol will be used. This field will require the user to enter a password or key.
Password	Enter the Auth-Protocol password here. For MD5 this password must be between 8 and 16 characters long. For SHA this password must be between 8 and 20 characters long.
Priv-Protocol by Password	When selecting v3 in the SNMP Version drop-down list, and selecting Password in the SNMP V3 Encryption drop-down list, this option is available. Select the private protocol. Options to choose from are the following: <ul style="list-style-type: none"> • None - Specify that no authorization protocol is in use. • DES56 - Specify that DES 56-bit encryption is in use, based on the CBC-DES (DES-56) standard. This field will require the user to enter a password or a key. • AES - Specify that Advanced Encryption Standard (AES) encryption is in use. This field will require the user to enter a password or a key.
Password	Enter the Priv-Protocol password here. For none , this field will be disabled. For DES56 and AES this password must be between 8 and 16 characters long.
Auth-Protocol by Key	When selecting v3 in the SNMP Version drop-down list, and selecting Key in the SNMP V3 Encryption drop-down list, this option is available. Select the authentication level. Options to choose from are the following: <ul style="list-style-type: none"> • MD5 - Select to use the HMAC-MD5-96 authentication level. This field will require the user to enter a password or a key. • SHA - Specify that the HMAC-SHA authentication protocol will be used. This field will require the user to enter a password or a key.
Key	Enter the Auth-Protocol key here. For MD5 this key must be 32 characters long. For SHA this key must be 40 characters long.
Priv-Protocol by Key	When selecting v3 in the SNMP Version drop-down list, and selecting Key in the SNMP V3 Encryption drop-down list, this option is available. Select the private protocol. Options to choose from are the following: <ul style="list-style-type: none"> • None - Specify that no authorization protocol is in use. • DES56 - Specify that DES 56-bit encryption is in use, based on the CBC-DES (DES-56) standard. This field will require the user to enter a password or a key. • AES - Specify that AES encryption is in use. This field will require the user to enter a password or a key.
Key	Enter the Priv-Protocol key here. For none , this field will be disabled. For DES56 and AES this key must be 32 characters long.
IP Access-List Name	Enter the standard IP access control list (ACL) to associate with the user.

Click the **Add** button to add a new entry based on the information entered.

Click the **Delete** button to remove the specified entry.

SNMP Host Table Settings

This window is used to display and configure the recipient of the SNMP notification.

To view the following window, click **Management > SNMP > SNMP Host Table Settings**, as shown below:

SNMP Host Table Settings

SNMP Host Settings

Host IPv4 Address

Host IPv6 Address

VRF Name

User-based Security Model

Security Level

UDP Port (1-65535)

Community String / SNMPv3 User Name

Add

Total Entries: 1

Host IP Address	VRF Name	SNMP Version	UDP Port	Community String / SNMPv3 User Name
192.168.70.1		V1	162	private

Delete

Figure 4-16 SNMP Host Table Settings Window

The fields that can be configured are described below:

Parameter	Description
Host IPv4 Address	Enter the IPv4 address of the SNMP notification host.
Host IPv6 Address	Enter the IPv6 address of the SNMP notification host.
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long.
User-based Security Model	Select the security model here. Options to choose from are SNMPv1 , SNMPv2c , and SNMPv3 . <ul style="list-style-type: none"> • SNMPv1 - Select to allow the group user to use the SNMPv1 security model. • SNMPv2c - Select to allow the group user to use the SNMPv2c security model. • SNMPv3 - Select to allow the group user to use the SNMPv3 security model.
Security Level	When selecting SNMPv3 in the User-based Security Model drop-down list, this option is available. <ul style="list-style-type: none"> • NoAuthNoPriv - Specify that there will be no authorization and no encryption of packets sent between the Switch and a remote SNMP manager. • AuthNoPriv - Specify that authorization will be required, but there will be no encryption of packets sent between the Switch and a remote SNMP manager. • AuthPriv - Specify that authorization will be required, and that packets sent between the Switch and a remote SNMP manger will be encrypted.
UDP Port	Enter the UDP port number. The default trap UDP port number is 162. The range of UDP port numbers is from 1 to 65535. Some port numbers may conflict with other protocols.
Community String / SNMPv3 User Name	Enter the community string or SNMPv3 user name to be sent with the notification packet.

Click the **Add** button to add a new entry based on the information entered.

Click the **Delete** button to remove the specified entry.

SNMP Context Mapping Table Settings

This window is used to display and configure the SNMP context mapping table settings.

To view the following window, click **Management > SNMP > SNMP Context Mapping Table Settings**, as shown below:

SNMP Context Mapping Table Settings

SNMP Context Mapping Settings

Context Name

Instance ID (1-65535)

Instance Name

VRF Name

Total Entries: 1

Context Name	Instance ID	Instance Name	VRF Name
Context1	0		

Figure 4-17 SNMP Context Mapping Table Settings Window

The fields that can be configured are described below:

Parameter	Description
Context Name	Enter the SNMP View-based Access Control Model (VACM) context name here. This name can be up to 32 characters long. The name must start with a letter and end with a letter or digit. Interior characters can be letters, digits, and hyphens.
Instance ID	Enter the OSPF instance ID here. The range is from 1 to 65535.
Instance Name	Enter the ISIS routing area tag here. This name can be up to 12 characters long.
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long.

Click the **Add** button to add a new entry based on the information entered.

Click the **Delete** button to remove the specified entry.

RMON

RMON Global Settings

This window is used to enable or disable remote monitoring (RMON) for the rising and falling alarm trap feature for the SNMP function on the Switch.

To view the following window, click **Management > RMON > RMON Global Settings**, as shown below:

RMON Global Settings

RMON Global Settings

RMON Rising Alarm Trap Enabled Disabled

RMON Falling Alarm Trap Enabled Disabled

Figure 4-18 RMON Global Settings Window

The fields that can be configured are described below:

Parameter	Description
RMON Rising Alarm Trap	Select this option to enable or disable the RMON Rising Alarm Trap Feature.
RMON Falling Alarm Trap	Select this option to enable or disable the RMON Falling Alarm Trap Feature.

Click the **Apply** button to accept the changes made.

RMON Statistics Settings

This window is used to display and configure the RMON statistics on the specified port.

To view the following window, click **Management > RMON > RMON Statistics Settings**, as shown below:

Figure 4-19 RMON Statistics Settings Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
Port	Select to choose the port.
Index	Enter the RMON table index. The value is from 1 to 65535.
Owner	Enter the owner string. The string can be up to 127 characters.

Click the **Add** button to add a new entry based on the information entered.

Click the **Delete** button to remove the specified entry.

Click the **Show Detail** button to see the detail information of the specific port.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Show Detail** button, the following window will appear.

Figure 4-20 RMON Statistics Settings (Show Detail) Window

Click the **Back** button to return to the previous window.

RMON History Settings

This window is used to display and configure RMON MIB history statistics gathered on the specified port.

To view the following window, click **Management > RMON > RMON History Settings**, as shown below:

Figure 4-21 RMON History Settings Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
Port	Select the port that will be used here.
Index	Enter the history group table index. The value is from 1 to 65535.
Bucket Number	Enter the number of buckets specified for the RMON collection history group of statistics. The range is from 1 to 65535. The default value is 50.
Interval	Enter the time in seconds in each polling cycle. The range is from 1 to 3600.
Owner	Enter the owner string. The string can be up to 127 characters.

Click the **Add** button to add a new entry based on the information entered.

Click the **Delete** button to remove the specified entry.

Click the **Show Detail** button to see the detail information of the specific port.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Show Detail** button, the following window will appear.

Figure 4-22 RMON History Settings (Show Detail) Window

Click the **Back** button to return to the previous window.

RMON Alarm Settings

This window is used to display and configure alarm entries to monitor an interface.

To view the following window, click **Management > RMON > RMON Alarm Settings**, as shown below:

Figure 4-23 RMON Alarm Settings Window

The fields that can be configured are described below:

Parameter	Description
Index	Enter the alarm index. The range is from 1 to 65535.
Interval	Enter the interval in seconds for the sampling of the variable and checking against the threshold. The valid range is from 1 to 2147483648 seconds.
Variable	Enter the object identifier of the variable to be sampled.
Type	Select the monitoring type. Options to choose from are Absolute and Delta .
Rising Threshold	Enter the rising threshold value between 0 and 2147483647.
Falling Threshold	Enter the falling threshold value between 0 and 2147483647.
Rising Event Number	Enter the index of the event entry that is used to notify the rising threshold crossing event. The valid range is from 1 to 65535. If not specified, no action is taken while crossing the ringing threshold.
Falling Event Number	Enter the index of the event entry that is used to notify the falling threshold crossing event. The valid range is from 1 to 65535. If not specified, no action is taken while crossing the falling threshold.
Owner	Enter the owner string up to 127 characters.

Click the **Add** button to add a new entry based on the information entered.

Click the **Delete** button to remove the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

RMON Event Settings

This window is used to display and configure event entries.

To view the following window, click **Management > RMON > RMON Event Settings**, as shown below:

Figure 4-24 RMON Event Settings Window

The fields that can be configured are described below:

Parameter	Description
Index	Enter the index value of the alarm entry here. The range is from 1 to 65535.
Description	Enter a description for the RMON event entry. The string is up to 127 characters long.
Type	Select the RMON event entry type. Options to choose from are None , Log , Trap , and Log and Trap .
Community	Enter the community string. The string can be up to 127 characters.
Owner	Enter the owner string. The string can be up to 127 characters.

Click the **Add** button to add a new entry based on the information entered.

Click the **Delete** button to remove the specified entry.

Click the **View Logs** button to see the detail information of the specific port.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **View Logs** button, the following window will appear.

Figure 4-25 RMON Event Settings (View Logs) Window

Click the **Back** button to return to the previous window.

Telnet/Web

This window is used to display and configure Telnet and Web settings on the Switch.

To view the following window, click **Management > Telnet/Web**, as shown below:

The screenshot shows the 'Telnet/Web' configuration window. It is organized into three main sections, each with an 'Apply' button on the right side.

- Telnet Settings:**
 - Telnet State: Enabled Disabled
 - Port (1-65535):
- Source Interface:**
 - Source Interface State: Enabled Disabled
 - Type: (dropdown menu)
 - Interface ID (1-4094):
- Web Settings:**
 - Web State: Enabled Disabled
 - Port (1-65535):

Figure 4-26 Telnet/Web Window

The fields that can be configured in **Telnet Settings** are described below:

Parameter	Description
Telnet State	Select to enable or disable the Telnet server feature here.
Port	Enter the TCP port number used for Telnet management of the Switch. The well-known TCP port for the Telnet protocol is 23.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Source Interface** are described below:

Parameter	Description
Source Interface State	Select to enable or disable the source interface's state here.
Type	Select the type of source interface that will be used here. Options to choose from are Loopback , Mgmt , and VLAN .
Interface ID	Enter the interface ID here. For loopback interfaces, the range is from 1 to 8. For the management (Mgmt) interface, this value can only be 0. For VLAN interfaces, the range is from 1 to 4094.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Web Settings** are described below:

Parameter	Description
Web State	Select this option to enable or disable the configuration through the web.
Port	Enter the TCP port number used for Web management of the Switch. The well-known TCP port for the Web protocol is 80.

Click the **Apply** button to accept the changes made.

Session Timeout

This window is used to display and configure the session timeout settings. The outgoing session timeout values are used for Console/Telnet/SSH connections through the CLI of the Switch to the Telnet interface of another switch.

To view the following window, click **Management > Session Timeout**, as shown below:

Parameter	Value	Unit	Default
Web Session Timeout (60-36000)	180	sec	<input checked="" type="checkbox"/>
Console Session Timeout (0-1439)	3	min	<input checked="" type="checkbox"/>
Outgoing Console Session Timeout (0-1439)	0	min	<input checked="" type="checkbox"/>
Telnet Session Timeout (0-1439)	3	min	<input checked="" type="checkbox"/>
Outgoing Telnet Session Timeout (0-1439)	0	min	<input checked="" type="checkbox"/>
SSH Session Timeout (0-1439)	3	min	<input checked="" type="checkbox"/>
Outgoing SSH Session Timeout (0-1439)	0	min	<input checked="" type="checkbox"/>

Figure 4-27 Session Timeout Window

The fields that can be configured are described below:

Parameter	Description
Web Session Timeout	Enter the web session timeout value here. The range is from 60 to 36000 seconds. The default value is 180 seconds. Select the Default option to use the default value.
Console Session Timeout	Enter the console session timeout value here. The range is from 0 to 1439 minutes. Enter 0 to disable the timeout. The default value is 3 minutes. Select the Default option to use the default value.
Outgoing Console Session Timeout	Enter the outgoing console session timeout value here. The range is from 0 to 1439 minutes. Enter 0 to disable the timeout. The default value is 0. Select the Default option to use the default value.
Telnet Session Timeout	Enter the Telnet session timeout value here. The range is from 0 to 1439 minutes. Enter 0 to disable the timeout. The default value is 3 minutes. Select the Default option to use the default value.
Outgoing Telnet Session Timeout	Enter the outgoing Telnet session timeout value here. The range is from 0 to 1439 minutes. Enter 0 to disable the timeout. The default value is 0. Select the Default option to use the default value.
SSH Session Timeout	Enter the SSH session timeout value here. The range is from 0 to 1439 minutes. Enter 0 to disable the timeout. The default value is 3 minutes. Select the Default option to use the default value.
Outgoing SSH Session Timeout	Enter the outgoing SSH session timeout value here. The range is from 0 to 1439 minutes. Enter 0 to disable the timeout. The default value is 0. Select the Default option to use the default value.

Click the **Apply** button to accept the changes made.

DHCP

Service DHCP

This window is used to display and configure the DHCP service on the Switch.

To view the following window, click **Management > DHCP > Service DHCP**, as shown below:

Figure 4-28 Service DHCP Window

The fields that can be configured in **Service DHCP** are described below:

Parameter	Description
Service DHCP State	Select this option to enable or disable the DHCP service.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Service IPv6 DHCP** are described below:

Parameter	Description
Service IPv6 DHCP State	Select this option to enable or disable the IPv6 DHCP service.

Click the **Apply** button to accept the changes made.

DHCP Class Settings

This window is used to display and configure the DHCP class and the DHCP option matching pattern for the DHCP class.

To view the following window, click **Management > DHCP > DHCP Class Settings**, as shown below:

Figure 4-29 DHCP Class Settings Window

The fields that can be configured are described below:

Parameter	Description
Class Name	Enter the DHCP class name with a maximum of 32 characters.

Click the **Apply** button to accept the changes made.

Click the **Edit** button to modify the DHCP option matching pattern for the corresponding DHCP class.

Click the **Delete** button to remove the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Edit** button, the following window will appear.

Figure 4-30 DHCP Class Settings (Edit) Window

The fields that can be configured are described below:

Parameter	Description
Option	Enter the DHCP option number. The range is from 1 to 254.
Hex	Enter the hex pattern of the specified DHCP option. Tick the * check box not to match the remaining bits of the option.
Bitmask	Enter the hex bit mask for masking of the pattern. The masked pattern bits will be matched. If not specified, all bits entered in the Hex field will be checked.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the specified entry.

Click the **Back** button to return to the previous window.

DHCP Server

The Dynamic Host Configuration Protocol (DHCP) allows the Switch to designate IP addresses, subnet masks, default gateways and other IP parameters to devices that request this information. This occurs when a DHCP enabled device is booted on or attached to the locally attached network. This device is known as the DHCP client and when enabled, it will emit query messages on the network before any IP parameters are set. When the DHCP server receives this request, it will allocate an IP address to the client. The DHCP client may be then utilize the IP address allocated by the DHCP server as its local configuration.

The user can configure many DHCP related parameters that it will utilize on its locally attached network, to control and limit the IP settings of clients desiring an automatic IP configuration, such as the lease time of the allocated IP address, the range of IP addresses that will be allowed in its DHCP pool, the ability to exclude various IP addresses within the range so as not to make identical entries on its network, or to assign the IP address of an important device (such as a DNS server or the IP address of the default route) to another device on the network.

Users also have the ability to bind IP addresses within the DHCP pool to specific MAC addresses in order to assign the same IP addresses to important devices.

DHCP Server Global Settings

This window is used to display and configure the global DHCP server parameters.

To view the following window, click **Management > DHCP > DHCP Server > DHCP Server Global Settings**, as shown below:

Figure 4-31 DHCP Server Global Settings Window

The fields that can be configured in **DHCP Use Class State** are described below:

Parameter	Description
DHCP Use Class State	Select to enable or disable the DHCP Use Class State here. When enabled, the DHCP server will use DHCP classes for address allocation.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **DHCP Server Settings** are described below:

Parameter	Description
DHCP Ping Packet	Enter the number of ping packets that the Switch will send out on the network containing the IP address to be allotted. If the ping request is not returned, the IP address is considered unique to the local network and then allotted to the requesting client. A value of 0 means there is no ping test. The range is from 0 to 10. The default value is 2.
DHCP Ping Timeout	Enter the amount of time the DHCP server must wait before timing out a ping packet. The range is from 100 to 10000 milliseconds. The default value is 500 milliseconds.

Click the **Apply** button to accept the changes made.

DHCP Server Pool Settings

This window is used to display and configure the DHCP server pool settings.

To view the following window, click **Management > DHCP > DHCP Server > DHCP Server Pool Settings**, as shown below:

Figure 4-32 DHCP Server Pool Settings Window

The fields that can be configured are described below:

Parameter	Description
Pool Name	Enter the DHCP server pool name here. This name can be up to 32 characters long.

Click the **Apply** button to accept the changes made.

Click the **Edit Class** button to configure the DHCP class.

Click the **Edit Option** button to configure the DHCP server pool option settings.

Click the **Configure** button to configure the DHCP server pool settings.

Click the **Delete** button to remove the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Edit Class** button, the following page will appear.

The screenshot shows the 'DHCP Server Pool Class Settings' window. The form includes the following fields and controls:

- Pool Name:** A text input field containing the value 'pool'.
- Class Name:** A dropdown menu with 'Please Select' as the current selection.
- Start Address:** A text input field with a dotted pattern (.-.-).
- End Address:** A text input field with a dotted pattern (.-.-).
- Buttons:** An 'Apply' button is located to the right of the End Address field. Below the table, there are 'Delete by Name', 'Delete by Address', and 'Back' buttons.

Below the form, the text 'Total Entries: 1' is displayed above a table with the following data:

Class Name	Start Address	End Address
class		

Figure 4-33 DHCP Server Pool Class Settings Window

The fields that can be configured are described below:

Parameter	Description
Class Name	Select an existing DHCP class name here that will be associated with this DHCP pool.
Start Address	Enter the starting IPv4 address that will be associated with the DHCP class in the DHCP pool here.
End Address	Enter the ending IPv4 address that will be associated with the DHCP class in the DHCP pool here.

Click the **Apply** button to accept the changes made.

Click the **Delete by Name** button to remove the DHCP class association by name.

Click the **Delete by Address** button to remove the DHCP class association by address.

Click the **Back** button to return to the previous window.

After clicking the **Edit Option** button, the following page will appear.

DHCP Server Pool Option Settings

DHCP Server Pool Option Settings

Pool Name: pool

Option (1-254):

Type: ASCII

Apply

Option	Type	Value
200	ip	192.168.90.250

Delete

Back

Figure 4-34 DHCP Server Pool Option Settings Window

The fields that can be configured are described below:

Parameter	Description
Option	Enter the DHCP option number here. The range is from 1 to 254.
Type	Select the DHCP option type here. Options to choose from are ASCII , HEX , and IP . After selecting ASCII , enter the ASCII string in the space provided. This string can be up to 255 characters long. After selecting HEX , enter the hexadecimal string in the space provided. This string can be up to 254 characters long. Select the None option to specify a zero-length hexadecimal string. After selecting IP , enter the IPv4 address(es) in the space(s) provided. Up to 8 IPv4 address can be entered.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the specified entry.

Click the **Back** button to return to the previous window.

After clicking the **Configure** button, the following page will appear.

DHCP Server Pool Configure

DHCP Server Pool Configure

Pool Name: Pool

VRF Name: 12 chars

Boot File: 64 chars

Domain Name: 64 chars

Network (IP/Mask): 0 . 0 . 0 . 0 0 . 0 . 0 . 0

Next Server: 0 . 0 . 0 . 0

Default Router:

DNS Server:

Netbios Name Server:

Netbios Node Type: Please Select

Lease: 1 Days (0-365) 00 Hours 00 Minutes Infinite

Back Apply

Figure 4-35 DHCP Server Pool Configure Window

The fields that can be configured are described below:

Parameter	Description
VRF Name	Enter the name of the VRF instance here. This can be up to 12 characters long.
Boot File	Enter the boot file name here. This can be up to 64 characters long.
Domain Name	Enter the domain name for the DHCP client here. This can be up to 64 characters long.
Network (IP/Mask)	Enter the network IPv4 address and subnet mask for the DHCP client here.
Next Server	Enter the next server IPv4 address here. The boot image file is stored on this server and can be retrieved by DHCP clients using this IP address. The server is typically a TFTP server. Only one next server IP address can be specified.
Default Router	Enter the IPv4 address of the default router for the DHCP client here. Up to 8 IPv4 address can be entered here. The IP address of the router should be on the same subnet as the client's subnet. Routers are listed in the order of preference. If default routers are already configured, the default routers configured later will be added to the default interface list.
DNS Server	Enter the IPv4 address to be used by the DHCP client as the DNS server here. Up to 8 IPv4 address can be entered here. Servers are listed in the order of preference. If DNS servers are already configured, the DNS servers configured later will be added to the DNS server list.
Netbios Name Server	Enter the WINS name server IPv4 address for the DHCP client here. Up to 8 IPv4 address can be entered here. Servers are listed in the order of preference. If name servers are already configured, the name server configured later will be added to the default interface list.
Netbios Node Type	Select the NetBIOS node type for Microsoft DHCP clients here. The node type determines the method that NetBIOS uses to register and resolve names. Options to choose from are Broadcast , Peer To Peer , Mixed , and Hybrid . A Broadcast system uses broadcasts. A Peer To Peer (p-node) system uses only point-to-point name queries to a name server (WINS). A Mixed (m-node) system broadcasts first, and then queries the name server. A Hybrid (h-node) system queries the name server first, and then broadcasts. The Hybrid type is recommended.
Lease	Enter and select the lease time for an IPv4 address that is assigned from the address pool here. Enter the Days in the range from 0 to 365. Select the Hours and Minutes from the drop-down menus. Alternatively, the Infinite option can be selected to specify that the lease time is unlimited.

Click the **Apply** button to accept the changes made.

Click the **Back** button to return to the previous window.

DHCP Server Exclude Address

This window is used to view and exclude a range of IPv4 addresses from being allocated to the DHCP client. The DHCP server automatically allocates addresses in DHCP address pools to DHCP clients. All the addresses except the interface's IP address on the router and the excluded address(es) specified here are available for allocation. Multiple ranges of addresses can be excluded. To remove a range of excluded addresses, administrators must specify the exact range of addresses previously configured.

To view the following window, click **Management > DHCP > DHCP Server > DHCP Server Exclude Address**, as shown below:

VRF Name	Begin Address	End Address	
	192.168.70.2	192.168.70.100	Delete

Figure 4-36 DHCP Server Exclude Address Window

The fields that can be configured are described below:

Parameter	Description
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long.
Begin Address	Enter the first IPv4 address of a range of addresses to be excluded here.
End Address	Enter the last IPv4 address of a range of addresses to be excluded here.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the specified entry.

DHCP Server Manual Binding

This window is used to display and configure the DHCP server manual binding settings. With a manual binding entry, the IP address can be bound with a client-identifier or bound with the hardware address of the host.

To view the following window, click **Management > DHCP > DHCP Server > DHCP Server Manual Binding**, as shown below:

Pool Name	Host	Mask	Hardware Address	Client Identifier	
pool	192.168.70.220	255.55.55.0	00-11-22-33-44-55	-	Delete

Figure 4-37 DHCP Server Manual Binding Window

The fields that can be configured are described below:

Parameter	Description
Pool Name	Enter the DHCP server pool name here. This name can be up to 32 characters long.
Host	Enter the DHCP host IPv4 address here.
Mask	Enter the DHCP host network subnet mask here.

Parameter	Description
Hardware Address	Enter the DHCP host MAC address here.
Client Identifier	Enter the DHCP host identifier in hexadecimal notation here. The client identifier is formatted by the media type and the MAC address.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the specified entry.

DHCP Server Manual Binding Ext

This window is used to display and configure the DHCP server manual binding ext settings.

To view the following window, click **Management > DHCP > DHCP Server > DHCP Server Manual Binding Ext**, as shown below:

Figure 4-38 DHCP Server Manual Binding Ext Window

The fields that can be configured are described below:

Parameter	Description
Pool Name	Enter the DHCP server pool name here. This name can be up to 32 characters long.
Host	Enter the DHCP host IPv4 address here.
Mask	Enter the DHCP host network subnet mask here.
Hardware Address	Enter the DHCP host MAC address here.
Client Identifier	Enter the DHCP host identifier in hexadecimal notation here. The client identifier is formatted by the media type and the MAC address.
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long.
IP Address	Enter the binding entry IPv4 address here.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the specified entry.

Click the **Find** button to locate a specific entry based on the information entered.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

DHCP Server Dynamic Binding

This window is used to view and clear the DHCP server dynamic binding entries.

To view the following window, click **Management > DHCP > DHCP Server > DHCP Server Dynamic Binding**, as shown below:

The screenshot shows the 'DHCP Server Dynamic Binding' window. It has a search section with 'VRF Name' (12 chars) and 'IP Address' fields, and a 'Find' button. Below that, there are 'Pool Name' (32 chars) and 'VRF Name' (12 chars) fields, with a checked 'All' checkbox and a 'Clear' button. At the bottom, it displays 'Total Entries: 0' and a table with the following columns: VRF Name, IP Address, Client-ID/Hardware Address, Lease Expiration, and Type.

Figure 4-39 DHCP Server Dynamic Binding Window

The fields that can be configured are described below:

Parameter	Description
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long.
IP Address	Enter the binding entry IPv4 address here.
Pool Name	Enter the DHCP server pool name here. This name can be up to 32 characters long. Select the All option to clear the binding entries for all pools.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Clear** button to clear the entries based on the information specified.

DHCP Server IP Conflict

This window is used to view and clear the DHCP conflict entries from the DHCP server database.

To view the following window, click **Management > DHCP > DHCP Server > DHCP Server IP Conflict**, as shown below:

The screenshot shows the 'DHCP Server IP Conflict' window. It has a search section with 'VRF Name' (12 chars) and 'IP Address' fields, and a 'Find' button. Below that, there are 'Pool Name' (32 chars) and 'VRF Name' (12 chars) fields, with a checked 'All' checkbox and a 'Clear' button. At the bottom, it displays 'Total Entries: 0' and a table with the following columns: IP Address, Detection Method, Detection Time, and VRF Name.

Figure 4-40 DHCP Server IP Conflict Window

The fields that can be configured are described below:

Parameter	Description
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long.
IP Address	Enter the IPv4 address of the conflict entry to be located or cleared.
Pool Name	Enter the DHCP server pool name here. This name can be up to 32 characters long. Select the All option to clear the conflict entries for all pools.


Click the **Find** button to locate a specific entry based on the information entered.

Click the **Clear** button to clear the entries based on the information specified.

DHCP Server Statistic

This window is used to display DHCP server statistics.

To view the following window, click **Management > DHCP > DHCP Server > DHCP Server Statistic**, as shown below:

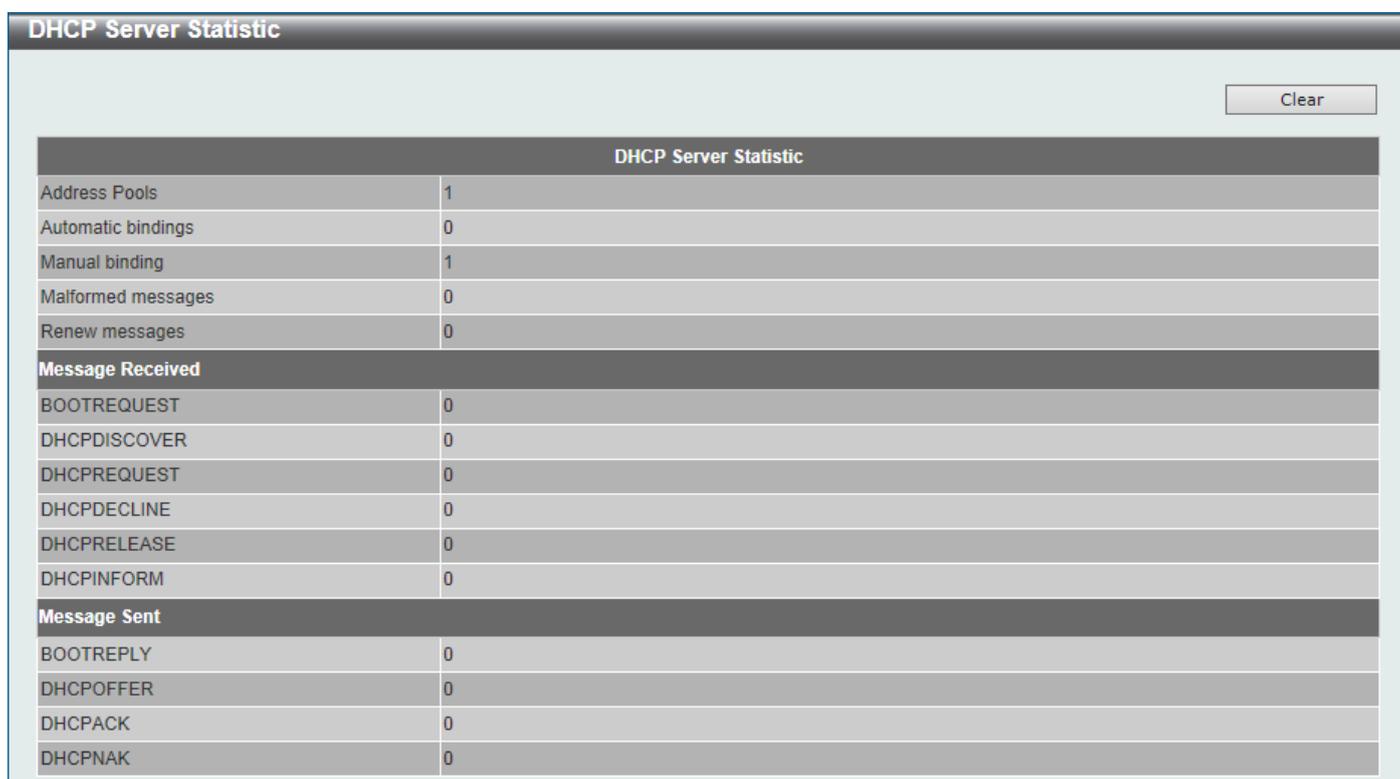

The screenshot shows a window titled "DHCP Server Statistic" with a "Clear" button in the top right corner. The main content is a table with the following data:

DHCP Server Statistic	
Address Pools	1
Automatic bindings	0
Manual binding	1
Malformed messages	0
Renew messages	0
Message Received	
BOOTREQUEST	0
DHCPDISCOVER	0
DHCPREQUEST	0
DHCPDECLINE	0
DHCPRELEASE	0
DHCPINFORM	0
Message Sent	
BOOTREPLY	0
DHCPOFFER	0
DHCPACK	0
DHCPNAK	0

Figure 4-41 DHCP Server Statistic Window

Click the **Clear** button to clear the statistics information displayed here.

DHCPv6 Server

DHCPv6 Server Pool Settings

This window is used to display and configure the DHCPv6 server pool settings.

To view the following window, click **Management > DHCP > DHCPv6 Server > DHCPv6 Server Pool Settings**, as shown below:

Figure 4-42 DHCPv6 Server Pool Settings Window

The fields that can be configured are described below:

Parameter	Description
Pool Name	Enter the DHCPv6 server pool name here. This name can be up to 12 characters long.

Click the **Apply** button to accept the changes made.

Click the **Configure** button to configure the DHCPv6 server pool settings.

Click the **Delete** button to remove the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Configure** button, the following page will appear.

Figure 4-43 DHCPv6 Server Pool Configure Window

The fields that can be configured in **DHCPv6 Server Pool Configure** are described below:

Parameter	Description
Address Prefix	Select and enter the DHCPv6 server pool IPv6 network address and prefix length here. For example, 2015::0/64.
Prefix Delegation Pool	Select and enter the DHCPv6 server pool prefix delegation name here. This name can be up to 12 characters long.
Valid Lifetime	Enter the valid lifetime value here. The range is from 60 to 4294967295 seconds. The valid lifetime should be greater than preferred lifetime. If this

Parameter	Description
	value is not specified, then the default valid lifetime will be 2592000 seconds (30 days).
Preferred Lifetime	Enter the preferred lifetime value here. The range is from 60 to 4294967295 seconds. If this value is not specified, then the default preferred lifetime will be 604800 seconds (7 days).
DNS Server	Enter the DNS server IPv6 address to be assigned to requesting DHCPv6 clients here.
Domain Name	Enter the domain name to be assigned to requesting DHCPv6 clients here.

Click the **Apply** button to accept the changes made.

Click the **Back** button to return to the previous window.

The fields that can be configured in **Static Bindings** are described below:

Parameter	Description
Static Bindings Address	Enter the static binding IPv6 address assign to the specific client here.
Static Bindings Prefix	Enter the static binding IPv6 network address and prefix length here.
Client DUID	Enter the client DHCP Unique Identifier (DUID) here. This string can be up to 28 characters long.
IAID	Enter the Identity Association Identifier (IAID) here. The IAID here uniquely identifies a collection of non-temporary addresses (IANA) assigned on the client.
Valid Lifetime	Enter the valid lifetime value here. The valid lifetime should be greater than the preferred lifetime. The range is from 60 to 4294967295 seconds. By default, this value is 2592000 seconds (30 days).
Preferred Lifetime	Enter the preferred lifetime value here. The range is from 60 to 4294967295 seconds. By default, this value is 604800 seconds (7 days).

Click the **Apply** button to accept the changes made.

DHCPv6 Server Local Pool Settings

This window is used to display and configure the DHCPv6 server local pool settings.

To view the following window, click **Management > DHCP > DHCPv6 Server > DHCPv6 Server Local Pool Settings**, as shown below:

DHCPv6 Server Local Pool Settings

DHCPv6 Server Local Pool

Pool Name: 12 chars

IPv6 Address/Prefix Length: 2013::1/64

Assigned Length:

Apply

Pool Name: 12 chars

Find

Total Entries: 1

Pool Name	Prefix	Assigned Length	Free	In Use
Pool	2016::/64	64	1	0

User Detail Delete

1/1 |< < 1 > > Go

User Prefix Interface

Figure 4-44 DHCPv6 Server Local Pool Settings Window

The fields that can be configured are described below:

Parameter	Description
Pool Name	Enter the DHCPv6 server pool name here. This name can be up to 12 characters long.
IPv6 Address / Prefix Length	Enter the IPv6 prefix address and prefix length of the local pool here.
Assigned Length	Enter the prefix length to be delegated to the user from the pool here. The value of the assigned length cannot be less than the value of the prefix length.

Click the **Apply** button to accept the changes made.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **User Detail** button to view the user information displayed in the lower table.

Click the **Delete** button to remove the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

DHCPv6 Server Exclude Address

This window is used to specify IPv6 addresses that a DHCPv6 server should not assign to DHCPv6 clients. The DHCPv6 server assumes that all addresses (excluding the Switch's IPv6 address) can be assigned to clients. Use this window to exclude a single IPv6 address or a range of IPv6 addresses. The excluded addresses are only applied to the pool(s) for address assignment.

To view the following window, click **Management > DHCP > DHCPv6 Server > DHCPv6 Server Exclude Address**, as shown below:

Range	Low IPv6 Address	High IPv6 Address	
1	2015::12	2015::15	Delete

Figure 4-45 DHCPv6 Server Exclude Address Window

The fields that can be configured are described below:

Parameter	Description
Low IPv6 Address	Enter the excluded IPv6 address or first IPv6 address in the excluded address range here.
High IPv6 Address	Enter the last IPv6 address in the excluded address range here (optional).

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the specified entry.

DHCPv6 Server Binding

This window is used to view and clear the DHCPv6 server binding entries.

To view the following window, click **Management > DHCP > DHCPv6 Server > DHCPv6 Server Binding**, as shown below:

Figure 4-46 DHCPv6 Server Binding Window

The fields that can be configured are described below:

Parameter	Description
IPv6 Address	Enter the binding entry IPv6 address to be displayed or cleared here. Select the All option to display or clear all DHCPv6 client prefix bindings in or from the binding table.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Clear** button to clear the entries based on the information specified.

DHCPv6 Server Interface Settings

This window is used to display and configure the DHCPv6 server interface settings.

To view the following window, click **Management > DHCP > DHCPv6 Server > DHCPv6 Server Interface Settings**, as shown below:

Figure 4-47 DHCPv6 Server Interface Settings Window

The fields that can be configured are described below:

Parameter	Description
Interface VLAN	Enter the interface VLAN ID here. The range is from 1 to 4094.
Pool Name	Enter the DHCPv6 server pool name here. This name can be up to 12 characters long.
Rapid Commit	Select to enable or disable two-message exchange here. By default, two-message exchange is not allowed.
Preference	Enter the preference value here. Select the Allow Hint option to allow hints.
Interface Name	Enter the interface name here.

Click the **Apply** button to accept the changes made.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Delete** button to remove the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

DHCPv6 Server Operational Information

This window is used to display the DHCPv6 server operational information.

To view the following window, click **Management > DHCP > DHCPv6 Server > DHCPv6 Server Operational Information**, as shown below:



Figure 4-48 DHCPv6 Server Operational Information Window

DHCP Relay

DHCP Relay Global Settings

This window is used to display and configure the global DHCP relay settings.

To view the following window, click **Management > DHCP > DHCP Relay > DHCP Relay Global Settings**, as shown below:



Figure 4-49 DHCP Relay Global Settings Window

The fields that can be configured are described below:

Parameter	Description
DHCP Relay Unicast State	Select to globally enable or disable the DHCP relay unicast state here.

Click the **Apply** button to accept the changes made.

DHCP Relay Pool Settings

This window is used to display and configure the DHCP relay pool on a DHCP relay agent.

To view the following window, click **Management > DHCP > DHCP Relay > DHCP Relay Pool Settings**, as shown below:

Figure 4-50 DHCP Relay Pool Settings Window

The fields that can be configured are described below:

Parameter	Description
Pool Name	Enter the address pool name with a maximum of 32 characters.

Click the **Apply** button to accept the changes made.

Click the **Edit** button to modify the corresponding information of the specific DHCP pool.

Click the **Delete** button to remove the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Edit** button under **Source**, the following window will appear.

Figure 4-51 DHCP Relay Pool Source Settings Window

The fields that can be configured are described below:

Parameter	Description
Source IP Address	Enter the source subnet of client packets.
Subnet Mask	Enter the network mask of the source subnet.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the specified entry.

Click the **Back** button to return to the previous window.

After clicking the **Edit** button under **Destination**, the following window will appear.

Figure 4-52 DHCP Relay Pool Destination Settings Window

The fields that can be configured are described below:

Parameter	Description
VRF State	Select the VRF state here. Options to choose from are True and False .
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long. Select the Global option to specify that the IP address is selected from the global address space.
Relay Destination	Enter the relay destination DHCP server IP address.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the specified entry.

Click the **Back** button to return to the previous window.

After clicking the **Edit** button under **Class**, the following window will appear.

Figure 4-53 DHCP Relay Pool Class Settings Window

The fields that can be configured are described below:

Parameter	Description
Class Name	Select the DHCP class name.

Click the **Apply** button to accept the changes made.

Click the **Edit** button to edit more information.

Click the **Delete** button to remove the specified entry.

Click the **Back** button to return to the previous window.

After clicking the **Edit** button, the following window will appear.

DHCP Relay Pool Class Edit Settings

DHCP Relay Pool Class Edit Settings

Pool Name pool
 Class Name class
 VRF State True
 VRF Name 12 chars Global
 Relay Target

Apply

Total Entries: 1

Target Address	VRF State	VRF Name
10.90.90.2	True	

Delete Back

Figure 4-54 DHCP Relay Pool Class Edit Settings Window

The fields that can be configured are described below:

Parameter	Description
VRF State	Select the VRF state here. Options to choose from are True and False .
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long. Select the Global option to specify that the IP address is selected from the global address space.
Relay Target	Enter the DHCP relay target for relaying packets that matches the value pattern of the option defined in the DHCP class.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the specified entry.

Click the **Back** button to return to the previous window.

DHCP Relay Information Settings

This window is used to display and configure the DHCP relay information.

To view the following window, click **Management > DHCP > DHCP Relay > DHCP Relay Information Settings**, as shown below:

DHCP Relay Information Settings

DHCP Relay Information Global

Information Trust All Disabled
 Information Policy Replace
 Information Option VPN Disabled
 Information Check Disabled
 Information Option Disabled

Apply

DHCP Relay Information

Total Entries: 1

Interface	Trusted	Check Relay	Policy	Option Insert	VPN Option
vlan1	Disabled	Not Configured	Not Configured	Not Configured	Not Configured

Edit

1/1 |< < 1 > >| Go

Figure 4-55 DHCP Relay Information Settings Window

The fields that can be configured are described below:

Parameter	Description
Information Trust All	Select this option to enable or disable the DHCP relay agent to trust the IP DHCP relay information for all interfaces.
Information Check	Select this option to enable or disable the DHCP relay agent to validate and remove the relay agent information option in the received DHCP reply packet.
Information Policy	Select the Option 82 re-forwarding policy for the DHCP relay agent. Options to choose from are Keep , Drop , and Replace . <ul style="list-style-type: none"> • Keep - Select to keep the packet that already has the relay option. The packet is left unchanged and directly relayed to the DHCP server. • Drop - Select to discard the packet that already has the relay option. • Replace - Select to replace the packet that already has the relay option. The packet will be replaced with a new option.
Information Option	Select this option to enable or disable the insertion of relay agent information (Option 82) during the relay of DHCP request packets.
Information Option VPN	Select to enable or disable the information option VPN feature here. This is used to enable or disable the insertion of VPN-related sub-options for an interface during the relay of DHCP request packets.

Click the **Apply** button to accept the changes made.

Click the **Edit** button to modify the corresponding interface.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

DHCP Relay Information Option Format Settings

This window is used to display and configure the DHCP information format.

To view the following window, click **Management > DHCP > DHCP Relay > DHCP Relay Information Option Format Settings**, as shown below:

DHCP Relay Information Option Format Settings

DHCP Relay Information Option Format Global

Information Format Remote ID:
Information Format Circuit ID:

DHCP Relay Information Option Format Type

Unit	From Port	To Port	Format	Type	Value
<input type="text" value="1"/> <input type="button" value="v"/>	<input type="text" value="eth1/0/1"/> <input type="button" value="v"/>	<input type="text" value="eth1/0/1"/> <input type="button" value="v"/>	<input type="text" value="Expert UDF"/> <input type="button" value="v"/>	<input type="text" value="Remote ID"/> <input type="button" value="v"/>	<input type="text" value="32 chars"/>

Unit 1 Settings

Port	Format	Remote ID Value	Circuit ID Value
eth1/0/1			
eth1/0/2			
eth1/0/3			
eth1/0/4			
eth1/0/5			
eth1/0/6			

Figure 4-56 DHCP Relay Information Option Format Settings Window

The fields that can be configured in **DHCP Relay Information Option Format Global** are described below:

Parameter	Description
Information Format Remote ID	Select the DHCP information remote ID sub-option. Options to choose from are: <ul style="list-style-type: none"> • Default - Select to use the Switch's system MAC address as the remote ID. • User Define - Select to use a user-defined remote ID. Enter the user-defined string with the maximum of 32 characters in the text box. • Vendor2 - Select to use vendor 2 as the remote ID. • Expert UDF - Select to use the expert UDF remote ID. Select the stand-alone unit format after this selection here.
Information Format Circuit ID	Select the DHCP information circuit ID sub-option. Options to choose from are: <ul style="list-style-type: none"> • Default - Select to use the default circuit ID sub-option. • User Define - Select to use a user-defined circuit ID. Enter the user-defined string with the maximum of 32 characters in the text box. • Vendor1 - Select to use vendor 1 as the circuit ID. • Expert UDF - Select to use the expert UDF circuit ID. Select the stand-alone unit format after this selection here.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **DHCP Relay Information Option Format Global** are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the range of ports that will be used for this configuration here.
Format	Specifies that the expert UDF format will be used.
Type	Select to use the Remote ID type or Circuit ID type here.
Value	Enter the vendor-defined string for Option 82 information in the remote/circuit ID sub-option here. This string can be up to 32 characters long.

Click the **Apply** button to accept the changes made.

DHCP Relay Information Profile Settings

This window is used to display and configure the DHCP relay information profile settings.

To view the following window, click **Management > DHCP > DHCP Relay > DHCP Relay Information Profile Settings**, as shown below:

Figure 4-57 DHCP Relay Information Profile Settings Window

The fields that can be configured in **DHCP Relay Information Option MAC Format** are described below:

Parameter	Description
Case	Select the case that will be used here. Options to choose from are: <ul style="list-style-type: none"> • Lowercase - Specifies that when using the lowercase format, the Option 82 MAC address for the user-defined profile will be formatted as: aa-bb-cc-dd-ee-ff. • Uppercase - Specifies that when using the uppercase format, the Option 82 MAC address for the user-defined profile username will be formatted as: AA-BB-CC-DD-EE-FF.
Delimiter	Select the delimiter that will be used here. Options to choose from are: <ul style="list-style-type: none"> • Hyphen - Specifies that the format will be AA-BB-CC-DD-EE-FF. • Colon - Specifies that the format will be AA:BB:CC:DD:EE:FF. • Dot - Specifies that the format will be AA.BB.CC.DD.EE.FF. • None - Specifies that when not using any delimiter, the format will be AABBCCDDEEFF.
Delimiter Number	Select the delimiter number here. Options to choose from are: <ul style="list-style-type: none"> • 1 - Single delimiter, the format is: AABBCC.DDEEFF. • 2 - Double delimiters, the format is: AABB.CCDD.EEFF. • 5 - Multiple delimiters, the format is: AA.BB.CC.DD.EE.FF.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **DHCP Relay Information Profile Settings** are described below:

Parameter	Description
Profile Name	Enter the Option 82 profile name here. The profile can be used to define the flexible, user-defined Option 82 entry.
Format String	After clicking the Edit button, enter the user-defined DHCP Option 82 format string here. This string can be up to 251 characters long. The following rules need to be considered: <ul style="list-style-type: none"> • This string can be a hexadecimal value, an ASCII string, or any combination of hexadecimal values and ASCII characters. An ASCII string needs to be enclosed with quotation marks (") like "Ethernet". Any ASCII

Parameter	Description
	<p>characters outside of the quotation marks will be interpreted as hexadecimal values.</p> <ul style="list-style-type: none"> • A formatted key string is a string that should be translated before being encapsulated in the packet. A formatted key string can be contained both ASCII strings and hexadecimal values. For example, “%” + “\$” + “1~32” + “keyword” + “:.”: <ul style="list-style-type: none"> ○ % - Indicates that the string that follows this character is a formatted key string. ○ “\$” or “0” - (Optional) Indicates a fill indicator. This option specifies how to fill the formatted key string to meet the length option. This option can be either “\$” or “0”, and cannot be specified as both at the same time. <ul style="list-style-type: none"> ▪ “\$” - Indicates to fill the leading space (0x20). ▪ “0” - Indicates to fill the leading 0 (0) is the default setting. ○ 1~32 - (Optional) Indicates a length option. This specifies how many characters or bytes the translated key string should occupy. If the actual length of the translated key string is less than the length specified by this option, a fill indicator will be used to fill it. Otherwise, this length option and fill indicator will be ignored and the actual string will be used directly. ○ keyword - Indicates that the keyword will be translated based on the actual value of the system. The following keyword definitions specifies that a command will be refused if an unknown or unsupported keyword is detected: <ul style="list-style-type: none"> ▪ devtype - The model name of the device. Only an ASCII string is allowed. ▪ sysname - Indicates the System name of the Switch. Only an ASCII string is allowed. ▪ ifdescr - Derived from <i>ifDescr</i> (IF-MIB). Only an ASCII string is allowed. ▪ portmac - Indicates the MAC address of a port. This can be either an ASCII string or a hexadecimal value. When in the format of an ASCII string, the MAC address format can be customized using special CLI commands. When in the format of a hexadecimal value, the MAC address will be encapsulated in order in hexadecimal. ▪ sysmac - Indicates the system MAC address. This can be either an ASCII string or a hexadecimal value. In the ASCII string format, the MAC address format can be customized using special CLI commands. In the hexadecimal format, the MAC address will be encapsulated in order in hexadecimal. ▪ unit - Indicates the unit ID. This can be either an ASCII string or a hexadecimal value. For a standalone device, the unit ID is 0. ▪ module - Indicates the module ID number. This can be either an ASCII string or a hexadecimal value. ▪ port - Indicates the local port number. This can be either an ASCII string or a hexadecimal value. ▪ svlan - Indicates the outer VLAN ID. This can be either an ASCII string or a hexadecimal value. ▪ cvlan - Indicates the inner VLAN ID. This can be either an ASCII string or a hexadecimal value. ○ : - Indicates the end of the formatted key string. If a formatted key string is the last parameter of the command, its ending character (“:.”) can be ignored. The space (0x20) between “%” and “:.” will be ignored. Other spaces will be encapsulated. • ASCII strings can be any combination of formatted key strings and 0~9, a~z, A~Z, !@#\$%^&*()_+ =\\[]{};"/?.,<>`, and space characters. “\” is the escape character. The special character after “\” is the character itself, for example, “\%” is “%” itself, not the start indicator of a formatted key string. Spaces not in the formatted key string will also be encapsulated.

Parameter	Description
	<ul style="list-style-type: none"> Hexadecimal values can be any combination of formatted key strings and 0~9, A~F, a~f, and space characters. The formatted key strings only support keywords that support hexadecimal values. Spaces not in the formatted key string will be ignored.

Click the **Apply** button to accept the changes made.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Edit** button to re-configure the specific entry.

Click the **Delete** button to delete the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

DHCP Relay Port Settings

This window is used to display and configure the DHCP relay port settings.

To view the following window, click **Management > DHCP > DHCP Relay > DHCP Relay Port Settings**, as shown below:

Unit	From Port	To Port	State
1	eth1/0/1	eth1/0/1	Disabled

Unit 1 Settings	
Port	State
eth1/0/1	Enabled
eth1/0/2	Enabled
eth1/0/3	Enabled
eth1/0/4	Enabled
eth1/0/5	Enabled
eth1/0/6	Enabled
eth1/0/7	Enabled
eth1/0/8	Enabled

Figure 4-58 DHCP Relay Port Settings Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the range of ports that will be used for this configuration here.
State	Select to enable or disable the DHCP Relay feature on the specified port(s).

Click the **Apply** button to accept the changes made.

DHCP Local Relay VLAN

This window is used to display and configure local relay on a VLAN or a group of VLANs.

To view the following window, click **Management > DHCP > DHCP Relay > DHCP Local Relay VLAN**, as shown below:

Figure 4-59 DHCP Local Relay VLAN Window

The fields that can be configured are described below:

Parameter	Description
DHCP Local Relay VID List	Enter the VLAN ID for DHCP local relay. Tick the All VLANs check box to select all VLANs.
State	Select this option to enable or disable the DHCP local relay on the specific VLAN(s).

Click the **Apply** button to accept the changes made.



NOTE: When the state of the DHCP relay port is disabled, the port will not relay or locally relay received DHCP packets.

DHCPv6 Relay

DHCPv6 Relay Global Settings

This window is used to display and configure the DHCPv6 Relay remote ID settings.

To view the following window, click **Management > DHCP > DHCPv6 Relay > DHCPv6 Relay Global Settings**, as shown below:

Figure 4-60 DHCPv6 Relay Global Settings Window

The fields that can be configured in **DHCPv6 Relay Remote ID Settings** are described below:

Parameter	Description
IPv6 DHCP Relay Remote ID Format	Select the IPv6 DHCP Relay remote ID format that will be used here. Options to choose from are Default , CID with User Define , User Define , and Expert UDF .
Standalone Unit Format	After selecting the Expert UDF option, select the standalone unit format here. Options to choose from are 0 and 1 .
IPv6 DHCP Relay Remote ID UDF	Select to choose the User Define Field (UDF) for remote ID. Options to choose from are ASCII , and Hex . <ul style="list-style-type: none"> • ASCII - Select to enter the ASCII string with a maximum of 128 characters in the text box. • HEX - Select to enter the hexadecimal string with a maximum of 256 characters in the text box.
IPv6 DHCP Relay Remote ID Policy	Select to choose Option 37 forwarding policy for the DHCPv6 relay agent. Options to choose from are Keep , and Drop . <ul style="list-style-type: none"> • Keep - Select that the DHCPv6 request packet that already has the relay agent Remote-ID option is left unchanged and directly relayed to the DHCPv6 server. • Drop - Select to discard the packet that already has the relay agent Remote-ID Option 37.
IPv6 DHCP Relay Remote ID Option	Select this option to enable or disable the insertion of the relay agent remote ID Option 37 during the relay of DHCP for IPv6 request packets.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **DHCPv6 Relay Interface ID Settings** are described below:

Parameter	Description
IPv6 DHCP Relay Interface ID Format	Select the IPv6 DHCP relay interface ID format that will be used here. Options to choose from are Default , CID , Vendor1 , and Expert UDF .
Standalone Unit Format	After selecting the Expert UDF option, select the standalone unit format here. Options to choose from are 0 and 1 .
IPv6 DHCP Relay Interface ID Policy	Select the Option 18 re-forwarding policy for the DHCPv6 relay agent here. Options to choose from are: <ul style="list-style-type: none"> • Keep - Specifies that the DHCPv6 request packets that already contain the relay agent interface ID option are left unchanged and directly relay to the DHCPv6 server. • Drop - Specifies to discard the packets that already contain the relay agent interface ID Option 18.
IPv6 DHCP Relay Interface ID Option	Select to enable or disable the insertion of the relay agent interface ID Option 18 during the relay of DHCP for IPv6 request packets.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **DHCPv6 Relay Information Option MAC Format** are described below:

Parameter	Description
Case	Select the case that will be used here. Options to choose from are: <ul style="list-style-type: none"> • Lowercase - Specifies that the MAC format will be lowercase. For example: aa-bb-cc-dd-ee-ff. • Uppercase - Specifies that the MAC format will be uppercase. For example: AA-BB-CC-DD-EE-FF.
Delimiter	Select the delimiter that will be used here. Options to choose from are:

Parameter	Description
	<ul style="list-style-type: none"> • Hyphen - Specifies that the MAC address format will contain hyphens. For example: AA-BB-CC-DD-EE-FF. • Colon - Specifies that the MAC address format will contain colons. For example: AA:BB:CC:DD:EE:FF. • Dot - Specifies that the MAC address format will contain dots. For example: AA.BB.CC.DD.EE.FF. • None - Specifies that the MAC address format will contain no delimiters. For example: AABCCDDEEFF.
Delimiter Number	<p>Specifies the delimiter number that will be used in the MAC address format here. Options to choose from are:</p> <ul style="list-style-type: none"> • 1 - Specifies to use a single delimiter. For example: AABCC.DDEEFF. • 2 - Specifies to use two delimiters. For example: AAB.CCDD.EEFF • 5 - Specifies to use multiple delimiters. For example: AA.BB.CC.DD.EE.FF

Click the **Apply** button to accept the changes made.

DHCPv6 Relay Interface Settings

This window is used to display and configure the DHCPv6 relay interface settings.

To view the following window, click **Management > DHCP > DHCPv6 Relay > DHCPv6 Relay Interface Settings**, as shown below:

DHCPv6 Relay Interface Settings

DHCPv6 Relay Interface Settings

Interface VLAN (1-4094)

Destination IPv6 Address

Output Interface VLAN (1-4094)

Interface VLAN (1-4094)

Total Entries: 1

Interface	Destination IPv6 Address	Output Interface	
vlan1	2015::10	vlan1	<input type="button" value="Delete"/>

1/1 |< < 1 > >|

Figure 4-61 DHCPv6 Relay Interface Settings Window

The fields that can be configured are described below:

Parameter	Description
Interface VLAN	Enter the interface VLAN ID used in the DHCPv6 relay here. The range is from 1 to 4094.
Destination IPv6 Address	Enter the DHCPv6 relay destination address.
Output Interface VLAN	Enter the output interface VLAN ID for the relay destination here. The range is from 1 to 4094.

Click the **Apply** button to accept the changes made.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Delete** button to remove the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

DHCPv6 Relay Remote ID Profile Settings

This window is used to display and configure the DHCPv6 relay remote ID profile settings. This is used to create a new profile for DHCPv6 relay Option 82.

To view the following window, click **Management > DHCP > DHCPv6 Relay > DHCPv6 Relay Remote ID Profile Settings**, as shown below:

Figure 4-62 DHCPv6 Relay Remote ID Profile Settings Window

The fields that can be configured are described below:

Parameter	Description
Profile Name	Enter the profile name here. This string can be up to 32 characters long.
Format String	<p>After clicking the Edit button, enter the Option 82 format string here. This string can be up to 251 characters long.</p> <p>The following rules need to be considered:</p> <ul style="list-style-type: none"> This string can be a hexadecimal value, an ASCII string, or any combination of hexadecimal values and ASCII characters. An ASCII string needs to be enclosed with quotation marks (") like "Ethernet". Any ASCII characters outside of the quotation marks will be interpreted as hexadecimal values. A formatted key string is a string that should be translated before being encapsulated in the packet. A formatted key string can be contained both ASCII strings and hexadecimal values. For example, "%" + "\$" + "1~32" + "keyword" + ":": <ul style="list-style-type: none"> % - Indicates that the string that follows this character is a formatted key string. "\$" or "0" - (Optional) Indicates a fill indicator. This option specifies how to fill the formatted key string to meet the length option. This option can be either "\$" or "0", and cannot be specified as both at the same time. <ul style="list-style-type: none"> "\$" - Indicates to fill the leading space (0x20). "0" - Indicates to fill the leading 0 (0) is the default setting. 1~32 - (Optional) Indicates a length option. This specifies how many characters or bytes the translated key string should occupy. If the actual length of the translated key string is less than the length specified by this option, a fill indicator will be used to fill it. Otherwise, this length option and fill indicator will be ignored and the actual string will be used directly. keyword - Indicates that the keyword will be translated based on the actual value of the system. The following keyword definitions specifies that a command will be refused if an unknown or unsupported keyword is detected: <ul style="list-style-type: none"> devtype - The model name of the device. Only an ASCII string is allowed. sysname - Indicates the System name of the Switch. Only an ASCII string is allowed.

Parameter	Description
	<ul style="list-style-type: none"> ▪ ifdescr - Derived from <i>ifDescr</i> (IF-MIB). Only an ASCII string is allowed. ▪ portmac - Indicates the MAC address of a port. This can be either an ASCII string or a hexadecimal value. When in the format of an ASCII string, the MAC address format can be customized using special CLI commands. When in the format of a hexadecimal value, the MAC address will be encapsulated in order in hexadecimal. ▪ sysmac - Indicates the system MAC address. This can be either an ASCII string or a hexadecimal value. In the ASCII string format, the MAC address format can be customized using special CLI commands. In the hexadecimal format, the MAC address will be encapsulated in order in hexadecimal. ▪ unit - Indicates the unit ID. This can be either an ASCII string or a hexadecimal value. For a standalone device, the unit ID is 0. ▪ module - Indicates the module ID number. This can be either an ASCII string or a hexadecimal value. ▪ port - Indicates the local port number. This can be either an ASCII string or a hexadecimal value. ▪ svlan - Indicates the outer VLAN ID. This can be either an ASCII string or a hexadecimal value. ▪ cvlan - Indicates the inner VLAN ID. This can be either an ASCII string or a hexadecimal value. <ul style="list-style-type: none"> ○ : - Indicates the end of the formatted key string. If a formatted key string is the last parameter of the command, its ending character (":") can be ignored. The space (0x20) between "%" and ":" will be ignored. Other spaces will be encapsulated. <ul style="list-style-type: none"> • ASCII strings can be any combination of formatted key strings and 0~9, a~z, A~Z, !@#\$%^&*()_+ =\\[]{};"/?.,<>`, and space characters. "\ " is the escape character. The special character after "\ " is the character itself, for example, "\\%" is "%" itself, not the start indicator of a formatted key string. Spaces not in the formatted key string will also be encapsulated. • Hexadecimal values can be any combination of formatted key strings and 0~9, A~F, a~f, and space characters. The formatted key strings only support keywords that support hexadecimal values. Spaces not in the formatted key string will be ignored.

Click the **Apply** button to accept the changes made.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Edit** button to re-configure the specific entry.

Click the **Delete** button to remove the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

DHCPv6 Relay Interface ID Profile Settings

This window is used to display and configure the DHCPv6 relay interface ID profile settings. This is used to create a new profile for the DHCPv6 relay Option 82.

To view the following window, click **Management > DHCP > DHCPv6 Relay > DHCPv6 Relay Interface ID Profile Settings**, as shown below:

Figure 4-63 DHCPv6 Relay Interface ID Profile Settings Window

The fields that can be configured are described below:

Parameter	Description
Profile Name	Enter the profile name here. This string can be up to 32 characters long.
Format String	<p>After clicking the Edit button, enter the Option 82 format string here. This string can be up to 251 characters long.</p> <p>The following rules need to be considered:</p> <ul style="list-style-type: none"> • This string can be a hexadecimal value, an ASCII string, or any combination of hexadecimal values and ASCII characters. An ASCII string needs to be enclosed with quotation marks (") like "Ethernet". Any ASCII characters outside of the quotation marks will be interpreted as hexadecimal values. • A formatted key string is a string that should be translated before being encapsulated in the packet. A formatted key string can be contained both ASCII strings and hexadecimal values. For example, "%" + "\$" + "1~32" + "keyword" + ":": <ul style="list-style-type: none"> ○ % - Indicates that the string that follows this character is a formatted key string. ○ "\$" or "0" - (Optional) Indicates a fill indicator. This option specifies how to fill the formatted key string to meet the length option. This option can be either "\$" or "0", and cannot be specified as both at the same time. <ul style="list-style-type: none"> ▪ "\$" - Indicates to fill the leading space (0x20). ▪ "0" - Indicates to fill the leading 0. The fill the leading 0 (0) is the default setting. ○ 1~32 - (Optional) Indicates a length option. This specifies how many characters or bytes the translated key string should occupy. If the actual length of the translated key string is less than the length specified by this option, a fill indicator will be used to fill it. Otherwise, this length option and fill indicator will be ignored and the actual string will be used directly. ○ keyword - Indicates that the keyword will be translated based on the actual value of the system. The following keyword definitions specifies that a command will be refused if an unknown or unsupported keyword is detected: <ul style="list-style-type: none"> ▪ devtype - The model name of the device. Only an ASCII string is allowed. ▪ sysname - Indicates the System name of the Switch. Only an ASCII string is allowed. ▪ ifdescr - Derived from <i>ifDescr</i> (IF-MIB). Only an ASCII string is allowed. ▪ portmac - Indicates the MAC address of a port. This can be either an ASCII string or a hexadecimal value. When in the format of an ASCII string, the MAC address format can be customized using special CLI commands. When in the format of

Parameter	Description
	<p>a hexadecimal value, the MAC address will be encapsulated in order in hexadecimal.</p> <ul style="list-style-type: none"> ▪ sysmac - Indicates the system MAC address. This can be either an ASCII string or a hexadecimal value. In the ASCII string format, the MAC address format can be customized using special CLI commands. In the hexadecimal format, the MAC address will be encapsulated in order in hexadecimal. ▪ unit - Indicates the unit ID. This can be either an ASCII string or a hexadecimal value. For a standalone device, the unit ID is 0. ▪ module - Indicates the module ID number. This can be either an ASCII string or a hexadecimal value. ▪ port - Indicates the local port number. This can be either an ASCII string or a hexadecimal value. ▪ svlan - Indicates the outer VLAN ID. This can be either an ASCII string or a hexadecimal value. ▪ cvlan - Indicates the inner VLAN ID. This can be either an ASCII string or a hexadecimal value. <ul style="list-style-type: none"> ○ : - Indicates the end of the formatted key string. If a formatted key string is the last parameter of the command, its ending character (":") can be ignored. The space (0x20) between "%" and ":" will be ignored. Other spaces will be encapsulated. <ul style="list-style-type: none"> • ASCII strings can be any combination of formatted key strings and 0~9, a~z, A~Z, !@#\$%^&*()_+ =\\[]{};"/?.,<>`, and space characters. "\ is the escape character. The special character after "\ is the character itself, for example, "\%" is "%" itself, not the start indicator of a formatted key string. Spaces not in the formatted key string will also be encapsulated. • Hexadecimal values can be any combination of formatted key strings and 0~9, A~F, a~f, and space characters. The formatted key strings only support keywords that support hexadecimal values. Spaces not in the formatted key string will be ignored.

Click the **Apply** button to accept the changes made.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Edit** button to re-configure the specific entry.

Click the **Delete** button to remove the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

DHCPv6 Relay Format Type Settings

This window is used to display and configure the DHCPv6 relay format type settings. This is used to configure DHCPv6 relay Option 37 and Option 18 of the expert UDF string of each port.

To view the following window, click **Management > DHCP > DHCPv6 Relay > DHCPv6 Relay Format Type Settings**, as shown below:

Figure 4-64 DHCPv6 Relay Format Type Settings Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the range of ports that will be used for this configuration here.
Type	Select the type here. Options to choose from are: <ul style="list-style-type: none"> • Remote ID - Specifies to configure the Expert UDF format type string for DHCPv6 Option 37. • Interface ID - Specifies to configure the Expert UDF format type string for DHCPv6 Option 18.
Format Type Expert UDF	Enter the format type expert UDF string that will be used on the specified port(s) here.

Click the **Apply** button to accept the changes made.

DHCPv6 Relay Port Settings

This window is used to display and configure the DHCPv6 relay port settings.

To view the following window, click **Management > DHCP > DHCPv6 Relay > DHCPv6 Relay Port Settings**, as shown below:

Figure 4-65 DHCPv6 Relay Port Settings Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the range of ports that will be used for this configuration here.
State	Select to enable or disable the DHCPv6 relay port feature on the specified port(s) here.

Click the **Apply** button to accept the changes made.

DHCPv6 Local Relay VLAN

This window is used to display and configure the DHCPv6 local relay VLAN settings. When DHCPv6 local relay is enabled, it will add Option 37 and Option 18 to the request packets from the client. If the check state of Option 37 is enabled, it will check the request packet from the client and drop the packet if it contains the Option 37 DHCPv6 relay function. If disabled, the local relay function will always add Option 37 to request packets, whether the state of Option 37 is enabled or disabled. The DHCPv6 local relay function will directly forward the packet from the server to the client.

To view the following window, click **Management > DHCP > DHCPv6 Relay > DHCPv6 Local Relay VLAN**, as shown below:

Figure 4-66 DHCPv6 Local Relay VLAN Window

The fields that can be configured are described below:

Parameter	Description
DHCPv6 Local Relay VID List	Enter the DHCPv6 local relay VLAN ID(s) here. More than one VLAN ID can be entered here. Select the All VLANs option to apply this setting on all configured VLANs on this Switch.
State	Select to enable or disable the DHCPv6 local relay feature on the specified VLAN(s) here.

Click the **Apply** button to accept the changes made.



NOTE: When the state of the DHCPv6 relay port is disabled, the port will not relay or locally relay received DHCPv6 packets.

DHCP Auto Configuration

This window is used to display and configure the DHCP auto-configuration function.

To view the following window, click **Management > DHCP Auto Configuration**, as shown below:

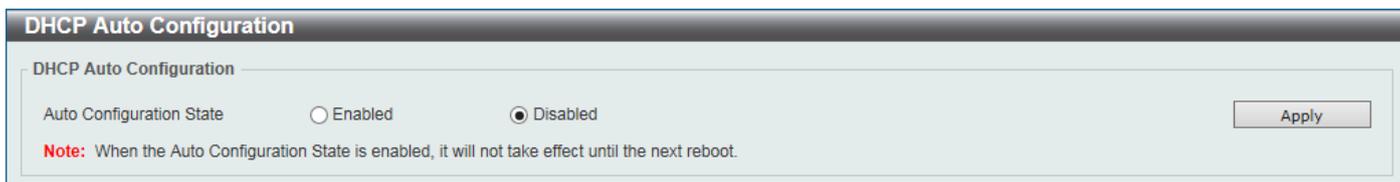


Figure 4-67 DHCP Auto Configuration Window

The fields that can be configured are described below:

Parameter	Description
Auto Configuration State	Select this option to enable or disable the auto-configuration function.

Click the **Apply** button to accept the changes made.

DHCP Auto Image Settings

This window is used to display and configure the DHCP auto-image settings. During the start-up time of a Switch, this function provides the capability of obtaining the image file from an external TFTP server whose IP address and file name is carried in the *DHCP OFFER* message received from the DHCP server. The system then uses this image file as the boot-up image. When the system boots up and the auto-image function is enabled, the Switch becomes a DHCP client automatically.

The DHCP client will be activated to get the network settings from the DHCP server and the DHCP server includes the TFTP server IP address and image filename with the message. The Switch then receives this information and triggers the TFTP downloading function from the specified TFTP server. At this stage, the system will display the download configuration parameters on the console. The layout is the same as using the **download firmware** command. After the firmware download was completed, the Switch will then reboot immediately.

If both the auto-configuration and auto-image features are enabled at the same time, system will download the image file first and then download the configuration. After this, the Switch will then save the configuration and reboot.

The Switch will always check the downloaded firmware. If the version is the same as the current running firmware, the Switch will terminate the auto-image process. The downloaded configuration, however, will still be executed if the auto-configuration feature is also enabled.

This function is similar to the auto-configuration function. Both the image file and the configuration file must be placed on the same TFTP server, as the DHCP option fields are not only used in the auto-image feature, but also in the auto-configuration feature. The TFTP server IP address is still placed in the DHCP *siaddr* fields Option 66 or Option 150. If Option 66, Option 150 and the *siaddr* fields exist in the DHCP response message at the same time, the Option 150 will be resolved first. If the system fails to connect to the TFTP server, then the system will resolve the Option 66, and if the system still fails to connect the TFTP server, the *siaddr* field is the last choice.

When the Switch uses Option 66 to get the TFTP server name, it resolves Option 6 first to get the DNS server IP address. If the Switch fails to connect to the DNS server or Option 6 does not exist in the response message, the Switch will try to connect the DNS server already configured in the system manually.

Option 67 is used to identify the boot file when the 'file' field in the DHCP header has been used for DHCP options. This can only be used in the DHCP auto-configuration mode and not the DHCP auto-image mode. For more information refer to RFC 2132. When specifying the image file name, the DHCP Option 125 (RFC 3925) must be used. The Switch needs to check the *enterprise-number1* field. If the value is not the D-Link vendor ID (171), the Switch will stop the process. If the Option contains more than one field, only the first entry *enterprise-number1* will be used.

To view the following window, click **Management > DHCP Auto Image Settings**, as shown below:

Figure 4-68 DHCP Auto Image Settings Window

The fields that can be configured are described below:

Parameter	Description
DHCP Auto Image State	Select to enable or disable the DHCP auto-image feature here.
DHCP Auto Image Timeout	Enter the timeout value of the DHCP auto-image feature here. The range is from 1 to 65535 seconds.

Click the **Apply** button to accept the changes made.

DNS

The Domain Name System (DNS) is used to map human-readable domain names to the IP addresses used by computers to communicate. A DNS server performs name-to-address translation, and may need to contact several name servers to translate a domain to an address. The address of the machine that supplies domain name service is often supplied by a DHCP or BOOTP server, or can be entered manually and configured into the operating system at startup.

DNS Global Settings

This window is used to display and configure the global DNS settings.

To view the following window, click **Management > DNS > DNS Global Settings**, as shown below:

Figure 4-69 DNS Global Settings Window

The fields that can be configured in **DNS Global Settings** are described below:

Parameter	Description
IP DNS Lookup Static State	Select to enable or disable the IP DNS lookup static state here.
IP DNS Lookup Cache State	Select to enable or disable the IP DNS lookup cache state here.
IP Domain Lookup	Select to enable or disable the IP domain lookup state here.

Parameter	Description
IP Name Server Timeout	Enter the maximum time to wait for a response from a specified name server. This value is between 1 and 60 seconds.
IP DNS Server	Select to globally enable or disable the DNS server feature here.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **IP Domain Lookup Source Interface** are described below:

Parameter	Description
Source Interface State	Select to enable or disable the source interface state here.
Interface Type	Select the source interface type here. Options to choose from are Loopback , Mgmt , and VLAN .
Interface ID	Enter the ID of the source interface here.

Click the **Apply** button to accept the changes made.

DNS Name Server Settings

This window is used to display and configure the IP address of a domain name server.

To view the following window, click **Management > DNS > DNS Name Server Settings**, as shown below:

The screenshot shows the 'DNS Name Server Settings' window. It features a form with three main sections. The first section has a 'VRF Name' field (12 chars) and two radio buttons: 'Name Server IPv4' (selected) and 'Name Server IPv6'. The second section has another 'VRF Name' field (12 chars) and a 'Find' button. The third section shows a table with one entry: 'VRF Name' and 'Name Server' (192.168.70.1), with a 'Delete' button next to it. An 'Apply' button is located to the right of the first section.

Figure 4-70 DNS Name Server Settings Window

The fields that can be configured are described below:

Parameter	Description
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long.
Name Server IPv4	Select and enter the IPv4 address of the DNS server.
Name Server IPv6	Select and enter the IPv6 address of the DNS server.

Click the **Apply** button to accept the changes made.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Delete** button to remove the specified entry.

DNS Host Settings

This window is used to display and configure the static mapping entry for the host name and the IP address in the host table.

To view the following window, click **Management > DNS > DNS Host Settings**, as shown below:

Figure 4-71 DNS Host Settings Window

The fields that can be configured are described below:

Parameter	Description
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long.
Host Name	Enter the host name of the equipment.
IP Address	Select and enter the IPv4 address of the equipment.
IPv6 Address	Select and enter the IPv6 address of the equipment.

Click the **Apply** button to accept the changes made.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Clear All** button to clear the information entered in all the fields on this page.

Click the **Delete** button to remove the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

NTP

NTP Global Settings

This window is used to display and configure the global Network Time Protocol (NTP) settings.

To view the following window, click **Management > NTP > NTP Global Settings**, as shown below:

Figure 4-72 NTP Global Settings Window

The fields that can be configured in **NTP State** are described below:

Parameter	Description
NTP State	Select to globally enable or disable the NTP feature here.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **NTP Authentication State** are described below:

Parameter	Description
NTP Authentication State	Select to enable or disable the NTP authentication state here. When this feature is enabled, networking nodes will not synchronize with the Switch unless it carries one of the authentication keys.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **NTP Update Calendar** are described below:

Parameter	Description
NTP Update Calendar	Select to enable or disable the NTP update calendar feature here. This is used to periodically update the hardware clock from an NTP source.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **NTP Settings** are described below:

Parameter	Description
NTP Master Stratum	Enter the NTP master stratum value here. This is used to configure the Real-Time Clock (RTC) as an NTP master clock when an external NTP is not available. The range is from 1 to 15. Select the Default option to use the default value.
NTP Max Associations	Enter the NTP maximum association value here. This is used to configure the maximum number of NTP peers and clients on the Switch. The range is from 1 to 64.

Click the **Apply** button to accept the changes made.

NTP Server Settings

This window is used to display and configure the NTP server settings. This is used to enable the Switch to synchronize time with an NTP server.

To view the following window, click **Management > NTP > NTP Server Settings**, as shown below:

Figure 4-73 NTP Server Settings Window

The fields that can be configured are described below:

Parameter	Description
IP Address	Select and enter the IPv4 address of the NTP server here.
IPv6 Address	Select and enter the IPv6 address of the NTP server here.
Version	Enter the NTP version number here. The range is from 1 to 4.
Key ID	Enter the authentication key ID here. The range is from 1 to 255.
Min Poll	Enter the minimum poll value here. This specifies the minimum poll interval for NTP messages. This value is calculated as 2 to the power of the minimum poll interval value specified. For example, if the value specified here is 6, the minimum poll interval that will be used is 64 seconds ($2^6=64$). The range is from 3 to 16.
Max Poll	Enter the maximum poll value here. This specifies the maximum poll interval for NTP messages. This value is calculated as 2 to the power of the maximum poll interval value specified. For example, if the value specified here is 6, the maximum poll interval that will be used is 64 seconds ($2^6=64$). The range is from 4 to 17.
Prefer	Select whether or not this entry will be the preferred server for synchronization. Options to choose from are True and False .

Click the **Apply** button to accept the changes made.

Click the **Edit** button to re-configure the specific entry.

Click the **Delete** button to delete the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

NTP Peer Settings

This window is used to display and configure the NTP peer settings.

To view the following window, click **Management > NTP > NTP Peer Settings**, as shown below:

Figure 4-74 NTP Peer Settings Window

The fields that can be configured are described below:

Parameter	Description
IP Address	Select and enter the IPv4 address of the NTP peer here.
IPv6 Address	Select and enter the IPv6 address of the NTP peer here.
Version	Enter the NTP version number here. The range is from 1 to 4.
Key ID	Enter the authentication key ID here. The range is from 1 to 255.
Min Poll	Enter the minimum poll value here. This specifies the minimum poll interval for NTP messages. This value is calculated as 2 to the power of the minimum poll interval value specified. For example, if the value specified here is 6, the minimum poll interval that will be used is 64 seconds ($2^6=64$). The range is from 3 to 16.
Max Poll	Enter the maximum poll value here. This specifies the maximum poll interval for NTP messages. This value is calculated as 2 to the power of the maximum poll interval value specified. For example, if the value specified here is 6, the maximum poll interval that will be used is 64 seconds ($2^6=64$). The range is from 4 to 17.
Prefer	Select whether or not this entry will be the preferred peer for synchronization. Options to choose from are True and False .

Click the **Apply** button to accept the changes made.

Click the **Edit** button to re-configure the specific entry.

Click the **Delete** button to delete the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

NTP Access Group Settings

This window is used to display and configure the NTP access group settings. The NTP implements a general purpose Access Control List (ACL) containing address/match entries sorted first by increasing address values and then by increasing mask values. A match occurs when the bitwise AND of the mask and the packet source address is equal to the bitwise AND of the mask and address in the list. The list is searched in order with the last match found defining the restriction flags associated with the entry.

To view the following window, click **Management > NTP > NTP Access Group Settings**, as shown below:

Figure 4-75 NTP Access Group Settings Window

The fields that can be configured are described below:

Parameter	Description
Default	Select this option to specify to use the default IPv4 (0.0.0.0/0.0.0.0) or IPv6 (:::.) address. The default IP address is always included with the lowest priority in the list.
IP Address	Select and enter the host IPv4 address here.
Netmask	Enter the IPv4 netmask of the host network here.
IPv6 Address	Select and enter the host IPv6 address here.
IPv6 Mask	Enter the IPv6 prefix length of the host network here.
Ignore	Select this option to deny all packets, including NTP control queries.
No Serve	Select this option to deny all packets except NTP control queries.
No Trust	Select this option to deny packets that are not cryptographically authenticated.
Version	Select this option to deny packets that mismatch the current NTP version.
No Peer	Select this option to deny packets that might mobilize an association unless authenticated. The packets include broadcast, symmetric-active and many cast server packets when a configured association does not exist. Note that this flag does not apply to packets that do not attempt to mobilize an association.
No Query	Select this option to deny all NTP control queries.
No Modify	Select this option to deny the NTP control queries that attempt to modify the state of the server.

Click the **Apply** button to accept the changes made.

Click the **Edit** button to re-configure the specific entry.

Click the **Delete** button to delete the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

NTP Key Settings

This window is used to display and configure the NTP key settings.

To view the following window, click **Management > NTP > NTP Key Settings**, as shown below:

The screenshot shows the 'NTP Key Settings' window. It is divided into three sections:

- NTP Control Key:** A text input field for 'NTP Control Key (1-255)' and a checked radio button for 'None'. An 'Apply' button is to the right.
- NTP Request Key:** A text input field for 'NTP Request Key (1-255)' and a checked radio button for 'None'. An 'Apply' button is to the right.
- NTP Key Settings:** A text input field for 'Key ID (1-255)' and a text input field for 'MD5' containing '32 chars'. An 'Apply' button is to the right.

Below these sections is a table with the following data:

Trusted Key	Key ID	Key Type	Value	
<input type="checkbox"/>	1	MD5	MD5MD5MD5MD5	Delete

At the bottom right, there is a pagination control showing '1/1', navigation arrows, and a 'Go' button.

Figure 4-76 NTP Key Settings Window

The fields that can be configured in **NTP Control Key** are described below:

Parameter	Description
NTP Control Key	Enter the NTP control key here. This is used to define the key ID for the NTP control messages. The range is from 1 to 255. Select the None option to disable this feature.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **NTP Request Key** are described below:

Parameter	Description
NTP Request Key	Enter the NTP request key here. This is used to define the key ID for NTP mode 7 packets, used by the <i>ntpd</i> utility program. The range is from 1 to 255. Select the None option to disable this feature.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **NTP Key Settings** are described below:

Parameter	Description
Key ID	Enter the NTP key ID here. The range is from 1 to 255.
MD5	Enter the MD5 authentication key string here. This string can be up to 32 characters long.
Trusted Key	Select this option to specify that the key for a peer NTP system is trusted for authentication.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to delete the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

NTP Interface Settings

This window is used to display and configure the NTP interface settings. This is used to either prevent or allow an interface from receiving NTP packets.

To view the following window, click **Management > NTP > NTP Interface Settings**, as shown below:



Figure 4-77 NTP Interface Settings Window

The fields that can be configured are described below:

Parameter	Description
NTP State	After click the Edit button, select to enable or disable the NTP state for the specified VLAN interface here.

Click the **Edit** button to re-configure the specific entry.

Click the **Apply** button to accept the changes made.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

NTP Associations

This window is used to view NTP association information.

To view the following window, click **Management > NTP > NTP Associations**, as shown below:

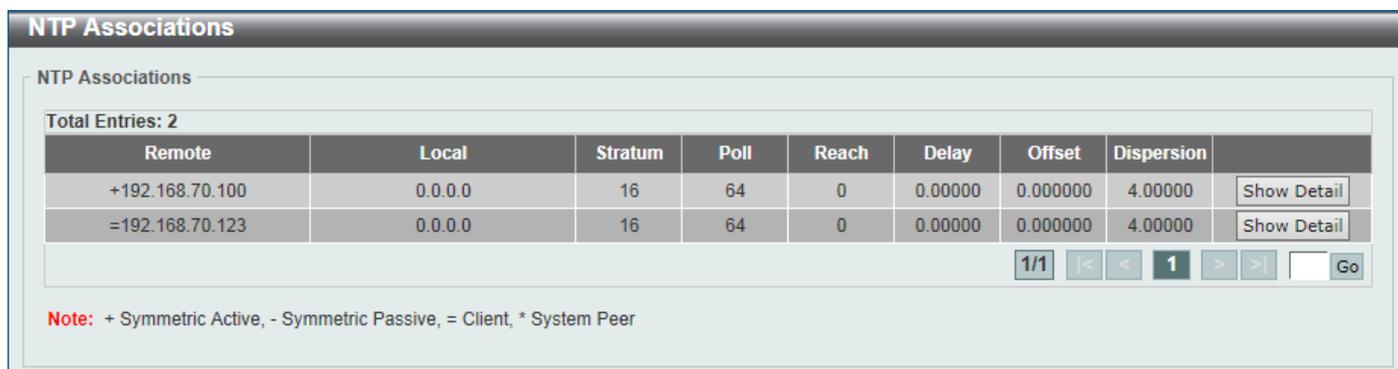


Figure 4-78 NTP Associations Window

Click the **Show Detail** button to view more detailed information about the entry.

After clicking the **Show Detail** button, the following window will appear:

NTP Associations			
NTP Associations			
Detail			
Remote	192.168.70.100	Local	0.0.0.0
Our mode	client	Peer mode	unspec
Stratum	16	Precision	-7
Leap	11	RefID	[INIT]
RootDistance	0.00000	RootDispersion	0.00000
PPoll	10	HPoll	6
KeyID	1	Version	4
Association	8355	Reach	000
Unreach	0	Flash	0x1400
Timer	4294967093s	Flags	Config
Reference Time	00000000.00000000 Thu, Feb 7...	Originate Timestamp	00000000.00000000 Thu, Feb 7...
Receive Timestamp	00000000.00000000 Thu, Feb 7...	Transmit Timestamp	00000000.00000000 Thu, Feb 7...
Filter Delay	0.00000 , 0.00000 , 0.00000 , ...	Filter Offset	0.000000, 0.000000, 0.000000, ...
Filter Order	7, 6, 5, 4, 3, 2, 1, 0	Offset	0.000000
Delay	0.00000	Error Bound	4.00000
Filter Error	0.08838		

Figure 4-79 NTP Associations (Show Detail) Window

NTP Status

This window is used to view NTP status information.

To view the following window, click **Management > NTP > NTP Status**, as shown below:

NTP Status	
NTP Status	
Leap Indicator	
Stratum	
Precision	
Root Distance	
Root Dispersion	
Reference ID	
Reference Time	
System Flags	
Jitter	
Stability	
Auth Delay	

Figure 4-80 NTP Status Window

IP Source Interface

This window is used to display and configure the IP source interface settings.

To view the following window, click **Management > IP Source Interface**, as shown below:

The screenshot displays the 'IP Source Interface' configuration window. It is divided into four sections, each for a different protocol: IP TFTP, IP FTP, IP RCP, and IP SSH. Each section contains the following fields:

- Source Interface State:** A dropdown menu currently set to 'Disabled'.
- Interface Type:** A dropdown menu currently set to 'VLAN'.
- Interface ID (1-4094):** A text input field. For IP TFTP, it is empty. For IP FTP, IP RCP, and IP SSH, it contains the value '0'.
- Apply:** A button to save the configuration for that section.

Figure 4-81 IP Source Interface Window

The fields that can be configured in **IP TFTP Source Interface** are described below:

Parameter	Description
Source Interface State	Select to enable or disable the IP TFTP source interface state here.
Interface Type	After enabling the Source Interface State option, select the interface type here. Options to choose from are Loopback , Mgmt , and VLAN .
Interface ID	Enter the interface ID here. For loopback interfaces, this value is from 1 to 8. For the management interface (Mgmt), this value can only be 0. For VLAN interfaces, this value is from 1 to 4094.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **IP FTP Source Interface** are described below:

Parameter	Description
Source Interface State	Select to enable or disable the IP FTP source interface state here.
Interface Type	After enabling the Source Interface State option, select the interface type here. Options to choose from are Loopback , Mgmt , and VLAN .
Interface ID	Enter the interface ID here. For loopback interfaces, this value is from 1 to 8. For the management interface (Mgmt), this value can only be 0. For VLAN interfaces, this value is from 1 to 4094.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **IP RCP Source Interface** are described below:

Parameter	Description
Source Interface State	Select to enable or disable the IP RCP source interface state here.
Interface Type	After enabling the Source Interface State option, select the interface type here. Options to choose from are Loopback , Mgmt , and VLAN .
Interface ID	Enter the interface ID here. For loopback interfaces, this value is from 1 to 8. For the management interface (Mgmt), this value can only be 0. For VLAN interfaces, this value is from 1 to 4094.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **IP SSH Source Interface** are described below:

Parameter	Description
Source Interface State	Select to enable or disable the IP SSH source interface state here.
Interface Type	After enabling the Source Interface State option, select the interface type here. Options to choose from are Loopback , Mgmt , and VLAN .
Interface ID	Enter the interface ID here. For loopback interfaces, this value is from 1 to 8. For the management interface (Mgmt), this value can only be 0. For VLAN interfaces, this value is from 1 to 4094.

Click the **Apply** button to accept the changes made.

File System

This window is used to view, manage and configure the Switch file system.

To view the following window, click **Management > File System**, as shown below:

Drive	Media Type	Size (MB)	File System Type	Label
C:	Flash	1015	FFS	

Figure 4-82 File System Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
Path	Enter the path string.

Click the **Go** button to navigate to the path entered.

Click the **Copy** button to copy a specific file to the Switch.

Click the [c:](#) hyperlink to navigate the C: drive

After clicking the [c:](#) hyperlink, the following window will appear:

File System

Unit:

Path:

Index	Info	Attr	Size (byte)	Update Time	Name	
1	CFG(*)	-rw	3310	Jan. 19 2021 11:23:03	config.cfg	<input type="button" value="Boot Up"/> <input type="button" value="Rename"/> <input type="button" value="Delete"/>
2	RUN(*)	-rw	15076100	Jan. 19 2021 11:14:30	Run_2_25_018	<input type="button" value="Boot Up"/> <input type="button" value="Rename"/> <input type="button" value="Delete"/>
3	RUN	-rw	15069796	Apr. 20 2017 15:41:55	R2.25.B013.had	<input type="checkbox"/> All <input type="button" value="Boot Up"/> <input type="button" value="Rename"/> <input type="button" value="Delete"/>
4		d--	0	Jan. 19 2021 11:23:38	system	<input type="button" value="Delete"/>

1064828928 bytes total (1034360832 bytes free)
 (*) -with boot up info

Figure 4-83 File System (Drive) Window

Click the **Go** button to navigate to the path entered.

Click the **Previous** button to return to the previous window.

Click the **Create Directory** to create a new directory within the file system of the Switch.

Click the **Copy** button to copy a specific file to the Switch.

Select the **All** check box to boot up all the switches in the stack.

Click the **Boot Up** button to set a specific runtime image as the boot up image.

Click the **Rename** button to rename a specific file name.

Click the **Delete** button to remove a specific file from the file system.



NOTE: If the boot configuration file is damaged, the Switch will automatically revert back to the default configuration.



NOTE: If the boot image file is damaged, the Switch will automatically use the backup image file in the next boot up.

Click the **Copy** button to see the following window.

File System

Unit:

Path:

Copy File

Source Unit:

Destination Unit: Replace

Figure 4-84 File System (Copy) Window

The fields that can be configured in **Copy File** are described below:

Parameter	Description
Source	Select the source Switch Unit ID and type of source file that will be copied here. Options to choose from are startup-config and Source File . Only after

Parameter	Description
	selecting the Source File option can the source file path and filename be entered in the space provided.
Destination	Select the destination Switch Unit ID and type of destination file that will be copied here. Options to choose from are startup-config , running-config , and Destination File . Only after selecting the Destination File option can the destination file path and filename be entered in the space provided. Tick the Replace check box to replace the current running configuration with the indicated configuration file.

Click the **Apply** button to initiate the copy.

Click the **Cancel** button the discard the process.

Stacking

The Switch supports stacking 9 Switches together while being managed by one console connection to any one of the console ports on the master Switch, or by an IP address through the MGMT port, or by multiple IP addresses through any of the RJ45/SFP/SFP+ ports using Telnet, the Web User Interface, and SNMP. This cost effective Switch provides an affordable solution for administrators to upgrade their networks using the SFP+ ports to scale and stack the Switches. This increases overall reliability, serviceability, and availability of the network.

- **Duplex Chain** - The Duplex Chain topology stacks Switches together in a chain-link format. Using this method, data transfer is only possible in one direction and if there is a break in the chain, then data transfer will be affected.
- **Duplex Ring** - The Duplex Ring stacks Switches in a ring or circle format where data can be transferred in two directions. This topology is very resilient due to the fact that if there is a break in the ring, data can still be transferred through the stacking cables between Switches in the stack.

Switches in the series can be physically stacked using optical fiber cables connected to SFP+ transceivers or Direct Attached Cables (DAC) with SFP+ connectors. Only the last 4 ports can be used for physical stacking.



NOTE: When stacking is enabled, the last 2 or 4 SFP+ ports are dedicated stacking ports and cannot be used for any other purpose. These ports are only able to perform stacking when stacking is enabled.

Physical stacking needs to be enabled and can be configured to support either a **2-port** or a **4-port** stacking configuration. When the **2-port** stacking configuration is used, a full-duplex speed of up to 40Gbps will be available between two Switches. When the **4-port** stacking configuration is used, a full-duplex speed of up to 80Gbps will be available between two Switches.

The figure below illustrates how Switches can be stacked in a **Duplex Chain** formation using optical fiber cables connected to SFP+ transceivers or DAC with SFP+ connectors where the **2-port** stacking configuration is used.

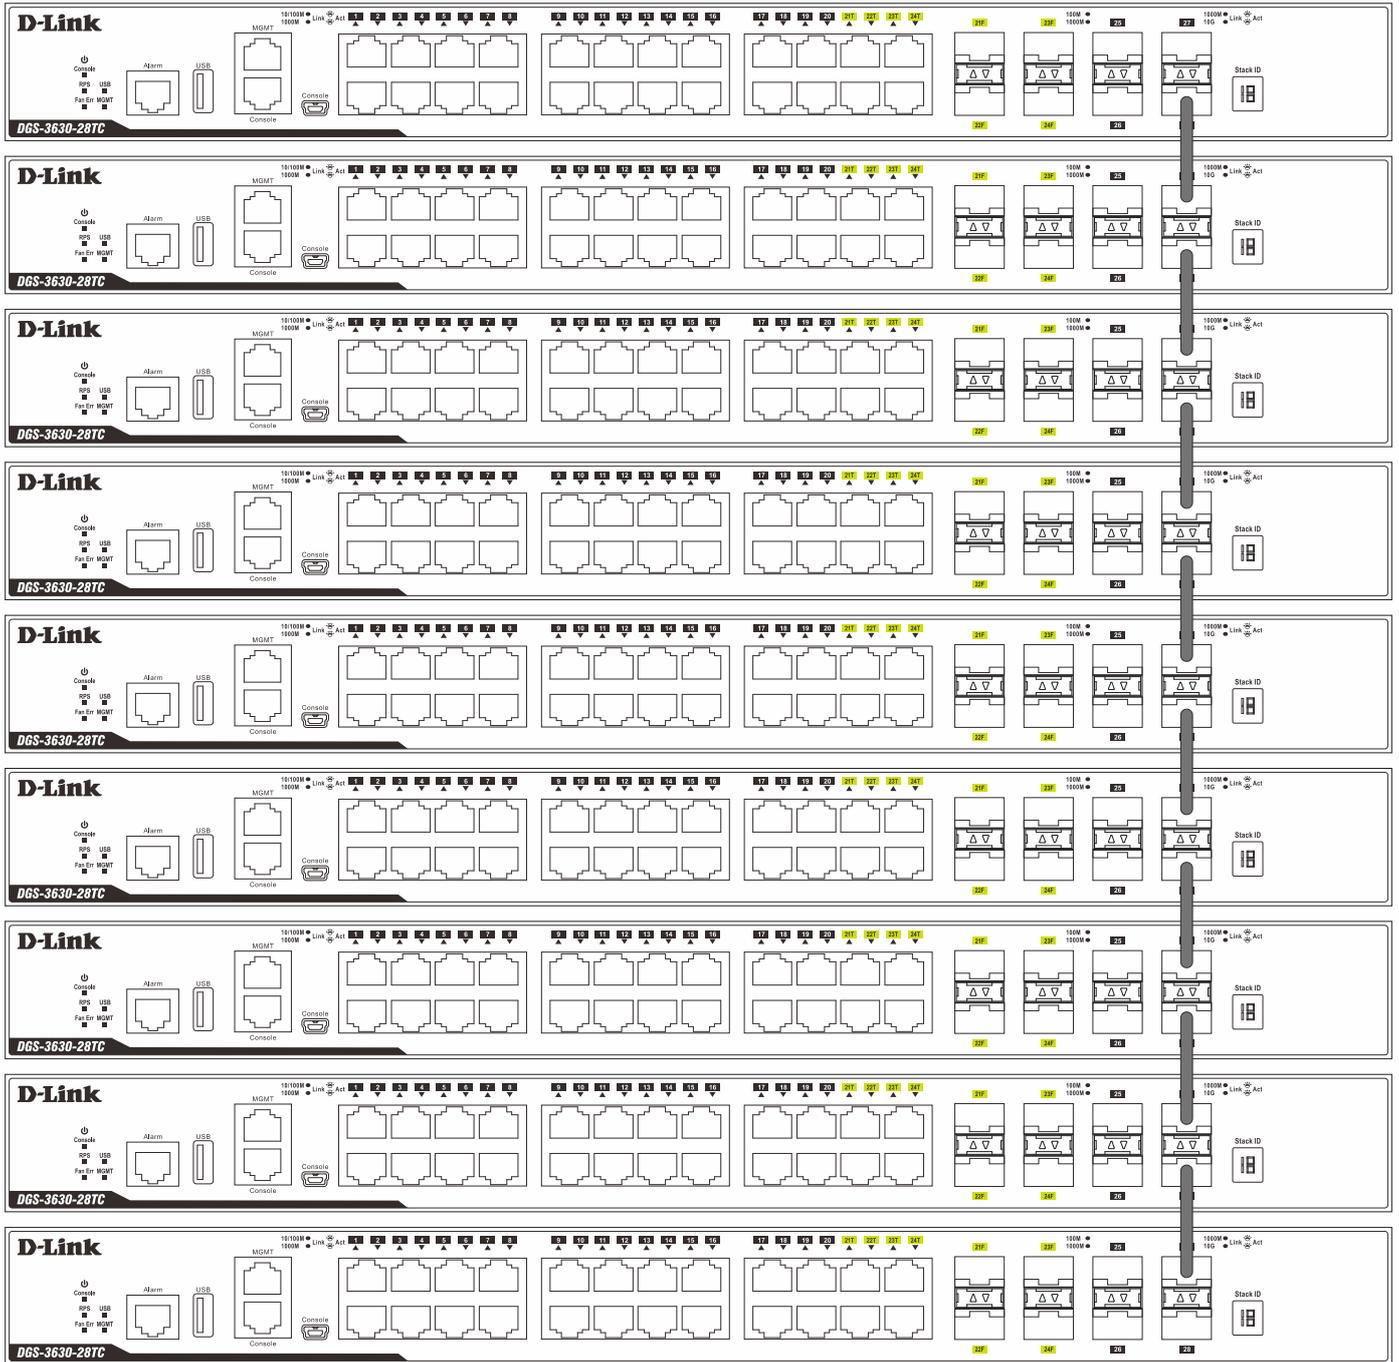


Figure 4-85 Duplex Chain stacking topology (SFP+)

The figure below illustrates how Switches can be stacked in a **Duplex Ring** formation using optical fiber cables connected to SFP+ transceivers or DAC with SFP+ connectors where the **2-port** stacking configuration is used.

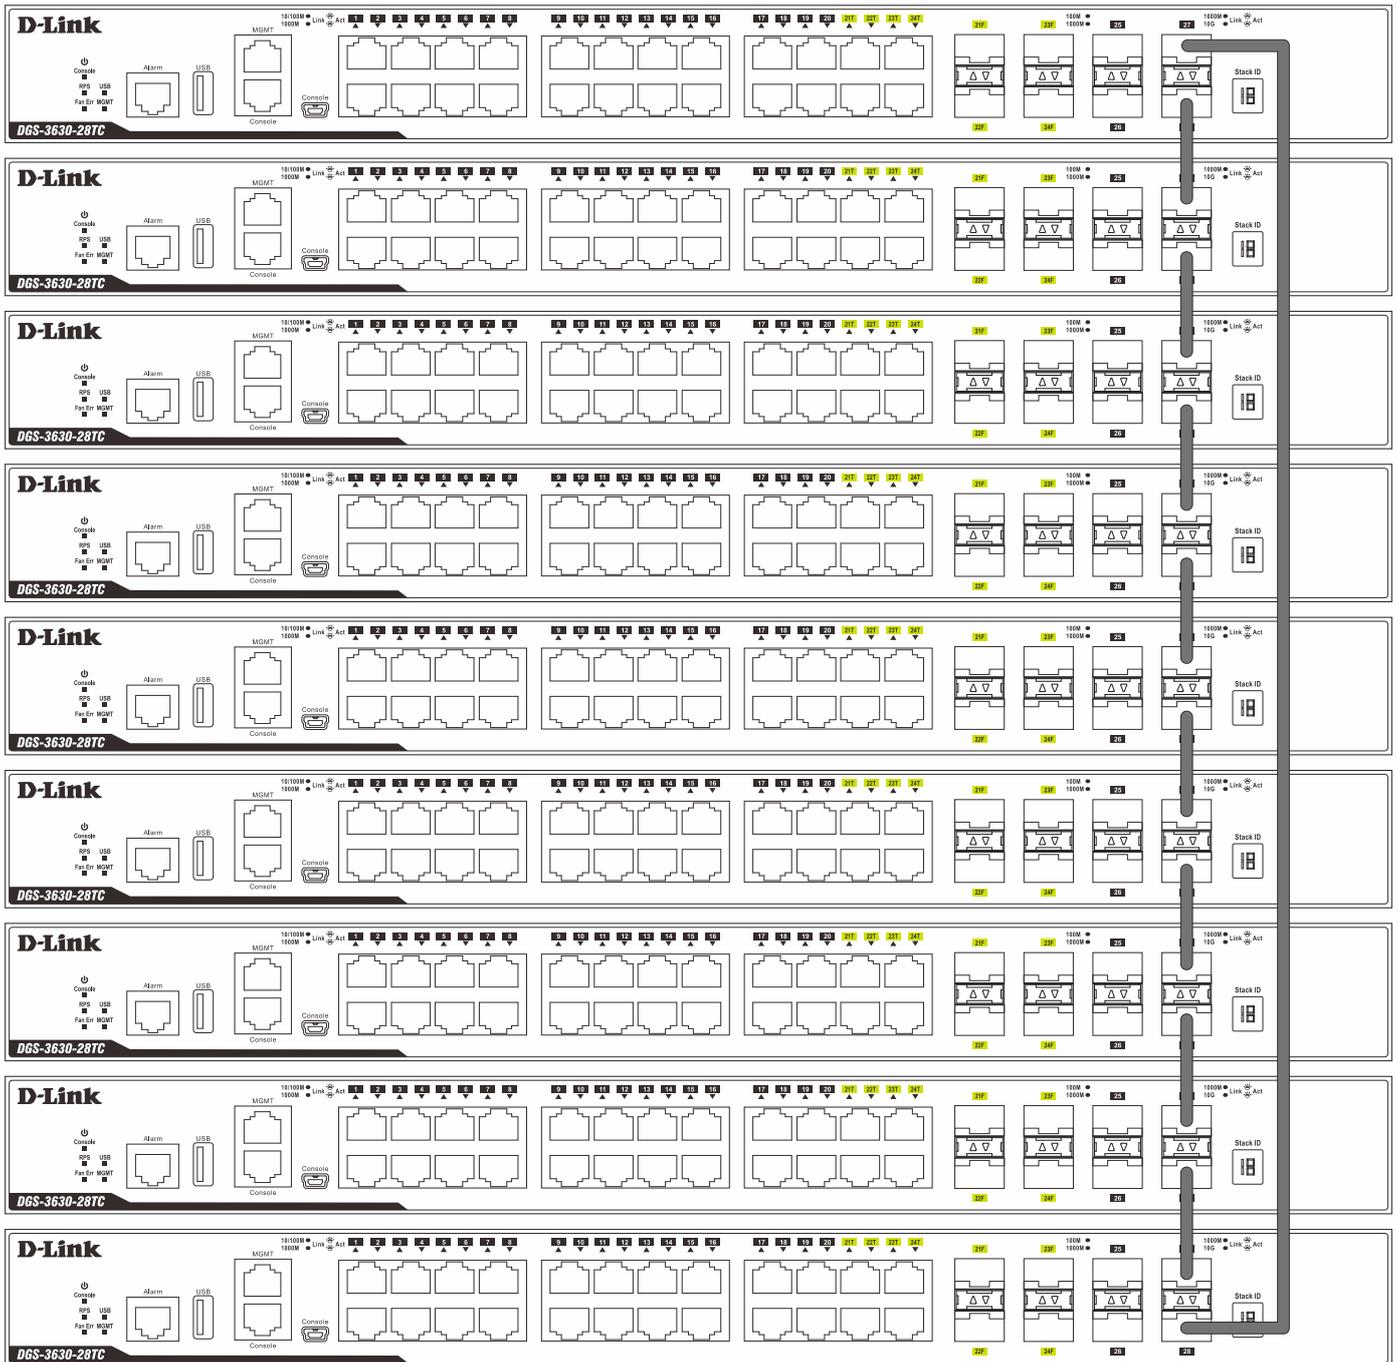


Figure 4-86 Duplex Ring stacking topology (SFP+)



NOTE: Stacking Input/Output logical port 1 (SIO1) and SIO2 are logical stacking port pairs. A logical stacking port pair must always be connected to the same Switch in the stack. Splitting logical stacking port pairs between different Switches in the stack might not guarantee a stable stacking connection. See **Stacking Bandwidth** on page 115 for more information.

Switch Roles in a Stack

Within each of these topologies, each Switch plays a role in the Switch stack. These roles can be set by the user per individual Switch, or if desired, can be automatically determined by the Switch stack.

Three possible roles exist when stacking with the Switch.

Primary Master - The Primary Master is the leader of the stack. It will maintain normal operations, monitor operations and the running topology of the Stack. This Switch will also assign Stack Unit IDs, synchronize configurations and transmit commands to remaining Switches in the Switch stack. The Primary Master can be manually set by assigning this Switch the highest priority (a lower number denotes a higher priority) before physically assembling the stack, or it can be determined automatically by the stack through an election process. This determines the lowest MAC address and then will assign that Switch as the Primary Master if all priorities are the same. The Primary master is physically displayed by the seven segment LED to the far right on the front panel of the Switch where the LED will flash between its given Box ID and 'H'.

Backup Master - The Backup Master is the backup to the Primary Master, and will take over the functions of the Primary Master if the Primary Master fails or is removed from the Stack. It also monitors the status of neighboring Switches in the stack, will perform commands assigned to it by the Primary Master and will monitor the running status of the Primary Master. The Backup Master can be set by the user by assigning this Switch the second highest priority (a lower number denotes a higher priority) before physically assembling the stack, or it can be determined automatically by the stack through an election process. This determines the second lowest MAC address and then will assign that Switch as the Backup Master if all priorities are the same. The Backup master is physically displayed by the seven segment LED to the far right on the front panel of the Switch where the LED will flash between its given Box ID and 'h'.

Slave - Slave Switches constitute the rest of the Switch stack and although not Primary or Backup Masters, they can be placed into these roles when these other two roles fail or are removed from the stack. Slave Switches perform operations requested by the master, monitor the status of the stack topology, and adhere to the Backup Master's commands once it becomes Primary Master. Slave Switches will do a self-check to determine if they are to become the Backup Master if the Backup Master is promoted to the Primary Master, or if the Backup Master fails or is removed from the Switch stack. If both Primary and Backup masters fail, or are removed from the Switch stack, the Switch will determine if it is to become the Primary Master. These roles will be determined by priority and if this is the same, by the lowest MAC address.

Once Switches have been assembled in the topology desired by the user and powered on, the stack will undergo three processes until it reaches a functioning state.

- **Initialization State** - This is the first state of the stack, where the runtime codes are set and initialized and the system conducts a peripheral diagnosis to determine each individual Switch is functioning properly.
- **Master Election State** - Once the runtime codes are loaded and initialized, the stack will undergo the Master Election State where it will discover the type of topology used, elect a Primary Master and then a Backup Master.
- **Synchronization State** - Once the Primary Master and the Backup Master have been established, the Primary Master will assign Stacking Unit IDs to Switches in the stack, synchronize configurations for all Switches and then transmit commands to the rest of the Switches based on the configuration of the Primary Master.

Once these steps have been completed, the Switch stack will enter a normal operating mode.

Stack Switch Swapping

The stacking feature of the Switch supports hot swapping of Switches in and out of the running stack. Users may remove or add Switches to the stack without powering down or largely affecting the transfer of data between Switches in the stack, as long as some basic rules are adhered to.

When Switches are 'hot inserted' into the running stack, the new Switch may take on the Primary Master, Backup Master or Slave role, depending on configuration set on the newly added Switch, such as priority or MAC address. Yet, if adding two stacks together that have both previously undergone the election process, and therefore both have a Primary Master and a Backup master, a new Primary Master will be elected from one of the already existing Primary Masters, based on priority or MAC address. This Primary Master will take over all of the Primary Master's roles for all new Switches that were hot inserted. This process is done using discovery packets that circulate through the Switch stack every 1.5 seconds until the discovery process has been completed.

The 'hot remove' action means removing a device from the stack while the stack is still running. The hot removal is detected by the stack when it fails to receive heartbeat packets during its specified interval from a device, or when one of the stacking ports links is down. Once the device has been removed, the remaining Switches will update their stacking topology database to reflect the change. Any one of the three roles, Primary Master, Backup Master or Slave, may be removed from the stack, yet a different process occurs for each specific device removal.

If a Slave device has been removed, the Primary Master will inform other Switches of the hot remove of this device through the use of unit leave messages. Switches in the stack will clear the configuration of the unit removed, and dynamically learned databases, such as ARP, will also be cleared.

If the Backup Master has been hot removed, a new Backup Master will be chosen through the election process previously described. Switches in the stack will clear the configuration of the unit removed, and dynamically learned databases, such as ARP, will also be cleared. Then the Backup Master will begin backing up the Primary Master when the database synchronization has been completed by the stack.

If the Primary Master is removed, the Backup Master will assume the Primary Master's role and a new Backup Master will be chosen using the election process. Switches in the stack will clear the configuration of the unit removed, and dynamically learned databases, such as ARP, will also be cleared. The new Primary Master will inherit the MAC and IP address of the previous Primary Master to avoid conflict within the stack and the network itself.

If both the Primary Master and the Backup Master are removed, the election process is immediately initiated, and a new Primary Master and Backup Master are elected. Switches in the stack will clear the configuration of the units that have been removed, and dynamically learned databases, such as ARP, will also be cleared. Static Switch configuration still remains in the database of the remaining Switches in the stack and those functions will not be affected.



NOTE: If there is a Box ID conflict when the stack is in the discovery phase, the device will enter a special standalone topology mode. Users can only get device information, configure Box IDs, save and reboot. All stacking ports will be disabled and an error message will be produced on the local console port of each device in the stack. Users must reconfigure Box IDs and reboot the stack to rectify the problem.

Physical Stacking

This window is used to display and configure the physical stacking settings.

To view the following window, click **Management > Stacking > Physical Stacking**, as shown below:

Physical Stacking

Physical Stacking

Stacking Mode Enabled Disabled Apply

Stack Preempt Enabled Disabled Apply

Trap State Enabled Disabled

Stack ID

Current Unit ID New Box ID Priority (1-63) Apply

Topology: Duplex_Chain My Box ID: 1

Master ID: 1 BK Master ID: -

Box Count: 1

Box ID	User Set	Module Name	Exist	Priority	MAC	PROM Version	Runtime Version	H/W Version
1	Auto	DGS-3630-28PC	Exist	32	80-26-89-8D-A7-00	2.00.002	2.10.008	A1
2	-	NOT_EXIST	No	-	-	-	-	-
3	-	NOT_EXIST	No	-	-	-	-	-
4	-	NOT_EXIST	No	-	-	-	-	-
5	-	NOT_EXIST	No	-	-	-	-	-
6	-	NOT_EXIST	No	-	-	-	-	-
7	-	NOT_EXIST	No	-	-	-	-	-
8	-	NOT_EXIST	No	-	-	-	-	-
9	-	NOT_EXIST	No	-	-	-	-	-

Figure 4-87 Physical Stacking Window

The fields that can be configured in **Physical Stacking** are described below:

Parameter	Description
Stacking Mode	Select this option to enable or disable the stacking mode.
Stack Preempt	Select this option to enable or disable preemption of the master role when a unit with a higher priority is added to the Switch.
Trap State	Select this option to enable or disable stacking related SNMP traps.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Stack ID** are described below:

Parameter	Description
Current Unit ID	Select the unit ID of the Switch in the stack.
New Box ID	Select the new box ID for the Switch that is selected in the Current Unit ID field. The user may choose any number between 1 and 9 to identify the Switch in the switch stack. Auto will automatically assign a box number to the Switch in the Switch stack.
Priority	Enter the priority of the Switch stacking unit. The range is from 1 to 63.

Click the **Apply** button to accept the changes made.

Stacking Bandwidth

This window is used to display and configure the stacking bandwidth settings. Physical stacking needs to be enabled and can be configured to support either a **2-port** or a **4-port** stacking configuration.

- When the **2-port** stacking configuration is used, a full-duplex speed of up to 40Gbps will be used between two Switches.
 - The **DGS-3630-28TC** will use physical ports 27 (SIO1) and 28 (SIO2) for **2-port** stacking.
 - The **DGS-3630-28SC** will use physical ports 27 (SIO1) and 28 (SIO2) for **2-port** stacking.
 - The **DGS-3630-52TC** will use physical ports 51 (SIO1) and 52 (SIO2) for **2-port** stacking.
- When the **4-port** stacking configuration is used, a full-duplex speed of up to 80Gbps will be used between two Switches using four physical ports aggregated into two virtual stacking ports.
 - The **DGS-3630-28TC** will use physical ports 25 (SIO1), 26 (SIO2), 27 (SIO1), and 28 (SIO2) for **4-port** stacking.
 - The **DGS-3630-28SC** will use physical ports 25 (SIO1), 26 (SIO2), 27 (SIO1), and 28 (SIO2) for **4-port** stacking.
 - The **DGS-3630-52TC** will use physical ports 49 (SIO1), 50 (SIO2), 51 (SIO1), and 52 (SIO2) for **4-port** stacking.

SIO1 is a logical stacking port pair and SIO2 is a logical stacking port pair. A logical stacking port pair must always be connected to the same Switch in the stack. Splitting logical stacking port pairs between different Switches in the stack might not guarantee a stable stacking connection.



NOTE: The stacking bandwidth must be configured before the Switch is stacked with other Switches.

To view the following window, click **Management > Stacking > Stacking Bandwidth**, as shown below:

Box ID	User Set Bandwidth	SIO1 Active Bandwidth	SIO2 Active Bandwidth
1	2-port	Down	Down
2	-	-	-
3	-	-	-
4	-	-	-
5	-	-	-
6	-	-	-
7	-	-	-
8	-	-	-
9	-	-	-

Figure 4-88 Stacking Bandwidth Window

The fields that can be configured are described below:

Parameter	Description
Stack Bandwidth	Select the stacking bandwidth here. Option to choose from are: <ul style="list-style-type: none"> • 2-Port - Specifies 2 Switch ports to be used for stacking. • 4-Port - Specifies 4 Switch ports to be used for stacking.

Click the **Apply** button to accept the changes made.

Virtual Stacking (SIM)

D-Link Single IP Management (SIM) is a concept that will stack Switches together over Ethernet instead of using stacking ports or modules. There are some advantages in implementing the Single IP Management feature:

- SIM can simplify management of small workgroups or wiring closets while scaling the network to handle increased bandwidth demand.
- SIM can reduce the number of IP address needed in your network.
- SIM can eliminate any specialized cables for stacking connectivity and remove the distance barriers that typically limit your topology options when using other stacking technology.

Switches using D-Link Single IP Management (labeled here as SIM) must conform to the following rules:

- SIM is an optional feature on the Switch and can easily be enabled or disabled through the Command Line Interface or Web Interface. SIM grouping has no effect on the normal operation of the Switch in the network.
- There are three classifications for Switches using SIM. The **Commander Switch (CS)**, which is the master Switch of the group, **Member Switch (MS)**, which is a Switch that is recognized by the CS a member of a SIM group, and a **Candidate Switch (CaS)**, which is a Switch that has a physical link to the SIM group but has not been recognized by the CS as a member of the SIM group.
- A SIM group can only have one Commander Switch (CS).
- A SIM group accepts up to 32 Switches (numbered 1-32), not including the Commander Switch (numbered 0).
- Members of a SIM group must be in the same Layer 2 network.
- There is no limit to the number of SIM groups in the same IP subnet (broadcast domain); however a single Switch can only belong to one group.
- If multiple VLANs are configured, the SIM group will only utilize the management VLAN on any Switch.
- SIM allows intermediate devices that do not support SIM. This enables the user to manage Switches that are more than one hop away from the CS.

The SIM group is a group of Switches that are managed as a single entity. The Switch may take on three different roles:

1. **Commander Switch (CS)** - This is a Switch that has been manually configured as the controlling device for a group, and takes on the following characteristics:
 - It has an IP Address.
 - It is not a CS or member Switch of another SIM group.
 - It is connected to the member Switches through its management VLAN.
2. **Member Switch (MS)** - This is a Switch that has joined a SIM group and is accessible from the CS, and it takes on the following characteristics:
 - It is not a CS or MS of another SIM group.
 - It is connected to the CS through the CS management VLAN.
3. **Candidate Switch (CaS)** - This is a Switch that is ready to join a SIM group but is not yet a member of the SIM group. The Candidate Switch may join the SIM group of the Switch by manually configuring it to be a MS of a SIM group. A Switch configured as a CaS is not a member of a SIM group and will take on the following characteristics:
 - It is not a CS or MS of another Single IP group.
 - It is connected to the CS through the CS management VLAN

The following rules also apply to the above roles:

- Each device begins in a CaS state.
- A CS must change its role to CaS and then to MS, to become a MS of a SIM group. Thus, the CS cannot directly be converted to a MS.
- The user can manually configure a CS to become a CaS.
- A MS can become a CaS by:
 - Being configured as a CaS through the CS.
 - If report packets from the CS to the MS time out.
- The user can manually configure a CaS to become a CS
- The CaS can be configured through the CS to become a MS.

After configuring one Switch to operate as the CS of a SIM group, additional Switches may join the group by manually configuring the Switch to be a MS. The CS will then serve as the in-band entry point for access to the MS. The CS's IP address will become the path to all MSs in the group and the CS's administrator password, and/or authentication will control access to all MSs in the SIM group.

With SIM enabled, the applications in the CS will redirect the packets instead of executing packets. The applications will decode the packet from the administrator, modify some data, and then send it to the MS. After execution, the CS may receive a response packet from the MS, which it will encode and send it back to the administrator.

When a CaS becomes a MS, it automatically becomes a member of the first SNMP community (includes read/write and read only) to which the CS belongs. However, if a MS has its own IP address, it can belong to SNMP communities to which other switches in the group, including the CS, do not belong.

Upgrade to v1.61

To better improve SIM management, the Switches have been upgraded to SIM version 1.61. Many improvements have been made, including the Commander Switch (CS) now having the capability to automatically rediscover member switches that have left the SIM group, either through a reboot or web malfunction. This is accomplished through the use of Discover packets and Maintenance packets that previously configured SIM members will send and receive after a reboot. Once a MS has had its MAC address and password saved to the CS's database, if a reboot occurs in the MS, the CS will keep this MS information in its database and when a MS has been rediscovered, it will add the MS back into the SIM tree automatically. No configuration will be necessary to rediscover these switches.

There are some instances where pre-saved MS Switches cannot be rediscovered. For example, if the Switch is still powered down, if it has become the member of another group, or if it has been configured to be a Commander Switch, the rediscovery process cannot occur.

The topology map now includes new features for connections that are a member of a port trunking group. It will display the speed and number of Ethernet connections creating this port trunk group.

This version will support Switch upload and downloads for firmware, configuration files and log files, as follows:

- **Firmware** - The Switch now supports MS firmware downloads from a TFTP server.
- **Configuration Files** - This Switch now supports the downloading and uploading of configuration files both to (for configuration restoration) and from (for configuration backup) MSs, using a TFTP server.
- **Log** - The Switch now supports uploading MS log files to a TFTP server.

The user may zoom in and zoom out when utilizing the topology window to get a better, more defined view of the configuration.



NOTE: When the **SIM State** is enabled and the **Role State** of the Switch is **Commander**, the **Topology**, **Firmware Upgrade**, **Configuration File Backup/Restore**, and **Upload Log File** windows will be available.

Single IP Settings

This window is used to display and configure the SIM settings. The Switch is set as a Candidate (CaS) as the factory default configuration and Single IP Management is disabled.

To view the following window, click **Management > Virtual Stacking (SIM) > Single IP Settings**, as shown below:

Figure 4-89 Single IP Settings Window

The fields that can be configured in **SIM State Configure** are described below:

Parameter	Description
SIM State	Select this option to enable or disable the SIM state on the Switch. Select Disabled to disable SIM on the Switch.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **SIM Role Configure** are described below:

Parameter	Description
Role State	Select to change the SIM role of the Switch. Options to choose from are Candidate , and Commander .

Parameter	Description
	<ul style="list-style-type: none"> • Candidate - A Candidate Switch (CaS) is not the member of a SIM group but is connected to a Commander Switch. This is the default setting for the SIM role of the Switch. • Commander - Select to make the Switch a Commander Switch (CS). The user may join other Switches to this Switch, over Ethernet, to be part of the SIM group. Choosing this option will also enable the Switch to be configured for SIM.
Group Name	Enter a group name. This is optional. This name is used to segment Switches into different SIM groups.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **SIM Settings** are described below:

Parameter	Description
Trap State	Select to enable or disable the SIM trap state here.
Interval	Enter the interval in seconds. The range is from 30 to 90.
Hold Time	Enter the hold-time in seconds. The range is from 100 to 255.
Management VLAN	Enter the single IP management message VLAN ID.

Click the **Apply** button to accept the changes made.

After enabling the Switch to be a Commander Switch (CS), the **Single IP Management** folder will then contain four added links to aid in configuring SIM through the Web UI, including **Topology**, **Firmware Upgrade**, **Configuration File Backup/Restore** and **Upload Log File**.

Topology

This window is used to view, manage and configure the Switch within the SIM group and requires Java script to function properly on your computer.

To view the following window, click **Management > Virtual Stacking (SIM) > Topology**, as shown below:

File	Group	Device	View	Help																								
<div style="display: flex;"> <div style="flex: 1;"> <p>Cluster 1</p> <ul style="list-style-type: none"> Switch Switch Switch </div> <table border="1" style="flex: 2;"> <thead> <tr> <th>Device Name</th> <th>Local Port</th> <th>Speed</th> <th>Remote Port</th> <th>MAC Address</th> <th>Model Name</th> </tr> </thead> <tbody> <tr> <td>Switch</td> <td>-</td> <td>-</td> <td>-</td> <td>00-0F-36-30-AE-01</td> <td>DGS-3630-28TC</td> </tr> <tr> <td>Switch</td> <td>194</td> <td>Gigabit-Full</td> <td>65</td> <td>00-01-02-03-04-00</td> <td>DGS-3630-52TC</td> </tr> <tr> <td>Switch</td> <td>1</td> <td>Gigabit-Full</td> <td>196</td> <td>00-01-12-33-40-00</td> <td>DGS-3630-52TC</td> </tr> </tbody> </table> </div>					Device Name	Local Port	Speed	Remote Port	MAC Address	Model Name	Switch	-	-	-	00-0F-36-30-AE-01	DGS-3630-28TC	Switch	194	Gigabit-Full	65	00-01-02-03-04-00	DGS-3630-52TC	Switch	1	Gigabit-Full	196	00-01-12-33-40-00	DGS-3630-52TC
Device Name	Local Port	Speed	Remote Port	MAC Address	Model Name																							
Switch	-	-	-	00-0F-36-30-AE-01	DGS-3630-28TC																							
Switch	194	Gigabit-Full	65	00-01-02-03-04-00	DGS-3630-52TC																							
Switch	1	Gigabit-Full	196	00-01-12-33-40-00	DGS-3630-52TC																							

Figure 4-90 Topology Window

There is a menu bar at the top of the window containing **File**, **Group**, **Device**, **View**, and **Help**.

File

Print Topology

Select this option to print the SIM topology map to any of the printers configured on the PC accessing the Web UI.

Preference

Select this option to configure the display properties for the SIM topology map.

Preference

Interval (10-300)

Show All
 Show Member Only

Figure 4-91 Preference

The fields that can be configured are described below:

Parameter	Description
Interval	Enter the SIM topology display refresh interval value here. The range is from 10 to 300.
Show All	Select this option to display all available SIM devices in the topology.
Show Member Only	Select this option to only display SIM member devices in the topology.

Click the **OK** button to accept the changes made.

Click the **Cancel** button to discard the changes made.

Group

Add to Group

Select a Candidate Switch (CaS) from the list and then select this option (**Add to Group**) to add the selected CaS to the SIM group. Password authentication is required when a CaS is added to the SIM group.

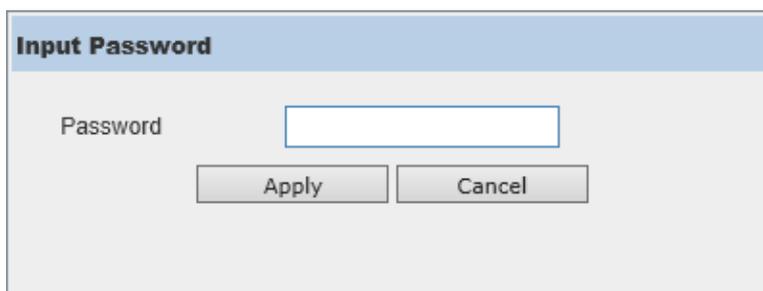


Figure 4-92 Add to Group (Input Password)

Enter the **Password** and click the **Apply** button to add the CaS to the SIM group.

Click the **Cancel** button to discard the addition and return to the Topology window.

Remove from Group

Select a Member Switch (MS) from the list and then select this option (**Remove from Group**) to remove the selected MS from the SIM group.

Device

Configure

Select a device from the list and then select this option (**Configure**) to connect to the Web User Interface (if available) on the selected device.

View

Refresh

Select this option to refresh the items displayed in the page.

Topology

Under **View**, select **Topology** to view the following:

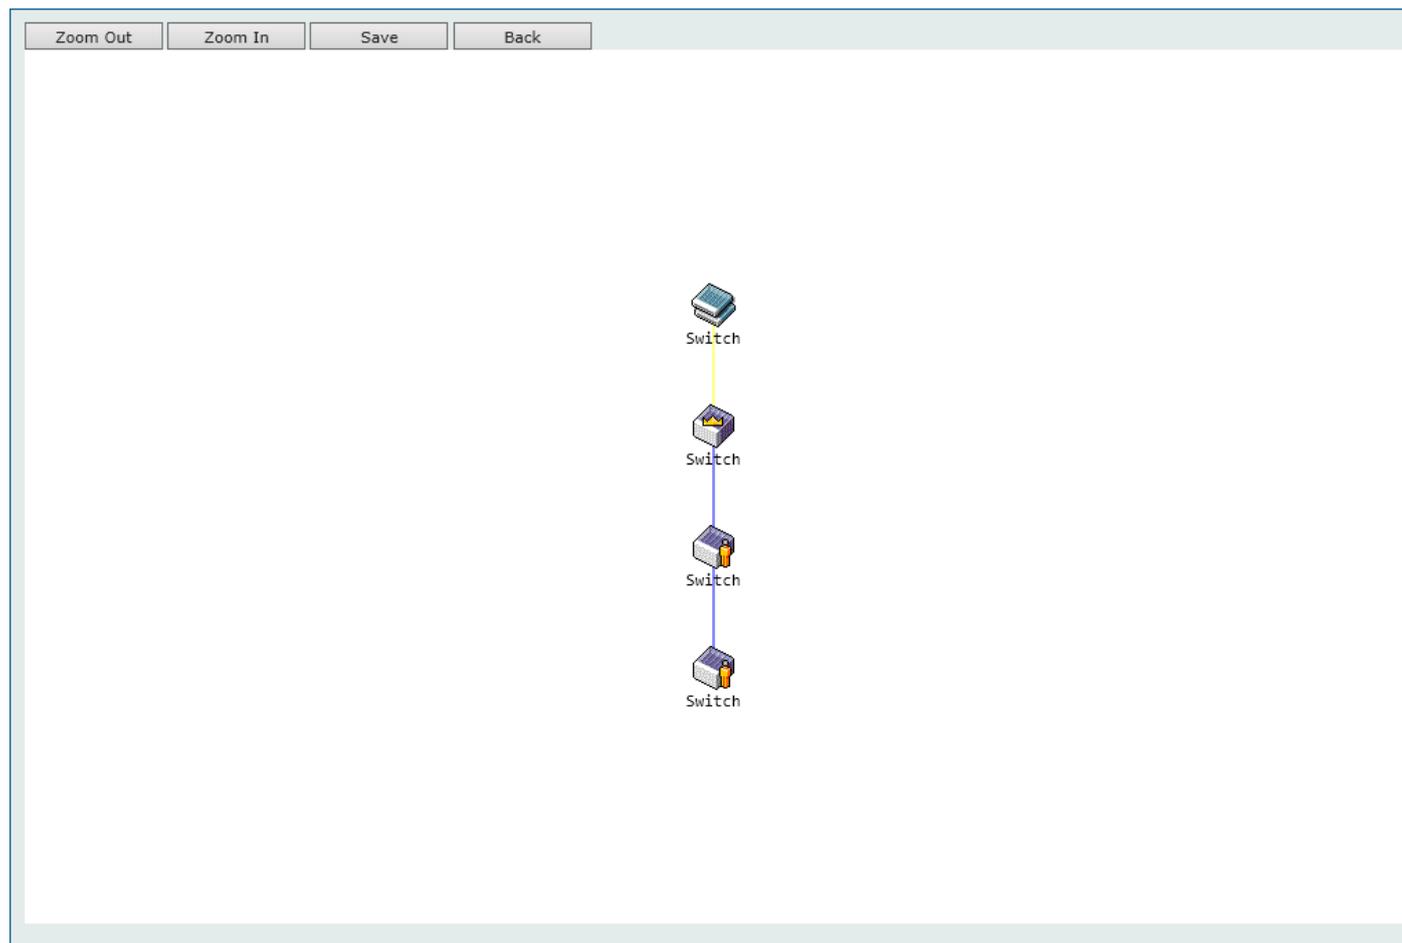


Figure 4-93 View > Topology

Click the **Zoom In** button enlarge the size of the displayed items.

Click the **Zoom Out** button reduce the size of the displayed items.

Click the **Save** button to save the display.

Click the **Back** button to return to the previous window.

This window will display how the devices within the SIM Group connect to other groups and devices. Possible icons on this window are as follows:

Icon	Description	Icon	Description
	Group		Layer 3 Member Switch
	Layer 2 Commander Switch		Member Switch of other group
	Layer 3 Commander Switch		Layer 2 Candidate Switch
	Commander Switch of other group		Layer 3 Candidate Switch
	Layer 2 Member Switch		Unknown device
	Non-SIM devices		

Tool Tips

In the Topology view window, the mouse plays an important role in configuration and in viewing device information. Hover the mouse pointer over a specific device in the Topology window to display more information about the device

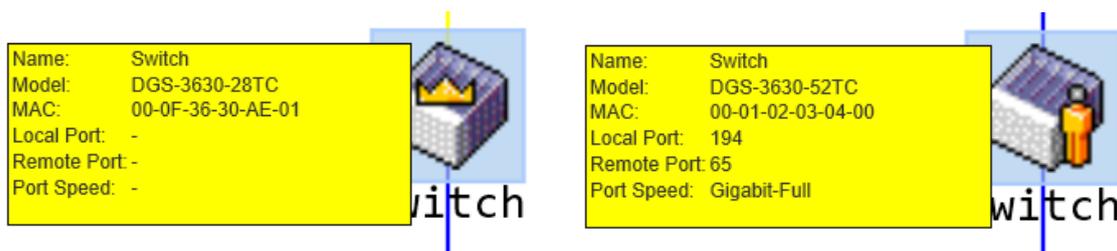


Figure 4-94 Device Information Utilizing the Tool Tip

Hover the mouse pointer over a line between two devices to display the **connection speed** between the two devices.

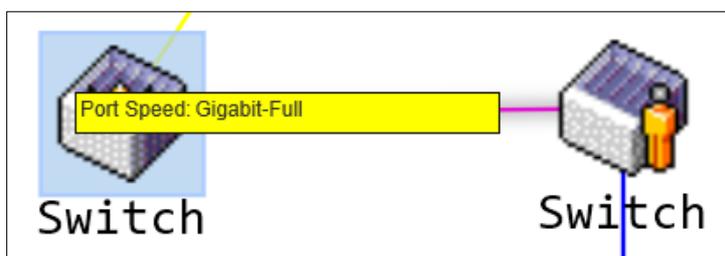


Figure 4-95 Port Speed Utilizing the Tool Tip

Right-Click

Right-click on a device to allow the user to perform various functions, depending on the role of the Switch in the SIM group and the icon associated with it.

Group	Commander Switch	Member Switch	Candidate Switch

The fields that can be configured are described below:

Parameter	Description
Property	Specifies to display more information about the device.
Configure	(Member Switch Only) Specifies to connect to the Web User Interface (if available) on the selected device.
Add to Group	(Candidate Switch Only) Specifies to add the selected CaS to the SIM group. Password authentication is required when a CaS is added to the SIM group.
Remove from Group	(Member Switch Only) Specifies to remove the selected MS from the SIM group.

Property	
Name:	Switch
Model:	Group
MAC:	00-0F-36-30-AE-01
Local Port:	-
Remote Port:	-
Port Speed:	-

Figure 4-96 Group Property

Property	
Name:	Switch
Model:	DGS-3630-28TC
MAC:	00-0F-36-30-AE-01
Local Port:	-
Remote Port:	-
Port Speed:	-

Figure 4-97 Commander Switch Property

Property	
Name:	Switch
Model:	DGS-3630-52TC
MAC:	00-01-02-03-04-00
Local Port:	194
Remote Port:	65
Port Speed:	Gigabit-Full

Figure 4-98 Member Switch Property

Property	
Name:	Switch
Model:	DGS-3630-52TC
MAC:	00-01-12-33-40-00
Local Port:	1
Remote Port:	196
Port Speed:	Gigabit-Full

Figure 4-99 Candidate Switch Property

The fields displayed are described below:

Parameter	Description
Name	Displays the Device Name of the Switches in the SIM group configured. If the device is not configured with a name, it will be given the name default and tagged with the last six digits of the MAC address to identify it.
Model	Displays the full module name of the Switch.
MAC	Displays the MAC address of the Switch.
Local Port	Displays the number of the physical port on the CS that the MS or CaS is connected to. The CS will have no entry in this field.
Remote Port	Displays the number of the physical port on the MS or CaS that the CS is connected to. The CS will have no entry in this field.
Port Speed	Displays the connection speed between the CS and the MS or CaS.

Help

About

Select this option to display the SIM Copyright information and release date.

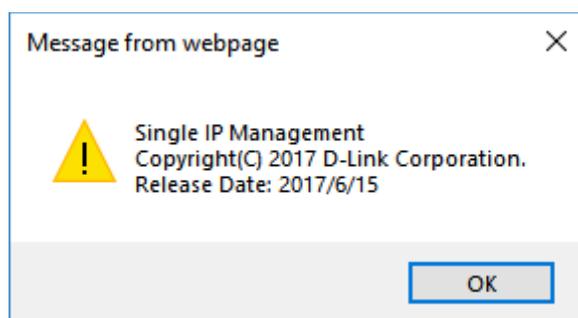


Figure 4-100 About Window

Firmware Upgrade

This window is used to view and upgrade firmware from the Commander Switch to the Member Switch. Member Switches will be listed in the table.

To view the following window, click **Management > Virtual Stacking (SIM) > Firmware Upgrade**, as shown below:

Firmware Upgrade

Firmware Upgrade

TFTP Server IP:

Path/Filename:

Total Entries: 2

<input type="checkbox"/>	Member ID	MAC Address	Platform	Hold Time	Firmware Version	Device Name
<input type="checkbox"/>	1	00-01-12-33-40-00	DGS-3630-52TC	80	2.10.012	Switch
<input type="checkbox"/>	2	00-01-02-03-04-00	DGS-3630-52TC	90	2.10.011	Switch

1/1 < < 1 > >

Figure 4-101 Firmware Upgrade Window

The fields that can be configured are described below:

Parameter	Description
TFTP Server IP	Enter the TFTP server IP address.
Path \ Filename	Enter the path and file name.

Click the **Download** button to update the firmware.

To specify a certain Switch for firmware download, tick its corresponding check box.

Configuration File Backup/Restore

This window is used to view and upgrade configuration files from the Commander Switch to the Member Switch using a TFTP server. Member Switches will be listed in the table.

To view the following window, click **Management > Virtual Stacking (SIM) > Configuration File Backup/Restore**, as shown below:

Configuration File Backup/Restore

Configuration File Backup/Restore

TFTP Server IP:

Path/Filename:

Total Entries: 2

<input type="checkbox"/>	Member ID	MAC Address	Platform	Hold Time	Firmware Version	Device Name
<input type="checkbox"/>	1	00-01-12-33-40-00	DGS-3630-52TC	80	2.10.012	Switch
<input type="checkbox"/>	2	00-01-02-03-04-00	DGS-3630-52TC	90	2.10.011	Switch

1/1 < < 1 > >

Figure 4-102 Configuration File Backup/Restore Window

The fields that can be configured are described below:

Parameter	Description
TFTP Server IP	Enter the TFTP server IP address.

Parameter	Description
Path \ Filename	Enter the path and file name.

Click the **Restore** button to update the configuration from a TFTP server to the member Switch.

Click the **Backup** button to back up the configuration file to a TFTP server.

Upload Log File

This window is used to view and upload log files from SIM member Switches to a specified PC.

To view the following window, click **Management > Virtual Stacking (SIM) > Upload Log File**, as shown below:

Member ID	MAC Address	Platform	Hold Time	Firmware Version	Device Name
1	00-01-12-33-40-00	DGS-3630-52TC	80	2.10.012	Switch
2	00-01-02-03-04-00	DGS-3630-52TC	90	2.10.011	Switch

Figure 4-103 Upload Log File Window

The fields that can be configured are described below:

Parameter	Description
TFTP Server IP	Enter the TFTP server IP address.
Path \ Filename	Enter the path and file name.

Click the **Upload** button to initiate the file transfer.

D-Link Discovery Protocol

This window is used to display and configure the D-Link Discovery Protocol (DDP) settings.

To view the following window, click **Management > D-Link Discovery Protocol**, as shown below:

D-Link Discovery Protocol

D-Link Discovery Protocol

DDP Global Settings

D-Link Discovery Protocol State Enabled Disabled

Report Timer sec

DDP Port Settings

Unit From Port To Port State

Unit 1 Settings

Port	State
eth1/0/1	Enabled
eth1/0/2	Enabled
eth1/0/3	Enabled
eth1/0/4	Enabled
eth1/0/5	Enabled
eth1/0/6	Enabled
eth1/0/7	Enabled
eth1/0/8	Enabled

Figure 4-104 D-Link Discovery Protocol Window

The fields that can be configured in **D-Link Discovery Protocol** are described below:

Parameter	Description
D-Link Discovery Protocol State	Select to globally enable or disable the DDP feature here.
Report Timer	Select the report timer value here. This is used to configure interval between two consecutive DDP report messages. Options to choose from are 30, 60, 90, 120 seconds, or Never . Selecting Never instructs the Switch to stop sending report messages.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **DDP Port Settings** are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the range of ports that will be used for this configuration here.
State	Select to enable or disable the DDP feature on the specified port(s) here.

Click the **Apply** button to accept the changes made.

SMTP Settings

This window is used to display and configure the Simple Mail Transfer Protocol (SMTP) settings.

To view the following window, click **Management > SMTP Settings**, as shown below:

Figure 4-105 SMTP Settings Window

The fields that can be configured in **SMTP Global Settings** are described below:

Parameter	Description
SMTP IP	Select the SMTP server IP address type here. Options to choose from are IPv4 and IPv6 .
SMTP IPv4 Server Address	After selecting IPv4 as the SMTP IP type enter the SMTP server IPv4 address here.
SMTP IPv6 Server Address	After selecting IPv6 as the SMTP IP type enter the SMTP server IPv6 address here.
SMTP IPv4 Server Port	After selecting IPv4 as the SMTP IP type enter the SMTP server port number here. The range is from 1 to 65535. By default, this value is 25.
SMTP IPv6 Server Port	After selecting IPv6 as the SMTP IP type enter the SMTP server port number here. The range is from 1 to 65535. By default, this value is 25.
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long.
Self Mail Address	Enter the email address that represents the Switch here. This string can be up to 254 characters long.
Send Interval	Enter the sending interval value here. The range is from 0 to 65535 minutes. By default, this value is 30 minutes.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **SMTP Mail Receiver Address** are described below:

Parameter	Description
Add A Mail Receiver	Enter the email address of the receiver here. This string can be up to 254 characters long.

Click the **Add** button to add a new SMTP email recipient.

The fields that can be configured in **Send a Test Mail to All** are described below:

Parameter	Description
Subject	Enter the subject of the email here. This string can be up to 128 characters long.
Content	Enter the content of the email here. This string can be up to 512 characters long.

Click the **Apply** button to accept the changes made.

Click the **Delete All** button to delete all the entries found in the display table.

Click the **Delete** button to delete the specified entry.

Reboot Schedule Settings

This window is used to display and configure the reboot schedule settings. Use this window to configure the reboot schedule of the Switch. The reboot schedule must take effect within 30 days. After the reboot schedule has taken effect and the Switch is restarted, it will generate a log message to identify that the Switch has been restarted using the reboot schedule. After a reboot or a shutdown, the reboot schedule will be deleted automatically. If the Switch was manually rebooted or powered off, before the reboot schedule could take effect, the specified reboot schedule will be cancelled.

To view the following window, click **Management > Reboot Schedule Settings**, as shown below:

Figure 4-106 Reboot Schedule Settings Window

The fields that can be configured are described below:

Parameter	Description
Time Interval	Select and enter the reboot schedule time interval value here. The reboot will be initiated after the specified time interval has passed. The range is from 1 to 43200 minutes (30 days).
Time	Select and enter the time at which the reboot should be initiated here. This time uses the 24-hour format, for example, 21:30. If the date was not specified, the reboot will be initiated when the system clock reaches the time specified within the next 24 hours.

Parameter	Description
Date	Select and enter the date at which the reboot should be initiated here. This date uses the following format: DD/MM/YYYY. For example, 23/12/2015. The reboot schedule can only be initiated within 30 days of configuration.
Save Before Reboot	Select this option to save all configuration changes made before the reboot is initiated.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the specified reboot schedule.

NLB FDB Settings

This window is used to display and configure the Network Load Balancing (NLB) FDB settings.

The Network Load Balancing (NLB) function is used to support the Microsoft server load balancing application where multiple servers can share the same IP address and MAC address. The requests from clients will be forwarded to all the servers, but will only be processed by one of them. The server can work in two different modes:

- **Unicast mode:** The client uses a unicast MAC address as the destination MAC address to reach the server.
- **Multicast mode:** The client uses a multicast MAC address as the destination MAC address to reach the server.

This destination MAC address is called the shared MAC address. However, the server uses its own MAC address (rather than the shared MAC address) as the source MAC address in the reply packet. In other words, a NLB unicast address is usually not the source MAC address of a packet.

When the received packet contains a destination MAC address that matches the configured unicast MAC address, it will be forwarded to those configured ports, regardless of the VLAN membership configuration.

Administrators cannot configure a static address of the MAC address table as a NLB address. However, if a MAC address is created as a NLB MAC address entry, the same MAC address can be still dynamically learnt in the Layer 2 MAC address table. In this situation, the NLB has higher priority; the dynamically learnt FDB entry won't take effect.



NOTE: Link Aggregation cannot be configured across multiple Switch units in the stack when the NLB feature is enabled.

To view the following window, click **Management > NLB FDB Settings**, as shown below:

Figure 4-107 NLB FDB Settings Window

The fields that can be configured are described below:

Parameter	Description
NLB Type	Select the NLB type here. Options to choose from are Unicast and Multicast .
VID	After selecting Multicast as the NLB type, enter the VLAN ID used in this configuration here.

Parameter	Description
MAC Address	Enter the unicast or multicast MAC address of the entry here. If a received packet contains a destination MAC address that matches the specified MAC address, it will be forwarded to the specified interface.
Unit	Select the Switch unit ID that will be used here.
From Port - To Port	Select the port range that will be used here.

Click the **Apply** button to accept the changes made.

Click the **Delete All** button to delete all the entries found in the display table.

Click the **Delete** button to delete the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

SD Card Management

This section refers to the configuration associated with removable devices which includes USB driver storage.

SD Card Backup Settings

This window is used to display and configure the SD card backup settings. This is used to create or modify an SD card management backup schedule entry.

To view the following window, click **Management > SD Card Management > SD Card Backup Settings**, as shown below:

Figure 4-108 SD Card Backup Settings Window

The fields that can be configured are described below:

Parameter	Description
Backup Entry Name	Enter the name of the SD card management backup schedule here. This string can be up to 32 characters long.
Time Range	After clicking the Edit button, enter the time range schedule that will be used here.
Type	After clicking the Edit button, select the backup type here. Options to choose from are: <ul style="list-style-type: none"> Configuration - Specifies that this schedule is used to back up the configuration. Log - Specifies that this schedule is used to back up the system log.
File Name	After clicking the Edit button, enter the destination filename and path here.
State	After clicking the Edit button, select to enable or disable this schedule here.

Click the **Apply** button to accept the changes made.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Edit** button to configure the specific entry.

Click the **Delete** button to remove the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

SD Card Execute Settings

This window is used to display and configure the SD card execution settings. This is used to execute the configuration from the SD card to the Switch file system manually.

To view the following window, click **Management > SD Card Management > SD Card Execute Settings**, as shown below:

Figure 4-109 SD Card Execute Settings Window

The fields that can be configured in **Execute Configuration** are described below:

Parameter	Description
File URL	Enter the URL of the file here. If the current directory is not the directory of SD card file system, then the full file path must be entered.
Increment	Select to enable or disable the increment feature here. <ul style="list-style-type: none"> When enabled, the current configuration will not be cleared before executing the configuration. When disabled, the current configuration will be cleared before executing the configuration.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **SD Card Execute Settings** are described below:

Parameter	Description
Execute Entry Name	Enter the name of the execution entry here. This string can be up to 32 characters long.
Time Range	After clicking the Edit button, enter the time range schedule that will be used here.
Mode	After clicking the Edit button, select the mode here. Options to choose from are: <ul style="list-style-type: none"> Increase - Specifies that the current configuration will not be cleared before executing the configuration. Reset - Specifies that the current configuration will be cleared before executing the configuration.

Parameter	Description
File Name	After clicking the Edit button, enter the source filename and path that will be executed here.
State	After clicking the Edit button, select to enable or disable this schedule here.

Click the **Apply** button to accept the changes made.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Edit** button to configure the specific entry.

Click the **Delete** button to remove the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

5. Layer 2 Features

FDB
 VLAN
 VLAN Tunnel
 STP
 ERPS (G.8032)
 Loopback Detection
 Link Aggregation
 MLAG
 Flex Links
 L2 Protocol Tunnel
 L2 Multicast Control
 LLDP

FDB

Static FDB

Unicast Static FDB

This window is used to display and configure the static unicast forwarding settings on the Switch.

To view the following window, click **L2 Features > FDB > Static FDB > Unicast Static FDB**, as shown below:

Figure 5-1 Unicast Static FDB Window

The fields that can be configured are described below:

Parameter	Description
Port/Drop	Allows the selection of the port number on which the MAC address entered resides. This option could also drop the MAC address from the unicast static FDB. Select the port number when selecting the Port .
Unit	Select the stacking unit ID of the Switch that will be configured here.
Port Number	After selecting the Port option, select the port number used here.
VID	Enter the VLAN ID on which the associated unicast MAC address resides.
MAC Address	Enter the MAC address to which packets will be statically forwarded. This must be a unicast MAC address.

Click the **Apply** button to accept the changes made.

Click the **Delete All** button to delete all the entries found in the display table.

Click the **Delete** button to delete the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

Multicast Static FDB

This window is used to display and configure the multicast static FDB settings.

To view the following window, click **L2 Features > FDB > Static FDB > Multicast Static FDB**, as shown below:

Figure 5-2 Multicast Static FDB Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the stacking unit ID of the Switch that will be configured here.
From Port - To Port	Select the range of ports that will be used for this configuration here.
VID	Enter the VLAN ID of the VLAN the corresponding MAC address belongs to.
MAC Address	Enter the static destination MAC address of the multicast packets. This must be a multicast MAC address. The format of the destination MAC address is 01-XX-XX-XX-XX-XX.

Click the **Apply** button to accept the changes made.

Click the **Delete All** button to remove all the entries.

Click the **Delete** button to remove the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

MAC Address Table Settings

This window is used to display and configure the global MAC address table settings.

To view the following window, click **L2 Features > FDB > MAC Address Table Settings**, as shown below:

Figure 5-3 MAC Address Table Settings (Global Settings) Window

The fields that can be configured are described below:

Parameter	Description
Aging Time	Enter the MAC address table aging time here. This value must be between 10 and 1000000 seconds. Entering 0 will disable MAC address aging. By default, this value is 300 seconds.
Aging Destination Hit	Select to enable or disable the aging destination hit function.

Click the **Apply** button to accept the changes made.

After selecting the **MAC Address Port Learning Settings** tab option, at the top of the page, the following page will be available.

MAC Address Table Settings

Global Settings | **MAC Address Port Learning Settings** | MAC Address VLAN Learning Settings

Unit: 1 | From Port: eth1/0/1 | To Port: eth1/0/1 | Status: Enabled |

Unit 1 Settings

Port	Status
eth1/0/1	Enabled
eth1/0/2	Enabled
eth1/0/3	Enabled
eth1/0/4	Enabled
eth1/0/5	Enabled

Figure 5-4 MAC Address Table Settings (MAC Address Port Learning Settings) Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the stacking unit ID of the Switch that will be configured here.
From Port - To Port	Select the range of ports that will be used for this configuration here.
Status	Select to enable or disable the MAC address learning function on the ports specified here.

Click the **Apply** button to accept the changes made.

After selecting the **MAC Address VLAN Learning Settings** tab option, at the top of the page, the following page will be available.

Figure 5-5 MAC Address Table Settings (MAC Address VLAN Learning Settings) Window

The fields that can be configured are described below:

Parameter	Description
VID List	Enter the VLAN ID(s) that will be used in this configuration or display here. A series of VLAN IDs can be entered separated by commas or a range of VLAN IDs can be entered separated by a hyphen.
Status	Select to enable or disable the MAC address learning function on the VLAN(s) specified here.

Click the **Apply** button to accept the changes made.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show All** button to display all the available entries.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

MAC Address Table

This window is used to view the entries listed in the MAC address table.

To view the following window, click **L2 Features > FDB > MAC Address Table**, as shown below:

VID	MAC Address	Type	Port
1	10-BF-48-D6-E2-E2	Dynamic	eth1/0/1
1	80-26-89-8D-A7-00	Static	CPU
1	D0-AE-EC-D9-9E-5E	Dynamic	eth1/0/1
1	D8-EB-97-D1-84-70	Dynamic	eth1/0/1

Figure 5-6 MAC Address Table Window

The fields that can be configured are described below:

Parameter	Description
Port	Select the stacking unit ID and the port number of the Switch that will be configured here.
VID	Enter the VLAN ID that will be used for this configuration here.
MAC Address	Enter the MAC address that will be used for this configuration here.

Click the **Clear Dynamic by Port** button to clear the dynamic MAC address listed on the corresponding port.

Click the **Clear Dynamic by VLAN** button to clear the dynamic MAC address listed on the corresponding VLAN.

Click the **Clear Dynamic by MAC** button to clear the dynamic MAC address entered.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Clear All** button to clear all dynamic MAC addresses.

Click the **Show All** button to display all the MAC addresses recorded in the MAC address table.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

MAC Notification

This window is used to display and configure MAC notification.

To view the following window, click **L2 Features > FDB > MAC Notification**, as shown below:

Figure 5-7 MAC Notification (MAC Notification Settings) Window

The fields that can be configured are described below:

Parameter	Description
MAC Address Notification	Select to enable or disable MAC notification globally on the Switch
Interval	Enter the time value between notifications. This value must be between 1 and 2147483647 seconds. By default, this value is 1 second.
History Size	Enter the maximum number of entries listed in the history log used for notification. This value must be between 0 and 500. By default, this value is 1.
MAC Notification Trap State	Select to enable or disable the MAC notification trap state.
Trap Type	Select the trap type here. Options to choose from are: <ul style="list-style-type: none"> • Without VID - Specifies the trap information without the VLAN ID. • With VID - Specifies the trap information with the VLAN ID.
Unit	Select the stacking unit ID of the Switch that will be configured here.
From Port - To Port	Select the range of ports that will be used for this configuration here.
Added Trap	Select to enable or disable the added trap for the port(s) selected.
Removed Trap	Select to enable or disable the removed trap for the port(s) selected.

Click the **Apply** button to accept the changes made for each individual section.

After selecting the **MAC Notification History** tab, at the top of the page, the following page will be available.

Figure 5-8 MAC Notification (MAC Notification History) Window

On this page, a list of MAC notification messages will be displayed.

VLAN

VLAN Configuration Wizard

This window is used to start the VLAN configuration wizard.

Create/Configure VLAN

To view the following window, click **L2 Features > VLAN > VLAN Configuration Wizard**, as shown below:

Figure 5-9 VLAN Configuration Wizard (Step 1) Window

The fields that can be configured are described below:

Parameter	Description
Create VLAN	Select this option to create a new VLAN. <ul style="list-style-type: none"> VID - Enter the VLAN ID here. The range is from 1 to 4094.
Configure VLAN	Select this option to configure an existing VLAN. <ul style="list-style-type: none"> VID - Enter the VLAN ID here. The range is from 1 to 4094.

Click the **Next** button to continue to the next step.

Create VLAN

After selecting the **Create VLAN** option and clicking the **Next** button, the following window will appear.

VLAN Configuration Wizard

Create VLAN

VID: 2
 VLAN Name: VLAN0002
 Unit: 1

Port	Select All	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26
Tagged	All	<input type="radio"/>																									
Untagged	All	<input type="radio"/>																									
Not Member	All	<input checked="" type="radio"/>																									
Native VLAN (PVID)	All	<input type="checkbox"/>																									
VLAN Mode		H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	

A-Access; H-Hybrid; T-Trunk; D-Dot1q Tunnel; P-Private VLAN(Host/Promiscuous/Trunk Promiscuous/Trunk Secondary)

Note: The selected member port(s) will be mandatory configured to Hybrid mode.

Access Mode: The port will be an untagged member of VLAN.
 Trunk Mode: The port is either a tagged port or an untagged member port of its native VLAN and can be a tagged member of other VLANs configured.
 Hybrid Mode: The port can be an untagged or a tagged member of all VLANs configured.
 Dot1q-Tunnel Mode: The port behaves as a UNI port of a service VLAN.
 Private VLAN Mode: The port behaves as a Private VLAN port.

View Allowed VLAN [Back] [Apply]

Figure 5-10 VLAN Configuration Wizard (Create VLAN) Window

The fields that can be configured are described below:

Parameter	Description
VLAN Name	Enter the name for the VLAN here.
Unit	Select the Switch unit that will be used for this configuration here.
Tagged	Select the switch ports that are tagged members of this VLAN here.
Untagged	Select the switch ports that are untagged members of this VLAN here.
Not Member	Select the switch ports that are not members of this VLAN here.
Native VLAN (PVID)	Select the switch ports that support the native VLAN here.

Click the **View Allowed VLAN** button view the allowed VLAN settings.

Click the **Back** button to return to the previous step.

Click the **Apply** button to accept the changes made.

After clicking the **View Allowed VLAN** button, the following window will appear.

Allowed VLAN

Unit 1 Settings

Port	VLAN Mode	Native VLAN	Untagged VLAN	Tagged VLAN
eth1/0/1	Hybrid	1	1	
eth1/0/2	Hybrid	1	1	
eth1/0/3	Hybrid	1	1	
eth1/0/4	Hybrid	1	1	
eth1/0/5	Hybrid	1	1	
eth1/0/6	Hybrid	1	1	
eth1/0/7	Hybrid	1	1	
eth1/0/8	Hybrid	1	1	
eth1/0/9	Hybrid	1	1	
eth1/0/10	Hybrid	1	1	

Figure 5-11 Allowed VLAN Window

Configure VLAN

After selecting the **Configure VLAN** option and clicking the **Next** button, the following window will appear.

Figure 5-12 VLAN Configuration Wizard (Configure VLAN) Window

The fields that can be configured are described below:

Parameter	Description
VLAN Name	Enter the name for the VLAN here.
Unit	Select the Switch unit that will be used for this configuration here.
Tagged	Select the switch ports that are tagged members of this VLAN here.
Untagged	Select the switch ports that are untagged members of this VLAN here.
Not Member	Select the switch ports that are not members of this VLAN here.
Native VLAN (PVID)	Select the switch ports that support the native VLAN here.

Click the **View Allowed VLAN** button view the allowed VLAN settings.

Click the **Back** button to return to the previous step.

Click the **Apply** button to accept the changes made.

After clicking the **View Allowed VLAN** button, the following window will appear.

Port	VLAN Mode	Native VLAN	Untagged VLAN	Tagged VLAN
eth1/0/1	Hybrid	1	1	
eth1/0/2	Hybrid	1	1	
eth1/0/3	Hybrid	1	1	
eth1/0/4	Hybrid	1	1	
eth1/0/5	Hybrid	1	1	
eth1/0/6	Hybrid	1	1	
eth1/0/7	Hybrid	1	1	
eth1/0/8	Hybrid	1	1	
eth1/0/9	Hybrid	1	1	
eth1/0/10	Hybrid	1	1	

Figure 5-13 Allowed VLAN Window

802.1Q VLAN

This window is used to display and configure the VLAN settings on this Switch.

To view the following window, click **L2 Features > VLAN > 802.1Q VLAN**, as shown below:

Figure 5-14 802.1Q VLAN Window

The fields that can be configured in **802.1Q VLAN** are described below:

Parameter	Description
VID List	Enter the VLAN ID list that will be created here.

Click the **Apply** button to create a new 802.1Q VLAN.

Click the **Delete** button to remove the 802.1Q VLAN specified.

The fields that can be configured in **Find VLAN** are described below:

Parameter	Description
VID	Enter the VLAN ID that will be displayed here.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show All** button to locate all the entries.

Click the **Edit** button to re-configure the specific entry.

Click the **Delete** button to remove the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

VLAN Interface

This window is used to display and configure the VLAN interface settings.

To view the following window, click **L2 Features > VLAN > VLAN Interface**, as shown below:

Port	VLAN Mode	Ingress Checking	Acceptable Frame Type	Show Detail	Edit
eth1/0/1	Hybrid	Enabled	Admit-All	Show Detail	Edit
eth1/0/2	Hybrid	Enabled	Admit-All	Show Detail	Edit
eth1/0/3	Hybrid	Enabled	Admit-All	Show Detail	Edit
eth1/0/4	Hybrid	Enabled	Admit-All	Show Detail	Edit
eth1/0/5	Hybrid	Enabled	Admit-All	Show Detail	Edit
eth1/0/6	Hybrid	Enabled	Admit-All	Show Detail	Edit
eth1/0/7	Hybrid	Enabled	Admit-All	Show Detail	Edit
eth1/0/8	Hybrid	Enabled	Admit-All	Show Detail	Edit
eth1/0/9	Hybrid	Enabled	Admit-All	Show Detail	Edit
eth1/0/10	Hybrid	Enabled	Admit-All	Show Detail	Edit

Figure 5-15 VLAN Interface Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.

Click the **Show Detail** button to view detailed information about the VLAN on the specific interface.

Click the **Edit** button to re-configure the specific entry.

After clicking the **Show Detail** button, the following page will appear.

Port	eth1/0/1
VLAN Mode	Hybrid
Native VLAN	1
Hybrid Untagged VLAN	1
Hybrid Tagged VLAN	
Dynamic Tagged VLAN	
VLAN Precedence	MAC-VLAN
Ingress Checking	Enabled
Acceptable Frame Type	Admit-All

Figure 5-16 VLAN Interface (VLAN Detail) Window

On this page, more detailed information about the VLAN of the specific interface is displayed.

Click the **Back** button to return to the previous page.

After click the **Edit** button, the following page will appear. This is a dynamic page that will change when a different **VLAN Mode** is selected.

Figure 5-17 VLAN Interface Window

The fields that can be configured are described below:

Parameter	Description
VLAN Mode	Select the VLAN mode option here. Options to choose from are Access, Hybrid, Trunk, Dot1q-Tunnel, Promiscuous, Host, Trunk Promiscuous, and Trunk Secondary .
Acceptable Frame	Select the acceptable frame behavior option here. Options to choose from are Tagged Only, Untagged Only, and Admit All .
Ingress Checking	Select to enable or disable the ingress checking function.
VLAN Precedence	After selecting Hybrid or Dot1q-Tunnel under VLAN Mode , select the VLAN precedence option here. Options to choose from are Mac-based VLAN and Subnet-based VLAN .
Native VLAN	After selecting Hybrid, Trunk, Trunk Promiscuous, or Trunk Secondary under VLAN Mode , select this option to enable the native VLAN function.
VID	After selecting Access, Hybrid, Trunk, Dot1q-Tunnel, Trunk Promiscuous, or Trunk Secondary under VLAN Mode and selecting the Native VLAN option, enter the VLAN ID here. The range is from 1 to 4094.
Action	After selecting Hybrid, Trunk, Dot1q-Tunnel, Trunk Promiscuous, or Trunk Secondary under VLAN Mode , select the action that will be taken here. Options to choose from are Add, Remove, Tagged, and Untagged .
Add Mode	After selecting Hybrid or Dot1q-Tunnel under VLAN Mode , select Untagged or Tagged here.
Allowed VLAN Range	After selecting Hybrid, Trunk, Dot1q-Tunnel, Trunk Promiscuous, or Trunk Secondary under VLAN Mode , enter the allowed VLAN range here.
Clone	Select this option to enable the clone feature.
Unit	Select the unit ID of the Switch in the stack here.
From Port - To Port	Select the range of ports that will be used in the clone feature here.

Click the **Apply** button to accept the changes made.

Click the **Back** button to discard the changes made and return to the previous page.

To view the following window, select the **Port Summary** tab, as shown below:

Port	VLAN Mode	Native VLAN	Untagged VLAN	Tagged VLAN	Dynamic Tagged VLAN
eth1/0/1	Hybrid	1	1		
eth1/0/2	Hybrid	1	1		
eth1/0/3	Hybrid	1	1		
eth1/0/4	Hybrid	1	1		
eth1/0/5	Hybrid	1	1		
eth1/0/6	Hybrid	1	1		
eth1/0/7	Hybrid	1	1		
eth1/0/8	Hybrid	1	1		
eth1/0/9	Hybrid	1	1		
eth1/0/10	Hybrid	1	1		

Figure 5-18 Port Summary Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.

802.1v Protocol VLAN

Protocol VLAN Profile

This window is used to display and configure 802.1v protocol VLAN profiles. The 802.1v Protocol VLAN group settings support multiple VLANs for each protocol and allow the user to configure untagged ports of different protocols on the same physical port. For example, it allows the user to configure an 802.1Q and 802.1v untagged port on the same physical port.

To view the following window, click **L2 Features > VLAN > 802.1v Protocol VLAN > Protocol VLAN Profile**, as shown below:

Profile ID	Frame Type	Ether Type
1	Ethernet2	0xFFFF (User define)

Figure 5-19 Protocol VLAN Profile Window

The fields that can be configured are described below:

Parameter	Description
Profile ID	Enter the 802.1v protocol VLAN profile ID here. This value must be between 1 and 16.
Frame Type	Select the frame type option here. This function maps packets to protocol-defined VLANs by examining the type octet within the packet header to

Parameter	Description
	discover the type of protocol associated with it. Options to choose from are Ethernet 2 , SNAP , and LLC .
Ether Type	<p>Enter the Ethernet type value for the group here. The protocol value is used to identify a protocol of the frame type specified. The range of values are 0x0 to 0xFFFF. Depending on the frame type, the octet string will have one of the following values:</p> <ul style="list-style-type: none"> For Ethernet 2, this is a 16-bit (2-octet) hex value. For example, IPv4 is 0800, IPv6 is 86DD, ARP is 0806, etc. For IEEE802.3 SNAP, this is a 16-bit (2-octet) hex value. For IEEE802.3 LLC, this is a 2-octet IEEE 802.2 Link Service Access Point (LSAP) pair. The first octet is for Destination Service Access Point (DSAP) and the second octet is for Source.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the specific entry.

Protocol VLAN Profile Interface

This window is used to display and configure the protocol VLAN profile interface settings.

To view the following window, click **L2 Features > VLAN > 802.1v Protocol VLAN > Protocol VLAN Profile Interface**, as shown below:

The screenshot shows the 'Protocol VLAN Profile Interface' window. At the top, there's a section 'Add New Protocol VLAN Interface' with several input fields: 'Port' (dropdown with '1'), 'eth1/0/1' (dropdown), 'Profile ID' (dropdown with '1'), 'VID (1-4094)' (text input), and 'Priority' (dropdown with '0'). An 'Apply' button is to the right. Below this is a table titled 'Unit 1 Settings' with the following data:

Port	Profile ID	VID	Priority	
eth1/0/18	1	1	0	Delete

Figure 5-20 Protocol VLAN Profile Interface Window

The fields that can be configured are described below:

Parameter	Description
Port	Select the stacking unit ID and the port number of the Switch that will be configured here.
Profile ID	Select the 802.1v protocol VLAN profile ID here.
VID	Enter the VLAN ID used here.
Priority	Select the priority value used here. This value is between 0 and 7. This parameter is specified to re-write the 802.1p default priority previously set in the Switch, which is used to determine the CoS queue that packets are forwarded to. Once this field is specified, packets accepted by the Switch that match this priority are forwarded to the CoS queue specified previously.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the specific entry.

GVRP

GVRP Global

This window is used to display and configure the global GARP VLAN Registration Protocol (GVRP) settings.

To view the following window, click **L2 Features > VLAN > GVRP > GVRP Global**, as shown below:

Figure 5-21 GVRP Global Window

The fields that can be configured are described below:

Parameter	Description
Global GVRP State	Select to enable or disable the global GVRP state here.
Dynamic VLAN Creation	Select to enable or disable the dynamic VLAN creation function here.
NNI BPDU Address	Select the NNI BPDU address option here. This option is used to determine the BPDU protocol address for GVRP in customer networks. It can use 802.1d GVRP address or 802.1ad service provider GVRP address. Options to choose from are Dot1d and Dot1ad .

Click the **Apply** button to accept the changes made.

GVRP Port

This window is used to display and configure the GVRP port settings.

To view the following window, click **L2 Features > VLAN > GVRP > GVRP Port**, as shown below:

Port	GVRP Status	Join Time	Leave Time	Leave All Time
eth1/0/1	Disabled	20	60	1000
eth1/0/2	Disabled	20	60	1000
eth1/0/3	Disabled	20	60	1000
eth1/0/4	Disabled	20	60	1000
eth1/0/5	Disabled	20	60	1000
eth1/0/6	Disabled	20	60	1000

Figure 5-22 GVRP Port Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the range of ports that will be used for this configuration here.
GVRP Status	Select the enable or disable the GVRP port status. This enables the port to dynamically become a member of a VLAN. By default, this option is disabled.
Join Time	Enter the Join Time value in centiseconds. This value must be between 10 and 10000 centiseconds. By default, this value is 20 centiseconds.
Leave Time	Enter the Leave Time value in centiseconds. This value must be between 10 and 10000 centiseconds. By default, this value is 60 centiseconds.
Leave All Time	Enter the Leave All Time value in centiseconds. This value must be between 10 and 10000 centiseconds. By default, this value is 1000 centiseconds.

Click the **Apply** button to accept the changes made.

GVRP Advertise VLAN

This window is used to display and configure the GVRP Advertise VLAN settings.

To view the following window, click **L2 Features > VLAN > GVRP > GVRP Advertise VLAN**, as shown below:

The screenshot shows the 'GVRP Advertise VLAN' configuration window. At the top, there are five input fields: 'Unit' (dropdown with '1'), 'From Port' (dropdown with 'eth1/0/1'), 'To Port' (dropdown with 'eth1/0/1'), 'Action' (dropdown with 'Add'), and 'Advertise VID List' (text input with '1,3 or 2-5'). An 'Apply' button is located to the right of these fields. Below the form is a section titled 'Unit 1 Settings' which contains a table with two columns: 'Port' and 'Advertise VLAN'. The table lists six ports: eth1/0/1, eth1/0/2, eth1/0/3, eth1/0/4, eth1/0/5, and eth1/0/6. The 'Advertise VLAN' column is currently empty for all ports.

Figure 5-23 GVRP Advertise VLAN Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the range of ports that will be used for this configuration here.
Action	Select the advertised VLAN to port mapping action here. Options to choose from are All , Add , Remove , and Replace . When selecting All , all the advertised VLANs will be used.
Advertise VID List	Enter the advertised VLAN ID list here.

Click the **Apply** button to accept the changes made.

GVRP Forbidden VLAN

This window is used to display and configure the GVRP forbidden VLAN settings.

To view the following window, click **L2 Features > VLAN > GVRP > GVRP Forbidden VLAN**, as shown below:

Unit	From Port	To Port	Action	Forbidden VID List
1	eth1/0/1	eth1/0/1	Add	2 or 3-5

Unit 1 Settings	
Port	Forbidden VLAN
eth1/0/1	
eth1/0/2	
eth1/0/3	
eth1/0/4	
eth1/0/5	
eth1/0/6	

Figure 5-24 GVRP Forbidden VLAN Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the range of ports that will be used for this configuration here.
Action	Select the forbidden VLAN to port mapping action that will be taken here. Options to choose from are All , Add , and Remove . When selecting All , all the forbidden VLANs will be used.
Forbidden VID List	Enter the forbidden VLAN ID list here.

Click the **Apply** button to accept the changes made.

GVRP Statistics Table

This window is used to view GVRP statistics information.

To view the following window, click **L2 Features > VLAN > GVRP > GVRP Statistics Table**, as shown below:

Port		JoinEmpty	JoinIn	LeaveEmpty	LeaveIn	LeaveAll	Empty
eth1/0/1	RX	0	0	0	0	0	0
	TX	0	0	0	0	0	0
eth1/0/2	RX	0	0	0	0	0	0
	TX	0	0	0	0	0	0
eth1/0/3	RX	0	0	0	0	0	0
	TX	0	0	0	0	0	0
eth1/0/4	RX	0	0	0	0	0	0
	TX	0	0	0	0	0	0

Figure 5-25 GVRP Statistics Table Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit to be displayed here.
Port	Select the port number to display GVRP statistic information for here.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Clear** button to clear all the information for the specific port.

Click the **Show All** button to view all GVRP statistic information.

Click the **Clear All** button to clear all the information in this table.

MVRP

MVRP Global Settings

This window is used to display and configure the global Multiple VLAN Registration Protocol (MVRP) settings.

To view the following window, click **L2 Features > VLAN > MVRP > MVRP Global Settings**, as shown below:

Figure 5-26 MVRP Global Settings Window

The fields that can be configured are described below:

Parameter	Description
Global MVRP State	Select to globally enable or disable the MVRP function here.

Click the **Apply** button to accept the changes made.

MVRP Port Settings

This window is used to display and configure the MVRP port settings.

To view the following window, click **L2 Features > VLAN > MVRP > MVRP Port Settings**, as shown below:

Port	MVRP Status	MVRP Registration	Restricted Registration	Join Time	Leave Time	Leave All Time
eth1/0/1	Disabled	Normal	Disabled	100	300	1000
eth1/0/2	Disabled	Normal	Disabled	100	300	1000
eth1/0/3	Disabled	Normal	Disabled	100	300	1000
eth1/0/4	Disabled	Normal	Disabled	100	300	1000
eth1/0/5	Disabled	Normal	Disabled	100	300	1000
eth1/0/6	Disabled	Normal	Disabled	100	300	1000
eth1/0/7	Disabled	Normal	Disabled	100	300	1000
eth1/0/8	Disabled	Normal	Disabled	100	300	1000
eth1/0/9	Disabled	Normal	Disabled	100	300	1000
eth1/0/10	Disabled	Normal	Disabled	100	300	1000

Figure 5-27 MVRP Port Settings Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the unit ID of the Switch in the physical stack here.
From Port - To Port	Select the switch port or the range of switch ports here.
MVRP Status	Select to enable or disable the MVRP function of the specified port(s) here.
Join Time	Enter the join time here. The range is from 100 to 10000000 centiseconds.
Leave Time	Enter the leave time here. The range is from 300 to 10000000 centiseconds.
Leave All Time	Enter the leave all time here. The range is from 1000 to 10000000 centiseconds.
MVRP Registration	Select the MVRP registration method here. Options to choose from are: <ul style="list-style-type: none"> • Normal - Specifies that all MVRP requests and messages are received and processed. • Fixed - Specifies that additional MVRP requests and messages are ignored. All existing registrations on the port are retained. • Forbidden - Specifies that all the VLANs, except for VLAN 1, are deregistered on the port.
Restricted Registration	Select to enable or disable restricted registration here. When enabled, the creation of a new dynamic VLAN entry is permitted only if there is a static VLAN entry for the VLAN, in which the Registrar Administrative Control value for this port is Normal Registration.

Click the **Apply** button to accept the changes made.

MVRP Statistics

This window is used to display MVRP statistics.

To view the following window, click **L2 Features > VLAN > MVRP > MVRP Statistics**, as shown below:

Port	Failed Registrations	Last PDU Originator
eth1/0/2	0	00-00-00-00-00-00

Figure 5-28 MVRP Statistics Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the unit ID of the Switch in the physical stack here.
Port	Select the switch port here.

Click the **Find** button to find and display MVRP statistics for the specified port.

Click the **Clear** button to clear the MVRP statistics from the specified port.

Click the **Show All** button to display MVRP statistics for all the ports.

Click the **Clear** button to clear the MVRP statistics from all the ports.

Asymmetric VLAN

This window is used to display and configure the asymmetric VLAN settings.

To view the following window, click **L2 Features > VLAN > Asymmetric VLAN**, as shown below:

Figure 5-29 Asymmetric VLAN Window

The fields that can be configured are described below:

Parameter	Description
Asymmetric VLAN State	Select to enable or disable the asymmetric VLAN feature here.

Click the **Apply** button to accept the changes made.

MAC VLAN

This window is used to display and configure the MAC-based VLAN information. When a static MAC-based VLAN entry is configured, the VLAN operating on the port will be changed.

To view the following window, click **L2 Features > VLAN > MAC VLAN**, as shown below:

Figure 5-30 MAC VLAN Window

The fields that can be configured are described below:

Parameter	Description
MAC Address	Enter the unicast MAC address.
VID	Enter the VLAN ID that will be used.
Priority	Select the priority that is assigned to untagged packets. This value is between 0 and 7.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

L2VLAN Interface Description

This window is used to display and configure the Layer 2 VLAN interface description.

To view the following window, click **L2 Features > VLAN > L2VLAN Interface Description**, as shown below:

Figure 5-31 L2VLAN Interface Description Window

The fields that can be configured in **Create L2VLAN Interface Description** are described below:

Parameter	Description
L2VLAN Interface	Enter the ID of the Layer 2 VLAN interface here.

Parameter	Description
Description	Enter the description for the Layer 2 VLAN interface here.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Find L2VLAN Interface Description** are described below:

Parameter	Description
L2VLAN Interface	Enter the ID of the Layer 2 VLAN interface here.

Click the **Find** button to generate the display based on the information entered.

Click the **Show All** button to display all the available entries.

Click the **Delete Description** button to remove the description from the specified Layer 2 VLAN.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

Subnet VLAN

This window is used to display and configure the subnet VLAN settings. A subnet VLAN entry is an IP subnet-based VLAN classification rule. If an untagged or priority-tagged IP packet is received on a port, its source IP address will be used to match the subnet VLAN entries. If the source IP is in the subnet of an entry, the packet will be classified to the VLAN defined for this subnet.

To view the following window, click **L2 Features > VLAN > Subnet VLAN**, as shown below:

Figure 5-32 Subnet VLAN Window

The fields that can be configured are described below:

Parameter	Description
IPv4 Network Prefix / Prefix Length	Select and enter the IPv4 address and prefix length value for the subnet VLAN here.
IPv6 Network Prefix / Prefix Length	Select and enter the IPv6 address and prefix length value for the subnet VLAN here.
VID	Enter the VLAN ID for the subnet VLAN here.
Priority	Select the priority value used here. This value is between 0 and 7. A higher value takes higher priority.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

Super VLAN

This window is used to display and configure the super VLAN settings. This is used to specify a VLAN as a super VLAN. Super VLANs are used to aggregate multiple sub-VLANs (Layer 2 broadcast domains) into an IP subnet. A super VLAN cannot have any physical member port. A super VLAN cannot be a sub-VLAN at the same time. Once an IP interface is bound to a super VLAN, the proxy ARP will be enabled automatically on the interface for communication between its sub-VLANs. Multiple super VLANs can be configured and each super VLAN can consist of multiple sub-VLANs.

Private VLAN and super VLAN are mutually exclusive. A private VLAN cannot be configured as a super VLAN. Layer 3 routing protocols, multicast protocols, and the IPv6 protocol cannot run on a super VLAN interface.

To view the following window, click **L2 Features > VLAN > Super VLAN**, as shown below:

Figure 5-33 Super VLAN Window

The fields that can be configured in **Add Super VLAN** are described below:

Parameter	Description
Super VID List	Enter the super VLAN ID(s) that will be created here.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Add Sub VLAN** are described below:

Parameter	Description
Super VID	Enter the super VLAN ID that will be associated with the sub-VLAN(s) here. The range is from 1 to 4094.
Sub VID List	Enter the sub-VLAN ID(s) that will be associated with the super VLAN here.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Find Super VLAN** are described below:

Parameter	Description
Super VID	Enter the super VLAN ID that will be displayed here. The range is from 1 to 4094.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show All** button to display all the available entries.

Click the **Delete** button to remove the specific entry or to remove the sub-VLAN from the super VLAN.

Click the [IP Range List](#) link to add an IP range to the sub-VLAN.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the [IP Range List](#) link, the following page will be available.

The screenshot shows the 'Sub VLAN' configuration window. At the top, the title is 'Sub VLAN'. Below it, the 'Sub VLAN' field is set to '3'. The 'Action' field is a dropdown menu with 'Add' selected. There are two radio buttons: 'Start IP Address' (selected) and 'Start IPv6 Address'. The 'Start IP Address' field is empty, and the 'End IP Address' field is also empty. The 'Start IPv6 Address' field is set to '2013::1', and the 'End IPv6 Address' field is also set to '2013::1'. There are 'Back' and 'Apply' buttons on the right. Below the form, there is a table with the following data:

Total Entries: 1	
NO.	SubVLAN IP Address Range
1	192.168.70.20-192.168.70.24

Figure 5-34 Super VLAN (IP Range List) Window

The fields that can be configured are described below:

Parameter	Description
Action	Select the action that will be taken here. Options to choose from are Add and Remove .
Start IP Address	Enter the starting IP address in the range of this sub-VLAN here.
End IP Address	Enter the ending IP address in the range of this sub-VLAN here.
Start IPv6 Address	Enter the starting IPv6 address in the range of this sub-VLAN here.
End IPv6 Address	Enter the ending IPv6 address in the range of this sub-VLAN here.

Click the **Back** button to return to the previous page.

Click the **Apply** button to accept the changes made.

Auto Surveillance VLAN

Auto Surveillance Properties

This window is used to display and configure the auto surveillance VLAN properties.

To view the following window, click **L2 Features > VLAN > Auto Surveillance VLAN > Auto Surveillance Properties**, as shown below:

Auto Surveillance Properties

Global Settings

Surveillance VLAN Enabled Disabled

Surveillance VLAN ID (2-4094)

Surveillance VLAN CoS

Aging Time (1-65535) min

Port Settings

Unit From Port To Port State

Unit 1 Settings

Port	State
eth1/0/1	Disabled
eth1/0/2	Disabled
eth1/0/3	Disabled
eth1/0/4	Disabled
eth1/0/5	Disabled

Figure 5-35 Auto Surveillance Properties Window

The fields that can be configured in **Global Settings** are described below:

Parameter	Description
Surveillance VLAN	Select to enable or disable the surveillance VLAN feature here.
Surveillance VLAN ID	Enter the VLAN ID of the surveillance VLAN here. The range is from 2 to 4094. A normal VLAN needs to be created before assigning the VLAN as a surveillance VLAN.
Surveillance VLAN CoS	Enter the Class of Service (CoS) value for the surveillance VLAN here. The surveillance packets arriving at the surveillance VLAN enabled port are marked with the CoS specified here. The remarking of CoS allows the surveillance VLAN traffic to be distinguished from data traffic in quality of service. The range is from 0 to 7.
Aging Time	Enter the aging time value here. This is used to configure the aging time for aging out the surveillance VLAN dynamic member ports. The range is from 1 to 65535 minutes. When the last surveillance device connected to the port stops sending traffic and the MAC address of this surveillance device is aged out, the surveillance VLAN aging timer will be started. The port will be removed from the surveillance VLAN after expiration of surveillance VLAN aging timer. If the surveillance traffic resumes during the aging time, the aging timer will be cancelled.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Port Settings** are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the range of ports that will be used for this configuration here.
State	Select to enable or disable the surveillance VLAN feature on the specified port(s) here. When surveillance VLAN is enabled for a port, the port will automatically be learned as an untagged surveillance VLAN member and the received untagged surveillance packets will be forwarded to the surveillance VLAN. The received packets are determined as surveillance packets if the

Parameter	Description
	source MAC addresses of the packets comply with the Organizationally Unique Identifier (OUI) addresses.

Click the **Apply** button to accept the changes made.

MAC Settings and Surveillance Device

This window is used to display and configure surveillance devices and their MAC settings.

To view the following window, click **L2 Features > VLAN > Auto Surveillance VLAN > MAC Settings and Surveillance Device**, as shown below:

ID	Component Type	Description	MAC Address	Mask	
1	D-Link Device	IP Surveillance...	28-10-7B-00-00-00	FF-FF-FF-E0-00-00	Delete
2	D-Link Device	IP Surveillance...	28-10-7B-20-00-00	FF-FF-FF-F0-00-00	Delete
3	D-Link Device	IP Surveillance...	B0-C5-54-00-00-00	FF-FF-FF-80-00-00	Delete
4	D-Link Device	IP Surveillance...	F0-7D-68-00-00-00	FF-FF-FF-F0-00-00	Delete

Figure 5-36 MAC Settings and Surveillance Device Window

The fields that can be configured are described below:

Parameter	Description
Component Type	Select the component type here. Option to choose from are: <ul style="list-style-type: none"> • Video Management server - Specifies the surveillance device type as Video Management Server (VMS). • VMS Client/Remote Viewer - Specifies the surveillance device type as VMS client. • Video Encoder - Specifies the surveillance device type as Video Encoder. • Network Storage - Specifies the surveillance device type as Network Storage. • Other IP Surveillance Device - Specifies the surveillance device type as other IP Surveillance Devices.
Description	Enter the description for the user-defined OUI here. This string can be up to 32 characters long.
MAC Address	Enter the OUI MAC address here. If the source MAC addresses of the received packet matches any of the OUI pattern, the received packet is determined as a surveillance packet.
Mask	Enter the matching bitmask for the OUI MAC address here.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to delete the specified entry.

After selecting the **Auto Surveillance VLAN Summary** tab option, at the top of the page, the following page will be available.

Figure 5-37 MAC Settings and Surveillance Device (Auto Surveillance VLAN Summary) Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the stacking unit ID of the Switch that will be used in this display here.

Voice VLAN

Voice VLAN Global

This window is used to display and configure the global voice VLAN settings. This is used to enable the global voice VLAN function and to specify the voice VLAN on the Switch. The Switch has only one voice VLAN.

To view the following window, click **L2 Features > VLAN > Voice VLAN > Voice VLAN Global**, as shown below:

Figure 5-38 Voice VLAN Global Window

The fields that can be configured are described below:

Parameter	Description
Voice VLAN State	Select to globally enable or disable the voice VLAN feature here.
Voice VLAN ID	Enter the VLAN ID of the voice VLAN here. The VLAN to be specified as the voice VLAN needs to pre-exist before configuration. The range is from 2 to 4094.
Voice VLAN CoS	Select the CoS of the voice VLAN here. The range is from 0 to 7. The voice packets arriving at the voice VLAN enabled port are marked as the CoS specified here. The remarking of CoS packets allow the voice VLAN traffic to be distinguished from data traffic in Quality of Service.
Aging Time	Enter the aging time value here. This is used to configure the aging time for aging out the automatically learned voice device and voice VLAN information. When the last voice device connected to the port stops sending traffic and the

Parameter	Description
	MAC address of this voice device is aged out from FDB, the voice VLAN aging timer will be started. The port will be removed from the voice VLAN after the expiration of the voice VLAN aging timer. If voice traffic resumes during the aging time, the aging timer will be cancelled. The range is from 1 to 65535 minutes.

Click the **Apply** button to accept the changes made.

Voice VLAN Port

This window is used to display and configure the voice VLAN interface settings.

To view the following window, click **L2 Features > VLAN > Voice VLAN > Voice VLAN Port**, as shown below:

Voice VLAN Port

Voice VLAN Port

Unit: 1 | From Port: eth1/0/1 | To Port: eth1/0/1 | State: Disabled | Mode: Auto Untagged | Apply

Port	State	Mode
eth1/0/1	Disabled	Auto/Untag
eth1/0/2	Disabled	Auto/Untag
eth1/0/3	Disabled	Auto/Untag
eth1/0/4	Disabled	Auto/Untag
eth1/0/5	Disabled	Auto/Untag

Figure 5-39 Voice VLAN Port Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the range of ports that will be used for this configuration here.
State	Select to enable or disable the voice VLAN feature on the specified port(s) here. When the voice VLAN is enabled for a port, the received voice packets will be forwarded in the voice VLAN. The received packets are determined as voice packets if the source MAC addresses of packets complies with the OUI addresses.
Mode	<p>Select the mode here. Options to choose from are:</p> <ul style="list-style-type: none"> • Auto Untagged - Specifies that voice VLAN untagged membership will be automatically learned. • Auto Tagged - Specifies that voice VLAN tagged membership will be automatically learned. • Manual - Specifies that voice VLAN membership will be manually configured. <p>If auto-learning is enabled, the port will automatically be learned as a voice VLAN member. This membership will automatically be aged out. When the port is working in the auto-tagged mode and the port captures a voice device through the device's OUI, it will join the voice VLAN as a tagged member automatically. When the voice device sends tagged packets, the Switch will change its priority. When the voice device sends untagged packets, it will forward them in the Port VLAN ID (PVID).</p> <p>When the port is working in auto-untagged mode, and the port captures a voice device through the device's OUI, it will join the voice VLAN as an untagged</p>

Parameter	Description
	<p>member automatically. When the voice device sends tagged packets, the Switch will change its priority. When the voice device sends untagged packets, it will forward them in the voice VLAN.</p> <p>When the Switch receives LLDP-MED packets, it checks the VLAN ID, tagged flag, and priority flag. The Switch should follow the tagged flag and priority setting.</p>

Click the **Apply** button to accept the changes made.

Voice VLAN OUI

This window is used to display and configure the voice VLAN OUI settings. Use this window to add a user-defined OUI for the voice VLAN. The OUI for the voice VLAN is used to identify the voice traffic by using the voice VLAN function. If the source MAC address of the received packet matches any of the OUI patterns, the received packet is determined as a voice packet.

The user-defined OUI cannot be the same as the default OUI.

To view the following window, click **L2 Features > VLAN > Voice VLAN > Voice VLAN OUI**, as shown below:

OUI Address	Mask	Description	
00-01-E3-00-00-00	FF-FF-FF-00-00-00	Siemens	Delete
00-03-6B-00-00-00	FF-FF-FF-00-00-00	Cisco	Delete
00-09-6E-00-00-00	FF-FF-FF-00-00-00	Avaya	Delete
00-0F-E2-00-00-00	FF-FF-FF-00-00-00	Huawei&3COM	Delete
00-60-B9-00-00-00	FF-FF-FF-00-00-00	NEC&Philips	Delete
00-D0-1E-00-00-00	FF-FF-FF-00-00-00	Pingtel	Delete
00-E0-75-00-00-00	FF-FF-FF-00-00-00	Veritel	Delete
00-E0-BB-00-00-00	FF-FF-FF-00-00-00	3COM	Delete

Figure 5-40 Voice VLAN OUI Window

The fields that can be configured are described below:

Parameter	Description
OUI Address	Enter the voice VLAN OUI MAC address here.
Mask	Enter the matching bitmask for the voice VLAN OUI MAC address here.
Description	Enter the description for the user-defined OUI MAC address here. This string can be up to 32 characters long.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to delete the specified entry.

Voice VLAN Device

This window is used to view the voice VLAN device table.

To view the following window, click **L2 Features > VLAN > Voice VLAN > Voice VLAN Device**, as shown below:



Figure 5-41 Voice VLAN Device Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used in this display here.

Voice VLAN LLDP-MED Device

This window is used to view the voice VLAN LLDP-MED device table.

To view the following window, click **L2 Features > VLAN > Voice VLAN > Voice VLAN LLDP-MED Device**, as shown below:



Figure 5-42 Voice VLAN LLDP-MED Device Window

Private VLAN

This window is used to display and configure the private VLAN settings.

To view the following window, click **L2 Features > VLAN > Private VLAN**, as shown below:

The screenshot shows the 'Private VLAN' configuration window. It is divided into four sections:

- Private VLAN:** Includes fields for 'VID List' (3 or 2-5), 'State' (Disabled), and 'Type' (Community). An 'Apply' button is present.
- Private VLAN Association:** Includes fields for 'VID List' (3 or 2-5), 'Action' (Add), and 'Secondary VID List' (3 or 2-5). An 'Apply' button is present.
- Private VLAN Host Association:** Includes fields for 'Unit' (1), 'From Port' (eth1/0/1), 'To Port' (eth1/0/1), 'Primary VID', 'Secondary VID', and a 'Trunk' checkbox. A 'Remove Association' checkbox and an 'Apply' button are also present.
- Private VLAN Mapping:** Includes fields for 'Unit' (1), 'From Port' (eth1/0/1), 'To Port' (eth1/0/1), 'Primary VID', 'Action' (Add), 'Secondary VID List' (3 or 2-5), and a 'Remove Mapping' checkbox. An 'Apply' button is present.

At the bottom, there is a table with the following columns: Primary VLAN, Secondary VLAN, Type, and Interface. Below the table, it says 'Total Entries: 0'.

Figure 5-43 Private VLAN Window

The fields that can be configured for **Private VLAN** are described below:

Parameter	Description
VID List	Enter the private VLAN ID list here.
State	Select to enable or disable the private VLAN state here.
Type	Select the type of private VLAN that will be created here. Options to choose from are Community , Isolated , and Primary .

Click the **Apply** button to accept the changes made.

The fields that can be configured for **Private VLAN Association** are described below:

Parameter	Description
VID List	Enter the private VLAN ID list here.
Action	Select the action that will be taken for the private VLAN here. Options to choose from are Add , Remove , and Disabled .
Secondary VID List	Enter the secondary private VLAN ID here.

Click the **Apply** button to accept the changes made.

The fields that can be configured for **Private VLAN Host Association** are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the range of ports that will be used for this configuration here. Select the Trunk option to specify that the trunk port will be associated with the private VLAN host association.
Primary VID	Enter the primary private VLAN ID here.
Secondary VID	Enter the secondary private VLAN ID here. When ticking the Remove Association option, this specifies that this configuration will not be enabled.

Click the **Apply** button to accept the changes made.

The fields that can be configured for **Private VLAN Mapping** are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the range of ports that will be used for this configuration here. Select the Trunk option to specify that the trunk port will be associated with the private VLAN map.
Primary VID	Enter the primary private VLAN ID here.
Action	Select Add to add a new entry based in the information entered. Select Remove to remove an entry based in the information entered.
Secondary VID List	Enter the secondary private VLAN ID here. When ticking the Remove Mapping option, this specifies that this configuration will not be enabled.

Click the **Apply** button to accept the changes made.

VLAN Tunnel

Dot1q Tunnel

This window is used to display and configure the 802.1Q VLAN tunnel settings.

An 802.1Q tunnel port behaves as a User Network Interface (UNI) port of a service VLAN. The trunk ports which are tagged members of the service VLAN behave as the Network Node Interface (NNI) ports of the service VLAN.

Only configure the 802.1Q tunneling Ethernet type on ports that are connected to the provider bridge network, which receives and transmits the service VLAN tagged frames. If the tunnel Ethernet type is configured, the specified value will be the Tag Protocol ID (TPID) in the outer VLAN tag of the transmitted frames of the port. The specified TPID is also used to identify the service VLAN tag for the received frame on this port.

To view the following window, click **L2 Features > VLAN Tunnel > Dot1q Tunnel**, as shown below:

Dot1q Tunnel Settings

TPID Settings | **Dot1q Tunnel Port Settings**

Inner TPID (0x1-0xffff) 0x 8100

Unit: 1 | From Port: eth1/0/1 | To Port: eth1/0/1 | Outer TPID (0x1-0xffff): 0x 8100

Unit 1 Settings

Port	Outer TPID
eth1/0/1	0x8100
eth1/0/2	0x8100
eth1/0/3	0x8100
eth1/0/4	0x8100
eth1/0/5	0x8100

Figure 5-44 Dot1q Tunnel Window

The fields that can be configured are described below:

Parameter	Description
Inner TPID	Enter the inner TPID value here. This value is in the hexadecimal form. The range is from 0x1 to 0xFFFF. The inner TPID is used to decide if the ingress packet is C-tagged. The inner TPID can be configured per system.
Unit	Select the Switch unit ID that will be used here.
From Port - To Port	Select the port range that will be used here.
Outer TPID	Enter the outer TPID value here. This value is in the hexadecimal form. The range is from 0x1 to 0xFFFF.

Click the **Apply** button to accept the changes made.

After clicking the **Dot1q Tunnel Port Settings** tab, the following page will appear:

Figure 5-45 Dot1q Tunnel Settings (Dot1q Tunnel Port Settings) Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit ID that will be used here.
From Port - To Port	Select the port range that will be used here.
Trust Inner Priority	Select to enable or disable the 802.1Q Inner Trust Priority feature here. When the trusting priority option is enabled on an 802.1Q tunnel port, the priority of the VLAN tag in the received packets will be copied to the service VLAN tag.
Miss Drop	Select to enable or disable the Miss Drop feature here. If the VLAN mapping Miss Drop option is enabled on the receiving port, when the original VLAN of the received packets cannot match the VLAN mapping entries or rules on this port, the received packets will be dropped.
Insert Dot1q Tag	Enter the 802.1Q VLAN ID that is inserted to the untagged packets which are received on the 802.1Q tunnel port(s) here. The range is from 1 to 4094.
VLAN Mapping Profile	Enter the ID of the VLAN mapping profile here. A lower ID has a higher priority. The ID range is from 1 to 1000.
Action	Select Add to add a new entry based in the information entered. Select Remove to remove an entry based in the information entered.

Click the **Apply** button to accept the changes made.

VLAN Mapping

This window is used to display and configure the VLAN mapping settings. If a profile is applied on an interface, the Switch matches the incoming packets according to the rules of the profile. If the packet matches a rule, the action of the rule will be taken. This action may be adding or replacing the outer-VID, specifying the priority of the new outer-TAG or specifying the packet's new inner-VID.

The match order depends on the rule's sequence number in the profile and stopped when first matched. If the sequence number is not specified, it will be allocated automatically. The sequence number begins from 10 and increments 10. Multiple different types of profiles can be configured on one interface.

To view the following window, click **L2 Features > VLAN Tunnel > VLAN Mapping**, as shown below:

Figure 5-46 VLAN Mapping Window

The fields that can be configured are described below:

Parameter	Description
Ignore Strip Outer Tag	Select to enable or disable the transmitting packet to meet 1:1 VLAN translate rule on UNI egress.
Unit	Select the Switch unit ID that will be used here.
From Port - To Port	Select the port range that will be used here.
Port	Select the port that will be used for the search here.
Original VID List	Enter the original VLAN ID list here. The range is from 1 to 4094.
Original Inner VID	Enter the original inner VLAN ID here. The range is from 1 to 4094.
Action	Select the action that will be taken here. Options to choose from are Translate and Dot1q-tunnel . <ul style="list-style-type: none"> Translate - Specifies that the outer-VID will replace the outer-VID of the matched packets. Dot1q-tunnel - Specifies that the outer-VID will be added for matched packets.
VID	Enter the VLAN ID here. The range is from 1 to 4094.
Inner VID	Enter the inner VLAN ID here. The range is from 1 to 4094.
Priority	Select the 802.1p priority value here. The range is from 0 to 7. A higher value has a higher priority.

Parameter	Description
Egress Priority	Select the egress C-tag priority for the VLAN tunnel interface here. Options to choose from are: <ul style="list-style-type: none"> • Copy - Specifies that a copy of the service VLAN priority is used. • 0 to 7 - Specifies the egress C-tag priority value.

Click the **Apply** button to accept the changes made.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Delete** button to delete the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

VLAN Mapping Profile

This window is used to display and configure the VLAN mapping profile settings.

To view the following window, click **L2 Features > VLAN Tunnel > VLAN Mapping Profile**, as shown below:

Figure 5-47 VLAN Mapping Profile Window

The fields that can be configured are described below:

Parameter	Description
Profile ID	Enter the ID of the VLAN mapping profile here. A lower ID has a higher priority. The ID range is from 1 to 1000.
Type	Select the profile type here. Different profiles can match different fields. Options to choose from are Ethernet , IP , IPv6 , and Ethernet-IP . <ul style="list-style-type: none"> • Ethernet - The profile can match Layer 2 fields. • IP - The profile can match Layer 3 IP fields. • IPv6 - The profile can match IPv6 destination or source addresses. • Ethernet-IP - The profile can match Layer 2 and Layer 3 IP fields.

Click the **Add Profile** button to add a new VLAN mapping profile.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Add Rule** button to create a new rule.

Click the **Delete** button to remove the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Add Rule** button next to an **Ethernet** type profile, the following page will appear.

Figure 5-48 VLAN Mapping Profile (Ethernet, Add Rule) Window

The fields that can be configured are described below:

Parameter	Description
Rule ID	Enter the VLAN mapping rule ID here. If not specified, the rule ID begins from 10 and is incremented by 10 for every new rule. The range is from 1 to 10000.
Src-MAC Address	Enter the source MAC address here.
Dst-MAC Address	Enter the destination MAC address here.
Priority	Select the 802.1p priority value here. The range is from 0 to 7. A higher value has a higher priority.
Inner VID	Enter the inner VLAN ID here. The range is from 1 to 4094.
Ethernet Type	Enter the Ethernet type value here. The range is from 0x0 to 0xFFFF.
Action	Select the action that will be taken here. Options to choose from are Dot1q-Tunnel and Translate . <ul style="list-style-type: none"> • Dot1q-Tunnel - Specifies that the outer-VID will be added for matched packets. • Translate - Specifies that the outer-VID will replace the outer-VID of the matched packets.
New Outer VID	Enter the new outer VLAN ID here. The range is from 1 to 4094.
802.1P Priority	Select the 802.1p priority value here. The range is from 0 to 7. A higher value has a higher priority.
New Inner VID	After selecting Dot1q-Tunnel as the action, enter the new inner VLAN ID here. The range is from 1 to 4094. This option is only available when Dot1q-Tunnel is selected as the action.

Click the **Back** button to return to the previous window.

Click the **Apply** button to accept the changes made.

After clicking the **Add Rule** button next to an **IP** type profile, the following page will appear.

Figure 5-49 VLAN Mapping Profile (IP, Add Rule) Window

The fields that can be configured are described below:

Parameter	Description
Rule ID	Enter the VLAN mapping rule ID here. If not specified, the rule ID begins from 10 and is incremented by 10 for every new rule. The range is from 1 to 10000
Src-IP Address (IP/Mask)	Enter the source IPv4 address and subnet mask here.
Dst-IP Address (IP/Mask)	Enter the destination IPv4 address and subnet mask here.
DSCP	Enter the DSCP value here. The range is from 0 to 63.
Source Port	Enter the source TCP/UDP port number here. The range is from 1 to 65535.
Destination Port	Enter the destination TCP/UDP port number here. The range is from 1 to 65535.
IP Protocol	Enter the Layer 3 IP protocol value here. The range is from 0 to 255.
Action	Select the action that will be taken here. Options to choose from are Dot1q-Tunnel and Translate . <ul style="list-style-type: none"> • Dot1q-Tunnel - Specifies that the outer-VID will be added for matched packets. • Translate - Specifies that the outer-VID will replace the outer-VID of the matched packets.
New Outer VID	Enter the new outer VLAN ID here. The range is from 1 to 4094.
802.1P Priority	Select the 802.1p priority value here. The range is from 0 to 7. A higher value has a higher priority.
New Inner VID	After selecting Dot1q-Tunnel as the action, enter the new inner VLAN ID here. The range is from 1 to 4094. This option is only available when Dot1q-Tunnel is selected as the action.

Click the **Back** button to return to the previous window.

Click the **Apply** button to accept the changes made.

After clicking the **Add Rule** button next to an **IPv6** type profile, the following page will appear.

The screenshot shows a web form titled "Add VLAN Mapping Rule". The form fields are as follows:

- Profile ID: 3
- Type: IPv6
- Rule ID (1-10000): 2
- Src-IPv6 Address: 2013::1/16
- Dst-IPv6 Address: 3333::1/8
- Action: Dot1q-Tunnel (dropdown menu)
- 802.1P Priority: None (dropdown menu)
- New Inner VID (1-4094): (empty text box)

At the bottom right of the form, there are two buttons: "Back" and "Apply".

Figure 5-50 VLAN Mapping Profile (IPv6, Add Rule) Window

The fields that can be configured are described below:

Parameter	Description
Rule ID	Enter the VLAN mapping rule ID here. If not specified, the rule ID begins from 10 and is incremented by 10 for every new rule. The range is from 1 to 10000
Src-IPv6 Address	Enter the source IPv6 address and prefix length here.
Dst-IPv6 Address	Enter the destination IPv6 address and prefix length here.
Action	Select the action that will be taken here. Options to choose from are Dot1q-Tunnel and Translate . <ul style="list-style-type: none"> • Dot1q-Tunnel - Specifies that the outer-VID will be added for matched packets. • Translate - Specifies that the outer-VID will replace the outer-VID of the matched packets.
New Outer VID	Enter the new outer VLAN ID here. The range is from 1 to 4094.
802.1P Priority	Select the 802.1p priority value here. The range is from 0 to 7. A higher value has a higher priority.
New Inner VID	After selecting Dot1q-Tunnel as the action, enter the new inner VLAN ID here. The range is from 1 to 4094. This option is only available when Dot1q-Tunnel was selected as the action.

Click the **Back** button to return to the previous window.

Click the **Apply** button to accept the changes made.

After clicking the **Add Rule** button next to an **Ethernet-IP** type profile, the following page will appear.

Add VLAN Mapping Rule

VLAN Mapping Rule

Profile ID: 4

Type: Ethernet-IP

Rule ID (1-10000):

Src-MAC Address:

Dst-MAC Address:

Priority:

Inner VID (1-4094):

Ethernet Type (0x0-0xffff): 0x0800

Src-IP Address (IP/Mask):

Dst-IP Address (IP/Mask):

DSCP (0-63):

Source Port (1-65535):

Destination Port (1-65535):

IP Protocol (0-255):

Action: (1-4094)

802.1P Priority:

New Inner VID (1-4094):

Figure 5-51 VLAN Mapping Profile (Ethernet-IP, Add Rule) Window

The fields that can be configured are described below:

Parameter	Description
Rule ID	Enter the VLAN mapping rule ID here. If not specified, the rule ID begins from 10 and is incremented by 10 for every new rule. The range is from 1 to 10000
Src-MAC Address	Enter the source MAC address here.
Dst-MAC Address	Enter the destination MAC address here.
Priority	Select the 802.1p priority value here. The range is from 0 to 7. A higher value has a higher priority.
Inner VID	Enter the inner VLAN ID here. The range is from 1 to 4094.
Ethernet Type	Enter the Ethernet type value here. The range is from 0x0 to 0xFFFF.
Src-IP Address	Enter the source IPv4 address and subnet mask here.
Dst-IP Address	Enter the destination IPv4 address and subnet mask here.
DSCP	Enter the DSCP value here. The range is from 0 to 63.
Source Port	Enter the source TCP/UDP port number here. The range is from 1 to 65535.
Destination Port	Enter the destination TCP/UDP port number here. The range is from 1 to 65535.
IP Protocol	Enter the Layer 3 IP protocol value here. The range is from 0 to 255.
Action	Select the action that will be taken here. Options to choose from are Dot1q-Tunnel and Translate . <ul style="list-style-type: none"> Dot1q-Tunnel - Specifies that the outer-VID will be added for matched packets. Translate - Specifies that the outer-VID will replace the outer-VID of the matched packets.
New Outer VID	Enter the new outer VLAN ID here. The range is from 1 to 4094.

Parameter	Description
802.1P Priority	Select the 802.1p priority value here. The range is from 0 to 7. A higher value has a higher priority.
New Inner VID	After selecting Dot1q-Tunnel as the action, enter the new inner VLAN ID here. The range is from 1 to 4094. This option is only available when Dot1q-Tunnel was selected as the action.

Click the **Back** button to return to the previous window.

Click the **Apply** button to accept the changes made.

STP

This Switch supports three versions of the Spanning Tree Protocol (STP): IEEE 802.1D-1998 STP, IEEE 802.1D-2004 Rapid STP, and IEEE 802.1Q-2005 MSTP. The IEEE 802.1D-1998 STP standard will be familiar to most networking professionals. However, as IEEE 802.1D-2004 RSTP and IEEE 802.1Q-2005 MSTP have been recently introduced to D-Link managed Ethernet Switches, a brief introduction to the technology is provided below followed by a description of how to set up IEEE 802.1D-1998 STP, IEEE 802.1D-2004 RSTP, and IEEE 802.1Q-2005 MSTP.

802.1Q-2005 MSTP

The Multiple Spanning Tree Protocol (MSTP) is a standard defined by the IEEE community that allows multiple VLANs to be mapped to a single spanning tree instance, which will provide multiple pathways across the network. Therefore, these MSTP configurations will balance the traffic load, preventing wide scale disruptions when a single spanning tree instance fails. This will allow for faster convergences of new topologies for the failed instance.

Frames designated for these VLANs will be processed quickly and completely throughout interconnected bridges utilizing any of the three spanning tree protocols (STP, RSTP or MSTP).

A Multiple Spanning Tree Instance (MSTI) ID will classify these instances. MSTP will connect multiple spanning trees with a Common and Internal Spanning Tree (CIST). The CIST will automatically determine each MSTP region, its maximum possible extent and will appear as one virtual bridge that runs a single spanning tree instance. Frames assigned to different VLANs will follow different data routes within administratively established regions on the network, continuing to allow simple and full processing of frames, regardless of administrative errors in defining VLANs and their respective spanning trees.

Each Switch utilizing the MSTP on a network will share a single MSTP configuration that will have the following three attributes:

- A configuration name defined by an alphanumeric string of up to 32 characters (defined in the **MST Configuration Identification** window in the **Configuration Name** field).
- A configuration revision number (named here as a **Revision Level** and found in the **MST Configuration Identification** window)
- A 4094-element table (defined here as a VID List in the **MST Configuration Identification** window), which will associate each of the possible 4094 VLANs supported by the Switch for a given instance.

To utilize the MSTP function on the Switch, three steps need to be taken:

- The Switch must be set to the MSTP setting (found in the **STP Global Settings** window in the **STP Mode** field).
- The correct spanning tree priority for the MSTP instance must be entered (defined here as a **Priority** in the **MSTP Port Information** window when configuring MSTI ID settings).
- VLANs that will be shared must be added to the MSTP Instance ID (defined here as a **VID List** in the **MST Configuration Identification** window when configuring an MSTI ID settings).

802.1D-2004 Rapid Spanning Tree

The Switch implements three versions of the Spanning Tree Protocol, the Multiple Spanning Tree Protocol (MSTP) as defined by IEEE 802.1Q-2005, the Rapid Spanning Tree Protocol (RSTP) as defined by IEEE 802.1D-2004 and a version compatible with IEEE 802.1D-1998. RSTP can operate with legacy equipment implementing IEEE 802.1D-1998, however the advantages of using RSTP will be lost. This section introduces some new Spanning Tree concepts and illustrates the main differences between the two protocols.

Port Transition States

An essential difference between the three protocols is in the way ports transition to a forwarding state and in the way this transition relates to the role of the port (forwarding or not forwarding) in the topology. MSTP and RSTP combine the transition states Disabled, Blocking and Listening used in 802.1D-1998 and creates a single state called Discarding. In either case, ports do not forward packets. In the STP port transition states Disabled, Blocking or Listening or in the RSTP/MSTP port state Discarding, there is no functional difference, the port is not active in the network topology. Table 7-3 below compares how the three protocols differ regarding the port state transition.

All three protocols calculate a stable topology in the same way. Every segment will have a single path to the root bridge. All bridges listen for BPDU packets. However, BPDU packets are sent more frequently, with every Hello packet. BPDU packets are sent even if a BPDU packet was not received. Therefore, each link between bridges is sensitive to the status of the link. Ultimately this difference results in faster detection of failed links, and therefore faster topology adjustment. A drawback of IEEE 802.1D-1998 is this absence of immediate feedback from adjacent bridges.

802.1Q-2005 MSTP	802.1D-2004 RSTP	802.1D-1998 STP	Forwarding	Learning
Disabled	Disabled	Disabled	No	No
<i>Discarding</i>	<i>Discarding</i>	<i>Blocking</i>	No	No
<i>Discarding</i>	<i>Discarding</i>	<i>Listening</i>	No	No
<i>Learning</i>	<i>Learning</i>	<i>Learning</i>	No	Yes
Forwarding	Forwarding	Forwarding	Yes	Yes

RSTP is capable of a more rapid transition to the Forwarding state. RSTP no longer relies on timer configurations and RSTP-compliant bridges are sensitive to feedback from other RSTP-compliant bridge links. Ports do not need to wait for the topology to stabilize before transitioning to a Forwarding state. In order to allow this rapid transition, the protocol introduces two new variables: the Edge Port and the Point-to-Point (P2P) port.

Edge Port

A port can be configured as an Edge Port if it is directly connected to a segment where a loop cannot be created. An example would be a port connected directly to a single workstation. Ports that are designated as edge ports transition to a forwarding state immediately without going through the Listening and Learning states. An Edge Port loses its status if it receives a BPDU packet, after which it immediately becomes a normal spanning tree port.

P2P Port

A P2P port is also capable of rapid transition. P2P ports may be used to connect to other bridges. Under RSTP/MSTP, all ports operating in full-duplex mode are considered to be P2P ports unless manually overridden through configuration.

802.1D-1998/802.1D-2004/802.1Q-2005 Compatibility

MSTP or RSTP can interoperate with legacy equipment and are capable of automatically adjusting BPDU packets to 802.1D-1998 format when necessary. However, any segment using 802.1D-1998 STP will not benefit from the rapid transition and rapid topology change detection of MSTP or RSTP. The protocol also includes a variable used for migration in the event that legacy equipment on a segment is updated to use RSTP or MSTP.

The Spanning Tree Protocol (STP) operates on two levels:

- On the Switch level, the settings are globally implemented.
- On the port level, the settings are implemented on a user-defined group of ports.

STP Global Settings

This window is used to display and configure the global STP settings.

To view the following window, click **L2 Features > STP > STP Global Settings**, as shown below:

Figure 5-52 STP Global Settings Window

The field that can be configured for **STP State** is described below:

Parameter	Description
STP State	Select to enable or disable the global STP state here.

Click the **Apply** button to accept the changes made.

The fields that can be configured for **STP Traps** are described below:

Parameter	Description
STP New Root Trap	Select to enable or disable the STP New Root Trap option here.
STP Topology Change Trap	Select to enable or disable the STP Topology Change Trap option here.

Click the **Apply** button to accept the changes made.

The fields that can be configured for **STP Mode** are described below:

Parameter	Description
STP Mode	Select the STP mode used here. Options to choose from are MSTP , RSTP , and STP .

Click the **Apply** button to accept the changes made.

The fields that can be configured for **STP Priority** are described below:

Parameter	Description
Priority	Select the STP priority value here. This value is between 0 and 61440. By default, this value is 32768. The lower the value, the higher the priority.

Click the **Apply** button to accept the changes made.

The fields that can be configured for **STP Configuration** are described below:

Parameter	Description
Bridge Max Age	Enter the bridge Maximum Age value here. This value must be between 6 and 40 seconds. By default, this value is 20 seconds. The Maximum Age value may be set to ensure that old information does not endlessly circulate through redundant paths in the network, preventing the effective propagation of the new information. Set by the Root Bridge, this value will aid in determining that the Switch has spanning tree configuration values consistent with other devices on the bridged LAN.
Bridge Hello Time	After selecting RSTP/STP as the Spanning Tree Mode , this parameter will be available. Enter the bridge Hello Time value here. This value must be between 1 and 2 seconds. By default, this value is 2 seconds. This is the interval between two transmissions of BPDU packets sent by the Root Bridge to tell all other switches that it is indeed the Root Bridge. This field will only appear here when STP or RSTP is selected for the STP version. For MSTP, the Hello Time must be set on a port per-port basis.
Bridge Forward Time	Enter the bridge Forwarding Time value here. This value must be between 4 and 30 seconds. By default, this value is 15 seconds. Every port on the Switch spends this time in the Listening state while moving from the Blocking state to the Forwarding state.
TX Hold Count	Enter the Transmit Hold Count value here. This value must be between 1 and 10 times. By default, this value is 6 times. This value is used to set the maximum number of Hello packets transmitted per interval.
Max Hops	Enter the maximum number of hops that are allowed. This value must be between 6 and 40 hops. By default, this value is 20 hops. This value is used to set the number of hops between devices in a spanning tree region before the Bridge Protocol Data Unit (BPDU) packet sent by the Switch will be discarded. Each Switch on the hop count will reduce the hop count by one until the value reaches zero. The Switch will then discard the BPDU packet and the information held for the port will age out.
NNI BPDU Address	Select the NNI BPDU Address option here. Options to choose from are Dot1d and Dot1ad . By default, this option is Dot1d . This parameter is used to determine the BPDU protocol address for STP in the service provider network. It can use an 802.1d STP address and an 802.1ad service provider STP address.

Click the **Apply** button to accept the changes made.

STP Port Settings

This window is used to display and configure the STP port settings.

To view the following window, click **L2 Features > STP > STP Port Settings**, as shown below:

STP Port Settings

STP Port Settings

Unit From Port To Port

Cost (1-200000000, 0=Auto) State Guard Root

Link Type Port Fast TCN Filter

BPDU Forward Priority Hello Time (1-2) sec

Loop Guard

Unit 1 Settings									
Port	State	Cost	Guard Root	Link Type	Port Fast	TCN Filter	BPDU Forward	Priority	Loop Guard
eth1/0/1	Enabled	0/200000	Disabled	Auto/P2P	Edge/Non-Edge	Disabled	Disabled	128	Disabled
eth1/0/2	Enabled	0/200000	Disabled	Auto/P2P	Edge/Non-Edge	Disabled	Disabled	128	Disabled
eth1/0/3	Enabled	0/200000	Disabled	Auto/P2P	Edge/Non-Edge	Disabled	Disabled	128	Disabled
eth1/0/4	Enabled	0/200000	Disabled	Auto/P2P	Edge/Non-Edge	Disabled	Disabled	128	Disabled
eth1/0/5	Enabled	0/200000	Disabled	Auto/P2P	Edge/Non-Edge	Disabled	Disabled	128	Disabled
eth1/0/6	Enabled	0/200000	Disabled	Auto/P2P	Edge/Non-Edge	Disabled	Disabled	128	Disabled
eth1/0/7	Enabled	0/200000	Disabled	Auto/P2P	Edge/Non-Edge	Disabled	Disabled	128	Disabled

Figure 5-53 STP Port Settings Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the range of ports that will be used for this configuration here.
Cost	Enter the cost value here. This value must be between 1 and 200000000. This value defines a metric that indicates the relative cost of forwarding packets to the specified port list. Port cost can be set automatically or as a metric value. The default value is 0 (auto). Setting 0 for the external cost will automatically set the speed for forwarding packets to the specified port(s) in the list for optimal efficiency. The default port cost for a 100Mbps port is 200000, a Gigabit port is 20000, and a 10 Gigabit port is 2000. The lower the number, the greater the probability the port will be chosen to forward packets.
State	Select to enable or disable the STP port state.
Guard Root	Select to enable or disable the Guard Root function.
Link Type	Select the link type here. Options to choose from are Auto , P2P , and Shared . A full-duplex port is considered to have a Point-to-Point (P2P) connection. The port cannot transit into the forwarding state rapidly by setting the link type to Shared . By default this option is Auto .
Port Fast	<p>Select the Port Fast option here. Options to choose from are Network, Disabled, and Edge.</p> <ul style="list-style-type: none"> In the Network mode the port will remain in the non-port-fast state for three seconds. The port will change to the port-fast state if no BPDU is received and changes to the forwarding state. If the port received the BPDU later, it will change to the non-port-fast state. In the Disable mode, the port will always be in the non-port-fast state. It will always wait for the forward-time delay to change to the forwarding state. In the Edge mode, the port will directly change to the spanning-tree forwarding state when a link-up occurs without waiting for the forward-time delay. If the interface receives a BPDU later, its operation state changes to the non-port-fast state. <p>By default, this option is Network.</p>

Parameter	Description
TCN Filter	Select to enable or disable the TCN Filter option. When a port is set to the TCN filter mode, the TC event received by the port will be ignored. By default, this option is Disabled .
BPDU Forward	Select to enable or disable BPDU forwarding. If enabled, the received STP BPDU will be forwarded to all VLAN member ports in the untagged form. By default, this option is Disabled .
Priority	Select the priority value here. Options to choose from are 0 to 240 . By default this option is 0 . A lower value has higher priority.
Hello Time	Enter the hello time value here. This value must be between 1 and 2 seconds. This value specifies the interval that a designated port will wait between the periodic transmissions of each configuration message.
Loop Guard	Select to enable or disable the Loop Guard feature on the specified port(s) here. The STP Loop Guard feature provides additional protection against Layer 2 forwarding loops (STP loops). An STP loop is created when an STP blocking port in a redundant topology erroneously transitions to the Forwarding state. This usually happens because one of the ports in a physically redundant topology (not necessarily the STP blocking port) no longer receives STP BPDUs. In its operation, STP relies on continuous reception or transmission of BPDUs based on the port role. The designated port transmits BPDUs, and the non-designated port receives BPDUs. When one of the ports in a physically redundant topology no longer receives BPDUs, the STP considers the topology to be loop free. Eventually, an alternate port that was previously a Blocking or Backup port becomes Designated and moves to a Forwarding state. This situation creates a loop.

Click the **Apply** button to accept the changes made.

MST Configuration Identification

This window is used to display and configure the MST configuration identification settings. These settings will uniquely identify an MSTI configured on the Switch. The Switch initially possesses one Common Internal Spanning Tree (CIST) of which the user may modify the parameters for but cannot change or delete the MSTI ID.

To view the following window, click **L2 Features > STP > MST Configuration Identification**, as shown below:

MST Configuration Identification

MST Configuration Identification

Configuration Name: 80:26:89:8D:A7:00

Revision Level (0-65535): 0

Digest: AC36177F50283CD4B83821D8AB26DE62 Apply

Private VLAN Synchronize

Private VLAN Synchronize Apply

Instance ID Settings

Instance ID (1-64):

Action: Add VID

VID List: 1 or 3-5 Apply

Total Entries: 1

Instance ID	VID List	
CIST	1-4094	Edit Delete

1/1

Figure 5-54 MST Configuration Identification Window

The fields that can be configured for **MST Configuration Identification** are described below:

Parameter	Description
Configuration Name	Enter the MST. This name uniquely identifies the MSTI (Multiple Spanning Tree Instance). If a Configuration Name is not set, this field will show the MAC address to the device running MSTP.
Revision Level	Enter the revision level value here. This value must be between 0 and 65535. By default, this value is 0. This value, along with the Configuration Name, identifies the MSTP region configured on the Switch.

Click the **Apply** button to accept the changes made.

In the **Private VLAN Synchronize** section, the user can click the **Apply** button to synchronize the private VLANs.

The fields that can be configured for **Instance ID Settings** are described below:

Parameter	Description
Instance ID	Enter the instance ID here. This value must be between 1 and 64.
Action	Select the action that will be taken here. Options to choose from are Add VID and Remove VID .
VID List	Enter the VID list value here. This field is used to specify the VID range from configured VLANs set on the Switch.

Click the **Apply** button to accept the changes made.

Click the **Edit** button to re-configure the specific entry.

Click the **Delete** button to remove the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

STP Instance

This window is used to display and configure the STP instance settings.

To view the following window, click **L2 Features > STP > STP Instance**, as shown below:

STP Instance			
Total Entries: 1			
Instance	Instance State	Instance Priority	
CIST	Disabled	32768(32768 sysid 0)	<input type="button" value="Edit"/>
		1/1	<input type="button" value="Go"/>
Instance CIST			
		CIST Global Info[Mode RSTP]	
Bridge Address		80-26-89-8D-A7-00	
Designated Root Address / Priority		00-00-00-00-00-00 / 0	
Regional Root Bridge Address / Priority		00-00-00-00-00-00 / 0	
Designated Bridge Address / Priority		00-00-00-00-00-00 / 0	

Figure 5-55 STP Instance Window

The fields that can be configured are described below:

Parameter	Description
Instance Priority	After clicking the Edit button, enter the Instance Priority value here. The range is from 0 to 61440.

Click the **Edit** button to re-configure the specific entry.

Click the **Apply** button to accept the changes made.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

MSTP Port Information

This window is used to display and configure the MSTP port information settings.

To view the following window, click **L2 Features > STP > MSTP Port Information**, as shown below:

Figure 5-56 MSTP Port Information Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this display here.
Port	Select the port number that will be cleared here.
Cost	After clicking the Edit button, enter the cost value here. This value must be between 1 and 200000000.
Priority	After clicking the Edit button, select the priority value here. Options to choose from are 0 to 240 . By default this option is 0 . A lower value has higher priority.

Click the **Clear Detected Protocol** button to clear the detected protocol settings for the port selected.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Edit** button to re-configure the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

ERPS (G.8032)

Ethernet Ring Protection Switching (ERPS) (ITU-T G.8032) integrates mature Ethernet Operations, Administration, and Maintenance (OAM) functions and a simple Automatic Protection Switching (APS) protocol to provide sub-50ms protection for Ethernet traffic in a ring topology. It ensures that there are no loops formed at the Ethernet layer.

One link within a ring will be blocked to avoid a Loop (RPL, Ring Protection Link). When the failure happens, protection switching blocks the failed link and unblocks the RPL. When the failure clears, protection switching blocks the RPL again and unblocks the link on which the failure is cleared.

ERPS

This window is used to display and configure the Ethernet Ring Protection Switching (ERPS) settings. STP and Loopback Detection (LBD) should be disabled on the ring ports before enabling ERPS. The ERPS cannot be enabled before the R-APS VLAN ring ports, RPL port, and RPL owner are configured.



NOTE: Be aware that changing the ERPS version will lead to the restart of the running protocol.

To view the following window, click **L2 Features > ERPS (G.8032) > ERPS**, as shown below:

Figure 5-57 ERPS Window

The fields that can be configured in **ERPS Version Settings** are described below:

Parameter	Description
ERPS Version	<p>Select the ERPS version here. Options to choose from are G.8032v1 and G.8032v2.</p> <p>G.8032v2 provides the following functions:</p> <ul style="list-style-type: none"> • Supports multi-instance in a physical ring. • Supports operation commands: manual, force, and clear. • Supports to configure the sending of the R-APS PDU destination address with the RING-ID of the physical ring. <p>Before specifying G.8032v1 for a G.8032v2-running device, delete all ERPS configurations that G.8032v1 does not support. Otherwise, the version cannot be changed. Changing the ERPS version will lead to the restart of the running protocol.</p> <p>The following configurations will check when to change from G.8032v2 to G.8032v1:</p> <ul style="list-style-type: none"> • Manual switch or force switch command will be cleared. • The major ring instance and sub-ring instance of the interconnection node must have different R-APS VLAN IDs. • In a physical ring, only one instance is supported. <p>If Ethernet ring nodes running ITU-T G.8032v1 and ITU-T G.8032v2 co-exist on an Ethernet ring, the following configurations should be made on the G.8032v2 device:</p> <ul style="list-style-type: none"> • All physical ring IDs must have the default value of 1. • The major ring instance and sub-ring instance of the interconnection node must have different R-APS VLAN IDs.

Parameter	Description
	<ul style="list-style-type: none"> Manual switch or force switch command must not exist. The physical ring must have only one instance.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Ethernet Ring G.8032** are described below:

Parameter	Description
Ring Name	Enter the Ethernet Ring Protection (ERP) instance name here. This name can be up to 32 characters long.

Click the **Apply** button to create an ITU-T G.8032 ERP physical ring.

Click the **Edit Ring** button to modify an ITU-T G.8032 ERP physical ring.

Click the **Show Detail** button to view the ITU-T G.8032 ERP physical ring status information.

Click the **Delete** button to delete the specified ITU-T G.8032 ERP physical ring.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After click the **Edit Ring** button, the following window will appear.

The screenshot shows the 'Edit Ethernet Ring' window with the following fields and values:

- Ethernet Ring Name:** ring
- Instance ID (1-32):** [text input], None Specify
- Sub Ring Name:** 32 chars, None Specify
- Port0:** [1] [eth1/0/1], None Specify
- Port1:** [1] [None], None Specify
- Ring ID:** [text input], None Specify
- Ring Type:** [Major ring],

Buttons: Back, Apply

Figure 5-58 ERPS (Edit Ring) Window

The fields that can be configured are described below:

Parameter	Description
Instance ID	Select the checkbox and enter the ERP instance number here. This value must be between 1 and 32. Select the Specify radio button to configure this parameter as normal. Select the None radio button to revert this parameter to the default setting.
Sub Ring Name	Select the checkbox and enter the physical ring's sub-ring name here. This name can be up to 32 characters long. Select the Specify radio button to configure this parameter as normal. Select the None radio button to revert this parameter to the default setting.
Port0	Select the checkbox and then select the Switch unit ID and the port number that will be the first ring port of the physical ring. Select the Specify radio button to configure this parameter as normal. Select the None radio button to revert this parameter to the default setting.
Port1	Select the checkbox and then select the Switch unit ID and the port number that will be the second ring port of the physical ring. Select the None option, from the drop-down menu, specifies that the inter-connected node is a local node endpoint of an open ring. Select the Specify radio button to configure this parameter as normal. Select the None radio button to revert this parameter to the default setting.

Parameter	Description
Ring ID	Select the checkbox and enter the ring ID here. The range is from 1 to 239. Select the Specify radio button to configure this parameter as normal. Select the None radio button to revert this parameter to the default setting.
Ring Type	Select the checkbox and then select the ring type here. Options to choose from are Major Ring and Sub Ring .

Click the **Back** button to discard the changes made and return to the previous window.

Click the **Apply** button to accept the changes made.

After click the **Show Detail** button, the following window will appear.

The screenshot shows the 'ERPS Status' window with a 'Show Detail' view. It contains a table of configuration parameters:

Parameter	Value
Ethernet Ring	Ring
Admin Port0	eth1/0/10
Admin Port1	eth1/0/11
Ring Type	Major ring
Ring ID	1
Instance ID	1
Instance Status	Deactivated
R-APS Channel	0
Protected VLANs	
Port0	eth1/0/10, Forwarding
Port1	eth1/0/11, Forwarding
Profile	
Description	
Guard Timer	500 ms
Hold-Off Timer	0 ms
WTR Timer	5 min
Revertive	Enabled
MEL	1
RPL Role	None
RPL Port	-
Sub Ring Instance	none

A 'Back' button is located at the bottom right of the window.

Figure 5-59 ERPS (Show Detail) Window

Click the **Back** button to return to the previous window.

After selecting the **ERPS Brief** tab option, at the top of the page, the following page will be available.

The screenshot shows the 'ERPS Brief' window with two tabs: 'ERPS Status' and 'ERPS Brief'. The 'ERPS Brief' tab is active. It displays a table with the following data:

Ethernet Ring	Instance ID	Status	Port State
Ring	1	Deactivated	P0:eth1/0/10,Forwarding P1:eth1/0/12,Forwarding

An 'Edit Instance' button is located to the right of the table. Below the table is a pagination control showing '1/1' and navigation arrows, along with a 'Go' button.

Figure 5-60 ERPS (ERPS Brief) Window

Click the **Edit Instance** button to configure the ERP instance.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After click the **Edit Instance** button, the following window will appear.

The screenshot shows the 'Edit Ethernet Instance' window with the following fields and values:

- Ethernet Ring Name: Ring
- Instance ID: 1
- Description: 64 chars None Specify
- R-APS Channel VLAN (1-4094): None Specify
- Inclusion VLAN List: 1,3-5 None Specify
- MEL (0-7): 1 None Specify
- Profile Name: 32 chars None Specify
- RPL Port: Port0
- RPL Role: Owner None Specify
- Activate: Disabled
- Sub Ring Instance (1-32): None Specify
- Force Ring Port Block: Port0
- Manual Ring Port Block: Port0

Buttons at the bottom right: Back, Apply, Clear.

Figure 5-61 ERPS (ERPS Brief, Edit Instance) Window

The fields that can be configured are described below:

Parameter	Description
Description	Select the checkbox and enter the ERP instance description here. This description can be up to 64 characters long. Select the Specify radio button to configure this parameter as normal. Select the None radio button to revert this parameter to the default setting.
R-APS Channel VLAN	Select the checkbox and enter the R-APS channel VLAN ID for the ERP instance here. The APS channel VLAN of a sub-ring instance is also the virtual channel of the sub-ring. This value must be between 1 and 4094. Select the Specify radio button to configure this parameter as per normal. Select the None radio button to revert this parameter to the default setting.
Inclusion VLAN List	Select the checkbox and enter the inclusion VLAN list here. A range is identified when a hyphen (-) is used. For example VLANs 1 to 5 can be entered as 1-5. A list is identified when commas (,) are used. For example, use VLANs 1,3,5. The VLANs specified here will be protected by the ERP mechanism. Select the Specify radio button to configure this parameter as normal. Select the None radio button to revert this parameter to the default setting.
MEL	Select the checkbox and enter the ring MEL value of the ERP instance here. This value must be between 0 and 7. The configured MEL value of all ring nodes that participate in the same ERP instance should be identical. Select the Specify radio button to configure this parameter as normal. Select the None radio button to revert this parameter to the default setting.
Profile Name	Select the checkbox and enter the G.8032 profile name here that will be associated with this ERP instance. Multiple ERP instances can be associated with the same G.8032 profile. The instances associated with the same profile protect the same set of VLANs, or the VLANs protected by one instance are a subset of LANs protected by another instance. This name can be up to 32 characters long. Select the Specify radio button to configure this parameter as normal. Select the None radio button to revert this parameter to the default setting.
RPL Port	Select the checkbox and then select the RPL port option here. Options to choose from are Port0 and Port1 . The option selected will be configured as the RPL port.
RPL Role	Select the checkbox and then select whether this node is the RPL owner or neighbor. Options to choose from are Owner and Neighbor . Select the

Parameter	Description
	Specify radio button to configure this parameter as normal. Select the None radio button to revert this parameter to the default setting.
Activate	Select the checkbox and then select whether or not to activate this ERP instance. Options to choose from are Enabled and Disabled . Enabling this option will activate this ERP instance.
Sub Ring Instance	Select the checkbox and enter the identifier of the ERP instance here. This is used to specify the sub-ring instance of a physical ring instance. The range is from 1 to 32. Select the Specify radio button to configure this parameter as normal. Select the None radio button to revert this parameter to the default setting.
Force Ring Port Block	Select the checkbox and select the ERP instance port that will be blocked here. This forcibly blocks an instance port immediately after force is configured, irrespective of whether link failures have occurred. Options to choose from are Port0 and Port1 .
Manual Ring Port Block	Select the checkbox and select the ERP instance port that will be blocked here. This forcibly blocks a port on which MS is configured when link failures and FS conditions are absent. Options to choose from are Port0 and Port1 .

Click the **Back** button to discard the changes made and return to the previous window.

Click the **Apply** button to accept the changes made.

Click the **Clear** button to clear the forced or manual configuration associated with this entry.

ERPS Profile

This window is used to display and configure the Ethernet Ring G.8032 Profile settings.

To view the following window, click **L2 Features > ERPS (G.8032) > ERPS Profile**, as shown below:

Figure 5-62 ERPS Profile Window

The fields that can be configured are described below:

Parameter	Description
Profile Name	Enter the G.8032 profile name here. This name can be up to 32 characters long. Multiple ERP instances can be associated with the same G.8032 profile. The instances associated with the same profile protect the same set of VLANs, or the VLANs protected by one instance are a subset of LANs protected by another instance.

Click the **Apply** button to associate the G.8032 profile with the ERP instance created.

Click the **Edit** button to modify the specified G.8032 profile.

Click the **Delete** button to disassociate the G.8032 profile.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After click the **Edit** button, the following window will appear.

Figure 5-63 ERPS Profile (Edit) Window

The fields that can be configured are described below:

Parameter	Description
TCN Propagation	Select the checkbox and then select the TCN propagation state. Options to choose from are Enable and Disabled . This function is used to enable the propagation of the topology change notifications from the sub-ERP instance to the major instance.
Revertive	Select the checkbox and then select the revertive state. Options to choose from are Enable and Disabled . This function is used to revert back to the working transport entity, for example, when the RPL is blocked.
Guard Timer	Select the checkbox and enter the guard timer value here. This value must be between 10 and 2000 milliseconds. By default, this value is 500 milliseconds.
Hold-Off Timer	Select the checkbox and enter hold-off timer value here. This value must be between 0 and 10 seconds. By default, this value is 0 seconds.
WTR Timer	Select the checkbox and enter the Wait To Restore (WTR) timer value here. This value must be between 1 and 12 minutes. By default, this value is 5 minutes.

Click the **Back** button to discard the changes made and return to the previous window.

Click the **Apply** button to accept the changes made.

Loopback Detection

The Loopback Detection (LBD) function is used to detect the loop created by a specific port. This feature is used to temporarily shut down a port on the Switch when a CTP (Configuration Testing Protocol) packet has been looped back to the Switch. When the Switch detects CTP packets received from a port or a VLAN, this signifies a loop on the network. The Switch will automatically block the port or the VLAN and send an alert to the administrator. The Loopback Detection port will restart (change to normal state) when the Loopback Detection Recover Time times out. The Loopback Detection function can be implemented on a range of ports at a time. The user may enable or disable this function using the drop-down menu.

To view the following window, click **L2 Features > Loopback Detection**, as shown below:

Figure 5-64 Loopback Detection Window

The fields that can be configured in **Loopback Detection Global Settings** are described below:

Parameter	Description
Loopback Detection State	Select to enable or disable loopback detection. The default is Disabled .
Mode	Select the loopback detection mode. Options to choose from are Port-based and VLAN-based .
Enabled VLAN ID List	Enter the VLAN ID for loop detection. This only takes effect when VLAN-based is selected in the Mode drop-down list.
Interval	Enter the interval in seconds that the device will use to transmit Configuration Test Protocol (CTP) packets to detect a loopback event. The valid range is from 1 to 32767 seconds. The default setting is 10 seconds.
Trap State	Select to enable or disable the loopback detection trap state.
Action Mode	Select the action mode here. Option to choose from are: <ul style="list-style-type: none"> • Shutdown - Specifies to shut down the port in the port-based mode or block traffic on the specific VLAN in the VLAN-based mode when a loop has been detected. • None - Specifies not to shut down the port in the port-based mode or block traffic on the specific VLAN in the VLAN-based mode when a loop has been detected.
Address Type	Select the address type here. Options to choose from are Multicast and Broadcast .

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Loopback Detection Port Settings** are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the appropriate port range used for the configuration here.
State	Select this option to enable or disable the state of the port.

Click the **Apply** button to accept the changes made.

Link Aggregation

Understanding Port Trunk Groups

Port trunk groups are used to combine a number of ports together to make a single high-bandwidth data pipeline. The Switch supports up to 32 port trunk groups with up to 12 ports in each group.

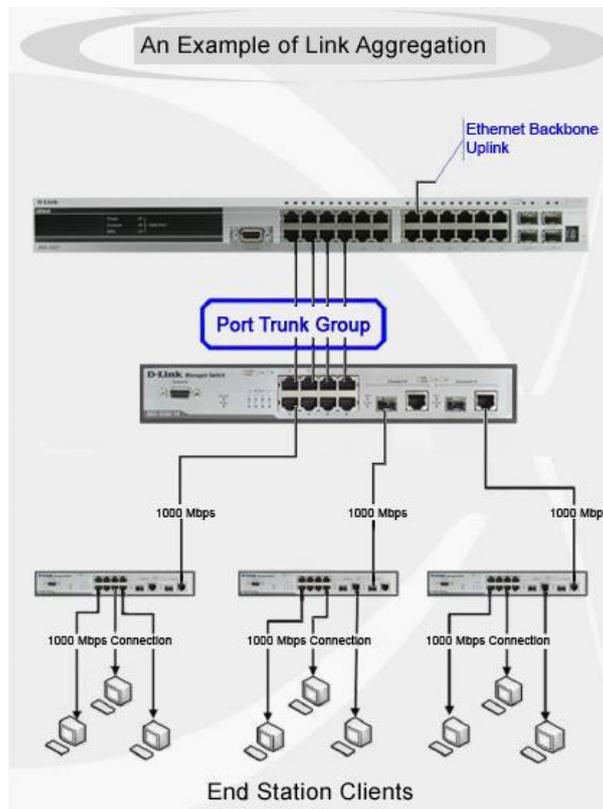


Figure 5-65 Example of Port Trunk Group

The Switch treats all ports in a trunk group as a single port. Data transmitted to a specific host (destination address) will always be transmitted over the same port in a trunk group. This allows packets in a data stream to arrive in the same order they were sent.

Link aggregation allows several ports to be grouped together and to act as a single link. This results in a bandwidth that is a multiple of a single link's bandwidth.

Link aggregation is most commonly used to link bandwidth intensive network devices, such as servers, to the backbone of a network.

The Switch allows the creation of up to 32 link aggregation groups, each group consisting of up to 12 links (ports). Each port can only belong to a single link aggregation group.

Load balancing is automatically applied to the ports in the aggregated group, and a link failure within the group causes the network traffic to be directed to the remaining links in the group.

The Spanning Tree Protocol will treat a link aggregation group as a single link. If two redundant link aggregation groups are configured on the Switch, STP will block one entire group; in the same way STP will block a single port that has a redundant link.



NOTE: If any ports within the trunk group become disconnected, packets intended for the disconnected port will be load shared among the other linked ports of the link aggregation group.

This window is used to display and configure the link aggregation settings. To view the following window, click **L2 Features > Link Aggregation**, as shown below:

Figure 5-66 Link Aggregation Window

The fields that can be configured for **Link Aggregation** are described below:

Parameter	Description
System Priority	Enter the system priority value used here. This value must be between 1 and 65535 . By default, this value is 32768 . The system priority determines which ports can join a port-channel and which ports are put in the stand-alone mode. The lower value has a higher priority. If two or more ports have the same priority, the port number determines the priority.
Load Balance Algorithm	Select the load balancing algorithm that will be used here. Options to choose from are Source MAC , Destination MAC , Source Destination MAC , Source IP , Destination IP , Source Destination IP , Source L4 Port , Destination L4 Port , and Source Destination L4 Port . By default, this option is Source Destination MAC .

Click the **Apply** button to accept the changes made.

The fields that can be configured for **Channel Group Information** are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the list of ports that will be associated with this configuration here.
Group ID	Enter the channel group number here. This value must be between 1 and 32 . The system will automatically create the port-channel when a physical port first joins a channel group. An interface can only join one channel-group.
Mode	Select the mode option here. Options to choose from are On , Active , and Passive . If the mode On is specified, the channel group type is static. If the mode Active or Passive is specified, the channel group type is LACP. A channel group can only consist of either static members or LACP members. Once the type of channel group has been determined, other types of interfaces cannot join the channel group.

Click the **Add** button to add a new channel group.

Click the **Delete Member Port** button, to delete the member port(s) specified from the group.

Click the **Delete Channel** button to delete the specified channel group.

Click the **Show Detail** button to view more detailed information about the channel.

After clicking the **Show Detail** button, the following page will be available.

Port Channel

Port Channel Description

Port Channel: 1
 Description: Apply

Port	Status	Administrative	Description
Port-channel1	up	enabled	Delete Description

Port Channel Information

Port Channel: 1
 Protocol: Static

Port Channel Detail Information

Port	LACP Timeout	Working Mode	LACP State	Port Priority	Port Number	
eth1/0/3	None	None	bndl	None	None	Edit
eth1/0/4	None	None	down	None	None	Edit

Port Channel Neighbor Information

Port	Partner System ID	Partner PortNo	Partner LACP Timeout	Partner Working Mode	Partner Port Priority
eth1/0/3	None	None	None	None	None
eth1/0/4	None	None	None	None	None

Note:
 LACP State:
 bndl: Port is attached to an aggregator and bundled with other ports.
 hot-sby: Port is in a hot-standby state.
 down: Port is down. Back

Figure 5-67 Link Aggregation (Channel Detail) Window

The fields that can be configured are described below:

Parameter	Description
Description	Enter the description for the port channel here. This string can be up to 64 characters long.

Click the **Apply** button to accept the changes made.

Click the **Delete Description** button to delete the description for the port channel.

Click the **Edit** button to re-configure the specific entry.

Click the **Back** button to return to the previous page.

MLAG

Multi-Chassis Link Aggregation Group (MLAG) can be used to increase bandwidth to switches in the network, prevent port blocking and unnecessary re-convergence delays, and provide a reliable fail-over solution in the event that a switch or a cable connection fails.

An MLAG peer Switch can connect to another MLAG peer Switch, in the same MLAG domain, through Peer-Link ports configured on them. MLAG partner switches, connected to the MLAG peer Switches, will perceive the two MLAG peer switches as a single MLAG switch in the network. The two MLAG peer switches will operate as two separate stand-alone Switches except for all MLAG functions. Data traffic can be carried by all links in the MLAG across many physically diverse topologies.

Two identical Switches running on the same firmware version must be used to create the MLAG peer connection. The following settings must be identical on MLAG peer switches to prevent instability: Link Aggregation, MLAG Port-channel, Interface, and VLAN settings.

MLAG peer switches must be stand-alone switches with the physical stacking feature disabled.

MLAG Settings

This window is used to display and configure the MLAG settings. The MLAG settings must be configured on the Switch before connecting to another MLAG peer Switch. The configuration only takes effect after the Switch was rebooted. All switches in the group must run the same MLAG version.

To view the following window, click **L2 Features > MLAG > MLAG Settings**, as shown below:

The screenshot shows the 'MLAG Settings' window. At the top, there is a section for 'MLAG State' with two radio buttons: 'Enabled' (unselected) and 'Disabled' (selected). An 'Apply' button is located to the right of the radio buttons.

Figure 5-68 MLAG Settings (Disabled) Window

The fields that can be configured are described below:

Parameter	Description
MLAG State	Select to enable or disable the MLAG function here.

Click the **Apply** button to accept the changes made.

After MLAG was enabled and the Switch was rebooted, the following page will appear.

The screenshot shows the 'MLAG Settings' window with 'MLAG State' set to 'Enabled'. Below this, there are several configuration sections:

- MLAG Configuration:** Includes input fields for 'Domain (1-255)' (value: 1), 'Device ID (1-2)' (value: 1), and 'Hello Interval (1-10)' (value: 3 sec). Each has a 'Default' checkbox which is unchecked. An 'Apply' button is at the bottom right.
- MLAG Peer Link Settings:** Includes a dropdown for 'Port' (value: PeerLink1/0/25) and a 'Peer Link' checkbox (unchecked). An 'Apply' button is at the bottom right.
- MLAG Information:** A summary table showing:

MLAG Information	
MLAG Status	Active
MAC Address	80-26-89-8D-A7-00
MLAG Device ID	1
MLAG Peer-link	25
- MLAG Neighbor Information:** A summary table showing:

MLAG Neighbor Information	
Neighbor Status	Active
MAC Address	F0-7D-68-30-36-00
MLAG Device ID	2
MLAG Peer-link	25

Figure 5-69 MLAG Settings (Enabled) Window

The fields that can be configured in **MLAG State** are described below:

Parameter	Description
MLAG State	Select to enable or disable the MLAG function here.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **MLAG Configuration** are described below:

Parameter	Description
Domain	Enter the MLAG domain ID here. The range is from 1 to 255. Select the Default option to use the default value which is 1.
Device ID	Enter the MLAG device ID for the Switch here. The range is from 1 to 2. Select the Default option to use the default value which is 1.
Hello Interval	Enter the MLAG hello interval here. This is the time that will elapse between the transmission of MLAG hello messages. The range is from 1 to 10 seconds. Select the Default option to use the default value which is 3 seconds.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **MLAG Peer Link Settings** are described below:

Parameter	Description
Port	Select the physical port number that will be used here.
Peer Link	Select this option to configure the selected port as a peer-link port. Peer-links are used to create a connection between MLAG peer Switches.

Click the **Apply** button to accept the changes made.

MLAG Group

This window is used to display the MLAG group information.

To view the following window, click **L2 Features > MLAG > MLAG Group**, as shown below:

The screenshot shows the 'MLAG Group' configuration window. It includes a legend for flags and LACP states, a search field for MLAG Group ID (1-32), and two tables. The first table shows 'Total Entries: 1' with columns for Group ID, Algorithm, Group Status, Actor System ID, and Partner System ID. The second table, 'Group 10 Information', shows details for Group 10 with columns for Device ID, Port, Flags, and LACP State.

MLAG Group

MLAG Group

Flag:
S - Port is requesting Slow LACPDUs F - Port is requesting fast LACPDU
A - Port is in active mode P - Port is in passive mode

LACP state:
bndl: Port is attached to an aggregator and bundled with other ports.
hot-sby: Port is in a hot-standby state.
down: Port is down

MLAG Group ID (1-32)

Total Entries: 1

Group ID	Algorithm	Group Status	Actor System ID	Partner System ID
10	src-dst-mac	Up	00-0F-36-31-AE-01	00-20-00-16-99-00

1/1 < < 1 > > Go

Group 10 Information

Device ID	Port	Flags	LACP State
1	1	FA	bndl
1	2	FA	bndl
2	1	FA	bndl
2	2	FA	bndl

1/1 < < 1 > > Go

Figure 5-70 MLAG Group Window

The fields that can be configured are described below:

Parameter	Description
MLAG Group ID	Enter the MLAG group ID here. The range is from 1 to 32.

Click the **Find** button to find and display MLAG group information based on the MLAG Group ID entered.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

Flex Links

This window is used to display and configure the Flex Link feature. Flex Links belong to a pair of Layer 2 interfaces where one interface is configured to act as a backup to the other. Flex Links provide link-level redundancy as an alternative to STP and LBD.

To view the following window, click **L2 Features > Flex Links**, as shown below:

Group	Primary Port	Backup Port	Status(Primary/Backup)
1	eth1/0/10	eth1/0/11	Inactive/Inactive

Figure 5-71 L2 Flex Links Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit of the primary port here.
Primary Port	Select the primary port here.
Unit	Select the Switch unit of the backup port here.
Backup Port	Select the backup port here.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the specific entry.



NOTE: Flex Link and STP, ERPS and LBD are mutually exclusive.

L2 Protocol Tunnel

This window is used to display and configure the Layer 2 protocol tunnel settings.

To view the following window, click **L2 Features > L2 Protocol Tunnel**, as shown below:

Protocol	Drop Counter	Tunneling Address
GVRP	0	01-05-5D-00-00-21
STP	0	01-05-5D-00-00-00
01-00-0C-CC-CC-CC	0	01-05-5D-00-00-10
01-00-0C-CC-CC-CD	0	01-05-5D-00-00-11

Figure 5-72 L2 Protocol Tunnel (L2 Protocol Tunnel Global Setting) Window

The fields that can be configured are described below:

Parameter	Description
CoS for Encapsulated Packets	Select the CoS value for encapsulated packets here. This value is between 0 and 7. Select the Default option to use the default value.
Drop Threshold	Enter the drop threshold value here. This value must be between 100 and 20000. By default, this value is 0. The tunneling of the Layer 2 protocol packets will consume CPU processing power in encapsulating, decapsulating, and forwarding of the packet. Use this option to restrict the CPU processing bandwidth consumed by specifying a threshold on the number of all Layer 2 protocol packets that can be processed by the system. When the maximum number of packets is exceeded, the excessive protocol packets are dropped. Select the Default option to use the default value.
Action	Select the action that will be taken here. Options to choose from are Add and Delete . This is used to add or delete an L2PT tunneling multicast address to or from the specified protocol.
Tunneled Protocol	Select the tunneled protocol here. Options to choose from are: <ul style="list-style-type: none"> • GVRP - Specifies that GVRP packets will be tunneled to the configured address. • STP - Specifies that STP packets will be tunneled to the configured address. • MAC - Specifies that protocol packets with the specified destination address will be tunneled to the configured address. • All - Specifies that all packets will be tunneled to the configured address.
Protocol MAC	After selecting the MAC option as the Tunneled Protocol , select the destination address that will be tunneled to the configured address here. Options to choose from are 01-00-0C-CC-CC-CC and 01-00-0C-CC-CC-CD .
MAC Address	Enter the MAC address which the specified protocol will be tunneled to here. This MAC address should not be an address reserved or used by other protocols.

Click the **Apply** button to accept the changes made.

After selecting the **L2 Protocol Tunnel Port Setting** tab option, at the top of the page, the following page will be available.

Unit	From Port	To Port	Action	Type	Tunneled Protocol	Protocol MAC	Threshold
1	eth1/0/1	eth1/0/1	Add	None	GVRP	01-00-0C-CC-CC-CC	

Port	Protocol	Shutdown Threshold	Drop Threshold	Encapsulation Counter	Decapsulation Counter	Drop Counter
eth1/0/1	gvrp	-	-	0	0	0

Figure 5-73 L2 Protocol Tunnel (L2 Protocol Tunnel Port Setting) Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the range of ports that will be used for this configuration here.
Action	Select Add to add a new entry based in the information entered. Select Delete to delete an entry based in the information entered.
Type	Select the type option here. Options to choose from are None , Shutdown , and Drop .
Tunneled Protocol	Select the tunneled protocol option here. Options to choose from are GVRP , STP , Protocol MAC , and All .
Protocol MAC	After selecting the Protocol MAC option as the Tunneled Protocol , the following option will be available. Select the protocol MAC option here. Options to choose from are 01-00-0C-CC-CC-CC and 01-00-0C-CC-CC-CD .
Threshold	After selecting the Shutdown or Drop option in the Type field, the following parameter will be available. Enter the threshold value here. This value must be between 1 and 4096 .

Click the **Apply** button to accept the changes made.

Click the **Clear All** button to clear all the counter information.

Click the **Clear** button to clear all the counter information of the specific entry.

After selecting the **L2 Protocol Tunnel Flood Packet Setting** tab option, at the top of the page, the following page will be available.

The screenshot shows the 'L2 Protocol Tunnel' configuration window with the 'L2 Protocol Tunnel Flood Packet Settings' tab selected. At the top, there are three tabs: 'L2 Protocol Tunnel Global Settings', 'L2 Protocol Tunnel Port Settings', and 'L2 Protocol Tunnel Flood Packet Settings'. Below the tabs, there are four configuration fields: 'Unit' (set to 1), 'From Port' (set to eth1/0/1), 'To Port' (set to eth1/0/1), and 'Flood L2PT Packet' (set to Disabled). An 'Apply' button is located to the right of these fields. Below the configuration fields is a section titled 'Unit 1 Settings' which contains a table with two columns: 'Port' and 'Flood L2PT Packet'. The table lists ports from eth1/0/1 to eth1/0/10, with all 'Flood L2PT Packet' values set to 'Disabled'.

Unit	From Port	To Port	Flood L2PT Packet
1	eth1/0/1	eth1/0/1	Disabled

Port	Flood L2PT Packet
eth1/0/1	Disabled
eth1/0/2	Disabled
eth1/0/3	Disabled
eth1/0/4	Disabled
eth1/0/5	Disabled
eth1/0/6	Disabled
eth1/0/7	Disabled
eth1/0/8	Disabled
eth1/0/9	Disabled
eth1/0/10	Disabled

Figure 5-74 L2 Protocol Tunnel (L2 Protocol Tunnel Port Setting) Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the range of ports that will be used for this configuration here.
Flood L2PT Packet	Select to enable or disable the feature that VLAN trunk ports use to forward tunneled packets to other VLAN trunk ports.

Click the **Apply** button to accept the changes made.

L2 Multicast Control

IGMP Snooping

Internet Group Management Protocol (IGMP) snooping allows the Switch to recognize IGMP queries and reports sent between network stations or devices and an IGMP host.

IGMP Snooping Settings

In order to use IGMP Snooping it must first be enabled for the entire Switch under IGMP **Global Settings** at the top of the window. You may then fine-tune the settings for each VLAN by clicking the corresponding **Edit** button. When enabled for IGMP snooping, the Switch can open or close a port to a specific multicast group member based on IGMP messages sent from the device to the IGMP host or vice versa. The Switch monitors IGMP messages and discontinues forwarding multicast packets when there are no longer hosts requesting that they continue.

To view the following window, click **L2 Features > L2 Multicast Control > IGMP Snooping > IGMP Snooping Settings**, as shown below:

Figure 5-75 IGMP Snooping Settings Window

The fields that can be configured in **Global Settings** are described below:

Parameter	Description
Global State	Select this option to globally enable or disable IGMP snooping.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **VLAN Status Settings** are described below:

Parameter	Description
VID	Enter a VLAN ID from 1 to 4094, and select to enable or disable IGMP snooping on the VLAN.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **IGMP Snooping Table** are described below:

Parameter	Description
VID	Enter a VLAN ID from 1 to 4094.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show All** button to view all the entries.

Click the **Show Detail** button to see the detail information of the specific VLAN.

Click the **Edit** button to re-configure the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Show Detail** button, the following window will appear.

IGMP Snooping VLAN Parameters	
VID	1
Status	Enabled
Minimum Version	v1
Fast Leave	Disabled (Host-based)
Report Suppression	Disabled
Suppression Time	10 sec
Querier State	Disabled
Query Version	v3
Query Interval	125 sec
Max Response Time	10 sec
Robustness Value	2
Last Member Query Interval	1 sec
Proxy Reporting	Disabled Source Address (0.0.0.0)
Rate Limit	0
Ignore Topology Change	Disabled

Figure 5-76 IGMP Snooping Settings (Show Detail) Window

The window displays the detail information about IGMP snooping VLAN.

Click the **Modify** button to edit the information in the following window.

After clicking the **Modify** or **Edit** button in IGMP Snooping Settings window, the following window will appear.

IGMP Snooping VLAN Settings	
VID (1-4094)	<input type="text" value="1"/>
Status	<input checked="" type="radio"/> Enabled <input type="radio"/> Disabled
Minimum Version	<input type="text" value="1"/> ▼
Fast Leave	<input type="radio"/> Enabled <input checked="" type="radio"/> Disabled
Report Suppression	<input type="radio"/> Enabled <input checked="" type="radio"/> Disabled
Suppression Time (1-300)	<input type="text" value="10"/>
Querier State	<input type="radio"/> Enabled <input checked="" type="radio"/> Disabled
Query Version	<input type="text" value="3"/> ▼
Query Interval (1-31744)	<input type="text" value="125"/> sec
Max Response Time (1-25)	<input type="text" value="10"/> sec
Robustness Value (1-7)	<input type="text" value="2"/>
Last Member Query Interval (1-25)	<input type="text" value="1"/> sec
Proxy Reporting	<input type="radio"/> Enabled <input checked="" type="radio"/> Disabled Source Address <input type="text" value=" . . ."/>
Rate Limit (1-1000)	<input type="text" value=""/> <input checked="" type="checkbox"/> No Limit
Ignore Topology Change	<input type="radio"/> Enabled <input checked="" type="radio"/> Disabled

Figure 5-77 IGMP Snooping Settings (Modify, Edit) Window

The fields that can be configured are described below:

Parameter	Description
Minimum Version	Select the minimum IGMP host version that is allowed on the VLAN. Options to choose from are 1 , 2 , and 3 .
Fast Leave	Select this option to enable or disable the IGMP snooping Fast Leave function. If enabled, the membership is immediately removed when the system receives the IGMP done message from the last member. When fast leave is enabled, the Switch will not generate specific queries. When fast leave is disabled, the Switch will generate specific queries.
Report Suppression	Select this option to enable or disable the report suppression. The report suppression function only works for IGMPv1 and IGMPv2 traffic. When report suppression is enabled, the Switch suppresses the duplicate reports sent by hosts. The suppression for the same group report or leave will continue until the suppression time expires. For report or leave messages to the same group, only one report or leave message is forwarded. The remaining report and leave messages are suppressed.
Suppression Time	Enter the interval of suppressing duplicate IGMP reports or leaves. The range is from 1 to 300.
Querier State	Select this option to enable or disable the querier state.
Query Version	Select the general query packet version sent by the IGMP snooping querier. Options to choose from are 1 , 2 , and 3 .
Query Interval	Enter the interval at which the IGMP snooping querier sends IGMP general query messages periodically. The range is from 1 to 31744.
Max Response Time	Enter the maximum response time, in seconds, advertised in IGMP snooping queries. The range is from 1 to 25.
Robustness Value	Enter the robustness variable used in IGMP snooping. The range is from 1 to 7.
Last Member Query Interval	Enter the interval at which the IGMP snooping querier sends IGMP group-specific or group-source-specific (channel) query messages. The range is from 1 to 25.
Proxy Reporting	Select this option to enable or disable the proxy-reporting function.
Source Address	Enter the source IP of proxy reporting. This is available when Enabled is selected in Proxy Reporting .
Rate Limit	Enter the rate limit value here. The range is from 1 to 1000. Tick the No Limit option to apply no rate limit on this profile.
Ignore Topology Change	Select to enable or disable the Ignore Topology Change feature here.

Click the **Apply** button to accept the changes made.

IGMP Snooping AAA Settings

This window is used to display and configure the IGMP snooping AAA settings.

To view the following window, click **L2 Features > L2 Multicast Control > IGMP Snooping > IGMP Snooping AAA Settings**, as shown below:

Figure 5-78 IGMP Snooping AAA Settings Window

The fields that can be configured in **IGMP Snooping AAA Settings** are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the range of ports that will be used for this configuration here.
Authentication	Select to enable or disable authentication here. This is used to enable or disable the authentication function for IGMP join messages. When enabled and the client wants to join a group, the system will perform authentication first.
Accounting	Select to enable or disable accounting here. This is used to enable or disable accounting when a listener joining an IGMP group. When enabled and the client joins a group, the accounting message will be sent to RADIUS.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **IGMP Snooping AAA Table** are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this display here.
From Port - To Port	Select the range of ports that will be used for this display here.

Click the **Find** button to generate the display based on the selections made.

Click the **Show All** button to display all the available entries.

IGMP Snooping Groups Settings

This window is used to display and configure the IGMP snooping static group, and view IGMP snooping group.

To view the following window, click **L2 Features > L2 Multicast Control > IGMP Snooping > IGMP Snooping Groups Settings**, as shown below:

Figure 5-79 IGMP Snooping Groups Settings Window

The fields that can be configured in **IGMP Snooping Static Groups Settings** are described below:

Parameter	Description
VID	Enter a VLAN ID of the multicast group. The range is from 1 to 4094.
Group Address	Enter an IP multicast group address.
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the appropriate port range used for the configuration here.
VID	Click the radio button and enter a VLAN ID of the multicast group. The range is from 1 to 4094.
Group Address	Click the radio button and enter an IP multicast group address.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the specified entry.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show All** button to view all the entries.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

The fields that can be configured in **IGMP Snooping Groups Table** are described below:

Parameter	Description
VID	Click the radio button and enter a VLAN ID of the multicast group. The range is from 1 to 4094.
Group Address	Click the radio button and enter an IP multicast group address.
Detail	Select this option to display the IGMP group detail information.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show All** button to view all the entries.

IGMP Snooping Filter Settings

This window is used to display and configure the IGMP snooping filter settings.

To view the following window, click **L2 Features > L2 Multicast Control > IGMP Snooping > IGMP Snooping Filter Settings**, as shown below:

The screenshot shows the 'IGMP Snooping Filter Settings' window. It is divided into four main sections:

- IGMP Snooping Rate Limit Settings:** Includes fields for Unit (1), From Port (eth1/0/1), To Port (eth1/0/1), Limit Number (1-1000), and Action (Port). There is a 'No Limit' checkbox and an 'Apply' button.
- IGMP Snooping Limit Settings:** Includes fields for Unit (1), From Port (eth1/0/1), To Port (eth1/0/1), Limit Number (1-8192), Exceed Action (Default), Except ACL Name (32 chars), and VID (1-4094). There is a 'Please Select' button and an 'Apply' button.
- Access Group Settings:** Includes fields for Unit (1), From Port (eth1/0/1), To Port (eth1/0/1), Action (Add), ACL Name (32 chars), and VID (1-4094). There is a 'Please Select' button and an 'Apply' button.
- IGMP Snooping Filter Table:** Includes fields for Unit (1), From Port (eth1/0/1), and To Port (eth1/0/1). There are 'Find' and 'Show All' buttons. Below the table, it shows 'Total Entries: 1' and a table with columns 'Port' and 'Rate Limit'. The entry for 'eth1/0/1' has a rate limit of '500pps'. There is a 'Show Detail' button and a pagination control showing '1/1'.

Figure 5-80 IGMP Snooping Filter Settings Window

The fields that can be configured in **IGMP Snooping Rate Limit Settings** are described below:

Parameter	Description
Unit	Select the Switch unit ID that will be used here.
From Port - To Port	Select the Switch port range that will be used here. This is only available if the Port option was selected as the action below.
Limit Number	Enter the limit number here. This is to configure the rate of IGMP control packets that the Switch can process on a specific interface. The range is from 1 to 1000 packets per second. Select the No Limit option to remove the limitation.
Action	Select the action that will be taken here. Options to choose from are Port and VLAN .
VID	Enter the VLAN ID here. This is the Layer 2 VLAN on a trunk port and applies the filter to packets that arrive on that VLAN. The range is from 1 to 4094. This is only available if the VLAN option was selected as the action.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **IGMP Snooping Limit Settings** are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the appropriate port range used for the configuration here.
Limit Number	Enter the limit number here. This is used to set the limitation on the number of IGMP cache entries that can be created. The range is from 1 to 8192.
Exceed Action	Select the exceed action here. This parameter specifies the action for handling newly learned groups when the limitation is exceeded. Options to choose from are Default , Drop and Replace . <ul style="list-style-type: none"> • Default - Specifies that the default action will be taken. • Drop - Specifies that the new group will be dropped. • Replace - Specifies that the new group will replace the oldest group.
Except ACL Name	Enter the standard IP access list name here. The group (*,G) permitted by the access list will be excluded from the limit. To permit a group (*,G), specify "any" in the source address field and G in the destination address field of the access list entry. This name can be up to 32 characters long. Alternatively, click the Please Select button to find and select any of the existing access lists configured on this Switch to be used in this configuration.
VID	Enter the Layer 2 VLAN name on a trunk port here. This applies the filter to packets that arrive on that VLAN. The range is from 1 to 4094.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to delete an entry based on the information entered.

The fields that can be configured in **Access Group Settings** are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the appropriate port range used for the configuration here.
Action	Select Add to add a new entry based in the information entered. Select Delete to delete an entry based in the information entered.
ACL Name	Enter the standard IP access list name here. This is used to permit users to join a group (*, G), specify "any" in source address field and G in destination address field of the access list entry. This name can be up to 32 characters long. Alternatively, click the Please Select button to find and select any of the existing access lists configured on this Switch to be used in this configuration.
VID	Enter the VLAN ID used for this configuration here. The range is from 1 to 4094.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **IGMP Snooping Filter Table** are described below:

Parameter	Description
Unit	Select the Switch unit ID that will be used here.
From Port - To Port	Select the Switch port range that will be used here.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show All** button to display all the entries.

Click the **Show Detail** button to view more detailed information associated with the entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Please Select** button, the following page will appear.

ACL Access List

Total Entries: 1

ID	ACL Name	ACL Type
1	SI-ACL	Standard IP ACL

1/1 < < 1 > > Go

OK

Figure 5-81 IGMP Snooping Filter Settings (Please Select) Window

Select the ACL and click the **OK** button to use the selected access list.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Show Detail** button, the following page will appear.

IGMP Snooping Detail Filter Table

IGMP Snooping Detail Filter Table

Total Entries: 1

Port: eth1/0/10

VID	Access Group	Groups/Channel Limit
	Not Configured	Not Configured

1/1 < < 1 > > Go

Back

Figure 5-82 IGMP Snooping Filter Settings (Show Detail) Window

Click the **Back** button to return to the previous window.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

IGMP Snooping Mrouter Settings

This window is used to display and configure the IGMP Snooping Mrouter settings.

To view the following window, click **L2 Features > L2 Multicast Control > IGMP Snooping > IGMP Snooping Mrouter Settings**, as shown below:

IGMP Snooping Mrouter Settings

IGMP Snooping Mrouter Settings

VID (1-4094) Configuration Unit From Port To Port

Port 1 eth1/0/1 eth1/0/1

Apply Delete

IGMP Snooping Mrouter Table

VID (1-4094) Find Show All

Total Entries: 1

VID	Ports
1	1/0/13 (Static)

1/1 < < 1 > > Go

Figure 5-83 IGMP Snooping Mrouter Settings Window

The fields that can be configured in **IGMP Snooping Mrouter Settings** are described below:

Parameter	Description
VID	Enter the VLAN ID used here. The range is from 1 to 4094.
Configuration	Select the port configuration. Options to choose from are Port , and Forbidden Port . <ul style="list-style-type: none"> • Port - Select to have the configured ports to be static multicast router ports. • Forbidden Port - Select to have the configured ports not to be multicast router ports.
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the appropriate port range used for the configuration here.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the specified entry.

The fields that can be configured in **IGMP Snooping Mrouter Table** are described below:

Parameter	Description
VID	Enter the VLAN ID used here. The range is from 1 to 4094.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show All** button to view all the entries.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

IGMP Snooping Statistics Settings

This window is used to view and clear the IGMP snooping related statistics.

To view the following window, click **L2 Features > L2 Multicast Control > IGMP Snooping > IGMP Snooping Statistics Settings**, as shown below:

Figure 5-84 IGMP Snooping Statistics Settings Window

The fields that can be configured in **IGMP Snooping Statistics Settings** are described below:

Parameter	Description
Statistics	Select the interface here. Options to choose from are All , VLAN , and Port .

Parameter	Description
VID	Enter a VLAN ID between 1 and 4094. This is available when VLAN is selected in the Statistics drop-down list.
Unit	Select the Switch unit that will be used for this configuration here. This is available when Port is selected in the Statistics drop-down list.
From Port - To Port	Select the appropriate port range used for the configuration here. This is available when Port is selected in the Statistics drop-down list.

Click the **Clear** button to clear the IGMP snooping related statistics.

The fields that can be configured in **IGMP Snooping Statistics Table** are described below:

Parameter	Description
Find Type	Select the interface type. Options to choose from are VLAN , and Port .
VID	Enter a VLAN ID between 1 and 4094. This is available when VLAN is selected in the Find Type drop-down list.
Unit	Select the Switch unit that will be used for this configuration here. This is available when Port is selected in the Find Type drop-down list.
From Port - To Port	Select the appropriate port range used for the configuration here. This is available when Port is selected in the Find Type drop-down list.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show All** button to view all the entries.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

MLD Snooping

Multicast Listener Discovery (MLD) Snooping is an IPv6 function used similarly to IGMP snooping in IPv4. It is used to discover ports on a VLAN that are requesting multicast data. Instead of flooding all ports on a selected VLAN with multicast traffic, MLD snooping will only forward multicast data to ports that wish to receive this data through the use of queries and reports produced by the requesting ports and the source of the multicast traffic.

MLD snooping is accomplished through the examination of the layer 3 part of an MLD control packet transferred between end nodes and a MLD router. When the Switch discovers that this route is requesting multicast traffic, it adds the port directly attached to it into the correct IPv6 multicast table, and begins the process of forwarding multicast traffic to that port. This entry in the multicast routing table records the port, the VLAN ID, and the associated multicast IPv6 multicast group address, and then considers this port to be an active listening port. The active listening ports are the only ones to receive multicast group data.

MLD Control Messages

These types of messages are transferred between devices using MLD snooping. These messages are all defined by four ICMPv6 packet headers, labeled 130, 131, 132, and 143.

- **Multicast Listener Query** - Similar to the IGMPv2 Host Membership Query for IPv4, and labeled as 130 in the ICMPv6 packet header, this message is sent by the router to ask if any link is requesting multicast data. There are two types of MLD query messages emitted by the router: the General Query, which is used to advertise all multicast addresses that are ready to send multicast data to all listening ports, and the Multicast Specific query, which is used to advertise a specific multicast address that is also ready. These two types of messages are distinguished by a multicast destination address located in the IPv6 header and a multicast address in the Multicast Listener Query Message.
- **Multicast Listener Report, Version 1** - Comparable to the Host Membership Report in IGMPv2, and labeled as 131 in the ICMP packet header, this message is sent by the listening port to the Switch stating that it is interested in receiving multicast data from a multicast address in response to the Multicast Listener Query message.

- **Multicast Listener Done** - Similar to the Leave Group Message in IGMPv2, and labeled as 132 in the ICMPv6 packet header, this message is sent by the multicast listening port stating that it is no longer interested in receiving multicast data from a specific multicast group address, therefore stating that it is “done” with the multicast data from this address. Once this message is received by the Switch, it will no longer forward multicast traffic from a specific multicast group address to this listening port.
- **Multicast Listener Report, Version 2** - Comparable to the Host Membership Report in IGMPv3, and labeled as 143 in the ICMP packet header, this message is sent by the listening port to the Switch stating that it is interested in receiving multicast data from a multicast address in response to the Multicast Listener Query message.

MLD Snooping Settings

This window is used to display and configure the MLD snooping settings.

To view the following window, click **L2 Features > L2 Multicast Control > MLD Snooping > MLD Snooping Settings**, as shown below:

Figure 5-85 MLD Snooping Settings Window

The fields that can be configured in **Global Settings** are described below:

Parameter	Description
Global State	Select this option to enable or disable the global MLD snooping state.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **VLAN Status Settings** are described below:

Parameter	Description
VID	Enter a VLAN ID from 1 to 4094, and select to enable or disable MLD snooping on the VLAN.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **MLD Snooping Table** are described below:

Parameter	Description
VID	Enter a VLAN ID from 1 to 4094.

Click the **Find** button to locate a specific entry based on the information entered.


Click the **Show All** button to view all the entries.

Click the **Show Detail** button to see the detail information of the specific VLAN.

Click the **Edit** button to re-configure the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Show Detail** button, the following window will appear.

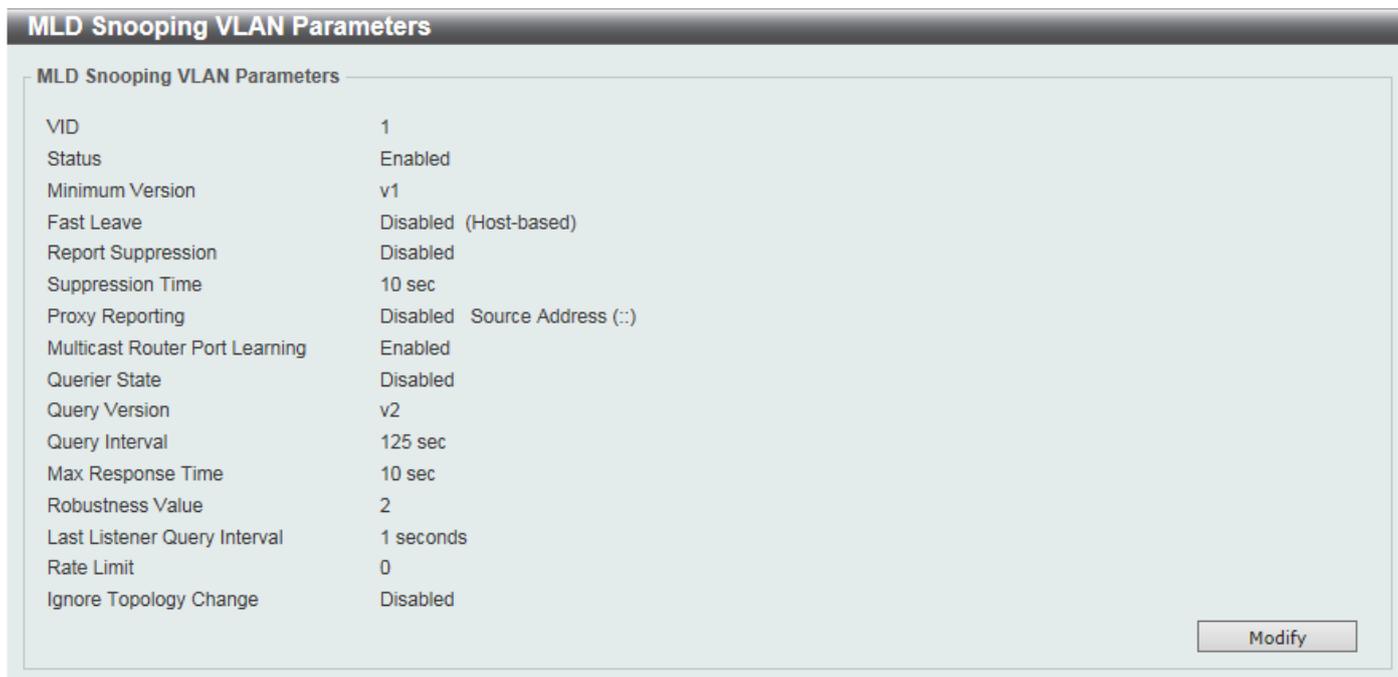

The screenshot shows a web interface window titled "MLD Snooping VLAN Parameters". The window contains a table of configuration parameters for a specific VLAN (VID 1). A "Modify" button is located in the bottom right corner of the window.

MLD Snooping VLAN Parameters	
VID	1
Status	Enabled
Minimum Version	v1
Fast Leave	Disabled (Host-based)
Report Suppression	Disabled
Suppression Time	10 sec
Proxy Reporting	Disabled Source Address (::)
Multicast Router Port Learning	Enabled
Querier State	Disabled
Query Version	v2
Query Interval	125 sec
Max Response Time	10 sec
Robustness Value	2
Last Listener Query Interval	1 seconds
Rate Limit	0
Ignore Topology Change	Disabled

Figure 5-86 MLD Snooping Settings (Show Detail) Window

The window displays the detail information about MLD snooping VLAN.

Click the **Modify** button to edit the information in the following window.

After clicking the **Modify** or **Edit** button in MLD Snooping Settings window, the following window will appear.

MLD Snooping VLAN Settings

MLD Snooping VLAN Settings

VID (1-4094)

Status Enabled Disabled

Minimum Version ▼

Fast Leave Enabled Disabled

Report Suppression Enabled Disabled

Suppression Time (1-300)

Proxy Reporting Enabled Disabled
Source Address

Mrouter Port Learning Enabled Disabled

Querier State Enabled Disabled

Query Version ▼

Query Interval (1-31744) sec

Max Response Time (1-25) sec

Robustness Value (1-7)

Last Listener Query Interval (1-25) sec

Rate Limit (1-1000) No Limit

Ignore Topology Change Enabled Disabled

Figure 5-87 MLD Snooping Settings (Modify, Edit) Window

The fields that can be configured are described below:

Parameter	Description
Minimum Version	Select the minimum version of MLD hosts that is allowed on the VLAN. Options to choose from are 1 and 2 .
Fast Leave	Select this option to enable or disable the MLD snooping Fast Leave function. If enabled, the membership is immediately removed when the system receives the MLD done message from the last member.
Report Suppression	Select this option to enable or disable the report suppression.
Suppression Time	Enter the interval of suppressing duplicate MLD reports or leaves. The range is from 1 to 300.
Proxy Reporting	Select this option to enable or disable the proxy-reporting function.
Source Address	Enter the source IP of proxy reporting. This is available when Enabled is selected in Proxy Reporting .
Mrouter Port Learning	Select this option to enable or disable Mrouter port learning.
Querier State	Select this option to enable or disable the querier state.
Query Version	Select the general query packet version sent by the MLD snooping querier. Options to choose from are 1 , and 2 .
Query Interval	Enter the interval at which the MLD snooping querier sends MLD general query messages periodically. The range is from 1 to 31744.
Max Response Time	Enter the maximum response time, in seconds, advertised in MLD snooping queries. The range is from 1 to 25.
Robustness Value	Enter the robustness variable used in MLD snooping. The range is from 1 to 7.
Last Listener Query Interval	Enter the interval at which the MLD snooping querier sends MLD group-specific or group-source-specific (channel) query messages. The range is from 1 to 25.

Parameter	Description
Rate Limit	Enter the rate limit value here. The range is from 1 to 1000. Tick the No Limit option to apply no rate limit on this profile.
Ignore Topology Change	Select to enable or disable the Ignore Topology Change feature here.

Click the **Apply** button to accept the changes made.

MLD Snooping Groups Settings

This window is used to display and configure the MLD snooping static group, and view MLD snooping group.

To view the following window, click **L2 Features > L2 Multicast Control > MLD Snooping > MLD Snooping Groups Settings**, as shown below:

Figure 5-88 MLD Snooping Groups Settings Window

The fields that can be configured in **MLD Snooping Static Groups Settings** are described below:

Parameter	Description
VID	Enter the VLAN ID of the multicast group here. The range is from 1 to 4094.
Group Address	Enter the IPv6 multicast group address here.
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the appropriate port range used for the configuration here.
VID	Click the radio button and enter a VLAN ID of the multicast group. The range is from 1 to 4094.
Group Address	Click the radio button and enter an IPv6 multicast group address.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the specified entry.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show All** button to view all the entries.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

The fields that can be configured in **MLD Snooping Groups Table** are described below:

Parameter	Description
VID	Click the radio button and enter a VLAN ID of the multicast group. The range is from 1 to 4094.
Group Address	Click the radio button and enter an IPv6 multicast group address.
Detail	Select this option to display the MLD group detail information.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show All** button to view all the entries.

MLD Snooping Filter Settings

This window is used to display and configure the MLD snooping settings.

To view the following window, click **L2 Features > L2 Multicast Control > MLD Snooping > MLD Snooping Filter Settings**, as shown below:

MLD Snooping Filter Settings

MLD Snooping Rate Limit Settings

Unit: 1 | From Port: eth1/0/1 | To Port: eth1/0/1 | Limit Number (1-1000): No Limit

Action: Port | VID (1-4094):

MLD Snooping Limit Settings

Unit: 1 | From Port: eth1/0/1 | To Port: eth1/0/1 | Limit Number (1-4096):

Exceed Action: Default | Except ACL Name: 32 chars | Please Select | VID (1-4094):

Unit: 1 | From Port: eth1/0/1 | To Port: eth1/0/1 | VID (1-4094):

Access Group Settings

Unit: 1 | From Port: eth1/0/1 | To Port: eth1/0/1 | Action: Add

ACL Name: 32 chars | Please Select | VID (1-4094):

MLD Snooping Filter Table

Unit: 1 | From Port: eth1/0/1 | To Port: eth1/0/1 | Find | Show All

Total Entries: 1

Port	Rate Limit	
eth1/0/1	500pps	Show Detail

1/1 | < < 1 > > | Go

Figure 5-89 MLD Snooping Filter Settings Window

The fields that can be configured in **MLD Snooping Rate Limit Settings** are described below:

Parameter	Description
Unit	Select the Switch unit ID that will be used here.
From Port - To Port	Select the Switch port range that will be used here. This is only available if the Port option was selected as the action below.

Parameter	Description
Limit Number	Enter the limit number here. This is to configure the rate of MLD control packets that the Switch can process on a specific interface. The range is from 1 to 1000 packets per second. Select the No Limit option to remove the limitation.
Action	Select the action that will be taken here. Options to choose from are Port and VLAN .
VID	Enter the VLAN ID here. This is the Layer 2 VLAN on a trunk port and applies the filter to packets that arrive on that VLAN. The range is from 1 to 4094. This is only available if the VLAN option was selected as the action.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **MLD Snooping Limit Settings** are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the appropriate port range used for the configuration here.
Limit Number	Enter the limit number here. This is used to set the limitation on the number of MLD cache entries that can be created. The range is from 1 to 4096.
Exceed Action	Select the exceed action here. This parameter specifies the action for handling newly learned groups when the limitation is exceeded. Options to choose from are Default , Drop and Replace . <ul style="list-style-type: none"> • Default - Specifies that the default action will be taken. • Drop - Specifies that the new group will be dropped. • Replace - Specifies that the new group will replace the oldest group.
Except ACL Name	Enter the standard IP access list name here. The group (*,G) permitted by the access list will be excluded from the limit. To permit a group (*,G), specify "any" in the source address field and G in the destination address field of the access list entry. This name can be up to 32 characters long. Alternatively, click the Please Select button to find and select any of the existing access lists configured on this Switch to be used in this configuration.
VID	Enter the Layer 2 VLAN name on a trunk port here. This applies the filter to packets that arrive on that VLAN. The range is from 1 to 4094.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to delete an entry based on the information entered.

The fields that can be configured in **Access Group Settings** are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the appropriate port range used for the configuration here.
Action	Select Add to add a new entry based in the information entered. Select Delete to delete an entry based in the information entered.
ACL Name	Enter the standard IP access list name here. This is used to permit users to join a group (*, G), specify "any" in source address field and G in destination address field of the access list entry. This name can be up to 32 characters long. Alternatively, click the Please Select button to find and select any of the existing access lists configured on this Switch to be used in this configuration.
VID	Enter the VLAN ID used for this configuration here. The range is from 1 to 4094.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **MLD Snooping Filter Table** are described below:

Parameter	Description
Unit	Select the Switch unit ID that will be used here.
From Port - To Port	Select the Switch port range that will be used here.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show All** button to display all the entries.

Click the **Show Detail** button to view more detailed information about the entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Please Select** button, the following page will appear.

ACL Access List

Total Entries: 2

	ID	ACL Name	ACL Type
<input type="radio"/>	11000	SI6-ACL	Standard IPv6 ACL
<input type="radio"/>	13000	EI6-ACL	Extended IPv6 ACL

1/1 < < 1 > > Go

OK

Figure 5-90 MLD Snooping Filter Settings (Please Select) Window

Select the ACL and click the **OK** button to use the selected access list.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Show Detail** button, the following window will appear.

MLD Snooping Detail Filter Table

MLD Snooping Detail Filter Table

Total Entries: 1

Port: eth1/0/10

VID	Access Group	Groups/Channel Limit
	Not Configured	Not Configured

1/1 < < 1 > > Go

Back

Figure 5-91 MLD Snooping Filter Settings (Show Detail) Window

Click the **Back** button to return to the previous window.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

MLD Snooping Mrouter Settings

This window is used to display and configure the specified interface(s) as the router ports or forbidden to be IPv6 multicast router ports on the VLAN interface on the Switch.

To view the following window, click **L2 Features > L2 Multicast Control > MLD Snooping > MLD Snooping Mrouter Settings**, as shown below:

Figure 5-92 MLD Snooping Mrouter Settings Window

The fields that can be configured in **MLD Snooping Mrouter Settings** are described below:

Parameter	Description
VID	Enter a VLAN ID between 1 and 4094.
Configuration	Select the port configuration. Options to choose from are Port , Forbidden Port , and Learn pimv6 . <ul style="list-style-type: none"> • Port - Select to have the configured ports as being connected to multicast-enabled routers. • Forbidden Port - Select to have the configured ports as being not connected to multicast-enabled routers. • Learn pimv6 - Select to enable dynamic learning of multicast router port.
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the appropriate port range used for the configuration here.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the specified entry.

The fields that can be configured in **MLD Snooping Mrouter Table** are described below:

Parameter	Description
VID	Enter a VLAN ID between 1 and 4094.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show All** button to view all the entries.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

MLD Snooping Statistics Settings

This window is used to view and clear the MLD snooping related statistics.

To view the following window, click **L2 Features > L2 Multicast Control > MLD Snooping > MLD Snooping Statistics Settings**, as shown below:

Figure 5-93 MLD Snooping Statistics Settings Window

The fields that can be configured in **MLD Snooping Statistics Settings** are described below:

Parameter	Description
Statistics	Select the interface here. Options to choose from are All , VLAN , and Port .
VID	Enter a VLAN ID between 1 and 4094. This is available when VLAN is selected in the Statistics drop-down list.
Unit	Select the Switch unit that will be used for this configuration here. This is available when Port is selected in the Statistics drop-down list.
From Port - To Port	Select the appropriate port range used for the configuration here. This is available when Port is selected in the Statistics drop-down list.

Click the **Clear** button to clear the MLD snooping related statistics.

The fields that can be configured in **MLD Snooping Statistics Table** are described below:

Parameter	Description
Find Type	Select the interface type. Options to choose from are VLAN , and Port .
VID	Enter a VLAN ID between 1 and 4094. This is available when VLAN is selected in the Find Type drop-down list.
Unit	Select the Switch unit that will be used for this configuration here. This is available when Port is selected in the Find Type drop-down list.
From Port - To Port	Select the appropriate port range used for the configuration here. This is available when Port is selected in the Find Type drop-down list.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show All** button to view all the entries.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

Multicast VLAN

Multicast VLAN Settings

This window is used to display and configure the multicast VLAN settings.

To view the following window, click **L2 Features > L2 Multicast Control > Multicast VLAN > Multicast VLAN Settings**, as shown below:

Multicast VLAN Settings

Multicast VLAN Global Settings

Multicast VLAN IPv4 State Enabled Disabled Forward Unmatched Enabled Disabled
 Multicast VLAN IPv6 State Enabled Disabled Ignore VLAN Enabled Disabled Apply

VID (2-4094) VLAN Name Delete Add

Member Port Settings

VID (2-4094) Action Role Type Unit From Port To Port Apply

Replace Priority Settings

VID (2-4094) Action IP Type Priority Apply

Replace Source IP Settings

VID (2-4094) Action Address Type IP Address From Apply

Multicast VLAN Table

VID (2-4094) Find Show All

Total Entries: 1

VID	VLAN Name	Untagged Receiver	Tagged Receiver	Untagged Source	Tagged Source	Replace Source IP	Replace Priority
2	MVLAN		1/0/9		1/0/17	10.90.90.12 (from receiver)/Not replace	0 (IPv4)/Not replace (IPv6)

1/1 ← → Go

Figure 5-94 Multicast VLAN Settings Window

The fields that can be configured in **Multicast VLAN Global Settings** are described below:

Parameter	Description
Multicast VLAN IPv4 State	Select to enable or disable the IPv4 IGMP control packet process in multicast VLANs.
Forward Unmatched	Select the enable or disable the Forward Unmatched feature here. This specifies that if the received IGMP or MLD control packet is untagged, does not match any profile, and the associated default VLAN is a multicast VLAN, or is tagged with a multicast VLAN, but does not match the associated profile, then the packet will be forwarded or dropped based on this setting. By default, the packet will be dropped.
Multicast VLAN IPv6 State	Select to enable or disable the IPv6 MLD control packet process in multicast VLANs.
Ignore VLAN	Select the enable or disable the ignore VLAN feature here. This specifies the setting for tagged IGMP or MLD control packets. If enabled, then the packet's VLAN is ignored and taken to match the profile to find its multicast VLAN. When this option is enabled, the Switch will ignore the VLAN of the receiving IGMP or MLD control packet and try to find a match profile.
VID	Enter the VLAN ID of the multicast VLAN that will be created or deleted here. The range is 2 to 4094.
VLAN Name	Enter the VLAN name of the multicast VLAN that will be created or deleted here.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to delete an entry based on the information entered.

Click the **Add** button to add a new entry based on the information entered.

The fields that can be configured in **Member Port Settings** are described below:

Parameter	Description
VID	Enter the multicast VLAN ID that will be used here. The range is 2 to 4094.
Action	Select Add to add a new entry based in the information entered. Select Delete to delete an entry based in the information entered.
Role	Select the role here. Options to choose from are Receiver and Source . <ul style="list-style-type: none"> • Receiver - Specifies to configure the port as a subscriber port that can only receive multicast data in the multicast VLAN. • Source - Specifies to configure the port as an uplink port that can send multicast data in the multicast VLAN.
Type	Select the type here. Options to choose from are Tagged and Untagged . <ul style="list-style-type: none"> • Tagged - Specifies that if a port is a tagged member, the packets sent from the port are tagged with the Multicast VLAN ID. • Untagged - Specifies that if the port is an untagged member, then the packets will be forwarded in the untagged form.
Unit	Select the Switch unit ID that will be used here.
From Port - To Port	Select the Switch port range that will be used here.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Replace Priority Settings** are described below:

Parameter	Description
VID	Enter the multicast VLAN ID that will be used here. The range is 2 to 4094.
Action	Select Add to add a new entry based in the information entered. Select Delete to delete an entry based in the information entered.
IP Type	Select the IP type here. Options to choose from are IPv4 and IPv6 . <ul style="list-style-type: none"> • IPv4 - Specifies to the remap priority for IPv4 multicast packets forwarded on the multicast VLAN. • IPv6 - Specifies to the remap priority for IPv6 multicast packets forwarded on the multicast VLAN.
Priority	Select the priority value here. The range is from 0 to 7.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Replace Source IP Settings** are described below:

Parameter	Description
VID	Enter the multicast VLAN ID that will be used here. The range is 2 to 4094.
Action	Select Add to add a new entry based in the information entered. Select Delete to delete an entry based in the information entered.
Address Type	Select the address type here. Options to choose from are IPv4 and IPv6 . <ul style="list-style-type: none"> • IPv4 - Specifies to enter the source IPv4 address for IGMP control packet reporting up to routers. • IPv6 - Specifies to enter the source IPv6 address for MLD control packet reporting up to routers.

Parameter	Description
IP Address	Enter the IPv4/IPv6 address here.
From	<p>Select the “from” option here. Options to choose from are Receiver, Source, and Both.</p> <ul style="list-style-type: none"> • Receiver - Specifies that the source IPv4/IPv6 address of the IGMP/MLD report/leave packet received on any multicast VLAN receiver port will be replaced. • Source - Specifies that the source IPv4/IPv6 address of the IGMP/MLD report/leave packet received on any multicast VLAN source port will be replaced. • Both - Specifies that the source IPv4/IPv6 address of the IGMP/MLD report/leave packet received on any port in the multicast VLAN will be replaced.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Multicast VLAN Table** are described below:

Parameter	Description
VID	Enter the multicast VLAN ID that will be used here. The range is 2 to 4094.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show All** button to view all the entries.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

Multicast VLAN Group Settings

This window is used to view and configure the multicast VLAN group settings.

To view the following window, click **L2 Features > L2 Multicast Control > Multicast VLAN > Multicast VLAN Group Settings**, as shown below:

Figure 5-95 Multicast VLAN Group Settings Window

The fields that can be configured in **Group Profile Settings** are described below:

Parameter	Description
Profile Name	Enter the group profile name for the multicast VLAN feature here. This name can be up to 32 characters long.
Action	Select the action that will be taken here. Options to choose from are Add and Delete . Multiple ranges can be added to a multicast VLAN profile. The IP address ranges, specified in a single profile, must be of the same address family.
Address Type	Select the address type here. Options to choose from are IPv4 and IPv6 . <ul style="list-style-type: none"> IPv4 - Specifies to use IPv4 multicast addresses in the range. IPv6 - Specifies to use IPv6 multicast addresses in the range.
From IP Address	Enter the source IPv4/IPv6 address here.
To IP Address	Enter the destination IPv4/IPv6 address here.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Access Group Settings** are described below:

Parameter	Description
VID	Enter the multicast VLAN ID that will be used here. The range is 2 to 4094.
Profile Name	Enter the group profile name for the multicast VLAN feature here. This name can be up to 32 characters long.

Parameter	Description
Action	Select the action that will be taken here. Options to choose from are Add and Delete . This is to add or delete the multicast group entirely.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Group Profile Table** are described below:

Parameter	Description
Profile Name	Enter the group profile name for the multicast VLAN feature here. This name can be up to 32 characters long.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show All** button to display all the entries.

Click the **Delete All** button to delete all the entries found in the display table.

Click the **Delete** button to delete the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

The fields that can be configured in **Access Group Table** are described below:

Parameter	Description
VID	Enter the multicast VLAN ID that will be used here. The range is 2 to 4094.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show All** button to display all the entries.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

PIM Snooping

PIM Snooping Global Settings

This window is used to display and configure the global Protocol Independent Multicast (PIM) snooping settings.

To view the following window, click **L2 Features > L2 Multicast Control > PIM Snooping > PIM Snooping Global Settings**, as shown below:



VID	Neighbor	Mroute	DR	Learned Neighbor On Ports
1	0	0		

Figure 5-96 PIM Snooping Global Settings Window

The fields that can be configured in **Global Settings** are described below:

Parameter	Description
Global State	Select to globally enable or disable the PIM snooping feature here.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **VLAN Status Settings** are described below:

Parameter	Description
VID	Enter the VLAN ID on which the PIM snooping feature will be used here. The range is from 1 to 4094. Select to enable or disable the PIM snooping feature on the specified VLAN here.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **PIM Snooping Table** are described below:

Parameter	Description
VID	Enter the VLAN ID that will be used in the display here. The range is from 1 to 4094.

Click the **Find** button to generate the display based on the information entered.

PIM Snooping Neighbor Table

This window is used to view the PIM snooping neighbor table.

To view the following window, click **L2 Features > L2 Multicast Control > PIM Snooping > PIM Snooping Neighbor Table**, as shown below:

Figure 5-97 PIM Snooping Neighbor Table Window

The fields that can be configured are described below:

Parameter	Description
VID	Enter the VLAN ID that will be used in this display here. The range is from 1 to 4094.

Click the **Find** button to generate the display based on the information entered.

PIM Snooping Mroute Table

This window is used to view the PIM snooping multicast route table.

To view the following window, click **L2 Features > L2 Multicast Control > PIM Snooping > PIM Snooping Mroute Table**, as shown below:

Figure 5-98 PIM Snooping Mroute Table Window

The fields that can be configured are described below:

Parameter	Description
VID	Select and enter the VLAN ID that will be used in this display here. The range is from 1 to 4094.
Group Address	Select and enter the group address here.

Click the **Find** button to generate the display based on the information entered.

PIM Snooping Statistics Table

This window is used to view and clear the PIM snooping statistics table.

To view the following window, click **L2 Features > L2 Multicast Control > PIM Snooping > PIM Snooping Statistics Table**, as shown below:

Figure 5-99 PIM Snooping Statistics Table Window

The fields that can be configured are described below:

Parameter	Description
VID	Select and enter the VLAN ID that will be used here. The range is from 1 to 4094.

Click the **Find** button to generate the display based on the information entered.

Click the **Clear** button to clear the statistics information related to the specified VLAN.

Click the **Clear All** button to clear all the statistics information displayed in the table.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

Multicast Filtering Mode

This window is used to display and configure the Layer 2 multicast filtering settings.

To view the following window, click **L2 Features > L2 Multicast Control > Multicast Filtering Mode**, as shown below:

Figure 5-100 Multicast Filtering Mode Window

The fields that can be configured are described below:

Parameter	Description
VID List	Enter the VLAN ID list that will be used for this configuration here.
Multicast Filtering Mode	<p>Select the multicast filter mode here. Options to choose from are Forward Unregistered, Forward All, and Filter Unregistered.</p> <ul style="list-style-type: none"> When selecting the Forward Unregistered option, registered multicast packets will be forwarded based on the forwarding table and all unregistered multicast packets will be flooded based on the VLAN domain. When selecting the Forward All option, all multicast packets will be flooded based on the VLAN domain. When selecting the Filter Unregistered option, registered packets will be forwarded based on the forwarding table and all unregistered multicast packets will be filtered.

Click the **Apply** button to accept the changes made.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

LLDP

LLDP Global Settings

This window is used to display and configure the global LLDP settings.

To view the following window, click **L2 Features > LLDP > LLDP Global Settings**, as shown below:

Figure 5-101 LLDP Global Settings Window

The fields that can be configured in **LLDP Global Settings** are described below:

Parameter	Description
LLDP State	Select this option to enable or disable the LLDP feature
LLDP Forward State	Select this option to enable or disable LLDP forward state. When the LLDP State is disabled and LLDP Forward State is enabled, the received LLDPDU packet will be forwarded.
LLDP Trap State	Select this option to enable or disable the LLDP trap state.
LLDP-MED Trap State	Select this option to enable or disable the LLDP-MED trap state.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **LLDP-MED Settings** are described below:

Parameter	Description
Fast Start Repeat Count	Enter the LLDP-MED fast start repeat count value. This value must be between 1 and 10.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **LLDP Configurations** are described below:

Parameter	Description
Message TX Interval	Enter the interval between consecutive transmissions of LLDP advertisements on each physical interface. The range is from 5 to 32768 seconds.
Message TX Hold Multiplier	Enter the multiplier on the LLDPDU's transmission interval that used to calculate the TTL value of an LLDPDU. This value must be between 2 and 10.
Reinit Delay	Enter the delay value for LLDP initialization on an interface. This value must be between 1 and 10 seconds.
TX Delay	Enter the delay value for sending successive LLDPDUs on an interface. The valid values are from 1 to 8192 seconds and should not be greater than one-fourth of the transmission interval timer.

Click the **Apply** button to accept the changes made.

LLDP Port Settings

This window is used to display and configure the LLDP port settings.

To view the following window, click **L2 Features > LLDP > LLDP Port Settings**, as shown below:

LLDP Port Settings

LLDP Port Settings

Unit: 1 | From Port: eth1/0/1 | To Port: eth1/0/1 | Notification: Disabled | Subtype: Local | Admin State: TX and RX | IP Subtype: Default | Action: Remove | Address:

Note: The address should be the switch's address. Apply

Port	Notification	Subtype	Admin State	IPv4/IPv6 Address
eth1/0/1	Disabled	Local	TX and RX	
eth1/0/2	Disabled	Local	TX and RX	
eth1/0/3	Disabled	Local	TX and RX	
eth1/0/4	Disabled	Local	TX and RX	
eth1/0/5	Disabled	Local	TX and RX	
eth1/0/6	Disabled	Local	TX and RX	
eth1/0/7	Disabled	Local	TX and RX	
eth1/0/8	Disabled	Local	TX and RX	

Figure 5-102 LLDP Port Settings Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the appropriate port range used for the configuration here.
Notification	Select to enable or disable the notification feature here.
Subtype	Select the subtype of LLDP TLV(s). Options to choose from are MAC Address , and Local .
Admin State	Select the local LLDP agent and allow it to send and receive LLDP frames on the port. Options to choose from are TX , RX , TX and RX , and Disabled . <ul style="list-style-type: none"> • TX - The local LLDP agent can only transmit LLDP frames. • RX - The local LLDP agent can only receive LLDP frames. • TX and RX - The local LLDP agent can both transmit and receive LLDP frames. • Disabled - The local LLDP agent can neither transmit nor receive LLDP frames.

Parameter	Description
	The default value is TX and RX .
IP Subtype	Select the type of the IP address information to be sent. Options to choose from are Default , IPv4 , and IPv6 .
Action	Select the action that will be taken here. Options to choose from are Remove and Add .
Address	Enter the IP address that will be sent.

Click the **Apply** button to accept the changes made.



NOTE: The IPv4 or IPv6 address entered here should be an existing LLDP management IP address.

LLDP Management Address List

This window is used to view the LLDP management address list.

To view the following window, click **L2 Features > LLDP > LLDP Management Address List**, as shown below:

Subtype	Address	IF Type	OID	Advertising Ports
IPv4	10.90.90.90(default)	IfIndex	1.3.6.1.4.1.171.10.1...	-
IPv4	10.90.90.90	IfIndex	1.3.6.1.4.1.171.10.1...	-

Figure 5-103 LLDP Management Address List Window

The fields that can be configured are described below:

Parameter	Description
Subtype	Select the subtype. Options to choose from are All , IPv4 and IPv6 . After selecting the IPv4 option, enter the IPv4 address in the space provided. After selecting the IPv6 option, enter the IPv6 address in the space provided.

Click the **Find** button to locate a specific entry based on the selection made.

LLDP Basic TLVs Settings

The Type-Length-Value (TLV) field allows specific information to be sent within LLDP packets. This window is used to configure basic TLV settings. An active LLDP port on the Switch always includes mandatory data in its outbound advertisements. There are four optional data types that can be configured to exclude one or more of these data types from outbound LLDP advertisements. The mandatory data type includes four basic types of TLVs: end of LLDPDU TLV, chassis ID TLV, port ID TLV, and TTL TLV. The mandatory data types cannot be disabled. There are also four data types which can be optionally selected. These include: Port Description, System Name, System Description and System Capability.

To view the following window, click **L2 Features > LLDP > LLDP Basic TLVs Settings**, as shown below:

LLDP Basic TLVs Settings

LLDP Basic TLVs Settings

Unit: 1 | From Port: eth1/0/1 | To Port: eth1/0/1 | Port Description: Disabled | System Name: Disabled | System Description: Disabled | System Capabilities: Disabled |

Unit 1 Settings

Port	Port Description	System Name	System Description	System Capabilities
eth1/0/1	Disabled	Disabled	Disabled	Disabled
eth1/0/2	Disabled	Disabled	Disabled	Disabled
eth1/0/3	Disabled	Disabled	Disabled	Disabled
eth1/0/4	Disabled	Disabled	Disabled	Disabled
eth1/0/5	Disabled	Disabled	Disabled	Disabled
eth1/0/6	Disabled	Disabled	Disabled	Disabled
eth1/0/7	Disabled	Disabled	Disabled	Disabled

Figure 5-104 LLDP Basic TLVs Settings Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the appropriate port range used for the configuration here.
Port Description	Select this option to enable or disable the Port Description option.
System Name	Select this option to enable or disable the System Name option.
System Description	Select this option to enable or disable the System Description option.
System Capabilities	Select this option to enable or disable the System Capabilities option.

Click the **Apply** button to accept the changes made.

LLDP Dot1 TLVs Settings

The LLDP Dot1 TLVs Settings page is used to enable or disable outbound LLDP advertisements for IEEE 802.1 organizationally unique port VLAN ID TLVs.

To view the following window, click **L2 Features > LLDP > LLDP Dot1 TLVs Settings**, as shown below:

LLDP Dot1 TLVs Settings

LLDP Dot1 TLVs Settings

Unit: 1 | From Port: eth1/0/1 | To Port: eth1/0/1 | Port VLAN: Disabled | Protocol VLAN: Disabled | VLAN Name: Disabled | Protocol Identity: Disabled | None |

Unit 1 Settings

Port	Port VLAN ID	Enabled Port and Protocol VID	Enabled VLAN Name	Enabled Protocol Identity
eth1/0/1	Disabled			
eth1/0/2	Disabled			
eth1/0/3	Disabled			
eth1/0/4	Disabled			
eth1/0/5	Disabled			
eth1/0/6	Disabled			
eth1/0/7	Disabled			

Figure 5-105 LLDP Dot1 TLVs Settings Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the appropriate port range used for the configuration here.
Port VLAN	Select this option to enable or disable sending the port VLAN ID TLV. The Port VLAN ID TLV is an optional fixed length TLV that allows a VLAN bridge port to advertise the port VLAN ID (PVID) that will be associated with untagged or priority tagged frames.
Protocol VLAN	Select this option to enable or disable sending the Port and Protocol VLAN ID (PPVID) TLV. Enter the VLAN ID in PPVID TLV.
VLAN Name	Select this option to enable or disable sending the VLAN name TLV. Enter the ID of the VLAN in the VLAN name TLV.
Protocol Identity	Select this option to enable or disable sending the Protocol Identity TLV and the protocol name. Options for protocol name to choose from are None , EAPOL , LACP , GVRP , STP , and All .

Click the **Apply** button to accept the changes made.

LLDP Dot3 TLVs Settings

The LLDP Dot3 TLVs Settings page is used to enable or disable outbound LLDP advertisements for IEEE 802.3 organizationally unique TLVs.

To view the following window, click **L2 Features > LLDP > LLDP Dot3 TLVs Settings**, as shown below:

LLDP Dot3 TLVs Settings

LLDP Dot3 TLVs Settings

Unit: 1 | From Port: eth1/0/1 | To Port: eth1/0/1 | MAC/PHY Configuration/Status: Disabled | Link Aggregation: Disabled | Maximum Frame Size: Disabled | Energy-Efficient Ethernet: Disabled | Power Via MDI: Disabled |

Port	MAC/PHY Configuration/Status	Link Aggregation	Maximum Frame Size	Energy-Efficient Ethernet	Power Via MDI
eth1/0/1	Disabled	Disabled	Disabled	Disabled	Disabled
eth1/0/2	Disabled	Disabled	Disabled	Disabled	Disabled
eth1/0/3	Disabled	Disabled	Disabled	Disabled	Disabled
eth1/0/4	Disabled	Disabled	Disabled	Disabled	Disabled
eth1/0/5	Disabled	Disabled	Disabled	Disabled	Disabled
eth1/0/6	Disabled	Disabled	Disabled	Disabled	Disabled
eth1/0/7	Disabled	Disabled	Disabled	Disabled	Disabled
eth1/0/8	Disabled	Disabled	Disabled	Disabled	Disabled
eth1/0/9	Disabled	Disabled	Disabled	Disabled	Disabled
eth1/0/10	Disabled	Disabled	Disabled	Disabled	Disabled

Figure 5-106 LLDP Dot3 TLVs Settings Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the appropriate port range used for the configuration here.
MAC/PHY Configuration/Status	Select this option to enable or disable the MAC/PHY Configuration/Status TLV to send. The MAC/PHY Configuration/Status TLV is an optional TLV that identifies (1) the duplex and bit-rate capability of the sending IEEE 802.3 LAN

Parameter	Description
	node, and (2) the current duplex and bit-rate settings of the sending IEEE 802.3 LAN node.
Link Aggregation	Select this option to enable or disable the Link Aggregation TLV to send. The Link Aggregation TLV indicates contains the following information. Whether the link is capable of being aggregated, whether the link is currently in an aggregation, and the aggregated port channel ID of the port. If the port is not aggregated, then the ID is 0.
Maximum Frame Size	Select this option to enable or disable the Maximum Frame Size TLV to send. The Maximum Frame Size TLV indicates the maximum frame size capability of the implemented MAC and PHY.
Energy-Efficient Ethernet	Select this option to enable or disable the Energy Efficient Ethernet TLV to send. The Energy Efficient Ethernet TLV indicates the reduce energy consumption capability of a link when no packets are being sent.
Power Via MDI	Select this option to enable or disable the power via MDI TLV to send. IEEE 802.3 PMD implementations allow power to be supplied over the link for connected non-powered systems. The Power Via MDI TLV allows network management to advertise and discover the MDI power support capabilities of the sending IEEE 802.3 LAN station.

Click the **Apply** button to accept the changes made.

LLDP-MED Port Settings

The LLDP-MED Port Settings page is used to enable or disable outbound LLDP advertisements for LLDP-MED TLVs.

To view the following window, click **L2 Features > LLDP > LLDP-MED Port Settings**, as shown below:

LLDP-MED Port Settings

LLDP-MED Port Settings

Unit: 1 From Port: eth1/0/1 To Port: eth1/0/1 Notification: Disabled Capabilities: Disabled Inventory: Disabled Network Policy: Disabled PSE: Disabled

Port	Notification	Capabilities	Inventory	Network Policy	PSE
eth1/0/1	Disabled	Disabled	Disabled	Disabled	Disabled
eth1/0/2	Disabled	Disabled	Disabled	Disabled	Disabled
eth1/0/3	Disabled	Disabled	Disabled	Disabled	Disabled
eth1/0/4	Disabled	Disabled	Disabled	Disabled	Disabled
eth1/0/5	Disabled	Disabled	Disabled	Disabled	Disabled
eth1/0/6	Disabled	Disabled	Disabled	Disabled	Disabled
eth1/0/7	Disabled	Disabled	Disabled	Disabled	Disabled
eth1/0/8	Disabled	Disabled	Disabled	Disabled	Disabled
eth1/0/9	Disabled	Disabled	Disabled	Disabled	Disabled
eth1/0/10	Disabled	Disabled	Disabled	Disabled	Disabled

Figure 5-107 LLDP-MED Port Settings Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the appropriate port range used for the configuration here.
Notification	Select this option to enable or disable transmitting the LLDP-MED notification TLV.

Parameter	Description
Capabilities	Select this option to enable or disable transmitting the LLDP-MED capabilities TLV.
Inventory	Select this option to enable or disable transmitting the LLDP-MED inventory management TLV.
Network Policy	Select this option to enable or disable transmitting the LLDP-MED network policy TLV.
PSE	Select this option to enable or disable transmitting the LLDP-MED extended power via MDI TLV, if the local device is PSE device or PD device.

Click the **Apply** button to accept the changes made.

LLDP-DCBX Port Settings

The LLDP-DCBX Port Settings page is used to enable or disable outbound LLDP advertisements for Data Center Bridging Exchange protocol (DCBX) TLVs.

To view the following window, click **L2 Features > LLDP > LLDP-DCBX Port Settings**, as shown below:

Unit	From Port	To Port	Priority-based Flow Control Configuration TLV
1	eth1/0/1	eth1/0/1	Disabled

Port	Priority-based Flow Control Configuration TLV
eth1/0/1	Disabled
eth1/0/2	Disabled
eth1/0/3	Disabled
eth1/0/4	Disabled
eth1/0/5	Disabled
eth1/0/6	Disabled
eth1/0/7	Disabled
eth1/0/8	Disabled

Figure 5-108 LLDP-DCBX Port Settings Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit ID that will be used here.
From Port - To Port	Select the Switch port range that will be used here.
Priority-based Flow Control Configuration TLV	Select to enable or disable the Priority-based Flow Control (PFC) configuration TLV feature here. This specifies the PFC Configuration TLV to be sent. The PFC TLV is an optional TLV that allows a bridge port to advertise the current operational state and willing bit of the PFC.

Click the **Apply** button to accept the changes made.

LLDP Statistics Information

This window is used to view the neighbor detection activity, LLDP Statistics and the settings for individual ports on the Switch.

To view the following window, click **L2 Features > LLDP > LLDP Statistics Information**, as shown below:

LLDP Statistics Information

LLDP Statistics Information

Last Change Time: 0
 Total Inserts: 0
 Total Deletes: 0
 Total Drops: 0
 Total Ageouts: 0

Clear Counter

LLDP Statistics Ports

Unit: 1 Port: eth1/0/1

Clear Counter Clear All

Unit 1 Settings

Port	Total Transmits	Total Discards	Total Errors	Total Receives	Total TLV Discards	Total TLV Unknowns	Total Ageouts
eth1/0/1	0	0	0	0	0	0	0
eth1/0/2	0	0	0	0	0	0	0
eth1/0/3	0	0	0	0	0	0	0
eth1/0/4	0	0	0	0	0	0	0
eth1/0/5	0	0	0	0	0	0	0
eth1/0/6	0	0	0	0	0	0	0
eth1/0/7	0	0	0	0	0	0	0
eth1/0/8	0	0	0	0	0	0	0

Figure 5-109 LLDP Statistics Information Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used here.
Port	Select the port number that will be used here.

Click the **Clear Counter** button to clear the counter information for the statistics displayed.

Click the **Clear All** button to clear all the counter information displayed.

LLDP Local Port Information

This window is used to display the information currently available for populating outbound LLDP advertisements.

To view the following window, click **L2 Features > LLDP > LLDP Local Port Information**, as shown below:

LLDP Local Port Information

LLDP Local Port Brief Table

Unit: 1 Port: eth1/0/1

Find Show Detail

Unit 1 Settings

Port	Port ID Subtype	Port ID	Port Description
eth1/0/1	Local	eth1/0/1	D-Link Corporation DGS-3630-28...
eth1/0/2	Local	eth1/0/2	D-Link Corporation DGS-3630-28...
eth1/0/3	Local	eth1/0/3	D-Link Corporation DGS-3630-28...
eth1/0/4	Local	eth1/0/4	D-Link Corporation DGS-3630-28...
eth1/0/5	Local	eth1/0/5	D-Link Corporation DGS-3630-28...
eth1/0/6	Local	eth1/0/6	D-Link Corporation DGS-3630-28...
eth1/0/7	Local	eth1/0/7	D-Link Corporation DGS-3630-28...
eth1/0/8	Local	eth1/0/8	D-Link Corporation DGS-3630-28...

Figure 5-110 LLDP Local Port Information Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be displayed.
Port	Select the port number that will be displayed.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show Detail** button to view detailed information of the specific port.

After clicking the **Show Detail** button, the following window will appear.

LLDP Local Port Information	
LLDP Local Information Table	
Port	eth1/0/1
Port ID Subtype	Local
Port ID	eth1/0/1
Port Description	D-Link Corporation DGS-3630-28PC HW A1 firmware 2.25.013 Port 1 on Unit 1
Port PVID	1
Management Address Count	2
PPVID Entries	0
VLAN Name Entries Count	1
Protocol Identity Entries Count	0
MAC/PHY Configuration/Status	Show Detail
Power Via MDI	Show Detail
Link Aggregation	Show Detail
Maximum Frame Size	1536
Energy Efficient Ethernet	Show Detail
LLDP-MED Capabilities	Show Detail
LLDP-DCBX Capabilities	Show Detail
Network Policy	Show Detail
Extended power via MDI	Show Detail
<input type="button" value="Back"/>	

Figure 5-111 LLDP Local Port Information (Show Detail) Window

To view more details about, for example, the **MAC/PHY Configuration/Status**, click the [Show Detail](#) hyperlink.

Click the **Back** button to return to the previous window.

After clicking the [Show Detail](#) hyperlink, a new section will appear at the bottom of the window.

LLDP Local Port Information

LLDP Local Information Table

Port	eth1/0/1
Port ID Subtype	Local
Port ID	eth1/0/1
Port Description	D-Link Corporation DGS-3630-28PC HW A1 firmware 2.25.013 Port 1 on Unit 1
Port PVID	1
Management Address Count	2
PPVID Entries	0
VLAN Name Entries Count	1
Protocol Identity Entries Count	0
MAC/PHY Configuration/Status	Show Detail
Power Via MDI	Show Detail
Link Aggregation	Show Detail
Maximum Frame Size	1536
Energy Efficient Ethernet	Show Detail
LLDP-MED Capabilities	Show Detail
LLDP-DCBX Capabilities	Show Detail
Network Policy	Show Detail
Extended power via MDI	Show Detail

MAC/PHY Configuration/Status

Auto-Negotiation Support	Supported
Auto-Negotiation Enabled	Enabled
Auto-Negotiation Advertised Capability	6c01(hex)
Auto-Negotiation Operational MAU Type	0010(hex)

Back

Figure 5-112 LLDP Local Port Information (Show Detail) Window

Click the **Back** button to return to the previous window.

LLDP Neighbor Port Information

This window is used to display the LLDP information learned from neighboring switches. The Switch receives packets from a remote station but is able to store the information locally.

To view the following window, click **L2 Features > LLDP > LLDP Neighbor Port Information**, as shown below:

LLDP Neighbor Port Information

LLDP Neighbor Port Brief Table

Unit Port Find Clear Clear All

Total Entries: 1

Entity	Chassis ID Subtype	Chassis ID	Port ID Subtype	Port ID	Port Description
1	MAC Address	D0-AE-EC-D9-9E-5E	Local	1/16	Show Detail

Figure 5-113 LLDP Neighbor Port Information Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be displayed.
Port	Select the port number that will be displayed.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Clear** button to clear the specific port information.

Click the **Clear All** button to clear all the port information displayed.

Click the **Show Detail** button to view detailed information of the specific port.

After clicking the **Show Detail** button, the following window will appear.

LLDP Neighbor Information Table	
Entry ID	1
Chassis ID Subtype	MAC Address
Chassis ID	D0-AE-EC-D9-9E-5E
Port ID Subtype	Local
Port ID	1/16
Port Description	
System Name	
System Description	Gigabit Ethernet Switch
System Capabilities	Repeater, Bridge
Management Address Entries	Show Detail
Port PVID	0
PPVID Entries	Show Detail
VLAN Name Entries	Show Detail
Protocol Identity Entries	Show Detail
MAC/PHY Configuration/Status	Show Detail
Power Via MDI	Show Detail
Link Aggregation	Show Detail
Maximum Frame Size	0
Energy Efficient Ethernet	Show Detail
Unknown TLVs	Show Detail
LLDP-MED Capabilities	Show Detail
LLDP-DCBX Capabilities	Show Detail
Network Policy	Show Detail
Extended Power Via MDI	Show Detail
Inventory Management	Show Detail

Figure 5-114 LLDP Neighbor Port Information (Show Detail) Window

To view more details about, for example, the **MAC/PHY Configuration/Status**, click the [Show Detail](#) hyperlink.

Click the **Back** button to return to the previous window.

After clicking the [Show Detail](#) hyperlink, a new section will appear at the bottom of the window.

LLDP Neighbor Information Table	
Entry ID	1
Chassis ID Subtype	MAC Address
Chassis ID	D0-AE-EC-D9-9E-5E
Port ID Subtype	Local
Port ID	1/16
Port Description	
System Name	
System Description	Gigabit Ethernet Switch
System Capabilities	Repeater, Bridge
Management Address Entries	Show Detail
Port PVID	0
PPVID Entries	Show Detail
VLAN Name Entries	Show Detail
Protocol Identity Entries	Show Detail
MAC/PHY Configuration/Status	Show Detail
Power Via MDI	Show Detail
Link Aggregation	Show Detail
Maximum Frame Size	0
Energy Efficient Ethernet	Show Detail
Unknown TLVs	Show Detail
LLDP-MED Capabilities	Show Detail
LLDP-DCBX Capabilities	Show Detail
Network Policy	Show Detail
Extended Power Via MDI	Show Detail
Inventory Management	Show Detail

MAC/PHY Configuration/Status

None

Figure 5-115 LLDP Neighbor Port Information (Show Detail) Window

Click the **Back** button to return to the previous window.

6. Layer 3 Features

ARP

Gratuitous ARP

IPv6 Neighbor

Interface

UDP Helper

IPv4 Static/Default Route

IPv4 Static Route BFD

IPv4 Route Table

IPv6 Static/Default Route

IPv6 Static Route BFD

IPv6 Route Table

Route Preference

ECMP Settings

IPv6 General Prefix

IPv6 Device Monitor Settings

IP Tunnel Settings

URPF Settings

VRF

RIP

RIPng

OSPF

IP Multicast Routing Protocol

BGP

BFD

ISIS

IP Route Filter

Policy Route

VRRP Settings

VRRPv3 Settings

ARP

ARP Elevation

This window is used to display and configure the Address Resolution Protocol (ARP) elevation state. This is used to allow all ARP traffic to the Switch where the destination is the Switch itself. This traffic will take a higher priority than other ARP packets.

To view the following window, click **L3 Features > ARP > ARP Elevation**, as shown below:

Figure 6-1 ARP Elevation Window

The fields that can be configured are described below:

Parameter	Description
ARP Elevation State	Select to enable or disable the ARP elevation feature here.

Click the **Apply** button to accept the changes made.

ARP Aging Time

This window is used to display and configure the ARP aging time settings.

To view the following window, click **L3 Features > ARP > ARP Aging Time**, as shown below:

Figure 6-2 ARP Aging Time Window

The fields that can be configured are described below:

Parameter	Description
Timeout	After click the Edit button, enter the ARP aging timeout value here.

Click the **Edit** button to re-configure the specific entry.

Click the **Apply** button to accept the changes made.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

Static ARP

This window is used to display and configure the static ARP settings.

To view the following window, click **L3 Features > ARP > Static ARP**, as shown below:

Figure 6-3 Static ARP Window

The fields that can be configured are described below:

Parameter	Description
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long.
IP Address	Enter the IP address that will be associated with the MAC address here.
Hardware Address	Enter the MAC address that will be associated with the IP address here.

Click the **Apply** button to accept the changes made.

Click the **Edit** button to re-configure the specific entry.

Click the **Delete** button to remove the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

ARP Force Aging IP Address

This window is used to manually age-out ARP entries, that are assigned as next-hop route entries, by specifying the VRF and IP address of the entry.

To view the following window, click **L3 Features > ARP > ARP Force Aging IP Address**, as shown below:

Figure 6-4 ARP Force Aging IP Address Window

The fields that can be configured are described below:

Parameter	Description
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long.
IP Address	Enter the IP address of the ARP entry that will be forced to age-out here.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

Proxy ARP

This window is used to display and configure the Proxy ARP settings. The Proxy ARP feature will allow the Switch to reply to ARP requests destined for another device by faking its identity (IP and MAC Address) as the original ARP responder. Therefore, the Switch can then route packets to the intended destination without configuring static routing or a default gateway. The host, usually a Layer 3 Switch, will respond to packets destined for another device.

To view the following window, click **L3 Features > ARP > Proxy ARP**, as shown below:

Figure 6-5 Proxy ARP Window

The fields that can be configured are described below:

Parameter	Description
Proxy ARP State	Select to enable or disable the Proxy ARP state here.
Local Proxy ARP State	Select to enable or disable the local Proxy ARP state here. This local Proxy ARP function allows the Switch to respond to the Proxy ARP, if the source IP and destination IP are in the same interface.

Click the **Edit** button to re-configure the specific entry.

Click the **Apply** button to accept the changes made.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

ARP Table

This window is used to display and configure the ARP table settings.

To view the following window, click **L3 Features > ARP > ARP Table**, as shown below:

Figure 6-6 ARP Table Window

The fields that can be configured are described below:

Parameter	Description
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long.
Interface VLAN	Enter the interface VLAN ID used here. This value must be between 1 and 4094 .
IP Address	Select and enter the IP address to display here.
Mask	After the IP Address option was selected, enter the mask address for the IP address here.
Hardware Address	Select and enter the MAC address to display here.
Type	Select the Type option here. Options to choose from are All and Dynamic .
MGMT	Select this option to display the Management port information.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Clear All** button to clear all dynamic ARP cache.

Click the **Clear** button to clear the dynamic ARP cache associated with the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

Gratuitous ARP

This window is used to display and configure the gratuitous ARP settings. A gratuitous ARP request packet is an ARP request packet where the source and the destination IP address are both set to the IP address of the sending device and the destination MAC address is the broadcast address.

Generally, a device uses the gratuitous ARP request packet to discover whether the IP address is duplicated by other hosts or to preload or reconfigure the ARP cache entry of hosts connected to the interface.

To view the following window, click **L3 Features > Gratuitous ARP**, as shown below:

Figure 6-7 Gratuitous ARP Window

The fields that can be configured are described below:

Parameter	Description
IP Gratuitous ARP State	Select to enable or disable the learning of gratuitous ARP packets in the ARP cache table.
Gratuitous ARP Trap State	Select to enable or disable the gratuitous ARP feature trap state here.
IP Gratuitous ARP Dad-Reply State	Select to enable or disable the IP gratuitous ARP Dad-reply state.
Gratuitous ARP Learning State	Select to enable or disable the gratuitous ARP learning state. Normally, the system will only learn ARP entries from ARP reply packets or a normal ARP request packet that asks for the MAC address of the Switch IP address. This option used to enable or disable the learning of ARP entries based on received gratuitous ARP packets. The gratuitous ARP packet is sent by a source IP address and is identical to the IP that the packet is querying.

Click the **Apply** button to accept the changes made.

Click the **Edit** button to re-configure the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Edit** button, the field that can be configured for **Gratuitous ARP Send Interval** is described below:

Parameter	Description
Interval Time	Enter the gratuitous ARP sending interval time, in seconds, here.

Click the **Apply** button to accept the changes made.

IPv6 Neighbor

This window is used to display and configure the IPv6 neighbor settings.

To view the following window, click **L3 Features > IPv6 Neighbor**, as shown below:

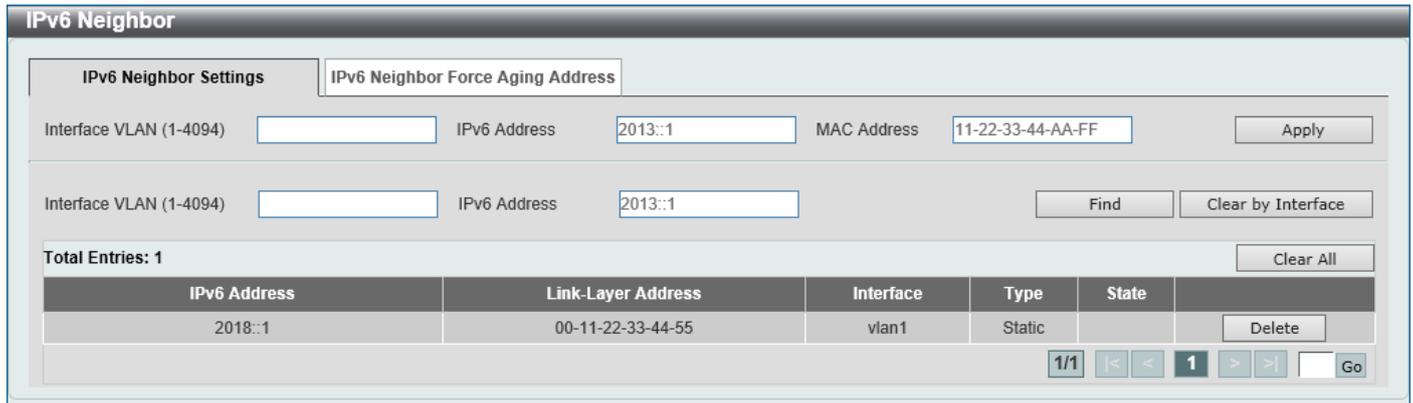


Figure 6-8 IPv6 Neighbor Window

The fields that can be configured are described below:

Parameter	Description
Interface VLAN	Enter the VLAN interface ID here.
IPv6 Address	Enter the IPv6 address.
MAC Address	Enter the MAC address.

Click the **Apply** button to accept the changes made.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Clear by Interface** button to clear all the dynamic information for the specific interface.

Click the **Clear All** button to clear all the dynamic IPv6 neighbor information in this table.

Click the **Delete** button to remove the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After selecting the **IPv6 Neighbor Force Aging Address** tab, the following page will appear.



Figure 6-9 IPv6 Neighbor Force Aging Address Window

The fields that can be configured are described below:

Parameter	Description
Interface VLAN	Enter the ID of the VLAN interface here.
IPv6 Address	Enter the IPv6 address of the IPv6 neighbor cache entry that will be forced to age-out here.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

Interface

IPv4 Interface

This window is used to display and configure the IPv4 interface settings.

To view the following window, click **L3 Features > Interface > IPv4 Interface**, as shown below:

IPv4 Interface

Interface VLAN (1-4094) Apply Find

Total Entries: 1

Interface	State	IP Address	Secondary	Link Status	Edit	Delete
vlan1	Enabled	10.90.90.90/255.0.0.0 Manual	No	Up	Edit	Delete

1/1 < < **1** > > Go

Figure 6-10 IPv4 Interface Window

The fields that can be configured are described below:

Parameter	Description
Interface VLAN	Enter the interface VLAN ID here. This value must be between 1 and 4094.

Click the **Apply** button to accept the changes made.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Edit** button to re-configure the specific entry.

Click the **Delete** button to remove the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Edit** button, the following page will be available.

The screenshot shows the 'IPv4 Interface Configure' window for interface 'vian1'. It is divided into several sections:

- IPv4 Interface Settings:** Includes 'State' (Enabled), 'IP VRF Forwarding' (empty), 'IP MTU (512-12288)' (1500 bytes), 'IP Directed Broadcast' (Disabled), and 'Description' (64 chars).
- Primary IP Settings:** Includes 'Get IP From' (Static), 'IP Address' (10 . 90 . 90 . 90), and 'Mask' (255 . 0 . 0 . 0).
- Secondary IP Settings:** Includes 'IP Address' and 'Mask' (both empty).
- Secondary IP Entry:** A table with 1 entry:

IP Address	Mask	Boot Mode	Secondary	
192.168.70.123	255.255.255.0	Manual	Yes	Delete

Figure 6-11 IPv4 Interface (Edit) Window

The fields that can be configured in the **Settings** section are described below:

Parameter	Description
State	Select to enable or disable the IPv4 interface global state.
IP VRF Forwarding	Enter the VRF instance name that will be forwarded here.
IP MTU	Enter the MTU value here. The range is from 512 to 12288 bytes. By default, this value is 1500 bytes.
IP Directed Broadcast	Select to enable or disable the IP directed broadcast feature here. This parameter is used to enable or disable the conversion of IP directed broadcasts received by the interface to physical broadcasts when the destination network is directly connected to the Switch.
Description	Enter the description for this entry here. This string can be up to 64 characters long.

Click the **Back** button to return to the previous window.

Click the **Apply** button to accept the changes made.

The fields that can be configured in the **Primary IP Settings** section are described below:

Parameter	Description
Get IP From	Select the get IP from option here. Options to choose from are Static and DHCP . <ul style="list-style-type: none"> When the Static option is selected, users can enter the IPv4 address of this interface manually in the fields provided.

Parameter	Description
	<ul style="list-style-type: none"> When the DHCP option is selected, this interface will obtain IPv4 information automatically from the DHCP server located on the local network.
IP Address	Enter the primary IPv4 address for this interface here.
Mask	Enter the primary IPv4 subnet mask for this interface here.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the specific entry.

The fields that can be configured in the **Secondary IP Settings** section are described below:

Parameter	Description
IP Address	Enter the secondary IPv4 address for this interface here.
Mask	Enter the secondary IPv4 subnet mask for this interface here.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After selecting the **DHCP Client** tab, the following page will appear.

The screenshot shows the 'IPv4 Interface Configure' window with the 'DHCP Client' tab selected. The 'IPv4 Interface Settings' tab is also visible. The DHCP Client section contains the following fields:

- DHCP Client Client-ID (1-4094)**: A text input field.
- Class ID String**: A text input field with '32 chars' and a 'Hex' checkbox.
- Host Name**: A text input field with '64 chars'.
- Lease**: A text input field for 'Minutes', followed by 'Days (0-10000)' with a dropdown set to '00', and 'Hours' with a dropdown set to '00'.

An 'Apply' button is located at the bottom right of the DHCP Client section.

Figure 6-12 IPv4 Interface (Edit, DHCP Client) Window

The fields that can be configured are described below:

Parameter	Description
DHCP Client Client-ID	Enter the DHCP Client ID here. The range is from 1 to 4094. This parameter is used to specify the VLAN interface whose hexadecimal MAC address will be used as the client ID sent with the discover message.
Class ID String	Enter the class ID string here. This string can be up to 32 characters long. Select the Hex option to enter the Class ID string in the hexadecimal format. This string can be up to 64 characters long. This parameter is used to specify the vendor class identifier used as the value of Option 60 in the DHCP discover message.
Host Name	Enter the host name here. This string can be up to 64 characters long. This parameter is used to specify the value of the host name option to be sent with the DHCP discover message.
Lease	Enter and optionally select the DHCP client lease time here. In the text box the lease time, in days, can be entered. The range is from 0 to 10000 days. Hours and Minutes can also be selected optionally.

Click the **Apply** button to accept the changes made.

IPv6 Interface

This window is used to display and configure the IPv6 interface settings.

To view the following window, click **L3 Features > Interface > IPv6 Interface**, as shown below:

Figure 6-13 IPv6 Interface Window

The fields that can be configured in **IPv6 Optimistic DAD** are described below:

Parameter	Description
IPv6 Optimistic DAD State	Select to enable or disable the IPv6 Optimistic Duplicate Address Detection (DAD) state here.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **IPv6 Interface** are described below:

Parameter	Description
Interface VLAN	Enter the VLAN interface ID that will be associated with the IPv6 entry.

Click the **Apply** button to accept the changes made.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show Detail** button to view and configure more detailed settings for the IPv6 interface entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Show Detail** button, the following page will be available.

Figure 6-14 IPv6 Interface (Detail, IPv6 Interface Settings) Window

The fields that can be configured are described below:

Parameter	Description
IPv6 MTU	Enter the IPv6 MTU value here. The range is from 1280 to 12288 bytes. By default, this value is 1500 bytes. This parameter is used to configure the MTU to be advertised in RA messages.
IPv6 State	Select to enable or disable the IPv6 interface global state here.

Click the **Back** button to discard the changes made and return to the previous page.

Click the **Apply** button to accept the changes made.

The fields that can be configured for **IPv6 Address Autoconfig** are described below:

Parameter	Description
State	Select to enable or disable the automatic configuration of the IPv6 address using stateless auto-configuration here. Select the Default option to specify that if the default router is selected on this interface, a default route will be installed using that default router. This option can only be specified on one interface.

Click the **Apply** button to accept the changes made.

The fields that can be configured for **Static IPv6 Address Settings** are described below:

Parameter	Description
IPv6 Address	Enter the IPv6 address for this IPv6 interface here. Select the EUI-64 option to configure an IPv6 address on the interface using the EUI-64 interface ID. Select the Link Local option to configure a link-local address for the IPv6 interface.

Click the **Apply** button to accept the changes made.

The fields that can be configured for **NS Interval Settings** are described below:

Parameter	Description
NS Interval	Enter the Neighbor Solicitation (NS) interval value here. The range is from 0 to 3600000 milliseconds, in multiples of 1000. If the specified time is 0, the router will use 1 second on the interface and advertise 0 (unspecified) in the Router Advertisement (RA) message.

Click the **Apply** button to accept the changes made.

The fields that can be configured for **ND Settings** are described below:

Parameter	Description
Hop Limit	Enter the hop limit value here. The range is from 0 to 255. The IPv6 packet originated by the system will also use this value as the initial hop limit.
Reachable Time	Enter the Reachable Time here. The range is from 0 to 3600000 milliseconds. If the specified time is 0, the router will use 1200 seconds on the interface and advertise 0 (unspecified) in the RA message. The Reachable Time is used by the IPv6 node in determining the reachability of the neighbor nodes.
Managed Config Flag	Turn the Managed Config Flag option On or Off here. When the neighbor host receives the RA which has flag turned on, the host should use a stateful configuration protocol to obtain IPv6 addresses.
Other Config Flag	Turn the Other Config Flag option On or Off here. By setting the other configuration flag on, the router instructs the connected hosts to use a stateful configuration protocol to obtain auto-configuration information other than the IPv6 address.
RA Min Interval	Enter the minimum RA interval time value here. The range is from 3 to 1350 seconds. This value must be smaller than 0.75 times the maximum value.
RA Max Interval	Enter the maximum RA interval time value here. The range is from 4 to 1800 seconds.
RA Lifetime	Enter the RA lifetime value here. The range is from 0 to 9000 seconds. The lifetime value in RA instructs the received host the lifetime value for taking the router as the default router.
RA Suppress	Select to enable or disable the RA suppress feature here.

Click the **Apply** button to accept the changes made.

After selecting the **Interface IPv6 Address** tab option, at the top of the page, the following page will be available.

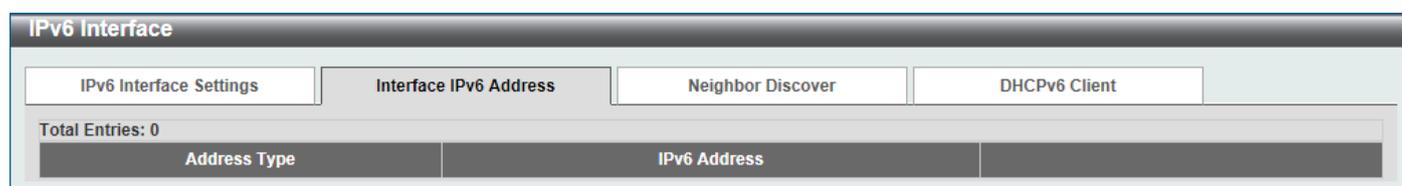


Figure 6-15 IPv6 Interface (Detail, Interface IPv6 Address) Window

Click the **Delete** button to delete the specified entry.

After selecting the **Neighbor Discover** tab option, at the top of the page, the following page will be available.



Figure 6-16 IPv6 Interface (Detail, Neighbor Discover) Window

After selecting the **DHCPv6 Client** tab option, at the top of the page, the following page will be available.

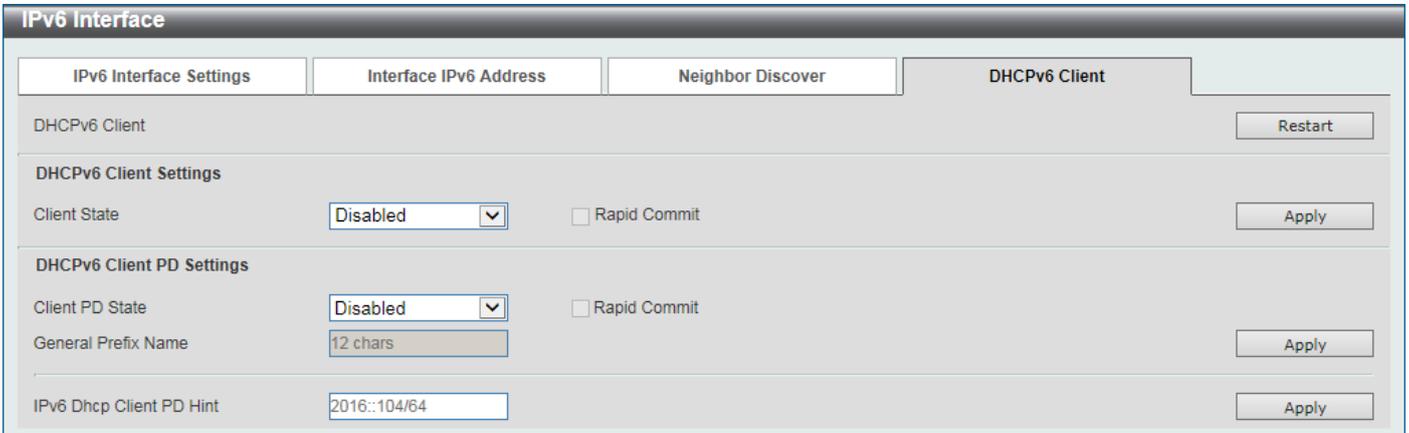


Figure 6-17 IPv6 Interface (Detail, DHCPv6 Client) Window

Click the **Restart** button to restart the DHCPv6 client service.

The fields that can be configured for **DHCPv6 Client Settings** are described below:

Parameter	Description
Client State	Select to enable or disable the DHCPv6 client service here. Select the Rapid Commit option to proceed with two-message exchange for address delegation. The rapid-commit option will be included in the Solicit message to request a two-message handshake.

Click the **Apply** button to accept the changes made.

The fields that can be configured for **DHCPv6 Client PD Settings** are described below:

Parameter	Description
Client PD State	Select to enable or disable the DHCPv6 client process that requests a Prefix Delegation (PD) through a specified interface. Select the Rapid Commit option to proceed with two-message exchange for prefix delegation. The rapid-commit option will be included in the Solicit message to request a two-message handshake.
General Prefix Name	Enter the IPv6 general prefix name here. This name can be up to 12 characters long.
IPv6 DHCP Client PD Hint	Enter the IPv6 prefix to be sent in the message as a hint here.

Click the **Apply** button to accept the changes made.

Loopback Interface

This window is used to display and configure the loopback interface settings. A loopback interface is a software only interface which always stays in the up status.

To view the following window, click **L3 Features > Interface > Loopback Interface**, as shown below:

Figure 6-18 Loopback Interface Window

The fields that can be configured are described below:

Parameter	Description
Interface Loopback	Enter the loopback interface ID here. The range is from 1 to 8.

Click the **Apply** button to accept the changes made.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Edit** button to modify the specified entry.

Click the **Delete** button to delete the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Edit** button, the following page will appear.

Figure 6-19 Loopback Interface (Edit) Window

The fields that can be configured are described below:

Parameter	Description
State	Select to enable or disable the loopback interface here.
Description	Enter the description for the loopback interface here. This string can be up to 64 characters long.

Parameter	Description
IP Address	Enter the IPv4 address associated with this loopback interface here.
Mask	Enter the IPv4 subnet mask associated with this loopback interface here.
IPv6 Address	Enter the IPv6 address associated with this loopback interface here.
Link Local	Select this option to specify that the IPv6 address entered is the link-local IPv6 address.

Click the **Back** button to return to the previous window.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to delete the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

Null Interface

This window is used to display and configure the Null interface settings.

To view the following window, click **L3 Features > Interface > Null Interface**, as shown below:

Interface	State	Link Status	Description
null0	Enabled	Link Up	

Figure 6-20 Null Interface Window

The fields that can be configured are described below:

Parameter	Description
Interface Null	Enter the Null interface ID here. This value can only be 0.
Description	After clicking the Edit button, enter the description for the Null interface here. This string can be up to 64 characters long.

Click the **Apply** button to accept the changes made.

Click the **Edit** button to modify the description for the Null interface.

UDP Helper

IP Forward Protocol

This window is used to display and configure the IP forward protocol settings. This feature is used to enable the forwarding of a specific UDP service type of packets.

To view the following window, click **L3 Features > UDP Helper > IP Forward Protocol**, as shown below:

IP Forward Protocol

IP Forward Protocol UDP Port (1-65535)

Total Entries: 7

UDP Port	Application	Delete
37	Time Service	<input type="button" value="Delete"/>
42	IEN-116 Name Service	<input type="button" value="Delete"/>
49	TACACS	<input type="button" value="Delete"/>
53	DNS	<input type="button" value="Delete"/>
69	TFTP	<input type="button" value="Delete"/>
137	NetBIOS-NS	<input type="button" value="Delete"/>
138	NetBIOS-DS	<input type="button" value="Delete"/>

1/1

Figure 6-21 IP Forward Protocol Window

The fields that can be configured are described below:

Parameter	Description
IP Forward Protocol UDP Port	Enter the destination port of the UDP service to be forwarded here. The range is from 1 to 65535.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to delete the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

IP Helper Address

This window is used to add or remove a target address for the forwarding of UDP broadcast packets. This feature takes effect only when the received interface has an IP address assigned.

The system only forwards packets that satisfy the following restrictions:

- The destination MAC address must be a broadcast address.
- The destination IP address must be an all-one broadcast.
- The packets are IPv4 UDP packets.
- The IP TTL value must be greater than or equal to 2.

To view the following window, click **L3 Features > UDP Helper > IP Helper Address**, as shown below:

IP Helper Address

IP Helper Address

Interface VLAN (1-4094)

VRF State

VRF Name Global

Helper Address

Total Entries: 1

Interface VLAN	Helper Address	VRF Name	Delete
VLAN1	192.168.10.3		<input type="button" value="Delete"/>

1/1

Figure 6-22 IP Helper Address Window

The fields that can be configured are described below:

Parameter	Description
Interface VLAN	Enter the VLAN interface ID used here. The range is from 1 to 4094.
VRF State	Select the VRF state here. Options to choose from are True and False .
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long. Select the Global option to specify that the IP address is selected from the global address space.
Helper Address	Enter the target IPv4 address for the forwarding of the UDP broadcast packet here.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to delete the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

IPv4 Static/Default Route

This window is used to display and configure the IPv4 static and default route settings. The Switch supports static routing for IPv4 formatted addressing. Users can create up to 512 static route entries for IPv4. For IPv4 static routes, once a static route has been set, the Switch will send an ARP request packet to the next hop router that has been set by the user. Once an ARP response has been retrieved by the Switch from that next hop, the route becomes enabled. However, if the ARP entry already exists, an ARP request will not be sent.

The Switch also supports a floating static route, which means that the user may create an alternative static route with a different next hop. This secondary next hop device route is considered as a backup static route when the primary static route is down. If the primary route is lost, the backup route will become active and begin forwarding traffic.

Entries into the Switch's forwarding table can be made using an IP address, subnet mask and gateway.

To view the following window, click **L3 Features > IPv4 Static/Default Route**, as shown below:

Figure 6-23 IPv4 Static/Default Route Window

The fields that can be configured are described below:

Parameter	Description
VRF Name	Select and enter the name of the VRF instance here. This name can be up to 12 characters long.

Parameter	Description
IP Address	Enter the IPv4 address for this route here. Tick the Default Route option to use the default route as the IPv4 address.
Mask	Enter the IPv4 network mask for this route here.
IP Tunnel	Select the IP Tunnel option to use the IP tunnel feature and enter the tunnel ID in the space provided. The range of IDs is from 0 to 9999.
Gateway	Enter the gateway address for this route here.
Null Interface	Select to enable or disable the NULL interface here.
Backup State	Select the backup state option here. Options to choose from are: <ul style="list-style-type: none"> • Primary - Specifies the route as the primary route to the destination. • Backup - Specifies the route as the backup route to the destination. • Weight - Specifies a weight number greater than zero, but less than the maximum paths number. This number is used to replicate identical route paths (multiple copies) in the routing table, so the paths get more chance of being hit for traffic routing. Enter the weight value in the space provided. The range is from 1 to 64.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the specific entry.

Click the **Find** button to locate a specific entry based on the information entered.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

IPv4 Static Route BFD

This window is used to display and configure the IPv4 static route Bidirectional Forwarding Detection (BFD) settings.

To view the following window, click **L3 Features > IPv4 Static Route BFD**, as shown below:

Figure 6-24 IPv4 Static Route BFD Window

The fields that can be configured are described below:

Parameter	Description
Interface Name	Enter the name of the interface that will be used to create the BFD session here. This name can be up to 12 characters long.
IP Address	Enter the IP address of the BFD peer here.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

IPv4 Route Table

This window is used to display and configure the IPv4 route table settings.

To view the following window, click **L3 Features > IPv4 Route Table**, as shown below:

Figure 6-25 IPv4 Route Table Window

The fields that can be configured are described below:

Parameter	Description
Show All	Select this option to display all IPv4 routes.
IP Address	Select and enter the single IPv4 address here.
Network Address	Select and enter the IPv4 network address here. In the first space enter the network prefix and in the second space enter the network mask.
RIP	Select this option to display only RIP routes.
OSPF	Select this option to display only OSPF routes.
BGP	Select this option to display only BGP routes.
ISIS	Select this option to display only ISIS routes.
Connected	Select this option to display only connected routes.
Hardware	Select this option to display only hardware routes. Hardware routes are routes that have been written into the hardware chip.
Summary	Select this option to display a summary and count of the route sources configured on this Switch.
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long.

Click the **Find** button to locate a specific entry based on the information entered.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

IPv6 Static/Default Route

This window is used to display and configure the IPv6 static or default routes.

To view the following window, click **L3 Features > IPv6 Static/Default Route**, as shown below:

Figure 6-26 IPv6 Static/Default Route Window

The fields that can be configured are described below:

Parameter	Description
IPv6 Address/Prefix Length	Enter the IPv6 address and prefix length for this route here. Tick the Default Route option to use this route as the default route.
IP Tunnel	Select the IP Tunnel option to use the IP tunnel feature and enter the tunnel ID in the space provided. The range of IDs is from 0 to 9999.
Interface Name	Enter the name of the interface that will be associated with this route here.
Next Hop IPv6 Address	Enter the next hop IPv6 address here.
Distance	Enter the administrative distance of the static route here. This value must be between 1 and 254 . A lower value represents a better route. If not specified, the default administrative distance for a static route is 1 .
Backup State	Select the backup state option here. Options to choose from are Primary , and Backup . When the Primary option is selected, the route is specified as the primary route to the destination. When the Backup option is selected, the route is specified as the backup route to the destination.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

IPv6 Static Route BFD

This window is used to display and configure the IPv6 static route Bidirectional Forwarding Detection (BFD) settings.

To view the following window, click **L3 Features > IPv6 Static Route BFD**, as shown below:

Figure 6-27 IPv6 Static Route BFD Window

The fields that can be configured are described below:

Parameter	Description
Interface Name	Enter the name of the interface that will be used to create the BFD session here. This name can be up to 12 characters long.
IPv6 Address	Enter the IPv6 address of the BFD peer here.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

IPv6 Route Table

This window is used to display and configure the IPv6 route table.

To view the following window, click **L3 Features > IPv6 Route Table**, as shown below:

Figure 6-28 IPv6 Route Table Window

The fields that can be configured are described below:

Parameter	Description
IPv6 Address	Select and enter the IPv6 address to display here.
IPv6 Address/Prefix Length	Select and enter the IPv6 address and prefix length to display here. Select the Longer Prefixes option to display IPv6 routes with prefixes greater than and equal to the prefix length.
Interface Name	Select and enter the name of the interface to display here.
Connected	Select this option to display only connected routes.
RIPng	Select this option to display only RIPng routes.
OSPFv3	Select this option to display only OSPFv3 routes.
ISIS	Select this option to display only ISIS routes.
BGP	Select this option to display only BGP routes.
Database	Select this option to display all the related entries in the routing database instead of just the best route.
Hardware	Select this option to display only hardware routes. Hardware routes are routes that have been written into the hardware chip.
Summary	Select this option to display a summary and count of the route sources configured on this Switch.

Click the **Find** button to locate a specific entry based on the information entered.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

Route Preference

This window is used to display and configure the route preference settings. Use this window to configure the distance, which represents the route's trust rating. The route with a lower distance value is preferred over the route with a higher distance value.

To view the following window, click **L3 Features > Route Preference**, as shown below:

Figure 6-29 Route Preference Window

The fields that can be configured are described below:

Parameter	Description
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long. Click the Please Select button to select a pre-configured VRF instance that will be used here.
Distance Default	Enter the administrative distance of default routes here. The range is from 1 to 255. By default, this value is 1.
Distance Static	Enter the administrative distance of static routes here. The range is from 1 to 255. By default, this value is 60.
Distance PD	Enter the administrative distance for static routes by delegated prefix. The range is from 1 to 254.

Click the **Apply** button to accept the changes made.

After clicking the **Please Select** button, the following page will appear.

Figure 6-30 Route Preference (Please Select) Window

Select the VRF entry and click the **OK** button to use the selected VRF entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

ECMP Settings

This window is used to display and configure the Equal-Cost Multi-Path (ECMP) routing settings. This is used to configure the load balancing hash algorithm and used to determine the next hop entry for multiple paths destined for the same destination.

To view the following window, click **L3 Features > ECMP Settings**, as shown below:

Figure 6-31 ECMP Settings Window

The fields that can be configured in **ECMP Load Balancing Settings** are described below:

Parameter	Description
Destination IP	Select this option to use the destination IP address as the ECMP hash key.
Source IP	Select this option to use the least significant bits of the source IP address as the ECMP hashing algorithm.
CRC 32 Lower	Select this option to use the lower bits of CRC-32 as the ECMP hashing algorithm.
CRC 32 Upper	Select this option to use the upper bits of CRC-32 as the ECMP hashing algorithm.
TCP/UDP Port	Select this option to use TCP/UDP port number as ECMP hash key.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **ECMP Advance Control Mode** are described below:

Parameter	Description
ECMP Advance Control Mode Setting	Select the ECMP advance control mode settings here. This specifies the number of ECMP or multipath routes and the number of next-hops of each ECMP or multipath route that will be changed according to the specified value. Options to choose from are 64, 128, 256, 512, and 1024 .

Click the **Apply** button to accept the changes made.

IPv6 General Prefix

This window is used to display and configure the VLAN interface IPv6 general prefix settings.

To view the following window, click **L3 Features > IPv6 General Prefix**, as shown below:

Figure 6-32 IPv6 General Prefix Window

The fields that can be configured are described below:

Parameter	Description
Interface VLAN	Enter the VLAN interface ID used here. The range is from 1 to 4094.
Prefix Name	Enter the IPv6 general prefix entry name here. This name can be up to 12 characters long.
IPv6 Address	Enter the IPv6 address and prefix length here. The prefix length of the IPv6 address is also the local subnet on the VLAN interface.

Click the **Apply** button to accept the changes made.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Delete** button to delete the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

IPv6 Device Monitor Settings

This window is used to configure the IPv6 device monitor settings.

To view the following window, click **L3 Features > IPv6 Device Monitor Settings**, as shown below:

Figure 6-33 IPv6 Device Monitor Settings Window

The fields that can be configured are described below:

Parameter	Description
IPv6 Address	Enter the IPv6 address here.

Parameter	Description
State	Select to enable or disable the IPv6 device monitor.
Interval	Enter the interval for issuing the ping request to detect the target. The range is from 10 to 300.
Timeout	Enter the timeout period for waiting a response from the remote device. The range is from 1 to 99.
Retry	Enter the retry counts of ping requests. The range is from 0 to 5.
Neighbor Cache	Select the action when the ping check fails. Options to choose from are: <ul style="list-style-type: none"> • clear-all - Clear all IPv6 neighbor entries on the Switch when the ping check fails. • clear-target - Clear the monitored target IPv6 neighbor entry when the ping check fails.

Click the **Apply** button to accept the changes made.

IP Tunnel Settings

This window is used to display and configure the IP tunnel settings.

To view the following window, click **L3 Features > IP Tunnel Settings**, as shown below:

Figure 6-34 IP Tunnel Settings Window

The fields that can be configured are described below:

Parameter	Description
Interface Tunnel ID	Enter the IP tunnel interface ID here. The range is from 0 to 9999.

Click the **Apply** button to accept the changes made.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Edit** button to modify the specified entry.

Click the **Delete** button to delete the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Edit** button, the following page will appear.

Figure 6-35 IP Tunnel Settings (Edit) Window

The fields that can be configured are described below:

Parameter	Description
Status	Select the IP tunnel interface status here. Options to choose from are Up and Down .
Description	Enter the description for this IP tunnel interface here. This string can be up to 64 characters long.
Tunnel Mode	Select the tunnel mode here. Options to choose from are IPv6 IP , 6to4 , ISATAP , GRE IP , and GRE IPv6 . <ul style="list-style-type: none"> • IPv6 IP - Specifies that the interface is an IPv6 IP tunnel interface. • 6to4 - Specifies that the interface is a 6to4 tunnel interface. • ISATAP - Specifies that the interface is an ISATAP tunnel interface. • GRE IP - Specifies that the interface is a GRE tunnel interface. The delivery protocol is the IPv4 protocol. • GRE IPv6 - Specifies that the interface is a GRE tunnel interface. The delivery protocol is the IPv6 protocol.
Source IPv4 Address	Select and enter the source IPv4 address for the tunnel interface here.
Source IPv6 Address	Select and enter the source IPv6 address for the tunnel interface here.
Destination IPv4 Address	Select and enter the destination IPv4 address for the tunnel interface here.
Destination IPv6 Address	Select and enter the destination IPv6 address for the tunnel interface here.
Network Address	Enter the network address(es) in the spaces provided here.
IPv6 Address/Prefix Length	Enter the IPv6 address and prefix length here.

Click the **Apply** button to accept the changes made.

Click the **Back** button to return to the previous window.

URPF Settings

This window is used to display and configure the Unicast Reverse Path Forwarding (URPF) settings. One common method to initiate an attack on a network is to utilize IPv4/IPv6 source address spoofing. When using this method, traffic is sent into the network with a source address that is known or trusted by the target. If no protection exists, the organizational network will allow the traffic and potentially be open to a number of different attack types. Unicast RPF helps to mitigate problems caused by malformed or forged IPv4/IPv6 source addresses passing through the router.

To view the following window, click **L3 Features > URPF Settings**, as shown below:

Figure 6-36 URPF Settings Window

The fields that can be configured in **URPF Global Settings** are described below:

Parameter	Description
URPF State	Select to globally enable or disable the URPF state here.

Click the **Apply** button to accept the changes made.



NOTE: When enabled, the hardware routing table needs to be searched using the Session Initiation Protocol (SIP) first and then using the Dynamic Inspection Protocol (DIP). This is achieved by splitting the table into two halves so that the size of the IP routing table will be reduced by half. This will not take effect until the configuration was saved and the Switch was rebooted.

The fields that can be configured in **URPF Port Default Settings** are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the range of ports that will be used for this configuration here.
Reachable Via	Select this option to use the default reachable via setting, which is RX .
Allow Default	Select this option to use the 'default allow' default setting, which is False .
IP Access List Name	Select this option to use the default IP access list configuration.
IPv6 Access List Name	Select this option to use the default IPv6 access list configuration.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **URPF Port Settings** are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.

Parameter	Description
From Port - To Port	Select the range of ports that will be used for this configuration here.
Reachable Via	Select the reachable via option here. Options to choose from are: <ul style="list-style-type: none"> • Any - Specifies to verify if the source address is present in the routing table (sometimes referred to as loose mode). • RX - Specifies to verify if the source address is present in the routing table and if the incoming interface matching the source is reachable through the interface on which the packet was received (sometimes referred to as strict mode).
Allow Default	Select the allow default option here. Options to choose from are: <ul style="list-style-type: none"> • True - Specifies the use of the default route for Unicast RPF verification. • False - Specifies not to use the default route for Unicast RPF verification.
IP Access List Name	Enter the name of the IP access list that will be used in the URPF check here. This string can be up to 32 characters long.
IPv6 Access List Name	Enter the name of the IPv6 access list that will be used in the URPF check here. This string can be up to 32 characters long.

Click the **Apply** button to accept the changes made.

VRF

VRF Settings

This window is used to display and configure the Virtual Routing and Forwarding (VRF) settings.

To view the following window, click **L3 Features > VRF > VRF Settings**, as shown below:

Figure 6-37 VRF Settings Window

The fields that can be configured are described below:

Parameter	Description
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long.

Click the **Apply** button to accept the changes made.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show All** button to display all the available entries.

Click the **Edit** button to re-configure the specific entry.

Click the **Show Detail** button to view more detailed information about the specific entry.

Click the **Delete** button to remove the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Edit** button, the following page will appear.

Figure 6-38 VRF Settings (Edit) Window

Click the **Back** button to return to the previous window.

The fields that can be configured in **VRF Max Routes Settings** are described below:

Parameter	Description
Max Routes	Enter the maximum number of routes within the VRF here. The range is from 1 to 16384.
Warning Threshold	Enter the warning threshold value here. Notification messages will be sent when the number of routes reaches the threshold and no more routes will be written into the hardware. The range is from 1 to 100 percent. Select the warning-only option to specify that when the number of routes exceeds the threshold, a notification message will be sent. More routes, however, can still be written into the hardware.
None	Select this option to disable the limit feature.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **VRF Import Map Settings** are described below:

Parameter	Description
Import Map Name	Enter the name of the import Route Map of the VRF here.
None	Select this option to disable the import of the Route Map.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Route Distinguisher Settings** are described below:

Parameter	Description
Route Distinguisher	Enter the Route Distinguisher (RD) of the VRF here. This is used to prepend an 8-bytes value to an IPv4 prefix to create a VPN-IPv4 prefix.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **VPN Route Target Community Settings** are described below:

Parameter	Description
Route Target Extended Community	Enter the value of the Route Target here. The Route Target is a useful VPN application. One VRF can have multiple route targets.
Route Target Type	Select the Route Target type here. Options to choose from are: <ul style="list-style-type: none"> • Import - Specifies to add an import Route Target to import routing information from the target VPN extended community. • Export - Specifies to add an export Route Target to export routing information to the target VPN extended community. • Both - Specifies to add both an import Route Target and an export route target.

Click the **Apply** button to accept the changes made.

After clicking the **Show Detail** button, the following page will appear.

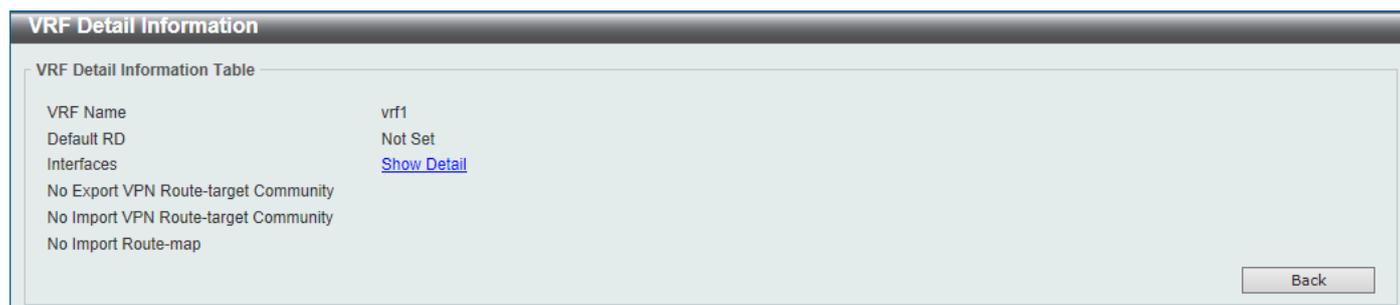


Figure 6-39 VRF Settings (Show Detail) Window

Click the **Back** button to return to the previous window.

After clicking the [Show Detail](#) link, the following page will appear.



Figure 6-40 VRF Settings (Show Detail, Show Detail) Window

Click the **Back** button to return to the previous window.

VRF Interface Settings

This window is used to display and configure the VRF interface settings.

To view the following window, click **L3 Features > VRF > VRF Interface Settings**, as shown below:

Figure 6-41 VRF Interface Settings Window

The fields that can be configured in **VRF Interface Settings** are described below:

Parameter	Description
Interface VLAN	Enter the ID of the VLAN interface here. The range is from 1 to 4094.
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **VRF Loopback Interface Settings** are described below:

Parameter	Description
Loopback Interface	Select the ID of the loopback interface here. The range is from 1 to 8.
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Find VRF Interface** are described below:

Parameter	Description
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Delete** button to remove the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

RIP

RIP Settings

This window is used to display and configure Routing Information Protocol (RIP) settings.

To view the following window, click **L3 Features > RIP > RIP Settings**, as shown below:

Figure 6-42 RIP Settings Window

The fields that can be configured in **RIP Global Settings** are described below:

Parameter	Description
RIP State	Select to globally enable or disable the Routing Information Protocol (RIP) feature here.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **VRF Address Family Table** are described below:

Parameter	Description
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long.

Click the **Apply** button to accept the changes made.

Click the **Edit** button to re-configure the specific entry.

Click the **Delete** button to remove the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Edit** button, the following page will appear.

Figure 6-43 RIP Settings (Edit) Window

Click the **Back** button to return to the previous window.

The fields that can be configured in **Redistribution Configuration** are described below:

Parameter	Description
Redistribution	<ul style="list-style-type: none"> • First, select to enable or disable the RIP redistribution feature here. • Second, select the routing protocol (domain) that will be redistributed into RIP. Options to choose from are BGP, Connected, OSPF, Static, and ISIS. The Static option means redistribute IP static routes. The Connected option refers to routes that are established automatically through configuring an IP address on an interface. • Third, enter the value to be used as the metric for the redistributed route here. The range is from 0 to 16. • Fourth, enter the Route Map name that is used in the filtering of the routes to be redistributed to the current routing protocol. If not specified, all routes are redistributed.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **RIP Configuration** are described below:

Parameter	Description
Update Time	<p>Enter the update interval in seconds at which the update message is sent. The range is from 1 to 65535 seconds.</p> <p>Select the Default option to use the default value here which is 30 seconds.</p>
Invalid Time	<p>Enter the invalid time value in seconds here. The range is from 1 to 65535 seconds.</p> <p>Select the Default option to use the default value here which is 180 seconds.</p>

Parameter	Description
Garbage Collection Timer	Enter the flush time value in seconds here. The range is from 1 to 65535 seconds. Select the Default option to use the default value here which is 120 seconds.
Default Metric	Enter the default metric value here. The range is from 0 to 16. The default metric is used in redistributing routes from other routing protocols. The routes being redistributed are learned by other protocols and may have an incompatible metric to RIP. The specifying of the metric allows the metric to be synced. Select the Default option to use the default metric value, which is 0.
Version	Select the global RIP version that will be used as the default version for all interfaces here. Options to choose from are v1 (RIPv1) and v2 (RIPv2). Select the Default option to specify that this feature should use the default configuration. By default, RIPv1 and RIPv2 packets are received, but only RIPv1 packets are sent.
Distance	Enter the Administrative Distance for RIP here. The range is from 1 to 255. A lower value represents a better route. Select the Default option to use the default Administrative Distance for RIP, which is 100.

Click the **Apply** button to accept the changes made.

RIP Distribute List

This window is used to display and configure the RIP distribution list settings.

To view the following window, click **L3 Features > RIP > RIP Distribute List**, as shown below:

Figure 6-44 RIP Distribute List Window

The fields that can be configured are described below:

Parameter	Description
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long.
ACL Name	Enter the access list name that will be used here. This name can be up to 32 characters long.
Interface Name	Enter the interface name that will be used here. This name can be up to 12 characters long.

Click the **Apply** button to accept the changes made.

Click the **Show Detail** button to view more detailed information about the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Show Detail** button, the following page will appear.

Figure 6-45 RIP Distribute List (Show Detail) Window

Click the **Back** button to return to the previous window.

RIP Interface Settings

This window is used to display and configure the RIP interface settings.

To view the following window, click **L3 Features > RIP > RIP Interface Settings**, as shown below:

Figure 6-46 RIP Interface Settings Window

The fields that can be configured are described below:

Parameter	Description
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long.
Network	Enter the IPv4 network address used by RIP here. Interfaces that have a subnet belonging to the network specified here will be activated for RIP.
Passive Interface	Select to enable or disable the passive interface feature here. This feature is used to disable the sending and receiving of routing updates on an interface. However, RIP packets from other routers received on this interface will continue to be processed. Enter the name of the passive interface in the space provided. This name can be up to 12 characters long. Select the Default option to use this as the default for all interfaces.
BFD State	Select to enable or disable the BFD feature on the specified interface. When BFD is enabled on an interface, the router creates BFD peers with the current RIP peers of the interface, and BFD peers will be created when new RIP peers are added. If an RIP peer is removed because RIP is disabled, the related BFD peer will be removed. When the BFD session goes down, the RIP routes learned from the peer will be deleted.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to delete an entry based on the information entered.

RIP Database

This window is used to display the Routing Information Protocol (RIP) routing database. Summary address entries will appear in the database only if relevant child routes exist and are being summarized. When the last child route for a summary address becomes invalid, the summary address is also removed from the routing table.

To view the following window, click **L3 Features > RIP > RIP Database**, as shown below:

RIP Database

RIP Database

Network Address

VRF Name

Total Entries: 0 entries, 0 routes

Network	Next Hop	Metric	From	If	Time
---------	----------	--------	------	----	------

Note:
Codes: R - RIP, Rc - RIP connected, K - Kernel, C - Connected, S - Static, O - OSPF, B - BGP, I - IS-IS, A - Aggregate

Figure 6-47 RIP Database Window

The fields that can be configured are described below:

Parameter	Description
Network Address	Enter the subnet prefix and the prefix length of the network(s) to be displayed here.
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show All** button to display all the entries.

RIPng

RIPng Settings

This window is used to display and configure the Routing Information Protocol Next Generation (RIPng) settings, also known as IPv6 RIP.

To view the following window, click **L3 Features > RIPng > RIPng Settings**, as shown below:

Figure 6-48 RIPng Settings Window

The fields that can be configured in **RIPng Global Settings** are described below:

Parameter	Description
Global State	Select to globally enable or disable the RIPng feature here.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **RIPng Settings** are described below:

Parameter	Description
Default Metric	Enter the default metric value here. The range is from 0 to 16. This value is used to specify the default metric for routes redistributed from other routing protocols. If the routes being redistributed are learned from other protocols, then they have an incompatible metric with IPv6 RIP. Re-specifying of metric allows the metric to be synced. Select the Default option to use the default metric value, which is 0.
Distance	Enter the administrative distance for RIPng here. The range is from 1 to 254. The distance value represents the trust rating of the route. The route with a lower distance value is preferred over the route with the higher distance value. Select the Default option to use the default administrative distance for RIPng, which is 120.
Update Timer	Enter the update interval value at which the update message is sent here. The range is from 5 to 65535 seconds. Select the Default option to use the default value here which is 30 seconds.
Invalid Timer	Enter the invalidate timer value in seconds here. The range is from 1 to 65535 seconds. Select the Default option to use the default value here which is 180 seconds.
Flush Timer	Enter the flush timer value in seconds here. The range is from 1 to 65535 seconds. Select the Default option to use the default value here which is 120 seconds.

Parameter	Description
Poison Reverse	Select to enable or disable the Poison Reverse feature here. When Poison Reverse is enabled, the routes learned from an interface will be advertised out to the same interface with an unreachable metric.
Split Horizon	Select to enable or disable the Split Horizon feature here. When Split Horizon is enabled, the routes learned from an interface will be not advertised out to the same interface.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Redistribute Settings** are described below:

Parameter	Description
Protocol	Select the protocol whose routes are to be redistributed here. Options to choose from are Connected , Static , OSPF , BGP , and ISIS . The Static option means to redistribute IPv6 static routes. The Connected option refers to routes that are established automatically by virtue of configuring IPv6 address on an interface.
Metric	Enter the value to be used as the metric for the redistributed routes here. The range is from 0 to 16. Select the Default option to use the default metric value.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to delete an entry based on the information entered.

RIPng Interface Settings

This window is used to display and configure the RIPng interface settings.

To view the following window, click **L3 Features > RIPng > RIPng Interface Settings**, as shown below:

Figure 6-49 RIPng Interface Settings Window

The fields that can be configured are described below:

Parameter	Description
Interface VLAN	Enter the VLAN interface ID here. The range is from 1 to 4094. Select the All Interface option to use all available interfaces in this configuration.
State	Select to enable or disable the IPv6 RIP feature on the VLAN interface specified.
Metric Offset	Enter the value to be added to the metric of an IPv6 RIP route received on the configured interface here. The range is from 1 to 16. The metric refers to the hop count. By default, when receiving an IPv6 RIP route, a metric value of 1 is added to the route before it is inserted into the routing table. Use this option to

Parameter	Description
	influence the metric of routes received on different interfaces and influence the preference of the route. Select the Default option to use the default metric offset value, which is 1.
BFD State	Select to enable or disable the BFD state on the IPv6 RIP interface here.
Passive Interface	Select to enable or disable the passive interface feature here. If this option is disabled, the router will not send RIPng packets out through the interface. However, RIPng packets from other routers received on the interface will continue to be processed.

Click the **Apply** button to accept the changes made.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

RIPng Database

This window is used to display the RIPng routing database.

To view the following window, click **L3 Features > RIPng > RIPng Database**, as shown below:

Figure 6-50 RIPng Database Window

The fields that can be configured are described below:

Parameter	Description
IPv6 Address/Prefix Length	Enter the IPv6 address that will be used for these results here.

Click the **Find** button to locate a specific entry based on the information entered.

OSPF

OSPFv2

OSPFv2 Process Settings

This window is used to display and configure the OSPFv2 process settings.

To view the following window, click **L3 Features > OSPF > OSPFv2 > OSPFv2 Process Settings**, as shown below:

OSPFv2 Process Settings

OSPF Process Settings

Process ID (1-65535)

VRF Name

OSPF Process Table

Total Entries: 1

Process ID	VRF Name	OSPF State	Router ID	Default Metric	Distance Settings		Default Information Originate			ECMP	
					Type	Distance	State	Originate	Metric		
1		Enabled	192.168.70.123	20	Intra-area	80	Disabled	None	1	1	<input type="button" value="Edit"/> <input type="button" value="Show Detail"/>

Note: Changing router ID or distance of one running OSPF process will cause it restart.

Figure 6-51 OSPFv2 Process Settings Window

The fields that can be configured in **OSPF Process Settings** are described below:

Parameter	Description
Process ID	Enter the OSPF process ID here. The range is from 1 to 65535.
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long. Click the Select VRF button to select a pre-configured VRF instance that will be used here.

Click the **Apply** button to accept the changes made.

Click the **Clear** button to restart the specified OSPFv2 process.

Click the **Clear All** button to restart all OSPFv2 processes.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show All** button to display all the available entries.

Click the **Edit** button to modify the specified entry.

Click the **Show Detail** button to view more detailed information associated with the entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Select VRF** button, the following page will appear.

VRF Selection

Total Entries: 1

VRF Name
vrf1

Figure 6-52 OSPFv2 Process Settings (Select VRF) Window

Select the VRF entry and click the **OK** button to use the selected VRF entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Edit** button, the following page will appear.

OSPFv2 Process Settings

OSPF Process Settings

Process ID (1-65535)

VRF Name

OSPF Process Table

Total Entries: 1

Process ID	VRF Name	OSPF State	Router ID	Default Metric	Distance Settings		Default Information Originate			ECMP		
					Type	Distance	State	Originate	Metric			
1		Enabled	192 . 168 . 70 . 123	20	Intra-Area	80	Disabled	None	1	1	<input type="button" value="Apply"/>	<input type="button" value="Show Detail"/>

Note: Changing router ID or distance of one running OSPF process will cause it restart.

Figure 6-53 OSPFv2 Process Settings (Edit) Window

The fields that can be configured are described below:

Parameter	Description
OSPF State	Select to enable or disable the OSPFv2 state on the specified VRF instance.
Router ID	Enter the router ID in the IPv4 address format here. The router ID is a 32-bit number assigned to each router running the OSPF protocol. This number uniquely identifies the router within an AS. Each router has a unique router ID.
Default Metric	Enter the default metric value used here. The range is from 1 to 16777214.
Type	Select the distance setting type here. Options to choose from are Intra-Area , Inter-Area , External-1 , and External-2 . <ul style="list-style-type: none"> Inter-Area - Specifies the distance for OSPF inter-area routes. Intra-Area - Specifies the distance for OSPF intra-area routes. External-1 - Specifies the distance for OSPF external type-5 and type-7 routes with a type-1 metric. External-2 - Specifies the distance for OSPF external type-5 and type-7 routes with a type-2 metric.
Distance	Enter the administrative distance value here. The range is from 1 to 255.
State	Select to enable or disable the Default Originate Information state here. This feature is used to generate a default external route (type-5 LSA) network 0.0.0.0 to the AS.
Originate	Select the Originate option here. Options to choose from are Always and None . Selecting the Always option specifies to always generate the default route regardless of existence of a default route in the routing table.
Metric	Enter the cost value associated with the generated default route here. If not specified, the default metric cost is 1. The range is from 1 to 65535.
ECMP	Enter the ECMP value for this process here. The range is from 1 to 64.

Click the **Apply** button to accept the changes made.

After clicking the **Show Detail** button, the following page will appear.

OSPF Global Settings Information

OSPF Global Settings Information

Compatible RFC 1583

Compatible RFC 3509

Detail Information	
Process ID	1
Process bound to VRF	
OSPF State	Enabled
Router ID	192.168.70.123
Default Metric	20
Default Originate Information State	Disabled
Default Originate Information Always	None
Default Originate Information Metric	1
Intra-Area Distance	80
Inter-Area Distance	90
External-1 Distance	110
External-2 Distance	115
Process Uptime (sec)	0DT0H12M32S
This Router is ABR	No
This Router is ASBR	No
SPF Schedule Hold Time Between Two SPF's (sec)	3
Number of External LSA	0
External LSA Checksum	0
Number of LSA Originated	0
Number of LSA Received	0
Number of Current LSA	0
LSDB Database Overflow Limit	49152
Number of Areas Attached to This Router	1
Equal Cost Multi-Path (ECMP)	1

Figure 6-54 OSPFv2 Process Settings (Show Detail) Window

The fields that can be configured are described below:

Parameter	Description
Compatible RFC 1583	Select to enable or disable the RFC 1583-compatible option.
Compatible RFC 3509	Select to enable or disable the implementation of Area Border Router (ABR) behavior (as defined in RFC 3509) here.

Click the **Apply** button to accept the changes made.

Click the **OK** button to accept the changes made.

OSPFv2 Distribute List

This window is used to view and configure the OSPFv2 Distribute List settings.

To view the following window, click **L3 Features > OSPF > OSPFv2 > OSPFv2 Distribute List**, as shown below:

Figure 6-55 OSPFv2 Distribute List Window

The fields that can be configured are described below:

Parameter	Description
Process ID	Enter the OSPF process ID here. The range is from 1 to 65535.
ACL Name	Enter the access list name that will be used here. This name can be up to 32 characters long.
Interface Name	Enter the interface name that will be used here. This name can be up to 12 characters long.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to delete the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

OSPFv2 GR Helper Settings

This window is used to display and configure the OSPFv2 graceful restart helper settings.

To view the following window, click **L3 Features > OSPF > OSPFv2 > OSPFv2 GR Helper Settings**, as shown below:

Figure 6-56 OSPFv2 GR Helper Settings Window

The fields that can be configured are described below:

Parameter	Description
Process ID	Enter the OSPF process ID here. The range is from 1 to 65535.
Graceful Restart Helper	Select the graceful restart helper mode here. Options to choose from are:

Parameter	Description
	<ul style="list-style-type: none"> • Unspec - The OSPF graceful restart helper mode is unspecified. • Never - Specifies to not to allow the OSPF graceful restart helper mode. • Only Reload - Specifies to allow the OSPF graceful restart helper mode only for reload. • Only Upgrade - Specifies to allow the OSPF graceful restart helper mode only for upgrade.
Max Grace Period	Enter the maximum grace period value here. The range is from 1 to 1800 seconds.

Click the **Apply** button to accept the changes made.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

OSPFv2 Passive Interface Settings

This window is used to display and configure the OSPFv2 passive interface settings.

To view the following window, click **L3 Features > OSPF > OSPFv2 > OSPFv2 Passive Interface Settings**, as shown below:

Figure 6-57 OSPFv2 Passive Interface Settings Window

The fields that can be configured are described below:

Parameter	Description
Process ID	Enter the OSPF process ID here. The range is from 1 to 65535.
Interface Name	Enter the interface name that will be used here. This name can be up to 12 characters long. Select the Default option to use all available interfaces here.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to delete the specified entry.

Click the **Find** button to locate a specific entry based on the information entered.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

OSPFv2 Area Settings

This window is used to display and configure the OSPFv2 area settings.

To view the following window, click **L3 Features > OSPF > OSPFv2 > OSPFv2 Area Settings**, as shown below:

OSPFv2 Area Settings

OSPF Area Settings

Process ID (1-65535)

Area ID 0-4294967295

Range NSSA Stub

Area Range IP Area Range Mask

Advertise Advertise No-Advertise

OSPF Area Table

Process ID (1-65535)

Total Entries: 2

Process ID	Area ID	Area Type	Metric	Area Range	Summary	Advertise	
1	0.0.0.0	Normal	-	-	NO	-	<input type="button" value="Delete"/>
1	0.0.0.1	NSSA	1	-	YES	-	<input type="button" value="Delete"/>

1/1

Figure 6-58 OSPFv2 Area Settings Window

The fields that can be configured in **OSPF Area Settings** are described below:

Parameter	Description
Process ID	Enter the OSPF process ID here. The range is from 1 to 65535.
Area ID	Select and enter the OSPFv2 area ID here. This can be specified in the IP address format or in the decimal value format. The decimal range is from 0 to 4294967295. The area will be created on an interface if the subnet configured on the interface falls within the network range specified here.
Range	Select this option to summarize OSPF routes at an Area Border Router (ABR).
NSSA	Select this option to assign the OSPF area as a Not-So-Stubby Area (NSSA) area.
Stub	Select this option to specify an OSPF area as a Stub Area.
Area Range IP	This parameter is available when Range is selected. Enter the OSPF area range IP address here.
Area Range Mask	This parameter is available when Range is selected. Enter the OSPF area range subnet mask here.
Advertise	This parameter is available when Range is selected. Select the advertise option here. Options to choose from are Advertise and No-Advertise . <ul style="list-style-type: none"> • Advertise - Specifies to advertise a Type-3 summary Link-State Advertisement (LSA) for the specified range of addresses. • No-Advertise - Specifies to suppress the advertising of Type-3 summary LSAs. Component routes are still hidden behind it.
Default Cost	This parameter is available when NSSA or Stub is selected. Enter the default cost value here. This is the cost associated with the Type-3 default route that will be injected into the stub area and not-so-stubby area. The range is from 0 to 65535. <ul style="list-style-type: none"> • Default - Select this option to use the default cost value. • No-Summary - Select this option not to inject summary routes into this area.

Click the **Delete** button to delete an entry based on the information entered.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **OSPF Area Table** are described below:

Parameter	Description
Process ID	Enter the OSPF process ID here. The range is from 1 to 65535.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Delete** button to remove the specific entry.

Click the **Process ID** link (1) to view more detailed settings about the entry.

After clicking the **Process ID** link (1), the following page will appear.

OSPF Area Settings

OSPF Area Detail Information

Process ID	1
Area ID	0.0.0.0
Area Type	Normal
Summary	-
Number of Interfaces in This Area	0
Number of Active Interfaces in This Area	0
Number of Fully Adjacent Neighbors in This Area	0
Number of Fully Adjacent Virtual Neighbors Through This Area	0
SPF Algorithm Executed Times	0
Number of LSA	0
LSA Checksum Sum	0x0
Advertise Cost	0

OK

Total Entries: 0

Network Address	Network Mask	Type	Advertise
-----------------	--------------	------	-----------

Figure 6-59 OSPFv2 Area Settings (Process ID) Window

Click the **OK** button to close the window.

OSPFv2 Interface Settings

This window is used to display and configure the OSPFv2 interface settings.

To view the following window, click **L3 Features > OSPF > OSPFv2 > OSPFv2 Interface Settings**, as shown below:

OSPFv2 Interface Settings

OSPF Interface Settings

Process ID (1-65535)

Area ID 0-4294967295

Network IP Address

Network Mask

Apply

OSPF Interface Table

Process ID (1-65535)

Interface Name 12 chars

Find

Total Entries: 1

Process ID	Interface	Area ID	Network IP	Network Mask	Link Status	Cost
1	vian1	0.0.0.1	10.90.90.90	255.0.0.0	Up	1

Show Detail Delete

1/1 < < 1 > > Go

Figure 6-60 OSPFv2 Interface Settings Window

The fields that can be configured in **OSPF Interface Settings** are described below:

Parameter	Description
Process ID	Enter the OSPF process ID here. The range is from 1 to 65535.
Area ID	Select and enter the OSPFv2 area ID here. This can be specified in the IP address format or in the decimal value format. The decimal range is from 0 to 4294967295.
Network IP Address	Enter the network IPv4 address here.
Network Mask	Enter the network IPv4 subnet mask here.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **OSPF Interface Table** are described below:

Parameter	Description
Process ID	Enter the OSPF process ID here. The range is from 1 to 65535.
Interface Name	Enter the name of the interface to be displayed here.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show Detail** button to view more detailed information about the entry.

Click the **Delete** button to delete the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Show Detail** button, the following page will appear.

OSPF Interface Settings

OSPF Interface Settings

Process ID	1	
Interface	vlan1	
Cost (1-65535)	<input type="text"/>	<input type="checkbox"/> Default
Hello Interval (1-65535)	<input type="text"/> sec	<input type="checkbox"/> Default
Dead Interval (1-65535)	<input type="text"/> sec	<input type="checkbox"/> Default
Priority (0-255)	<input type="text"/>	<input type="checkbox"/> Default
Network Type	<input type="text" value="Broadcast"/>	
Authentication	<input type="text" value="None"/>	

OSPF Interface Information

Interface	vlan1
Link Status	Up
Network IP Address	10.90.90.90
Network Mask	255.0.0.0
Area ID	0.0.0.1
Router ID	10.90.90.90
Network Type	Broadcast
Cost	1
Transmit Delay (sec)	1
State	DR
Priority	1
Designated Router (ID)	10.90.90.90
Designated Router Interface Address	10.90.90.90
Backup Designated Router (ID)	0.0.0.0
Backup Designated Router Interface Address	0.0.0.0
Hello Intervals Configured (sec)	10
Dead Intervals Configured (sec)	40
Retransmit (sec)	5
Current Authentication Type	None

Figure 6-61 OSPFv2 Interface Settings (Show Detail) Window

The fields that can be configured are described below:

Parameter	Descriptionx
Cost	Enter the cost value here. The range is from 1 to 65535. The interface cost reflects the overhead for sending the packet across the interface. This cost is advertised as the link cost in the router link advertisement. Select the Default option to use the default value which is 1.
Hello Interval	Enter the Hello Interval time value here. The range is from 1 to 65535 seconds. The Hello Interval is advertised in the hello packets. Configure the same hello-interval for all routers on a specific network. A shorter Hello Interval ensures faster detection of topological changes but generates more routing traffic and might cause routing instability. Select the Default option to use the default value which is 10 seconds.
Dead Interval	Enter the Dead Interval time value here. The range is from 1 to 65535 seconds. The Dead Interval is the amount of time that the router waits to receive an OSPF hello packet from the neighbor before declaring the neighbor down. This value is advertised in the router's hello packets. It must be the same for all routers on a specific network. Specifying a smaller Dead Interval ensures faster detection of topology changes, but might cause routing instability. Select the Default option to use the default value which is 40 seconds.
Priority	Enter the priority value here. The range is from 0 to 255. The OSPF router will determine a Designated Router (DR) for the multi-access network. This sets the

Parameter	Description
	<p>priority used to determine the OSPF DR for a network. If two routers attempt to become the DR, the router with the higher router priority will be elected the DR. If the routers have the same priority, the router with the higher router ID takes precedence. Only routers with non-zero router priority values are eligible to become the DR or Backup Designated Router (BDR).</p> <p>Select the Default option to use the default value which is 1.</p>
Network Type	<p>Select the network type here. Options to choose from are:</p> <ul style="list-style-type: none"> • Broadcast - Specifies the network type as broadcast. • Point-to-Point - Specifies the network type as point-to-point. <p>On a broadcast network, only the DR and BDR become adjacent neighbors of all other routers attached. On point-to-point networks, only two routers become adjacent if they can communicate.</p>
Authentication	<p>Select the authentication type that will be used here. Options to choose from are None, Simple Password, and MD5.</p>
Password	<p>After selecting the Simple Password option, enter the simple password here. This password can be up to 8 characters long. The syntax is general string that does not allow spaces.</p> <p>This creates a password (key) that is inserted into the OSPF header when the router originates routing protocol packets. Assign a separate password to each network for different interfaces. Routers on the same network must use the same password to be able to exchange OSPF routing data. Configure the routers in the same routing domain with the same password.</p>
MD5 Key ID	<p>Enter the MD5 key ID for the password here. The range is from 1 to 255.</p>
MD5	<p>Enter the MD5 key here. This key must be 16 characters long. The syntax is an alphanumeric string that does not allow spaces.</p> <p>In the MD5 mode, the OSPF message sender will compute a message digest based on the message digest key for the TX message. The message digest and the key ID will be encoded in the packet. The receiver of the packet will verify the digest in the message against the digest computed based on the locally defined message digest key corresponding to the same key ID.</p> <p>The same key ID on the neighboring router should be defined with the same key string.</p> <p>All the neighboring routers on the same interface must use the same key to exchange the OSPF packet with each other. Normally, all neighboring routers on the interface use the same key.</p> <p>With the MD5 digest mode, the user can roll over to a new key without disrupting the current message exchange using the new key. Supposing that a router is currently using an old key to exchange OSPF packets with the neighbor router, as the user configures a new key, the router will start the roll over process by sending duplicated packets for both of the old and the new key. The router will stop sending duplicated packets until it finds that all routers on the network have learned the new key. After the rollover process completed, the user should delete the old key to prevent the router from communicating with the router using the old key.</p>

Click the **Apply** button to accept the changes made.

OSPFv2 BFD Settings

This window is used to display and configure the OSPFv2 BFD settings.

To view the following window, click **L3 Features > OSPF > OSPFv2 > OSPFv2 BFD Settings**, as shown below:

Figure 6-62 OSPFv2 BFD Settings Window

The fields that can be configured are described below:

Parameter	Description
BFD State	After clicking the Edit button, select to enable or disable the BFD feature on the specified interface. When enabled, the Switch will try to create BFD sessions with the OSPF neighbors on this interface. If the BFD session goes down, the related OSPF neighbor adjacency will be removed immediately.

Click the **Edit** button to re-configure the specific entry.

Click the **Apply** button to accept the changes made.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

OSPFv2 Redistribute Settings

This window is used to display and configure the OSPFv2 redistribution settings. External routes can be redistributed to normal areas as Type-5 external routes and redistributed to NSSA stub areas as Type-7 external routes by the ASBR.

If the redistributed external route is of Type-1, the metric represents the internal metric. If the redistributed external route is of Type-2, the metric represents the external metric. An internal metric will consider the cost of the route from itself to the redistributing router plus the advertised cost to reach the destination. An external metric only considers the advertised metric to reach the destination.

If no metric value is specified by the default metric, routes redistributed from other protocols will get a metric value of 20.

To view the following window, click **L3 Features > OSPF > OSPFv2 > OSPFv2 Redistribute Settings**, as shown below:

Figure 6-63 OSPFv2 Redistribute Settings Window

The fields that can be configured are described below:

Parameter	Description
Process ID	Enter the OSPF process ID here. The range is from 1 to 65535.
Protocol	Select the source protocol that will be redistributed here. Options to choose from are Connected , Static , RIP , BGP , and ISIS . For routing protocols like Open Shortest Path First (OSPF), these routes will be redistributed as external to the autonomous system.
Metric Type	Select the metric type here. Options to choose from are External Type-1 and External Type-2 . This specifies the external link type of the route being redistributed into the OSPF routing domain. If a metric type is not specified, the Switch will adopt a Type-2 external route.
Metric	Enter the metric value for the redistributed routes here. The range is from 1 to 16777214.
Router Map Name	Enter the route map name here that filters the imported routes from this source routing protocol. If not specified, all routes are redistributed.

Click the **Apply** button to accept the changes made.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Delete** button to delete the specified entry.

OSPFv2 Virtual Link Settings

This window is used to display and configure OSPFv2 virtual link settings. If a non-zero area is not physically connected to the zero area, it must be connected to the zero area via a virtual link. The virtual link is a point-to-point link. The router will send the OSPF message to the neighbor router as unicast IP packet.

To view the following window, click **L3 Features > OSPF > OSPFv2 > OSPFv2 Virtual Link Settings**, as shown below:

Figure 6-64 OSPFv2 Virtual Link Settings Window

The fields that can be configured in **OSPF Virtual Link** are described below:

Parameter	Description
Process ID	Enter the OSPF process ID here. The range is from 1 to 65535.

Parameter	Description
Area ID	Select and enter the OSPFv2 area ID here. This can be specified in the IP address format or in the decimal value format. The decimal range is from 0 to 4294967295. This area will be used to establish the virtual link.
Router ID	Enter the router ID of the virtual link neighbor here.
Hello Interval	Enter the hello packet interval that the router sends on the virtual link here. The range is from 1 and 65535 seconds. Select the Default option to use the default value, which is 10 seconds.
Dead Interval	Enter the Dead Interval time after which a neighbor is regarded as offline if no hello packets are received within that time frame here. The range is from 1 and 65535 seconds. Select the Default option to use the default value, which is 40 seconds.
Authentication	Select the authentication type used here. Options to choose from are None , Simple Password , and MD5 .
Password	After selecting the Simple Password authentication type, enter the password to be used here. This password can be up to 8 characters long.
MD5 Key ID	After selecting the MD5 authentication type, enter the MD5 authentication key ID here. The range is from 1 to 255.
MD5 Key	After selecting the MD5 authentication type, enter the MD5 authentication key here. This key can be up to 16 characters long.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **OSPF Virtual Link Table** are described below:

Parameter	Description
Process ID	Enter the OSPF process ID here. The range is from 1 to 65535.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Delete** button to delete the specified entry.

Click the **Process ID** link (1) to view more detailed settings about the entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Process ID** link (1), the following page will appear.

OSPF Virtual Link Detail Information	
OSPF Virtual Link Information	
Process ID	1
Neighbor Router ID	192.168.70.1
Link Status	Linkdown
Real Interface Name	
Adjacency State	Down
Transit Area	0.0.0.1
Local Address	0.0.0.0
Remote Address	0.0.0.0
Transmit Delay	1
Hello Interval Configured (sec)	10
Dead Interval Configured (sec)	40
Retransmit Interval Configured (sec)	5
Authentication Type	None
Authentication Key	-

OK

Figure 6-65 OSPFv2 Virtual Link Settings (Process ID) Window

Click the **Back** button to return to the previous window.

OSPFv2 LSDB Table

This window is used to display the OSPFv2 LSDB table and information.

To view the following window, click **L3 Features > OSPF > OSPFv2 > OSPFv2 LSDB Table**, as shown below:

Figure 6-66 OSPFv2 LSDB Table Window

The fields that can be configured are described below:

Parameter	Description
Process ID	Enter the OSPF process ID here. The range is from 1 to 65535.
LSDB Type	Select the LSDB type of information that will be displayed here. Options to choose from are All , Router , Network , Summary , ASBR Summary , External , Stub , and NSSA External .
Link State	Select the link-state information that will be displayed here. Options to choose from are All , Link State ID , Self Originate , and Adv Router . <ul style="list-style-type: none"> • All - Specifies to display all OSPFv2 link-state information. • Link State ID - Specifies to display information associated with the link-state ID. Enter the link state ID in the space provided here. • Self Originate - Specifies to display LSAs generated by the local router. • Adv Router - Specifies to display all of the LSAs generated by the advertising router. Enter the advertising router ID in the space provided here.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show Detail** button to view more detailed information about the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Show Detail** button, the following page will appear.

OSPF LSDB Detail Information

OSPF LSDB Detail Information

Process ID	1
Area ID	0.0.0.1
LS Age	332
Options	0x2 (*-H- -H- E -)
Flags	0x2
This Router is ABR	No
This Router is ASBR	Yes
This Router is Virtual Link Endpoint	No
LS Type	Router-LSA
Link State ID	10.90.90.90
Advertising Router	10.90.90.90
LS Seq Number	0x80000003
Checksum	0x39d8
Length	36

Back

Detail Information

Number of Links	1
Link Connected to Stub Network	
(Link ID) Network/Subnet Number	10.0.0.0
(Link Data) Network Mask	255.0.0.0
Number of TOS Metrics	0
TOS 0 Metric	1

Figure 6-67 OSPFv2 LSDB Table (Show Detail) Window

Click the **Back** button to return to the previous window.

OSPFv2 Neighbor Table

This window is used to display information on OSPF neighbors.

To view the following window, click **L3 Features > OSPF > OSPFv2 > OSPFv2 Neighbor Table**, as shown below:

OSPFv2 Neighbor Table

OSPF Neighbor Table

Process ID (1-65535)

Interface Name

Neighbor

Find

Total Entries: 6

Process ID	Neighbor ID	Priority	State	Address	Interface	
65535	1.1.1.1	200	Full/DR	20.0.0.1	vlan20	Show Detail
65535	1.1.1.1	50	Full/DR	30.0.0.1	vlan30	Show Detail
65535	3.3.3.3	1	Full/DR	60.0.0.1	vlan60	Show Detail
65535	7.7.7.7	1	Full/DR	110.110.110.2	vlan110	Show Detail
65535	1.1.1.1	0	Full/-	20.0.0.1	-	Show Detail
65535	1.1.1.1	0	Full/-	30.0.0.1	-	Show Detail

1/1 |< < 1 > >| Go

Figure 6-68 OSPFv2 Neighbor Table Window

The fields that can be configured are described below:

Parameter	Description
Process ID	Enter the OSPF process ID here. The range is from 1 to 65535.
Interface Name	Enter the name of the interface that will be used in the results here.
Neighbor	Enter the neighbor ID here.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show Detail** button to view more detailed information for the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Show Detail** button, the following page will appear.

OSPF Neighbor Detail Information	
Neighbor Router ID	1.1.1.1
Area	0.0.0.2
Interface Name	vlan20
IP Address	20.0.0.1
Priority	200
State	Full
State Changes	6
DR	20.0.0.1
BDR	20.0.0.2
Option	0x2 (*-H-H-H-EI-)

Figure 6-69 OSPFv2 Neighbor Table (Show Detail) Window

Click the **Back** button to return to the previous window.

OSPFv2 Host Route Settings

This window is used to display and configure the OSPFv2 host route settings. The router will advertise specific host routes as router LSAs for a stub link.

To view the following window, click **L3 Features > OSPF > OSPFv2 > OSPFv2 Host Route Settings**, as shown below:

Process ID	Area ID	Host IP	Cost
1	0.0.0.1	192.168.70.14	1

Figure 6-70 OSPFv2 Host Route Settings Window

The fields that can be configured in **OSPFv2 Host Route Settings** are described below:

Parameter	Description
Process ID	Enter the OSPF process ID here. The range is from 1 to 65535.
Area ID	Select and enter the OSPFv2 area ID here. This can be specified in the IP address format or in the decimal value format. The decimal range is from 0 to 4294967295.
Host IP	Enter the host IPv4 address here.
Cost	Enter the cost value for the stub entry here. The range is from 1 to 65535. Select the Default option to use the default value, which is 1.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **OSPF Host Route Table** are described below:

Parameter	Description
Process ID	Enter the OSPF process ID here. The range is from 1 to 65535.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Delete** button to delete the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

OSPFv3

OSPFv3 Process Settings

This window is used to display and configure OSPFv3 process settings.

To view the following window, click **L3 Features > OSPF > OSPFv3 > OSPFv3 Process Settings**, as shown below:



OSPFv3 Process Settings

OSPFv3 Process Settings

Process ID (1-65535) Apply

Clear Clear All

Find Show All

OSPFv3 Process Table

Total Entries: 1

Process ID	Router ID	Default Metric	Distance Settings		Auto Bandwidth	Edit	Delete
			Type	Distance			
1	10.90.90.90	20	Intra-area	110	100		

1/1 < < **1** > > Go

Note: Changing router ID or distance of one running OSPF process will cause it restart.

Figure 6-71 OSPFv3 Process Settings Window

The fields that can be configured are described below:

Parameter	Description
Process ID	Enter the OSPFv3 process ID here. The range is from 1 to 65535.

Click the **Apply** button to accept the changes made.

Click the **Clear** button to restart the specified OSPFv3 process.

Click the **Clear All** button to restart all OSPFv3 processes.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show All** button to display all the entries.


Click the **Process ID** link (1) to access and configure the specified OSPFv3 process.

Click the **Edit** button to modify the specified entry.

Click the **Delete** button to delete the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Edit** button, the following page will appear.

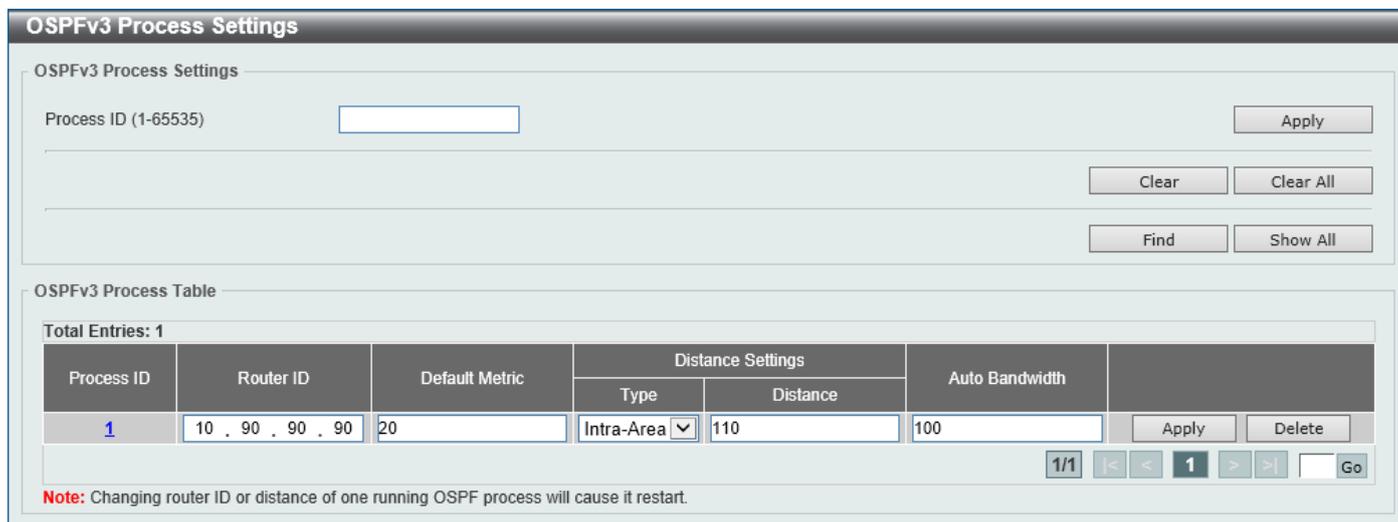

OSPFv3 Process Settings

OSPFv3 Process Settings

Process ID (1-65535)

OSPFv3 Process Table

Total Entries: 1

Process ID	Router ID	Default Metric	Distance Settings		Auto Bandwidth	
			Type	Distance		
1	10 . 90 . 90 . 90	20	Intra-Area	110	100	<input type="button" value="Apply"/> <input type="button" value="Delete"/>

1/1 < < 1 > >

Note: Changing router ID or distance of one running OSPF process will cause it restart.

Figure 6-72 OSPFv3 Process Settings (Edit) Window

The fields that can be configured are described below:

Parameter	Description
Router ID	Enter the router ID for the OSPF process here.
Default Metric	Enter the default metric value for the OSPF process here. The range is from 1 to 16777214. By default, this value is 20. This value is used in conjunction with the OSPFv3 redistribution feature to enable the current routing protocol to use the same metric value for all redistributed routes. A default metric helps solve the problem of redistributing routes with incompatible metrics. Whenever the metrics don't convert directly, using a default metric provides a reasonable substitute and enables the redistribution to proceed.
Type	Select the distance type here. Options to choose from are Intra-Area , Inter-Area , and External . <ul style="list-style-type: none"> • Intra-Area - Specifies the distance for OSPF intra-area routes. • Inter-Area - Specifies the distance for OSPF inter-area routes. • External - Specifies the distance for OSPF external routes.
Distance	Enter the distance value for the OSPF process here. The range is from 1 to 254. By default, this value is 110 for all OSPF routes.
Auto Bandwidth	Enter the auto-bandwidth value here. This feature is used to control the reference value IPv6 OSPF uses when calculating metrics for interfaces. The range is from 1 to 4294967.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to delete the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Process ID** link (1) in the table, the following page will appear.

OSPFv3 Global Settings Information	
Process ID	1
OSPF State	Enabled
Router ID	10.90.90.90
Default Metric	20
Intra-Area Distance	110
Inter-Area Distance	110
External Distance	110
Auto Cost Reference Bandwidth	100
Process Uptime (sec)	0DT0H0M2S
This Router is ABR	No
This Router is ASBR	No
SPF Schedule Hold Time Between Two SPF's (sec)	10
SPF Schedule Delay (sec)	5
Number of External LSA	0
Number of LSA Originated	0
Number of LSA Received	0
Number of Areas Attached to This Router	0

Figure 6-73 OSPFv3 Process Settings (Process ID) Window

Click the **OK** button to close the window and return to the previous window.

OSPFv3 Passive Interface Settings

This window is used to display and configure the OSPFv3 passive interface settings. If an interface is passive, the OSPF routing update packets are not sent or received through the specified interface.

To view the following window, click **L3 Features > OSPF > OSPFv3 > OSPFv3 Passive Interface Settings**, as shown below:

OSPFv3 Passive Interface Settings		
OSPFv3 Passive Interface Settings		
Process ID (1-65535)	<input type="text"/>	
Interface Name	<input type="text" value="12 chars"/>	<input checked="" type="checkbox"/> Default
		<input type="button" value="Apply"/> <input type="button" value="Delete"/> <input type="button" value="Find"/>
Total Entries: 1		
Process ID	Passive Interface	
65535	vlan2017	<input type="button" value="Delete"/>
		1/1 <input type="button" value="<"/> <input type="button" value="1"/> <input type="button" value=">"/> <input type="button" value="Go"/>

Figure 6-74 OSPFv3 Passive Interface Settings Window

The fields that can be configured are described below:

Parameter	Description
Process ID	Enter the OSPFv3 process ID here. The range is from 1 to 65535.
Interface Name	Enter the passive interface name here. This name can be up to 12 characters long. Select the Default option specify all the interfaces as passive interfaces.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to delete the specified entry.

Click the **Find** button to locate a specific entry based on the information entered.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

OSPFv3 Area Settings

This window is used to display and configure the OSPFv3 area settings.

To view the following window, click **L3 Features > OSPF > OSPFv3 > OSPFv3 Area Settings**, as shown below:

OSPFv3 Area Settings

OSPFv3 Area Settings

Process ID (1-65535) Area ID

Range Stub

Area Range IPv6 Prefix

Advertise Advertise No-Advertise

Apply

OSPFv3 Area Table

Process ID (1-65535) Find

Total Entries: 2

Process ID	Area ID	Area Type	Metric	Summary	
1	10.10.10.10	Stub	1	Yes	Delete
1	10.11.11.11	Normal	-	-	Delete

1/1 < < 1 > > Go

Figure 6-75 OSPFv3 Area Settings Window

The fields that can be configured in **OSPFv3 Area Settings** are described below:

Parameter	Description
Process ID	Enter the process ID of the OSPF area used here. The range is from 1 to 65535.
Area ID	Enter the OSPF area ID used here. It can be specified as an IPv4 address.
Range	Select this option to consolidate and summarize routes at an area boundary. This feature is used only with ABRs. It is used to consolidate or summarize routes for an area. The result is that a single summary route is advertised to other areas by the ABR. Routing information is condensed at area boundaries. External to the area, a single route is advertised for each address range.
Area Range IPv6 Prefix	After selecting the Range option, enter the OSPF area range IPv6 prefix and prefix length here.
Advertise	After selecting the Range option, select the advertise option here. Options to choose from are Advertise and No-Advertise . <ul style="list-style-type: none"> Advertise - Specifies to advertise and generate an inter-area prefix LSA for the specified address range. No-Advertise - Specifies to set the status to Do-Not-Advertise for the specified address range. The inter-area prefix LSA is suppressed, and the component networks remain hidden from other networks.
Stub	Select this option to define an area as a Stub area.
Metric	After selecting the Stub option, enter the stub area metric value here. The range is from 0 to 65535.

Parameter	Description
	Select the Default Metric option to use the default metric value for this area, which is 1.
No-Summary	After selecting the Stub option, select this option to prevent an ABR from sending inter-area prefix LSAs into the stub area.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **OSPFv3 Area Table** are described below:

Parameter	Description
Process ID	Enter the process ID of the OSPF area used here. The range is from 1 to 65535.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Process ID** link (1) to access and configure the specified OSPFv3 process.

Click the **Delete** button to delete the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking a **Stub** area the Process ID link (1) in the table, the following page will appear.

OSPFv3 Area Settings

OSPFv3 Area Detail Information

Process ID	1
Area ID	10.1.1.1
Area Type	Stub
Summary	Yes
Number of Interfaces in This Area	0
Number of Active Interfaces in This Area	0
Number of Fully Adjacent Virtual Neighbors Through This Area	0
SPF Algorithm Executed Times	0
Number of LSA	0
LSA Checksum Sum	0x0
Number of Unknown LSA	0

Total Entries: 0

IPv6 Range Address	Advertise
	<input type="checkbox"/>

Figure 6-76 OSPFv3 Area Settings (Process ID, Stub) Window

Click the **OK** button to close the window and return to the previous window.

After clicking a **Normal** area the Process ID link (1) in the table, the following page will appear.

OSPFv3 Area Settings

OSPFv3 Area Detail Information

Process ID	1
Area ID	10.1.1.1
Area Type	Normal
Summary	-
Number of Interfaces in This Area	0
Number of Active Interfaces in This Area	0
Number of Fully Adjacent Virtual Neighbors Through This Area	0
SPF Algorithm Executed Times	0
Number of LSA	0
LSA Checksum Sum	0x0
Number of Unknown LSA	0

Total Entries: 1

IPv6 Range Address	Advertise	
2018::/64	Adverties	<input type="button" value="Delete"/>

1/1 |< < 1 > >|

Figure 6-77 OSPFv3 Area Settings (Process ID, Normal) Window

Click the **OK** button to close the window and return to the previous window.

Click the **Delete** button to delete the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

OSPFv3 Interface Settings

This window is used to display and configure the OSPFv3 interface settings.

To view the following window, click **L3 Features > OSPF > OSPFv3 > OSPFv3 Interface Settings**, as shown below:

OSPFv3 Interface Settings

OSPFv3 Interface Settings

Process ID (1-65535)

Instance ID (0-255)

Area ID

Interface Name

OSPFv3 Interface Table

Process ID (1-65535)

Interface Name

Total Entries: 1

Process ID	Interface	Area ID	Router ID	Link Status	Cost	Instance ID	
1	vlan1	10.10.10.10	192.168.10.90	up	10	0	<input type="button" value="Delete"/>

1/1 |< < 1 > >|

Figure 6-78 OSPFv3 Interface Settings Window

The fields that can be configured in **OSPFv3 Interface Settings** are described below:

Parameter	Description
Process ID	Enter the ID for an IPv6 OSPF routing process here. It is locally assigned and should be unique for each IPv6 OSPF routing process on the router. The range is from 1 to 65535.
Instance ID	Enter the instance identifier here. The range is from 0 to 255. If not specified, the default is 0.
Area ID	Enter the identifier of the area here. It can be specified as an IPv4 address.
Interface Name	Enter the name of the VLAN interface here. This name can be up to 12 characters long.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **OSPF Interface Table** are described below:

Parameter	Description
Process ID	Enter the ID for an IPv6 OSPF routing process here. The range is from 1 to 65535.
Interface Name	Enter the name of the interface here.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Process ID** link ([1](#)) to access and configure the specified OSPFv3 process.

Click the **Delete** button to delete the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Process ID** link (1) button, the following page will appear.

The screenshot shows the OSPFv3 Interface Information window. The top section is a configuration form with the following fields:

- Process ID: 1
- Interface: vlan1
- Cost (1-65535): [input field] Default
- Hello Interval (1-65535): [input field] sec Default
- Dead Interval (1-65535): [input field] sec Default
- Priority (0-255): [input field] Default
- Transmit Delay (1-65535): [input field] sec Default
- Retransmit Interval (1-65535): [input field] sec Default

An **Apply** button is located at the bottom right of the configuration section.

The bottom section is a summary table:

OSPFv3 Interface Information	
Process ID	1
Area ID	10.10.10.10
Instance ID	0
MTU	1500
Interface Name	vlan1
Link State	up
Line Protocol State	up
Link Local Address	FE80::2CC:1FF:FE69:880A/128
Interface ID	1
Router ID	192.168.10.90
Network Type	Broadcast
Cost	10
Transmit Delay (sec)	1
State	DR
Priority	1
This is Passive Interface	No
Designated Router (DR)	192.168.10.90

Figure 6-79 OSPFv3 Interface Settings (Process ID) Window

The fields that can be configured are described below:

Parameter	Description
Cost	Enter cost value here. It is an integer value expressed as the link-state metric. The range is from 1 to 65535. Select the Default option to use the default value.
Hello Interval	Enter the Hello Interval value, between the hello packets that the router sends on an interface here. This value is advertised in the hello packets. The shorter the Hello Interval, the earlier topological changes will be detected, but more routing traffic will ensue. This value must be the same for all routers and access servers on a specific network. The range is from 1 to 65535 seconds. Select the Default option to use the default value, which is 10 seconds.
Dead Interval	Enter the Dead Interval value here, during which no packets are received and after which a neighbor is regarded as offline. The interval is advertised in router hello packets. This value must be the same for all routers and access servers on a specific network. The range is from 1 to 65535 seconds. Select the Default option to use the default value, which is 40 seconds.
Priority	Enter the priority value of the router here. The range is from 0 to 255. Set the priority to help determine the OSPF Designated Router (DR) for a network. If two routers attempt to become the DR, the router with the higher router priority becomes the DR. If the router priority is the same for two routers, the router with the higher router ID takes precedence. Only routers with non-zero router priority values are eligible to become the designated or backup designated router. Configure router priority for multi-access networks (not point-to-point) only. Select the Default option to use the default value, which is 1.

Parameter	Description
Transmit Delay	<p>Enter the Transmit Delay value here. The range is from 1 to 65535 seconds. Link-State Updates (LSUs) must have their ages incremented by the amount specified in the seconds argument before transmission. The value assigned should take into account the transmission and propagation delays for the interface.</p> <p>If the delay is not added before transmission over a link, the time in which the LSA propagates over the link is not considered. This setting has more significance on very low speed links.</p> <p>Select the Default option to use the default value, which is 1 second.</p>
Retransmit Interval	<p>Enter the Retransmit Interval value here. The range is from 1 to 65535 seconds. After sending an LSA to a neighbor, the router keeps the LSA until it receives an acknowledgement. In case the router does not receive an acknowledgement during the set time (the Retransmit Interval value), it retransmits the LSA. Set the retransmission interval value conservatively to avoid unnecessary retransmission. The interval should be greater than the expected round-trip delay between two routers.</p> <p>Select the Default option to use the default value, which is 5 seconds.</p>

Click the **Apply** button to accept the changes made.

OSPFv3 BFD Settings

This window is used to display the OSPFv3 BFD settings.

To view the following window, click **L3 Features > OSPF > OSPFv3 > OSPFv3 BFD Settings**, as shown below:



Figure 6-80 OSPFv3 Virtual Link Settings Window

OSPFv3 Redistribute Settings

This window is used to display and configure the OSPFv3 redistribution settings.

To view the following window, click **L3 Features > OSPF > OSPFv3 > OSPFv3 Redistribute Settings**, as shown below:

OSPFv3 Redistribute Settings

OSPFv3 Redistribute Settings

Process ID (1-65535)

Protocol

Metric Type

Metric (0-16777214)

Apply

Process ID (1-65535)

Find

Total Entries: 1

Process ID	Protocol	Metric Type	Metric
1	Connected	External Type-1	100

Delete

Figure 6-81 OSPFv3 Redistribute Settings Window

The fields that can be configured are described below:

Parameter	Description
Process ID	Enter the ID for an IPv6 OSPF routing process here. It is locally assigned and should be unique for each IPv6 OSPF routing process on the router. The range is from 1 to 65535.
Protocol	Select the source protocol from which routes will be redistributed here. Options to choose from are Connected , Static , RIPng , BGP , and ISIS .
Metric Type	Select the external link type associated with the default route advertised into the IPv6 OSPF routing domain here. Options to choose from are External Type-1 and External Type-2 . If a metric type is not specified, the Switch adopts a Type-2 external route. This is only for IPv6 OSPF.
Metric	Enter the metric value here. This value is used when redistributing other processes to an IPv6 OSPF process. The range is from 0 to 16777214. The default metric is value 20 when no metric value is specified.

Click the **Apply** button to accept the changes made.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Delete** button to delete the specified entry.

OSPFv3 Virtual Link Settings

This window is used to display and configure the OSPFv3 virtual link settings.

To view the following window, click **L3 Features > OSPF > OSPFv3 > OSPFv3 Virtual Link Settings**, as shown below:

Figure 6-82 OSPFv3 Virtual Link Settings Window

The fields that can be configured in **OSPFv3 Virtual Link** are described below:

Parameter	Description
Process ID	Enter the ID for an IPv6 OSPF routing process here. It is locally assigned and should be unique for each IPv6 OSPF routing process on the router. The range is from 1 to 65535.
Instance ID	Select and enter the instance ID here. The range is from 0 to 255.
Area ID	Enter the OSPF area ID here. It can be specified as an IPv4 address.
Router ID	Enter the router ID here associated with the virtual link neighbor.
Hello Interval	Enter the Hello Interval value between the hello packets that the router sends on an interface here. The range is from 1 to 65535 seconds. Select the Default option to use the default value, which is 10 seconds.
Dead Interval	Enter the Dead Interval value, during which no packets are received and after which a neighbor is regarded as offline, here. The range is from 1 to 65535 seconds. Select the Default option to use the default value, which is 40 seconds.
Transmit Delay	Enter the transmit delay value here that the router uses to wait before it transmits a packet. The range is from 1 to 65535 seconds. Select the Default option to use the default value, which is 1 second.
Retransmit Interval	Enter the retransmit interval value here that the router uses to wait before it retransmits a packet. The range is from 1 to 65535 seconds. Select the Default option to use the default value, which is 5 seconds.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **OSPF Virtual Link Table** are described below:

Parameter	Description
Process ID	Enter the ID for an IPv6 OSPF routing process here. The range is from 1 to 65535.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Process ID** link (1) to access and configure the specified OSPFv3 process.

Click the **Delete** button to delete the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Process ID** link (1), the following page will appear.



Figure 6-83 OSPFv3 Virtual Link Settings (Process ID) Window

Click the **OK** button to close the window and return to the previous window.

OSPFv3 LSDB Table

This window is used to find and display the OSPFv3 LSDB information.

To view the following window, click **L3 Features > OSPF > OSPFv3 > OSPFv3 LSDB Table**, as shown below:

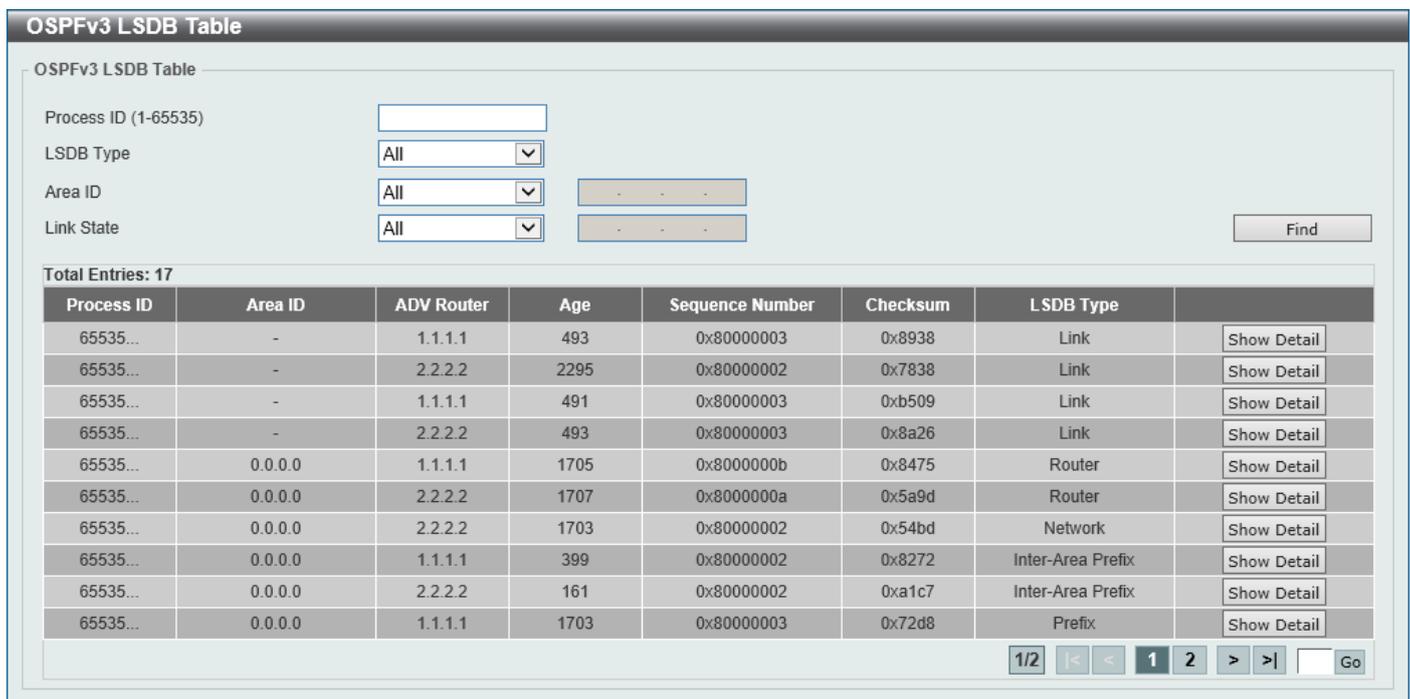


Figure 6-84 OSPFv3 LSDB Table Window

The fields that can be configured are described below:

Parameter	Description
Process ID	Enter the ID for an IPv6 OSPF routing process here. It is locally assigned and should be unique for each IPv6 OSPF routing process on the router. The range is from 1 to 65535.
LSDB Type	Select the LSDB display type here. Options to choose from are All , Router , Network , Prefix , Link , Inter-Area Prefix , Inter-Area Router , and External . <ul style="list-style-type: none"> • All - Specifies to display all types of LSDB information. • Router - Specifies to display information only about the router LSAs. • Network - Specifies to display information only about the network LSAs. • Prefix - Specifies to display information on the intra-area-prefix LSAs. • Link - Specifies to display information about the link LSAs. • Inter-Area Prefix - Specifies to display information only about LSAs based on inter-area prefix LSAs. • Inter-Area Router - Specifies to display information only about LSAs based on inter-area router LSAs. • External - Specifies to display information only about the external LSAs.
Area ID	Select the area ID option here. Options to choose from are All and Area ID . To display all the LSAs of the specified area, select the Area ID option and enter the OSPF area ID in the space provided. It can be specified as an IPv4 address.
Link State	Select the link state option here. Options to choose from are All , Self Originate , and Adv Router . <ul style="list-style-type: none"> • All - Specifies to display all the LSAs. • Self Originate - Specifies to display only self-originated LSAs (from the local router). • Adv-Router - Specifies to display all the LSAs of the advertising router. Enter the router ID in the space provided. The router ID can be specified as an IPv4 address.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show Detail** button to view more detailed information for the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Show Detail** button, the following page will appear.

OSPFv3 LSDB Information	
OSPFv3 LSDB Information	
Process ID	65535
Advertising Router ID	1.1.1.1
Area ID	-
LS Age	555
LS Type	Link
Link State ID	0.0.0.2
LS Seq Number	0x80000003
Checksum	0x8938
Length	56
<input type="button" value="Back"/>	
Detail Information	
Priority	1
Options	0x13 (-R -E V6)
Link-Local Address	FE80::200:29FF:FE00:12
Number of Prefixes	1
Prefix	2017:824::/64
Prefix Options	0 (- - -)

Figure 6-85 OSPFv3 LSDB Table (Show Detail) Window

Click the **Back** button to return to the previous window.

OSPFv3 Neighbor Table

This window is used to find and display the OSPFv3 neighbor information.

To view the following window, click **L3 Features > OSPF > OSPFv3 > OSPFv3 Neighbor Table**, as shown below:

OSPFv3 Neighbor Table

OSPFv3 Neighbor Table

Process ID (1-65535)

Interface VLAN (1-4094)

Neighbor

Total Entries: 2

Process ID	Neighbor ID	Priority	State	Link Local Address	Interface	Instance ID	
1	30.90.90.90	1	Full/DR	FE80::206:28FF:FED8:FE94	vlan11	11	<input type="button" value="Show Detail"/>
1	30.90.90.90	0	Full/-	-	-	0	<input type="button" value="Show Detail"/>

1/1 < < 1 > >

Figure 6-86 OSPFv3 Neighbor Table Window

The fields that can be configured are described below:

Parameter	Description
Process ID	Enter the OSPFv3 process ID to find here. The range is from 1 to 65535.
Interface VLAN	Enter the VLAN interface ID here. The range is from 1 to 4094.
Neighbor	Enter the OSPF neighbor ID here. It can be specified as an IPv4 address.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show Detail** button to view more detailed information for the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Show Detail** button, the following page will appear.

OSPFv3 Neighbor Detail Information

OSPFv3 Neighbor Detail Information

Process ID 1

Neighbor Router ID 30.90.90.90

Area 0.0.0.11

Interface Name vlan11

Link Local Address FE80::206:28FF:FED8:FE94

Priority 1

State Full

State Changes 5

DR 30.90.90.90

BDR 107.100.0.1

Option 0x000013 (-|R|-|H|V6)

Figure 6-87 OSPFv3 Neighbor Table (Show Detail) Window

Click the **Back** button to return to the previous window.

OSPFv3 Border Router Table

This window is used to find and display the OSPFv3 border router information.

To view the following window, click **L3 Features > OSPF > OSPFv3 > OSPFv3 Border Router Table**, as shown below:

Figure 6-88 OSPFv3 Border Router Table Window

The fields that can be configured are described below:

Parameter	Description
Process ID	Enter the OSPFv3 process ID to search for here. The range is from 1 to 65535.

Click the **Find** button to locate a specific entry based on the information entered.

IP Multicast Routing Protocol

IGMP

IGMP Interface Settings

The window is used to find and display the Internet Group Management Protocol (IGMP) interface settings.

To view the following window, click **L3 Features > IP Multicast Routing Protocol > IGMP > IGMP Interface Settings**, as shown below:

Figure 6-89 IGMP Interface Settings Window

The fields that can be configured are described below:

Parameter	Description
Interface VLAN	Enter the VLAN interface ID here. The range is from 1 to 4094.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Edit** button to modify the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Edit** button, the following page will appear.

IGMP Interface Settings	
Interface	vlan1
IP Address	10.90.90.90/8
Querier	0.0.0.0
Version	3 <input type="checkbox"/> Default
State	Disabled <input type="checkbox"/> Default
Query Interval (1-31744)	125 sec <input type="checkbox"/> Default
Query Max Response Time (1-25)	10 sec <input type="checkbox"/> Default
Robustness Variable (1-7)	2 <input type="checkbox"/> Default
Last Member Query Interval (1-25)	1 sec <input type="checkbox"/> Default
Subscriber Source IP Check	Enabled <input type="checkbox"/> Default

Figure 6-90 IGMP Interface Settings (Edit) Window

The fields that can be configured are described below:

Parameter	Description
Version	Select the IGMP version number here. The range is from 1 to 3. Select the Default option to use the default version which is 3.
State	Select to enable or disable the IGMP state on this interface here.
Query Interval	Enter the query interval value here. The range is from 1 to 31744 seconds. The IGMP querier sends IGMP query messages at the interval specified here to discover the receivers attached to the interface interested in joining the multicast group. Hosts respond to the query with IGMP report messages to indicate the multicast group they are interested in joining. Select the Default option to use the default value.
Query Max Responses Time	Enter the maximum query response time value here. The range is from 1 to 25 seconds. This configures the period of time which the group member can respond to an IGMP query message before the router removes the membership. The group membership lifetime is equal to the query interval times the robustness plus the maximum response time. Select the Default option to use the default value.
Robustness Variable	Enter the robustness variable value here. The range is from 1 to 7. The robustness variable provides fine tuning to allow for expected packet loss on an interface. Select the Default option to use the default value.
Last Member Query Interval	Enter the Last Member Query Interval value here. The range is from 1 to 25 seconds. When the router receives a leave message from a receiver to leave a group or a channel, the router will send the Group Specific Query or Group-Source Specific Query message to the receiver interface. The IGMP Last Member Query Interval will be advertised in the query message and conveyed to the receiver. This configures the period that the router will send the next group-specific query or group-source specific query message if there is no report from receiver for the specific group or specific channel. The router will retry for the last member query count. If no report messages are received after the retry count, the interface will remove the membership from the specific group or specific channel. Select the Default option to use the default value.

Parameter	Description
Subscriber Source IP Check	Select to enable or disable the subscriber source IP check feature here. By default, the IGMP report or leave messages received by the interface will be checked to determine whether its source IP is in the same network as the interface. If they are not in the same network, the message information won't be learned by the IGMP protocol.

Click the **Back** button to return to the previous window.

Click the **Apply** button to accept the changes made.

IGMP Static Group Settings

This window is used to display and configure the IGMP static group settings. Use this window to create an IGMP static group in the case that the attached host does not support the IGMP protocol. Once configured, the group member entry is added to the IGMP cache.

To view the following window, click **L3 Features > IP Multicast Routing Protocol > IGMP > IGMP Static Group Settings**, as shown below:

Figure 6-91 IGMP Static Group Settings Window

The fields that can be configured are described below:

Parameter	Description
Interface VLAN	Enter the VLAN interface ID here. The range is from 1 to 4094.
Group	Enter the IP multicast group address here.

Click the **Apply** button to accept the changes made.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show All** button to display all the entries.

IGMP Dynamic Group Table

This window is used to find, clear and display IGMP dynamic group information. The IGMP buffer includes a list that contains the dynamic multicast groups that the hosts in the direct subnet join. Use this window to clear the dynamic group information.

To view the following window, click **L3 Features > IP Multicast Routing Protocol > IGMP > IGMP Dynamic Group Table**, as shown below:

Figure 6-92 IGMP Dynamic Group Table Window

The fields that can be configured are described below:

Parameter	Description
Interface VLAN	Enter the VLAN interface ID here. The range is from 1 to 4094.
Group	Enter the IP multicast group address here.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Clear** button to clear the entries based on the information specified.

Click the **Show All** button to display all the entries.

Click the **Clear All** button to clear all the entries.

IGMP SSM Mapping Settings

This window is used to display and configure the IGMP SSM mapping settings. The deployment of Source Specific Multicast (SSM) allows the network service provider to manage IP multicast addresses easily.

When SSM is enabled, the last hop router will establish a source-based tree for the channel (S, G) on receiving a (S, G) INCLUDE request that falls in the SSM range from the attached IGMPv3 hosts.

There are cases that the attached host is IGMPv1 or IGMPv2 hosts which only issue (*, G) requests. With the SSM mapping, if the multicast group being requested falls in the SSM range, the router is able to map the (*, G) to a (S, G) request based on the group address to source address mapping defined here. The router will then establish the source-based tree for the mapped (S, G). If multiple associations exist, the router will establish a (S, G) source-based tree for each S.

To view the following window, click **L3 Features > IP Multicast Routing Protocol > IGMP > IGMP SSM Mapping Settings**, as shown below:

Figure 6-93 IGMP SSM Mapping Settings Window

The fields that can be configured in **IGMP SSM Mapping Settings** are described below:

Parameter	Description
SSM Mapping State	Select to enable or disable the SSM mapping feature for IGMPv1 or IGMPv2 hosts.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Add Static SSM Mapping** are described below:

Parameter	Description
Source Address	Enter the source address to be associated with the group defined in the access list here.
ACL Name	Enter the standard IP access list name that contains the multicast groups to be mapped. To permit a group, specify 'any' in source address field and specify the group address in destination address field of the access list entry. Alternatively, click the Please Select button to find and select any of the exiting access lists configured on this Switch to be used in this configuration.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to delete the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

The fields that can be configured in **IGMP SSM Mapping Table** are described below:

Parameter	Description
Group Address	Enter the IGMP multicast group address here.

Click the **Find** button to locate a specific entry based on the information entered.

After clicking the **Please Select** button, the following page will appear.

ACL Access List

Total Entries: 1

ID	ACL Name	ACL Type
1	SI-ACL	Standard IP ACL

1/1 < < 1 > > Go

OK

Figure 6-94 IGMP SSM Mapping Settings (Select) Window

Select the ACL and click the **OK** button to use the selected access list.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

MLD

MLD Interface Settings

This window is used to display and configure the Multicast Listener Discovery (MLD) interface settings.

To view the following window, click **L3 Features > IP Multicast Routing Protocol > MLD > MLD Interface Settings**, as shown below:

MLD Interface Settings

MLD Interface Settings

Interface VLAN (1-4094) Find Show All

Total Entries: 1

Interface	Version	IPv6 Address / Netmask	State	Querier	Query Interval	Query Max Response Time	Robustness Variable	Last Listener Query Count	Last Listener Query Interval
vian1	2	:::0	Disabled	::	125	10	2	2	1

1/1 < < 1 > > Go

Edit

Figure 6-95 MLD Interface Settings Window

The fields that can be configured are described below:

Parameter	Description
Interface VLAN	Enter the associated VLAN ID of the interface here. The range is from 1 to 4094.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show All** button to display all the entries.

Click the **Edit** button to modify the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Edit** button, the following page will appear.

MLD Interface Settings	
MLD Interface Settings	
Interface	vlan1
IPv6 Address	FE80::F27D:68FF:FE34:10/128
Querier	::
Version	2 <input type="checkbox"/> default
MLD State	Disabled <input type="checkbox"/> default
Query Interval (1-31744)	125 sec <input type="checkbox"/> default
Query Max Response Time (1-25)	10 sec <input type="checkbox"/> default
Robustness Variable (1-7)	2 <input type="checkbox"/> default
Last Listener Query Count(1-7)	2 <input type="checkbox"/> default
Last Listener Query Interval(1-25)	1 sec <input type="checkbox"/> default

Figure 6-96 MLD Interface Settings (Edit) Window

The fields that can be configured are described below:

Parameter	Description
Version	Select the MLD version that will be used on the interface here. Options to choose from are 1 and 2 . Select the Default option to use the default version, which is MLDv2.
MLD State	Select to enable or disable the MLD feature on this interface here.
Query Interval	Enter the query interval here. This specifies the frequency at which the designated router sends MLD general-query messages. On receiving the general query, the MLD listener needs to respond the report packet to claim that it is interested in the specified multicast group. The range is from 1 to 31744 seconds. Select the Default option to use the default value, which is 125 seconds.
Query Max Response Time	Enter the maximum query response time value here. This specifies the maximum response time advertised in MLD queries. The range is from 1 to 25 seconds. Select the Default option to use the default value, which is 10 seconds.
Robustness Variable	Enter the robustness variable value here. The robustness variable provides fine-tuning to allow for expected packet loss on an interface. The range is from 1 to 7. Select the Default option to use the default value, which is 2.
Last Listener Query Count	Enter the last member query count value here. This is used to configure the number of group-specific or group-source specific queries sent before the router assumes there are no local members in a group. If the router does not receive reports from hosts within the timeout period, the router will stop sending the multicast group traffic to the interface. The range is from 1 to 7. Select the Default option to use the default value, which is 2.
Last Listener Query Interval	Enter the interval for the amount of time between group-specific or group-source-specific queries here. When an MLD querier receives a packet to leave the group or channel, it will send a group-specific query or group-source-specific query. The leave timer starts once the MLD querier receives the packet on an interface. If the interface does not receive the report packet before the leave timer expires, then the interface's membership will be removed from the group or channel that it is leaving. The value of the leave timer is the value of the Last Listener Query Interval times the Last Listener Query Count. The range is from 1 to 25 seconds. Select the Default option to use the default value, which is 1 seconds.

Click the **Back** button to return to the previous window.

Click the **Apply** button to accept the changes made.

MLD Static Group Settings

This window is used to display and configure the MLD static group settings. Use this window to create an MLD static group in the case that the attached host does not support the MLD protocol. Once configured, the group member entry is added to the MLD cache.

To view the following window, click **L3 Features > IP Multicast Routing Protocol > MLD > MLD Static Group Settings**, as shown below:

Figure 6-97 MLD Static Group Settings Window

The fields that can be configured are described below:

Parameter	Description
Interface VLAN	Enter the VLAN interface ID here. The range is from 1 to 4094.
Group	Enter the IPv6 multicast group address here.

Click the **Apply** button to accept the changes made.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show All** button to display all the entries.

Click the **Delete** button to delete the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

MLD Group Table

This window is used to find and display the MLD group information.

To view the following window, click **L3 Features > IP Multicast Routing Protocol > MLD > MLD Group Table**, as shown below:

Figure 6-98 MLD Group Table Window

The fields that can be configured are described below:

Parameter	Description
Interface VLAN	Enter the VLAN interface ID here. The range is from 1 to 4094.
Group	Enter the group IPv6 address here.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show All** button to display all the entries.

MLD SSM Mapping Settings

This window is used to display and configure the MLD Source Specific Multicast (SSM) mapping settings.

To view the following window, click **L3 Features > IP Multicast Routing Protocol > MLD > MLD SSM Mapping Settings**, as shown below:

Figure 6-99 MLD SSM Mapping Settings Window

The fields that can be configured in **MLD SSM Mapping Settings** are described below:

Parameter	Description
SSM Mapping State	Select to enable or disable the MLD SSM mapping feature here.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Add Static SSM Mapping** are described below:

Parameter	Description
Source Address	Enter the source address that will be associated with the MLD membership for a group here. This is identified by access list.
ACL Name	Enter the name of the standard IPv6 access list that will be used here. This name can be up to 32 characters long. Click the Please Select button to select a pre-configured access list to use here.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

The fields that can be configured in **MLD SSM Mapping Table** are described below:

Parameter	Description
Group Address	Enter the group address of the IPv6 multicast group to be displayed here.

Click the **Find** button to locate a specific entry based on the information entered.

After clicking the **Please Select** button, the following page will appear.



Figure 6-100 MLD SSM Mapping Settings (Please Select) Window

Select the ACL and click the **OK** button to use the selected access list.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

IGMP Proxy

IGMP Proxy Settings

This window is used to display and configure the IGMP proxy settings. The IGMP proxy only works in a simple tree topology. Make sure that there are no other multicast routers except for the proxy devices in the simple tree topology. When receiving IGMP report packets from a downstream interface, IGMP proxy will update its membership database which is generated by the merger of all subscriptions on any downstream interface. If the database is changed, the proxy device will send unsolicited reports or leaves from the upstream interface. It can also send membership reports from the upstream interface when queried.

To view the following window, click **L3 Features > IP Multicast Routing Protocol > IGMP Proxy > IGMP Proxy Settings**, as shown below:

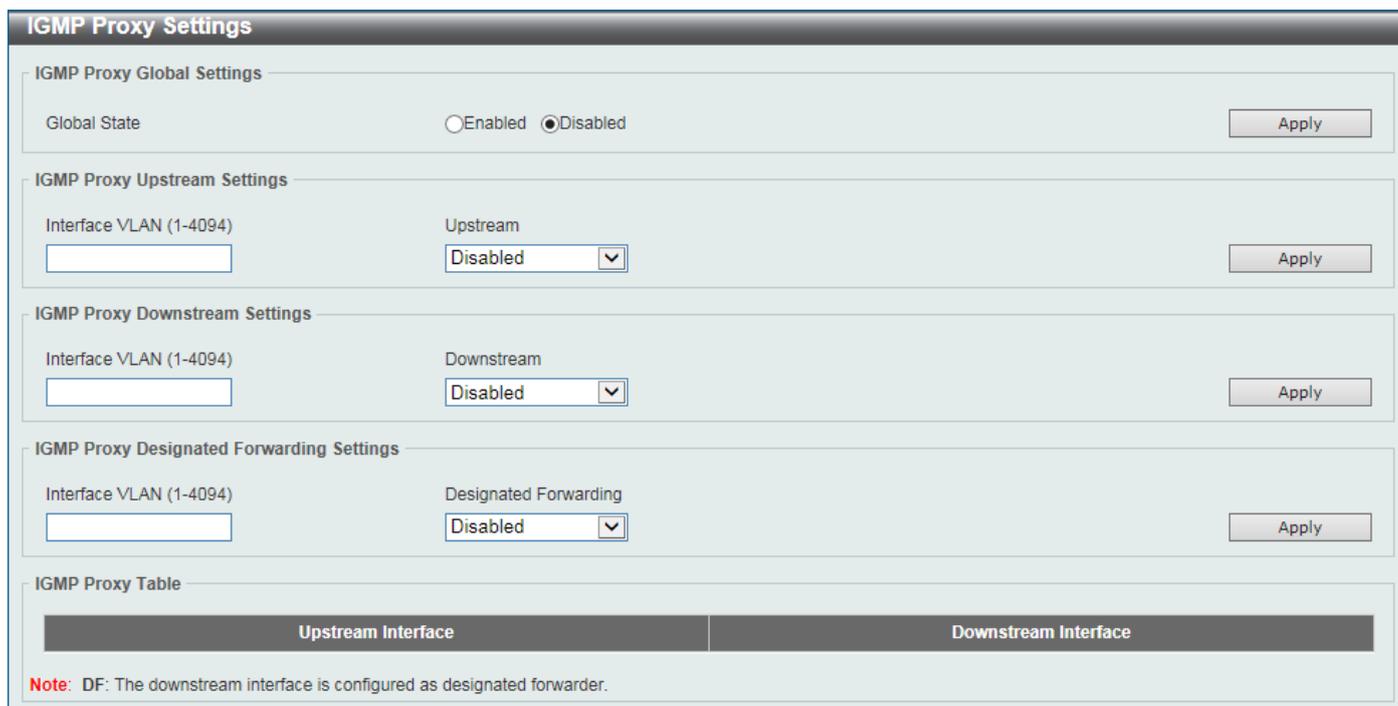


Figure 6-101 IGMP Proxy Settings Window

The fields that can be configured in **IGMP Proxy Global Settings** are described below:

Parameter	Description
Global State	Select to globally enable or disable the IGMP proxy feature here.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **IGMP Proxy Upstream Settings** are described below:

Parameter	Description
Interface VLAN	Enter the VLAN interface ID here. The range is from 1 to 4094.
Upstream	Select to enable or disable the interface as the upstream IGMP proxy here.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **IGMP Proxy Downstream Settings** are described below:

Parameter	Description
Interface VLAN	Enter the VLAN interface ID here. The range is from 1 to 4094.
Downstream	Select to enable or disable the interface as the downstream in IGMP proxy here.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **IGMP Proxy Designated Forwarding Settings** are described below:

Parameter	Description
Interface VLAN	Enter the VLAN interface ID here. The range is from 1 to 4094.
Designated Forwarding	Select to enable or disable designated forwarding on a non-querier IGMP proxy downstream interface here. To avoid local loops and redundant traffic for links that are considered downstream links by multiple IGMP-based forwarders,

Parameter	Description
	IGMP proxies use the IGMP querier election to elect a single forwarder on a LAN. Use this option to make a non-querier device a forwarder. The feature does not take effect if the interface is not set as the downstream interface or set as the upstream interface.

Click the **Apply** button to accept the changes made.

IGMP Proxy Group Table

This window is used to find and display IGMP proxy group information.

To view the following window, click **L3 Features > IP Multicast Routing Protocol > IGMP Proxy > IGMP Proxy Group Table**, as shown below:

Figure 6-102 IGMP Proxy Group Table Window

The fields that can be configured are described below:

Parameter	Description
Group Address	Enter the IPv4 group multicast address here.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show All** button to display all the entries.

IGMP Proxy Forwarding Table

This window is used to find and display IGMP proxy forwarding information.

To view the following window, click **L3 Features > IP Multicast Routing Protocol > IGMP Proxy > IGMP Proxy Forwarding Table**, as shown below:

Figure 6-103 IGMP Proxy Forwarding Table Window

The fields that can be configured are described below:

Parameter	Description
Group Address	Enter the IPv4 group multicast address here.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show All** button to display all the entries.

MLD Proxy

MLD Proxy Settings

This window is used to display and configure the MLD proxy settings. The MLD proxy only works in a simple tree topology. Make sure there are no other multicast routers except for the proxy devices in the tree topology.

When receiving MLD report packet from a downstream interface, MLD proxy will update its membership database which is generated by merging all subscriptions on any downstream interface. If the database changes the proxy device will send unsolicited reports or leaves from the upstream interface. It can also send membership reports from the upstream interface when queried.

To view the following window, click **L3 Features > IP Multicast Routing Protocol > MLD Proxy > MLD Proxy Settings**, as shown below:

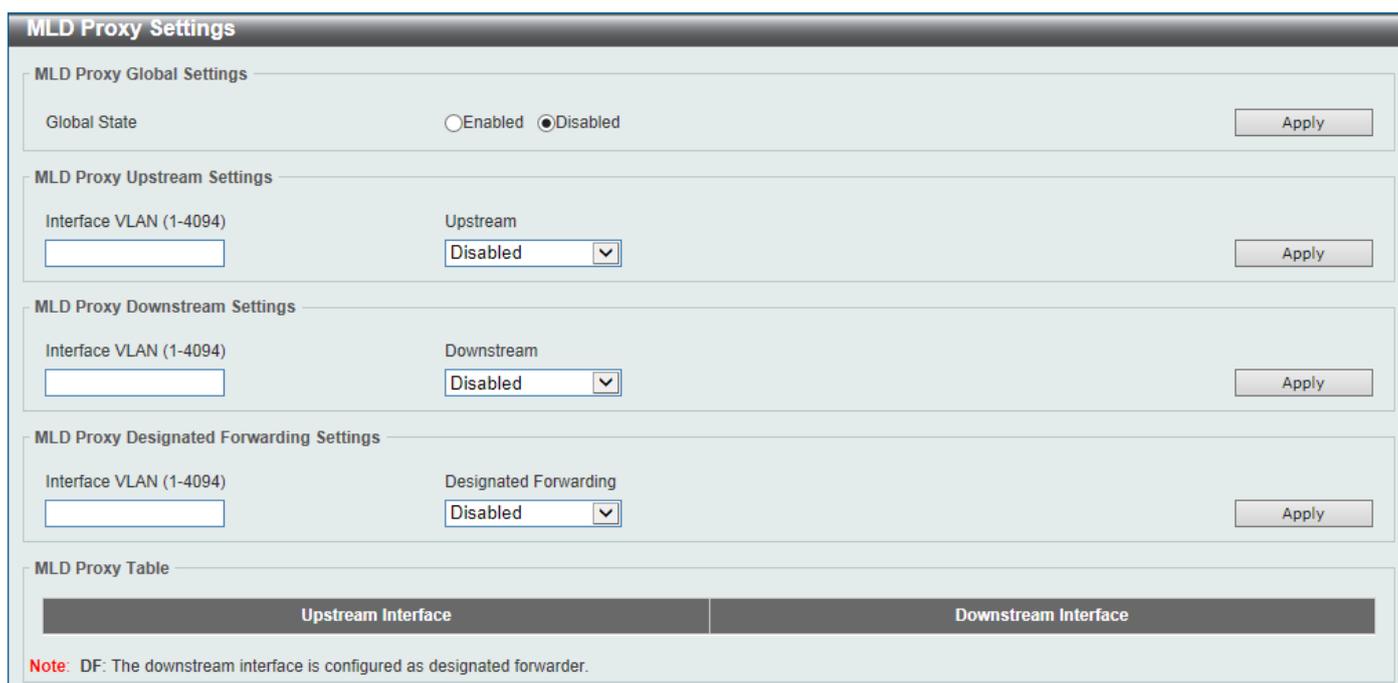


Figure 6-104 MLD Proxy Settings Window

The fields that can be configured in **MLD Proxy Global Settings** are described below:

Parameter	Description
Global State	Select to globally enable or disable the MLD proxy feature here.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **MLD Proxy Upstream Settings** are described below:

Parameter	Description
Interface VLAN	Enter the VLAN interface ID here. The range is from 1 to 4094.
Upstream	Select to enable or disable the interface as the upstream MLD proxy here. This feature only takes effect if the interface has an IPv6 address configured. Only one upstream interface can exist on an MLD proxy device.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **MLD Proxy Downstream Settings** are described below:

Parameter	Description
Interface VLAN	Enter the VLAN interface ID here. The range is from 1 to 4094.
Downstream	Select to enable or disable the interface as the downstream MLD proxy here. This feature only takes effect when the interface has an IPv6 address configured. Multiple downstream interfaces can be configured on an MLD proxy device.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **MLD Proxy Designated Forwarding Settings** are described below:

Parameter	Description
Interface VLAN	Enter the VLAN interface ID here. The range is from 1 to 4094.
Designated Forwarding	Select to enable or disable designated forwarding on a non-querier MLD proxy downstream interface here. To avoid local loops and redundant traffic for links that are considered downstream links by multiple MLD-based forwarders, MLD proxies use the MLD querier election to elect a single forwarder on a LAN. Administrators can use this command to make a non-querier device a forwarder. This feature does not take effect if the interface is not set as the downstream interface or set as upstream interface.

Click the **Apply** button to accept the changes made.

MLD Proxy Group Table

This window is used to find and display MLD proxy group information.

To view the following window, click **L3 Features > IP Multicast Routing Protocol > MLD Proxy > MLD Proxy Group Table**, as shown below:

Figure 6-105 MLD Proxy Group Table Window

The fields that can be configured are described below:

Parameter	Description
Group Address	Enter the IPv6 group multicast address here.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show All** button to display all the entries.

MLD Proxy Forwarding Table

This window is used to find and display MLD proxy forwarding information.

To view the following window, click **L3 Features > IP Multicast Routing Protocol > MLD Proxy > MLD Proxy Forwarding Table**, as shown below:

Figure 6-106 MLD Proxy Forwarding Table Window

The fields that can be configured are described below:

Parameter	Description
Group Address	Enter the IPv6 group multicast address here.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show All** button to display all the entries.

DVMRP

DVMRP Interface Settings

This window is used to display and configure the Distance Vector Multicast Routing Protocol (DVMRP) interface settings.

To view the following window, click **L3 Features > IP Multicast Routing Protocol > DVMRP > DVMRP Interface Settings**, as shown below:

Figure 6-107 DVMRP Interface Settings Window

The fields that can be configured are described below:

Parameter	Description
Interface Name	Enter the VLAN interface name used here.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show All** button to display all the entries.

Click the **Edit** button to modify the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Edit** button, the following page will appear.

Figure 6-108 DVMRP Interface Settings (Edit) Window

The fields that can be configured in the table are described below:

Parameter	Description
Neighbor Timeout	Enter the neighbor lifetime value here. If the router has not received a probe message from a neighbor after the neighbor timeout interval, the neighbor is considered to be down. The range is from 1 to 65535 seconds. By default, this value is 35 seconds.
Probe	Enter the DVMRP probe interval value here. The range is from 1 to 65535 seconds. By default, this value is 10 seconds.
Metric	Enter the metric value here. The range is from 1 to 32. A value of 32 means it is unreachable. For each source network reported, a route metric is associated with the route being reported. The metric is the sum of the interface metrics between the router originating the report and the source network. For DVMRP, the metric with 32 means it is unreachable. This limits the breadth across the whole DVMRP network and is necessary to place an upper limit on the convergence time of the protocol.
State	Select to enable or disable the DVMRP feature on the selected interface.

Click the **Apply** button to accept the changes made.

DVMRP Routing Table

This window is used to find and display DVMRP routing information.

To view the following window, click **L3 Features > IP Multicast Routing Protocol > DVMRP > DVMRP Routing Table**, as shown below:

Figure 6-109 DVMRP Routing Table Window

The fields that can be configured are described below:

Parameter	Description
Source Network	Enter the source IPv4 network address and mask length here.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show All** button to display all the entries.

DVMRP Neighbor Table

This window is used to find and display DVMRP neighbor information.

To view the following window, click **L3 Features > IP Multicast Routing Protocol > DVMRP > DVMRP Neighbor Table**, as shown below:

Interface	Neighbor Address	Generation ID	ExpTime
Total Entries: 0			

Figure 6-110 DVMRP Neighbor Table Window

The fields that can be configured are described below:

Parameter	Description
Interface name	Enter the VLAN interface name here.
Neighbor IP Address	Select and enter the IPv4 address of the neighbor here.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show All** button to display all the entries.

PIM

Protocol Independent Multicast (PIM) is a family of multicast routing protocols for Internet Protocol (IP) networks that provide one-to-many and many-to-many distribution of data over a LAN, WAN or the Internet. PIM is protocol-independent as it does not include its own topology discovery mechanism, but uses routing information supplied by other routing protocols, such as RIP or OSPF. The Switch supports four types of PIM, Dense Mode (PIM-DM), Sparse Mode (PIM-SM), PIM Source Specific multicast (PIM-SSM), and Sparse-Dense Mode (PIM-DM-SM).

PIM-SM

Protocol Independent Multicast - Sparse Mode (PIM-SM) is a multicast routing protocol that can use the underlying unicast routing information base or a separate multicast-capable routing information base. It builds unidirectional shared trees rooted at a Rendezvous Point (RP) per group, and optionally creates shortest-path trees per source. Unlike most multicast routing protocols which flood the network with multicast packets, PIM-SM will forward traffic to routers who are explicitly a part of the multicast group through the use of a Rendezvous Point (RP). This RP will take all requests from PIM-SM enabled routers, analyze the information and then return multicast information it receives from the source to requesting routers within its configured network. Through this method, a distribution tree is created, with the RP as the root. This distribution tree holds all PIM-SM enabled routers within which information collected from these routers is stored by the RP.

When many routers are a part of a multiple access network, a Designated Router (DR) will be elected. The DR's primary function is to send Join/Prune messages to the RP. The router with the highest priority on the LAN will be selected as the DR. If there is a tie for the highest priority, the router with the higher IP address will be chosen.

The third type of router created in the PIM-SM configuration is the Boot Strap Router (BSR). The goal of the Boot Strap Router is to collect and relay RP information to PIM-SM enabled routers on the LAN. Although the RP can be statically set, the BSR mechanism can also determine the RP. Multiple Candidate BSRs (C-BSR) can be set on the network but only one BSR will be elected to process RP information. If it is not specified which C-BSR is to be the BSR, all C-BSRs will emit Boot Strap Messages (BSM) out on the PIM-SM enabled network to determine which C-

BSR has the higher priority and once determined, will be elected as the BSR. Once determined, the BSR will collect RP data sent from candidate RPs on the PIM-SM network, compile it and then send it out on the LAN using periodic Boot Strap Messages (BSM). All PIM-SM Routers will get the RP information from the Boot Strap Mechanism and then store it in their database.

Discovering and Joining the Multicast Group

Although Hello packets discover PIM-SM routers, these routers can only join or be “pruned” from a multicast group through the use of Join/Prune Messages exchanged between the DR and RP. Join/Prune Messages are packets relayed between routers that effectively state which interfaces are, or are not to receive multicast data. The frequency at which these messages can be sent out on the network can be configured and are only valid to routers if a Hello packet has first been received. A Hello packet will simply state that the router is present and ready to become a part of the RP’s distribution tree. Once a router has accepted a member of the IGMP group and it is PIM-SM enabled, the interested router will then send an explicit Join/Prune message to the RP, which will in turn route multicast data from the source to the interested router, resulting in a unidirectional distribution tree for the group. Multicast packets are then sent out to all nodes on this tree. Once a prune message has been received for a router that is a member of the RP’s distribution tree, the router will drop the interface from its distribution tree.

Distribution Trees

Two types of distribution trees can exist within the PIM-SM protocol, a Rendezvous-Point Tree (RPT) and a Shortest Path Tree (SPT). The RP will send out specific multicast data that it receives from the source to all outgoing interfaces enabled to receive multicast data. Yet, once a router has determined the location of its source, an SPT can be created, eliminating hops between the source and the destination, such as the RP. This can be configured by the Switch administrator by setting the multicast data rate threshold. Once the threshold has been passed, the data path will switch to the SPT. Therefore, a closer link can be created between the source and destination, eliminating hops previously used and shortening the time a multicast packet is sent from the source to its final destination.

Register and Register-stop Messages

Multicast sources do not always join the intended receiver group. The first hop router (DR) can send multicast data without being the member of a group or having a designated source, which essentially means it has no information about how to relay this information to the RP distribution tree. This problem is alleviated through Register and Register-Stop messages. The first multicast packet received by the DR is encapsulated and sent on to the RP, which in turn removes the encapsulation and sends the packet down the RP distribution tree. When the route has been established, a SPT can be created to directly connect routers to the source, or the multicast traffic can flow from the DR to the RP. When the latter occurs, the same packet may be sent twice, one type encapsulated, one not. The RP will detect this flaw and then return a Register-stop message to the DR, requesting it to discontinue sending encapsulated packets.

Assert Messages

At times in the PIM-SM enabled network, parallel paths are created from source to receiver, meaning some receivers will receive the same multicast packets twice. To improve this situation, Assert messages are sent from the receiving device to both multicast sources to determine which single router will send the receiver the necessary multicast data. The source with the shortest metric (hop count) will be elected as the primary multicast source. This metric value is included within the Assert message.

PIM-SSM

The Source Specific Multicast (SSM) feature is an extension of IP multicast where datagram traffic is forwarded to receivers from only the multicast sources to which the receivers have explicitly joined. For multicast groups in the SSM range, only source-specific multicast distribution trees (no shared trees) can be created.

The Internet Assigned Numbers Authority (IANA) has reserved the address range from 232.0.0.0 to 232.255.255.255 for SSM applications and protocols. The Switch allows SSM configuration for an arbitrary subset of the IP multicast address range from 224.0.0.0 to 239.255.255.255.

PIM-DM

The Protocol Independent Multicast - Dense Mode (PIM-DM) protocol should be used in networks with a low delay (low latency) and high bandwidth, as PIM-DM is optimized to guarantee delivery of multicast packets and not to reduce overhead.

The PIM-DM multicast routing protocol assumes that all downstream routers want to receive multicast messages and relies upon explicit prune messages from downstream routers to remove branches from the multicast delivery tree that do not contain multicast group members.

PIM-DM has no explicit Join messages. It relies upon periodic flooding of multicast messages to all interfaces and then either waiting for a timer to expire (the Join/Prune Interval), or for the downstream routers to transmit explicit Prune messages indicating that there are no multicast members on their respective branches. PIM-DM then removes these branches (Prunes them) from the multicast delivery tree.

As a member of a pruned branch of a multicast delivery tree may want to join a multicast delivery group (at some point in the future), the protocol periodically removes the 'prune' information from its database and floods multicast messages to all interfaces on that branch. The interval for removing 'prune' information is the Join/Prune Interval.

PIM-SM-DM

In the PIM-SM, RP is a key point for the first hop of the sender. If the first hop does not have RP information when the sender sends information out, it will drop the packet and do nothing. Sparse-Dense mode will be useful in this condition. In Sparse-Dense mode, the packets can be flooded to all the outgoing interfaces and pruning/joining (Prune/Graft) can be used to control the outgoing interface list if RP is not found. In other words, the PIM Sparse-Dense mode is treated in either the sparse mode or dense mode of the operation; it depends on which mode the multicast group operates. When an interface receives multicast traffic, if there is a known RP for the group, then the current operation mode on the interface is sparse mode, otherwise the current operation mode on the interface will be dense mode.

PIM for IPv4

PIM Interface

This window is used to display and configure the Protocol Independent Multicast (PIM) interface settings.

To view the following window, click **L3 Features > IP Multicast Routing Protocol > PIM > PIM for IPv4 > PIM Interface**, as shown below:

PIM Interface

PIM Interface Search

Interface Name Mode

PIM Interface Table

Total Entries: 1

Interface Address	Interface Name	Mode	Passive	Neighbor Count	DR Priority	Designated Router	Generation ID	
10.90.90.90	vlan1	Dense	Disabled	0	1	0.0.0.0	0	<input type="button" value="Edit"/>

1/1 < < 1 > >

Figure 6-111 PIM Interface Window

The fields that can be configured are described below:

Parameter	Description
Interface Name	Select and enter the name of the interface here.
Mode	Select the operation mode of PIM entries used in this filtered search here. Options to choose from are Dense Mode , Sparse Mode , and Sparse-Dense Mode .

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show All** button to display all the entries.

Click the **Edit** button to modify the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Edit** button, the following page will appear.

PIM Interface Detail

PIM Interface Detail

Interface Name: vlan1
 Interface Address: 10.90.90.90
 Neighbor Count: 0
 Generation ID: 0
 PIM State: Disabled
 Mode: Sparse-Dense Mode
 PIM Passive: Disabled
 Query Interval (1-18724): 30 sec Default
 Designated Router
 DR Priority (0-4294967295): Default
 Join Prune Interval (1-18000): sec Default
 BSR Domain Border: Disabled

Apply Back

Figure 6-112 PIM Interface (Edit) Window

The fields that can be configured are described below:

Parameter	Description
PIM State	Select to enable or disable the PIM state on this interface here.
Mode	<p>Select the PIM mode here. Options to choose from are Dense Mode, Sparse Mode, and Sparse-Dense Mode.</p> <ul style="list-style-type: none"> • Dense Mode - PIM-DM assumes that when a source starts sending, all downstream routers want to receive the multicast data stream. Initially multicast data stream are flooded to all downstream routers and the interfaces that have group members. If there are no downstream routers or group members, the router will send prune message to indicate that the multicast data stream is not desired. • Sparse Mode - When multicast traffic is received on a sparse mode interface, the first hop router will encapsulate and send the register message to RP. If the router is not the first hop router, the traffic will be forwarded based on the mroute entry. A sparse mode interface will only be populated as mroute member interface if receive join message from the downstream router or if group member on a sparse mode interface, PIM join process will be triggered to create the shared tree or the source tree. • Sparse-Dense Mode - When interface is configured as PIM Sparse-Dense mode, a multicast group received by the interface can operate in either sparse mode or dense mode of operation. When the interface receives multicast traffic, if there is a known RP for the group, then this group will operate in sparse mode, otherwise this multicast group will operate in dense mode.
PIM Passive	Select to enable or disable the PIM passive feature here. When the passive mode is enabled, the interface will neither send PIM messages out nor accept PIM messages from this interface. The router will act as if it is the only PIM router on the network. Use this feature only when there is only one PIM router on the LAN.
Query Interval	Enter the interval at which hello messages are sent here. The range is from 1 to 18724 seconds. A PIMv2 router learns PIM neighbors via the PIM hello message. This feature configures the frequency of the hello message. Routers configured for IP multicasting send PIM hello messages to detect PIM routers. For SM, hello messages also determine the router to act as the designated router for each LAN segment. The configured query interval is also used as the value for hold time. By configuring a smaller period for the interval, the

Parameter	Description
	unresponsive neighbor can be discovered faster and thus the failover and recovery will become more efficient. Select the Default option to use the default value, which is 30 seconds.
DR Priority	After selecting to use the Sparse Mode or the Sparse-Dense Mode , this parameter will be available. Enter the Designated Router's (DR) priority value here. The range is from 0 to 4294967295. A larger value represents the higher priority. In the Dense Mode (DM), the DR priority option will not be carried in the hello message. The router with the highest priority value will be the DR. If multiple routers are with the same priority status, the router with the highest IP address will be the DR. If there is a router that does not support the DR priority in its hello message on the LAN, all routers on the LAN will ignore DR priority and only use IP address to elect DR. Select the Default option to use the default value, which is 1.
Join Prune Interval	After selecting to use the Sparse Mode or the Sparse-Dense Mode , this parameter will be available. Enter the Join/Prune message interval value here. The range is from 1 to 18000 seconds. When configuring the Join/Prune interval, consider the factors, such as the configured bandwidth and expected average number of multicast route entries for the attached network or link. For the Sparse Mode (SM), routers will periodically send join messages based on this interval. The hold-time in a Join/Prune message is 3.5 times the join-prune-interval. The receiving router will start a timer based on this hold-time, and prune the interface if no join message was received on this interface. Select the Default option to use the default value, which is 60 seconds.
BSR Domain Border	Select to enable or disable the Bootstrap Router (BSR) domain border feature here. The feature only takes effect when the interface is PIM enabled. Use this feature on the interface that border with another domain to avoid the exchange of BSR messages across two domains.

Click the **Apply** button to accept the changes made.

Click the **Back** button to return to the previous window.

PIM BSR Candidate

This window is used to display and configure the PIM BSR candidate settings. This feature only takes effect when the interface has an IP address configured and is in the PIM sparse mode.

This feature causes the router to send bootstrap messages to announce the IP address of the designated interface as the CCSR address. The hash mask is used by all routers within a domain, to map a group to one of the Rendezvous Points (RP) from the matching set of group-range-to-RP maps (this set all have the same longest mask length and same highest priority). The algorithm takes as an input the group address and the addresses of the candidate RPs from the maps, and gives as an output one RP address to be used.

To view the following window, click **L3 Features > IP Multicast Routing Protocol > PIM > PIM for IPv4 > PIM BSR Candidate**, as shown below:

Figure 6-113 PIM BSR Candidate Window

The fields that can be configured are described below:

Parameter	Description
Interface Name	Enter the name of the interface here.
Hash Mask Length	Enter the hash mask length for RP selection here. The range is from 0 to 32. Select the Default option to use the default value, which is 30.
Priority	Enter the Candidate Bootstrap Router (CBSR) priority value here. The candidate with the highest priority is preferred. If the priority values are the same, the router with the highest IP address is preferred. The range is from 0 to 255. Select the Default option to use the default value, which is 64.
Interval	Enter the interval value between originating bootstrap messages here. The range is from 1 to 255 seconds. Select the Default option to use the default value, which is 60 seconds.

Click the **Add** button to add a new entry based on the information entered.

Click the **Delete** button to delete an entry based on the information entered.

PIM RP Address

This window is used to display and configure the static multicast groups to RP mapping. In a multicast domain, the static multicast group to RP mapping can be used together with BSR. All routers in a domain should have a consistent multicast group to RP mapping. The first hop router that initiates a register message will use the mapping entries to determine the RP for sending the PIM register message destined for a specific group. The last hop router that initiates a join message uses the mapping entries to determine the RP for sending the join and prune message for a specific group. When a router receives a join message, it will check the mapping entries for forwarding of the message. When a RP receives a register message, if the router is not the right RP for the multicast group, a register-stop message will be sent.

Multiple RPs can be defined, each with a single access list.

To view the following window, click **L3 Features > IP Multicast Routing Protocol > PIM > PIM for IPv4 > PIM RP Address**, as shown below:

Figure 6-114 PIM RP Address Window

The fields that can be configured are described below:

Parameter	Description
RP Address	Enter the RP IPv4 address here.
Group Access List Name	Enter the standard access list that will be used here. Alternatively, click the Show List button to find and select any of the exiting ACL configured on this Switch to be used in this configuration. Select the All Groups option to map the RP to all multicast groups.

Click the **Add** button to add a new entry based on the information entered.

Click the **Delete** button to delete an entry based on the information entered.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Show List** button, the following page will appear.

Figure 6-115 PIM RP Address (Show List) Window

The fields that can be configured are described below:

Parameter	Description
ACL Type	Select the ACL type that will be used to display the type of existing access lists in the table here. Options to choose from are IP ACL , Expert IP ACL , IPv6 ACL , Expert IPv6 ACL , MAC ACL , and Expert ACL .
ACL List	Select the radio button of the access list in the table that will be used here.

Click the **Find** button to display a list of access lists based on the selection made.

Click the **Show All** button to display all configured access lists.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

Click the **Apply** button to use the selected access list.

PIM RP Candidate

This window is used to display and configure the PIM RP candidate settings.

To view the following window, click **L3 Features > IP Multicast Routing Protocol > PIM > PIM for IPv4 > PIM RP Candidate**, as shown below:

Figure 6-116 PIM RP Candidate Window

The fields that can be configured in **RP Candidate Global Settings** are described below:

Parameter	Description
Priority	Enter the candidate RP's priority value here. The range is from 0 to 255. Select the Default option to use the default value, which is 192.
Interval	Enter the candidate RP's advertisement interval value here. The range is from 1 to 16383 seconds. Select the Default option to use the default value, which is 60 seconds.
Wildcard Prefix Count	Enter the multicast group address wildcard (224.0.0.0/4) prefix count value in the C-RP message here. This value can either be 1 or 0. Select the Default option to use the default value, which is 0.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **RP Candidate Settings** are described below:

Parameter	Description
Interface Name	Enter the name of the interface here.
Group Access List Name	Enter the standard access list that will be used here. Alternatively, click the Show List button to find and select any of the existing access lists configured on this Switch to be used in this configuration. Select the All Groups option to map the candidate RP to all multicast groups.

Click the **Add** button to add a new entry based on the information entered.

Click the **Delete** button to delete an entry based on the information entered.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Show List** button, the following page will appear.

Figure 6-117 PIM RP Candidate (Show List) Window

The fields that can be configured are described below:

Parameter	Description
ACL Type	Select the ACL type that will be used to display the type of existing access lists in the table here. Options to choose from are IP ACL , Expert IP ACL , IPv6 ACL , Expert IPv6 ACL , MAC ACL , and Expert ACL .
ACL List	Select the radio button of the access list in the table that will be used here.

Click the **Find** button to display a list of access lists based on the selection made.

Click the **Show All** button to display all configured access lists.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

Click the **Apply** button to use the selected access list.

PIM RP Table

This window is used to find and display PIM RP information.

To view the following window, click **L3 Features > IP Multicast Routing Protocol > PIM > PIM for IPv4 > PIM RP Table**, as shown below:

Figure 6-118 PIM RP Table Window

The fields that can be configured are described below:

Parameter	Description
RP Hash	Enter the IPv4 multicast group address here.

Click the **Find** button to display a list of access lists based on the selection made.

Click the **Show All** button to display all configured access lists.

PIM Register Settings

This window is used to display and configure the PIM register settings.

To view the following window, click **L3 Features > IP Multicast Routing Protocol > PIM > PIM for IPv4 > PIM Register Settings**, as shown below:

Figure 6-119 PIM Register Settings Window

The fields that can be configured in **Register Checksum Wholepkt** are described below:

Parameter	Description
RP Address Access List Name	Enter the standard access list that will be used here. Alternatively, click the Show List button to find and select any of the exiting access lists configured on this Switch to be used in this configuration.

Click the **Add** button to add a new entry based on the information entered.

Click the **Delete** button to delete an entry based on the information entered.

The fields that can be configured in **Register Probe Time** are described below:

Parameter	Description
Register Probe	Enter the register probe time value here. The range is from 1 to 127 seconds. The register probe time is the time before the Register Stop Timer (RST) expires when a DR may send a Null-Register to the RP to cause it to resend a Register-Stop message. Select the Default option to use the default value, which is 5 seconds.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Register Suppression Time** are described below:

Parameter	Description
Register Suppression	<p>Enter the register suppression timeout value here. The range is from 3 to 65535 seconds. When a DR receives the register stop message, it will start the suppression timer. During the suppression period, a DR stops sending the register message to the RP.</p> <p>Use this feature on the first hop router. The value of the register probe time must be less than half the value of the register suppression time to prevent a possible negative value in the setting of the register stop timer. The minimal value for the register suppression time is 3.</p> <p>Select the Default option to use the default value, which is 60 seconds.</p>

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Register Keepalive Time** are described below:

Parameter	Description
Register Keepalive	<p>Enter the register keep-alive time value here. The range from 1 to 65525 seconds.</p> <p>Select the Default option to use the default value, which is 185 seconds.</p>

Click the **Apply** button to accept the changes made.

After clicking the **Show List** button, the following page will appear.

Figure 6-120 PIM Register Settings (Show List) Window

The fields that can be configured are described below:

Parameter	Description
ACL Type	Select the ACL type that will be used to display the type of existing access lists in the table here. Options to choose from are IP ACL , Expert IP ACL , IPv6 ACL , Expert IPv6 ACL , MAC ACL , and Expert ACL .
ACL List	Select the radio button of the access list in the table that will be used here.

Click the **Find** button to display a list of access lists based on the selection made.

Click the **Show All** button to display all configured access lists.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

Click the **Apply** button to use the selected access list.

PIM SPT Threshold Settings

This window is used to display and configure the PIM SPT threshold settings. Use this feature on the last hop of the router. In the PIM-SM mode, initially the multicast traffic from the source will be flowing along the RPT share tree to the receiver. After the first packet arrives at the last hop router, for each group of traffic, it can operate in one of the following two modes. With the mode **Infinity**, the traffic keeps following the share tree. With the mode **0**, the source tree will be established and the traffic Switchover to the source tree.

To view the following window, click **L3 Features > IP Multicast Routing Protocol > PIM > PIM for IPv4 > PIM SPT Threshold Settings**, as shown below:

Figure 6-121 PIM SPT Threshold Settings Window

The fields that can be configured are described below:

Parameter	Description
SPT Threshold	<p>Select the SPT threshold option here. Options to choose from are 0 and Infinity.</p> <ul style="list-style-type: none"> 0 - Specifies to establish the source tree right at the arrival of the first packet. Infinity - Specifies to always rely on the shared tree. <p>Select the Default option to use the default setting, which is Infinity.</p>

Click the **Apply** button to accept the changes made.

PIM SSM Settings

This window is used to display and configure the PIM SSM settings. Use this feature on the last hop of the router only. When SSM is enabled, the last hop router will initiate to establish a source-based tree for the channel (S,G) on receiving a IGMPv3 include (S, G) request that falls in the SSM range from the attached hosts.

To view the following window, click **L3 Features > IP Multicast Routing Protocol > PIM > PIM for IPv4 > PIM SSM Settings**, as shown below:

Figure 6-122 PIM SSM Settings Window

The fields that can be configured are described below:

Parameter	Description
Multicast Group Address Name	<p>Enter the standard IP access list name here that defines the user-specified SSM group addresses. The group address should be defined in the destination IP address field of the rule entry. Alternatively, click the Show List button to find and select any of the exiting access lists configured on this Switch to be used in this configuration. Selecting the Default SSM Group (232.0.0.0/8)</p>

Parameter	Description
	option specifies to use the default SSM group addresses. The default SSM group address range is 232/8.

Click the **Add** button to add a new entry based on the information entered.

Click the **Delete** button to delete an entry based on the information entered.

After clicking the **Show List** button, the following page will appear.

Figure 6-123 PIM SSM Settings (Show List) Window

The fields that can be configured are described below:

Parameter	Description
ACL Type	Select the ACL type that will be used to display the type of existing access lists in the table here. Options to choose from are IP ACL , Expert IP ACL , IPv6 ACL , Expert IPv6 ACL , MAC ACL , and Expert ACL .
ACL List	Select the radio button of the access list in the table that will be used here.

Click the **Find** button to display a list of access lists based on the selection made.

Click the **Show All** button to display all configured access lists.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

Click the **Apply** button to use the selected access list.

PIM Neighbor Table

This window is used to find and display PIM neighbor information.

To view the following window, click **L3 Features > IP Multicast Routing Protocol > PIM > PIM for IPv4 > PIM Neighbor Table**, as shown below:

Figure 6-124 PIM Neighbor Table Window

The fields that can be configured are described below:

Parameter	Description
Interface Name	Enter the VLAN interface name here to display PIM-SM neighbor information.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show All** button to display all the entries.

PIM for IPv6

In this section, the settings associated with PIM Sparse Mode for IPv6 (PIM-SMv6) and PIM Dense Mode for IPv6 (PIM-DMv6) will be configured.

PIM for IPv6 Interface

This window is used to display and configure the PIM IPv6 interface settings.

To view the following window, click **L3 Features > IP Multicast Routing Protocol > PIM > PIM for IPv6 > PIM for IPv6 Interface**, as shown below:

Interface Name	Interface Link-Local Address	Interface Global Address	Mode	Neighbor Count	Designated Router	DR Priority	Hello Interval	Join Prune Interval	Border
vlan1	::	::	None	0	not elected	1	30	60	disabled

Figure 6-125 PIM for IPv6 Interface Window

The fields that can be configured are described below:

Parameter	Description
Interface Name	Enter the VLAN interface name here.
Mode	Select the operation mode of IPv6 PIM entries used in this filtered search here. Options to choose from are Sparse Mode and Dense Mode .

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show All** button to display all the entries.

Click the **Edit** button to modify the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Edit** button, the following page will appear.

PIM for IPv6 Interface Detail	
Interface Name	vlan1
Interface Link-Local Address	FE80::F27D:68FF:FE34:10
Interface Global Address	::
Mode	None
Designated Router	not elected
Designated Router Priority(0-4294967295)	1 <input type="checkbox"/> Default
Designated Router Priority Enabled	True
Generation ID	0
Hello Interval(1-18000)	30 sec <input type="checkbox"/> Default
Triggered Hello Interval	5 sec
Hello Holdtime	105 sec
Join Prune Interval(1-18000)	60 sec <input type="checkbox"/> Default
Join Prune Holdtime	210 sec
LAN Delay Enabled	True
Propagation Delay	1 sec
Override Interval	3 sec
Effective Propagation Delay	1 sec
Effective Override Interval	3 sec
Join Suppression Enabled	False
Bidirectional Capable	False
BSR Domain Border	Disabled
PIM Passive Mode	Disabled

Figure 6-126 PIM for IPv6 Interface (Edit) Window

The fields that can be configured are described below:

Parameter	Description
Mode	Select the IPv6 PIM mode used in this interface here. Options to choose from are None , Sparse Mode , and Dense Mode . PIM for IPv6 will be disabled in this interface when the None option was selected.
Designated Router Priority	Enter the DR priority value here. The range is from 0 to 4294967295. A larger value means a higher priority. This feature only takes effective when the VLAN interface is PIM-SM mode enabled. When a DR is a candidate for election, the following conditions apply: <ul style="list-style-type: none"> The router with the highest priority value configured on an interface will be elected as the DR. If multiple routers have the same highest priority, then the router with the highest IPv6 address configured on the interface will be elected as the DR. If a router does not advertise a priority value in its hello messages, the router is regarded as having the highest priority and will be elected as the DR. If there are multiple routers do not include the DR priority option in their hello messages, then the router with the highest IPv6 address will be elected as the DR. Select the Default option to use the default value, which is 1.
Hello Interval	Enter hello message interval value here. The range is from 1 to 18000 seconds. A PIM router learns PIM neighbors via the hello message. Routers configured for IP multicast send PIM hello messages to detect PIM routers. For SM, hello messages are also used to determine which router will be elected as the designated router for each LAN segment. <p>Select the Default option to use the default value, which is 30 seconds.</p>
Join Prune Interval	Enter the Join/Prune message interval value here. The range is from 1 to 18000 seconds. When configuring the Join/Prune interval, the user needs to consider the factors, such as configured bandwidth and expected average number of multicast route entries for the attached network or link (for example,

Parameter	Description
	<p>the period would be longer for lower-speed links, or for routers in the center of the network that expect to have a larger number of entries).</p> <p>For SM-mode, the router will periodically send the join message based on this interval. The hold-time in a Join/Prune message is 3.5 times the join-prune-interval. The receiving router will start a timer based on this hold-time, and prune the interface if no join message is received on this interface.</p> <p>Select the Default option to use the default value, which is 60 seconds.</p>
BSR Domain Border	Select to enable or disable the BSR domain border feature here. When an interface is configured as a border, it will prevent bootstrap router (BSR) messages from being sent or received through it.
PIM Passive Mode	Select to enable or disable the PIM passive mode for this interface here. This feature only takes effect when the interface is IPv6 PIM enabled. When the passive mode is enabled, the interface will neither send PIM messages out nor accept PIM messages from this interface. The router will act as it is the only PIM router on the network. Use this feature only when there is only one PIM router on the LAN.

Click the **Apply** button to accept the changes made.

Click the **Back** button to return to the previous window.

PIM for IPv6 BSR Candidate Settings

This window is used to display and configure the IPv6 PIM BSR candidate settings. This feature only affects PIM-SM operation. This will cause the router to send bootstrap messages to all its PIM neighbors, with the address of the designated interface as the BSR address. A PIM-SM domain must contain a unique BSR (Bootstrap Router) which is responsible for collect and advertise the RP information.

To view the following window, click **L3 Features > IP Multicast Routing Protocol > PIM > PIM for IPv6 > PIM for IPv6 BSR Candidate Settings**, as shown below:

Figure 6-127 PIM for IPv6 BSR Candidate Settings Window

The fields that can be configured are described below:

Parameter	Description
Interface Name	Enter the VLAN interface name used here.

Parameter	Description
Hash Mask Length	Enter the hash mask length for RP selection here. The range is from 0 to 128. The mask (128 bits maximum) that is to be logically AND with the group address before the hash function is executed. All groups with the same seed hash (correspond) to the same RP. Therefore one RP can be derived for multiple groups. Select the Default option to use the default value, which is 126.
Priority	Enter the priority value for the BSR candidate here. The range is from 0 to 255. The BSR with the larger priority is preferred. If the priority values are the same, the router with the larger IPv6 address is the BSR. Select the Default option to use the default value, which is 64.

Click the **Add** button to add a new entry based on the information entered.

Click the **Delete** button to delete an entry based on the information entered.

PIM for IPv6 BSR Table

This window is used to view IPv6 PIM BSR information.

To view the following window, click **L3 Features > IP Multicast Routing Protocol > PIM > PIM for IPv6 > PIM for IPv6 BSR Table**, as shown below:

PIM for IPv6 BSR Table				
BSR Candidate RP Cache				
Total Entries: 0				
Group(s)	RP Address	RP Priority	Uptime	Expires
BSR Candidate RP Information				
Total Entries: 0				
Candidate RP	Priority	Holdtime	Advertisement Interval	Next Advertisement

Figure 6-128 PIM for IPv6 BSR Table Window

PIM for IPv6 RP Address

This window is used to display and configure the IPv6 PIM RP address settings. This feature only affects PIM-SM operation. Use this feature to statically define the RP address for multicast groups that are to operate in sparse mode.

Use a single RP for more than one group. The conditions specified by the access list determine for which groups the RP can be used. Multiple RP can be defined, each with a single access list. The new setting overrides the old one.

All routers in a domain should have a consistent multicast group to RP mapping. The first hop router that initiates a register message will use the mapping entries to determine the RP for sending the PIM register message destined for a specific group. The last hop router that initiates a join message uses the mapping entries to determine the RP for sending the join and prune message for a specific group. When a router receives a join message, it will check the mapping entries for forwarding of the message. When a RP receives a register message, if the router is not the right RP for the multicast group, a register-stop message will be sent.

If the PIM domain is using embedded-RP, only the RP needs to be statically configured as the RP for the embedded RP ranges. The other routers will discover the RP address from the IPv6 group address. If these routers want to select a static RP instead of the embedded RP, the specific embedded RP group range must be configured in the access list of the static RP.

To view the following window, click **L3 Features > IP Multicast Routing Protocol > PIM > PIM for IPv6 > PIM for IPv6 RP Address**, as shown below:

Figure 6-129 PIM for IPv6 RP Address Window

The fields that can be configured are described below:

Parameter	Description
RP Address	Enter the RP IPv6 address here.
Group Access List Name	Enter the standard IPv6 access list that will be used here. Alternatively, click the Show List button to find and select any of the existing access lists configured on this Switch to be used in this configuration. Select the All Groups option to map the RP to all multicast groups.
Override	Selecting this option specifies that the static RP will override dynamically learned RPs.

Click the **Add** button to add a new entry based on the information entered.

Click the **Delete** button to delete an entry based on the information entered.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Show List** button, the following page will appear.

Figure 6-130 PIM for IPv6 RP Address (Show List) Window

The fields that can be configured are described below:

Parameter	Description
ACL Type	Select the ACL type that will be used to display the type of existing access lists in the table here. Options to choose from are IP ACL , Expert IP ACL , IPv6 ACL , Expert IPv6 ACL , MAC ACL , and Expert ACL .
ACL List	Select the radio button of the access list in the table that will be used here.

Click the **Find** button to display a list of access lists based on the selection made.

Click the **Show All** button to display all configured access lists.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

Click the **Apply** button to use the selected access list.

PIM for IPv6 RP Candidate

This window is used to display and configure the IPv6 PIM RP candidate settings. Only one group access list can be specified for each interface. The latest configuration overrides the previous one. This feature can be issued multiple times for different interfaces. This configuration causes the router to send a PIMv2 message advertising itself as a candidate RP to the BSR.

To view the following window, click **L3 Features > IP Multicast Routing Protocol > PIM > PIM for IPv6 > PIM for IPv6 RP Candidate**, as shown below:

Figure 6-131 PIM for IPv6 RP Candidate Window

The fields that can be configured are described below:

Parameter	Description
Interface Name	Enter the interface name here whose IPv6 address will be advertised as the candidate RP (C-RP).
Group Access List Name	Enter the standard IPv6 access list that will be used here. Alternatively, click the Show List button to find and select any of the existing access lists configured on this Switch to be used in this configuration. Select the All Groups option to map the candidate RP to all multicast groups.
Priority	Enter the RP priority value here. The range is from 0 to 255. Select the Default option to use the default value, which is 192.
Interval	Enter the RP candidate advertisement interval value here. The range is from 1 to 16383 seconds. Select the Default option to use the default value, which is 60 seconds.

Click the **Add** button to add a new entry based on the information entered.

Click the **Edit** button to modify the specified entry.

Click the **Delete** button to delete the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Show List** button, the following page will appear.

Figure 6-132 PIM for IPv6 RP Candidate (Show List) Window

The fields that can be configured are described below:

Parameter	Description
ACL Type	Select the ACL type that will be used to display the type of existing access lists in the table here. Options to choose from are IP ACL , Expert IP ACL , IPv6 ACL , Expert IPv6 ACL , MAC ACL , and Expert ACL .
ACL List	Select the radio button of the access list in the table that will be used here.

Click the **Find** button to display a list of access lists based on the selection made.

Click the **Show All** button to display all configured access lists.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

Click the **Apply** button to use the selected access list.

After clicking the **Edit** button, the following page will appear.

Figure 6-133 PIM for IPv6 RP Candidate (Edit) Window

The additional fields that can be configured are described below:

Parameter	Description
Interval	Enter the RP candidate advertisement interval value here. The range is from 1 to 16383 seconds.
Priority	Enter the RP priority value here. The range is from 0 to 255.

Click the **Apply** button to accept the changes made.

PIM for IPv6 RP Embedded Settings

This window view and configure the IPv6 PIM embedded settings. Embedded RP defines an address allocation policy in which the address of the RP is encoded in an IPv6 multicast group address. This allows an easy deployment of scalable inter-domain multicast and simplifies the intra-domain multicast configuration as well. IPv6 Multicast group addresses embedded with RP information start with ff70::/12 where the flag value of 7 means embedded RP.

To view the following window, click **L3 Features > IP Multicast Routing Protocol > PIM > PIM for IPv6 > PIM for IPv6 RP Embedded Settings**, as shown below:

Figure 6-134 PIM for IPv6 RP Embedded Settings Window

The fields that can be configured are described below:

Parameter	Description
RP Embedded	Select to enable or disable the RP embedded feature here.

Click the **Apply** button to accept the changes made.

PIM for IPv6 RP Table

This window is used to find and display IPv6 PIM RP information.

To view the following window, click **L3 Features > IP Multicast Routing Protocol > PIM > PIM for IPv6 > PIM for IPv6 RP Table**, as shown below:

Figure 6-135 PIM for IPv6 RP Table Window

The fields that can be configured are described below:

Parameter	Description
Group Address/Prefix Length	Enter the multicast group IPv6 address and prefix length here.
Source	Select the source to display here. Options to choose from are Bootstrap , Embedded RP , and Static . <ul style="list-style-type: none"> Bootstrap - Specifies to display ranges learned through the BSR.

Parameter	Description
	<ul style="list-style-type: none"> • Embedded RP - Specifies to display group ranges learned through the embedded rendezvous point (RP). • Static - Specifies to display ranges enabled by static configuration.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show All** button to display all the entries.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

PIM for IPv6 Register Settings

This window is used to display and configure the IPv6 PIM register settings.

To view the following window, click **L3 Features > IP Multicast Routing Protocol > PIM > PIM for IPv6 > PIM for IPv6 Register Settings**, as shown below:

Figure 6-136 PIM for IPv6 Register Settings Window

The fields that can be configured in **Register Checksum Wholepkt** are described below:

Parameter	Description
Register Checksum Wholepkt	Select the enable or disable the register checksum whole-packet feature here. When enabled, it configures the router to calculate the checksum of register message over the entire PIM message including the data portion. By default, the register checksum methodology is PIM RFC-compliant, excluding the data portion in the Register message.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Register Probe Time** are described below:

Parameter	Description
Register Probe	Enter the register probe time value here. The range is from 1 to 127 seconds. The register-probe time is the time before the Register-Stop Timer (RST) expires when a DR may send a Null-Register to the RP to cause it to resend a Register-Stop message. Select the Default option to use the default value, which is 5 seconds.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Register Suppression Time** are described below:

Parameter	Description
Register Suppression	Enter the register suppression timeout value here. The range is from 3 to 65535 seconds. When a DR receives the register-stop message, it will start the

Parameter	Description
	<p>suppression timer. During the suppression time a DR will stop sending Register-encapsulated data to the RP. This timer should be configured on the designated router. The value of the Register Probe Time must be less than half the value of the Register Suppression Time to prevent a possible negative value in the setting of the Register-Stop Timer. The minimal value for Register Suppression Time is 3.</p> <p>Select the Default option to use the default value, which is 60 seconds.</p>

Click the **Apply** button to accept the changes made.

PIM for IPv6 SPT Threshold Settings

This window is used to display and configure the Shortest Path Tree (SPT) threshold settings.

To view the following window, click **L3 Features > IP Multicast Routing Protocol > PIM > PIM for IPv6 > PIM for IPv6 SPT Threshold Settings**, as shown below:

Figure 6-137 SPT Threshold Settings Window

The fields that can be configured are described below:

Parameter	Description
SPT Threshold	<p>Select the SPT threshold value here. Options to choose from are 0 and Infinity. Select the Default option to use the default setting, which is Infinity.</p> <ul style="list-style-type: none"> 0 - Specifies to establish the source tree right at the arrival of the first packet. Infinity - Specifies to always rely on the shared tree.

Click the **Apply** button to accept the changes made.

PIM for IPv6 SSM Settings

This window is used to display and configure the IPv6 PIM SSM settings.

To view the following window, click **L3 Features > IP Multicast Routing Protocol > PIM > PIM for IPv6 > PIM for IPv6 SSM Settings**, as shown below:

Figure 6-138 PIM for IPv6 SSM Settings Window

The fields that can be configured are described below:

Parameter	Description
Multicast Group Address Name	Enter the name of the access list that defines the user-specified SSM group address here. Select the Default SSM Group option to use the default SSM group address range. The default SSM group address range is FF3x::/32.

Click the **Add** button to add a new entry based on the information entered.

Click the **Delete** button to delete an entry based on the information entered.

After clicking the **Show List** button, the following page will appear.

Figure 6-139 PIM for IPv6 SSM Settings (Show List) Window

The fields that can be configured are described below:

Parameter	Description
ACL Type	Select the ACL type that will be used to display the type of existing access lists in the table here. Options to choose from are IP ACL , Expert IP ACL , IPv6 ACL , Expert IPv6 ACL , MAC ACL , and Expert ACL .
ACL List	Select the radio button of the access list in the table that will be used here.

Click the **Find** button to display a list of access lists based on the selection made.

Click the **Show All** button to display all configured access lists.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

Click the **Apply** button to use the selected access list.

PIM for IPv6 (S,G) Keepalive Time

This window is used to display and configure the IPv6 PIM (S,G) keep-alive time settings. This feature is used to configure the keep-alive timer, which is the period during which the PIM router will maintain the (S, G) state in the absence of explicit (S, G) local membership or (S, G) join messages received to maintain it.

To view the following window, click **L3 Features > IP Multicast Routing Protocol > PIM > PIM for IPv6 > PIM for IPv6 (S,G) Keepalive Time**, as shown below:



Figure 6-140 PIM for IPv6 (S,G) Keepalive Time Window

The fields that can be configured are described below:

Parameter	Description
(S,G) Keepalive Time	Enter the (S,G) keep-alive time value here. This specifies the period during which the PIM router will maintain the (S, G) state in the absence of explicit (S, G) local membership or (S, G) join messages received to maintain it. The range is from 120 to 65535 seconds. Select the Default option to use the default value, which is 210 seconds.

Click the **Apply** button to accept the changes made.

PIM for IPv6 Mroute Table

This window is used to display all entries in the IPv6 multicast routing table. The Switch populates the multicast routing table by creating source, group (S,G) entries from star, group (*,G) entries. The star (*) refers to all source addresses, the "S" refers to a single source address, and the "G" is the destination multicast group address. In creating (S,G) entries, the software uses the best path to that destination group found in the unicast routing table, through Reverse Path Forwarding (RPF).

To view the following window, click **L3 Features > IP Multicast Routing Protocol > PIM > PIM for IPv6 > PIM for IPv6 Mroute Table**, as shown below:



Figure 6-141 PIM for IPv6 Mroute Table Window

Click the **Show Detail** button to view more detailed information for the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Show Detail** button, the following page will appear.

PIM for IPv6 Mroute Detail Table

Mroute Information

Source Address *
 Group Address FF5E:5:1::1
 RPT -
 Uptime 00Day 02:33:55
 Flags S
 RP Address 3004::109
 RPF Neighbor Address ::
Note: Flags: S - Sparse, T - SPT-bit set, s - SSM Group

Mroute Upstream Interface

Upstream Interface -
 Join/Prune State Joined
 Join Timer 0 sec
 Keepalive Timer -
 Override Timer -

Mroute Downstream Interface List

Total Entries: 3

Downstream Interface	Join/Prune State	Expiry Timer (sec)	Prune Pending Timer (sec)	Assert State	Assert Timer (sec)	Assert Winner	Metric	Preference
vlan3	Join	195	-	No Info	-	::	0	0
vlan4	Join	157	-	No Info	-	::	0	0
vlan108	No Info	-	-	No Info	-	::	0	0

1/1 < < 1 > > Go

Back

Figure 6-142 PIM for IPv6 Mroute Table (Show Detail) Window

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

Click the **Back** button to return to the previous window.

PIM for IPv6 Neighbor Table

This window is used to display IPv6 PIM neighbor information.

To view the following window, click **L3 Features > IP Multicast Routing Protocol > PIM > PIM for IPv6 > PIM for IPv6 Neighbor Table**, as shown below:

PIM for IPv6 Neighbor Table

Neighbor Information Search

Interface Name Mode Find Show All

Neighbor Information Table

Total Entries: 1

Neighbor Address	Interface Name	Uptime	Expires	Version	DR Priority	Mode	Show Detail
FE80::200:20FF:FE17:72B	vlan2017	00Day 00:22:10	00Day 00:01:35	v2	N	RG	Show Detail

1/1 < < 1 > > Go

Note: Mode: B - Bidir Capable, DR - Designated Router, N - Default DR Priority, G - Supports Generation ID, R - State Refresh Capable

Figure 6-143 PIM for IPv6 Neighbor Table Window

The fields that can be configured are described below:

Parameter	Description
Interface Name	Enter the VLAN interface name used in this display here.
Mode	Select the operation mode of IPv6 PIM entries used in this filtered search here. Options to choose from are Sparse Mode and Dense Mode .

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show All** button to display all the entries.

Click the **Show Detail** button to view more detailed information for the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Show Detail** button, the following page will appear.

Neighbor Detail Information Table	
Interface Name	vlan2017
Neighbor Address	FE80::200:20FF:FE17:72B
Uptime	00Day 00:22:45
Expires	00Day 00:01:30
Generation ID	0x1db5
Propagation Delay	1000 millisecond
Override Interval	3000 millisecond
State Refresh Capable	Support
State Refresh Interval	60 sec

Figure 6-144 PIM for IPv6 Neighbor Table (Show Detail) Window

Click the **Back** button to return to the previous window.

MSDP

MSDP Global Settings

This window is used to display and configure the global Multicast Source Discovery Protocol (MSDP) settings.

To view the following window, click **L3 Features > IP Multicast Routing Protocol > PIM > MSDP > MSDP Global Settings**, as shown below:

Figure 6-145 MSDP Global Settings Window

The fields that can be configured are described below:

Parameter	Description
Global State	Select to globally enable or disable the MSDP feature here.

Parameter	Description
Connect Retry Interval	Enter the connect retry interval time value here. The range is from 1 to 65535 seconds. This is used to configure the interval at which MSDP peers will wait after peering sessions are reset before attempting to re-establish. A larger time interval will delay the time before attempting to re-establish the peer session. For best results, configure the value in the range from 1 to 60 seconds. Select the Default option to use the default value which is 30 seconds.
SA Cache Expiry Time	Enter the Source-Active (SA) cache expiry time value here. The range is from 65 to 65535 seconds. This is used to configure the expiry time for SA cache entries. The interval for SA originating is 60 seconds and it cannot be modified, so the SA cache expiry time allows for the tuning of expected packet loss on a network implicitly. Select the Default option to use the default value.
SA Originating Filter	Select the Configured option and enter the SA originating filter string here. This string can be up to 32 characters long. An RP is configured to run MSDP and will originate SA messages for all local sources that register with this RP. By configuring the filter with a list, an RP will only originate SA messages for local sources by sending to specified groups that match (S, G) pairs defined in standard IP access list. By selecting the Configured option and not specifying the filter string, an RP from originating SA messages for all local sources can be prevented.

Click the **Apply** button to accept the changes made.

MSDP Peer Settings

This window is used to display and configure the MSDP peer settings.

To view the following window, click **L3 Features > IP Multicast Routing Protocol > PIM > MSDP > MSDP Peer Settings**, as shown below:

Figure 6-146 MSDP Peer Settings Window

The fields that can be configured are described below:

Parameter	Description
IP MSDP Peer	Enter the MSDP peer IP address here.
Connect Interface	Enter the connect interface name here. This string can be up to 12 characters long. This specifies the local interface that is used as the source IP address for TCP connections.

Click the **Apply** button to accept the changes made.

Click the **Find** button to find and display an entry based on the information entered.

Click the **Clear** button to clear the entries from the table based on the information entered.

Click the **Clear All** button to clear all the entries from the table.

Click the **Clear Statistics** button to clear the statistics information of the entries based on the information entered.

Click the **Clear All Statistics** button to clear all the statistics information displayed in the table.

Click the **Edit** button to re-configure the specific entry.

Click the **Show Detail** button to display more detailed information about the specified entry.

Click the **Delete** button to delete the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Edit** button, the following page will appear.

Figure 6-147 MSDP Peer Settings (Edit) Window

The fields that can be configured are described below:

Parameter	Description
Description	Enter the description for the MSDP peer here. This string can be up to 80 characters long.
Shutdown	Select to enable or disable the shutdown feature here. The shutdown state must be configured on an existing MSDP peer. If the MSDP peer is in the shutdown state, the TCP connection between two peers won't be established. If the MSDP peer was changed into the no shutdown state, the TCP connection between two peers will attempt to re-establish.
Password	Enter the MD5 password for a TCP connection between two peers here. MD5 authentication must be configured with the same password on both MSDP peers. Otherwise, the connection between them cannot be established.
Keep-Alive	Enter the keep-alive time value here. The range is from 1 to 21845 seconds. The keep-alive interval should be less than the hold time configured on the remote side of the MSDP TCP connection. Otherwise the remote side of MSDP TCP connection may be disconnected before receiving the MSDP keep-alive message. Selecting the Infinity option specifies the MSDP peer to never send keep-alive messages. Select the Default option to use the default value which is 60 seconds.
Hold Time	Enter the hold-time value here. The range is from 3 to 65535 seconds. The hold time interval must be larger than keep-alive time configured on the remote side of the MSDP TCP connection. Otherwise the MSDP TCP connection may be disconnected before receiving the MSDP keep-alive message. Select the Infinity option to specify that the connection between two peers is never torn down. Select the Default option to use the default value.

Parameter	Description
SA Filter In	Select the Configured option and enter the SA filter-in string here. This string can be up to 32 characters long. The router will receive all SA messages sent to it from a specified peer. By not specifying this string, the router will ignore all SA messages sent to it from a specified peer. By configuring this string, the router will only receive incoming SA messages from a specified peer that matches the (S, G) pairs defined in the standard IP access list.
SA Filter Out	Select the Configured option and enter the SA filter-out string here. This string can be up to 32 characters long. The router will forward all SA messages to an MSDP peer. By not specifying this string, the router will stop forwarding SA messages to a specified peer. By specifying this string, the router only forwards SA messages that match (S, G) pairs defined in the standard IP access list to a specified peer.
SA Filter Request	Select the Configured option and enter the SA filter request string here. This string can be up to 32 characters long. The router will process all SA request messages from a specified peer. By not specifying this string, the router will stop processing Source-Active request messages from a specified peer. By specifying this string, the router only processes SA request messages that request groups that are defined in the standard IP access list from a specified peer.
Minimum TTL	Enter the minimum TTL time value here. The range is from 0 to 225. When the SA messages are sent from MSDP peers, If the Time-To-Live (TTL) value of multicast data packets in SA message will be decreased, if the decreased TTL value is smaller than minimum TTL value of the MSDP peer the SA message was sent to, the SA will not be sent out. Select the Default option to use the default value which is 0.
SA Cache Maximum	Enter the maximum SA cache value here. The range is from 0 to 8192. When the maximum number of SA cache entries is configured to zero, the Switch cannot learn a SA cache entry from the peer. When the maximum number of SA cache entries is configured to be smaller than the existing SA cache entries, the older existing SA cache entries will be removed until the number of SA cache entries is equal to the maximum number. Select the None option to specify that no limitation is applied for the number of Source-Active cache entries.

Click the **Back** button to return to the previous window.

Click the **Apply** button to accept the changes made.

After clicking the **Show Detail** button, the following page will appear.

MSDP Peer Detail	
MSDP Peer	10.10.10.10
Description	
Mesh Group	
Static RPF	Not configured
State	Down
Password	
Up/Down Time	-
Connection Interface	vlan1 (10.90.90.90)
Keep-Alive/Hold-Time Interval	60/75
Remote/Local Port	0/0
The Total Number of Times This Peer Transfer into Up State	0
Incoming Filter	Not configured
Outgoing Filter	Not configured
Request Filter	Not configured
Minimum TTL for Data-Encapsulated SA Message	0
The Number of SAs Learned from This Peer	0
The Maximum Number of SAs Can Be Learned from This Peer	none
Count of RPF Check Failure	0
Incoming/Outgoing Control Messages	0/0
Incoming/Outgoing SA Messages	0/0
Incoming/Outgoing SA Requests	0/0
Incoming/Outgoing SA Responses	0/0
Incoming/Outgoing Data Packets	0/0

Figure 6-148 MSDP Peer Settings (Show Detail) Window

Click the **Back** button to return to the previous window.

MSDP SA Cache

This window is used to view and clear the MSDP SA cache table.

To view the following window, click **L3 Features > IP Multicast Routing Protocol > PIM > MSDP > MSDP SA Cache**, as shown below:

MSDP SA Cache

MSDP SA Cache

Group: Source: RP Address:

Total Entries: 0

Group Address	Source Address	RP Address	Learned Peer	Up/Expire Time
---------------	----------------	------------	--------------	----------------

Figure 6-149 MSDP SA Cache Window

The fields that can be configured are described below:

Parameter	Description
Group	Enter the group address that will be used here.
Source	Enter the source address that will be used here.
RP Address	Enter the RP address that will be used here.

Click the **Find** button to find and display an entry based on the information entered.

Click the **Clear** button to clear the entries from the table based on the information entered.

MSDP Static RPF Settings

This window is used to display and configure the MSDP static RPF settings. Before configuring a static RPF peer, an MSDP peer must be added first. If the RP prefix list is specified, the peer will be a static RPF peer only for RPs in the prefix list. When multiple static RPF peers are specified without an RP prefix list, only the connected peer whose address is smallest will be the active static RPF peer. If an MSDP peer is configured as a static RPF peer multiple times, only the last configuration takes effect. If there is one MSDP peer only, this MSDP peer works as a static RPF peer.

To view the following window, click **L3 Features > IP Multicast Routing Protocol > PIM > MSDP > MSDP Static RPF Settings**, as shown below:

The screenshot shows the 'MSDP Static RPF Settings' window. At the top, there's a title bar. Below it, the main content area has a sub-header 'MSDP Static RPF Settings'. There are two rows of input fields. The first row has a 'Peer Address' field and an 'RP List' field with a '32 chars' limit. To the right of these fields are 'Apply' and 'Find' buttons. Below the input fields, it says 'Total Entries: 0'. At the bottom, there's a table with two columns: 'Peer's Address' and 'RP List'.

Figure 6-150 MSDP Static RPF Settings Window

The fields that can be configured are described below:

Parameter	Description
Peer Address	Enter the MSDP peer address here.
RP List	Enter the name of the standard IP access list that defines the RP prefix list here. This string can be up to 32 characters long.

Click the **Apply** button to accept the changes made.

Click the **Find** button to find and display an entry based on the information entered.

MSDP Mesh Group Settings

This window is used to display and configure the MSDP mesh group settings. Before adding an MSDP peer to the mesh group, an MSDP peer must be added first. If an MSDP peer has been added to multiple mesh groups, only the last configuration takes effect.

To view the following window, click **L3 Features > IP Multicast Routing Protocol > PIM > MSDP > MSDP Mesh Group Settings**, as shown below:

MSDP Mesh Group Settings

MSDP Mesh Group Settings

Peer Address Mesh Name

Peer Address

Total Entries: 1

Peer's Address	Group Name
10.10.10.10	mesh

1/1 < < 1 > >

Figure 6-151 MSDP Mesh Group Settings Window

The fields that can be configured are described below:

Parameter	Description
Peer Address	Enter the MSDP peer IP address here.
Mesh Name	Enter the name of the mesh group here. This string can be up to 64 characters long.

Click the **Apply** button to accept the changes made.

Click the **Find** button to find and display an entry based on the information entered.

Click the **Delete** button to delete the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

IPMC

IP Multicast Global Settings

This window is used to display and configure the global IP Multicast (IPMC) settings.

To view the following window, click **L3 Features > IP Multicast Routing Protocol > IPMC > IP Multicast Global Settings**, as shown below:

Figure 6-152 IP Multicast Global Settings Window

The fields that can be configured in **IP Multicast Routing Global State** are described below:

Parameter	Description
Global State	Select to globally enable or disable the IP multicast routing feature here. When IP multicast routing is disabled, the system will stop routing multicast packets even though the multicast routing protocol is enabled.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **IP Multicast Table Lookup Mode** are described below:

Parameter	Description
Table Lookup Mode	Select the IP multicast forwarding lookup mode here. Options to choose from are: <ul style="list-style-type: none"> • IP - Specifies multicast forwarding lookup based on the IP address. • MAC - Specifies multicast forwarding lookup based on the MAC address.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **IP Multicast Boundary** are described below:

Parameter	Description
VID	Enter the VLAN ID that will be used here. The range is from 1 to 4094.
ACL Name	Enter the name of the standard IP access list that will be used here. This name can be up to 32 characters long. Click the Please Select button to select a pre-configured access list and use it here.
Filter Mode	Select the filter mode here. Options to choose from are: <ul style="list-style-type: none"> • Both - Specifies to filter both incoming and outgoing traffic. • Out - Specifies to filter the PIM join message or IGMP join message arriving at the interface. This filtering prevent the interface from becoming an outgoing interface for the denied (*,G) or (S,G) entries.

Parameter	Description
	<ul style="list-style-type: none"> In - Specifies to filter the multicast user traffic arriving at the interface based on the specified access list. This filters the multicast traffic for the specific group traffic or for specific groups from the specific source.
Action	Select the action that will be taken here. Options to choose from are Add and Delete .

Click the **Apply** button to accept the changes made.

The fields that can be configured in **IP Multicast Interface Table** are described below:

Parameter	Description
Interface Name	Enter the interface name that will be used for the search here.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show All** button to display all the entries.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Please Select** button, the following page will appear.



Figure 6-153 IP Multicast Global Settings (Please Select) Window

Select the ACL and click the **OK** button to use the selected access list.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

IP Multicast Route Settings

This window is used to display and configure the IP multicast route settings.

To view the following window, click **L3 Features > IP Multicast Routing Protocol > IPMC > IP Multicast Route Settings**, as shown below:

Figure 6-154 IP Multicast Route Settings Window

The fields that can be configured in **Static Multicast Route Settings** are described below:

Parameter	Description
Source Address	Enter the network address of the multicast source here.
Mask	Specifies the network mask for the multicast source here.
RPF Address	Enter the RPF neighbor IP address to reach the network here. Selecting the NULL option specifies that the RPF check will always fail for multicast traffic sent from this source network.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **IP Multicast Route Table** are described below:

Parameter	Description
Summary	Selecting this option specifies to display a one-line, abbreviated summary of each entry in the IP multicast routing table.
Static	Selecting this option specifies to display the multicast static routes.
Multicast Protocol	Select this option and then select the multicast protocol that will be used in this display here. Options to choose from are PIM-DM , PIM-SM , and DVMRP . <ul style="list-style-type: none"> • PIM-DM - Specifies to display only the PIM-DM routes. • PIM-SM - Specifies to display only the PIM-SM routes. • DVMRP - Specifies to display only the DVMRP routes.
Group Address	Select and enter the multicast group IP address here.
Source Address	Enter the source IP address here.


Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show All** button to display all the entries.

IP Multicast RPF Table

This window is used to display Reverse Path Forwarding (RPF) information for a given unicast host address.

To view the following window, click **L3 Features > IP Multicast Routing Protocol > IPMC > IP Multicast RPF Table**, as shown below:

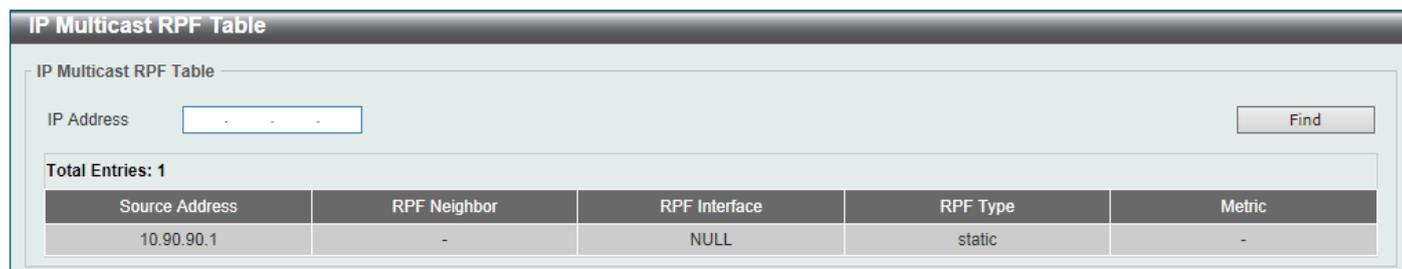

Source Address	RPF Neighbor	RPF Interface	RPF Type	Metric
10.90.90.1	-	NULL	static	-

Figure 6-155 IP Multicast RPF Table Window

The fields that can be configured are described below:


Parameter	Description
IP Address	Enter the unicast host IPv4 address here.

Click the **Find** button to locate a specific entry based on the information entered.

IP Multicast Routing Forwarding Cache Table

This window is used to display the content of the IP multicast routing forwarding cache database.

To view the following window, click **L3 Features > IP Multicast Routing Protocol > IPMC > IP Multicast Routing Forwarding Cache Table**, as shown below:

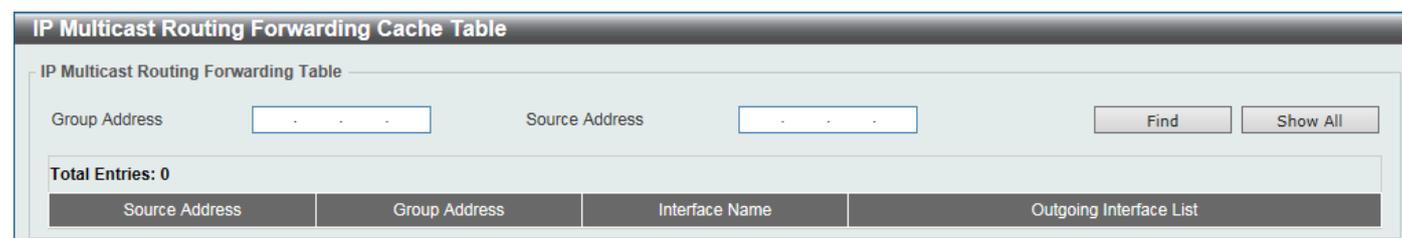

Source Address	Group Address	Interface Name	Outgoing Interface List
----------------	---------------	----------------	-------------------------

Figure 6-156 IP Multicast Routing Forwarding Cache Table Window

The fields that can be configured are described below:

Parameter	Description
Group Address	Enter the multicast group IP address here.
Source Address	Enter the source IP address here.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show All** button to display all the entries.

IP Multicast Protocol Statistics

This window is used to view and clear the IP multicast protocol statistics information.

To view the following window, click **L3 Features > IP Multicast Routing Protocol > IPMC > IP Multicast Protocol Statistics**, as shown below:

IP Multicast Protocol Statistics

Clear Multicast Protocol Packet Statistics

Multicast Protocol IGMP PIM DVMRP All Clear

Multicast Protocol Packet Statistics Table

Interface Name IGMP PIM DVMRP Find Show All

IGMP Packets Counter				
	Query v1/v2/v3	Report v1/v2/v3	IGMP Leave	Unknown IGMP
Received	0/0/0	0/0/0	0	0
Sent	0/0/0	0/0/0	0	0

PIM Packets Counter											
	Hello	Register	Register-Stop	Join/Prune	Bootstrap	Assert	Graft	Graft-Ack	C-RP-Adv	State Refresh	Unknown PIM
Received	0	0	0	0	0	0	0	0	0	0	0
Sent	0	0	0	0	0	0	0	0	0	0	0

DVMRP Packets Counter						
	Probe	Report	Prune	Graft	Graft-Ack	Unknown DVMRP
Received	0	0	0	0	0	0
Sent	0	0	0	0	0	0

Figure 6-157 IP Multicast Protocol Statistics Window

The fields that can be configured in **Clear Multicast Protocol Packet Statistics** are described below:

Parameter	Description
Multicast Protocol	Select the multicast protocol that will be cleared here. Options to choose from are IGMP , PIM , DVMRP , and All .

Click the **Clear** button to clear the entries based on the information specified.

The fields that can be configured in **Multicast Protocol Packet Statistics Table** are described below:

Parameter	Description
Interface Name	Select and enter the interface name that will be used in the display here.
Multicast Protocol	Select the multicast protocol that will be used in the display here. Options to choose from are IGMP , PIM , and DVMRP .

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show All** button to display all the entries.

Control Packet CPU Filtering

This window is used to display and configure the IPMC control packet CPU filtering settings.

To view the following window, click **L3 Features > IP Multicast Routing Protocol > IPMC > Control Packet CPU Filtering**, as shown below:

Figure 6-158 Control Packet CPU Filtering Window

The fields that can be configured in **Control Packet CPU Filtering Settings** are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the range of ports that will be used for this configuration here.
Packet Type	Select the packet type here. Options to choose from are: <ul style="list-style-type: none"> • DVMRP - Specifies that the CPU will discard DVMRP Layer 3 control packets sent to it. • PIM - Specifies that the CPU will discard PIM Layer 3 control packets sent to it. • IGMP Query - Specifies that the CPU will discard IGMP Query Layer 3 control packets sent to it. • OSPF - Specifies that the CPU will discard OSPF Layer 3 control packets sent to it. • RIP - Specifies that the CPU will discard RIP Layer 3 control packets sent to it. • VRRP - Specifies that the CPU will discard VRRP Layer 3 control packets sent to it.
Action	Select the action that will be taken here. Options to choose from are: <ul style="list-style-type: none"> • Add - Specifies to add a new entry based on the information entered. • Delete - Specifies to delete an entry based on the information entered.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Control Packet CPU Filtering Settings** are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this display here.
From Port - To Port	Select the range of ports that will be used for this display here.

Click the **Find** button to find and display entries based on the selections made.

IPv6MC

IPv6 Multicast Global Settings

This window is used to display and configure the global IPv6 multicast settings.

To view the following window, click **L3 Features > IP Multicast Routing Protocol > IPv6MC > IPv6 Multicast Global Settings**, as shown below:

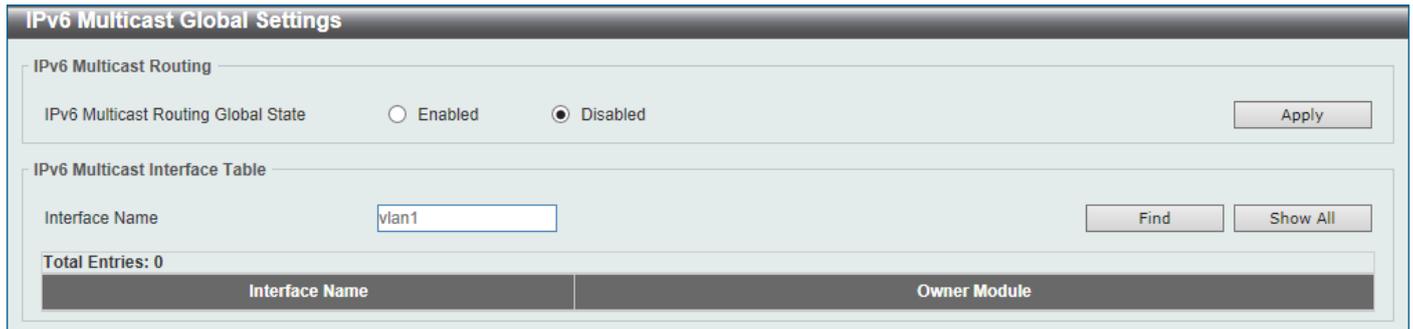


Figure 6-159 IPv6 Multicast Global Settings Window

The fields that can be configured in **IPv6 Multicast Routing** are described below:

Parameter	Description
IPv6 Multicast Routing Global State	Select to globally enable or disable the IPv6 multicast routing feature here. When IPv6 multicast routing is disabled, the system will stop routing multicast packets even though the multicast routing protocol is enabled.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **IPv6 Multicast Interface Table** are described below:

Parameter	Description
Interface Name	Enter the VLAN interface name that will be used here.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show All** button to display all the entries.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

IPv6 Static Multicast Route Settings

This window is used to display and configure the IPv6 static multicast route settings. The PIM protocol does not have its own routing table but uses the unicast routing table to determine the reverse path forwarding interface to reach a network. This window is used to configure static multicast route to specify the RPF address for a network.

To view the following window, click **L3 Features > IP Multicast Routing Protocol > IPv6MC > IPv6 Static Multicast Route Settings**, as shown below:



Figure 6-160 IPv6 Static Multicast Route Settings Window

The fields that can be configured are described below:

Parameter	Description
IPv6 Address/Prefix Length	Enter the IPv6 network address and prefix length of the multicast source here. A decimal value that indicates how many of the high-order contiguous bits of the address comprise the prefix (the network portion of the address). A slash mark must precede the decimal value.
Interface VLAN	Enter the VLAN ID that will be used here. The range is from 1 to 4094.
RPF Neighbor Address	Enter the IPv6 address of the next hop that can be used to reach the specified network here. Select the NULL option to specify that the RPF check result will always fail.

Click the **Apply** button to accept the changes made.

Click the **Clear All** button to clear the information displayed.

Click the **Delete** button to remove the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

IPv6 Multicast Routing Table

This window is used to display the contents of the IPv6 dynamic multicast routing table.

To view the following window, click **L3 Features > IP Multicast Routing Protocol > IPv6MC > IPv6 Multicast Routing Table**, as shown below:

Figure 6-161 IPv6 Multicast Routing Table Window

The fields that can be configured are described below:

Parameter	Description
Group IPv6 Address	Enter the multicast group IPv6 address here.
Source IPv6 Address	Enter the source IPv6 address here. Additional options to choose from are: <ul style="list-style-type: none"> • Dense - Specifies to display PIM-DM routes only. • Sparse - Specifies to display PIM-SM routes only. • Summary - Specifies to display a one-line, abbreviated summary of each entry in the IPv6 multicast routing table.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show All** button to display all the entries.

IPv6 Multicast Routing Forwarding Cache Table

This window is used to display the contents of the IPv6 multicast routing forwarding cache database.

To view the following window, click **L3 Features > IP Multicast Routing Protocol > IPv6MC > IPv6 Multicast Routing Forwarding Cache Table**, as shown below:

Figure 6-162 IPv6 Multicast Routing Forwarding Cache Table Window

The fields that can be configured are described below:

Parameter	Description
Group IPv6 Address	Enter the multicast group IPv6 address here.
Source IPv6 Address	Enter the source IPv6 address here.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show All** button to display all the entries.

IPv6 RPF Table

This window is used to display Reverse Path Forwarding (RPF) information for a given unicast host address.

To view the following window, click **L3 Features > IP Multicast Routing Protocol > IPv6MC > IPv6 RPF Table**, as shown below:

Figure 6-163 IPv6 RPF Table Window

The fields that can be configured are described below:

Parameter	Description
IPv6 Source Address	Enter the unicast host IPv6 address here.

Click the **Find** button to locate a specific entry based on the information entered.

BGP

BGP Global Settings

This window is used to display and configure the global Border Gateway Protocol (BGP) settings.

To view the following window, click **L3 Features > BGP > BGP Global Settings**, as shown below:

Figure 6-164 BGP Global Settings Window

The fields that can be configured in **BGP AS Number** are described below:

Parameter	Description
BGP AS Number	Enter the BGP Autonomous System (AS) number here. The range is from 1 to 4294967295.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **BGP Parameters** are described below:

Parameter	Description
BGP Router Identifier	Enter the router ID in the IPv4 address format as the identifier of the local BGP router here.
Synchronization	Select to enable or disable synchronization here. When synchronization is enabled, the BGP speaker will not advertise a route to an external neighbor unless the route is a local route or the BGP speaker has learned the route by IGP.
Enforce First AS	Select to enable or disable the enforced first AS feature here. This is used to enforce that the routes received from an eBGP peer must have the peer's AS number as the first AS in the AS path. This feature is used to avoid the local router from spoofing by a misconfigured peer.

Parameter	Description
Scan Time	Enter the scan time value here. When the router is enabled for scanning next hop of BGP routes, the router will periodically check whether there is a route to reach the next hop in the routing table. The range is from 5 to 60 seconds.
Keep-Alive Interval	Enter the keep-alive interval value here. This specifies the interval that the software uses to send keep-alive messages to BGP peers. The range is from 0 to 65535 seconds.
Hold Time	Enter the hold time value here. This specifies the length of time to timeout the keep-alive message. The software will declare a BGP peer dead after the timeout. The range is from 0 to 65535 seconds.
Always Compare MED	Select the enable or disable the always compare Multi Exit Discriminator (MED) feature here. This is used in comparing the MED in best path selection for paths that are advertised from neighbors in either the same or different autonomous systems.
Deterministic MED	Select to enable or disable the deterministic MED feature here. This is used to compare the MED value between all paths received from within the same autonomous system in the selection of the best route selection.
Default Local Preference	Enter the default local preference value here. The local preference is used to control the preferred exit point from the local AS to the same destination network. The local preference will be sent with the route advertised to the iBGP peers. If an external route is both reachable via the local router and an iBGP peer router, the local preference value determines the preferred exit point to reach the external route. The range is from 0 to 4294967295.
MED Confed	Select the enable or disable the MED confederation feature here. When enabled, the BGP process will compare the MED for the routes that are received from confederation peers. For routes that have an external AS in the path, the comparison does not occur.
AS Path Ignore	Select to enable or disable the AS path ignore feature here. When enabled, this feature is used to ignore the AS path as a discriminating factor in the selection of the best path.
Compare Router ID	Select to enable or disable the compare router ID feature here. This is used to configure a BGP process to use the router ID as a tie breaker in best path selection. If this is enabled, the path with lowest router ID will be selected as the best when all other attributes are equal.
MED Missing AS Worst	Select to enable or disable the MED missing AS worst feature here. This is used to configure the BGP process to assign an infinite value to the route if the MED is missed.
Compare Confederation Path	Select to enable or disable the compare confederation path feature here. When enabled, the BGP process will compare the confederation AS path length in best path selection. The path with shorter the confederation AS path length is preferred.
Fast External Failover	Select to enable or disable the fast external failover feature here. This is used to globally enable or disable the fast external failover of BGP sessions for the directly connected external peers. When enabled, the session is immediately reset if the link goes down. When disabled, the session will not be reset until the default hold timer expires.
Aggregate Next Hop Check	Select to enable or disable the aggregate next hop check feature here. This is used to enable the checking of next hop of the BGP aggregated routes. Only the routes with the same next hop attribute can be aggregated if the BGP aggregate next hop check is enabled.
Default IPv4 Unicast	Select to enable or disable the default IPv4 unicast feature here. This is used to enable the exchange of IPv4 unicast routing information.
Graceful Restart State	Select to enable or disable the BGP graceful restart capabilities for all BGP neighbors here.

Parameter	Description
Restart Time	When graceful restart is enabled, enter the restart time here. This specifies the maximum time needed for neighbors to restart. The range is from 1 to 3600 seconds.
Stalepath Time	When graceful restart is enabled, enter the stale-path time here. This specifies the maximum time to retain stale paths from restarting neighbors. The range is from 1 to 3600 seconds.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **BGP Trap Settings** are described below:

Parameter	Description
Peer Established Trap State	Select to enable or disable the BGP peer established trap state here.
Peer Backward-Trans Trap State	Select to enable or disable the sending of the peer idle trap here.

Click the **Apply** button to accept the changes made.

BGP Aggregate Address Settings

This window is used to display and configure the BGP aggregate address settings. Route aggregation is a mechanism used to reduce the number of routing entries. The aggregated route will be created in the routing table if there is any more specific route entry than the aggregated route, and the characteristic of the aggregated route is the combined characteristic of those more specific routes. The aggregated route is sent as coming from the local AS. The atomic aggregation flag is set to indicate that the AS path information of those more specific route information might be lost from the aggregated entry.

To view the following window, click **L3 Features > BGP > BGP Aggregate Address Settings**, as shown below:

Figure 6-165 BGP Aggregate Address Settings Window

The fields that can be configured are described below:

Parameter	Description
Address Family	Select the address family to use here. Options to choose from are: <ul style="list-style-type: none"> • IPv4 Unicast - Specifies to use IPv4 unicast address family here. • IPv4 VRF - Specifies to use the VRF instance here. Enter the name of the VRF instance in the space provided or click the Please Select button to select a pre-configured VRF instance that will be used here. This name can be up to 12 characters long. • IPv4 Multicast - Specifies to use IPv4 multicast address family here. • IPv6 Unicast - Specifies to use IPv6 unicast address family here.

Parameter	Description
Network Address	Enter the IPv4/IPv6 aggregate address and mask here.
Summary Only	Select this option to filter those routes that are more specific than the aggregated route.
AS Set	Select this option to generate autonomous system set path information.

Click the **Apply** button to accept the changes made.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Delete** button to remove the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Please Select** button, the following page will appear.

The screenshot shows a window titled "VRF List". At the top, it says "Total Entries: 1". Below this is a table with two columns: "VRF Name" and "RD". The table contains one row with "VRF1" in the first column and "192.168.70.1:24" in the second column. To the right of the table are navigation buttons: "1/1", "<", "<<", "1", ">>", ">", and "Go". At the bottom right of the window is an "OK" button.

Figure 6-166 BGP Aggregate Address Settings (Please Select) Window

Select the VRF entry and click the **OK** button to use the selected VRF entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

BGP Network Settings

This window is used to display and configure the BGP network settings.

To view the following window, click **L3 Features > BGP > BGP Network Settings**, as shown below:

The screenshot shows a window titled "BGP Network Settings". It has a section for "BGP Network Settings" with the following fields: "Address Family" (set to "IPv4 Unicast"), "Network Address" (with a "Please Select" button), and "Route Map Name" (with a "16 chars" label). There are "Apply" and "Find" buttons. Below this is a table with "Total Entries: 1". The table has columns "Network Address" and "Route Map Name". The table contains one row with "10.90.90.0/28" in the first column and "Route-Map" in the second column. To the right of the table are "Edit" and "Delete" buttons. At the bottom right are navigation buttons: "1/1", "<", "<<", "1", ">>", ">", and "Go".

Figure 6-167 BGP Network Settings Window

The fields that can be configured are described below:

Parameter	Description
Address Family	Select the address family to use here. Options to choose from are: <ul style="list-style-type: none"> IPv4 Unicast - Specifies to use IPv4 unicast address family here.

Parameter	Description
	<ul style="list-style-type: none"> • IPv4 VRF - Specifies to use the VRF instance here. Enter the name of the VRF instance in the space provided or click the Please Select button to select a pre-configured VRF instance that will be used here. This name can be up to 12 characters long. • IPv4 Multicast - Specifies to use IPv4 multicast address family here. • IPv6 Unicast - Specifies to use IPv6 unicast address family here.
Network Address	Enter the IPv4/IPv6 network address and mask that BGP will advertise here.
Route Map Name	Enter the route map name here. The configured network must be permitted by the specified route map to be advertised. This name can be up to 16 characters long.

Click the **Apply** button to accept the changes made.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Edit** button to re-configure the specific entry.

Click the **Delete** button to remove the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Please Select** button, the following page will appear.



Figure 6-168 BGP Network Settings (Please Select) Window

Select the VRF entry and click the **OK** button to use the selected VRF entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

BGP Route Redistribution Settings

This window is used to display and configure the BGP route redistribution settings. This is used to redistribute routes from one routing domain into BGP.

To view the following window, click **L3 Features > BGP > BGP Route Redistribution Settings**, as shown below:

Figure 6-169 BGP Route Redistribution Settings Window

The fields that can be configured are described below:

Parameter	Description
VRF Name	Select the name of the VRF instance here. Click the Please Select button to select a pre-configured VRF instance that will be used here.
Default Information Originate	Select to enable or disable the default information originate function here. This function is used to enable the redistribution of the default route into BGP.
Address Family	Select the address family that will be used here. Options to choose from are: <ul style="list-style-type: none"> • IPv4 Unicast - Specifies to use the IPv4 unicast address family in this configuration. • IPv4 VRF - Specifies to use a VRF instance in this configuration. Enter the name of the VRF instance in the space provided or click the Please Select button to select a pre-configured VRF instance that will be used here. This name can be up to 12 characters long. • IPv4 Multicast - Specifies to use the IPv4 multicast address family in this configuration. • IPv6 Unicast - Specifies to use the IPv6 unicast address family in this configuration.
Source Protocol	Select the source protocol here. Options to choose from are: <ul style="list-style-type: none"> • Connected - Specifies to redistribute connected routes to BGP. • Static - Specifies to redistribute static routes to BGP. • RIP - Specifies to redistribute RIP routes to BGP. • OSPF - Specifies to redistribute OSPF routes to BGP. • ISIS - Specifies to redistribute ISIS routes to BGP.
Destination Protocol	The destination protocol is BGP.
Type	After selecting OSPF as the source protocol, select the OSPF type here. Options to choose from are: <ul style="list-style-type: none"> • All - Specifies to redistribute both OSPF AS-internal and OSPF AS-external routes to BGP. • External - Specifies to redistribute only the OSPF AS-external routes to BGP. This includes Type-1 and Type-2 routes. • Internal+E1 - Specifies to redistribute only the OSPF AS-external Type-1 and OSPF AS-internal routes.

Parameter	Description
	<ul style="list-style-type: none"> • Internal+E2 - Specifies to redistribute only the OSPF AS-external Type-2 and OSPF AS-internal routes. • Internal - Specifies to redistribute only the OSPF AS-internal routes. • External Type-1 - Specifies to redistribute only the OSPF AS-external Type-1 routes. • External Type-2 - Specifies to redistribute only the OSPF AS-external Type-2 routes.
Metric	Enter the BGP metric value for the redistributed routes here. The range is from 0 to 4294967295.
Route Map Name	Enter the route map name, used to filter the networks to be redistributed, here. This name can be up to 16 characters long.

Click the **Apply** button to accept the changes made.

Click the **Edit** button to re-configure the specific entry.

Click the **Delete** button to remove the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Please Select** button, the following page will appear.

The screenshot shows a window titled "VRF List". At the top left, it says "Total Entries: 1". Below this is a table with two columns: "VRF Name" and "RD". The table contains one row with "VRF1" in the first column and "192.168.70.1:24" in the second. To the right of the table are navigation buttons: "1/1", left and right arrows, a "1" in a box, and a "Go" button. At the bottom right is an "OK" button.

Figure 6-170 BGP Route Redistribution Settings (Please Select) Window

Select the VRF entry and click the **OK** button to use the selected VRF entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

BGP Route Preference Settings

This window is used to display and configure the BGP route preference settings.

To view the following window, click **L3 Features > BGP > BGP Route Preference Settings**, as shown below:

The screenshot shows a window titled "BGP Route Preference Settings". Inside, there are three rows of settings:

- Address Family: A dropdown menu showing "IPv4 Unicast" and a "Please Select" button.
- Distance EBG (1-255): A text input field with "0" and a "Default" checkbox.
- Distance IBGP (1-255): A text input field with "0" and a "Default" checkbox.

 An "Apply" button is located at the bottom right of the window.

Figure 6-171 BGP Route Preference Settings Window

The fields that can be configured are described below:

Parameter	Description
Address Family	Select the address family that will be used here. Options to choose from are:

Parameter	Description
	<ul style="list-style-type: none"> • IPv4 Unicast - Specifies to use the IPv4 unicast address family in this configuration. • IPv4 VRF - Specifies to use a VRF instance in this configuration. Enter the name of the VRF instance in the space provided or click the Please Select button to select a pre-configured VRF instance that will be used here. This name can be up to 12 characters long. • IPv6 Unicast - Specifies to use the IPv6 unicast address family in this configuration.
Distance EGBP	Enter the distance eBGP route preference value here. The range is from 1 to 255 for an IPv4 and VRF address family and 1 to 254 for IPv6 address family.
Distance IBGP	Enter the distance iBGP route preference value here. The range is from 1 to 255 for an IPv4 and VRF address family and 1 to 254 for IPv6 address family.

Click the **Apply** button to accept the changes made.

After clicking the **Please Select** button, the following page will appear.

The screenshot shows a window titled "VRF List". At the top left, it says "Total Entries: 1". Below this is a table with two columns: "VRF Name" and "RD". The table contains one row with "VRF1" in the first column and "192.168.70.1:24" in the second column. To the right of the table are navigation controls: a box containing "1/1", a left arrow, a right arrow, a box containing "1", another left arrow, another right arrow, and a "Go" button. At the bottom right of the window is an "OK" button.

Figure 6-172 BGP Route Preference Settings (Please Select) Window

Select the VRF entry and click the **OK** button to use the selected VRF entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

BGP Dampening Settings

This window is used to display and configure the BGP dampening settings. The purpose of this feature is to eliminate the advertising of unstable routes and thus to avoid unstable networks caused by flapping routes.

To view the following window, click **L3 Features > BGP > BGP Dampening Settings**, as shown below:

Figure 6-173 BGP Dampening Settings Window

The fields that can be configured in **BGP Dampening** are described below:

Parameter	Description
Address Family	<p>Select the address family that will be used here. Options to choose from are:</p> <ul style="list-style-type: none"> • IPv4 Unicast - Specifies to use the IPv4 unicast address family in this configuration. • IPv4 VRF - Specifies to use a VRF instance in this configuration. Enter the name of the VRF instance in the space provided or click the Please Select button to select a pre-configured VRF instance that will be used here. This name can be up to 12 characters long. • IPv4 Multicast - Specifies to use the IPv4 multicast address family in this configuration. • IPv6 Unicast - Specifies to use the IPv6 unicast address family in this configuration.

The fields that can be configured in **BGP Dampening State** are described below:

Parameter	Description
Dampening State	Select to enable or disable the BGP dampening state here.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **BGP Dampening Route Map** are described below:

Parameter	Description
BGP Dampening Route Map	Enter the BGP dampening route map name here. This name can be up to 16 characters long

Click the **Apply** button to accept the changes made.

The fields that can be configured in **BGP Dampening Settings** are described below:

Parameter	Description
Half Life Time	Enter the half-life time value here. This specifies the time after which the accumulated penalty of the route is decreased by half. The range is from 1 to 45 minutes.

Parameter	Description
Reuse Value	Enter the re-use value here. As the penalty is decreased and falls below the re-use threshold, the route will be re-entered into the routing table as a normal route. The range is from 1 to 20000.
Suppress Value	Enter the suppress value here. As the penalty is increased and crosses the suppress threshold, the route will become a dampening route and will not be advertised. The range is from 1 to 20000.
Max Suppress Time	Enter the maximum suppress value here. This specifies the maximum time that a route can be in the dampened state. The range is from 1 to 255 minutes.
Unreachable Route's Half Life	Enter the unreachable half-life value of the route here. This specifies the time after which the penalty of the unreachable routes is decreased by half. The range is from 1 to 45 minutes.

Click the **Apply** button to accept the changes made.

After clicking the **Please Select** button, the following page will appear.

The screenshot shows a window titled "VRF List". At the top, it says "Total Entries: 1". Below this is a table with two columns: "VRF Name" and "RD". The table contains one row with "VRF1" in the first column and "192.168.70.1:24" in the second column. Below the table, there are navigation controls: a page number "1/1", left and right arrow buttons, a "1" in a box, and a "Go" button. At the bottom right, there is an "OK" button.

Figure 6-174 BGP Dampening Settings (Please Select) Window

Select the VRF entry and click the **OK** button to use the selected VRF entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

BGP Dampening Dampened Paths Table

This window is used to view and clear the BGP dampening dampened paths table.

To view the following window, click **L3 Features > BGP > BGP Dampening Dampened Paths Table**, as shown below:

The screenshot shows a window titled "BGP Dampening Dampened Paths Table". Below the title bar, there is a sub-header "BGP Dampening Dampened Paths Table". There are two dropdown menus: "Address Family" set to "IPv4 Unicast" and "Type" set to "All". To the right of the "Address Family" dropdown is a "Please Select" button. To the right of the "Type" dropdown is a "Clear" button. Below these is a section titled "BGP Dampening Dampened Paths Information". Under this section, it says "Total Entries: 0". At the bottom, there is a table with four columns: "Network", "From", "Reuse", and "Path".

Figure 6-175 BGP Dampening Dampened Paths Table Window

The fields that can be configured are described below:

Parameter	Description
Address Family	Select the address family that will be used here. Options to choose from are:

Parameter	Description
	<ul style="list-style-type: none"> • IPv4 Unicast - Specifies to use the IPv4 unicast address family in this configuration. • IPv4 VRF - Specifies to use a VRF instance in this configuration. Enter the name of the VRF instance in the space provided or click the Please Select button to select a pre-configured VRF instance that will be used here. This name can be up to 12 characters long. • IPv4 Multicast - Specifies to use the IPv4 multicast address family in this configuration. • IPv6 Unicast - Specifies to use the IPv6 unicast address family in this configuration.
Type	<p>Select the type clear here. Options to choose from are:</p> <ul style="list-style-type: none"> • All - Specifies to display and clear all BGP dampening dampened paths. • IP Address - Specifies to display and clear BGP dampening dampened paths based on the IPv4 address entered. Enter the IPv4 address in the space provided. • Network Address - Specifies to display and clear BGP dampening dampened paths based on the IPv4 network address range entered. Enter the starting IPv4 address and the ending IPv4 address in the range in the spaces provided. • IPv6 Address - Specifies to display and clear BGP dampening dampened paths based on the IPv6 address entered. Enter the IPv6 address in the space provided. • IPv6 Network Address - Specifies to display and clear BGP dampening dampened paths based on the IPv6 network address range entered. Enter the IPv6 address and the prefix length in the space provided.

Click the **Clear** button to clear the information associated with the selections made.

After clicking the **Please Select** button, the following page will appear.

VRF List	
Total Entries: 1	
VRF Name	RD
VRF1	192.168.70.1:24

1/1 |< < 1 > >| Go

OK

Figure 6-176 BGP Dampening Dampened Paths Table (Please Select) Window

Select the VRF entry and click the **OK** button to use the selected VRF entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

BGP Dampening Flap Statistics Table

This window is used to view and clear the BGP dampening flap statistics.

To view the following window, click **L3 Features > BGP > BGP Dampening Flap Statistics Table**, as shown below:

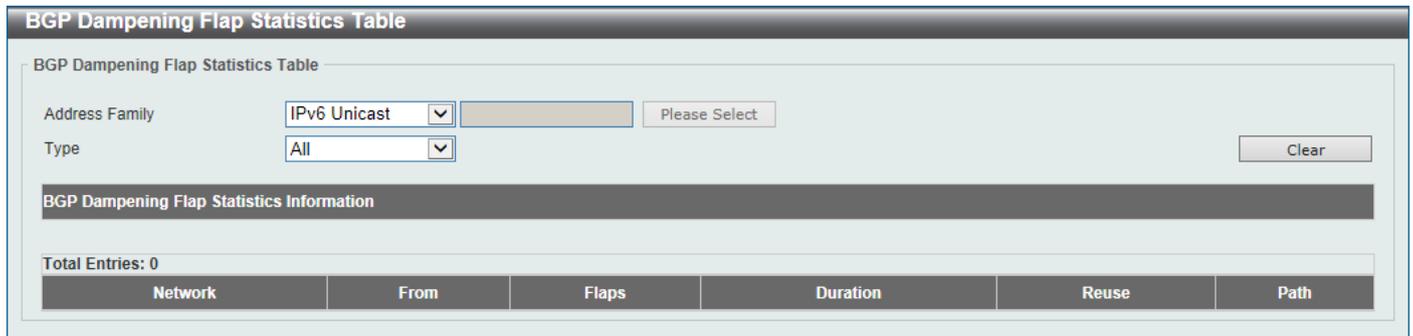


Figure 6-177 BGP Dampening Flap Statistics Table Window

The fields that can be configured are described below:

Parameter	Description
Address Family	<p>Select the address family that will be used here. Options to choose from are:</p> <ul style="list-style-type: none"> • IPv4 Unicast - Specifies to use the IPv4 unicast address family in this configuration. • IPv4 VRF - Specifies to use a VRF instance in this configuration. Enter the name of the VRF instance in the space provided or click the Please Select button to select a pre-configured VRF instance that will be used here. This name can be up to 12 characters long. • IPv4 Multicast - Specifies to use the IPv4 multicast address family in this configuration. • IPv6 Unicast - Specifies to use the IPv6 unicast address family in this configuration.
Type	<p>Select the type clear here. Options to choose from are:</p> <ul style="list-style-type: none"> • All - Specifies to display and clear all BGP dampening flap statistics. • IP Address - Specifies to display and clear BGP dampening flap statistics based on the IPv4 address entered. Enter the IPv4 address in the space provided. • Network Address - Specifies to display and clear BGP dampening flap statistics based on the IPv4 network address range entered. Enter the starting IPv4 address and the ending IPv4 address in the range in the spaces provided. • IPv6 Address - Specifies to display and clear BGP dampening flap statistics based on the IPv6 address entered. Enter the IPv6 address in the space provided. • IPv6 Network Address - Specifies to display and clear BGP dampening flap statistics based on the IPv6 network address range entered. Enter the IPv6 address and the prefix length in the space provided.

Click the **Clear** button to clear the information associated with the selections made.

After clicking the **Please Select** button, the following page will appear.



Figure 6-178 BGP Dampening Flap Statistics Table (Please Select) Window

Select the VRF entry and click the **OK** button to use the selected VRF entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

BGP Reflector Settings

This window is used to display and configure the BGP reflector settings.

To view the following window, click **L3 Features > BGP > BGP Reflector Settings**, as shown below:

Figure 6-179 BGP Reflector Settings Window

The fields that can be configured in **BGP Reflector Settings** are described below:

Parameter	Description
Route Reflector Cluster ID	Enter the route reflector cluster ID here.
Client to Client Reflection	Select to enable or disable the client-to-client reflection feature here.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **BGP Reflector Client** are described below:

Parameter	Description
Address Family	Select the address family that will be used here. Options to choose from are: <ul style="list-style-type: none"> • IPv4 Unicast - Specifies to use the IPv4 unicast address family in this configuration. • IPv4 Multicast - Specifies to use the IPv4 multicast address family in this configuration. • L2VPN VPLS - Specifies to use the Layer 2 VPN VPLS address family. • VPNv4 - Specifies to use the VPNv4 address family. • IPv6 Unicast - Specifies to use the IPv6 unicast address family in this configuration.
Neighbor	This is used to assign the specified neighbor as its client. Options to choose from are: <ul style="list-style-type: none"> • IPv4 Address - Select and enter the IPv4 address of the neighboring router here. • Peer Group - Select and enter the peer group name that will act as the route reflector client here. • IPv6 Address - Select and enter the IPv6 address of the neighboring router here.
State	Select to enable or disable the BGP reflector client state here.

Click the **Apply** button to accept the changes made.

BGP Confederation Settings

This window is used to display and configure the BGP confederation settings.

To view the following window, click **L3 Features > BGP > BGP Confederation Settings**, as shown below:

Figure 6-180 BGP Confederation Settings Window

The fields that can be configured are described below:

Parameter	Description
Confederation Identifier	Enter the BGP confederation ID here. The range is from 0 to 4294967295.
Confederation Peer	Select to Add or Delete a BGP confederation peer here. Enter the BGP confederation peer ID here. The range is from 1 to 4294967295.

Click the **Apply** button to accept the changes made.

BGP AS Path Access List Settings

This window is used to display and configure the BGP AS path access list settings.

To view the following window, click **L3 Features > BGP > BGP AS Path Access List Settings**, as shown below:

Figure 6-181 BGP AS Path Access List Settings Window

The fields that can be configured are described below:

Parameter	Description
List Name	Enter the name of the AS path access list here. This name can be up to 16 characters long.
Mode	Select the mode here. Options to choose from are: <ul style="list-style-type: none"> • Permit - Specifies that routes match condition is permitted. • Deny - Specifies that routes match condition is denied. • None - Specifies that no action will be taken.
Regular Expression	Enter the regular expression for the path filter here. This string can be up to 80 characters long.

Click the **Apply** button to accept the changes made.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show All** button to display all the available entries.

Click the **Delete** button to remove the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

BGP Community List Settings

This window is used to display and configure the BGP community list settings.

To view the following window, click **L3 Features > BGP > BGP Community List Settings**, as shown below:

Figure 6-182 BGP Community List Settings Window

The fields that can be configured are described below:

Parameter	Description
List Name	Enter the name of the community list here. This name can be up to 16 characters long.
Type	Select the type here. Options to choose from are:

Parameter	Description
	<ul style="list-style-type: none"> • Standard - Specifies to configure a named standard community list. • Expanded - Specifies to configure a named expanded community list.
Mode	Select the mode here. Options to choose from are: <ul style="list-style-type: none"> • Permit - Specifies the routes match conditions are permitted. • Deny - Specifies the routes match conditions are denied. • None - Specifies that no action will be taken.
Community Number	Enter the community number here. It can be a user-specified number represented by AA:NN, where AA (AS number) is the upper part of the word and NN (community number, user-specified) is the lower part of the word. Multiple community numbers (separated by space) can be specified.
Stand Community	Select the regular option here. Options to choose from are: <ul style="list-style-type: none"> • Internet - Specifies the Internet community. Routes with this community are advertised to all peers. • Local AS - Specifies the local AS community. Routes with this community are not sent out of the local AS or sub-AS of a confederation. • No Advertise - Specifies the no advertise community. Routes with this community are not advertised to other BGP peers. • No Export - Specifies the no export community. Routes with this community are not advertised to external peers.
Regular Expression	Enter the regular expression here. This configures a regular expression that is used to specify a pattern to match against an input string. Regular expressions can be used only with expanded community lists. This string can be up to 80 characters long.

Click the **Apply** button to accept the changes made.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show All** button to display all the available entries.

Click the **Delete** button to remove the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

BGP Extended Community List Settings

This window is used to display and configure the BGP extended community list settings.

To view the following window, click **L3 Features > BGP > BGP Extended Community List Settings**, as shown below:

Figure 6-183 BGP Extended Community List Settings Window

The fields that can be configured are described below:

Parameter	Description
List Name	Enter the name of the extended community list. This name can be up to 16 characters long. The syntax is general string that does not allow spaces.
Type	Select the type here. Options to choose from are: <ul style="list-style-type: none"> • Standard - Specifies to configure a named standard extended community list. • Expanded - Specifies to configure a named expanded extended community list.
Mode	Select the mode here. Options to choose from are: <ul style="list-style-type: none"> • Permit - Specifies to permit the extended community list. • Deny - Specifies to deny the extended community list. • None - Specifies that no action will be taken.
Extended Community	Select the extended community here. Options to choose from are: <ul style="list-style-type: none"> • RT - Specifies to use the Route Target (RT). • SoO - Specifies to use the Site-of-Origin (SoO). Enter the extended community string in the space provided.
Regular Expression	Enter the regular expression here. This string can be up to 80 characters long.

Click the **Apply** button to accept the changes made.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show All** button to display all the entries.

Click the **Delete** button to remove the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

BGP Clear Settings

This window is used to display and configure the BGP clear settings.

To view the following window, click **L3 Features > BGP > BGP Clear Settings**, as shown below:

Figure 6-184 BGP Clear Settings Window

The fields that can be configured are described below:

Parameter	Description
Address Family	Select the address family that will be used here. Options to choose from are: <ul style="list-style-type: none"> • IPv4 Unicast - Specifies to use the IPv4 unicast address family in this configuration. • IPv4 VRF - Specifies to use a VRF instance in this configuration. Enter the name of the VRF instance in the space provided or click the Please Select button to select a pre-configured VRF instance that will be used here. This name can be up to 12 characters long. • IPv4 Multicast - Specifies to use the IPv4 multicast address family in this configuration. • L2VPN VPLS - Specifies to use the Layer 2 VPN VPLS address family. • VPNv4 - Specifies to use the VPNv4 address family. • IPv6 Unicast - Specifies to use the IPv6 unicast address family in this configuration.
Type	Select the BGP type here. Options to choose from are: <ul style="list-style-type: none"> • All - Specifies to clear of all the BGP peer sessions in the specified address family. • AS Number - Specifies to clear all the BGP peer sessions in the specified AS. • Peer Group - Specifies to clear all the BGP peer sessions in the peer group. • Neighbor Address - Specifies to clear all the BGP peer sessions associated with the neighbor address. • External - Specifies to clear all the BGP peer sessions using hard or soft reconfiguration.
AS Number	Enter the AS number of which the BGP peer session will be cleared here. The range is from 1 to 4294967295.
Peer Group	Enter the name of the peer group of which the BGP peer session will be cleared here. This name can be up to 16 characters long.
Neighbor Address	Enter the IPv4 address or the IPv6 address of the neighbor of which the BGP peer session will be cleared here.
Mode Option	Select the mode here. Options to choose from are: <ul style="list-style-type: none"> • Soft - Initiates a soft reset without tearing down the session. • In - Initiates inbound reconfiguration. If neither In nor Out is specified, both inbound and outbound sessions are cleared.

Parameter	Description
	<ul style="list-style-type: none"> • Prefix Filter - Clears the existing Outbound Route Filter (ORF) prefix list to trigger a new route refresh to update the ORF prefix list from the peer router. • Out - Initiates outbound reconfiguration. If neither In nor Out is specified, both inbound and outbound sessions are cleared.

Click the **Apply** button to accept the changes made.

BGP Summary Table

This window is used to view the BGP summary table.

To view the following window, click **L3 Features > BGP > BGP Summary Table**, as shown below:

Figure 6-185 BGP Summary Table Window

The fields that can be configured are described below:

Parameter	Description
Address Family	<p>Select the address family that will be used here. Options to choose from are:</p> <ul style="list-style-type: none"> • IPv4 Unicast - Specifies to display BGP summary information related to the IPv4 unicast address family. • IPv4 Multicast - Specifies to display BGP summary information related to the IPv4 multicast address family. • IPv6 Unicast - Specifies to display BGP summary information related to the IPv6 unicast address family. • VPNv4 All - Specifies to display all BGP summary information related to the VPNv4 address family. • VPNv4 RD - Specifies to display BGP summary information related to the Route Distinguisher (RD) in the VPNv4 address family. Enter the RD in the space provided. • VPNv4 VRF - Specifies to display BGP summary information related to the VRF instance in the VPNv4 address family. Enter the name of the VRF instance here. This name can be up to 12 characters long. Alternatively, click the Please Select button to select a pre-configured VRF instance that will be used here. • L2VPN VPLS - Specifies to display BGP summary information related to the Layer 2 VPN VPLS address family.

Click the **Find** button to locate a specific entry based on the information selected/entered.

After clicking the **Please Select** button, the following page will appear.



Figure 6-186 BGP Summary Table (Please Select) Window

Select the VRF entry and click the **OK** button to use the selected VRF entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

BGP Routing Table

This window is used to view the BGP routing table.

To view the following window, click **L3 Features > BGP > BGP Routing Table**, as shown below:

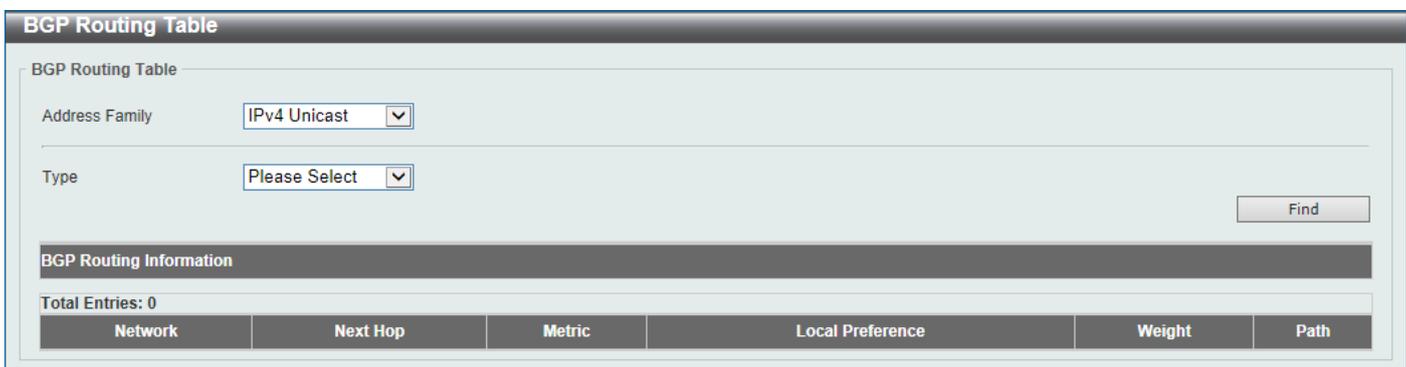


Figure 6-187 BGP Routing Table Window

The fields that can be configured are described below:

Parameter	Description
Address Family	<p>Select the address family that will be used here. Options to choose from are:</p> <ul style="list-style-type: none"> • IPv4 Unicast - Specifies to display BGP routing information related to the IPv4 unicast address family. • IPv4 Multicast - Specifies to display BGP routing information related to the IPv4 multicast address family. • IPv6 Unicast - Specifies to display BGP routing information related to the IPv6 unicast address family. • VPNv4 All - Specifies to display all BGP routing information related to the VPNv4 address family. • VPNv4 RD - Specifies to display BGP routing information related to the Route Distinguisher (RD) in the VPNv4 address family. Enter the RD in the space provided. • VPNv4 VRF - Specifies to display BGP routing information related to the VRF instance in the VPNv4 address family. Enter the name of the VRF instance here. This name can be up to 12 characters long. Alternatively, click the Please Select button to select a pre-configured VRF instance that will be used here. • L2VPN VPLS All - Specifies to display all BGP routing information related to the Layer 2 VPN VPLS address family.

Parameter	Description
	<ul style="list-style-type: none"> • L2VPN VPLS RD - Specifies to display BGP routing information related to the Route Distinguisher (RD) in the Layer 2 VPN VPLS address family. • L2VPN VPLS VFI - Specifies to display BGP routing information related to the VFI instance in the Layer 2 VPN VPLS address family. Enter the name of the VFI instance here. This name can be up to 12 characters long.
Type	<p>Select the type here. Options to choose from are:</p> <ul style="list-style-type: none"> • IP Address - Specifies to display BGP routing information related to the specified IPv4/IPv6 address. <ul style="list-style-type: none"> ○ IP Address - Enter the IPv4 address that will be used here. ○ IPv6 Address - Enter the IPv6 address that will be used here. • Network - Specifies to display BGP routing information related to the specified network. <ul style="list-style-type: none"> ○ Network - Enter the starting and ending IPv4 addresses in the network range here. Select the Longer Prefixes option to display the specified route and all more specific routes. ○ IPv6 Network - Enter the IPv6 network address and prefix length here. Select the Longer Prefixes option to display IPv6 routes with prefixes greater than and equal to the prefix length. • Route Map - Specifies to display BGP routing information related to the specified route map. <ul style="list-style-type: none"> ○ Route Map Name - Enter the name of the route map here. This name can be up to 16 characters long. ○ L2VPN Prefix - Enter the Layer 2 VPN prefix here. • CIDR Only - Specifies to display BGP routing information related to the Classless Inter-Domain Routing (CIDR) routes. • Community - Specifies to display BGP routing information related to the specified BGP community. <ul style="list-style-type: none"> ○ Community Set - Enter the AS and community number of the BGP community here. ○ Local AS - Select this option to specify not to send out of the local AS or sub-autonomous system of a confederation. ○ No Advertise - Select this option to specify not to advertise the route to other BGP peers. ○ No Export - Select this option to specify not to advertise to external peers. ○ Internet - Select this option to specify routes free to be advertised to all peers. ○ Exact Match - Select this option to specify that an exact match is required. All of the communities and only those communities specified must be present. ○ L2VPN Prefix - Enter the Layer 2 VPN prefix here. • Community List - Specifies to display BGP routing information related to the specified BGP community list. <ul style="list-style-type: none"> ○ Community List - Enter the name of the BGP community list here. This name can be up to 16 characters long. ○ Exact Match - Select this option to display only routes that are an exact match. ○ L2VPN Prefix - Enter the Layer 2 VPN prefix here. • Filter List - Specifies to display BGP routing information related to the specified filter list. <ul style="list-style-type: none"> ○ Filter List Name - Enter the name of the filter list here. This name can be up to 16 characters long. ○ L2VPN Prefix - Enter the Layer 2 VPN prefix here. • Inconsistent AS - select this option to display the BGP routes that have the same prefix and different AS path origins.

Parameter	Description
	<ul style="list-style-type: none"> ○ L2VPN Prefix - Enter the Layer 2 VPN prefix here. ● Quote Regexp - Select this option to display BGP routes that matches the regular expression. ○ Regexp - Enter the regular expression here. This can be up to 80 characters long. ○ L2VPN Prefix - Enter the Layer 2 VPN prefix here.

Click the **Find** button to locate a specific entry based on the information selected/entered.

After clicking the **Please Select** button, the following page will appear.

Figure 6-188 BGP Routing Table (Please Select) Window

Select the VRF entry and click the **OK** button to use the selected VRF entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

BGP Labels Table

This window is used to view the BGP labels table.

To view the following window, click **L3 Features > BGP > BGP Labels Table**, as shown below:

Figure 6-189 BGP Labels Table Window

The fields that can be configured are described below:

Parameter	Description
Address Family	<p>Select the address family that will be used here. Options to choose from are:</p> <ul style="list-style-type: none"> ● VPNv4 All - Specifies to display all BGP label information related to the VPNv4 address family. ● VPNv4 RD - Specifies to display BGP label information related to the Route Distinguisher (RD) in the VPNv4 address family. Enter the RD in the space provided. ● VPNv4 VRF - Specifies to display BGP label information related to the VRF instance in the VPNv4 address family. Enter the name of the VRF instance here. This name can be up to 12 characters long. Alternatively,

Parameter	Description
	click the Please Select button to select a pre-configured VRF instance that will be used here.

Click the **Find** button to locate a specific entry based on the information selected/entered.

After clicking the **Please Select** button, the following page will appear.

The screenshot shows a window titled "VRF List". At the top left, it says "Total Entries: 1". Below this is a table with two columns: "VRF Name" and "RD". The table contains one row with the values "VRF" and "192.168.70.1:24". To the right of the table are navigation buttons: "1/1", "<", "<", "1", ">", ">|", and a "Go" button. At the bottom right of the window is an "OK" button.

Figure 6-190 BGP Labels Table (Please Select) Window

Select the VRF entry and click the **OK** button to use the selected VRF entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

BGP Neighbor

Neighbor

This window is used to display and configure the BGP neighbor settings.

To view the following window, click **L3 Features > BGP > BGP Neighbor > Neighbor**, as shown below:

The screenshot shows a window titled "Neighbor". It is divided into two main sections: "Neighbor Settings" and "Neighbor Table".

Neighbor Settings: This section contains four input fields: "IP Address" (with a dropdown menu set to "IPv4"), "VRF Name" (with a "Please Select" button), "Remote AS Number (1-4294967295)" (with a text input field), and "Action" (with a dropdown menu set to "Add"). There is an "Apply" button to the right.

Neighbor Table: This section contains three input fields: "Address Family" (with a dropdown menu set to "IPv4 Unicast"), "Neighbor Address" (with a dropdown menu set to "IPv4"), and "Type" (with a dropdown menu set to "None"). There is a "Find" button to the right.

Below the input fields is a table with the following data:

Neighbor Address	VRF Name
192.168.60.1	

At the bottom right of the table are navigation buttons: "1/1", "<", "<", "1", ">", ">|", and a "Go" button. Below the table is a "Delete" button. At the very bottom of the window is a "Neighbor Detail Information" section.

Figure 6-191 Neighbor Window

The fields that can be configured in **Neighbor Settings** are described below:

Parameter	Description
IP Address	Select and enter the IPv4 or IPv6 address of the neighboring router here.

Parameter	Description
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long. Click the Please Select button to select a pre-configured VRF instance that will be used here.
Remote AS Number	Enter the remote As number here. The range is from 1 to 4294967295.
Action	Select the action that will be taken here. Options to choose from are Add and Delete .

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Neighbor Table** are described below:

Parameter	Description
Address Family	Select the address family that will be used here. Options to choose from are: <ul style="list-style-type: none"> • IPv4 Unicast - Specifies to display the BGP neighbor table related to the IPv4 unicast address family. • IPv4 Multicast - Specifies to display the BGP neighbor table related to the IPv4 multicast address family. • IPv6 Unicast - Specifies to display the BGP neighbor table related to the IPv6 unicast address family. • VPNv4 All - Specifies to display the BGP neighbor table related to the whole VPNv4 address family. • VPNv4 RD - Specifies to display the BGP neighbor table related to the Route Distinguisher (RD) in the VPNv4 address family. Enter the RD in the space provided. • VPNv4 VRF - Specifies to display the BGP neighbor table related to the VRF instance in the VPNv4 address family. Enter the name of the VRF instance here. This name can be up to 12 characters long. Alternatively, click the Please Select button to select a pre-configured VRF instance that will be used here. • L2VPN VPLS - Specifies to display the BGP neighbor table related to the Layer 2 VPN VPLS address family.
Neighbor Address	Select and enter the IPv4 or IPv6 address of the neighboring router here.
Type	Select the type of information to display here. Options to choose from are: <ul style="list-style-type: none"> • None - Specifies to display BGP and TCP connection information for neighbor sessions. • Advertised Routes - Specifies to display the routes advertised to a BGP neighbor. • Received Routes - Specifies to display the routes received from a BGP neighbor. • Routes - Specifies to display the routes that are received and accepted from a neighbor. The accepted routes are a subset of the received routes. • Received Prefix Filter - Specifies to display the prefix list sent by the specified neighbor.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Delete** button to remove the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Please Select** button, the following page will appear.

VRF List

Total Entries: 1

	VRF Name	RD
<input type="radio"/>	VRF	192.168.70.1:24

1/1 |< < 1 > >| Go

OK

Figure 6-192 Neighbor (Please Select) Window

Select the VRF entry and click the **OK** button to use the selected VRF entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

Peer Group

This window is used to display and configure the BGP neighbor peer group settings.

To view the following window, click **L3 Features > BGP > BGP Neighbor > Peer Group**, as shown below:

Peer Group

Peer Group

Group Name: 16 chars | VRF Name: Please Select | Remote AS Number (1-4294967295): | Action: Add | Apply

Peer Group Member

IP Address: IPv4 | Group Name: 16 chars | Action: Add | Apply

Peer Group Table

Address Family: IPv4 Unicast | Group Name: 16 chars | Find

Total Entries: 1

Peer Group	VRF Name
Group	

1/1 |< < 1 > >| Go

Peer Group Detail Information

Peer Group	Group	Remote AS	1
Configured Hold Time	180	Configured Keepalive Interval	60
BGP Version	4	Default Advertisement Interval	5 sec
AS Origination Interval	15 sec	Address Family Information	Show Detail

Figure 6-193 Peer Group Window

The fields that can be configured in **Peer Group** are described below:

Parameter	Description
Group Name	Enter the name of the BGP peer group here. This name can be up to 16 characters long.
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long. Click the Please Select button to select a pre-configured VRF instance that will be used here.

Parameter	Description
Remote AS Number	Enter the remote AS number here. The range is from 1 to 4294967295.
Action	Select the action that will be taken here. Options to choose from are Add and Delete .

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Peer Group Member** are described below:

Parameter	Description
IP Address	Select and enter the IPv4 or IPv6 address of the BGP peer group member here.
Group Name	Enter the name of the BGP peer group member here. This name can be up to 16 characters long.
Action	Select the action that will be taken here. Options to choose from are Add and Delete .

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Peer Group Table** are described below:

Parameter	Description
Address Family	Select the address family that will be used here. Options to choose from are: <ul style="list-style-type: none"> • IPv4 Unicast - Specifies to display the BGP peer group table related to the IPv4 unicast address family. • VPNv4 All - Specifies to display the BGP peer group table related to the whole VPNv4 address family. • VPNv4 RD - Specifies to display the BGP peer group table related to the Route Distinguisher (RD) in the VPNv4 address family. Enter the RD in the space provided. • VPNv4 VRF - Specifies to display the BGP peer group table related to the VRF instance in the VPNv4 address family. Enter the name of the VRF instance here. This name can be up to 12 characters long. Alternatively, click the Please Select button to select a pre-configured VRF instance that will be used here.
Group Name	Enter the name of the BGP peer group here. This name can be up to 16 characters long.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Delete** button to remove the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

Click the **Show Detail** button to view more detailed information about the specific entry.

After clicking the **Please Select** button, the following page will appear.



Figure 6-194 Peer Group (Please Select) Window

Select the VRF entry and click the **OK** button to use the selected VRF entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Show Detail** button, the following page will appear.

For Address Family: IPv4 Unicast			
BGP Neighbor	Group, no member	Index	0
Offset	0	Mask	0x0
Maximum Limit	16384	Warning Only	Disabled
Warning Threshold	75%		

Figure 6-195 Peer Group (Show Detail) Window

Click the **Back** button to return to the previous window.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

Neighbor Activate

This window is used to view, activate and deactivate BGP neighbors.

To view the following window, click **L3 Features > BGP > BGP Neighbor > Neighbor Activate**, as shown below:

Figure 6-196 Neighbor Activate Window

The fields that can be configured are described below:

Parameter	Description
Address Family	<p>Select the address family that will be used here. Options to choose from are:</p> <ul style="list-style-type: none"> • IPv4 Unicast - Specifies to activate/deactivate the BGP neighbor related to the IPv4 unicast address family. • IPv4 VRF - Specifies to activate/deactivate the BGP neighbor related to the VRF instance in the IPv4 address family. Enter the name of the VRF instance here. This name can be up to 12 characters long. Alternatively, click the Please Select button to select a pre-configured VRF instance that will be used here. • IPv4 Multicast - Specifies to activate/deactivate the BGP neighbor related to the IPv4 multicast address family. • L2VPN VPLS - Specifies to activate/deactivate the BGP neighbor related to the Layer 2 VPN VPLS address family. • IPv6 Unicast - Specifies to activate/deactivate the BGP neighbor related to the IPv6 unicast address family. • VPNv4 - Specifies to activate/deactivate the BGP neighbor related to the VPNv4 address family.
Neighbor	Select and enter the BGP neighbor here. Options to choose from are:

Parameter	Description
	<ul style="list-style-type: none"> • IPv4 Address - Enter the IPv4 address of the BGP neighbor here. • Peer Group - Enter the name of the peer group of the BGP neighbor here. This name can be up to 16 characters long. • IPv6 Address - Enter the IPv6 address of the BGP neighbor here.
Action	Select to activate or deactivate the BGP neighbor here. Options to choose from are Activate and No Activate .

Click the **Apply** button to accept the changes made.

After clicking the **Please Select** button, the following page will appear.

The screenshot shows a window titled "VRF List". At the top, it says "Total Entries: 1". Below this is a table with two columns: "VRF Name" and "RD". The table contains one row with "VRF" in the first column and "192.168.70.1:24" in the second. To the right of the table are navigation buttons: "1/1", left arrow, "1", right arrow, and "Go". At the bottom right is an "OK" button.

Figure 6-197 Neighbor Activate (Please Select) Window

Select the VRF entry and click the **OK** button to use the selected VRF entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

Neighbor Shutdown

This window is used to shut BGP neighbors down or not.

To view the following window, click **L3 Features > BGP > BGP Neighbor > Neighbor Shutdown**, as shown below:

The screenshot shows a window titled "Neighbor Shutdown". It has three main input areas: "Neighbor" with a dropdown menu showing "IPv4 Address" and a text box; "VRF Name" with a text box and a "Please Select" button; and "Action" with a dropdown menu showing "Shutdown". An "Apply" button is located at the bottom right.

Figure 6-198 Neighbor Shutdown Window

The fields that can be configured are described below:

Parameter	Description
Neighbor	Select and enter the BGP neighbor here. Options to choose from are: <ul style="list-style-type: none"> • IPv4 Address - Enter the IPv4 address of the BGP neighbor here. • IPv6 Address - Enter the IPv6 address of the BGP neighbor here. • Peer Group - Enter the name of the peer group of the BGP neighbor here. This name can be up to 16 characters long.
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long. Click the Please Select button to select a pre-configured VRF instance that will be used here.
Action	Select the action that will be taken here. Options to choose from are Shutdown and No Shutdown .

Click the **Apply** button to accept the changes made.

After clicking the **Please Select** button, the following page will appear.

The screenshot shows a window titled "VRF List". At the top left, it says "Total Entries: 1". Below this is a table with two columns: "VRF Name" and "RD". The table contains one row with the values "VRF" and "192.168.70.1:24". To the left of the table is a radio button. Below the table are navigation controls: "1/1", left arrow, right arrow, "1", left arrow, right arrow, and a "Go" button. At the bottom right of the window is an "OK" button.

Figure 6-199 Neighbor Shutdown (Please Select) Window

Select the VRF entry and click the **OK** button to use the selected VRF entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

Neighbor Map Settings

This window is used to display and configure the BGP neighbor map settings.

To view the following window, click **L3 Features > BGP > BGP Neighbor > Neighbor Map Settings**, as shown below:

The screenshot shows a window titled "Neighbor Map Settings". It contains several configuration fields:

- Address Family: IPv4 Unicast (dropdown menu) with a "Please Select" button.
- Neighbor: IPv4 Address (dropdown menu) with a text input field.
- Unsuppress Map Action: Add (dropdown menu).
- Unsuppress Map Name: 16 chars (text input field).
- Route Map Type: In (dropdown menu).
- Route Map Action: Add (dropdown menu).
- Route Map Name: 16 chars (text input field).

 An "Apply" button is located at the bottom right of the window.

Figure 6-200 Neighbor Map Settings Window

The fields that can be configured are described below:

Parameter	Description
Address Family	<p>Select the address family that will be used here. Options to choose from are:</p> <ul style="list-style-type: none"> • IPv4 Unicast - Specifies to configure the BGP neighbor map settings related to the IPv4 unicast address family. • IPv4 VRF - Specifies to configure the BGP neighbor map settings related to the VRF instance in the IPv4 address family. Enter the name of the VRF instance here. This name can be up to 12 characters long. Alternatively, click the Please Select button to select a pre-configured VRF instance that will be used here. • IPv4 Multicast - Specifies to configure the BGP neighbor map settings related to the IPv4 multicast address family. • L2VPN VPLS - Specifies to configure the BGP neighbor map settings related to the Layer 2 VPN VPLS address family. • VPNv4 - Specifies to configure the BGP neighbor map settings related to the VPNv4 address family. • IPv6 Unicast - Specifies to configure the BGP neighbor map settings related to the IPv6 unicast address family.

Parameter	Description
Neighbor	Select and enter the BGP neighbor here. Options to choose from are: <ul style="list-style-type: none"> • IPv4 Address - Enter the IPv4 address of the BGP neighbor here. • Peer Group - Enter the name of the peer group of the BGP neighbor here. This name can be up to 16 characters long. • IPv6 Address - Enter the IPv6 address of the BGP neighbor here.
Unsuppress Map Action	Select the unsuppress action that will be taken here. This is used to selectively advertise routes that were previously suppressed by the aggregate address feature. Options to choose from are Add and Delete .
Unsuppress Map Name	Enter the name of the route map that will be unsuppressed here. This name can be up to 16 characters long.
Route Map Type	Select the route map type here. Options to choose from are: <ul style="list-style-type: none"> • In - Specifies a route map that was applied to paths advertised from the neighbor. • Out - Specifies a route map that was applied to the paths advertised to the neighbor.
Route Map Action	Select the route map action here. Options to choose from are Add and Delete .
Route Map Name	Enter the name of the route map here. This name can be up to 16 characters long.

Click the **Apply** button to accept the changes made.

After clicking the **Please Select** button, the following page will appear.

The screenshot shows a window titled "VRF List". At the top left, it says "Total Entries: 1". Below this is a table with two columns: "VRF Name" and "RD". The table contains one row with the values "VRF" and "192.168.70.1:24". To the right of the table are navigation controls: "1/1", a left arrow, a left arrow, "1", a right arrow, a right arrow, and a "Go" button. At the bottom right of the window is an "OK" button.

Figure 6-201 Neighbor Map Settings (Please Select) Window

Select the VRF entry and click the **OK** button to use the selected VRF entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

Neighbor Filter Settings

This window is used to display and configure the BGP neighbor filter settings.

To view the following window, click **L3 Features > BGP > BGP Neighbor > Neighbor Filter Settings**, as shown below:

The screenshot shows the 'Neighbor Filter Settings' window with the following configuration:

- Address Family: IPv4 Unicast
- Neighbor: IPv4 Address
- Filter List Type: In
- Filter List Action: Add
- Filter List Name: 16 chars
- Prefix List Type: In
- Prefix List Action: Add
- Prefix List Name: 32 chars
- Capability ORF Prefix List Action: Please Select
- Capability ORF Prefix List Type: Receive

Figure 6-202 Neighbor Filter Settings Window

The fields that can be configured are described below:

Parameter	Description
Address Family	Select the address family that will be used here. Options to choose from are: <ul style="list-style-type: none"> • IPv4 Unicast - Specifies to configure the BGP neighbor filter settings related to the IPv4 unicast address family. • IPv4 VRF - Specifies to configure the BGP neighbor filter settings related to the VRF instance in the IPv4 address family. Enter the name of the VRF instance here. This name can be up to 12 characters long. Alternatively, click the Please Select button to select a pre-configured VRF instance that will be used here. • IPv4 Multicast - Specifies to configure the BGP neighbor filter settings related to the IPv4 multicast address family. • L2VPN VPLS - Specifies to configure the BGP neighbor filter settings related to the Layer 2 VPN VPLS address family. • VPNv4 - Specifies to configure the BGP neighbor filter settings related to the VPNv4 address family. • IPv6 Unicast - Specifies to configure the BGP neighbor filter settings related to the IPv6 unicast address family.
Neighbor	Select and enter the BGP neighbor here. Options to choose from are: <ul style="list-style-type: none"> • IPv4 Address - Enter the IPv4 address of the BGP neighbor here. • Peer Group - Enter the name of the peer group of the BGP neighbor here. This name can be up to 16 characters long. • IPv6 Address - Enter the IPv6 address of the BGP neighbor here.
Filter List Type	Select the filter list type here. Options to choose from are: <ul style="list-style-type: none"> • In - Specifies to apply the access list to incoming routes. • Out - Specifies to apply the access list to outgoing routes.
Filter List Action	Select the filter list action here. Options to choose from are Add and Delete .
Filter List Name	Enter the name of the AS path access list that will be used here. This name can be up to 16 characters long.
Prefix List Type	Select the prefix list type here. Options to choose from are: <ul style="list-style-type: none"> • In - Specifies the filter list applied to paths advertised from the neighbor. • Out - Specifies the filter list applied to paths to be advertised to the neighbor.
Prefix List Action	Select the prefix list action here. Options to choose from are Add and Delete .

Parameter	Description
Prefix List Name	Enter the name of the prefix list here. This name can be up to 32 characters long.
Capability ORF Prefix List Action	Select to enable or disable the ORF prefix list capability feature here. The BGP ORF capability can be used to reduce the number of prefixes exchanged with the peer. Typically, this must be configured in pairs on the local router and the remote router. This function can operate in one direction or in both directions.
Capability ORF Prefix List Type	Select the capability ORF prefix list type here. Options to choose from are Receive , Send , and Both

Click the **Apply** button to accept the changes made.

After clicking the **Please Select** button, the following page will appear.

The screenshot shows a window titled "VRF List". At the top left, it says "Total Entries: 1". Below this is a table with two columns: "VRF Name" and "RD". The table contains one row with the values "VRF" and "192.168.70.1:24". To the right of the table are navigation buttons: "1/1", "<<", "<", "1", ">", ">>", and "Go". At the bottom right of the window is an "OK" button.

Figure 6-203 Neighbor Filter Settings (Please Select) Window

Select the VRF entry and click the **OK** button to use the selected VRF entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

Neighbor Maximum Prefix Settings

This window is used to display and configure the BGP neighbor maximum prefix settings. This is used to control the maximum number of prefixes that can be accepted from a BGP neighbor.

To view the following window, click **L3 Features > BGP > BGP Neighbor > Neighbor Maximum Prefix Settings**, as shown below:

The screenshot shows a window titled "Neighbor Maximum Prefix Settings". The window contains several configuration fields:

- Address Family:** A dropdown menu set to "IPv4 Unicast" and a "Please Select" button.
- Neighbor:** A dropdown menu set to "IPv4 Address" and a text input field with four dots.
- Prefix Action:** A dropdown menu set to "Disabled".
- Prefix Max Count (1-16384):** A text input field.
- Prefix Warning Threshold (1-100):** A text input field.
- Prefix Warning Only:** A dropdown menu set to "Disabled".

 An "Apply" button is located at the bottom right of the window.

Figure 6-204 Neighbor Maximum Prefix Settings Window

The fields that can be configured are described below:

Parameter	Description
Address Family	Select the address family that will be used here. Options to choose from are: <ul style="list-style-type: none"> IPv4 Unicast - Specifies to configure the BGP neighbor maximum prefix settings related to the IPv4 unicast address family.

Parameter	Description
	<ul style="list-style-type: none"> • IPv4 VRF - Specifies to configure the BGP neighbor maximum prefix settings related to the VRF instance in the IPv4 address family. Enter the name of the VRF instance here. This name can be up to 12 characters long. Alternatively, click the Please Select button to select a pre-configured VRF instance that will be used here. • IPv4 Multicast - Specifies to configure the BGP neighbor maximum prefix settings related to the IPv4 multicast address family. • L2VPN VPLS - Specifies to configure the BGP neighbor maximum prefix settings related to the Layer 2 VPN VPLS address family. • VPNv4 - Specifies to configure the BGP neighbor maximum prefix settings related to the VPNv4 address family. • IPv6 Unicast - Specifies to configure the BGP neighbor maximum prefix settings related to the IPv6 unicast address family.
Neighbor	Select and enter the BGP neighbor here. Options to choose from are: <ul style="list-style-type: none"> • IPv4 Address - Enter the IPv4 address of the BGP neighbor here. • Peer Group - Enter the name of the peer group of the BGP neighbor here. This name can be up to 16 characters long. • IPv6 Address - Enter the IPv6 address of the BGP neighbor here.
Prefix Action	Select to enable or disable the prefix action here.
Prefix Max Count	Enter the maximum prefix count here. This specifies the maximum number of prefixes acceptable from the specified neighbor.
Prefix Warning Threshold	Enter the prefix warning threshold value here. This specifies the percentage of the maximum prefix limit to generate a warning message. The range is from 1 to 100 percent.
Prefix Warning Only	Select to enable or disable the prefix warning only feature here. When enabled this specifies to only generate a system log message when the threshold was exceeded. When disabled, the peering session will be terminated when the threshold was exceeded.

Click the **Apply** button to accept the changes made.

After clicking the **Please Select** button, the following page will appear.



Figure 6-205 Neighbor Maximum Prefix Settings (Please Select) Window

Select the VRF entry and click the **OK** button to use the selected VRF entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

Neighbor General Settings

This window is used to display and configure the general BGP neighbor settings.

To view the following window, click **L3 Features > BGP > BGP Neighbor > Neighbor General Settings**, as shown below:

Figure 6-206 Neighbor General Settings Window

The fields that can be configured are described below:

Parameter	Description
Address Family	<p>Select the address family that will be used here. Options to choose from are:</p> <ul style="list-style-type: none"> • IPv4 Unicast - Specifies to configure the BGP general settings related to the IPv4 unicast address family. • IPv4 VRF - Specifies to configure the BGP general settings related to the VRF instance in the IPv4 address family. Enter the name of the VRF instance here. This name can be up to 12 characters long. Alternatively, click the Please Select button to select a pre-configured VRF instance that will be used here. • IPv4 Multicast - Specifies to configure the BGP general settings related to the IPv4 multicast address family. • L2VPN VPLS - Specifies to configure the BGP general settings related to the Layer 2 VPN VPLS address family. • VPNv4 - Specifies to configure the BGP general settings related to the VPNv4 address family. • IPv6 Unicast - Specifies to configure the BGP general settings related to the IPv6 unicast address family.
Neighbor	<p>Select and enter the BGP neighbor here. Options to choose from are:</p> <ul style="list-style-type: none"> • IPv4 Address - Enter the IPv4 address of the BGP neighbor here. • Peer Group - Enter the name of the peer group of the BGP neighbor here. This name can be up to 16 characters long. • IPv6 Address - Enter the IPv6 address of the BGP neighbor here.

Parameter	Description
Advertisement Interval	Enter the advertisement interval value here. This is used to configure the minimum interval between two BGP routing <i>UPDATE</i> messages. The range is from 1 to 600. Select the Default option to use the default value.
AS Origination Interval	Enter the AS origination interval value here. This is used to configure the minimum interval between the sending of AS origination routing updates. The range is from 1 to 600. Select the Default option to use the default value.
Timers	Configure the timers here. <ul style="list-style-type: none"> • Keep-Alive - Enter the keep-alive time value here. This specifies the time interval for sending keep-alive messages to the specified peer. The range is from 0 to 65535. • Hold Time - Enter the hold-time value here. This specifies the time interval after which a peer will be declared dead if the keep-alive messages time out. The range is from 0 to 65535. Select the Default option to use the default values.
Next Hop Self	Select to enable or disable the next hop self feature here. This is used to configure the router as the next hop for a BGP-speaking neighbor or peer group.
Send Community	Select to enable or disable the send community feature here. This is used to specify to send the specified type of community attributes to a BGP neighbor. Options to choose from are: <ul style="list-style-type: none"> • Both - Specifies to send or not to send both standard and extended communities. • Standard - Specifies to send or not to send the standard community. • Extended - Specifies to send or not to send the extended community.
Soft Reconfiguration Inbound	Select to enable or disable the soft reconfiguration inbound feature here. This is used to enable the storing of the route information update from the neighbor peer.
Remove Private AS	Select to enable or disable the remove private AS feature here. This is used to remove private AS numbers from the AS path list of the outbound update routes.
Capability Graceful Restart	Select to enable or disable the graceful restart capability here. This is used to enable the feature to advertise the graceful restart capability to its neighbors.
Description	Enter the description for the BGP neighbor here. This string can be up to 80 characters long. Select the Clear option to remove the description.
EBGP Multihop	Enter the eBGP multi-hop TTL value here. This is used to allow the router to establish a BGP session with an eBGP peer that is not directly connected to the local peer. The range is from 1 to 255. Select the Default option to use the default value.
Password	Enter the password here that will be used between two BGP peers. This can be up to 25 characters long. Select the Clear option to remove the password.
TCP Reconnect	Enter the TCP reconnect port number here. This is used configure the minimum interval that BGP uses to send TCP connect requests to the peer after a TCP connection failed. The range is from 1 to 65535 seconds. Select the Default option to use the default value, which is 120 seconds.
Update Source	Select the update source here. This is used to allow a BGP session to use any operational interface's IP address as the source address to initiate the TCP connection. <ul style="list-style-type: none"> • VID - Enter the VLAN ID that will be used here. The range is from 1 to 4094.

Parameter	Description
	<ul style="list-style-type: none"> Loopback - Enter the ID of the loopback interface that will be used here. The range is from 1 to 8. Select the Default option to use the default settings.
Weight	Enter the BGP weight value here. This is used to specify the weight assigned to the routes that are received from a specific neighbor. The range is from 0 to 65535. Select the Default option to use the default value.
Allow AS In	Select to enable or disable the allow AS in feature here. This is used to enable routers to allow its own AS number to appear in received BGP update packets.
Allow AS In Value	Enter the allow AS in value here. This specifies the maximum number of local AS's to allow the appearance in the AS-path attribute of the update packets. The range is from 1 to 10.
Default Originate	Select to enable or disable the default originate feature here. This is used to enable the feature to generate the default route to a neighbor.
Route Map Name	Enter the name of the route map that will be used here. This name can be up to 16 characters long.

Click the **Apply** button to accept the changes made.

After clicking the **Please Select** button, the following page will appear.



Figure 6-207 Neighbor General Settings (Please Select) Window

Select the VRF entry and click the **OK** button to use the selected VRF entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

BFD

BFD Settings

This window is used to display and configure the Bidirectional Forwarding Detection (BFD) settings.

To view the following window, click **L3 Features > BFD > BFD Settings**, as shown below:

BFD Settings

BFD State: Enabled Disabled Apply

BFD Interface Settings

Interface Type: VLAN Interface ID (1-4094): Find Show All

Total Entries: 1

Interface Name	MinTxInt (ms)	MinRxInt (ms)	Multiplier	Slow Time (ms)	
vlan1	500	500	3	2000	Edit

Note: MinTxInt : Desired Minimum TX Interval, MinRxInt : Required Minimum RX Interval 1/1 < < 1 > > Go

Figure 6-208 BFD Settings Window

The fields that can be configured in **BFD State** are described below:

Parameter	Description
BFD State	Select to globally enable or disable the BFD feature here.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **BFD Interface Settings** are described below:

Parameter	Description
Interface Type	Select the interface type here.
Interface ID	Enter the ID of the interface that will be used here.

Click the **Find** button to find and display an entry based on the information entered.

Click the **Show All** button to display all the entries.

Click the **Edit** button to configure the interval settings for the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Edit** button, the following page will appear.

BFD Settings

BFD State: Enabled Disabled Apply

BFD Interface Settings

Interface Type: Loopback Interface ID (1-8): Find Show All

Total Entries: 1

Interface Name	MinTxInt (ms)	MinRxInt (ms)	Multiplier	Slow Time (ms)	
vlan1	<input type="text" value="500"/>	<input type="text" value="500"/>	<input type="text" value="3"/>	<input type="text" value="2000"/>	Apply

Note: MinTxInt : Desired Minimum TX Interval, MinRxInt : Required Minimum RX Interval 1/1 < < 1 > > Go

Figure 6-209 BFD Settings (Edit) Window

The fields that can be configured are described below:

Parameter	Description
MinTxInt	Enter the minimum time interval value that the local system will use when transmitting BFD control packets here. The range is from 50 to 1000 milliseconds.

Parameter	Description
MinRxInt	Enter the minimum time interval value between received BFD control packets that this system is capable of supporting here. The range is from 50 to 1000 milliseconds.
Multiplier	Enter the BFD detection time multiplier value here. The range is from 3 to 99.
Slow Time	Enter the BFD slow time value here. The range is from 1000 to 3000 milliseconds.

Click the **Apply** button to accept the changes made.

BFD Neighbor Table

This window is used to view the BFD neighbor table.



NOTE: Performance will vary depending on the configuration and traffic patterns. It is advised to perform lab testing before deploying BFD in a live environment.

To view the following window, click **L3 Features > BFD > BFD Neighbor Table**, as shown below:

Neighbor Address	Interface Name	Local Discriminator	Remote Discriminator	Detect Time (ms)	Status	
11.0.0.1	vlan11	2	0	0	Down	Show Detail
11.0.0.2	vlan11	1	1	1500	Up	Show Detail

Figure 6-210 BFD Neighbor Table Window

Click the **Show Detail** button to view more detailed information about the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Show Detail** button, the following page will appear.

Local Diagnostic	No Diagnostic
Poll Bit	Not Set
Remote Minimum RX Interval	50 ms
Remote Minimum TX Interval	500 ms
Remote Multiplier	3
Register Protocol	OSPF VRRP SRT

Figure 6-211 BFD Neighbor Table (Show Detail) Window

Click the **Back** button to return to the previous window.

ISIS

ISIS Global Settings

This window is used to display and configure the global Intermediate System to Intermediate System (ISIS) settings.

To view the following window, click **L3 Features > ISIS > ISIS Global Settings**, as shown below:

Figure 6-212 ISIS Global Settings Window

The fields that can be configured are described below:

Parameter	Description
Area Tag	Enter the ISIS area tag here. This can be up to 16 characters long.

Click the **Apply** button to accept the changes made.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Edit** button to configure more detailed settings related to the specific entry.

Click the **NET List** button to view and configure NET Network Services Access Point (NSAP) addresses.

Click the **Delete** button to remove the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Edit** button, the following page will appear.

Figure 6-213 ISIS Global Settings (Edit) Window

The fields that can be configured are described below:

Parameter	Description
Area Password	<p>Enter the ISIS area authentication password here. Use this on all Switches in an area to prevent unauthorized Switches from injecting false routing information into the link-state database. This password is exchanged as plain text and this is currently the only authentication type supported.</p> <p>Select the Authenticate SNP option to insert the password into sequence number PDUs (SNPs).</p> <ul style="list-style-type: none"> • Validate - Specifies to insert the password into the SNPs and check the password in SNPs on receiving. • Send Only - Specifies to only insert the password into the SNPs, but not check the password in SNPs on receiving. <p>Select the Default option to use the default settings.</p>
Domain Password	<p>Enter the ISIS routing domain authentication password here.</p> <p>Select the Authenticate SNP option to insert the password into sequence number PDUs (SNPs).</p> <ul style="list-style-type: none"> • Validate - Specifies to insert the password into the SNPs and check the password in SNPs on receiving. • Send Only - Specifies to only insert the password into the SNPs, but not check the password in SNPs on receiving. <p>Select the Default option to use the default settings.</p>
Hostname Dynamic	<p>Select to enable or disable the dynamic hostname feature here. This is used to enable ISIS dynamic hostname mapping.</p> <p>The dynamic hostname mechanism uses Link-State Protocol (LSP) flooding to distribute the router-name-to-system-ID mapping information across the entire network. Every router on the network will try to install the system ID-to-router name mapping information in its routing table.</p> <p>If a router that has been advertising the dynamic name Type, Length, Value (TLV) on the network suddenly stops the advertisement, the mapping information last received will remain in the dynamic host mapping table for up to</p>

Parameter	Description
	one hour, allowing the network administrator to display the entries in the mapping entry table during a time when the network experiences problems.
Ignore LSP Errors	<p>Select to enable or disable the ignore LSP error feature. This is used to enable the ignoring of link-state packets (LSPs) with bad checksums.</p> <p>The ISIS protocol definition requires that a received LSP with an incorrect data-link checksum be purged by the receiver, which causes the initiator of the packet to regenerate it. However, if a network has a link that causes data corruption and at the same time is delivering LSPs with correct data-link checksums, a continuous cycle of purging and regenerating large numbers of packets can occur. Because this situation could render the network non-functional, use this command to ignore these LSPs rather than purge the packets.</p>
IS Type	<p>Select the IS type here. This is used to configure the routing level for an instance of the ISIS routing process. Options to choose from are:</p> <ul style="list-style-type: none"> • Level-1 - Specifies to perform only Level 1 routing. The Switch will learn only about destinations inside its area. Level 2 routing is performed by the closest Level 1-2 router. • Level-1-2 - Specifies to perform both Level 1 and Level 2 routing. • Level-2 - Specifies to perform only Level 2 routing.
LSP Generation Interval Level-1	<p>Enter the LSP generation interval level-1 value here. This is used to configure the interval of link-state packet generation in level 1 areas only.</p> <p>Use this to reduce the rate of LSP generation during periods of instability in the network. This can help to reduce CPU load on the router and to reduce the number of LSP transmissions to ISIS neighbors.</p> <p>The range is from 1 to 120 seconds.</p> <p>Select the Default option to use the default value.</p>
LSP Generation Interval Level-2	<p>Enter the LSP generation interval level-2 value here. This is used to configure the interval of link-state packet generation in level 2 areas only.</p> <p>Use this to reduce the rate of LSP generation during periods of instability in the network. This can help to reduce CPU load on the router and to reduce the number of LSP transmissions to ISIS neighbors.</p> <p>The range is from 1 to 120 seconds.</p> <p>Select the Default option to use the default value.</p>
LSP Refresh Interval	<p>Enter the LSP refresh interval value here. This is used to configure the interval of link-state packet regeneration.</p> <p>LSPs must be periodically refreshed before their lifetimes expire. The value configured here should be less than the value configured using the Max LSP Lifetime parameter; otherwise, LSPs will time out before they are refreshed. Misconfiguring the LSP lifetime to be too low compared to the LSP refresh interval, will result in the software reducing the LSP refresh interval to prevent the LSPs from timing out.</p> <p>Reducing the refresh interval reduces the amount of time undetected link-state database corruption can persist at the cost of increased link utilization. Increasing the interval reduces the link utilization caused by the flooding of refreshed packets.</p> <p>The range is from 1 to 65535 seconds.</p> <p>Select the Default option to use the default value.</p>
Max Area Addresses	<p>Enter the maximum area addresses value here. Use this to maximize the size of an ISIS area by configuring additional manual addresses.</p> <p>The range is from 3 to 254.</p> <p>Select the Default option to use the default value.</p>
Max LSP Lifetime	<p>Enter the maximum LSP lifetime value here. This is used to configure the maximum lifetime value of link-state packets.</p> <p>The range is from 1 to 65535 seconds.</p> <p>Select the Default option to use the default value.</p>

Parameter	Description
Metric Style	<p>Select the metric style here. This is used to configure the ISIS process generation and metric style acceptance. Options to choose from are:</p> <ul style="list-style-type: none"> • Narrow - Specifies to generate old-style metric TLVs. • Wide - Specifies to generate new-style metric TLVs. • Narrow Transition - Specifies to generate old-style metric TLVs and to accept both old and new-style metric TLVs. • Wide Transition - Specifies to generate new-style metric TLVs and to accept both old and new-style metric TLVs. • Transition - Specifies to generate both old and new-style metric TLVs. <p>Also for each metric style, the level can be selected. Options to choose from are:</p> <ul style="list-style-type: none"> • Level-1 - Specifies to enable this only on level 1 routing. • Level-1-2 - Specifies to enable this on both level 1 and level 2 routing. • Level-2 - Specifies to enable this only on level 2 routing.
Set Overload Bit	<p>Select to enable or disable the set overload bit feature here. This is used to force the ISIS process to set the overload bit in its non-pseudo node LSPs. Normally, the setting of the overload bit is allowed only when a router runs into problems. For example, when a router is experiencing a memory shortage, it might be that the LSPDB isn't complete, resulting in an incomplete or inaccurate routing table. By setting the overload bit in its LSPs, other routers can ignore the unreliable router in their SPF calculations until the router has recovered from its problems.</p>
On Startup	<p>Enter the set overload bit on startup time value here. This specifies to configure the overload bit upon the system when starting up. The overload bit remains configured for the number of seconds specified. The range is from 5 to 86400 seconds.</p>
Suppress	<p>Select the suppress option here. This specifies that the type of prefix identified by the subsequent keyword or keywords will be suppressed. Options to choose from are:</p> <ul style="list-style-type: none"> • None - Specifies that it will not prevent any IP prefixes learned from another ISIS level and from other protocols from being advertised. • Interlevel - Specifies that it will prevent the IP prefixes learned from another ISIS level from being advertised. • External - Specifies that it will prevent the IP prefixes learned from other protocols from being advertised. • Both - Specifies that it will prevent the IP prefixes learned from another ISIS level and from other protocols from being advertised.
SPF Interval Level-1	<p>Enter the SPF interval level-1 value here. This is used to customize ISIS throttling of SPF calculations applied to level-1 areas only. The range is from 1 to 120 seconds.</p> <p>Select the Default option to use the default value.</p>
SPF Interval Level-2	<p>Enter the SPF interval level-2 value here. This is used to customize ISIS throttling of SPF calculations applied to level-2 areas only. The range is from 1 to 120 seconds.</p> <p>Select the Default option to use the default value.</p>
VRF Name	<p>Click the Please Select button to select a pre-configured VRF instance that will be used here.</p> <p>Select the No VRF option to specify that no VRF instance will be used here.</p>

Click the **Apply** button to accept the changes made.

Click the **Back** button to return to the previous window.

After clicking the **Please Select** button, the following page will appear.

Figure 6-214 ISIS Global Settings (Please Select) Window

Select the VRF entry and click the **OK** button to use the selected VRF entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **NET List** button, the following page will appear.

Figure 6-215 ISIS Global Settings (NET List) Window

The fields that can be configured are described below:

Parameter	Description
NET	Enter the NET Network Services Access Point (NSAP) address here. An Intermediate System (IS) is identified by an address known as the NSAP. The NSAP is divided up into three parts as specified by ISO 10589. A NET is an NSAP where the last byte is always the n-selector and is always zero. A NET can be from 8 to 20 bytes in length. Multiple NETs can be configured to merge or split areas. This implementation is just for IP routing only, so the NET must be configured to define the system ID and area ID.

Click the **Apply** button to accept the changes made.

Click the **Back** button to return to the previous window.

Click the **Delete** button to remove the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

ISIS Router Settings

This window is used to display and configure the ISIS router settings.

To view the following window, click **L3 Features > ISIS > ISIS Router Settings**, as shown below:

ISIS Router Settings

ISIS Router Settings

Protocol: IPv4

Area Tag: 16 chars

Adjacency Check: Enabled

Default Information Originate: Disabled

Distance (1-255): Default

Apply

Protocol: IPv4 Area Tag: 16 chars Find

Total Entries: 1

Area Tag	Adjacency Check	Default Information Originate	Distance
Area	Enabled	Disabled	150

Summary Address List

1/1 < < 1 > > Go

Figure 6-216 ISIS Router Settings (IPv4) Window

ISIS Router Settings

ISIS Router Settings

Protocol: IPv6

Area Tag: 16 chars

Adjacency Check: Enabled

Default Information Originate: Disabled

Distance (1-254): Default

Apply

Protocol: IPv6 Area Tag: 16 chars Find

Total Entries: 2

Area Tag	Adjacency Check	Default Information Originate	Distance
1	Enabled	Disabled	116
2	Enabled	Disabled	120

Summary Prefix List

Summary Prefix List

1/1 < < 1 > > Go

Figure 6-217 ISIS Router Settings (IPv6) Window

The fields that can be configured are described below:

Parameter	Description
Protocol	Select the protocol that will be used here. Options to choose from are IPv4 and IPv6 .
Area Tag	Enter the ISIS area tag here. This specifies the tag of a routing process in which the IP interface is enabled. This can be up to 16 characters long.
Adjacency Check	Select to enable or disable the adjacency check feature here. ISIS performs consistency checks on hello packets and forms an adjacency only with a neighboring router that supports the same set of protocols. This is used to enable or disable the check.
Default Information Originate	Select to enable or disable the default information originate feature here. If this enabled, ISIS will generate an advertisement for default routes in its Level-2 Link-State Packets (LSPs).
Distance	Enter the distance value here. This is used to define the administrative distance of ISIS routes. The range is from 1 to 255 for IPv4 ISIS routes and 1 to 254 for IPv6 ISIS routes.

Click the **Apply** button to accept the changes made.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Summary Address List** button to view and configure the summary address list settings.

Click the **Summary Prefix List** button to view and configure the summary prefix list settings.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Summary Address List** button, the following page will appear.

Figure 6-218 ISIS Router Settings (Summary Address List) Window

The fields that can be configured are described below:

Parameter	Description
Summary Address	<p>Select the level and enter the summary addresses here. This is used to create aggregate addresses for ISIS.</p> <p>Multiple groups of addresses can be summarized for a given level. Routes learned from other routing protocols can also be summarized. The metric used to advertise the summary is the smallest metric of all the more specific routes. This command helps reduce the size of the routing table. This command also reduces the size of the link-state packets (LSPs) and thus the link-state database (LSDB). It also helps network stability because a summary advertisement is depending on many more specific routes. A single route flap does not cause the summary advertisement to flap in most cases.</p> <p>The drawback of summary addresses is that other routes might have less information to calculate the most optimal routing table for all individual destinations.</p> <p>Levels to choose from are:</p> <ul style="list-style-type: none"> • Level-1 - Specifies that only routes redistributed into level 1 are summarized with the configured IP address and mask value. • Level-1-2 - Specifies that summary routes are applied when redistributing routes into level 1 and level 2 ISIS and when level 2 ISIS advertises level 1 routes as reachable in its area. • Level-2 - Specifies that routes learned by level 1 routing are summarized into the level 2 backbone with the configured IP address and mask value. Redistributed routes into level-2 ISIS will be summarized also.

Click the **Apply** button to accept the changes made.

Click the **Back** button to return to the previous window.

Click the **Delete** button to remove the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Summary Prefix List** button, the following page will appear.

Figure 6-219 ISIS Router Settings (Summary Prefix List) Window

The fields that can be configured are described below:

Parameter	Description
Summary Prefix	<p>Select the level and enter the summary prefix here.</p> <p>Levels to choose from are:</p> <ul style="list-style-type: none"> • Level-1 - Specifies that only routes redistributed into level 1 are summarized with the configured prefix value. • Level-1-2 - Specifies that summary routes are applied when redistributing routes into level 1 and level 2 ISIS and when level 2 ISIS advertises level 1 routes as reachable in its area. • Level-2 - Specifies that routes learned by level 1 routing are summarized into the level 2 backbone with the configured prefix value. Redistributed routes into level-2 ISIS will be summarized also.

Click the **Apply** button to accept the changes made.

Click the **Back** button to return to the previous window.

Click the **Delete** button to remove the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

ISIS Interface Settings

This window is used to display and configure the ISIS interface settings.

To view the following window, click **L3 Features > ISIS > ISIS Interface Settings**, as shown below:

Figure 6-220 ISIS Interface Settings Window

The fields that can be configured are described below:

Parameter	Description
Interface VLAN	Enter the VLAN ID that will be used here. The range is from 1 to 4094.
IPv4	Select this option to enable the ISIS routing protocol for IPv4 on the interface.
IPv6	Select this option to enable the ISIS routing protocol for IPv6 on the interface.
Area Tag	Enter the ISIS area tag here. This can be up to 16 characters long.

Click the **Apply** button to accept the changes made.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Edit** button to re-configure the specific entry.

Click the **Delete** button to remove the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Edit** button, the following page will appear.

Figure 6-221 ISIS Interface Settings (Edit) Window

The fields that can be configured are described below:

Parameter	Description
Circuit Type	Select the circuit type here. Options to choose from are: <ul style="list-style-type: none"> • Level-1 - Specifies to configure the Switch for Level 1 adjacency only. • Level-1-2 - Specifies to configure the Switch for Level 1 and Level 2 adjacency. • Level-2 - Specifies to configure the Switch for Level 2 adjacency only.
Hello Padding	Select to enable or disable the hello padding feature here. ISIS hello packets are padded to the full maximum transmission unit (MTU) size. Padding ISIS hello packets to the full MTU allows early detection of errors that resulted from transmission problems with large frames or errors that resulted from mismatched MTUs on adjacent interfaces. Disable the hello padding in order to avoid wasting network bandwidth in case the MTU of both interfaces are the same.

Parameter	Description
Mesh Group	<p>Enter the mesh group number here. This is used to optimize Link-State Packet (LSP) flooding on point-to-point networks.</p> <p>Select the Block option to specify that no LSP flooding will take place on this interface.</p> <p>Select the Default option to use the default setting.</p>
Retransmit Interval	<p>Enter the retransmit interval value here. This is used to configure the time between the retransmission of each link-state packet on a point-to-point link. The range is from 1 to 65535 seconds.</p>
Network Point-to-Point	<p>Select to enable or disable the network point-to-point feature here. This is used to configure a network of only two networking devices that use broadcast media and the integrated ISIS routing protocol to function as a point-to-point link instead of a broadcast link.</p>
CSNP Interval Level-1	<p>Enter the time interval value between transmissions of level-1 CSNPs here. This interval only applies to the designated router. The range is from 1 to 65535 seconds.</p> <p>Select the Default option to use the default value.</p>
CSNP Interval Level-2	<p>Enter the time interval value between transmissions of level-2 CSNPs here. This interval only applies to the designated router. The range is from 1 to 65535 seconds.</p> <p>Select the Default option to use the default value.</p>
Hello Interval Level-1	<p>Enter the time interval value between transmissions of level-1 hello packets here. The range is from 1 to 65535 seconds.</p> <p>Select the Default option to use the default value.</p>
Hello Interval Level-2	<p>Enter the time interval value between transmissions of level-2 hello packets here. The range is from 1 to 65535 seconds.</p> <p>Select the Default option to use the default value.</p>
Hello Multiplier Level-1	<p>Enter the hello multiplier level-1 value here. The hello multiplier times the hello interval is equal to the hold time, which is advertised in ISIS hello packets. Using a smaller hello multiplier will get fast convergence. But it can result in more routing instability. When network stability is needed, set the hello multiplier to a larger value. The range is from 2 to 100.</p> <p>Select the Default option to use the default value.</p>
Hello Multiplier Level-2	<p>Enter the hello multiplier level-2 value here. The range is from 2 to 100.</p> <p>Select the Default option to use the default value.</p>
Metric Level-1	<p>Enter the ISIS metric value here. This is assigned to the link and used to calculate the cost from each router via the links in the network to other destinations. This metric should be used only in the SPF calculation for Level 1 routing. The range is from 1 to 63.</p> <p>Select the Default option to use the default value.</p>
Metric Level-2	<p>Enter the ISIS metric value here. This is assigned to the link and used to calculate the cost from each router via the links in the network to other destinations. This metric should be used only in the SPF calculation for Level 2 routing. The range is from 1 to 63.</p> <p>Select the Default option to use the default value.</p>
Password Level-1	<p>Enter the ISIS password used in level-1 routing here. This enables the prevention of unauthorized routers from forming adjacencies with this router, and thus protects the network from intruders. The password is exchanged as plain text and thus provides only limited security. This can be up to 16 characters long.</p> <p>Select the Default option to use the default setting.</p>
Password Level-2	<p>Enter the ISIS password used in level-2 routing here. This can be up to 16 characters long.</p> <p>Select the Default option to use the default setting.</p>

Parameter	Description
Priority Level-1	<p>Enter the priority value of a Switch used in level-1 routing here. The priority is used to determine which router on a LAN will be the DIS. The priority is advertised in the hello packets. The device with the highest priority will become the DIS.</p> <p>In ISIS, there is no backup designated router. Setting the priority to 0 lowers the chance of this system becoming the DIS, but does not prevent it. If a system with a higher priority comes up, it will take over the role from the current DIS. In the case of equal priorities, the highest MAC address breaks the tie.</p> <p>The range is from 0 to 127.</p> <p>Select the Default option to use the default value.</p>
Priority Level-2	<p>Enter the priority value of a Switch used in level-2 routing here. The range is from 0 to 127.</p> <p>Select the Default option to use the default value.</p>
Wide Metric Level-1	<p>Enter the wider metric value that is assigned to the link and used to calculate the cost from other routers via the links in the network to other destinations for level-1 routing here. The range is from 1 to 16777214.</p> <p>Select the Default option to use the default value.</p>
Wide Metric Level-2	<p>Enter the wider metric value that is assigned to the link and used to calculate the cost from other routers via the links in the network to other destinations for level-2 routing here. The range is from 1 to 16777214.</p> <p>Select the Default option to use the default value.</p>

Click the **Apply** button to accept the changes made.

Click the **Back** button to return to the previous window.

ISIS Redistribute Settings

This window is used to display and configure the ISIS redistribute settings. This is used to redistribute other protocol routes into the ISIS routing domain.

To view the following window, click **L3 Features > ISIS > ISIS Redistribute Settings**, as shown below:

ISIS Redistribute Settings

ISIS Redistribute Settings

Protocol: IPv4
Area Tag: 16 chars
Redistribute Type: Connected
Metric (1-63):
Metric Type: None
Route Map: 16 chars
Level: Level-2 Only

Apply Delete

Protocol: IPv4 Area Tag: 16 chars Find

Total Entries: 1

Area Tag	Protocol	Metric	Metric Type	Route Map	Level
Area	Connected	10	Internal	Route-Map	Level-2

1/1 < < 1 > > Go

Figure 6-222 ISIS Redistribute Settings Window

The fields that can be configured are described below:

Parameter	Description
Protocol	Select the protocol that will be used here. Options to choose from are IPv4 and IPv6 .
Area Tag	Enter the ISIS area tag here. This can be up to 16 characters long.
Redistribute Type	Select the redistribution type here. Options to choose from are: <ul style="list-style-type: none"> • Connected - Specifies to redistribute connected routes into ISIS. • Static - Specifies to redistribute static routes into ISIS. • RIP - Specifies to redistribute RIP routes into ISIS. • OSPF - Specifies to redistribute OSPF routes into ISIS • BGP - Specifies to redistribute BGP routes into ISIS.
Metric	Enter the metric value of the redistributed routes here. The range is from 1 to 63.
Metric Type	Select the metric type of the redistributed routes here. Options to choose from are: <ul style="list-style-type: none"> • None - The metric type is not specified. • Internal - The redistributed routes advertised with internal metrics. • External - The redistributed routes advertised with external metrics.
Route Map	Enter the name of the route map that will be used here. This name can be up to 32 characters long.
Level	Select the routing level that will be used here. Options to choose from are Level-1 , Level-1-2 , and Level-2 Only .

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove a specific entry based on the information entered.

Click the **Find** button to locate a specific entry based on the information entered.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

ISIS Redistribute ISIS Settings

This window is used to display and configure the redistribute ISIS settings. This is used to redistribute ISIS routes from level 1 into level 2 and vice versa.

To view the following window, click **L3 Features > ISIS > ISIS Redistribute ISIS Settings**, as shown below:

The screenshot shows the 'ISIS Redistribute ISIS Settings' window. It features a form with the following fields and controls:

- Protocol:** A dropdown menu set to 'IPv4'.
- Area Tag:** A text input field containing '16 chars'.
- From:** A dropdown menu set to 'Level-1'.
- Into:** A dropdown menu set to 'Level-2'.
- Distribute List:** A text input field containing '32 chars'.
- Buttons:** 'Apply' and 'Find' buttons are located to the right of the input fields.
- Table:** A table titled 'Total Entries: 1' with columns: 'Area Tag', 'From', 'Into', 'Distribute List', and 'Delete'. The table contains one row with values: 'Area', 'Level-1', 'Level-2', 'Distribute', and a 'Delete' button.
- Footer:** A pagination control showing '1/1' and a 'Go' button.

Figure 6-223 ISIS Redistribute ISIS Settings Window

The fields that can be configured are described below:

Parameter	Description
Protocol	Select the protocol that will be used here. Options to choose from are IPv4 and IPv6 .
Area Tag	Enter the ISIS area tag here. This can be up to 16 characters long.
From	Select the level of the routes that will be redistributed from here. Options to choose from are Level-1 and Level-2 .
Into	Select the level of the routes that will be redistributed to here. Options to choose from are Level-1 and Level-2 .
Distribute List	Enter the name of the distribution list here. This name can be up to 32 characters long.

Click the **Apply** button to accept the changes made.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Delete** button to remove the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

ISIS Route Table

This window is used to view the ISIS route table.

To view the following window, click **L3 Features > ISIS > ISIS Route Table**, as shown below:

Figure 6-224 ISIS Route Table Window

The fields that can be configured are described below:

Parameter	Description
Protocol	Select the protocol that will be used in the display here. Options to choose from are: <ul style="list-style-type: none"> IPv4 - Specifies to display the ISIS IPv4 routing table information. IPv6 - Specifies to display the ISIS IPv6 routing table information.
Area Tag	Enter the ISIS area tag that will be used in this display here. This can be up to 16 characters long.

Click the **Find** button to locate a specific entry based on the information entered.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

ISIS Database

This window is used to view the ISIS LSPs database.

To view the following window, click **L3 Features > ISIS > ISIS Database**, as shown below:

The screenshot shows the 'ISIS Database' window with the following search filters: Area Tag (16 chars), Level (Level-1), and LSP ID (0001.0001.0001.00-00). A 'Find' button is present. Below the filters, it indicates 'Total Entries: 2'. A table displays the following data:

Area Tag	Level	LSP ID	LSP Seq Num	LSP Checksum	LSP Holdtime	ATT/P/OL	
(null)	level-1	Switch.00-00	* 0x00000009	0xF844	1152	0/0/0	Show Detail
	level-2	Switch.00-00	* 0x0000000D	0x4165	521	0/0/0	Show Detail

Navigation controls at the bottom include page numbers (1/1), navigation arrows, and a 'Go' button.

Figure 6-225 ISIS Database Window

The fields that can be configured are described below:

Parameter	Description
Area Tag	Enter the ISIS area tag that will be used in this display here. This can be up to 16 characters long.
Level	Select the routing level that will be used here. Options to choose from are Level-1 and Level-2 .
LSP ID	Enter LSP ID that will be used in the display here. This specifies to display the contents of a single LSP by its ID number.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show Detail** button to view detailed information for the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Show Detail** button, the following page will appear.

The screenshot shows the 'ISIS Database Detail' window with the following information:

Auth	Length: 8
Area Address	49.0001
NLPID	0xCC 0x8E
Hostname	Switch
IP Address	107.100.0.1
IPv6 Address	2107:100:A::1
Metric	10 IP 107.100.0.0 255.255.0.0
Metric	10 IPv6 2107:100:A::/64
Metric	10 IPv6 1234::/64

A 'Back' button is located at the bottom right of the window.

Figure 6-226 ISIS Database (Show Detail) Window

Click the **Back** button to return to the previous window.

ISIS Topology

This window is used to view the ISIS path to the Intermediate System.

To view the following window, click **L3 Features > ISIS > ISIS Topology**, as shown below:

Figure 6-227 ISIS Topology Window

The fields that can be configured are described below:

Parameter	Description
Protocol	Select the protocol that will be used in the display here. Options to choose from are: <ul style="list-style-type: none"> • IPv4 - Specifies to display the ISIS IPv4 routing table information. • IPv6 - Specifies to display the ISIS IPv6 routing table information.
Area Tag	Enter the ISIS area tag that will be used in this display here. This can be up to 16 characters long.
Level	Select the routing level that will be used here. Options to choose from are Level-1 and Level-2 .

Click the **Find** button to locate a specific entry based on the information entered.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

ISIS Hostname

This window is used to view the router-name-to-system-ID mapping table entries for ISIS.


To view the following window, click **L3 Features > ISIS > ISIS Hostname**, as shown below:

Figure 6-228 ISIS Hostname Window

ISIS Neighbors

This window is used to view the ISIS neighbors' information.

To view the following window, click **L3 Features > ISIS > ISIS Neighbors**, as shown below:

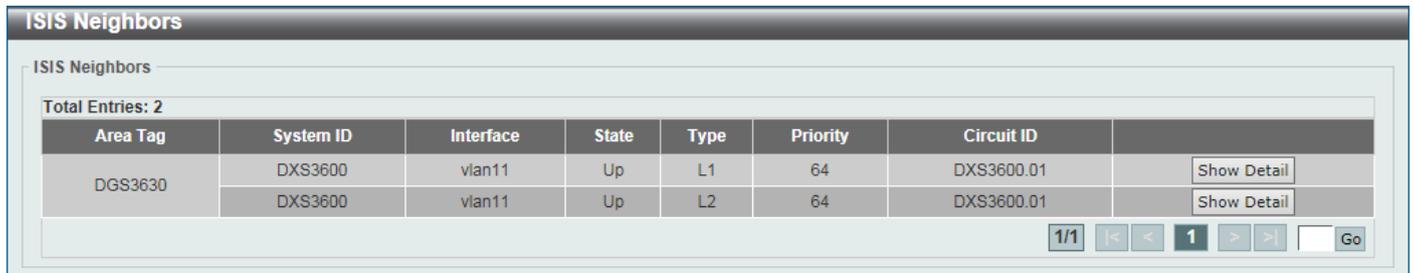

ISIS Neighbors

ISIS Neighbors

Total Entries: 2

Area Tag	System ID	Interface	State	Type	Priority	Circuit ID	
DGS3630	DXS3600	vlan11	Up	L1	64	DXS3600.01	Show Detail
	DXS3600	vlan11	Up	L2	64	DXS3600.01	Show Detail


1/1 < < 1 > > Go

Figure 6-229 ISIS Neighbors Window

Click the **Show Detail** button to view more detailed information about the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Show Detail** button, the following page will appear.

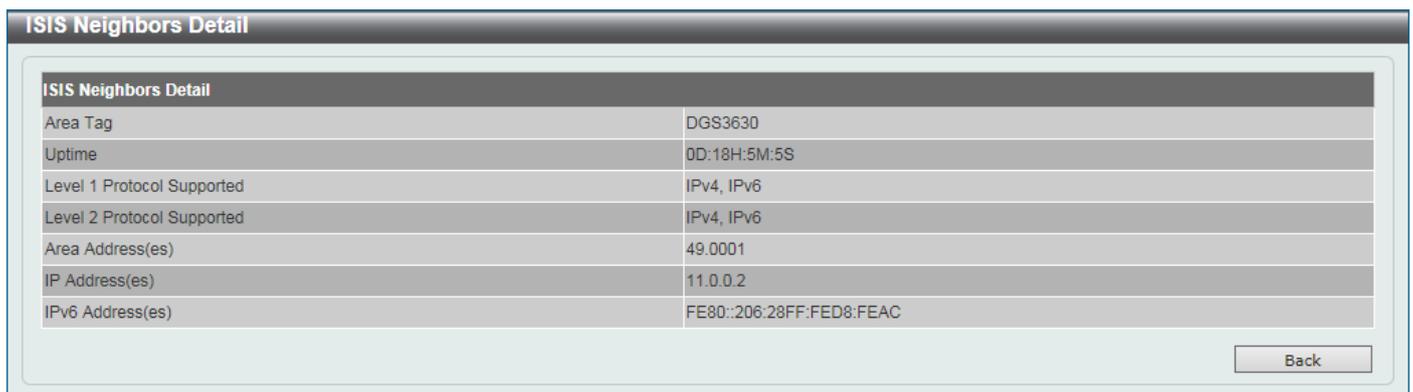

ISIS Neighbors Detail

ISIS Neighbors Detail

Area Tag	DGS3630
Uptime	0D:18H:5M:5S
Level 1 Protocol Supported	IPv4, IPv6
Level 2 Protocol Supported	IPv4, IPv6
Area Address(es)	49.0001
IP Address(es)	11.0.0.2
IPv6 Address(es)	FE80::206:28FF:FED8:FEAC

Back

Figure 6-230 ISIS Neighbors (Show Detail) Window

Click the **Back** button to return to the previous window.

IP Route Filter

IP Prefix List

This window is used to display and configure the IP route filter prefix list settings.

To view the following window, click **L3 Features > IP Route Filter > IP Prefix List**, as shown below:

Figure 6-231 IP Prefix List Window

The fields that can be configured are described below:

Parameter	Description
List Name	Enter the IP prefix list name here. This name can be up to 32 characters long.
Direction	Select the direction for this rule here. Options to choose from are: <ul style="list-style-type: none"> • Permit - Specifies that routes that match the rule entry are permitted. • Deny - Specifies that routes that match the rule entry are denied.
Sequence ID	Enter the sequence ID for this rule here. The range is from 1 to 65535.
IP Network Address	Enter the starting and ending IPv4 addresses in the range used here.
IPv6 Network Address	Enter the IPv6 address and prefix length here.
GE	Enter the minimum prefix length of the route that can be matched here. The range is from 1 to 32 for IPv4 and 1 to 128 for IPv6.
LE	Enter the maximum prefix length of the route that can be matched here. The range is from 1 to 32 for IPv4 and 1 to 128 for IPv6.

Click the **Apply** button to accept the changes made.

Click the **Clear** button to clear the information associated with the IP prefix list entered.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Clear IP All** button to clear all the IP information associated with all IP prefix lists.

Click the **Clear IPv6 All** button to clear all the IPv6 information associated with all IP prefix lists.

Click the **Edit** button in the table to re-configure the specific entry.

Click the **Clear** button in the table to clear the information associated with the specific entry.

Click the **Delete** button to remove the specific entry.

Click the **Clear By Network** button in the table to clear the information associated with the network.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

Route Map

This window is used to display and configure the route map settings.

To view the following window, click **L3 Features > IP Route Filter > Route Map**, as shown below:

Figure 6-232 Route Map Window

The fields that can be configured are described below:

Parameter	Description
Route Map Name	Enter the route map name here. This name can be up to 16 characters long.
Direction	Select the direction for this rule here. Options to choose from are Permit and Deny . <ul style="list-style-type: none"> • Permit - Specifies that routes that match the rule entry are permitted. • Deny - Specifies that routes that match the rule entry are denied.
Sequence ID	Enter the sequence ID for this rule here. The range is from 1 to 65535.

Click the **Apply** button to accept the changes made.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Edit** button to modify the specified entry.

Click the **Delete** button to delete the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Edit** button in the **Match Clauses** column, the following page will appear.

Route Map: Route, Permit, Sequence 1 Match Clauses

Action: Add

Interface Name

IP Address Prefix List (32 chars)

IP Address ACL (32 chars)

IPv6 Address Prefix List (32 chars)

IPv6 Address ACL (32 chars)

IP Next Hop Prefix List (32 chars)

IP Next Hop ACL (32 chars)

IPv6 Next Hop Prefix List (32 chars)

IPv6 Next Hop ACL (32 chars)

AS Path (16 chars)

Community (16 chars) Exact

Extcommunity (16 chars)

Route Source (32 chars)

Metric (0-4294967294)

Route Type: Internal

Apply

Route Map Detail Information

route-type	internal
------------	----------

Back

Figure 6-233 Route Map (Match Clauses, Edit) Window

The fields that can be configured are described below:

Parameter	Description
Action	Select Add to add a new entry based in the information entered. Select Delete to delete an entry based in the information entered.
Interface Name	Select and enter the interface name that will be used here. This option is used to define a clause to match the route's outgoing interface.
IP Address Prefix List	Select and enter the name of the IP prefix list here. This option is used to define a clause to match the route based on the IP prefix list. This string can be up to 32 characters long.
IP Address ACL	Select and enter the standard or extended IP access list name here. This option is used to define a clause to match the route based on the standard or extended IP access list. This string can be up to 32 characters long.
IPv6 Address Prefix List	Select and enter the name of the IPv6 prefix list here. This option is used to define a clause to match the route based on the IPv6 prefix list. This string can be up to 32 characters long.
IPv6 Address ACL	Select and enter the standard or extended IPv6 access list name here. This option is used to define a clause to match the route based on the standard or extended IPv6 access list. This string can be up to 32 characters long.
IP Next Hop Prefix List	Select and enter the name of the next hop IP prefix list here. This option is used to define a clause to match the route's next hop based on the next hop IP prefix list. This string can be up to 32 characters long.
IP Next Hop ACL	Select and enter the standard IP access list name here. This option is used to define a clause to match the route's next hop based on the standard IP access list. This string can be up to 32 characters long.
IPv6 Next Hop Prefix List	Select and enter the name of the next hop IPv6 prefix list here. This option is used to define a clause to match the route's next hop based on the next hop IPv6 prefix list. This string can be up to 32 characters long.
IPv6 Next Hop ACL	Select and enter the standard IPv6 access list name here. This option is used to define a clause to match the route's next hop based on the standard IPv6 access list. This string can be up to 32 characters long.
AS Path	Select and enter the standard or extended IP/IPv6 access list name here. This option is used to define a clause to match the route's AS path based on the

Parameter	Description
	standard or extended IP/IPv6 access list. This string can be up to 16 characters long.
Community	Select and enter the standard or extended IP/IPv6 access list name here. This option is used to define a clause to match the route's community based on the standard or extended IP/IPv6 access list. This string can be up to 16 characters long. Select the Exact option to specify that an exact match is required. All of the communities and only those communities specified must be present.
Extcommunity	Select and enter the standard or extended IP/IPv6 access list name here. This option is used to define a clause to match the route's extended community based on the standard or extended IP/IPv6 access list. This string can be up to 16 characters long.
Route Source	Select and enter the standard or extended IP/IPv6 access list name here. This option is used to define a clause to match the route's source based on the standard or extended IP/IPv6 access list. This string can be up to 32 characters long.
Metric	Select and enter the metric value of the route here. The range is from 0 to 4294967294. This option is used to define a clause to match the route metric.
Route Type	Select the route type here. Options to choose from are Internal , External , External Type-1 , and External Type-2 . <ul style="list-style-type: none"> • Internal - Specifies the intra-area and inter-area routes of Open Shortest Path First (OSPF). • External - Specifies the autonomous system's external route of OSPF. If the type-1 and type-2 options are not specified, type-1 and type-2 external routes are included. • External Type-1 - Specifies the type-1 external route of OSPF. • External Type-2 - Specifies the type-2 external route of OSPF.

Click the **Apply** button to accept the changes made.

Click the **Back** button to return to the previous window.

After clicking the **Edit** button in the **Set Clauses** column, the following page will appear.

Figure 6-234 Route Map (Set Clauses, Edit) Window

The fields that can be configured are described below:

Parameter	Description
Action	Select Add to add a new entry based in the information entered. Select Delete to delete an entry based in the information entered.
IP Default Next Hop	Enter the default next-hop IP address in the space provided that will be used to route the packet. This feature can be used to specify multiple default next hop routers. If default next hops are already configured, the default next hops configured later will be added to the default next hop list. When the first default next hop router specified is down, the next default next hop router specified is tried in turn to route the packet. Up to 16 default next-hop IP addresses can be entered.
IP Next Hop	Select the IP next hop type here. This feature is used to configure the next-hop router to route the packet that passes the match clauses of the configured route map sequence. Options to choose from are IP Address , Peer Address , and Recursive . <ul style="list-style-type: none"> • IP Address - Specifies the IP addresses of the next-hops to route the packet. Enter the next-hop IP addresses in the spaces provided here. Up to 16 next-hop IP addresses can be entered. • Peer Address - Specifies the BGP peer address as the next-hop. • Recursive - Specifies the IP address of the recursive as the next-hop router. Enter the recursive next-hop IP address in the space provided here.
IPv6 Default Next Hop	Enter the default next-hop IPv6 address in the space provided that will be used to route the packet. This feature can be used to specify multiple default next hop routers. If default next hops are already configured, the default next hops configured later will be added to the default next hop list. When the first default next hop router specified is down, the next default next hop router specified is tried in turn to route the packet. Up to 16 default next-hop IPv6 addresses can be entered.

Parameter	Description
IPv6 Next Hop	Select the IPv6 next hop type here. This feature is used to configure the next-hop router to route the packet that passes the match clauses of the configured route map sequence. Options to choose from are: <ul style="list-style-type: none"> • IP Address - Specifies the IPv6 addresses of the next-hops to route the packet. Enter the next-hop IPv6 addresses in the space provided here. • Recursive - Specifies the IPv6 address of the recursive as the next-hop router. Enter the recursive next-hop IPv6 address in the space provided here.
Community	Select the community option here that will be used in the set match rule. Options to choose from are: <ul style="list-style-type: none"> • Community String - Select and enter the community string here. It can be a user-specified number represented by AA:NN, where AA (AS number) is the upper part of the word and NN (community number, user-specified) is the lower part of the word. Multiple numbers (separated by comma) can be specified. • Internet - Specifies routes free to be advertised to all peers. • No Export - Specifies not to advertise to external peers. • No Advertise - Specifies not to advertise the route to other BGP peers. • Local AS - Specifies not to send out of the local AS or sub autonomous system of a confederation. • Additive - Specifies to add the specified community to the existing communities.
Local Preference	Enter the local preference number here. The local preference number is used to control the preferred exit point from the local AS to the same destination network. The range is from 0 to 4294967295.
IP Precedence	Select the IP precedence option here. Options to choose from are Routine, Priority, Immediate, Flash, Flash Override, Critical, Internet, and Network . Use this feature to set the precedence value in the IP header. This option only takes effect when policy routing involves the IPv4 packet.
IPv6 Precedence	Select the IPv6 precedence option here. Options to choose from are Routine, Priority, Immediate, Flash, Flash Override, Critical, Internet, and Network . Use this feature to set the precedence value in the IPv6 header. This option only takes effect when policy routing involves the IPv6 packet.
Metric	Select and enter the metric value here that will be used in the modification. The range is from 0 to 4294967294.
Metric Type	Select the metric type here that will be used in the modification. Options to choose from are Type-1 and Type-2 . <ul style="list-style-type: none"> • Type-1 - Specifies to use the OSPF external type-1 metric. • Type-2 - Specifies to use the OSPF external type-2 metric.
Origin	Select the origin option here that will be used in the modification. Options to choose from are: <ul style="list-style-type: none"> • IGP - Specifies that the prefix is originated from an Interior Gateway Protocol. • EGP - Specifies that the prefix is originated from an Exterior Gateway Protocol. • Incomplete - Specifies that the prefix is originated from an unknown source.
Weight	Select and enter the weight value here that will be used in the modification. The range is from 0 to 65535.
AS Path	Select and enter the AS path value here that will be used in the modification.
Dampening	Select and enter the dampening values here. There are 5 places where we can enter value here. They are listed below in order from top to bottom:

Parameter	Description
	<ul style="list-style-type: none"> • Half Life Time - Enter the half-life time value here after which the penalty of the reachable routes is decreased by half. The range is from 1 to 45 minutes. • Reuse Value - Enter the re-use value here. This specifies that if the penalty of a route is lower than this value, the route is unsuppressed. The range is 1 to 20000. • Suppress Value - Enter the suppress value here. This specifies that if the penalty of a route is higher than this value, the route is suppressed. The range is from 1 to 20000. • Max Suppress Time - Enter the maximum suppress time value here that a route can be suppressed. The range is from 1 to 255 minutes. • Unreachable Route's Half Life - Enter the unreachability half-life time value here after which the penalty of the unreachable routes is decreased by half. The range is from 1 to 45 minutes.

Click the **Apply** button to accept the changes made.

Click the **Back** button to return to the previous window.

Policy Route

This window is used to display and configure the policy route settings.

To view the following window, click **L3 Features > Policy Route**, as shown below:

Figure 6-235 Policy Route Window

The fields that can be configured are described below:

Parameter	Description
Type	Select the policy route type here. Options to choose from are IP Policy and IPv6 Policy .

Click the **Edit** button to modify the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Edit** button, the following page will appear.

Figure 6-236 Policy Route (Edit) Window

The fields that can be configured are described below:

Parameter	Description
Route Map	Enter the route map name here that will be used in this policy route entry.

Click the **Apply** button to accept the changes made.

VRRP Settings

This window is used to display and configure the Virtual Router Redundancy Protocol (VRRP) settings. All routers in the same VRRP group must be configured with the same virtual router ID and IP address.

A virtual router group is represented by a virtual router ID. The IP address of the virtual router is the default router configured on hosts. The virtual router's IP address can be a real address configured on the routers, or an unused IP address. If the virtual router address is a real IP address, the router that has this IP address is the IP address owner.

A master will be elected in a group of routers that supports the same virtual routers. Others are the backup routers. The master is responsible for forwarding the packets that are sent to the virtual router.

To view the following window, click **L3 Features > VRRP Settings**, as shown below:

Figure 6-237 VRRP Settings Window

The fields that can be configured in **VRRP Settings** are described below:

Parameter	Description
SNMP Server Traps VRRP New Master	Select to enable or disable the SNMP server traps feature for the new VRRP master. If enabled, once the device has transitioned to the master state, a trap will be sent out.
SNMP Server Traps VRRP Auth Fail	Select to enable or disable the SNMP server traps feature for authentication failures. If enabled, if a packet has been received from a router whose authentication key or authentication type conflicts with this router's authentication key or authentication type, then a trap will be sent out.
Non-owner-ping Response	Select to enable or disable the non-owner ping response feature here. This feature is used to enable the virtual router in the master state to respond to ICMP echo requests for an IP address not owned but associated with this virtual router.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Virtual Router Settings** are described below:

Parameter	Description
VLAN	Enter the VLAN interface ID used here. The range is from 1 to 4094.
VRID	Enter the ID of the virtual router that will be created here. This ID is used to identify the virtual router in the VRRP group. The range is from 1 to 255.
Virtual IP Address	Enter the IPv4 address for the created virtual router group here.
VRRP Authentication	Select to enable and then enter the plain text authentication password for VRRP authentication on the interface here. This string can be up to 8 characters long. The authentication is applied to all virtual routers on this interface. The devices in the same VRRP group must have the same authentication password.
Interface Name	Enter the interface name used here. This name can be up to 12 characters long.
VRID	Enter the ID of the virtual router that will be displayed here. The range is from 1 to 255.

Click the **Apply** button to accept the changes made.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Edit** button to modify the specified entry.

Click the **Delete** button to delete the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Edit** button, the following page will appear.

VRRP Virtual Router Settings	
vlan1 - Group 1	
State	Init
Virtual IP Address	192.168.70.254
Virtual MAC Address	00-00-5E-00-01-01
Advertisement Interval (1-255)	1 sec
Preemption	Enabled
Priority (1-254)	100
BFD Remote IP	. . .
Master Router	10.90.90.90
Critical IP Address	. . .
Authentication	. . .
Shutdown	Disabled

Figure 6-238 VRRP Settings (Edit) Window

The fields that can be configured are described below:

Parameter	Description
Advertisement Interval	Enter the advertisement interval value here. This is the time interval between successive VRRP advertisements by the master router. The range is from 1 to 255 seconds. By default, this value is 1 second.
Preemption	Select to enable or disable the preemption feature here. This feature is used to allow a router to take over the master role if it has a better priority than the current master.
Priority	Enter the priority value here. The range is from 1 to 254.
BFD Remote IP	Enter the Bidirectional Forwarding Detection (BFD) remote IP address here. This IP address must be a real IP address of a real device in the same VRRP virtual group. A BFD session will be created between this VRRP router and its peer. When the session goes down, if the VRRP is in the backup state, it will Switch to master fast.
Critical IP Address	Enter the critical IPv4 address here. If the critical IP is configured on one virtual router, the virtual router cannot be activated when the critical IP address is unreachable. One VRRP group can only track one critical IP.
Shutdown	Select to enable or disable the shutdown feature here. This feature is used to disable a virtual router on an interface. Avoid the common mistake of shutting down the IP address owner router before shutting down other non-owner routers.

Click the **Back** button to return to the previous window.

Click the **Apply** button to accept the changes made.

VRRPv3 Settings

This window is used to display and configure the VRRP version 3 (VRRPv3) settings.

To view the following window, click **L3 Features > VRRPv3 Settings**, as shown below:

VRRPv3 Settings

VRRPv3 Settings

VLAN(1-4094)

VRID (1-255)

Address Family

Interface Name Vrid (1-255) Address Family

Total Entries: 1

Interface	VRID	Version	Address Family	Priority	Owner	Preemption	State	Virtual Router IP	
vian1	2	3	IPv4	100		Y	Init	0.0.0.0	<input type="button" value="Edit"/> <input type="button" value="Delete"/>

1/1

Figure 6-239 VRRPv3 Settings Window

The fields that can be configured are described below:

Parameter	Description
VLAN	Enter the ID of the VLAN interface that will be used here. The range is from 1 to 4094.
VRID	Enter the ID of the virtual router that will be created here. The range is from 1 to 255.
Address Family	Select the address family used here. Options to choose from are: <ul style="list-style-type: none"> • IPv4 - Specifies to create an IPv4 virtual router. • IPv6 - Specifies to create an IPv6 virtual router.
Interface Name	Enter the name of the VLAN interface that will be used in the display here. This string can be up to 12 characters long.
VRID	Enter the ID of the virtual router that will be displayed here. The range is from 1 to 255.
Address Family	Select the address family that will be used in the display here. Options to choose from are: <ul style="list-style-type: none"> • All - Specifies to display all virtual routers. • IPv4 - Specifies to display IPv4 virtual routers only. • IPv6 - Specifies to display IPv6 virtual routers only.

Click the **Apply** button to accept the changes made.

Click the **Find** button to find and display an entry based on the information entered.

Click the **Edit** button to configure more detailed settings of the specified entry.

Click the **Delete** button to delete the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Edit** button next to the **IPv4 Address Family** entry, the following window will appear:

Figure 6-240 VRRPv3 Settings (Edit, IPv4) Window

The fields that can be configured are described below:

Parameter	Description
Virtual IP Address	Enter the virtual IPv4 address here. All routers in the same VRRP group must be configured with the same virtual router ID and virtual address. The IPv4 address of the virtual router can be a real address configured on the routers or an unused address. If the virtual address is equal to the real address of the interface, this virtual router is the IPv4 address owner.
Advertisement Interval	Enter the time interval value between successive advertisements by the master router here. The range is from 1 to 255 seconds. The master will constantly send VRRP advertisements. All virtual routers in a VRRP group must use the same timer values.
Preemption	Select to enable or disable the preemption feature here. This is used to allow a router to take over the master role if it has a better priority than the current master.
Priority	Enter the priority value of the virtual router here. The range is from 1 to 254. The master of a VRRP group is elected based on the priority. The virtual router with the highest priority becomes the master and others with lower priorities act as the backup for the VRRP group. If there are multiple routers with the same highest priority value, the router with the larger IPv4 address will become the Master. The router that is the IPv4 address owner of the VRRP group is always the master of the VRRP group, and has the highest priority of 255.
Critical IP Address	Enter the critical IPv4 address here. If the critical IPv4 is configured on one virtual router, the virtual router cannot be activated when the critical IPv4 address is unreachable. One VRRP group can only track one critical IPv4 address.
Non-owner ping	Select to enable or disable the non-owner ping feature here. This is used to enable a non-IPv4 address owner virtual router in the master state to respond to ICMP echo requests for IPv4 addresses.
Shutdown	Select to enable or disable the shutdown feature here. Avoid the common mistake of shutting down the IPv4 address owner routers before shutting down other non-owner routers.

Click the **Back** button to return to the previous window.

Click the **Apply** button to accept the changes made.

After clicking the **Edit** button next to the **IPv6 Address Family** entry, the following window will appear:

Figure 6-241 VRRPv3 Settings (Edit, IPv6) Window

The fields that can be configured are described below:

Parameter	Description
Virtual IPv6 Address	Enter the virtual IPv6 address here. All routers in the same VRRP group must be configured with the same virtual router ID and virtual address. The IPv6 address of the virtual router can be a real address configured on the routers or an unused address. If the virtual address is equal to the real address of the interface, this virtual router is the IPv6 address owner.
Advertisement Interval	Enter the time interval value between successive advertisements by the master router here. The range is from 1 to 255 seconds. The master will constantly send VRRP advertisements. All virtual routers in a VRRP group must use the same timer values.
Preemption	Select to enable or disable the preemption feature here. This is used to allow a router to take over the master role if it has a better priority than the current master.
Priority	Enter the priority value of the virtual router here. The range is from 1 to 254. The master of a VRRP group is elected based on the priority. The virtual router with the highest priority becomes the master and others with lower priorities act as the backup for the VRRP group. If there are multiple routers with the same highest priority value, the router with the larger IP address will become the Master. The router that is the IPv6 address owner of the VRRP group is always the master of the VRRP group, and has the highest priority of 255.
Critical IPv6 Address	Enter the critical IPv6 address here. If the critical IPv6 is configured on one virtual router, the virtual router cannot be activated when the critical IPv6 address is unreachable. One VRRP group can only track one critical IPv6 address.
Non-owner ping	Select to enable or disable the non-owner ping feature here. This is used to enable a non-IPv6 address owner virtual router in the master state to respond to ND requests for IPv6 addresses.
Shutdown	Select to enable or disable the shutdown feature here. Avoid the common mistake of shutting down the IPv6 address owner routers before shutting down other non-owner routers.

Click the **Back** button to return to the previous window.

Click the **Apply** button to accept the changes made.

7. Quality of Service (QoS)

[Basic Settings](#)
[Advanced Settings](#)
[QoS PFC](#)
[WRED](#)
[iSCSI](#)

Basic Settings

Port Default CoS

This window is used to display and configure the port default CoS settings.

To view the following window, click **QoS > Basic Settings > Port Default CoS**, as shown below:

Port	Default CoS	Override
eth1/0/1	0	No
eth1/0/2	0	No
eth1/0/3	0	No
eth1/0/4	0	No
eth1/0/5	0	No
eth1/0/6	0	No

Figure 7-1 Port Default CoS Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the range of ports that will be used for this configuration here.
Default CoS	Select the default CoS option for the port(s) specified here. Options to choose from are 0 to 7. Select the Override option to override the CoS of the packets. The default CoS will be applied to all incoming packets, tagged or untagged, received by the port. Select the None option to specify that the CoS of the packets will be the packet's CoS if the packets are tagged, and will be the port default CoS if the packet is untagged.

Click the **Apply** button to accept the changes made.

Port Scheduler Method

This window is used to display and configure the port scheduler method settings.

To view the following window, click **QoS > Basic Settings > Port Scheduler Method**, as shown below:

Unit	From Port	To Port	Scheduler Method
1	eth1/0/1	eth1/0/1	WRR

Unit 1 Settings	
Port	Scheduler Method
eth1/0/1	WRR
eth1/0/2	WRR
eth1/0/3	WRR
eth1/0/4	WRR
eth1/0/5	WRR
eth1/0/6	WRR
eth1/0/7	WRR

Figure 7-2 Port Scheduler Method Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the range of ports that will be used for this configuration here.
Scheduler Method	<p>Select the scheduler method that will be applied to the specified port(s). Options to choose from are Strict Priority (SP), Round-Robin (RR), Weighted Round-Robin (WRR), and Weighted Deficit Round-Robin (WDRR). By default, the output queue scheduling algorithm is WRR.</p> <ul style="list-style-type: none"> • Strict Priority (SP) specifies that all queues use strict priority scheduling. It provides strict priority access to the queues from the highest CoS queue to the lowest. • Round-Robin (RR) specifies that all queues use round-robin scheduling. It provides fair access to service a single packet at each queue before moving on to the next one. • Weighted Round-Robin (WRR) operates by transmitting permitted packets into the transmit queue in a round robin order. Initially, each queue sets its weight to a configurable weighting. Every time a packet from a higher priority CoS queue is sent, the corresponding weight is subtracted by 1 and the packet in the next lower CoS queue will be serviced. When the weight of a CoS queue reaches zero, the queue will not be serviced until its weight is replenished. When weights of all CoS queues reach 0, the weights get replenished at a time. • Weighted Deficit Round-Robin (WDRR) operates by serving an accumulated set of backlogged credits in the transmit queue in a round robin order. Initially, each queue sets its credit counter to a configurable quantum value. Every time a packet from a CoS queue is sent, the size of the packet is subtracted from the corresponding credit counter and the service right is turned over to the next lower CoS queue. When the credit counter drops below 0, the queue is no longer serviced until its credits are replenished. When the credit counters of all CoS queues reaches 0, the credit counters will be replenished at that time. All packets are serviced until their credit counter is zero or negative and the last packet is transmitted completely. When this condition happens, the credits are replenished. When the credits are replenished, a quantum of credits are added to each CoS queue credit counter. The quantum for each CoS queue may be different based on the user configuration. To set a CoS queue in the SP mode, any higher priority CoS queue must also be in the strict priority mode.

Click the **Apply** button to accept the changes made.

Queue Settings

This window is used to display and configure the queue settings.

To view the following window, click **QoS > Basic Settings > Queue Settings**, as shown below:

The screenshot shows the 'Queue Settings' window. At the top, there are configuration fields: Unit (1), From Port (eth1/0/1), To Port (eth1/0/1), Queue ID (0), WRR Weight (0-127), and WDRR Quantum (0-127). An 'Apply' button is located to the right of these fields. Below the form is a table titled 'Unit 1 Settings' with the following data:

Port	Queue ID	WRR Weight	WDRR Quantum
eth1/0/1	0	1	1
	1	1	1
	2	1	1
	3	1	1
	4	1	1
	5	1	1
	6	1	1
	7	0	1
eth1/0/2	0	1	1
	1	1	1
	2	1	1
	3	1	1
	4	1	1
	5	1	1
	6	1	1

Figure 7-3 Queue Settings Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the range of ports that will be used for this configuration here.
Queue ID	Enter the queue ID value here. This value must be between 0 and 7.
WRR Weight	Enter the WRR weight value here. This value must be between 0 and 127. To satisfy the behavior requirements of Expedited Forwarding (EF), the highest queue is always selected by the Per-hop Behavior (PHB) EF and the schedule mode of this queue should be strict priority scheduling. So the weight of the last queue should be zero while the Differentiate Service is supported.
WDRR Quantum	Enter the WDRR quantum value here. This value must be between 0 and 127.

Click the **Apply** button to accept the changes made.

CoS to Queue Mapping

This window is used to display and configure the CoS-to-Queue mapping settings.

To view the following window, click **QoS > Basic Settings > CoS to Queue Mapping**, as shown below:

CoS	Queue ID
0	2
1	0
2	1
3	3
4	4
5	5
6	6
7	7

Figure 7-4 CoS to Queue Mapping Window

The fields that can be configured are described below:

Parameter	Description
Queue ID	Select the queue ID that will be mapped to the corresponding CoS value. Options to choose from are 0 to 7.

Click the **Apply** button to accept the changes made.

Port Rate Limiting

This window is used to display and configure the port rate limiting settings.

To view the following window, click **QoS > Basic Settings > Port Rate Limiting**, as shown below:

Port Rate Limiting

Unit: 1, From Port: eth1/0/1, To Port: eth1/0/1, Direction: Input

Rate Limit: Bandwidth (8-10000000) Kbps, Percent (1-100) %, None

Burst Size (0-128000) Kbyte

Unit 1 Settings

Port	Input		Output	
	Rate	Burst	Rate	Burst
eth1/0/1	No Limit	No Limit	No Limit	No Limit
eth1/0/2	No Limit	No Limit	No Limit	No Limit
eth1/0/3	No Limit	No Limit	No Limit	No Limit
eth1/0/4	No Limit	No Limit	No Limit	No Limit
eth1/0/5	No Limit	No Limit	No Limit	No Limit
eth1/0/6	No Limit	No Limit	No Limit	No Limit

Figure 7-5 Port Rate Limiting Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the range of ports that will be used for this configuration here.
Direction	Select the direction option here. Options to choose from are Input and Output . When Input is selected, the rate limit for ingress packets is configured. When Output is selected, the rate limit for egress packets is configured.

Parameter	Description
Rate Limit	<p>Select and enter the rate limit value here.</p> <ul style="list-style-type: none"> When Bandwidth is selected, enter the input/output bandwidth value used in the space provided. This value must be between 8 and 10000000 kbps. Also, enter the Burst Size value in the space provided. This value must be between 0 and 128000 kilobytes. When the burst size is 0, the rate limit function is disabled. No rate limit is applied on the specified interface. When Percent is selected, enter the input/output bandwidth percentage value used in the space provided. This value must be between 1 and 100 percent (%). Also, enter the Burst Size value in the space provided. This value must be between 0 and 128000 kilobytes. Select the None option to remove the rate limit on the specified port(s). The specified limitation cannot exceed the maximum speed of the specified interface. For the ingress bandwidth limitation, the ingress will send a pause frame or a flow control frame when the received traffic exceeds the limitation.

Click the **Apply** button to accept the changes made.

Queue Rate Limiting

This window is used to display and configure the queue rate limiting settings.

To view the following window, click **QoS > Basic Settings > Queue Rate Limiting**, as shown below:

Figure 7-6 Queue Rate Limiting Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the range of ports that will be used for this configuration here.
Queue ID	Select the queue ID that will be configured here. Options to choose from are 0 to 7.
Rate Limit	<p>Select and enter the queue rate limit settings here.</p> <ul style="list-style-type: none"> When the Min Bandwidth option is selected, enter the minimum bandwidth rate limit value in the space provided. This value must be between 8 and 10000000 kbps. Also enter the maximum bandwidth (Max

Parameter	Description
	<p>Bandwidth) rate limit in the space provided. This value must be between 8 and 10000000 kbps.</p> <p>When the minimal bandwidth is configured, the packet transmitted from the queue can be guaranteed. When the maximum bandwidth is configured, packets transmitted from the queue cannot exceed the maximum bandwidth even if the bandwidth is available.</p> <p>When configuring the minimal bandwidth, the aggregate of the configured minimum bandwidth must be less than 75 percent of the interface bandwidth to make sure the configured minimal bandwidth can be guaranteed. It is not necessary to set the minimum guaranteed bandwidth for the highest strict priority queue. This is because the traffic in this queue will be serviced first if the minimal bandwidth of all queues is satisfied.</p> <p>The configuration of this command can only be attached to a physical port but not a port-channel. That is the minimum guaranteed bandwidth of one CoS cannot be used across physical ports.</p> <ul style="list-style-type: none">• When the Min Percent option is selected, enter the minimum bandwidth percentage value in the space provided. This value must be between 1 and 100 percent (%). Also enter the maximum percentage value (Max Percent) in the space provided. This value must be between 1 and 100 percent (%).

Click the **Apply** button to accept the changes made.

Queue Statistics Table

This window is used to display the queue statistics table.

To view the following window, click **QoS > Basic Settings > Queue Statistics Table**, as shown below:

Port	Queue ID	Min Bandwidth	Max Bandwidth	Packets/sec	Total Packets	Drop Packets	Bytes/sec	Total Bytes	Drop Bytes
eth1/0/1	0	0	100000	0	0	0	0	0	0
	1	0	100000	0	0	0	0	0	0
	2	0	100000	0	378	0	0	44539	0
	3	0	100000	0	0	0	0	0	0
	4	0	100000	0	0	0	0	0	0
	5	0	100000	0	0	0	0	0	0
	6	0	100000	0	0	0	0	0	0
	7	0	100000	0	0	0	0	0	0
eth1/0/2	0	0	0	0	0	0	0	0	0
	1	0	0	0	0	0	0	0	0
	2	0	0	0	0	0	0	0	0
	3	0	0	0	0	0	0	0	0
	4	0	0	0	0	0	0	0	0
	5	0	0	0	0	0	0	0	0
	6	0	0	0	0	0	0	0	0
	7	0	0	0	0	0	0	0	0
eth1/0/3	0	0	100000	0	0	0	0	0	0
	1	0	100000	0	0	0	0	0	0
	2	0	100000	0	10522	0	0	1097131	0
	3	0	100000	0	0	0	0	0	0
	4	0	100000	0	0	0	0	0	0
	5	0	100000	0	0	0	0	0	0
	6	0	100000	0	0	0	0	0	0
	7	0	100000	0	0	0	0	0	0

Figure 7-7 Queue Statistics Table Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used in this display here.
Port	Select the port that will be used in this display here.

Click the **Find** button display the queue statistics on the selected port only.

Click the **Show All** button to display the queue statistics on all the ports.

Advanced Settings

DSCP Mutation Map

This window is used to display and configure the Differentiated Services Code Point (DSCP) mutation map settings. When a packet is received by an interface, based on a DSCP mutation map, the incoming DSCP can be mutated to another DSCP immediately before any QoS operations. The DSCP mutation is helpful to integrate domains with different DSCP assignments. The DSCP-CoS map and DSCP-color map will still be based on the original DSCP of the packet. All the subsequent operations will base on the mutated DSCP.

To view the following window, click **QoS > Advanced Settings > DSCP Mutation Map**, as shown below:

Figure 7-8 DSCP Mutation Map Window

The fields that can be configured are described below:

Parameter	Description
Mutation Name	Enter the DSCP mutation map name here. This name can be up to 32 characters long.
Input DSCP List	Enter the input DSCP list value here. This value must be between 0 and 63.
Output DSCP List	Enter the output DSCP list value here. This value must be between 0 and 63.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

Port Trust State and Mutation Binding

This window is used to display and configure the port trust state and mutation binding settings.

To view the following window, click **QoS > Advanced Settings > Port Trust State and Mutation Binding**, as shown below:

Figure 7-9 Port Trust State and Mutation Binding Window

The fields that can be configured are described below:


Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the range of ports that will be used for this configuration here.
Trust State	Select the port trust state option here. Options to choose from are CoS and DSCP .
DSCP Mutation Map	Select and enter the DSCP mutation map name used here. This name can be up to 32 characters long. Select the None option to not allocate a DSCP mutation map to the port(s).

Click the **Apply** button to accept the changes made.

DSCP CoS Mapping

This window is used to display and configure the DSCP CoS mapping settings.

To view the following window, click **QoS > Advanced Settings > DSCP CoS Mapping**, as shown below:

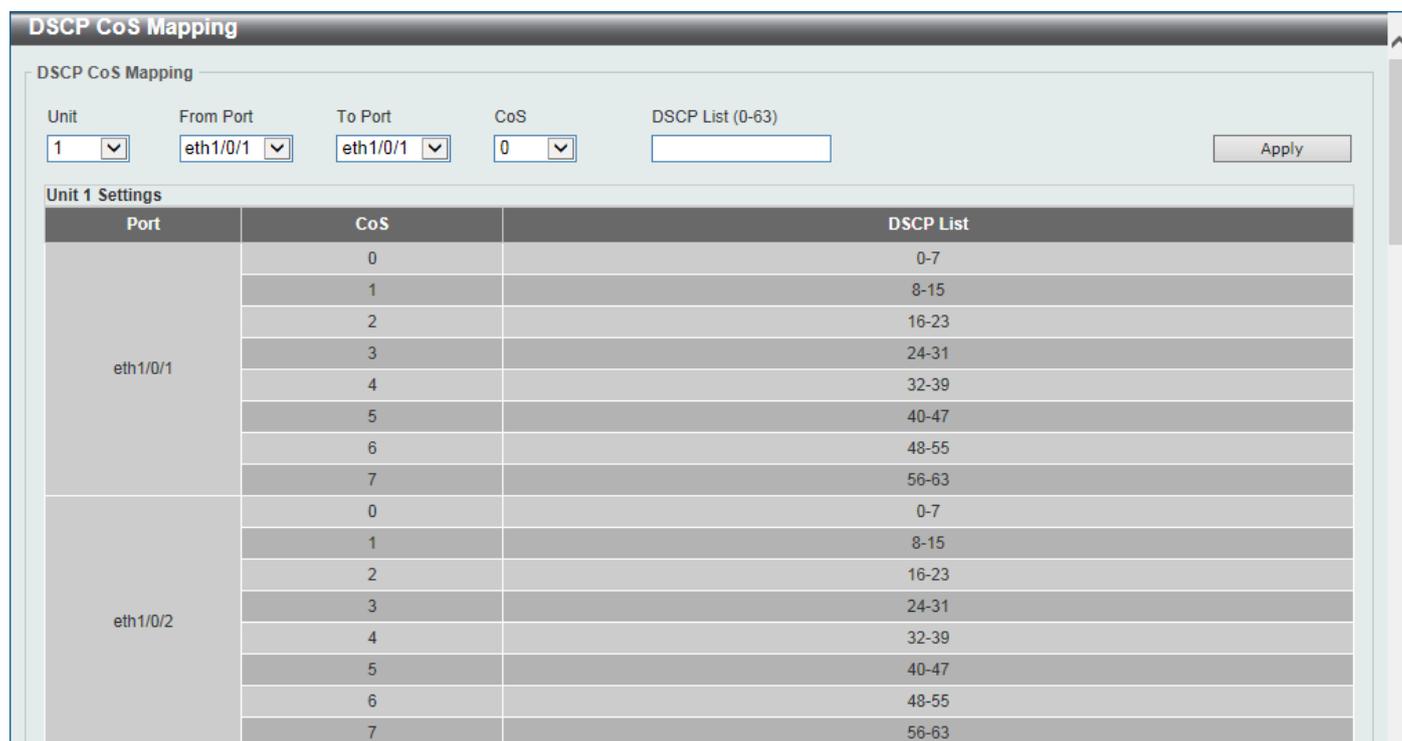

DSCP CoS Mapping

DSCP CoS Mapping

Unit: 1 | From Port: eth1/0/1 | To Port: eth1/0/1 | CoS: 0 | DSCP List (0-63): |

Unit 1 Settings

Port	CoS	DSCP List
eth1/0/1	0	0-7
	1	8-15
	2	16-23
	3	24-31
	4	32-39
	5	40-47
	6	48-55
	7	56-63
eth1/0/2	0	0-7
	1	8-15
	2	16-23
	3	24-31
	4	32-39
	5	40-47
	6	48-55
	7	56-63

Figure 7-10 DSCP CoS Mapping Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the range of ports that will be used for this configuration here.
CoS	Select the CoS value to map to the DSCP list. Options to choose from are 0 to 7.
DSCP List	Enter the DSCP list value to map to the CoS value here. This value must be between 0 and 63.

Click the **Apply** button to accept the changes made.

CoS Color Mapping

This window is used to display and configure the CoS color mapping settings.

To view the following window, click **QoS > Advanced Settings > CoS Color Mapping**, as shown below:

CoS Color Mapping

CoS Color Mapping

Unit: 1 | From Port: eth1/0/1 | To Port: eth1/0/1 | CoS List (0-7): | Color: Green |

Unit 1 Settings

Port	Color	CoS List
eth1/0/1	Green	0-7
	Yellow	
	Red	
eth1/0/2	Green	0-7
	Yellow	
	Red	
eth1/0/3	Green	0-7
	Yellow	
	Red	
eth1/0/4	Green	0-7
	Yellow	
	Red	

Figure 7-11 CoS Color Mapping Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the range of ports that will be used for this configuration here.
CoS List	Enter the CoS value that will be mapped to the color. This value must be between 0 and 7.
Color	Select the color option that will be mapped to the CoS value. Options to choose from are Green , Yellow , and Red .

Click the **Apply** button to accept the changes made.

DSCP Color Mapping

This window is used to display and configure the DSCP color mapping settings.

To view the following window, click **QoS > Advanced Settings > DSCP Color Mapping**, as shown below:

DSCP Color Mapping

DSCP Color Mapping

Unit: 1 | From Port: eth1/0/1 | To Port: eth1/0/1 | DSCP List (0-63): | Color: Green | Apply

Unit 1 Settings

Port	Color	DSCP List
eth1/0/1	Green	0-63
	Yellow	
	Red	
eth1/0/2	Green	0-63
	Yellow	
	Red	
eth1/0/3	Green	0-63
	Yellow	
	Red	
eth1/0/4	Green	0-63
	Yellow	
	Red	

Figure 7-12 DSCP Color Mapping Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the range of ports that will be used for this configuration here.
DSCP List	Enter the DSCP list value here that will be mapped to a color. This value must be between 0 and 63.
Color	Select the color option that will be mapped to the DSCP value. Options to choose from are Green , Yellow , and Red .

Click the **Apply** button to accept the changes made.

Class Map

This window is used to display and configure the class map settings.

To view the following window, click **QoS > Advanced Settings > Class Map**, as shown below:

Class Map

Class Map Name: 32 chars | Multiple Match Criteria: Match Any | Apply

Total Entries: 2

Class Map Name	Multiple Match Criteria	Match	Delete
class	Match Any	Match	Delete
class-default	Match Any	Match	Delete

1/1 | < < 1 > > | Go

Figure 7-13 Class Map Window

The fields that can be configured are described below:

Parameter	Description
Class Map Name	Enter the class map name here. This name can be up to 32 characters long.
Multiple Match Criteria	Select the multiple match criteria option here. Options to choose from are Match All and Match Any .

Click the **Apply** button to accept the changes made.

Click the **Match** button to configure the specific entry.

Click the **Delete** button to remove the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Match** button, the following page will be available.

Figure 7-14 Class Map (Match) Window

The fields that can be configured are described below:

Parameter	Description
None	Select this option to match nothing to this class map.
Specify	Select the option to match something to this class map.
ACL Name	Select and enter the access list name that will be matched with this class map here. This name can be up to 32 characters long.
CoS List	Select and enter the CoS list value that will be matched with this class map here. This value must be between 0 and 7. Tick the Inner option to match the inner most CoS of QinQ packets on a Layer 2 class of service (CoS) marking.
DSCP List	Select and enter the DSCP list value that will be matched with this class map here. This value must be between 0 and 63. Tick the IPv4 only option to match IPv4 packets only. If not specified, the match is for both IPv4 and IPv6 packets.
Precedence List	Select and enter the precedence list value that will be matched with this class map here. This value must be between 0 and 7. Tick the IPv4 only option to match IPv4 packets only. If not specified, the match is for both IPv4 and IPv6 packets. For IPv6 packets, the precedence is most three significant bits of traffic class of IPv6 header.
Protocol Name	Select the protocol name that will be matched with the class map here. Options to choose from are ARP, BGP, DHCP, DNS, EGP, FTP, IPv4, IPv6, NetBIOS, NFS, NTP, OSPF, PPPOE, RIP, RTSP, SSH, Telnet, and TFTP .
VLAN List	Select and enter the VLAN list value that will be matched with the class map here. This value must be between 1 and 4094. Tick the Inner option to match the inner-most VLAN ID in an 802.1Q double tagged frame.

Click the **Apply** button to accept the changes made.

Click the **Back** button to discard the changes made and return to the previous page.

Aggregate Policer

This window is used to display and configure the aggregate policer settings.

To view the following window, click **QoS > Advanced Settings > Aggregate Policer**, as shown below:

Aggregate Policer

Single Rate Settings | Two Rate Settings

Aggregate Policer Name * Average Rate * (0-10000000) Kbps

Normal Burst Size (0-16384) Kbyte Maximum Burst Size (0-16384) Kbyte

Conform Action Exceed Action

Violate Action Color Aware

* Mandatory Field

Total Entries: 1

Name	Average Rate	Normal Burst Size	Max. Burst Size	Conform Action	Exceed Action	Violate Action	Color Aware	
name	1000	1345		Transmit	Transmit		Disabled	<input type="button" value="Delete"/>

1/1 | < << 1 >> >

Figure 7-15 Aggregate Policer (Single Rate Setting) Window

The fields that can be configured are described below:

Parameter	Description
Aggregate Policer Name	Enter the aggregate policer name here.
Average Rate	Enter the average rate value here. This value must be between 0 and 10000000 kbps.
Normal Burst Size	Enter the normal burst size value here. This value must be between 0 and 16384 Kbytes.
Maximum Burst Size	Enter the maximum burst size value here. This value must be between 0 and 16384 Kbytes.
Confirm Action	<p>Select the confirm action here. The confirm action specifies the action to take on green color packets. If the confirm action is not specified, the default action is to Transmit. Options to choose from are Drop, Set-DSCP-Transmit, Set-1P-Transmit, Transmit, and Set-DSCP-1P.</p> <ul style="list-style-type: none"> When selecting the Drop option, the packet will be dropped. When selecting the Set-DSCP-Transmit option, enter the IP DSCP value in the space provided. This value sets the IP differentiated services code point (DSCP) value and transmits the packet with the new IP DSCP value. When selecting the Set-1P-Transmit option, enter the 1P transmit value in the space provided. This value sets the 802.1p value and transmits the packet with the new value. When selecting the Transmit option, packets will be transmitted unaltered. When selecting the Set-DSCP-1P option, enter the IP DSCP and 1P transmit values in the spaces provided.
Exceed Action	<p>Select the exceed action here. The exceed action specifies the action to take on packets that exceed the rate limit. For a two rate policer, if the exceed action is not specified, the default action is Drop. Options to choose from are Drop, Set-DSCP-Transmit, Set-1P-Transmit, Transmit, and Set-DSCP-1P.</p> <ul style="list-style-type: none"> When selecting the Drop option, the packet will be dropped. When selecting the Set-DSCP-Transmit option, enter the IP DSCP value in the space provided. This value sets the IP differentiated services code point (DSCP) value and transmits the packet with the new IP DSCP value.

Parameter	Description
	<ul style="list-style-type: none"> When selecting the Set-1P-Transmit option, enter the 1P transmit value in the space provided. This value sets the 802.1p value and transmits the packet with the new value. When selecting the Transmit option, packets will be transmitted unaltered. When selecting the Set-DSCP-1P option, enter the IP DSCP and 1P transmit values in the spaces provided.
Violate Action	<p>Select the violate action here. The violate action specifies the action to take on packets that violate the normal and maximum burst sizes for single rate policing. It specifies the action to take for those packets that did not conform to both CIR and PIR. For a single rate policer, if the violate action is not specified, it will create a single-rate two-color policer. For a two-rate policer, if the violation action is not specified, the default action is equal to the exceed action. Options to choose from are None, Drop, Set-DSCP-Transmit, Set-1P-Transmit, Transmit, and Set-DSCP-1P.</p> <ul style="list-style-type: none"> When selecting the None option, no action will be taken. When selecting the Drop option, the packet will be dropped. When selecting the Set-DSCP-Transmit option, enter the IP DSCP value in the space provided. This value sets the IP differentiated services code point (DSCP) value and transmits the packet with the new IP DSCP value. When selecting the Set-1P-Transmit option, enter the 1P transmit value in the space provided. This value sets the 802.1p value and transmits the packet with the new value. When selecting the Transmit option, packets will be transmitted unaltered. When selecting the Set-DSCP-1P option, enter the IP DSCP and 1P transmit values in the spaces provided.
Color Aware	<p>Select the color aware option here. Options to choose from are Enabled and Disabled. When color aware is disabled, the policer works in the color blind mode. When color aware is enabled, the policer works in the color aware mode.</p>

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After selecting the **Two Rate Settings** tab option, at the top of the page, the following page will be available.

Figure 7-16 Aggregate Policer (Two Rate Settings) Window

The fields that can be configured are described below:

Parameter	Description
Aggregate Policer Name	Enter the aggregate policer name here.

Parameter	Description
CIR	Enter the Committed Information Rate (CIR) value here. This value must be between 0 and 10000000 kbps. The committed packet rate is the first token bucket for the two-rate metering.
Confirm Burst	Enter the confirm burst value here. This value must be between 0 and 16384 Kbytes. The confirm burst value specifies the burst size for the first token bucket in kbps.
PIR	Enter the Peak Information Rate (PIR) value here. This value must be between 0 and 10000000 kbps. The peak information rate is the second token bucket for the two-rate metering.
Peak Burst	Enter the peak burst value here. This value must be between 0 and 16384 Kbytes. The peak burst value is the burst size for the second token bucket in kilobytes.
Confirm Action	<p>Select the confirm action here. The confirm action specifies the action to take on green color packets. If the confirm action is not specified, the default action is to Transmit. Options to choose from are Drop, Set-DSCP-Transmit, Set-1P-Transmit, Transmit, and Set-DSCP-1P.</p> <ul style="list-style-type: none"> • When selecting the Drop option, the packet will be dropped. • When selecting the Set-DSCP-Transmit option, enter the IP DSCP value in the space provided. This value sets the IP differentiated services code point (DSCP) value and transmits the packet with the new IP DSCP value. • When selecting the Set-1P-Transmit option, enter the 1P transmit value in the space provided. This value sets the 802.1p value and transmits the packet with the new value. • When selecting the Transmit option, packets will be transmitted unaltered. • When selecting the Set-DSCP-1P option, enter the IP DSCP and 1P transmit values in the spaces provided.
Exceed Action	<p>Select the exceed action here. The exceed action specifies the action to take on packets that exceed the rate limit. For a two rate policer, if the exceed action is not specified, the default action is Drop. Options to choose from are Drop, Set-DSCP-Transmit, Set-1P-Transmit, Transmit, and Set-DSCP-1P.</p> <ul style="list-style-type: none"> • When selecting the Drop option, the packet will be dropped. • When selecting the Set-DSCP-Transmit option, enter the IP DSCP value in the space provided. This value sets the IP differentiated services code point (DSCP) value and transmits the packet with the new IP DSCP value. • When selecting the Set-1P-Transmit option, enter the 1P transmit value in the space provided. This value sets the 802.1p value and transmits the packet with the new value. • When selecting the Transmit option, packets will be transmitted unaltered. • When selecting the Set-DSCP-1P option, enter the IP DSCP and 1P transmit values in the spaces provided.
Violate Action	<p>Select the violate action here. The violate action specifies the action to take on packets that violate the normal and maximum burst sizes for single rate policing. It specifies the action to take for those packets that did not conform to both CIR and PIR. For a single rate policer, if the violate action is not specified, it will create a single-rate two-color policer. For a two-rate policer, if the violation action is not specified, the default action is equal to the exceed action. Options to choose from are Drop, Set-DSCP-Transmit, Set-1P-Transmit, Transmit, and Set-DSCP-1P.</p> <ul style="list-style-type: none"> • When selecting the Drop option, the packet will be dropped. • When selecting the Set-DSCP-Transmit option, enter the IP DSCP value in the space provided. This value sets the IP differentiated services code point (DSCP) value and transmits the packet with the new IP DSCP value. • When selecting the Set-1P-Transmit option, enter the 1P transmit value in the space provided. This value sets the 802.1p value and transmits the packet with the new value. • When selecting the Transmit option, packets will be transmitted unaltered.

Parameter	Description
	<ul style="list-style-type: none"> When selecting the Set-DSCP-1P option, enter the IP DSCP and 1P transmit values in the spaces provided.
Color Aware	Select the color aware option here. Options to choose from are Disabled and Enabled . When color aware is disabled, the policer works in the color blind mode. When color aware is enabled, the policer works in the color aware mode.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

Policy Map

This window is used to display and configure the policy map settings.

To view the following window, click **QoS > Advanced Settings > Policy Map**, as shown below:

Figure 7-17 Policy Map Window

The fields that can be configured for **Create/Delete Policy Map** are described below:

Parameter	Description
Policy Map Name	Enter the policy map name here that will be created or deleted. This name can be up to 32 characters long.

Click the **Apply** button to accept the changes made.

The fields that can be configured for **Traffic Policy** are described below:

Parameter	Description
Policy Map Name	Enter the policy map name here. This name can be up to 32 characters long.
Class Map Name	Enter the class map name here. This name can be up to 32 characters long.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

Click the **Set Action** button to configure the set action settings for the specified entry.

Click the **Policer** button to configure the policer settings for the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Set Action** button, the following page will appear.

Figure 7-18 Policy Map (Set Action) Window

The fields that can be configured are described below:

Parameter	Description
None	Select this option to specify that no action will be taken.
Specify	Select this option to specify that action will be taken based on the configurations made.
New Precedence	Select the new precedence value for the packet here. The range is from 0 to 7. Select the IPv4 only option to specify that IPv4 precedence will be marked only. If not selected, then both IPv4 and IPv6 precedence will be marked. For IPv6 packets, the precedence is the most three significant bits of the traffic class of the IPv6 header. Setting the precedence will not affect the CoS queue selection.
New DSCP	Select the new DSCP value for the packet here. The range is from 0 to 63. Select the IPv4 only option to specify that the IPv4 DSCP will be marked only. If not selected, then both the IPv4 and IPv6 DSCP will be marked. Setting the DSCP will not affect the CoS queue selection.
New CoS	Select the new CoS value to the packet here. The range is from 0 to 7. Setting the CoS will affect the CoS queue selection while the policy map is applied on the ingress interface.
New Cos Queue	Select the new CoS queue value to the packets here. This will overwrite the original CoS queue selection. Setting the CoS queue will not take effect if the policy map is applied for the egress flow on the interface.

Click the **Back** button to return to the previous window.

Click the **Apply** button to accept the changes made.

After clicking the **Policer** button, the following page will appear.

Figure 7-19 Policy Map (Policer) Window

The fields that can be configured are described below:

Parameter	Description
None	Select this option to specify that no policer settings will be configured for this entry.
Specify	Select this option to specify that the following policer settings will be applied to this entry.
Average Rate	Enter the average rate value here. The range is from 0 to 10000000 Kbps.
Normal Burst Size	Enter the normal burst size value here. The range is from 0 to 16384 Kbps.
Maximum Burst Size	Enter the maximum burst size value here. The range is from 0 to 16384 Kbps.
Conform Action	Select the conform action that will be taken here. This action will be taken on green color packets. Option to choose from are: <ul style="list-style-type: none"> • Drop - Specifies that the conform action is to drop the packet. • Set-DSCP-Transmit - Specifies that the conform action is to modify the DSCP value and then to transmit the packet with the new DSCP value. Enter the new DSCP value in the space provided. • Set-1P-Transmit - Specifies that the conform action is to modify the 802.1p value and then to transmit the packet with the new 802.1p value. Enter the new 802.1p value in the space provided. • Transmit - Specifies that the conform action is to transmit the packet unmodified. • Set-DSCP-1P - Specifies that the conform action is to modify the DSCP and 802.1p values and then to transmit the packet with the new DSCP and 802.1p values. Enter the new DSCP and 802.1p values in the spaces provided.
Exceed Action	Select the exceed action that will be taken here. This action will be taken on yellow color packets that exceed the rate limit. Option to choose from are: <ul style="list-style-type: none"> • Drop - Specifies that the exceed action is to drop the packet. • Set-DSCP-Transmit - Specifies that the exceed action is to modify the DSCP value and then to transmit the packet with the new DSCP value. Enter the new DSCP value in the space provided. • Set-1P-Transmit - Specifies that the exceed action is to modify the 802.1p value and then to transmit the packet with the new 802.1p value. Enter the new 802.1p value in the space provided. • Transmit - Specifies that the exceed action is to transmit the packet unmodified.

Parameter	Description
	<ul style="list-style-type: none"> • Set-DSCP-1P - Specifies that the exceed action is to modify the DSCP and 802.1p values and then to transmit the packet with the new DSCP and 802.1p values. Enter the new DSCP and 802.1p values in the spaces provided.
Violate Action	<p>Select the violate action that will be taken here. This action will be taken on red color packets. Option to choose from are:</p> <ul style="list-style-type: none"> • None - Specifies that no violate action will be taken. • Drop - Specifies that the violate action is to drop the packet. • Set-DSCP-Transmit - Specifies that the violate action is to modify the DSCP value and then to transmit the packet with the new DSCP value. Enter the new DSCP value in the space provided. • Set-1P-Transmit - Specifies that the violate action is to modify the 802.1p value and then to transmit the packet with the new 802.1p value. Enter the new 802.1p value in the space provided. • Transmit - Specifies that the violate action is to transmit the packet unmodified. • Set-DSCP-1P - Specifies that the violate action is to modify the DSCP and 802.1p values and then to transmit the packet with the new DSCP and 802.1p values. Enter the new DSCP and 802.1p values in the spaces provided.
Color Aware	<p>Select to enable or disable the color aware feature here. When disabled, the policer works in the color blind mode. When enabled, the policer works in the color aware mode.</p>

Click the **Back** button to return to the previous window.

Click the **Apply** button to accept the changes made.

Policy Binding

This window is used to display and configure the policy binding settings.

To view the following window, click **QoS > Advanced Settings > Policy Binding**, as shown below:

Policy Binding

Policy Binding Settings

Unit: 1 | From Port: eth1/0/1 | To Port: eth1/0/1 | Direction: Input | Policy Map Name: 32 chars (radio selected) | None (radio unselected) | Apply

Unit 1 Settings

Port	Direction	Policy Map Name
eth1/0/1		
eth1/0/2		
eth1/0/3		
eth1/0/4		
eth1/0/5		
eth1/0/6		
eth1/0/7		
eth1/0/8		
eth1/0/9		
eth1/0/10		

Figure 7-20 Policy Binding Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the range of ports that will be used for this configuration here.
Direction	Select the direction option here. Options to choose from are Input and Output . Input specified ingress traffic and output specifies egress traffic.
Policy Map Name	Enter the policy map name here. This name can be up to 32 characters long. Select the None option to not tie a policy map to this entry.

Click the **Apply** button to accept the changes made.

QoS PFC

Network QoS Class Map

This window is used to display and configure the network Quality of Service (QoS) Priority-based Flow Control (PFC) class map settings.

To view the following window, click **QoS > QoS PFC > Network QoS Class Map**, as shown below:

Figure 7-21 Network QoS Class Map Window

The fields that can be configured are described below:

Parameter	Description
Network QoS Class Map Name	Enter the network QoS class map name to be associated with a traffic policy here. This name can be up to 32 characters long.

Click the **Apply** button to accept the changes made.

Click the **Match** button to configure the match rule settings for the map name.

Click the **Delete** button to delete the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Match** button, the following page will appear.

Figure 7-22 Network QoS Class Map (Match) Window

The fields that can be configured are described below:

Parameter	Description
Match CoS	Select the IEEE 802.1Q Class of Service (CoS) value to be matched here. The range is from 0 to 7. When a packet is received, the packet will be given an internal CoS. This internal CoS is used to select the transmit queue based on the CoS to queue map. The CoS queue with a higher number will receive a higher priority. Select to None option to disable the matching of CoS values.

Click the **Back** button to return to the previous window.

Click the **Apply** button to accept the changes made.

Network QoS Policy Map

This window is used to display and configure the network QoS policy map settings.

To view the following window, click **QoS > QoS PFC > Network QoS Policy Map**, as shown below:

Figure 7-23 Network QoS Policy Map Window

The fields that can be configured in **Create/Delete Network QoS Policy Map** are described below:

Parameter	Description
Network QoS Policy Map name	Enter the network QoS policy map name here. This name can be up to 32 characters long.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Traffic Policy** are described below:

Parameter	Description
Network QoS Policy Map Name	Enter the network QoS policy map name here that will be associated with the class map. This name can be up to 32 characters long.
Network QoS Class Map Name	Enter the network QoS class map name here that will be associated with the policy map. This name can be up to 32 characters long.

Click the **Apply** button to accept the changes made.

Click the **Edit** button to modify the specified entry.

Click the **Delete** button to delete the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Edit** button, the following page will appear.

Figure 7-24 Network QoS Policy Map (Edit) Window

The fields that can be configured are described below:

Parameter	Description
Pause	Select to enable or disable the pause feature here. This feature is used to enable PFC on a class referenced in a type network QoS policy map.

Click the **Apply** button to accept the changes made.

Network QoS Policy Binding

This window is used to display and configure the network QoS policy binding settings.

To view the following window, click **QoS > QoS PFC > Network QoS Policy Binding**, as shown below:

Network QoS Policy Binding

Network QoS Policy Binding Settings

Unit: 1 | From Port: eth1/0/1 | To Port: eth1/0/1 | Direction: Input | Network QoS Policy Map Name: 32 chars None

Unit 1 Settings

Port	Direction	Network QoS Policy Map Name
eth1/0/1		
eth1/0/2		
eth1/0/3		
eth1/0/4		
eth1/0/5		
eth1/0/6		
eth1/0/7		
eth1/0/8		
eth1/0/9		
eth1/0/10		

Figure 7-25 Network QoS Policy Binding Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit ID that will be used here.
From Port - To Port	Select the Switch port range that will be used here.
Direction	Select the Input direction here. This specifies to apply the policy map for ingress flow on the interface.
Network QoS Policy Map Name	Enter the network QoS policy map name here. This name can be up to 32 characters long. Select the None option to not associate this configuration with a network QoS policy map.

Click the **Apply** button to accept the changes made.

PFC Port Settings

This window is used to display and configure the Priority-based Flow Control (PFC) port settings.



NOTE: The Priority Flow Control (PFC) feature can only be enabled and used on the 10G ports.

To view the following window, click **QoS > QoS PFC > PFC Port Settings**, as shown below:

Port	PFC Capability	Admin PFC On Priorities	Oper PFC On Priorities	Willing	Rx PFC Frame(s)	Tx PFC Frame(s)
eth1/0/1	8			Off	0	0
eth1/0/2	8			Off	0	0
eth1/0/3	8			Off	0	0
eth1/0/4	8			Off	0	0
eth1/0/5	8			Off	0	0
eth1/0/6	8			Off	0	0

Figure 7-26 PFC Port Settings Window

The fields that can be configured in **PFC Port Settings** are described below:

Parameter	Description
Unit	Select the Switch unit ID that will be used here.
From Port - To Port	Select the Switch port range that will be used here.
Willing	Select to enable or disable the willing feature here. This is used to turn on the Data Center Bridging Exchange Protocol (DCBX) PFC willing feature which indicates that the specified local port(s) is/are willing to accept PFC configurations from a remote system.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Clear PFC Counters** are described below:

Parameter	Description
Unit	Select the Switch unit ID that will be used here.
From Port - To Port	Select the Switch port range that will be used here. Select the All option to specify that all ports will be used here.
Frame Type	Select the frame type that will be cleared here. Options to choose from are: <ul style="list-style-type: none"> • RX - Specifies to clear the counters of received PFC frames. • TX - Specifies to clear the counters of transmitted PFC frames. • Both - Specifies to clear the counters of received and transmitted PFC frames.

Click the **Clear** button to clear the counters based on the selections made.

WRED

Weighted Random Early Detection (WRED) is another implementation for QoS that will help the overall throughput for your QoS queues. Based on the egress queue of the QoS function set on the Switch, this method will analyze these packets and their QoS queue to determine if there will be an overflow of packets entering the QoS queues and consequentially, minimize the packet flow into these queues by dropping random packets.

WRED employs two methods of avoiding congestion within the QoS queue.

- Every QoS queue has a minimum and a maximum level for acceptance of packets. Once the maximum threshold has been reached for this queue, the Switch will begin discarding all ingress packets, this minimizing the allotted bandwidth for QoS. When below the minimum threshold, the Switch will accept all ingress packets.
- When the ingress packets are somewhere between the maximum and minimum queue, the Switch will use a slope probability function to determine a random method of dropping packets based on the maximum drop rate which specifies the drop probability when the queues reach maximum threshold. If queues are closer to the maximum threshold, the Switch will increase the discarding of random packets to even out the flow to the queues and avoid overflows to higher priority queues.

WRED Profile

This window is used to display and configure the Weighted Random Early Detection (WRED) profile settings.

To view the following window, click **QoS > WRED > WRED Profile**, as shown below:

WRED Profile

WRED Profile

Profile (1-128) Packet Type Packet Colour Min Threshold (0-100) Max Threshold (0-100) Max Drop Rate (0-14)

Profile (1-128)

Total Entries: 128

WRED Profile	Packet Type	Min Threshold	Max Threshold	Max Drop Rate
1	TCP-GREEN	20	80	0
	TCP-YELLOW	20	80	0
	TCP-RED	20	80	0
	NON-TCP-GREEN	20	80	0
	NON-TCP-YELLOW	20	80	0
	NON-TCP-RED	20	80	0
2	TCP-GREEN	20	80	0
	TCP-YELLOW	20	80	0
	TCP-RED	20	80	0
	NON-TCP-GREEN	20	80	0
	NON-TCP-YELLOW	20	80	0
	NON-TCP-RED	20	80	0

Figure 7-27 WRED Profile Window

The fields that can be configured are described below:

Parameter	Description
Profile	Enter the WRED profile ID here. The range is from 1 to 128.
Packet Type	Select the packet type here. Options to choose from are TCP and Non-TCP . <ul style="list-style-type: none"> • TCP - Specifies the WRED drop parameters for the TCP packets to be set. • Non-TCP - Specifies the WRED drop parameters for non-TCP packets to be set.
Packet Colour	Select the packet color here. Options to choose from are Green , Yellow , and Red . <ul style="list-style-type: none"> • Green - Specifies the WRED drop parameters for green packets to be set. • Yellow - Specifies the WRED drop parameters for yellow packets to be set. • Red - Specifies the WRED drop parameters for red packets to be set.

Parameter	Description
Min Threshold	Enter the minimum threshold value here that will be used to start WRED dropping. The range is from 0 to 100.
Max Threshold	Enter the maximum threshold value here over which WRED will drop all packets destined for this queue. The range is from 0 to 100.
Max Drop Rate	Enter the maximum drop-rate value here. The range is from 0 to 14. This feature specifies the drop probability when the average queue size reaches the maximum threshold. When this value is zero, then the packet will not be dropped or remarked for ECN.

Click the **Apply** button to accept the changes made.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Reset Configuration** button to reset the configuration on the specified entry.

WRED Queue

This window is used to display and configure the WRED queue settings. WRED drops packets, based on the average queue size exceeding a specific threshold, to indicate congestion. Explicit Congestion Notification (ECN) is an extension to WRED in that ECN marks packets instead of dropping them when the average queue size exceeds a specific threshold value. When configuring the WRED ECN feature, routers and end hosts would use this marking as a signal that the network is congested and slow down sending packets.

To view the following window, click **QoS > WRED > WRED Queue**, as shown below:

WRED Queue

Unit: 1 From Port: eth1/0/1 To Port: eth1/0/1 CoS: 0 WRED State: Disabled Profile (1-128): Weight (0-15): 9 ECN State: Disabled

Unit 1 Settings

Port	CoS	WRED State	Exp-weight-constant	Profile	ECN State
eth1/0/1	0	Disabled	9	1	Disabled
	1	Disabled	9	1	Disabled
	2	Disabled	9	1	Disabled
	3	Disabled	9	1	Disabled
	4	Disabled	9	1	Disabled
	5	Disabled	9	1	Disabled
	6	Disabled	9	1	Disabled
	7	Disabled	9	1	Disabled
eth1/0/2	0	Disabled	9	1	Disabled
	1	Disabled	9	1	Disabled
	2	Disabled	9	1	Disabled
	3	Disabled	9	1	Disabled
	4	Disabled	9	1	Disabled
	5	Disabled	9	1	Disabled
	6	Disabled	9	1	Disabled
	7	Disabled	9	1	Disabled

Figure 7-28 WRED Queue Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit ID that will be used here.
From Port - To Port	Select the Switch port range that will be used here.
CoS	Select the CoS value here. The range is from 0 to 7.

Parameter	Description
WRED State	Select to enable or disable the WRED feature state on the specified port(s) here.
Profile	Enter the WRED profile ID here. The range is from 1 to 128.
Weight	Enter the exponential weight value here. The range is from 0 to 15. This feature is used to configure the WRED exponential weight factor for the average queue size calculation for the queue.
ECN State	Select to enable or disable the ECN feature on the specified port(s) here.

Click the **Apply** button to accept the changes made.

WRED Drop Counter

This window is used to view and clear the WRED drop counter information.

To view the following window, click **QoS > WRED > WRED Drop Counter**, as shown below:

Port	Green	Yellow	Red
eth1/0/1	0	0	0
eth1/0/2	0	0	0
eth1/0/3	0	0	0
eth1/0/4	0	0	0
eth1/0/5	0	0	0
eth1/0/6	0	0	0
eth1/0/7	0	0	0
eth1/0/8	0	0	0

Figure 7-29 WRED Drop Counter Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit ID that will be used here.
From Port - To Port	Select the Switch port range that will be used here.

Click the **Clear** button to clear the counter information based on the selections made.

Click the **Clear All** button to clear the counter information associated with all entries.

iSCSI

The iSCSI awareness application involved in providing automated QoS preferential treatment of iSCSI flows can be divided into the following categories:

- Detecting the establishment and termination of iSCSI sessions and connections by snooping packets used in the iSCSI protocol.
- Maintaining a database of currently active iSCSI sessions and connections to store data about the participants. This allows the formulation of classifier rules giving the data packets for the session the desired QoS treatment.
- Installing and removing classifier rule sets as needed for the iSCSI session traffic.

- Monitoring activity in the iSCSI sessions to allow for aging out session entries if the session termination packets are not received.

iSCSI Settings

This window is used to display and configure the Internet Small Computer Systems Interface (iSCSI) settings.

To view the following window, click **QoS > iSCSI > iSCSI Settings**, as shown below:

Figure 7-30 iSCSI Settings Window

The fields that can be configured are described below:

Parameter	Description
iSCSI State	Select to globally enable or disable the iSCSI awareness feature here.
iSCSI CoS	<p>Select the iSCSI CoS that will be configured here. Options to choose from are:</p> <ul style="list-style-type: none"> VPT - Specifies to use VLAN Priority Tag (VPT) to assign iSCSI session packets. Enter the VPT value in the space provided. DSCP - Specifies to use DSCP to assign iSCSI session packets. Enter the DSCP value in the space provided. Default - Specifies to use the default settings. By default, the VPT is used with the value of 7. <p>Select the Remark option to mark the iSCSI frames with the configured VPT or DSCP when egressing the Switch.</p>
Session Aging Time	<p>Enter the session aging time value here. The range is from 1 to 43200 minutes. This is used to configure the aging time for iSCSI sessions. When configuring the aging time to be longer than the current setting, the current sessions will be timed out and use the new aging time. When configuring the aging time to be shorter than the current setting, sessions that are longer than the new aging time will be deleted, and sessions that are shorter than or equal to the new aging time will be continue to be monitored with the new setting.</p> <p>Select the Default option to use the default value which is 5 minutes.</p>

Click the **Apply** button to accept the changes made.

The fields that can be configured in **iSCSI Targets and TCP Ports** are described below:

Parameter	Description
iSCSI Target Port	Enter the iSCSI target port number here. The range is from 1 to 65535.

Parameter	Description
IP Address	Enter the IP address of the iSCSI target here.
Target Name	Enter the iSCSI target name here. This string can be up to 255 characters long. The name can be manually configured, or obtained from iSNS or from a <i>sendTargets</i> response. The initiator must present both its iSCSI Initiator Name and the iSCSI Target Name to connect in the first login request of a new session or connection.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to delete the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

iSCSI Sessions

This window is used to view the iSCSI active session table.

To view the following window, click **QoS > iSCSI > iSCSI Sessions**, as shown below:



The screenshot shows a web interface window titled "iSCSI Sessions". Inside the window, there is a section labeled "iSCSI Sessions Table" which displays "Total Entries: 0". Below this, a table header is visible with three columns: "Target", "Session", and "Initiator". The table body is currently empty.

Figure 7-31 iSCSI Sessions Window

8. Access Control List (ACL)


[ACL Configuration Wizard](#)
[ACL Access List](#)
[ACL Interface Access Group](#)
[ACL VLAN Access Map](#)
[ACL VLAN Filter](#)
[CPU ACL](#)

ACL Configuration Wizard

This window is used to guide the user to create a new ACL access list or configure an existing ACL access list.

Step 1 - Create/Update

To view the following window, click **ACL > ACL Configuration Wizard**, as shown below:

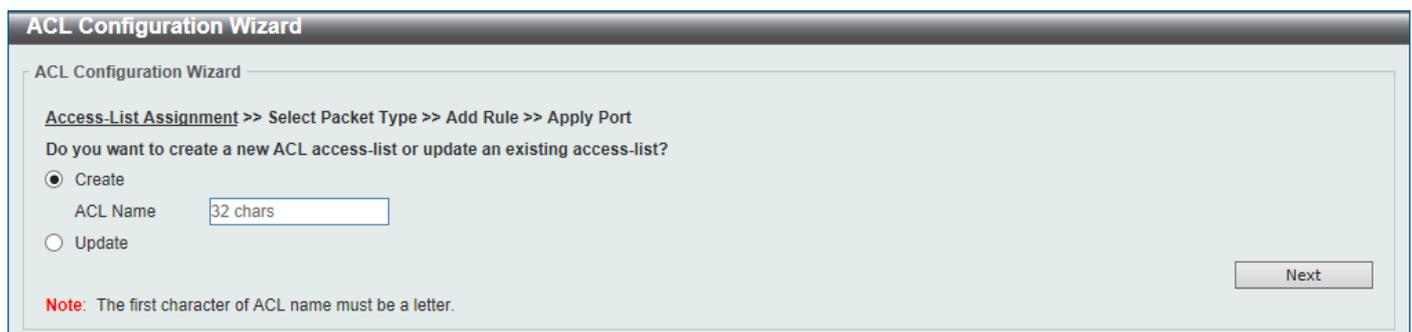

ACL Configuration Wizard

Access-List Assignment >> Select Packet Type >> Add Rule >> Apply Port

Do you want to create a new ACL access-list or update an existing access-list?

Create


ACL Name

Update

Next

Note: The first character of ACL name must be a letter.

Figure 8-1 ACL Configuration Wizard (Create) Window

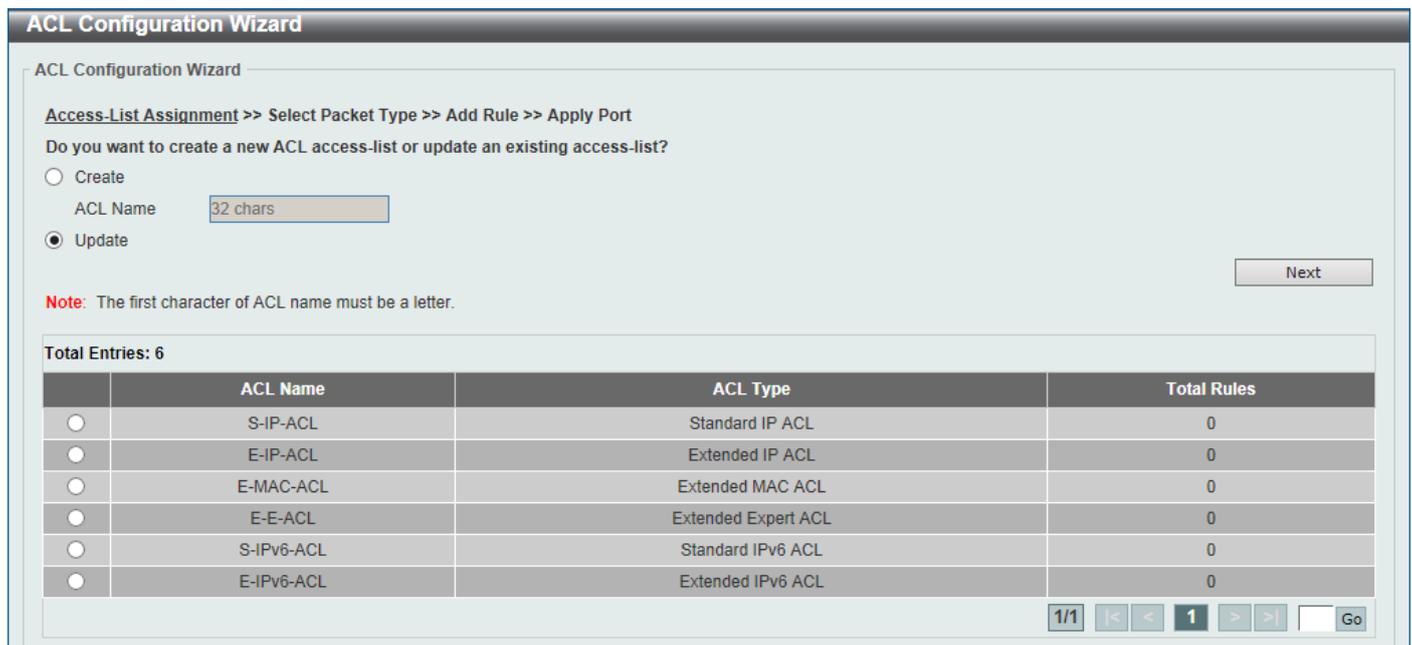

ACL Configuration Wizard

Access-List Assignment >> Select Packet Type >> Add Rule >> Apply Port

Do you want to create a new ACL access-list or update an existing access-list?

Create

ACL Name

Update

Next

Note: The first character of ACL name must be a letter.

Total Entries: 6

	ACL Name	ACL Type	Total Rules
<input type="radio"/>	S-IP-ACL	Standard IP ACL	0
<input type="radio"/>	E-IP-ACL	Extended IP ACL	0
<input type="radio"/>	E-MAC-ACL	Extended MAC ACL	0
<input type="radio"/>	E-E-ACL	Extended Expert ACL	0
<input type="radio"/>	S-IPv6-ACL	Standard IPv6 ACL	0
<input type="radio"/>	E-IPv6-ACL	Extended IPv6 ACL	0

1/1 < < 1 > > Go

Figure 8-2 ACL Configuration Wizard (Update) Window

The fields that can be configured are described below:

Parameter	Description
Create	Select this option to create a new ACL access list using the configuration wizard.
ACL Name	Enter the new ACL name here. This name can be up to 32 characters long.
Update	Select this option to update an existing ACL access list. Select the existing ACL in the table to process with the update.

Click the **Next** button to continue to the next step.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

Step 2 - Select Packet Type

After clicking the **Next** button, the following window will appear.

ACL Configuration Wizard

ACL Configuration Wizard

Access-List Assignment >> Select Packet Type >> Add Rule >> Apply Port

Which type of packet do you want to monitor?

MAC

IPv4

IPv6

Back Next

Figure 8-3 ACL Configuration Wizard (Create, Packet Type) Window

The fields that can be configured are described below:

Parameter	Description
MAC	Select to create/update a MAC ACL.
IPv4	Select to create/update an IPv4 ACL.
IPv6	Select to create/update an IPv6 ACL.

Click the **Back** button to return to the previous step.

Click the **Next** button to continue to the next step.

Step 3 - Add Rule

MAC

After clicking the **MAC** radio button and the **Next** button, the following window will appear.

Figure 8-4 ACL Configuration Wizard (Create, Packet Type, MAC) Window

The fields that can be configured are described below:

Parameter	Description
Sequence No.	Enter the ACL rule number here. This value must be between 1 and 65535. Select Auto Assign to automatically generate an ACL rule number for this entry.
Source	Select and enter the source MAC address information here. Options to choose from are Any , Host , and MAC . <ul style="list-style-type: none"> When the Any option is selected, any source traffic will be evaluated according to the conditions of this rule. When the Host option is selected, enter the source host MAC address here. When the MAC option is selected, the Wildcard option will also be available. Enter the source MAC address and wildcard value in the spaces provided.
Destination	Select and enter the destination MAC address information here. Options to choose from are Any , Host , and MAC . <ul style="list-style-type: none"> When the Any option is selected, any destination traffic will be evaluated according to the conditions of this rule. When the Host option is selected, enter the destination host MAC address here.

Parameter	Description
	<ul style="list-style-type: none"> When the MAC option is selected, the Wildcard option will also be available. Enter the destination MAC address and wildcard value in the spaces provided.
Specify Ethernet Type	Select the Ethernet type option here. Options to choose from are aarp , appletalk , decent-iv , etype-6000 , etype-8042 , lat , lavc-sca , mop-console , mop-dump , vines-echo , vines-ip , xns-idp , and arp .
Ethernet Type	Enter the Ethernet type hexadecimal value here. This value must be between 0x0 and 0xFFFF. When any Ethernet type profile is selected in the Specify Ethernet Type drop-down list, the appropriate hexadecimal value will automatically be entered.
Ethernet Type Mask	Enter the Ethernet type mask hexadecimal value here. This value must be between 0x0 and 0xFFFF. When any Ethernet type profile is selected in the Specify Ethernet Type drop-down list, the appropriate hexadecimal value will automatically be entered.
CoS	Select the CoS value that will be used here. The range is from 0 to 7 . <ul style="list-style-type: none"> Mask - Enter the CoS mask value here. The range is from 0x0 to 0x7.
Inner CoS	After selecting the CoS value, select the inner CoS value that will be used here. The range is from 0 to 7 . <ul style="list-style-type: none"> Mask - Enter the inner CoS mask value here. The range is from 0x0 to 0x7.
VID	Enter the VLAN ID that will be associated with this ACL rule here. The range is from 1 to 4094. <ul style="list-style-type: none"> Mask - Enter the VLAN ID mask value here. The range is from 0x0 to 0xFFF.
Inner VID	Enter the inner VLAN ID that will be associated with this ACL rule here. The range is from 1 to 4094. <ul style="list-style-type: none"> Mask - Enter the inner VLAN ID mask value here. The range is from 0x0 to 0xFFF.
VLAN Range	Select and enter the VLAN range that will be associated with this ACL rule here. Enter the starting and ending VLANs in the spaces provided. The range is from 1 to 4094.
Time Range	Enter the name of the time range profile that will be used in this ACL rule here. This name can be up to 32 characters long.
Action	Select the action that this rule will take here. Options to choose from are Permit , Deny and Deny CPU .

Click the **Back** button to return to the previous step.

Click the **Next** button to continue to the next step.

IPv4

After clicking the **IPv4** radio button and the **Next** button, the following window will appear.

Figure 8-5 ACL Configuration Wizard (Create, Packet Type, IPv4) Window

The fields that can be configured are described below:

Parameter	Description
Sequence No.	Enter the ACL rule number here. This value must be between 1 and 65535. Select Auto Assign to automatically generate an ACL rule number for this entry.
Protocol Type	Select the protocol type option here. Options to choose from are TCP , UDP , ICMP , EIGRP (88) , ESP (50) , GRE (47) , IGMP (2) , OSPF (89) , PIM (103) , VRRP (112) , IP-in-IP (94) , PCP (108) , Protocol ID , and None . <ul style="list-style-type: none"> • Value - The protocol ID can also manually be entered here. The range is from 0 to 255. • Mask - After selecting the Protocol ID option, manually enter the protocol mask value here. The range is from 0x0 to 0xFF. • Fragments - Select this option to include packet fragment filtering.

The fields that can be configured in **Assign rule criteria** are described below:

Parameter	Description
Source	<p>Select and enter the source information here. Options to choose from are Any, Host, and IP.</p> <ul style="list-style-type: none"> • When the Any option is selected, any source traffic will be evaluated according to the conditions of this rule. • When the Host option is selected, enter the source host IP address here. • When the IP option is selected, the Wildcard option will also be available. Enter the group of source IP addresses by using a wildcard bitmap. The bit corresponding to the bit value 1 will be ignored. The bit corresponding to the bit value 0 will be checked.
Destination	<p>Select and enter the destination information here. Options to choose from are Any, Host, and IP.</p> <ul style="list-style-type: none"> • When the Any option is selected, any destination traffic will be evaluated according to the conditions of this rule. • When the Host option is selected, enter the destination host IP address here. • When the IP option is selected, the Wildcard option will also be available. Enter the group of destination IP addresses by using a wildcard bitmap. The bit corresponding to the bit value 1 will be ignored. The bit corresponding to the bit value 0 will be checked.
Source Port	<p>Select and enter the source port value here. Options to choose from are =, >, <, ≠, Range, and Mask.</p> <ul style="list-style-type: none"> • When selecting the = option, the specific selected port number will be used. • When selecting the > option, all ports greater than the selected port, will be used. • When selecting the < option, all ports smaller than the selected port, will be used. • When selecting the ≠ option, all ports, excluding the selected port, will be used. • When selecting the Range option, the start port number and end port number selected, of the range, will be used. Alternatively, the port number(s) can manually be entered in the space(s) provided, if the port number(s) is/are not available in the drop-down list. • When selecting the Mask option, the specified source port number and mask will be used. Enter the source port mask value in the space provided. The range is from 0x0 to 0xFFFF. <p>This parameter is only available in the protocol type TCP and UDP.</p>
Destination Port	<p>Select and enter the destination port value here. Options to choose from are =, >, <, ≠, Range, and Mask.</p> <ul style="list-style-type: none"> • When selecting the = option, the specific selected port number will be used. • When selecting the > option, all ports greater than the selected port, will be used. • When selecting the < option, all ports smaller than the selected port, will be used. • When selecting the ≠ option, all ports, excluding the selected port, will be used. • When selecting the Range option, the start port number and end port number selected, of the range, will be used. Alternatively, the port number(s) can manually be entered in the space(s) provided, if the port number(s) is/are not available in the drop-down list. • When selecting the Mask option, the specified destination port number and mask will be used. Enter the destination port mask value in the space provided. The range is from 0x0 to 0xFFFF. <p>This parameter is only available in the protocol type TCP and UDP.</p>

Parameter	Description
Specify ICMP Message Type	Select the ICMP message type used here. This parameter is only available in the protocol type ICMP .
ICMP Message Type	When the ICMP Message Type is not selected, enter the ICMP Message Type numerical value used here. The range is from 0 to 255. When the ICMP Message Type is selected, this numerical value will automatically be entered. This parameter is only available in the protocol type ICMP .
Message Code	When the ICMP Message Type is not selected, enter the Message Code numerical value used here. The range is from 0 to 255. When the ICMP Message Type is selected, this numerical value will automatically be entered. This parameter is only available in the protocol type ICMP .
IP Precedence	Select the IP precedence value used here. Options to choose from are routine (0), priority (1), immediate (2), flash (3), flash-override (4), critical (5), internet (6), and network (7). <ul style="list-style-type: none"> • Value - The IP precedence value can also manually be entered here. The range is from 0 to 7. • Mask - Enter the IP precedence mask value here. The range is from 0x0 to 0x7.
ToS	Select the Type-of-Service (ToS) value that will be used here. Options to choose from are normal (0), min-monetary-cost (1), max-reliability (2), max-throughput (4), and min-delay (8). <ul style="list-style-type: none"> • Value - The ToS value can also manually be entered here. The range is from 0 to 15. • Mask - Enter the ToS mask value here. The range is from 0x0 to 0xF.
DSCP	Select the DSCP value that will be used here. Options to choose from are default (0), af11 (10), af12 (12), af13 (14), af21 (18), af22 (20), af23 (22), af31 (26), af32 (28), af33 (30), af41 (34), af42 (36), af43 (38), cs1 (8), cs2 (16), cs3 (24), cs4 (32), cs5 (40), cs6 (48), cs7 (56), and ef (46). <ul style="list-style-type: none"> • Value - The DSCP value can also manually be entered here. The range is from 0 to 63. • Mask - Enter the DSCP mask value here. The range is from 0x0 to 0x3F.
TCP Flag	Tick the appropriate TCP flag option to include the flag in this rule. Options to choose from are ack , fin , psh , rst , syn , and urg . This parameter is only available in the protocol type TCP .
Time Range	Enter the name of the time range profile that will be used in this ACL rule here. This name can be up to 32 characters long.
Action	Select the action that this rule will take here. Options to choose from are Permit , Deny and Deny CPU .

Click the **Back** button to return to the previous step.

Click the **Next** button to continue to the next step.

IPv6

After clicking the **IPv6** radio button and the **Next** button, the following window will appear.

Figure 8-6 ACL Configuration Wizard (Create, Packet Type, IPv6) Window

The fields that can be configured are described below:

Parameter	Description
Sequence No.	Enter the ACL rule number here. This value must be between 1 and 65535. Select Auto Assign to automatically generate an ACL rule number for this entry.
Protocol Type	Select the protocol type option here. Options to choose from are TCP , UDP , ICMP , Protocol ID , ESP (50) , PCP (108) , SCTP (132) , and None . <ul style="list-style-type: none"> • Value - The protocol ID can also manually be entered here. The range is from 0 to 255. • Mask - After selecting the Protocol ID option, manually enter the protocol mask value here. The range is from 0x0 to 0xFF. • Fragments - Select this option to include packet fragment filtering.

The fields that can be configured in **Assign rule criteria** are described below:

Parameter	Description
Source	<p>Select and enter the source information here. Options to choose from are Any, Host, and IPv6.</p> <ul style="list-style-type: none"> • When the Any option is selected, any source traffic will be evaluated according to the conditions of this rule. • When the Host option is selected, enter the source host IPv6 address here. • When the IPv6 option is selected, the Prefix Length option will also be available. Enter the source IPv6 address and prefix length value in the spaces provided.
Destination	<p>Select and enter the destination information here. Options to choose from are Any, Host, and IPv6.</p> <ul style="list-style-type: none"> • When the Any option is selected, any destination traffic will be evaluated according to the conditions of this rule. • When the Host option is selected, enter the destination host IPv6 address here. • When the IPv6 option is selected, the Prefix Length option will also be available. Enter the destination IPv6 address and prefix length value in the spaces provided.
Source Port	<p>Select and enter the source port value here. Options to choose from are =, >, <, ≠, Range, and Mask.</p> <ul style="list-style-type: none"> • When selecting the = option, the specific selected port number will be used. • When selecting the > option, all ports greater than the selected port, will be used. • When selecting the < option, all ports smaller than the selected port, will be used. • When selecting the ≠ option, all ports, excluding the selected port, will be used. • When selecting the Range option, the start port number and end port number selected, of the range, will be used. Alternatively, the port number(s) can manually be entered in the space(s) provided, if the port number(s) is/are not available in the drop-down list. • When selecting the Mask option, the specified source port number and mask will be used. Enter the source port mask value in the space provided. The range is from 0x0 to 0xFFFF. <p>This parameter is only available in the protocol type TCP and UDP.</p>
Destination Port	<p>Select and enter the destination port value here. Options to choose from are =, >, <, ≠, Range, and Mask.</p> <ul style="list-style-type: none"> • When selecting the = option, the specific selected port number will be used. • When selecting the > option, all ports greater than the selected port, will be used. • When selecting the < option, all ports smaller than the selected port, will be used. • When selecting the ≠ option, all ports, excluding the selected port, will be used. • When selecting the Range option, the start port number and end port number selected, of the range, will be used. Alternatively, the port number(s) can manually be entered in the space(s) provided, if the port number(s) is/are not available in the drop-down list. • When selecting the Mask option, the specified destination port number and mask will be used. Enter the destination port mask value in the space provided. The range is from 0x0 to 0xFFFF. <p>This parameter is only available in the protocol type TCP and UDP.</p>

Parameter	Description
Specify ICMP Message Type	Select the ICMP message type used here. This parameter is only available in the protocol type ICMP .
ICMP Message Type	When the ICMP Message Type is not selected, enter the ICMP Message Type numerical value used here. When the ICMP Message Type is selected, this numerical value will automatically be entered. This parameter is only available in the protocol type ICMP .
Message Code	When the ICMP Message Type is not selected, enter the Message Code numerical value used here. When the ICMP Message Type is selected, this numerical value will automatically be entered. This parameter is only available in the protocol type ICMP .
DSCP	Select the DSCP value that will be used here. Options to choose from are default (0), af11 (10), af12 (12), af13 (14), af21 (18), af22 (20), af23 (22), af31 (26), af32 (28), af33 (30), af41 (34), af42 (36), af43 (38), cs1 (8), cs2 (16), cs3 (24), cs4 (32), cs5 (40), cs6 (48), cs7 (56), and ef (46). <ul style="list-style-type: none"> • Value - The DSCP value can also manually be entered here. The range is from 0 to 63. • Mask - Enter the DSCP mask value here. The range is from 0x0 to 0x3F.
Traffic Class	Select and enter the traffic class value here. The range is from 0 to 255. <ul style="list-style-type: none"> • Mask - Enter the traffic class mask value here. The range is from 0x0 to 0xFF.
TCP Flag	Tick the appropriate TCP flag option to include the flag in this rule. Options to choose from are ack , fin , psh , rst , syn , and urg . This parameter is only available in the protocol type TCP .
Flow Label	Enter the flow label value here. This value must be between 0 and 1048575. <ul style="list-style-type: none"> • Mask - Enter the flow label mask value here. The range is from 0x0 to 0xFFFFF.
Time Range	Enter the name of the time range profile that will be used in this ACL rule here. This name can be up to 32 characters long.
Action	Select the action that this rule will take here. Options to choose from are Permit , Deny and Deny CPU .

Click the **Back** button to return to the previous step.

Click the **Next** button to continue to the next step.

Step 4 - Apply Port

After clicking the **Next** button, the following window will appear.

ACL Configuration Wizard

Access-List Assignment >> Select Packet Type >> Add Rule >> [Apply Port](#)

Which port(s) do you want to apply the Access-List?

Unit	From Port	To Port	Direction
1	eth1/0/1	eth1/0/1	In

Back Apply

Figure 8-7 ACL Configuration Wizard (Create, Port) Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the appropriate port range used for the configuration here.
Direction	Select the direction here. Options to choose from are In and Out .

Click the **Back** button to return to the previous step.

Click the **Apply** button to accept the changes made and return to the main ACL Wizard window.

ACL Access List

This window is used to display and configure the ACLs, ACL rules and settings.

To view the following window, click **ACL > ACL Access List**, as shown below:

The screenshot shows the 'ACL Access List' window. At the top, there are search filters for 'ACL Type' (set to 'All'), 'ID (1-14999)', and 'ACL Name' (32 chars). Below this is a table with 6 entries. The first entry is selected, and its details are shown in a sub-window below. The sub-window shows the rule 'S-IP-ACL (ID: 1) Rule' with a sequence number of 10, action 'Permit', rule 'any any', and counter information '(Ing: 0 packets Egr: 0...').

ID	ACL Name	ACL Type	Start Sequence No.	Step	Counter State	Remark	Edit	Delete
1	S-IP-ACL	Standard IP ACL	10	10	Enabled		Edit	Delete
2000	E-IP-ACL	Extended IP ACL	10	10	Disabled		Edit	Delete
6000	E-MAC-ACL	Extended MAC ACL	10	10	Disabled		Edit	Delete
8000	E-E-ACL	Extended Expert ACL	10	10	Disabled		Edit	Delete
11000	S-IPv6-ACL	Standard IPv6 ACL	10	10	Disabled		Edit	Delete
13000	E-IPv6-ACL	Extended IPv6 ACL	10	10	Disabled		Edit	Delete

Sequence No.	Action	Rule	Time Range	Counter	Delete
10	Permit	any any		(Ing: 0 packets Egr: 0...)	Delete

Figure 8-8 ACL Access List Window

The fields that can be configured are described below:

Parameter	Description
ACL Type	Select the ACL type to find here. Options to choose from are All , IP ACL , IPv6 ACL , MAC ACL , and Expert ACL .
ID	Select and enter the access list ID here. The range is from 1 to 14999.
ACL Name	Select and enter the access list name here. This name can be up to 32 characters long.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Add ACL** button to create a new ACL.

Click the **Edit** button to re-configure the specific ACL.

Click the **Delete** button, next to the ACL, to remove the specific ACL.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

Click the **Clear All Counter** button to clear all the counter information displayed.

Click the **Clear Counter** button to clear the counter information for the rule displayed.

Click the **Add Rule** button to create an ACL rule for the ACL selected.

Click the **Delete** button, next to the ACL rule, to remove the specific ACL rule.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Edit** button, the following page will appear.

Figure 8-9 ACL Access List (Edit) Window

After clicking the **Edit** button, the fields that can be configured are described below:

Parameter	Description
Start Sequence No.	Enter the start sequence number here.
Step	Enter the sequence number step here. The step range is from 1 to 32. This specifies the number that the sequence numbers step. The default value is 10. For example, if the increment (step) value is 5 and the beginning sequence number is 20, the subsequent sequence numbers are 25, 30, 35, 40, and so on.
Counter State	Select to enable or disable the counter state option here.
Remark	Enter an optional remark that will be associated with this ACL here.

Click the **Apply** button to accept the changes made.

After clicking the **Add ACL** button, the following page will appear.

Figure 8-10 ACL Access List (Add ACL) Window

After clicking the **Add ACL** button, the fields that can be configured are described below:

Parameter	Description
ACL Type	Select the ACL type that will be created here. Options to choose from are Standard IP ACL , Extended IP ACL , Standard IPv6 ACL , Extended IPv6 ACL , Extended MAC ACL , and Extended Expert ACL .
ID	Enter the ID for the ACL here. <ul style="list-style-type: none"> • For a Standard IP ACL, the range from 1 to 1999. • For an Extended IP ACL, the range from 2000 to 3999. • For a Standard IPv6 ACL, the range from 11000 to 12999. • For an Extended IPv6 ACL, the range from 13000 to 14999. • For an Extended MAC ACL, the range from 6000 to 7999. • For an Extended Expert ACL, the range from 8000 to 9999.
ACL Name	Enter the name of the ACL here. This name can be up to 32 characters long.

Click the **Apply** button to accept the changes made.

Standard IP ACL

After selecting a Standard IP ACL and clicking the **Add Rule** button, the following page will appear.

Figure 8-11 Standard IP ACL (Add Rule) Window

The fields that can be configured are described below:

Parameter	Description
Sequence No.	Enter the sequence number of this ACL rule here. The range is from 1 to 65535. If this value is not specified, the system will automatically generate an ACL rule number for this entry.
Action	Select the action that this rule will take here. Options to choose from are Permit , Deny , and Deny CPU .
Source	Select and enter the source information here. Options to choose from are Any , Host , IP , and Wildcard . <ul style="list-style-type: none"> • When the Any option is selected, any source traffic will be evaluated according to the conditions of this rule. • When the Host option is selected, enter the source host IP address here. • When the IP option is selected, the Wildcard option will also be available. Enter the group of source IP addresses by using a wildcard bitmap. The bit corresponding to the bit value 1 will be ignored. The bit corresponding to the bit value 0 will be checked.

Parameter	Description
Destination	<p>Select and enter the destination information here. Options to choose from are Any, Host, IP, and Wildcard.</p> <ul style="list-style-type: none"> When the Any option is selected, any destination traffic will be evaluated according to the conditions of this rule. When the Host option is selected, enter the destination host IP address here. When the IP option is selected, the Wildcard option will also be available. Enter the group of destination IP addresses by using a wildcard bitmap. The bit corresponding to the bit value 1 will be ignored. The bit corresponding to the bit value 0 will be checked.
Time Range	Enter the name of the time range profile that will be used in this ACL rule here. This name can be up to 32 characters long.

Click the **Apply** button to accept the changes made.

Click the **Back** button to discard the changes made and return to the previous page.

Extended IP ACL

After selecting an Extended IP ACL and clicking the **Add Rule** button, the following page will appear.

The screenshot shows the 'Add ACL Rule' window with the following configuration details:

- ID:** 2000
- ACL Name:** EIPACL
- ACL Type:** Extended IP ACL
- Sequence No. (1-65535):** (Empty field, note: (If it isn't specified, the system automatically assigns.))
- Action:** Permit Deny Deny CPU
- Protocol Type:** TCP (dropdown), (Empty field) (0-255) Mask (0x0-0xFF) (Empty field) Fragments
- Match IP Address:**
 - Source:** Any, Host, IP, Wildcard (Empty field)
 - Destination:** Any, Host, IP, Wildcard (Empty field)
- Match Port:**
 - Source Port:** Please Select (dropdown), (Empty field) (0-65535) Please Select (dropdown), (Empty field) (0-65535)
 - Destination Port:** Please Select (dropdown), (Empty field) (0-65535) Please Select (dropdown), (Empty field) (0-65535)
- TCP Flag:** ack fin psh rst syn urg
- IP Precedence:** IP Precedence Please Select (dropdown) Value (0-7) (Empty field) Mask (0x0-0x7) (Empty field)
- ToS:** ToS Please Select (dropdown) Value (0-15) (Empty field) Mask (0x0-0xF) (Empty field)
- DSCP (0-63):** DSCP (0-63) Please Select (dropdown) Value (0-63) (Empty field) Mask (0x0-0x3F) (Empty field)
- Time Range:** 32 chars (text field)

Buttons: Back, Apply

Figure 8-12 Extended IP ACL (Add Rule) Window

The fields that can be configured are described below:

Parameter	Description
Sequence No.	Enter the sequence number of this ACL rule here. The range is from 1 to 65535. If this value is not specified, the system will automatically generate an ACL rule number for this entry.

Parameter	Description
Action	Select the action that this rule will take here. Options to choose from are Permit , Deny , and Deny CPU .
Protocol Type	Select the protocol type option here. Options to choose from are TCP , UDP , ICMP , EIGRP (88) , ESP (50) , GRE (47) , IGMP (2) , OSPF (89) , PIM (103) , VRRP (112) , IP-in-IP (94) , PCP (108) , Protocol ID , and None . <ul style="list-style-type: none"> • Value - The protocol ID can also manually be entered here. The range is from 0 to 255. • Mask - After selecting the Protocol ID option, manually enter the protocol mask value here. The range is from 0x0 to 0xFF. • Fragments - Select this option to include packet fragment filtering.
Source	Select and enter the source IP information here. Options to choose from are Any , Host , and IP . <ul style="list-style-type: none"> • When the Any option is selected, any source traffic will be evaluated according to the conditions of this rule. • When the Host option is selected, enter the source host IP address here. • When the IP option is selected, the Wildcard option will also be available. Enter the group of source IP addresses by using a wildcard bitmap. The bit corresponding to the bit value 1 will be ignored. The bit corresponding to the bit value 0 will be checked.
Destination	Select and enter the destination IP information here. Options to choose from are Any , Host , and IP . <ul style="list-style-type: none"> • When the Any option is selected, any destination traffic will be evaluated according to the conditions of this rule. • When the Host option is selected, enter the destination host IP address here. • When the IP option is selected, the Wildcard option will also be available. Enter the group of destination IP addresses by using a wildcard bitmap. The bit corresponding to the bit value 1 will be ignored. The bit corresponding to the bit value 0 will be checked.
Source Port	Select and enter the source port value here. Options to choose from are = , > , < , ≠ , Range , and Mask . <ul style="list-style-type: none"> • When selecting the = option, the specific selected port number will be used. • When selecting the > option, all ports greater than the selected port, will be used. • When selecting the < option, all ports smaller than the selected port, will be used. • When selecting the ≠ option, all ports, excluding the selected port, will be used. • When selecting the Range option, the start port number and end port number selected, of the range, will be used. Alternatively, the port number(s) can manually be entered in the space(s) provided, if the port number(s) is/are not available in the drop-down list. • When selecting the Mask option, the specified source port number and mask will be used. Enter the source port mask value in the space provided. The range is from 0x0 to 0xFFFF. <p>This parameter is only available in the protocol type TCP and UDP.</p>
Destination Port	Select and enter the destination port value here. Options to choose from are = , > , < , ≠ , Range , and Mask . <ul style="list-style-type: none"> • When selecting the = option, the specific selected port number will be used. • When selecting the > option, all ports greater than the selected port, will be used. • When selecting the < option, all ports smaller than the selected port, will be used.

Parameter	Description
	<ul style="list-style-type: none"> When selecting the ≠ option, all ports, excluding the selected port, will be used. When selecting the Range option, the start port number and end port number selected, of the range, will be used. Alternatively, the port number(s) can manually be entered in the space(s) provided, if the port number(s) is/are not available in the drop-down list. When selecting the Mask option, the specified destination port number and mask will be used. Enter the destination port mask value in the space provided. The range is from 0x0 to 0xFFFF. <p>This parameter is only available in the protocol type TCP and UDP.</p>
Specify ICMP Message Type	Select the ICMP message type used here. This parameter is only available in the protocol type ICMP .
ICMP Message Type	When the ICMP Message Type is not selected, enter the ICMP Message Type numerical value used here. The range is from 0 to 255. When the ICMP Message Type is selected, this numerical value will automatically be entered. This parameter is only available in the protocol type ICMP .
Message Code	When the ICMP Message Type is not selected, enter the Message Code numerical value used here. The range is from 0 to 255. When the ICMP Message Type is selected, this numerical value will automatically be entered. This parameter is only available in the protocol type ICMP .
TCP Flag	Tick the appropriate TCP flag option to include the flag in this rule. Options to choose from are ack , fin , psh , rst , syn , and urg . This parameter is only available in the protocol type TCP .
IP Precedence	Select the IP precedence value used here. Options to choose from are routine (0), priority (1), immediate (2), flash (3), flash-override (4), critical (5), internet (6), and network (7). <ul style="list-style-type: none"> Value - The IP precedence value can also manually be entered here. The range is from 0 to 7. Mask - Enter the IP precedence mask value here. The range is from 0x0 to 0x7.
ToS	Select the Type-of-Service (ToS) value that will be used here. Options to choose from are normal (0), min-monetary-cost (1), max-reliability (2), max-throughput (4), and min-delay (8). <ul style="list-style-type: none"> Value - The ToS value can also manually be entered here. The range is from 0 to 15. Mask - Enter the ToS mask value here. The range is from 0x0 to 0xF.
DSCP	Select the DSCP value that will be used here. Options to choose from are default (0), af11 (10), af12 (12), af13 (14), af21 (18), af22 (20), af23 (22), af31 (26), af32 (28), af33 (30), af41 (34), af42 (36), af43 (38), cs1 (8), cs2 (16), cs3 (24), cs4 (32), cs5 (40), cs6 (48), cs7 (56), and ef (46). <ul style="list-style-type: none"> Value - The DSCP value can also manually be entered here. The range is from 0 to 63. Mask - Enter the DSCP mask value here. The range is from 0x0 to 0x3F.
Time Range	Enter the name of the time range profile that will be used in this ACL rule here. This name can be up to 32 characters long.

Click the **Apply** button to accept the changes made.

Click the **Back** button to discard the changes made and return to the previous page.

Standard IPv6 ACL

After selecting a Standard IPv6 ACL and clicking the **Add Rule** button, the following page will appear.

Figure 8-13 Standard IPv6 ACL (Add Rule) Window

The fields that can be configured are described below:

Parameter	Description
Sequence No.	Enter the sequence number of this ACL rule here. The range is from 1 to 65535. If this value is not specified, the system will automatically generate an ACL rule number for this entry.
Action	Select the action that this rule will take here. Options to choose from are Permit , Deny , and Deny CPU .
Source	Select and enter the source IPv6 information here. Options to choose from are Any , Host , IPv6 , and Prefix Length . <ul style="list-style-type: none"> When the Any option is selected, any source traffic will be evaluated according to the conditions of this rule. When the Host option is selected, enter the source host IPv6 address here. When the IPv6 option is selected, the Prefix Length option will also be available. Enter the source IPv6 address and prefix length value in the spaces provided.
Destination	Select and enter the destination IPv6 information here. Options to choose from are Any , Host , IPv6 , and Prefix Length . <ul style="list-style-type: none"> When the Any option is selected, any destination traffic will be evaluated according to the conditions of this rule. When the Host option is selected, enter the destination host IPv6 address here. When the IPv6 option is selected, the Prefix Length option will also be available. Enter the destination IPv6 address and prefix length value in the spaces provided.
Time Range	Enter the name of the time range profile that will be used in this ACL rule here. This name can be up to 32 characters long.

Click the **Apply** button to accept the changes made.

Click the **Back** button to discard the changes made and return to the previous page.

Extended IPv6 ACL

After selecting an Extended IPv6 ACL and clicking the **Add Rule** button, the following page will appear.

Figure 8-14 Extended IPv6 ACL (Add Rule) Window

The fields that can be configured are described below:

Parameter	Description
Sequence No.	Enter the sequence number of this ACL rule here. The range is from 1 to 65535. If this value is not specified, the system will automatically generate an ACL rule number for this entry.
Action	Select the action that this rule will take here. Options to choose from are Permit , Deny , and Deny CPU .
Protocol Type	Select the protocol type option here. Options to choose from are TCP , UDP , ICMP , Protocol ID , ESP (50) , PCP (108) , SCTP (132) , and None . <ul style="list-style-type: none"> Value - The protocol ID can also manually be entered here. The range is from 0 to 255. Mask - After selecting the Protocol ID option, manually enter the protocol mask value here. The range is from 0x0 to 0xFF. Fragments - Select this option to include packet fragment filtering.
Source	Select and enter the source IPv6 information here. Options to choose from are Any , Host , and IPv6 . <ul style="list-style-type: none"> When the Any option is selected, any source traffic will be evaluated according to the conditions of this rule. When the Host option is selected, enter the source host IPv6 address here. When the IPv6 option is selected, the Prefix Length option will also be available. Enter the source IPv6 address and prefix length value in the spaces provided.

Parameter	Description
Destination	<p>Select and enter the destination IPv6 information here. Options to choose from are Any, Host, and IPv6.</p> <ul style="list-style-type: none"> When the Any option is selected, any destination traffic will be evaluated according to the conditions of this rule. When the Host option is selected, enter the destination host IPv6 address here. When the IPv6 option is selected, the Prefix Length option will also be available. Enter the destination IPv6 address and prefix length value in the spaces provided.
Source Port	<p>Select and enter the source port value here. Options to choose from are =, >, <, ≠, Range, and Mask.</p> <ul style="list-style-type: none"> When selecting the = option, the specific selected port number will be used. When selecting the > option, all ports greater than the selected port, will be used. When selecting the < option, all ports smaller than the selected port, will be used. When selecting the ≠ option, all ports, excluding the selected port, will be used. When selecting the Range option, the start port number and end port number selected, of the range, will be used. Alternatively, the port number(s) can manually be entered in the space(s) provided, if the port number(s) is/are not available in the drop-down list. When selecting the Mask option, the specified source port number and mask will be used. Enter the source port mask value in the space provided. The range is from 0x0 to 0xFFFF. <p>This parameter is only available in the protocol type TCP and UDP.</p>
Destination Port	<p>Select and enter the destination port value here. Options to choose from are =, >, <, ≠, Range, and Mask.</p> <ul style="list-style-type: none"> When selecting the = option, the specific selected port number will be used. When selecting the > option, all ports greater than the selected port, will be used. When selecting the < option, all ports smaller than the selected port, will be used. When selecting the ≠ option, all ports, excluding the selected port, will be used. When selecting the Range option, the start port number and end port number selected, of the range, will be used. Alternatively, the port number(s) can manually be entered in the space(s) provided, if the port number(s) is/are not available in the drop-down list. When selecting the Mask option, the specified destination port number and mask will be used. Enter the destination port mask value in the space provided. The range is from 0x0 to 0xFFFF. <p>This parameter is only available in the protocol type TCP and UDP.</p>
TCP Flag	<p>Tick the appropriate TCP flag option to include the flag in this rule. Options to choose from are ack, fin, psh, rst, syn, and urg.</p> <p>This parameter is only available in the protocol type TCP.</p>
Specify ICMP Message Type	<p>Select the ICMP message type used here.</p> <p>This parameter is only available in the protocol type ICMP.</p>
ICMP Message Type	<p>When the ICMP Message Type is not selected, enter the ICMP Message Type numerical value used here. When the ICMP Message Type is selected, this numerical value will automatically be entered.</p> <p>This parameter is only available in the protocol type ICMP.</p>

Parameter	Description
Message Code	When the ICMP Message Type is not selected, enter the Message Code numerical value used here. When the ICMP Message Type is selected, this numerical value will automatically be entered. This parameter is only available in the protocol type ICMP .
DSCP	Select the DSCP value that will be used here. Options to choose from are default (0), af11 (10), af12 (12), af13 (14), af21 (18), af22 (20), af23 (22), af31 (26), af32 (28), af33 (30), af41 (34), af42 (36), af43 (38), cs1 (8), cs2 (16), cs3 (24), cs4 (32), cs5 (40), cs6 (48), cs7 (56), and ef (46). <ul style="list-style-type: none"> • Value - The DSCP value can also manually be entered here. The range is from 0 to 63. • Mask - Enter the DSCP mask value here. The range is from 0x0 to 0x3F.
Traffic Class	Select and enter the traffic class value here. The range is from 0 to 255. <ul style="list-style-type: none"> • Mask - Enter the traffic class mask value here. The range is from 0x0 to 0xFF.
Flow Label	Enter the flow label value here. This value must be between 0 and 1048575. <ul style="list-style-type: none"> • Mask - Enter the flow label mask value here. The range is from 0x0 to 0xFFFFF.
Time Range	Enter the name of the time range profile that will be used in this ACL rule here. This name can be up to 32 characters long.

Click the **Apply** button to accept the changes made.

Click the **Back** button to discard the changes made and return to the previous page.

Extended MAC ACL

After selecting an Extended MAC ACL and clicking the **Add Rule** button, the following page will appear.

Add ACL Rule

Add ACL Rule

ID

ACL Name

ACL Type

Sequence No. (1-65535) (If it isn't specified, the system automatically assigns.)

Action Permit Deny Deny CPU

Match MAC Address

Any Host MAC Wildcard

Source Destination

Match Ethernet Type

Specify Ethernet Type

Ethernet Type (0x0-0xFFFF)

Ethernet Type Mask (0x0-0xFFFF)

CoS Mask (0x0-0x7) Inner CoS Mask (0x0-0x7)

VID(1-4094) Mask (0x0-0xFFFF) Inner VID (1-4094) Mask (0x0-0xFFFF)

VLAN Range ~

Time Range

Figure 8-15 Extended MAC ACL (Add Rule) Window

The fields that can be configured are described below:

Parameter	Description
Sequence No.	Enter the sequence number of this ACL rule here. The range is from 1 to 65535. If this value is not specified, the system will automatically generate an ACL rule number for this entry.
Action	Select the action that this rule will take here. Options to choose from are Permit , Deny , and Deny CPU .
Source	Select and enter the source MAC address information here. Options to choose from are Any , Host , MAC , and Wildcard . <ul style="list-style-type: none"> When the Any option is selected, any source traffic will be evaluated according to the conditions of this rule. When the Host option is selected, enter the source host MAC address here. When the MAC option is selected, the Wildcard option will also be available. Enter the source MAC address and wildcard value in the spaces provided.
Destination	Select and enter the destination MAC address information here. Options to choose from are Any , Host , MAC , and Wildcard . <ul style="list-style-type: none"> When the Any option is selected, any destination traffic will be evaluated according to the conditions of this rule. When the Host option is selected, enter the destination host MAC address here. When the MAC option is selected, the Wildcard option will also be available. Enter the destination MAC address and wildcard value in the spaces provided.
Specify Ethernet Type	Select the Ethernet type option here. Options to choose from are aarp , appletalk , decent-iv , etype-6000 , etype-8042 , lat , lavc-sca , mop-console , mop-dump , vines-echo , vines-ip , xns-idp , and arp .
Ethernet Type	Enter the Ethernet type hexadecimal value here. This value must be between 0x0 and 0xFFFF. When the Ethernet type profile is selected, above, the appropriate hexadecimal value will automatically be entered.
Ethernet Type Mask	Enter the Ethernet type mask hexadecimal value here. This value must be between 0x0 and 0xFFFF. When the Ethernet type profile is selected, above, the appropriate hexadecimal value will automatically be entered.
CoS	Select the CoS value that will be used here. The range is from 0 to 7 . <ul style="list-style-type: none"> Mask - Enter the CoS mask value here. The range is from 0x0 to 0x7.
Inner CoS	After selecting the CoS value, select the inner CoS value that will be used here. The range is from 0 to 7 . <ul style="list-style-type: none"> Mask - Enter the inner CoS mask value here. The range is from 0x0 to 0x7.
VID	Enter the VLAN ID that will be associated with this ACL rule here. The range is from 1 to 4094. <ul style="list-style-type: none"> Mask - Enter the VLAN ID mask value here. The range is from 0x0 to 0xFFFF.
Inner VID	Enter the inner VLAN ID that will be associated with this ACL rule here. The range is from 1 to 4094. <ul style="list-style-type: none"> Mask - Enter the inner VLAN ID mask value here. The range is from 0x0 to 0xFFFF.
VLAN Range	Select and enter the VLAN range that will be associated with this ACL rule here. Enter the starting and ending VLANs in the spaces provided. The range is from 1 to 4094.

Parameter	Description
Time Range	Enter the name of the time range profile that will be used in this ACL rule here. This name can be up to 32 characters long.

Click the **Apply** button to accept the changes made.

Click the **Back** button to discard the changes made and return to the previous page.

Extended Expert ACL

After selecting an Extended Expert ACL and clicking the **Add Rule** button, the following page will appear.

Figure 8-16 Extended Expert ACL (Add Rule) Window

The fields that can be configured are described below:

Parameter	Description
Sequence No.	Enter the sequence number of this ACL rule here. The range is from 1 to 65535. If this value is not specified, the system will automatically generate an ACL rule number for this entry.
Action	Select the action that this rule will take here. Options to choose from are Permit , Deny , and Deny CPU .
Protocol Type	Select the protocol type option here. Options to choose from are TCP , UDP , ICMP , EIGRP (88) , ESP (50) , GRE (47) , IGMP (2) , OSPF (89) , PIM (103) , VRRP (112) , IP-in-IP (94) , PCP (108) , Protocol ID , and None .

Parameter	Description
	<ul style="list-style-type: none"> • Value - The protocol ID can also manually be entered here. The range is from 0 to 255. • Mask - After selecting the Protocol ID option, manually enter the protocol mask value here. The range is from 0x0 to 0xFF. • Fragments - Select this option to include packet fragment filtering.
Source	<p>Select and enter the source IP information here. Options to choose from are Any, Host, and IP.</p> <ul style="list-style-type: none"> • When the Any option is selected, any source traffic will be evaluated according to the conditions of this rule. • When the Host option is selected, enter the source host IP address here. • When the IP option is selected, the Wildcard option will also be available. Enter the group of source IP addresses by using a wildcard bitmap. The bit corresponding to the bit value 1 will be ignored. The bit corresponding to the bit value 0 will be checked.
Destination	<p>Select and enter the destination IP information here. Options to choose from are Any, Host, and IP.</p> <ul style="list-style-type: none"> • When the Any option is selected, any destination traffic will be evaluated according to the conditions of this rule. • When the Host option is selected, enter the destination host IP address here. • When the IP option is selected, the Wildcard option will also be available. Enter the group of destination IP addresses by using a wildcard bitmap. The bit corresponding to the bit value 1 will be ignored. The bit corresponding to the bit value 0 will be checked.
Source	<p>Select and enter the source MAC address information here. Options to choose from are Any, Host, MAC, and Wildcard.</p> <ul style="list-style-type: none"> • When the Any option is selected, any source traffic will be evaluated according to the conditions of this rule. • When the Host option is selected, enter the source host MAC address here. • When the MAC option is selected, the Wildcard option will also be available. Enter the source MAC address and wildcard value in the spaces provided.
Destination	<p>Select and enter the destination MAC address information here. Options to choose from are Any, Host, MAC, and Wildcard.</p> <ul style="list-style-type: none"> • When the Any option is selected, any destination traffic will be evaluated according to the conditions of this rule. • When the Host option is selected, enter the destination host MAC address here. • When the MAC option is selected, the Wildcard option will also be available. Enter the destination MAC address and wildcard value in the spaces provided.
Source Port	<p>Select and enter the source port value here. Options to choose from are =, >, <, ≠, Range, and Mask.</p> <ul style="list-style-type: none"> • When selecting the = option, the specific selected port number will be used. • When selecting the > option, all ports greater than the selected port, will be used. • When selecting the < option, all ports smaller than the selected port, will be used. • When selecting the ≠ option, all ports, excluding the selected port, will be used. • When selecting the Range option, the start port number and end port number selected, of the range, will be used. Alternatively, the port number(s) can manually be entered in the space(s) provided, if the port number(s) is/are not available in the drop-down list.

Parameter	Description
	<ul style="list-style-type: none"> When selecting the Mask option, the specified source port number and mask will be used. Enter the source port mask value in the space provided. The range is from 0x0 to 0xFFFF. <p>This parameter is only available in the protocol type TCP and UDP.</p>
Destination Port	<p>Select and enter the destination port value here. Options to choose from are =, >, <, ≠, Range, and Mask.</p> <ul style="list-style-type: none"> When selecting the = option, the specific selected port number will be used. When selecting the > option, all ports greater than the selected port, will be used. When selecting the < option, all ports smaller than the selected port, will be used. When selecting the ≠ option, all ports, excluding the selected port, will be used. When selecting the Range option, the start port number and end port number selected, of the range, will be used. Alternatively, the port number(s) can manually be entered in the space(s) provided, if the port number(s) is/are not available in the drop-down list. When selecting the Mask option, the specified destination port number and mask will be used. Enter the destination port mask value in the space provided. The range is from 0x0 to 0xFFFF. <p>This parameter is only available in the protocol type TCP and UDP.</p>
Specify ICMP Message Type	<p>Select the ICMP message type used here.</p> <p>This parameter is only available in the protocol type ICMP.</p>
ICMP Message Type	<p>When the ICMP Message Type is not selected, enter the ICMP Message Type numerical value used here. The range is from 0 to 255. When the ICMP Message Type is selected, this numerical value will automatically be entered.</p> <p>This parameter is only available in the protocol type ICMP.</p>
Message Code	<p>When the ICMP Message Type is not selected, enter the Message Code numerical value used here. The range is from 0 to 255. When the ICMP Message Type is selected, this numerical value will automatically be entered.</p> <p>This parameter is only available in the protocol type ICMP.</p>
IP Precedence	<p>Select the IP precedence value used here. Options to choose from are routine (0), priority (1), immediate (2), flash (3), flash-override (4), critical (5), internet (6), and network (7).</p> <ul style="list-style-type: none"> Value - The IP precedence value can also manually be entered here. The range is from 0 to 7. Mask - Enter the IP precedence mask value here. The range is from 0x0 to 0x7.
ToS	<p>Select the Type-of-Service (ToS) value that will be used here. Options to choose from are normal (0), min-monetary-cost (1), max-reliability (2), max-throughput (4), and min-delay (8).</p> <ul style="list-style-type: none"> Value - The ToS value can also manually be entered here. The range is from 0 to 15. Mask - Enter the ToS mask value here. The range is from 0x0 to 0xF.
DSCP	<p>Select the DSCP value that will be used here. Options to choose from are default (0), af11 (10), af12 (12), af13 (14), af21 (18), af22 (20), af23 (22), af31 (26), af32 (28), af33 (30), af41 (34), af42 (36), af43 (38), cs1 (8), cs2 (16), cs3 (24), cs4 (32), cs5 (40), cs6 (48), cs7 (56), and ef (46).</p> <ul style="list-style-type: none"> Value - The DSCP value can also manually be entered here. The range is from 0 to 63. Mask - Enter the DSCP mask value here. The range is from 0x0 to 0x3F.
TCP Flag	<p>Tick the appropriate TCP flag option to include the flag in this rule. Options to choose from are ack, fin, psh, rst, syn, and urg.</p>

Parameter	Description
	This parameter is only available in the protocol type TCP .
VID	Enter the VLAN ID that will be associated with this ACL rule here. The range is from 1 to 4094. <ul style="list-style-type: none"> • Mask - Enter the VLAN ID mask value here. The range is from 0x0 to 0xFFF.
Inner VID	Enter the inner VLAN ID that will be associated with this ACL rule here. The range is from 1 to 4094. <ul style="list-style-type: none"> • Mask - Enter the inner VLAN ID mask value here. The range is from 0x0 to 0xFFF.
VLAN Range	Select and enter the VLAN range that will be associated with this ACL rule here. Enter the starting and ending VLANs in the spaces provided. The range is from 1 to 4094.
CoS	Select the CoS value that will be used here. The range is from 0 to 7 . <ul style="list-style-type: none"> • Mask - Enter the CoS mask value here. The range is from 0x0 to 0x7.
Inner CoS	After selecting the CoS value, select the inner CoS value that will be used here. The range is from 0 to 7 . <ul style="list-style-type: none"> • Mask - Enter the inner CoS mask value here. The range is from 0x0 to 0x7.
Time Range	Enter the name of the time range profile that will be used in this ACL rule here. This name can be up to 32 characters long.

Click the **Apply** button to accept the changes made.

Click the **Back** button to discard the changes made and return to the previous page.

ACL Interface Access Group

This window is used to display and configure the ACL interface access group settings.

To view the following window, click **ACL > ACL Interface Access Group**, as shown below:

Figure 8-17 ACL Interface Access Group Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.

Parameter	Description
From Port - To Port	Select the range of ports that will be used for this configuration here.
Direction	Select the direction here. Options to choose from are In and Out .
Action	Select the action that will be taken here. Options to choose from are Add and Delete .
Type	Select the ACL type here. Options to choose from are IP ACL , IPv6 ACL , MAC ACL , and Expert ACL .
ACL Name	Enter the ACL name here. This name can be up to 32 characters long. Click the Please Select button to select an existing ACL from the list.

Click the **Apply** button to accept the changes made.

After clicking the **Please Select** button, the following window will appear:

ACL Access List

Total Entries: 2

	ID	ACL Name	ACL Type
<input type="radio"/>	1	S-IP-ACL	Standard IP ACL
<input type="radio"/>	2000	E-IP-ACL	Extended IP ACL

1/1 | < << 1 >> > | Go

OK

Figure 8-18 ACL Interface Access Group (Please Select) Window

Select the radio button next to the entry to use that ACL in the configuration.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

Click the **OK** button to accept the selection made.

ACL VLAN Access Map

This window is used to display and configure the ACL VLAN access map settings.

To view the following window, click **ACL > ACL VLAN Access Map**, as shown below:

ACL VLAN Access Map

ACL VLAN Access Map

Access Map Name: 32 chars

Sub Map Number (1-65535):

Action: Forward

Apply

Access Map Name: 32 chars

Counter State: Disabled

Apply

Access Map Name: 32 chars

Clear All Counter

Clear Counter

Find

Total Entries: 1

Access Map Name	Sub Map Number	Action	Match Access-List	Counter State	
map	1	Forward		Disabled	Binding Delete

1/1 | < << 1 >> > | Go

Figure 8-19 ACL VLAN Access Map Window

The fields that can be configured are described below:

Parameter	Description
Access Map Name	Enter the access map name here. This name can be up to 32 characters long.
Sub Map Number	Enter the sub-map number here. This value must be between 1 and 65535.
Action	Select the action that will be taken here. Options to choose from are Forward , Drop , and Redirect . When the Redirect option is selected, select the redirected interface from the drop-down list.
Counter State	Select whether to enable or disable the counter state.

Click the **Apply** button to accept the changes made.

Click the **Clear All Counter** button to clear the counter information for all the access maps.

Click the **Clear Counter** button to clear the counter information for the specified access map.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Binding** button to match an access list to the ACL VLAN access map.

Click the **Delete** button to remove the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Binding** button, the following window will appear:

Figure 8-20 ACL VLAN Access Map (Binding) Window

The fields that can be configured are described below:

Parameter	Description
Match IP Access-List	Here the IP access list that will be matched will be displayed.
Match IPv6 Access-List	Here the IPv6 access list that will be matched will be displayed.
Match MAC Access-List	Here the MAC access list that will be matched will be displayed.

Click the **Please Select** button navigate to a list of access lists that can be selected to be used in this configuration.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the specific entry.

After clicking the **Please Select** button, the following window will appear:

The screenshot shows the 'ACL Access List' window. At the top, it says 'Total Entries: 2'. Below this is a table with the following data:

	ID	ACL Name	ACL Type
<input type="radio"/>	1	S-IP-ACL	Standard IP ACL
<input type="radio"/>	2000	E-IP-ACL	Extended IP ACL

Below the table, there are navigation buttons: '1/1', '<', '<', '1', '>', '>', and 'Go'. An 'OK' button is located at the bottom right.

Figure 8-21 ACL VLAN Access Map (Binding, Selection) Window

Select the radio button next to the entry to use that access list in the configuration.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

Click the **OK** button to accept the selection made.

ACL VLAN Filter

This window is used to display and configure the ACL VLAN filter settings.

To view the following window, click **ACL > ACL VLAN Filter**, as shown below:

The screenshot shows the 'ACL VLAN Filter' window. It has the following configuration fields:

- Access Map Name: 32 chars
- Action: Add (dropdown menu)
- VID List: 1,3-5 All VLANs

An 'Apply' button is located to the right of the VID List field. Below the configuration fields, it says 'Total Entries: 1'. Below this is a table with the following data:

Access Map Name	VID List	
map	1	Delete

Below the table, there are navigation buttons: '1/1', '<', '<', '1', '>', '>', and 'Go'. A 'Delete' button is located to the right of the table.

Figure 8-22 ACL VLAN Filter Window

The fields that can be configured are described below:

Parameter	Description
Access Map Name	Enter the access map name here. This name can be up to 32 characters long.
Action	Select the action that will be taken here. Options to choose from are Add and Delete .
VID List	Enter the VLAN ID list that will be used here. Select the All VLANs option to apply this configuration to all the VLANs configured on this Switch.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

CPU ACL

This window is used to display and configure the CPU ACL settings.

To view the following window, click **ACL > CPU ACL**, as shown below:

Figure 8-23 CPU ACL Window

The fields that can be configured are described below:

Parameter	Description
Filter Map Name	Enter the CPU ACL filter map name here. This name can be up to 32 characters long.

Click the **Apply** button to accept the changes made.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Binding** button to configure the binding settings for the specified entry.

Click the **Delete** button to delete the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Binding** button, the following page will appear.

Figure 8-24 CPU ACL (Binding) Window

The fields that can be configured in **Match IP Access List** are described below:

Parameter	Description
Sequence No.	Enter the sequence number of the associated match entry here. The range is from 1 to 65535. The lower the number is, the higher the priority of the access list.
ACL Name	Enter the standard or extended IP access list name to be matched here. This name can be up to 32 characters long. Alternatively, click the Please Select button to select an existing ACL from the list.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to delete the specified entry.

The fields that can be configured in **Match IPv6 Access List** are described below:

Parameter	Description
Sequence No.	Enter the sequence number of the associated match entry here. The range is from 1 to 65535. The lower the number is, the higher the priority of the access list.
ACL Name	Enter the standard or extended IPv6 access list name to be matched here. This name can be up to 32 characters long. Alternatively, click the Please Select button to select an existing ACL from the list.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to delete the specified entry.

The fields that can be configured in **Match MAC Access List** are described below:

Parameter	Description
Sequence No.	Enter the sequence number of the associated match entry here. The range is from 1 to 65535. The lower the number is, the higher the priority of the access list.
ACL Name	Enter the extended MAC access list name to be matched here. This name can be up to 32 characters long. Alternatively, click the Please Select button to select an existing ACL from the list.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to delete the specified entry.

The fields that can be configured in **Match Expert Access List** are described below:

Parameter	Description
Sequence No.	Enter the sequence number of the associated match entry here. The range is from 1 to 65535. The lower the number is, the higher the priority of the access list.
ACL Name	Enter the extended expert access list name to be matched here. This name can be up to 32 characters long. Alternatively, click the Please Select button to select an existing ACL from the list.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to delete the specified entry.

The fields that can be configured in **Match Ingress Interface** are described below:

Parameter	Description
Unit	Select the Switch unit ID that will be used here.
From Port - To Port	Select the Switch port range that will be used here.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to delete the specified entry.

After clicking the **Please Select** button, the following window will appear:

The screenshot shows a window titled "ACL Access List". At the top left, it says "Total Entries: 2". Below this is a table with the following data:

	ID	ACL Name	ACL Type
<input type="radio"/>	1	S-IP-ACL	Standard IP ACL
<input type="radio"/>	2000	E-IP-ACL	Extended IP ACL

Below the table, there are navigation controls: "1/1", left arrow, right arrow, "1", left arrow, right arrow, and a "Go" button. At the bottom right, there is an "OK" button.

Figure 8-25 CPU ACL (Binding, Please Select) Window

The fields that can be configured are described below:

Parameter	Description
ACL List	Select the radio button next to the access list entry to use that access list in the configuration.

Select the ACL and click the **OK** button to accept the selection made.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

9. Security

Port Security
802.1X
AAA

Server RADIUS Dynamic Author Settings

This window is used to configure the Switch as an AAA server that allows an external policy server to dynamically send updates to the Switch.

To view the following window, click **Security > AAA > Server RADIUS Dynamic Author Settings**, as shown below:

Figure 9-29 Server RADIUS Dynamic Author Settings Window

The fields that can be configured in **Server RADIUS Dynamic Author Global Settings** are described below:

Parameter	Description
Dynamic Author	Select to enable or disable the Switch as an AAA server.
Port	Enter the port number. The range is from 1 to 65535.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Server RADIUS Dynamic Author Settings** are described below:

Parameter	Description
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long. Click the Please Select button to select a pre-configured VRF instance that will be used here.
Client IP Address	Click and enter the IP address of the RADIUS client.
Client Host Name	Click and enter the host name of the RADIUS client.
Server Key Type	Select the key type that will be used here. Options to choose from are Plain Text and Encrypted .
Server Key	Enter the key to be shared between the Switch and a RADIUS client.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the specified entry.

After clicking the **Please Select** button, the following page will appear.

Figure 9-30 Route Preference (Please Select) Window

Select the VRF entry and click the **OK** button to use the selected VRF entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

RADIUS
TACACS+
IMPB
DHCP Server Screening
ARP Spoofing Prevention
BPDU Attack Protection
NetBIOS Filtering
MAC Authentication
Web-based Access Control
Japanese Web-based Access Control

JWAC Port Settings

This window is used to view and configure the JWAC port settings.

To view the following window, click **Security > Japanese Web-based Access Control > JWAC Port Settings**, as shown below:

Figure 9-82 JWAC Port Settings Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the appropriate port range used for the configuration here.

Parameter	Description
State	Select to enable or disable the WAC feature on the port(s) specified.
Max Authenticating User	Enter the maximum number of authentication users allowed here. This value must be between 1 and 100.

Click the **Apply** button to accept the changes made.

JWAC Customize Page Language

This window is used to view and configure the JWAC customize page's language.

To view the following window, click **Security > Japanese Web-based Access Control > JWAC Customize Page Language**, as shown below:

Figure 9-83 JWAC Customize Page Language Window

The fields that can be configured are described below:

Parameter	Description
Customize Page Language	Select the language option that will be used when the JWAC login page is displayed.

Click the **Apply** button to accept the changes made.

JWAC Customize Page

This window is used to view and configure the JWAC customize page settings.

To view the following window, click **Security > Japanese Web-based Access Control > JWAC Customize Page**, as shown below:

Figure 9-84 JWAC Customize Page Window

The fields that can be configured are described below:

Parameter	Description
Page Title	Enter a custom page title message here. This message can be up to 128 characters long.
Login window Title	Enter a custom login window title here. This title can be up to 64 characters long.
User Name Title	Enter a custom username title here. This title can be up to 32 characters long.
Password Title	Enter a custom password title here. This title can be up to 32 characters long.
Logout window Title	Enter a custom logout window title here. This title can be up to 64 characters long.
Notification	Enter additional information to display in the notification area here. This information can be up to 128 characters long for each line. There are 5 lines available for additional information.

Click the **Set to Default** button to replace the information with the default information.

Click the **Apply** button to accept the changes made.

Network Access Authentication
Safeguard Engine
Trusted Host
Traffic Segmentation Settings
Storm Control Settings
DoS Attack Prevention Settings
Zone Defense Settings
SSH
SSL
SFTP Server Settings
Network Protocol Port Protect Settings

Port Security

Port Security Global Settings

This window is used to display and configure the global port security settings. Port Security is a security feature that prevents unauthorized computers (with source MAC addresses) unknown to the Switch prior to locking the port (or ports) from connecting to the Switch's locked ports and gaining access to the network.

To view the following window, click **Security > Port Security > Port Security Global Settings**, as shown below:

VID	Max Learning Address	Current No.
1	No Limit	0

Figure 9-1 Port Security Global Settings Window

The fields that can be configured in **Port Security Trap Settings** are described below:

Parameter	Description
Trap State	Select to enable or disable port security traps on the Switch.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Port Security Trap Rate Settings** are described below:

Parameter	Description
Trap Rate	Enter the number of traps per second. The range is from 0 to 1000. The default value 31 indicates an SNMP trap to be generated for every security violation.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Port Security System Settings** are described below:

Parameter	Description
System Maximum Address	Enter the maximum number of secure MAC addresses allowed. If not specified, the default value is No Limit. The valid range is from 1 to 12288. Tick the No Limit checkbox to allow the maximum number of secure MAC address.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Port Security VLAN Settings** are described below:

Parameter	Description
VID List	Enter the VLAN ID(s) here.
VLAN Max Learning Address	Enter the maximum number of allowed MAC addresses that can be learned on the specified VLAN(s) here. The range is from 1 to 12288. Tick the No Limit checkbox to allow the maximum number of secure MAC address.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Find VLAN** are described below:

Parameter	Description
VID	Enter the VLAN ID that will be located here.

Click the **Find** button to locate a specific entry based on the information entered.

Port Security Port Settings

This window is used to display and configure the port security port settings.

To view the following window, click **Security > Port Security > Port Security Port Settings**, as shown below:

Port Security Port Settings

Unit: 1 From Port: eth1/0/1 To Port: eth1/0/1 State: Disabled Maximum (0-12288): 32 Violation Action: Protect Security Mode: Delete-on-Timeou Aging Time (0-1440): Aging Type: Absolute

Apply

Port	Maximum	Current No.	Violation Action	Violation Count	Security Mode	Admin State	Current State	Aging Time	Aging Type
eth1/0/1	32	0	Protect	-	Delete-on-Timeout	Disabled	-	0	Absolute
eth1/0/2	32	0	Protect	-	Delete-on-Timeout	Disabled	-	0	Absolute
eth1/0/3	32	0	Protect	-	Delete-on-Timeout	Disabled	-	0	Absolute
eth1/0/4	32	0	Protect	-	Delete-on-Timeout	Disabled	-	0	Absolute
eth1/0/5	32	0	Protect	-	Delete-on-Timeout	Disabled	-	0	Absolute
eth1/0/6	32	0	Protect	-	Delete-on-Timeout	Disabled	-	0	Absolute
eth1/0/7	32	0	Protect	-	Delete-on-Timeout	Disabled	-	0	Absolute
eth1/0/8	32	0	Protect	-	Delete-on-Timeout	Disabled	-	0	Absolute

Figure 9-2 Port Security Port Settings Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the appropriate port range used for the configuration here.
State	Select to enable or disable the port security feature on the port(s) specified.
Maximum	Enter the maximum number of secure MAC addresses that will be allowed on the port(s) specified. This value must be between 0 and 12288. By default, this value is 32.
Violation Action	Select the violation action that will be taken here. Options to choose from are Protect , Restrict , and Shutdown .

Parameter	Description
	<ul style="list-style-type: none"> • Selecting Protect specifies to drop all packets from the insecure hosts at the port-security process level, but does not increment the security-violation count. • Selecting Restrict specifies to drop all packets from the insecure hosts at the port-security process level and increments the security-violation count and record the system log. • Selecting Shutdown specifies to shut down the port if there is a security violation and record the system log.
Security Mode	<p>Select the security mode option here. Options to choose from are Permanent and Delete-on-Timeout.</p> <ul style="list-style-type: none"> • Selecting Permanent specifies that under this mode, all learned MAC addresses will not be purged out unless the user manually deletes those entries. • Selecting Delete-on-Timeout specifies that under this mode, all learned MAC addresses will be purged out when an entry is aged out or when the user manually deletes these entries.
Aging Time	Enter the aging time value used for auto-learned dynamic secured addresses on the specified port here. This value must be between 0 and 1440 minutes.
Aging Type	<p>Select the aging type here. Options to choose from are Absolute and Inactivity.</p> <ul style="list-style-type: none"> • Selecting Absolute specifies that all the secure addresses on this port age out exactly after the time specified and is removed from the secure address list. This is the default type. • Selecting Inactivity specifies that the secure addresses on this port age out only if there is no data traffic from the secure source address for the specified time period.

Click the **Apply** button to accept the changes made.

Port Security Address Entries

This window is used to view, clear and configure the port security address entries.

To view the following window, click **Security > Port Security > Port Security Address Entries**, as shown below:

Port Security Address Entries

Unit: 1 Port: eth1/0/1 MAC Address: 00-84-57-00-00-00 Permanent VID (1-4094):

Add Delete Clear by Port Clear by MAC

Total Entries: 1 Clear All

Port	VID	MAC Address	Address Type	Remaining Time (mins)
eth1/0/18	1	00-11-22-33-44-55	Permanent	-

1/1 < < 1 > > Go

Figure 9-3 Port Security Address Entries Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
Port	Select the appropriate port range used for the configuration here.

Parameter	Description
MAC Address	Enter the MAC address here. Select the Permanent option to specify that all learned MAC addresses will not be purged out unless the user manually deletes those entries.
VID	Enter the VLAN ID here. This value must be between 1 and 4094.

Click the **Add** button to add a new entry based on the information entered.

Click the **Delete** button to remove a new entry based on the information entered.

Click the **Clear by Port** button to clear the information based on the port selected.

Click the **Clear by MAC** button to clear the information based on the MAC address entered.

Click the **Clear All** button to clear all the information in this table.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

802.1X

802.1X (Port-based and Host-based Access Control)

The IEEE 802.1X standard is a security measure for authorizing and authenticating users to gain access to various wired or wireless devices on a specified Local Area Network by using a Client and Server based access control model. This is accomplished by using a RADIUS server to authenticate users trying to access a network by relaying Extensible Authentication Protocol over LAN (EAPOL) packets between the Client and the Server.

The following figure represents a basic EAPOL packet:

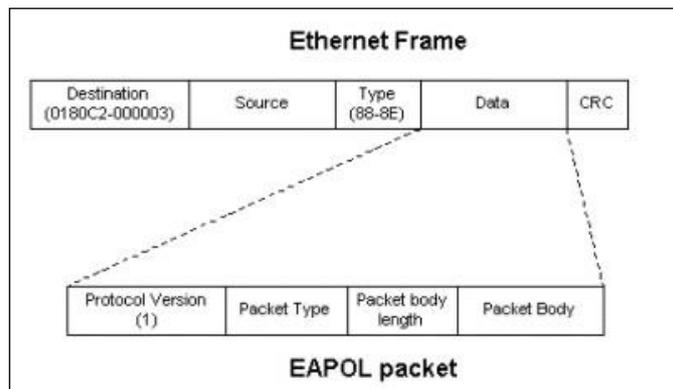


Figure 9-4 The EAPOL Packet

Utilizing this method, unauthorized devices are restricted from connecting to a LAN through a port to which the user is connected. EAPOL packets are the only traffic that can be transmitted through the specific port until authorization is granted. The 802.1X access control method has three roles, each of which are vital to creating and up keeping a stable and working Access Control security method.

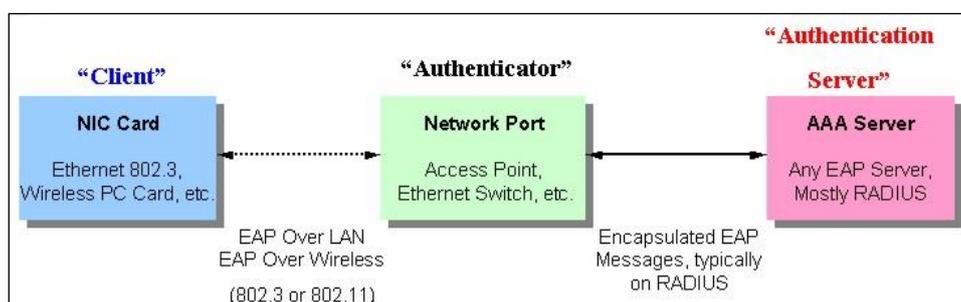


Figure 9-5 The three roles of 802.1X

The following section will explain the three roles of Client, Authenticator and Authentication Server in greater detail.

Authentication Server

The Authentication Server is a remote device that is connected to the same network as the Client and Authenticator, must be running a RADIUS Server program and must be configured properly on the Authenticator (Switch). Clients connected to a port on the Switch must be authenticated by the Authentication Server (RADIUS) before attaining any services offered by the Switch on the LAN. The role of the Authentication Server is to certify the identity of the Client attempting to access the network by exchanging secure information between the RADIUS server and the Client through EAPOL packets and, in turn, informs the Switch whether or not the Client is granted access to the LAN and/or Switches services.

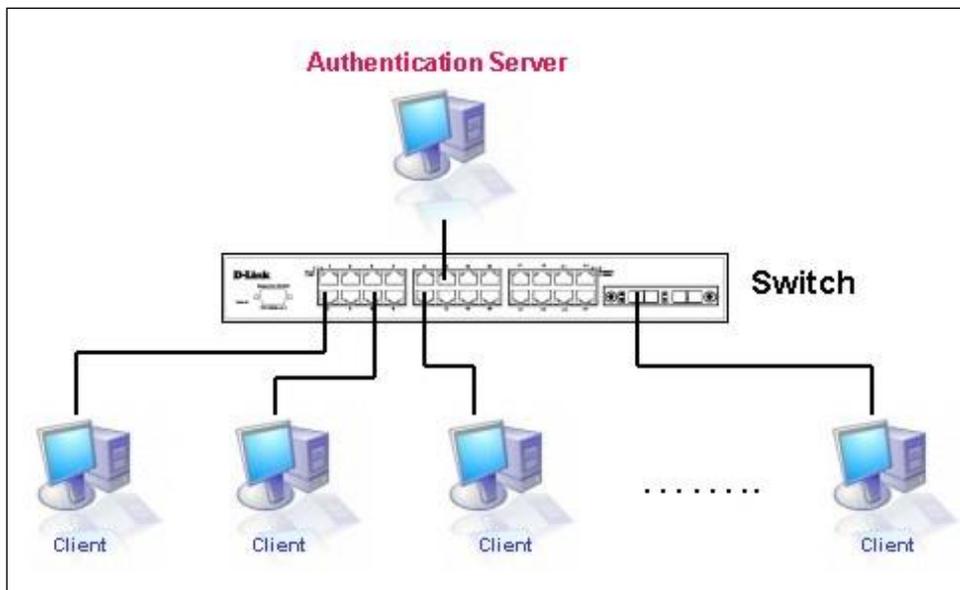


Figure 9-6 The Authentication Server

Authenticator

The Authenticator (the Switch) is an intermediary between the Authentication Server and the Client. The Authenticator serves two purposes when utilizing the 802.1X function. The first purpose is to request certification information from the Client through EAPOL packets, which is the only information allowed to pass through the Authenticator before access is granted to the Client. The second purpose of the Authenticator is to verify the information gathered from the Client with the Authentication Server, and to then relay that information back to the Client.

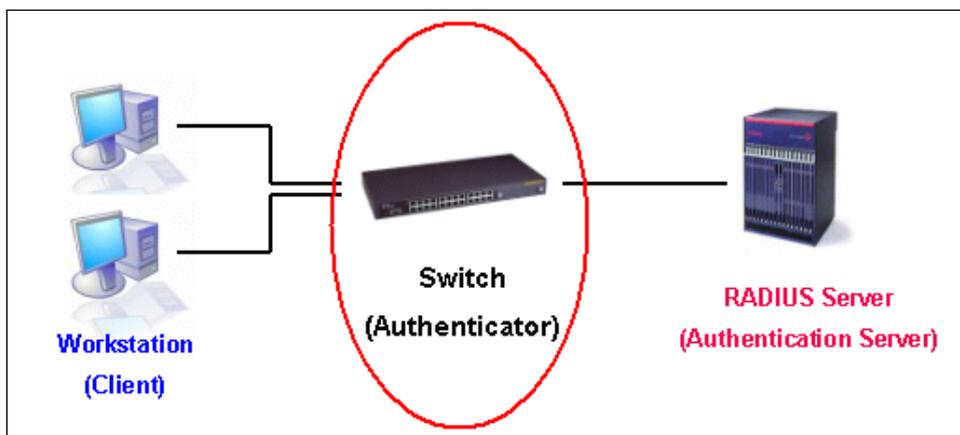


Figure 9-7 The Authenticator

Three steps must be implemented on the Switch to properly configure the Authenticator.

- The 802.1X State must be Enabled. (**Security > 802.1X > 802.1X Global Settings**)

- The 802.1X settings must be implemented by port (**Security > 802.1X > 802.1X Port Settings**)
- A RADIUS server must be configured on the Switch. (**Security > RADIUS > RADIUS Server Settings**)

Client

The Client is simply the end station that wishes to gain access to the LAN or Switch services. All end stations must be running software that is compliant with the 802.1X protocol. For users running Windows 7 and later, that software is included within the operating system. All other users are required to attain 802.1X client software from an outside source. The Client will request access to the LAN and or Switch through EAPOL packets and, in turn will respond to requests from the Switch.

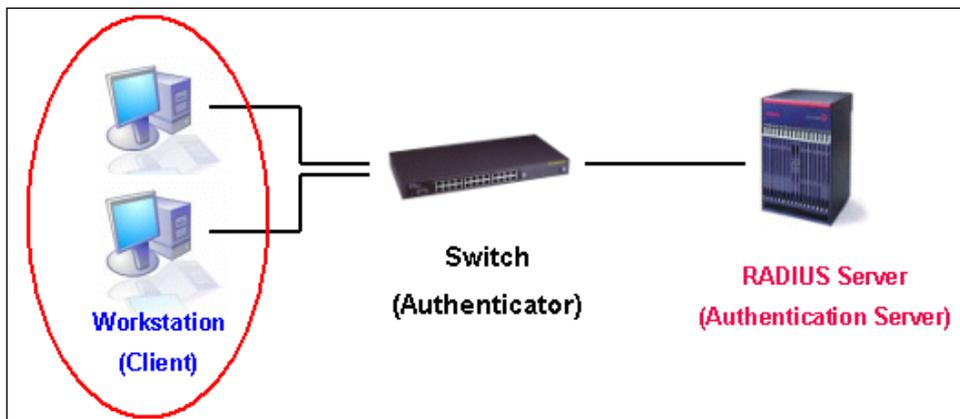


Figure 9-8 The Client

Authentication Process

Utilizing the three roles stated above, the 802.1X protocol provides a stable and secure way of authorizing and authenticating users attempting to access the network. Only EAPOL traffic is allowed to pass through the specified port before a successful authentication is made. This port is “locked” until the point when a Client with the correct username and password (and MAC address if 802.1X is enabled by MAC address) is granted access and therefore successfully “unlocks” the port. Once the port is unlocked, normal traffic is allowed to pass through the port. The following figure displays a more detailed explanation of how the authentication process is completed between the three roles stated above.

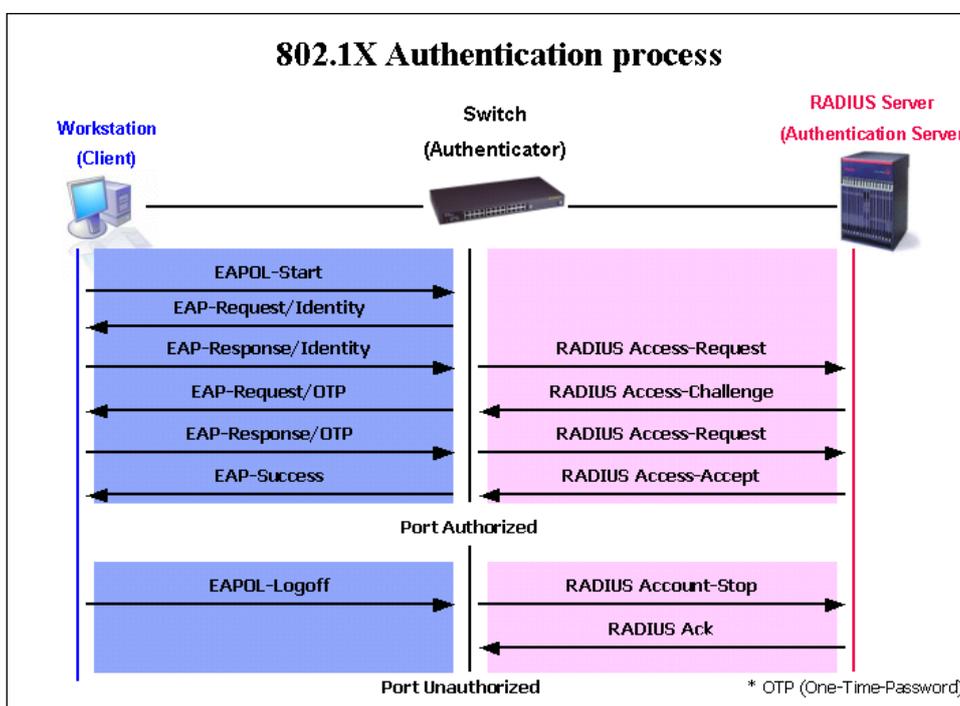


Figure 9-9 The 802.1X Authentication Process

The D-Link implementation of 802.1X allows network administrators to choose between two types of Access Control used on the Switch, which are:

- **Port-based Access Control** - This method requires only one user to be authenticated per port by a remote RADIUS server to allow the remaining users on the same port access to the network.
- **Host-based Access Control** - Using this method, the Switch will automatically learn up to a maximum of 4096 MAC addresses by port and set them in a list. Each MAC address must be authenticated by the Switch using a remote RADIUS server before being allowed access to the Network.

Understanding 802.1X Port-based and Host-based Network Access Control

The original intent behind the development of 802.1X was to leverage the characteristics of point-to-point in LANs. As any single LAN segment in such infrastructures has no more than two devices attached to it, one of which is a Bridge Port. The Bridge Port detects events that indicate the attachment of an active device at the remote end of the link, or an active device becoming inactive. These events can be used to control the authorization state of the Port and initiate the process of authenticating the attached device if the Port is unauthorized. This is the Port-based Network Access Control.

Port-based Network Access Control

Once the connected device has successfully been authenticated, the Port then becomes Authorized, and all subsequent traffic on the Port is not subject to access control restriction until an event occurs that causes the Port to become Unauthorized. Hence, if the Port is actually connected to a shared media LAN segment with more than one attached device, successfully authenticating one of the attached devices effectively provides access to the LAN for all devices on the shared segment. Clearly, the security offered in this situation is open to attack.

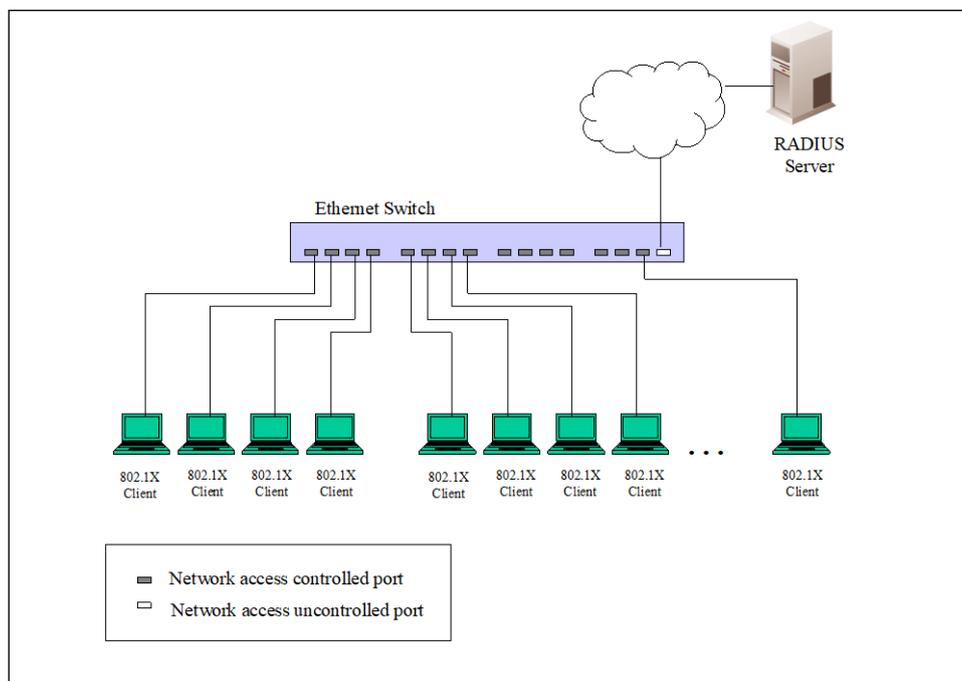


Figure 9-10 Example of Typical Port-based Configuration

Host-based Network Access Control

In order to successfully make use of 802.1X in a shared media LAN segment, it would be necessary to create “logical” Ports, one for each attached device that required access to the LAN. The Switch would regard the single physical Port connecting it to the shared media segment as consisting of a number of distinct logical Ports, each logical Port being independently controlled from the point of view of EAPOL exchanges and authorization state. The Switch learns each attached devices’ individual MAC addresses, and effectively creates a logical Port that the attached device can then use to communicate with the LAN via the Switch.

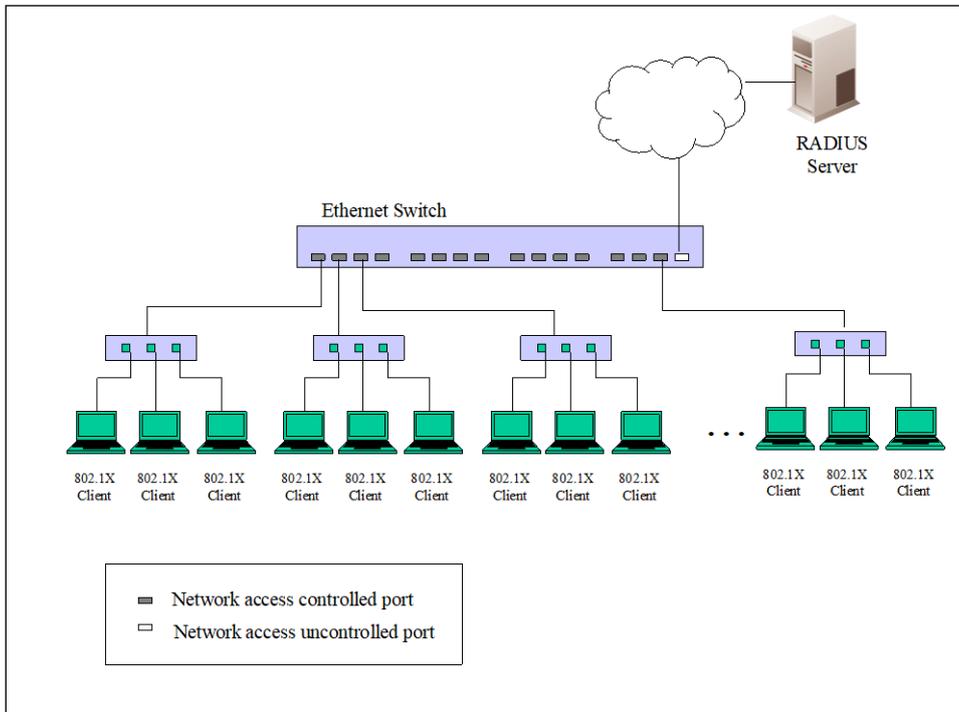


Figure 9-11 Example of Typical Host-based Configuration

802.1X Global Settings

This window is used to display and configure the global 802.1X settings.

To view the following window, click **Security > 802.1X > 802.1X Global Settings**, as shown below:

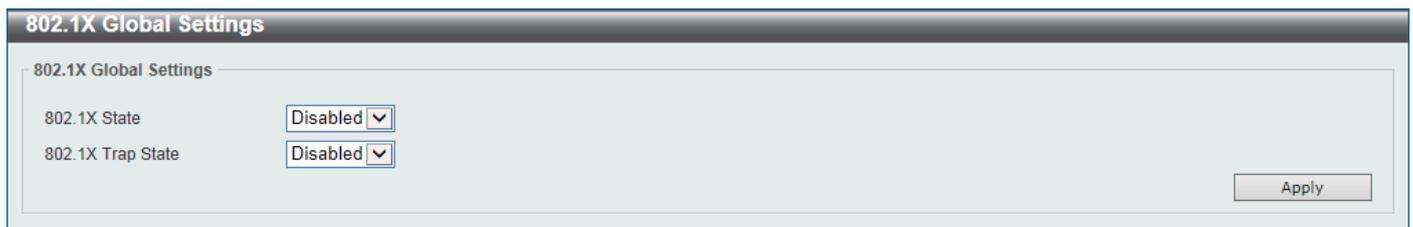


Figure 9-12 802.1X Global Settings Window

The fields that can be configured are described below:

Parameter	Description
802.1X State	Select to enable or disable the global 802.1X state here.
802.1X Trap State	Select to enable or disable the 802.1X trap state here.

Click the **Apply** button to accept the changes made.

802.1X Port Settings

This window is used to display and configure the 802.1X port settings.

To view the following window, click **Security > 802.1X > 802.1X Port Settings**, as shown below:

Port	Direction	Port Control	Forward PDU	MaxReq	PAE Authenticator	ServerTimeout	SuppTimeout	TX Period
eth1/0/1	Both	Auto	Disabled	2	None	30	30	30
eth1/0/2	Both	Auto	Disabled	2	None	30	30	30
eth1/0/3	Both	Auto	Disabled	2	None	30	30	30
eth1/0/4	Both	Auto	Disabled	2	None	30	30	30
eth1/0/5	Both	Auto	Disabled	2	None	30	30	30
eth1/0/6	Both	Auto	Disabled	2	None	30	30	30

Figure 9-13 802.1X Port Settings Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the appropriate port range used for the configuration here.
Direction	Select the direction here. Options to choose from are Both and In . This option configures the direction of the traffic on a controlled port as unidirectional (In) or bidirectional (Both). The In control direction is only valid when the Host Mode is configured as Multi Host in the Network Access Authentication Port Settings window.
Port Control	Select the port control option here. Options to choose from are ForceAuthorized , Auto , and ForceUnauthorized . If the port control is set to force-authorized, then the port is not controlled in both directions. If the port control is set to automatic, then the access to the port for the controlled direction needs to be authenticated. If the port control is set to force-unauthorized, then the access to the port for the controlled direction is blocked.
Forward PDU	Select to enable or disable the forward PDU option here.
MaxReq	Enter the maximum required times value here. This value must be between 1 and 10. By default, this option is 2. This option configures the maximum number of times that the backend authentication state machine will retransmit an Extensible Authentication Protocol (EAP) request frame to the supplicant before restarting the authentication process.
PAE Authenticator	Select to enable or disable the PAE authenticator option here. This option configures a specific port as an IEEE 802.1X port access entity (PAE) authenticator.
Server Timeout	Enter the server timeout value here. This value must be between 1 and 65535 seconds. By default, this value is 30 seconds.
SuppTimeout	Enter the supplicant timeout value here. This value must be between 1 and 65535 seconds. By default, this value is 30 seconds.
TX Period	Enter the transmission period value here. This value must be between 1 and 65535 seconds. By default, this value is 30 seconds.

Click the **Apply** button to accept the changes made.

Authentication Sessions Information

This window is used to display and configure the authentication session information.

To view the following window, click **Security > 802.1X > Authentication Sessions Information**, as shown below:

Figure 9-14 Authentication Sessions Information Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the appropriate port range used for the configuration here.

Click the **Init by Port** button to initiate the session information based on the port selections made.

Click the **ReAuth by Port** button to re-authenticate the session information based on the port selections made.

Click the **Init by MAC** button to initiate the session information based on the MAC address.

Click the **ReAuth by MAC** button to re-authenticate the session information based on the MAC address.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

Authenticator Statistics

This window is used to view and clear the authenticator statistics.

To view the following window, click **Security > 802.1X > Authenticator Statistics**, as shown below:

Figure 9-15 Authenticator Statistics Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this query here.
Port	Select the appropriate port used for the query here.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Clear Counters** button to clear the counter information based on the selections made.

Click the **Clear All** button to clear all the information in this table.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

Authenticator Session Statistics

This window is used to view and clear the authenticator session statistics.

To view the following window, click **Security > 802.1X > Authenticator Session Statistics**, as shown below:

Figure 9-16 Authenticator Session Statistics Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this query here.
Port	Select the appropriate port used for the query here.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Clear Counters** button to clear the counter information based on the selections made.

Click the **Clear All** button to clear all the information in this table.

Authenticator Diagnostics

This window is used to view and clear the authenticator diagnostics information.

To view the following window, click **Security > 802.1X > Authenticator Diagnostics**, as shown below:

Unit 1 Settings	
Total Entries: 1	
Port	eth1/0/1
EntersConnecting	3
EAP-LogoffsWhileConnecting	0
EntersAuthenticating	0
SuccessesWhileAuthenticating	0
TimeoutsWhileAuthenticating	0
FailsWhileAuthenticating	0
ReauthsWhileAuthenticating	0
EAP-StartsWhileAuthenticating	0
EAP-LogoffsWhileAuthenticating	0
ReauthsWhileAuthenticated	0
EAP-StartsWhileAuthenticated	0
EAP-LogoffsWhileAuthenticated	0
BackendResponses	0
BackendAccessChallenges	0
BackendOtherRequestsToSupplicant	0
BackendNonNakResponsesFromSupplicant	0
BackendAuthSuccesses	0
BackendAuthFails	0

Figure 9-17 Authenticator Diagnostics Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this query here.
Port	Select the appropriate port used for the query here.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Clear Counters** button to clear the counter information based on the selections made.

Click the **Clear All** button to clear all the information in this table.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

AAA

AAA Global Settings

This window is used to enable or disable the global Authentication, Authorization, and Accounting (AAA) state.

To view the following window, click **Security > AAA > AAA Global Settings**, as shown below:

Figure 9-18 AAA Global Settings Window

The fields that can be configured are described below:


Parameter	Description
AAA State	Select to enable or disable the global Authentication, Authorization, and Accounting (AAA) state.

Click the **Apply** button to accept the changes made.

Application Authentication Settings

This window is used to display and configure the application authentication settings.


To view the following window, click **Security > AAA > Application Authentication Settings**, as shown below:

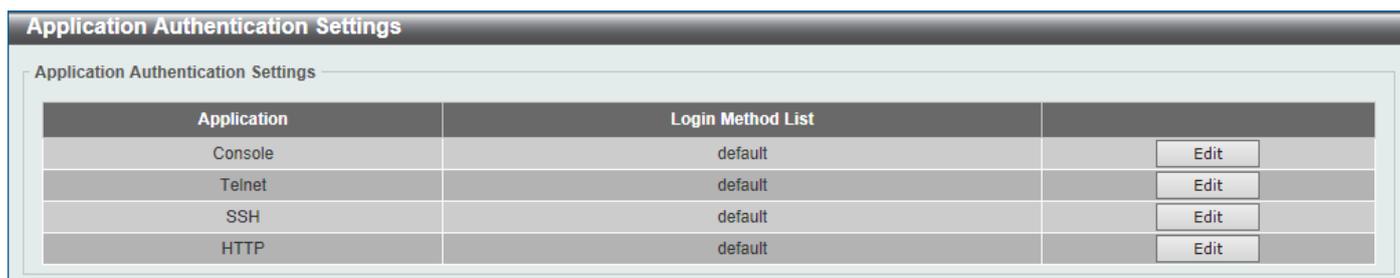

Application Authentication Settings		
Application	Login Method List	
Console	default	Edit
Telnet	default	Edit
SSH	default	Edit
HTTP	default	Edit

Figure 9-19 Application Authentication Settings Window

Click the **Edit** button to re-configure the specific entry.

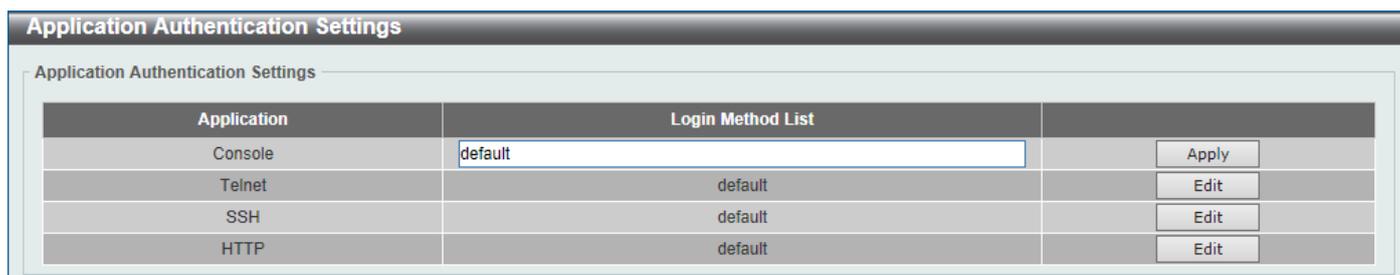

Application Authentication Settings		
Application	Login Method List	
Console	<input type="text" value="default"/>	Apply
Telnet	default	Edit
SSH	default	Edit
HTTP	default	Edit

Figure 9-20 Application Authentication Settings (Edit) Window

The fields that can be configured are described below:

Parameter	Description
Login Method List	After clicking the Edit button for the specific entry, enter the login method list name used here.

Click the **Edit** button to re-configure the specific entry.

Click the **Apply** button to accept the changes made.

Application Accounting Settings

This window is used to display and configure the application accounting settings.

To view the following window, click **Security > AAA > Application Accounting Settings**, as shown below:

The screenshot shows the 'Application Accounting Settings' window. It is divided into two main sections:

- Application Accounting Exec Method List:** A table with columns 'Application' and 'Exec Method List'. The 'Application' column lists Console, Telnet, SSH, and HTTP. The 'Exec Method List' column is empty for all entries. Each row has an 'Edit' button to its right.
- Application Accounting Commands Method List:** This section includes:
 - Application: Console (dropdown)
 - Level: 1 (dropdown)
 - Commands Method List: 32 chars (text input)
 - Apply button
 - Total Entries: 1
 - A table with columns 'Application', 'Level', and 'Commands Method List'. The 'Application' column lists Console. The 'Level' column lists 1. The 'Commands Method List' column lists method. There is a 'Delete' button to the right of the table.
 - Navigation controls: 1/1, left arrow, right arrow, 1, left arrow, right arrow, and a Go button.

Figure 9-21 Application Accounting Settings Window

Click the **Edit** button to re-configure the specific entry.

The screenshot shows the 'Application Accounting Settings (Edit)' window. It is similar to Figure 9-21 but with the following differences:

- Application Accounting Exec Method List:** The 'Exec Method List' column for the 'Console' entry now contains a text input field. The 'Apply' button is now to the right of this input field. The 'Edit' buttons for Telnet, SSH, and HTTP are still present.
- Application Accounting Commands Method List:** This section remains the same as in Figure 9-21.

Figure 9-22 Application Accounting Settings (Edit) Window

The fields that can be configured in **Application Accounting Exec Method list** are described below:

Parameter	Description
Exec Method List	After clicking the Edit button for the specific entry, enter the EXEC method list name used here.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Application Accounting Commands Method List** are described below:

Parameter	Description
Application	Select the application used here. Options to choose from are Console , Telnet , and SSH .
Level	Select the privilege level used here. Options to choose from are levels 1 to 15.
Commands Method List	Enter the commands method list name used here.

Click the **Edit** button to re-configure the specific entry.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

Authentication Settings

This window is used to display and configure the AAA network and EXEC authentication settings.

To view the following window, click **Security > AAA > Authentication Settings**, as shown below:

The screenshot shows the 'Authentication Settings' window with two tabs: 'AAA Authentication Network' and 'AAA Authentication Exec'. The 'AAA Authentication Network' tab is active, displaying five sections for different authentication methods: 802.1X, JWAC, MAC-Auth, WEB-Auth, and IGMP-Auth Default Group Radius. Each section includes a 'Status' dropdown menu (all set to 'Disabled') and four 'Method' dropdown menus (all set to 'Please Select'). An 'Apply' button is located at the bottom right of each section.

Figure 9-23 Authentication Settings Window

The fields that can be configured in **AAA Authentication 802.1X** are described below:

Parameter	Description
Status	Select to enable or disable the AAA 802.1X authentication state here.
Method 1 ~ Method 4	Select the method lists that will be used for this configuration here. Options to choose from are: <ul style="list-style-type: none"> none - Normally, the method is listed as the last method. The user will pass authentication if it is not denied by previous method authentication. local - Specifies to use the local database for authentication. group - Specifies to use the server groups defined by the AAA group server. Enter the AAA group server name in the space provided. This string can be up to 32 characters long. radius - Specifies to use the servers defined by the RADIUS server host command.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **AAA Authentication JWAC** are described below:

Parameter	Description
Status	Select to enable or disable the AAA JWAC authentication state here.
Method 1 ~ Method 4	Select the method lists that will be used for this configuration here. Options to choose from are: <ul style="list-style-type: none"> • none - Normally, the method is listed as the last method. The user will pass authentication if it is not denied by previous method authentication. • local - Specifies to use the local database for authentication. • group - Specifies to use the server groups defined by the AAA group server. Enter the AAA group server name in the space provided. This string can be up to 32 characters long. • radius - Specifies to use the servers defined by the RADIUS server host command.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **AAA Authentication MAC-Auth** are described below:

Parameter	Description
Status	Select to enable or disable the AAA MAC authentication state here.
Method 1 ~ Method 4	Select the method lists that will be used for this configuration here. Options to choose from are: <ul style="list-style-type: none"> • none - Normally, the method is listed as the last method. The user will pass authentication if it is not denied by previous method authentication. • local - Specifies to use the local database for authentication. • group - Specifies to use the server groups defined by the AAA group server. Enter the AAA group server name in the space provided. This string can be up to 32 characters long. • radius - Specifies to use the servers defined by the RADIUS server host command.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **AAA Authentication WEB-Auth** are described below:

Parameter	Description
Status	Select to enable or disable the AAA Web authentication state here.
Method 1 ~ Method 4	Select the method lists that will be used for this configuration here. Options to choose from are: <ul style="list-style-type: none"> • none - Normally, the method is listed as the last method. The user will pass authentication if it is not denied by previous method authentication. • local - Specifies to use the local database for authentication. • group - Specifies to use the server groups defined by the AAA group server. Enter the AAA group server name in the space provided. This string can be up to 32 characters long. • radius - Specifies to use the servers defined by the RADIUS server host command.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **AAA Authentication IGMP-Auth Default Group RADIUS** are described below:

Parameter	Description
Status	Select to enable or disable the AAA authentication IGMP authentication default group RADIUS feature here.

Click the **Apply** button to accept the changes made.

After clicking the **AAA Authentication Exec** tab, the following page will appear.

Figure 9-24 Authentication Settings (AAA Authentication EXEC) Window

The fields that can be configured in **AAA Authentication Enable** are described below:

Parameter	Description
Status	Select to enable or disable the AAA authentication enable state here.
Method 1 ~ Method 4	Select the method lists that will be used for this configuration here. Options to choose from are: <ul style="list-style-type: none"> none - Normally, the method is listed as the last method. The user will pass the authentication if it is not denied by previous method authentication. enable - Specifies to use the local enable password for authentication. group - Specifies to use the server groups defined by the AAA group server command. Enter the AAA group server name in the space provided. This string can be up to 32 characters long. radius - Specifies to use the servers defined by the RADIUS server host command. tacacs+ - Specifies to use the servers defined by the TACACS+ server host command.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **AAA Authentication Login** are described below:

Parameter	Description
List Name	Enter the method list name that will be used with the AAA authentication login option here.
Method 1 ~ Method 4	Select the method lists that will be used for this configuration here. Options to choose from are: <ul style="list-style-type: none"> none - Normally, the method is listed as the last method. The user will pass authentication if it is not denied by previous method's authentication. local - Specifies to use the local database for authentication. group - Specifies to use the server groups defined by the AAA group server command. Enter the AAA group server name in the space provided. This string can be up to 32 characters long. radius - Specifies to use the servers defined by the RADIUS server host command.

Parameter	Description
	<ul style="list-style-type: none"> tacacs+ - Specifies to use the servers defined by the TACACS+ server host command.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the specified entry.

Accounting Settings

This window is used to display and configure the AAA accounting settings.

To view the following window, click **Security > AAA > Accounting Settings**, as shown below:

Figure 9-25 Accounting Settings Window

The fields that can be configured in **AAA Accounting Network** are described below:

Parameter	Description
Default	Select to enable or disable the use of the default method list here.
Method 1 ~ Method 4	Select the method lists that will be used for this configuration here. Options to choose from are none , group , radius , and tacacs+ . The none option is only available for Method 1 .

Click the **Apply** button to accept the changes made.

After clicking the **AAA Accounting System** tab, the following page will appear.

Figure 9-26 Accounting Settings (AAA Accounting System) Window

The fields that can be configured in **AAA Accounting System** are described below:

Parameter	Description
Default	Select to enable or disable the use of the default method list here.
Method 1 ~ Method 4	Select the method lists that will be used for this configuration here. Options to choose from are none , group , radius , and tacacs+ . The none option is only available for Method 1 .

Click the **Apply** button to accept the changes made.

After clicking the **AAA Accounting Exec** tab, the following page will appear.

Figure 9-27 Accounting Settings (AAA Accounting Exec) Window

The fields that can be configured in **AAA Accounting Exec** are described below:

Parameter	Description
List Name	Enter the method list name that will be used with the AAA accounting EXEC option here.
Method 1 ~ Method 4	Select the method lists that will be used for this configuration here. Options to choose from are none , group , radius , and tacacs+ . The none option is only available for Method 1 .

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the specified entry.

After clicking the **AAA Accounting Commands** tab, the following page will appear.

Figure 9-28 Accounting Settings (AAA Accounting Commands) Window

The fields that can be configured are described below:

Parameter	Description
Level	Select the privilege level used here. Options to choose from are levels 1 to 15.
List Name	Enter the method list name that will be used with the AAA accounting commands option here.
Method 1 ~ Method 4	Select the method lists that will be used for this configuration here. Options to choose from are none , group , and tacacs+ . The none option is only available for Method 1 .

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

Server RADIUS Dynamic Author Settings

This window is used to configure the Switch as an AAA server that allows an external policy server to dynamically send updates to the Switch.

To view the following window, click **Security > AAA > Server RADIUS Dynamic Author Settings**, as shown below:

Figure 9-29 Server RADIUS Dynamic Author Settings Window

The fields that can be configured in **Server RADIUS Dynamic Author Global Settings** are described below:

Parameter	Description
Dynamic Author	Select to enable or disable the Switch as an AAA server.
Port	Enter the port number. The range is from 1 to 65535.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Server RADIUS Dynamic Author Settings** are described below:

Parameter	Description
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long. Click the Please Select button to select a pre-configured VRF instance that will be used here.
Client IP Address	Click and enter the IP address of the RADIUS client.
Client Host Name	Click and enter the host name of the RADIUS client.
Server Key Type	Select the key type that will be used here. Options to choose from are Plain Text and Encrypted .
Server Key	Enter the key to be shared between the Switch and a RADIUS client.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the specified entry.

After clicking the **Please Select** button, the following page will appear.

Figure 9-30 Route Preference (Please Select) Window

Select the VRF entry and click the **OK** button to use the selected VRF entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

RADIUS

RADIUS Global Settings

This window is used to display and configure the global RADIUS settings.

To view the following window, click **Security > RADIUS > RADIUS Global Settings**, as shown below:

Figure 9-31 RADIUS Global Settings Window

The fields that can be configured in **RADIUS Global Settings** are described below:

Parameter	Description
DeadTime	<p>Enter the dead time value here. This value must be between 1 and 1440 minutes. By default, this value is 0 minutes. When this option is 0, the unresponsive server will not be marked as dead. This setting can be used to improve the authentication processing time by setting the dead time to skip the unresponsive server host entries.</p> <p>When the system performs authentication with the authentication server, it attempts one server at a time. If the attempted server does not respond, the system will attempt the next server. When the system finds a server does not</p>

Parameter	Description
	respond, it will mark the server as down, start a dead time timer, and skip them in authentication of the following requests until expiration of the dead time.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **RADIUS Global IPv4 Source Interface** are described below:

Parameter	Description
IPv4 RADIUS Source Interface State	Select to enable or disable the IPv4 RADIUS source interface state here.
IPv4 RADIUS Source Interface Type	Select the IPv4 RADIUS source interface type here. Options to choose from are Loopback , MGMT , and VLAN .
Interface ID	Enter the interface ID here. The range is from 1 to 8.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **RADIUS Global IPv6 Source Interface** are described below:

Parameter	Description
IPv6 RADIUS Source Interface State	Select to enable or disable the IPv6 RADIUS source interface state here.
IPv6 RADIUS Source Interface Type	Select the IPv6 RADIUS source interface type here. Options to choose from are Loopback , MGMT , and VLAN .
Interface ID	Enter the interface ID here. The range is from 1 to 8.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **RADIUS Server Attribute Settings** are described below:

Parameter	Description
RADIUS Server Attribute NAS-IP-Address	Enter the RADIUS server's attribute NAS-IP-Address here.
RADIUS Server Attribute Event-Timestamp	Select to enable or disable the sending of the RADIUS attribute 55 in accounting packets.

Click the **Apply** button to accept the changes made.

RADIUS Server Settings

This window is used to display and configure the RADIUS server settings.

To view the following window, click **Security > RADIUS > RADIUS Server Settings**, as shown below:

RADIUS Server Settings

RADIUS Server Settings

IP Address
 IPv6 Address

Authentication Port (0-65535)
 Accounting Port (0-65535)

Retransmit (0-20) times
 Timeout (1-255) sec

Key Type
 Key

Total Entries: 1

IPv4/IPv6 Address	Authentication Port	Accounting Port	Timeout	Retransmit	Key	
10.90.90.1	1812	1813	5	2	*****	<input type="button" value="Delete"/>

Figure 9-32 RADIUS Server Settings Window

The fields that can be configured are described below:

Parameter	Description
IP Address	Enter the RADIUS server IPv4 address here.
IPv6 Address	Enter the RADIUS server IPv6 address here.
Authentication Port	Enter the authentication port number used here. This value must be between 0 and 65535. By default, this value is 1812. If no authentication is used, use the value 0.
Accounting Port	Enter the accounting port number used here. This value must be between 0 and 65535. By default, this value is 1813. If no accounting is used, use the value 0.
Retransmit	Enter the retransmit value used here. This value must be between 0 and 20. By default, this value is 3. To disable this option, enter the value 0.
Timeout	Enter the timeout value used here. This value must be between 1 and 255 seconds. By default, this value is 5 seconds.
Key Type	Select the key type that will be used here. Options to choose from are Plain Text and Encrypted .
Key	Enter the key, used to communicate with the RADIUS server, here.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the specified entry.

RADIUS Group Server Settings

This window is used to display and configure the RADIUS group server settings.

To view the following window, click **Security > RADIUS > RADIUS Group Server Settings**, as shown below:

RADIUS Group Server Settings

RADIUS Group Server Settings

Group Server Name

IP Address
 IPv6 Address

Total Entries: 2

Group Server Name	IPv4/IPv6 Address	
group	10.1.1.1	<input type="button" value="Show Detail"/> <input type="button" value="Delete"/>
radius	10.90.90.9...	<input type="button" value="Show Detail"/> <input type="button" value="Delete"/>

Figure 9-33 RADIUS Group Server Settings Window

The fields that can be configured are described below:

Parameter	Description
Group Server Name	Enter the RADIUS group server name here. This name can be up to 32 characters long.
IP Address	Enter the group server IPv4 address here.
IPv6 Address	Enter the group server IPv6 address here.

Click the **Add** button to add a new entry based on the information entered.

Click the **Show Detail** button to view and configure more detailed settings for the RADIUS group server.

Click the **Delete** button to remove the specified entry.

After clicking the **Show Detail** button, the following page will be available.

Figure 9-34 RADIUS Group Server Settings (Detail) Window

The fields that can be configured are described below:

Parameter	Description
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long.
IPv4 RADIUS Source Interface State	Select to enable or disable the IPv4 RADIUS source interface state here.
IPv4 RADIUS Source Interface Type	Select the IPv4 RADIUS source interface type here. Options to choose from are Loopback , MGMT , and VLAN .
Interface ID	Enter the interface ID here. The range is from 1 to 8.
IPv6 RADIUS Source Interface State	Select to enable or disable the IPv6 RADIUS source interface state here.
IPv6 RADIUS Source Interface Type	Select the IPv6 RADIUS source interface type here. Options to choose from are Loopback , MGMT , and VLAN .
Interface ID	Enter the interface ID here. The range is from 1 to 8.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the specified entry.

Click the **Back** button to return to the previous window.

RADIUS Statistic

This window is used to view and clear the RADIUS statistics information.

To view the following window, click **Security > RADIUS > RADIUS Statistic**, as shown below:

RADIUS Statistic

RADIUS Statistic

Group Server Name:

Total Entries: 1

RADIUS Server Address	Authentication Port	Accounting Port	State
10.90.90.91	1812	1813	Up

1/1 |< < 1 > >|

RADIUS Server Address: 10.90.90.91

Parameter	Authentication Port	Accounting Port
Round Trip Time	0	0
Access Requests	0	NA
Access Accepts	0	NA
Access Rejects	0	NA
Access Challenges	0	NA
Acct Request	NA	0
Acct Response	NA	0
Retransmissions	0	0
Malformed Responses	0	0
Bad Authenticators	0	0
Pending Requests	0	0
Timeouts	0	0
Unknown Types	0	0
Packets Dropped	0	0

Figure 9-35 RADIUS Statistic Window

The fields that can be configured are described below:

Parameter	Description
Group Server Name	Select the RADIUS group server name from this list here.

Click the **Clear** button to clear the information based on the selections made.

Click the **Clear All** button to clear all the information in this table.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

TACACS+

TACACS+ Global Settings

This window is used to display and configure the global TACACS+ server settings.

To view the following window, click **Security > TACACS+ > TACACS+ Global Settings**, as shown below:

Figure 9-36 TACACS+ Global Settings Window

The fields that can be configured in **TACACS+ Global IPv4 Source Interface** are described below:

Parameter	Description
IPv4 TACACS+ Source Interface State	Select to enable or disable the IPv4 TACACS+ source interface state here.
IPv4 TACACS+ Source Interface Type	Select the IPv4 RADIUS source interface type here. Options to choose from are Loopback , MGMT , and VLAN .
Interface ID	Enter the interface ID here. The range is from 1 to 8.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **TACACS+ Global IPv6 Source Interface** are described below:

Parameter	Description
IPv6 TACACS+ Source Interface State	Select to enable or disable the IPv6 TACACS+ source interface state here.
IPv6 TACACS+ Source Interface Type	Select the IPv6 RADIUS source interface type here. Options to choose from are Loopback , MGMT , and VLAN .
Interface ID	Enter the interface ID here. The range is from 1 to 8.

Click the **Apply** button to accept the changes made.

TACACS+ Server Settings

This window is used to display and configure the TACACS+ server settings.

To view the following window, click **Security > TACACS+ > TACACS+ Server Settings**, as shown below:

Figure 9-37 TACACS+ Server Settings Window

The fields that can be configured are described below:

Parameter	Description
IP Address	Enter the TACACS+ server IPv4 address here.
IPv6 Address	Enter the TACACS+ server IPv6 address here.
Port	Enter the port number used here. This value must be between 1 and 65535. By default, this value is 49.
Timeout	Enter the timeout value here. This value must be between 1 and 255 seconds. By default, this value is 5 seconds.
Key Type	Select the key type that will be used here. Options to choose from are Plain Text and Encrypted .
Key	Enter the key, used to communicate with the TACACS+ server, here.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the specified entry.

TACACS+ Group Server Settings

This window is used to display and configure the TACACS+ group server settings.

To view the following window, click **Security > TACACS+ > TACACS+ Group Server Settings**, as shown below:

The screenshot shows the 'TACACS+ Group Server Settings' window. At the top, there's a header 'TACACS+ Group Server Settings'. Below it, the main configuration area includes a 'Group Server Name' field with a '32 chars' limit, a radio button for 'IPv4 Address' (which is selected), and an 'IPv6 Address' field. An 'Add' button is located to the right of the IPv6 field. Below this, it indicates 'Total Entries: 2' and displays a table with two entries. The first entry is 'Group' with IP '10.255.2...' and the second is 'tacacs+' with IP '10.255.2...'. Each entry has 'Show Detail' and 'Delete' buttons.

Group Server Name	IPv4/IPv6 Address									
Group	10.255.2...	-	-	-	-	-	-	-	Show Detail	Delete
tacacs+	10.255.2...	-	-	-	-	-	-	-		

Figure 9-38 TACACS+ Group Server Settings Window

The fields that can be configured are described below:

Parameter	Description
Group Server Name	Enter the TACACS+ group server name here. This name can be up to 32 characters long.
IPv4 Address	Enter the IPv4 address of the TACACS+ group server here.
IPv6 Address	Enter the IPv6 address of the TACACS+ group server here.

Click the **Add** button to add a new entry based on the information entered.

Click the **Show Detail** button to view and configure more detailed settings for the TACACS+ group server.

Click the **Delete** button to remove the specified entry.

After clicking the **Show Detail** button, the following page will be available.

Figure 9-39 TACACS+ Group Server Settings (Show Detail) Window

The fields that can be configured are described below:

Parameter	Description
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long.
IPv4 TACACS+ Source Interface State	Select to enable or disable the IPv4 TACACS+ source interface state here.
IPv4 TACACS+ Source Interface Type	Select the IPv4 RADIUS source interface type here. Options to choose from are Loopback , MGMT , and VLAN .
Interface ID	Enter the interface ID here. The range is from 1 to 8.
IPv6 TACACS+ Source Interface State	Select to enable or disable the IPv6 TACACS+ source interface state here.
IPv6 TACACS+ Source Interface Type	Select the IPv6 RADIUS source interface type here. Options to choose from are Loopback , MGMT , and VLAN .
Interface ID	Enter the interface ID here. The range is from 1 to 8.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the specified entry.

Click the **Back** button to return to the previous window.

TACACS+ Statistic

This window is used to view and clear the TACACS+ statistic information.

To view the following window, click **Security > TACACS+ > TACACS+ Statistic**, as shown below:

TACACS+ Server Address	State	Socket Opens	Socket Closes	Total Packets Sent	Total Packets Recv	Reference Count
10.255.255.2/49	Up	0	0	0	0	0

Figure 9-40 TACACS+ Statistic Window

The fields that can be configured are described below:

Parameter	Description
Group Server Name	Select the TACACS+ group server name from this list here.

Click the first **Clear** button to clear the information based on the group selected.

Click the **Clear All** button to clear all the information in this table.

Click the second **Clear** button to clear all the information for the specific entry.

IMPB

The IP network layer uses a four-byte address. The Ethernet link-layer uses a six-byte MAC address. Binding these two address types together allows the transmission of data between the layers. The primary purpose of IP-MAC-Port Binding (IMPB) is to restrict the access to a Switch to a number of authorized users. Authorized clients can access a Switch's port by either checking the pair of IP-MAC addresses with the pre-configured database or if DHCP snooping has been enabled in which case the Switch will automatically learn the IP/MAC pairs by snooping DHCP packets and saving them to the IMPB white list. If an unauthorized user tries to access an IP-MAC binding enabled port, the system will block the access by dropping its packet. Active and inactive entries use the same database. The function is port-based, meaning a user can enable or disable the function on the individual port.

IPv4

DHCPv4 Snooping

DHCP Snooping Global Settings

This window is used to display and configure the global DHCP snooping settings.

To view the following window, click **Security > IMPB > IPv4 > DHCPv4 Snooping > DHCP Snooping Global Settings**, as shown below:

DHCP Snooping	<input type="radio"/> Enabled	<input checked="" type="radio"/> Disabled
Information Option Allow Untrusted	<input type="radio"/> Enabled	<input checked="" type="radio"/> Disabled
Source MAC Verification	<input checked="" type="radio"/> Enabled	<input type="radio"/> Disabled
Station Move Deny	<input type="radio"/> Enabled	<input checked="" type="radio"/> Disabled

Figure 9-41 DHCP Snooping Global Settings Window

The fields that can be configured are described below:

Parameter	Description
DHCP Snooping	Select to enable or disable the global DHCP snooping status.
Information Option Allow Untrusted	Select to enable or disable the option to globally allow DHCP packets with the relay Option 82 on the untrusted interface.
Source MAC Verification	Select to enable or disable the verification that the source MAC address in a DHCP packet matches the client hardware address.
Station Move Deny	Select to enable or disable the DHCP snooping station move state. When DHCP snooping station move is enabled, the dynamic DHCP snooping binding entry with the same VLAN ID and MAC address on the specific port can move to another port if it detects that a new DHCP process belong to the same VLAN ID and MAC address.

Click the **Apply** button to accept the changes made.

DHCP Snooping Port Settings

This window is used to display and configure the DHCP snooping port settings.

To view the following window, click **Security > IMPB > IPv4 > DHCPv4 Snooping > DHCP Snooping Port Settings**, as shown below:

Port	Trusted	Rate Limit	Entry Limit
eth1/0/1	No	No Limit	No Limit
eth1/0/2	No	No Limit	No Limit
eth1/0/3	No	No Limit	No Limit
eth1/0/4	No	No Limit	No Limit
eth1/0/5	No	No Limit	No Limit
eth1/0/6	No	No Limit	No Limit
eth1/0/7	No	No Limit	No Limit
eth1/0/8	No	No Limit	No Limit

Figure 9-42 DHCP Snooping Port Settings Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the appropriate port range used for the configuration here.
Entry Limit	Enter the entry limit value here. This value must be between 0 and 1024. Tick the No Limit option to disable the function.
Rate Limit	Enter the rate limit value here. This value must be between 1 and 300. Tick the No Limit option to disable the function.
Trusted	Select the trusted option here. Options to choose from are No and Yes . Ports connected to the DHCP server or to other Switches should be configured as trusted interfaces. The ports connected to DHCP clients should be configured

Parameter	Description
	as untrusted interfaces. DHCP snooping acts as a firewall between untrusted interfaces and DHCP servers.

Click the **Apply** button to accept the changes made.

DHCP Snooping VLAN Settings

This window is used to display and configure the DHCP snooping VLAN settings.

To view the following window, click **Security > IMPB > IPv4 > DHCPv4 Snooping > DHCP Snooping VLAN Settings**, as shown below:

Figure 9-43 DHCP Snooping VLAN Settings Window

The fields that can be configured are described below:

Parameter	Description
VID List	Enter the VLAN ID list used here.
State	Select to enable or disable the DHCP snooping VLAN setting here.

Click the **Apply** button to accept the changes made.

DHCP Snooping Database

This window is used to display and configure the DHCP snooping database settings.

To view the following window, click **Security > IMPB > IPv4 > DHCPv4 Snooping > DHCP Snooping Database**, as shown below:

Figure 9-44 DHCP Snooping Database Window

The fields that can be configured in **DHCP Snooping Database** are described below:

Parameter	Description
Write Delay	Enter the write delay time value here. This value must be between 60 and 86400 seconds. By default, this value is 300 seconds.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Store DHCP Snooping Database** are described below:

Parameter	Description
URL	Select the location from the drop-down list and enter the URL where the DHCP snooping database will be stored to here. Locations to choose from are TFTP , FTP , and Flash . An example URL is given.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Load DHCP Snooping Database** are described below:

Parameter	Description
URL	Select the location from the drop-down list and enter the URL where the DHCP snooping database will be loaded from here. Locations to choose from are TFTP , FTP , and Flash . An example URL is given.

Click the **Apply** button to accept the changes made.

Click the **Clear** button to clear all the counter information.

DHCP Snooping Binding Entry

This window is used to display and configure the DHCP snooping binding entries.

To view the following window, click **Security > IMPB > IPv4 > DHCPv4 Snooping > DHCP Snooping Binding Entry**, as shown below:

Figure 9-45 DHCP Snooping Binding Entry Window

The fields that can be configured are described below:

Parameter	Description
MAC Address	Enter the MAC address of the DHCP snooping binding entry here.

Parameter	Description
VID	Enter the VLAN ID of the DHCP snooping binding entry here. This value must be between 1 and 4094.
IP Address	Enter the IP address of the DHCP snooping binding entry here.
Unit	Select the Switch unit that will be used for this configuration here.
Port	Select the appropriate port used for the configuration here.
Expiry	Enter the expiry time value used here. This value must be between 60 and 4294967295 seconds.

Click the **Add** button to add a new entry based on the information entered.

Click the **Delete** button to remove the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

Dynamic ARP Inspection

ARP Access List

This window is used to display and configure the dynamic ARP inspection settings.

To view the following window, click **Security > IMPB > IPv4 > Dynamic ARP Inspection > ARP Access List**, as shown below:

The screenshot shows the 'ARP Access List' configuration window. At the top, there is a header 'ARP Access List'. Below it, there is a sub-header 'ARP Access List'. The main area contains a form with a text input field for 'ARP Access List Name' with a character limit of '32 chars' and an 'Add' button. Below the form, it shows 'Total Entries: 1' and a table with one entry. The table has two columns: 'ARP Access List Name' and 'ARP'. The entry in the table is 'ARP'. To the right of the entry, there are 'Edit' and 'Delete' buttons.

Figure 9-46 ARP Access List Window

The fields that can be configured are described below:

Parameter	Description
ARP Access List Name	Enter the ARP access list name used here. This name can be up to 32 characters long.

Click the **Add** button to add a new entry based on the information entered.

Click the **Edit** button to re-configure the specific entry.

Click the **Delete** button to remove the specified entry.

After clicking the **Edit** button, the following window will appear.

ARP Access List

Action: Sender IP: Sender IP Mask:

IP: Sender MAC: Sender MAC Mask:

MAC:

ARP Access List Name: ARP

Total Entries: 1

Action	IP Type	Sender IP	Sender IP Mask	MAC Type	Sender MAC	Sender MAC Mask	
Permit	Any	-	-	Any	-	-	<input type="button" value="Delete"/>

Figure 9-47 ARP Access List (Edit) Window

The fields that can be configured are described below:

Parameter	Description
Action	Select the action that will be taken here. Options to choose from are Permit and Deny .
IP	Select the type of sender IP address that will be used here. Options to choose from are Any , Host , and IP with Mask .
Sender IP	After selecting the Host or IP with Mask options as the type of IP , enter the sender IP address used here.
Sender IP Mask	After selecting the IP with Mask option as the type of IP , enter the sender IP mask used here.
MAC	Select the type of sender MAC address that will be used here. Options to choose from are Any , Host , and MAC with Mask .
Sender MAC	After selecting the Host or MAC with Mask options as the type of MAC , enter the sender MAC address used here.
Sender MAC Mask	After selecting the MAC with Mask option as the type of MAC , enter the sender MAC mask used here.

Click the **Back** button to return to the previous page.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the specified entry.

ARP Inspection Settings

This window is used to display and configure the ARP inspection settings.

To view the following window, click **Security > IMPB > IPv4 > Dynamic ARP Inspection > ARP Inspection Settings**, as shown below:

Figure 9-48 ARP Inspection Settings Window

The fields that can be configured in **ARP Inspection Validation** are described below:

Parameter	Description
Src-MAC	Select to enable or disable the source MAC option here. This option specifies to check for ARP requests and response packets and the consistency of the source MAC address in the Ethernet header against the sender MAC address in the ARP payload.
Dst-MAC	Select to enable or disable the destination MAC option here. This option specifies to check for ARP response packets and the consistency of the destination MAC address in the Ethernet header against the target MAC address in the ARP payload.
IP	Select to enable or disable the IP option here. This option specifies to check the ARP body for invalid and unexpected IP addresses. It also specifies to check the validity of IP address in the ARP payload. The sender IP in both the ARP request and response and target IP in the ARP response are validated. Packets destined for the IP addresses 0.0.0.0, 255.255.255.255, and all IP multicast addresses are dropped. Sender IP addresses are checked in all ARP requests and responses, and target IP addresses are checked only in ARP responses.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **ARP Inspection Filter** are described below:

Parameter	Description
ARP Access List Name	Enter the ARP access list name used here. This name can be up to 32 characters long.
VID List	Enter the VLAN ID list used here.
Static ACL	Select whether to use a static ACL or not here by either selecting Yes or No .

Click the **Add** button to add a new entry based on the information entered.

Click the **Delete** button to remove an entry based on the information entered.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

ARP Inspection Port Settings

This window is used to display and configure the ARP inspection port settings.

To view the following window, click **Security > IMPB > IPv4 > Dynamic ARP Inspection > ARP Inspection Port Settings**, as shown below:

Port	Trust State	Rate Limit (pps)	Burst Interval
eth1/0/1	Untrusted	15	1
eth1/0/2	Untrusted	15	1
eth1/0/3	Untrusted	15	1
eth1/0/4	Untrusted	15	1
eth1/0/5	Untrusted	15	1
eth1/0/6	Untrusted	15	1
eth1/0/7	Untrusted	15	1
eth1/0/8	Untrusted	15	1

Figure 9-49 ARP Inspection Port Settings Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the appropriate port range used for the configuration here.
Rate Limit	Enter the rate limit value here. This value must be between 1 and 150 packets per seconds.
Burst Interval	Enter the burst interval value here. This value must be between 1 and 15. Tick the None option to disable the option.
Trust State	Select to enable or disable the trust state here.

Click the **Apply** button to accept the changes made.

Click the **Set to Default** button to change the information to the default values.

ARP Inspection VLAN

This window is used to display and configure the ARP inspection VLAN settings.

To view the following window, click **Security > IMPB > IPv4 > Dynamic ARP Inspection > ARP Inspection VLAN**, as shown below:

Figure 9-50 ARP Inspection VLAN Window

The fields that can be configured are described below:

Parameter	Description
VID List	Enter the VLAN ID list used here.
State	Select to enable or disable the ARP inspection option's state for the specified VLAN here.

Click the **Apply** button to accept the changes made.

ARP Inspection Statistics

This window is used to view and clear the ARP inspection statistics information.

To view the following window, click **Security > IMPB > IPv4 > Dynamic ARP Inspection > ARP Inspection Statistics**, as shown below:

Figure 9-51 ARP Inspection Statistics Window

The fields that can be configured are described below:

Parameter	Description
VID List	Enter the VLAN ID list used here.

Click the **Clear by VLAN** button to clear the information based on the VLAN ID(s) entered.

Click the **Clear All** button to clear all the information in this table.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

ARP Inspection Log

This window is used to view, configure and clear the ARP inspection log information.

To view the following window, click **Security > IMPB > IPv4 > Dynamic ARP Inspection > ARP Inspection Log**, as shown below:

Figure 9-52 ARP Inspection Log Window

The fields that can be configured are described below:

Parameter	Description
Log Buffer	Enter the log buffer value used here. This value must be between 1 and 1024. By default, this value is 32. Select the Default option to use the default setting.

Click the **Apply** button to accept the changes made.

Click the **Clear Log** button to clear the log.

IP Source Guard

IP Source Guard Port Settings

This window is used to display and configure the IP Source Guard (IPSG) port settings.

To view the following window, click **Security > IMPB > IPv4 > IP Source Guard > IP Source Guard Port Settings**, as shown below:

Port	Validation Type
eth1/0/10	ip

Figure 9-53 IP Source Guard Port Settings Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the appropriate port range used for the configuration here.
State	Select to enable or disable the IPSG's state for the specified port(s) here.
Validation	Select the validation method used here. Options to choose from are IP and IP-MAC . Selecting IP means that the IP address of the received packets will be checked. Selecting IP-MAC means that the IP address and the MAC address of the received packets will be checked.

Click the **Apply** button to accept the changes made.

IP Source Guard VLAN Settings

This window is used to display and configure the IPSG VLAN settings.

To view the following window, click **Security > IMPB > IPv4 > IP Source Guard > IP Source Guard VLAN Settings**, as shown below:

Figure 9-54 IP Source Guard VLAN Settings Window

The fields that can be configured are described below:

Parameter	Description
VID List	Enter the VLAN ID list here.
State	Select to enable or disable IPSG on the specified VLAN(s).
Validation	Select the validation method here. Options to choose from are: <ul style="list-style-type: none"> • IP - Specifies to check the IP address in the received IP packet. • IP-MAC - Specifies to check the IP address and the MAC address in the received IP packet.

Click the **Apply** button to accept the changes made.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

IP Source Guard Binding

This window is used to display and configure the IPSG binding settings.

To view the following window, click **Security > IMPB > IPv4 > IP Source Guard > IP Source Guard Binding**, as shown below:

Figure 9-55 IP Source Guard Binding Window

The fields that can be configured in **IP Source Binding Settings** are described below:

Parameter	Description
MAC Address	Enter the MAC address of the binding entry here.
VID	Enter the VLAN ID of the binding entry here.
IP Address	Enter the IP address of the binding entry here.
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the appropriate port range used for the configuration here.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **IP Source Binding Entry** are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this query here.
From Port - To Port	Select the appropriate port range used for the query here.
IP Address	Enter the IP address of the binding entry here.
MAC Address	Enter the MAC address of the binding entry here.
VID	Enter the VLAN ID of the binding entry here.
Type	Select the type of binding entry to find here. Options to choose from are All , DHCP Snooping , and Static . <ul style="list-style-type: none"> • Selecting All specifies that all the DHCP binding entries will be displayed. • Selecting DHCP Snooping specifies to display the IP-source guard binding entry learned by DHCP binding snooping. • Selecting Static specifies to display the IP-source guard binding entry that is manually configured.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Delete** button to remove the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

IP Source Guard HW Entry

This window is used to view the IPSG hardware entries.

To view the following window, click **Security > IMPB > IPv4 > IP Source Guard > IP Source Guard HW Entry**, as shown below:

Port	Filter-type	Filter-mode	IP Address	MAC Address	VLAN
eth1/0/10	ip	Active	10.90.90.233	-	1

Figure 9-56 IP Source Guard HW Entry Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this query here.
From Port - To Port	Select the appropriate port range used for the query here.

Click the **Find** button to locate a specific entry based on the information entered.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

Advanced Settings

IP-MAC-Port Binding Settings

This window is used to display and configure the IP-MAC-Port binding settings.

To view the following window, click **Security > IMPB > IPv4 > Advanced Settings > IP-MAC-Port Binding Settings**, as shown below:

Port	Mode
eth1/0/1	Disabled
eth1/0/2	Disabled
eth1/0/3	Disabled
eth1/0/4	Disabled
eth1/0/5	Disabled
eth1/0/6	Disabled

Figure 9-57 IP-MAC-Port Binding Settings Window

The fields that can be configured in **IP-MAC-Port Binding Trap Settings** are described below:

Parameter	Description
Trap State	Select the enable or disable the IP-MAC-Port binding option's trap state.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **IP-MAC-Port Binding Port Settings** are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the appropriate port range used for the configuration here.
Mode	Select the mode of access control that will be used here. Options to choose from are Disabled , Strict , and Loose . When a port is enabled for IMPB strict-mode access control, a host can only access the port after the host sends ARP or IP packets and the ARP packet or IP packet sent by the host passes the binding check. To pass the binding check, the source IP address, source MAC address, VLAN ID, and arrival port number must match any of the entries defined by either the IPSPG static binding entry or the DHCP snooping learned dynamic binding entry. When a port is enabled for IMPB loose-mode access control, a host will be denied to access the port after the host sends ARP or IP packets and the ARP packet or IP packet sent by the host does not pass the binding check. To pass the binding check, the source IP address, source MAC address, VLAN ID, and arrival port must match any of the entries defined by either the IPSPG static binding entry or the DHCP snooping learned dynamic binding entry.

Click the **Apply** button to accept the changes made.

IP-MAC-Port Binding Blocked Entry

This window is used to view and clear the IP-MAC-Port binding blocked entry table.

To view the following window, click **Security > IMPB > IPv4 > Advanced Settings > IP-MAC-Port Binding Blocked Entry**, as shown below:

Figure 9-58 IP-MAC-Port Binding Blocked Entry Window

The fields that can be configured are described below:

Parameter	Description
Clear by Port	Select this option to clear the entry table based on the port(s) selected.
Unit	Select the Switch unit that will be clear here.
From Port - To Port	Select the appropriate port range that will be cleared here.
Clear by MAC	Select this option to clear the entry table based on the MAC address entered. Enter the MAC address that will be cleared in the space provided.
Clear All	Select this option to clear all entries that contain MAC addresses.

Click the **Apply** button to accept the changes made.

IPv6

IPv6 Snooping

This window is used to display and configure the IPv6 snooping settings.

To view the following window, click **Security > IMPB > IPv6 > IPv6 Snooping**, as shown below:

Figure 9-59 IPv6 Snooping Window

The fields that can be configured in **Station Move Setting** are described below:

Parameter	Description
Station Move	Select the station move options here. Options to choose from are Permit and Deny .

Click the **Apply** button to accept the changes made.

The fields that can be configured in **IPv6 Snooping Policy Settings** are described below:

Parameter	Description
Policy Name	Enter the IPv6 snooping policy name used here. This name can be up to 32 characters long.
Limit Address Count	Enter the address count limit value used here. This value must be between 0 and 1024. Tick the No Limit option to disable this option.
Protocol	<p>Select the protocol state here. Options to choose from are Enabled and Disabled.</p> <ul style="list-style-type: none"> • DHCP - Specifies that addresses should be snooped in DHCPv6 packets. • NDP - Specifies that addresses should be snooped in NDP packets. • DHCP-PD - Specified that IPv6 prefix should be snooped in DHCPv6 PD packets. • DHCP-PD-EXT Specified that IPv6 prefix should be snooped in DHCPv6 PD packets. PD snooping runs in the extension mode. <p>DHCPv6 snooping sniffs the DHCPv6 packets sent between the DHCPv6 client and server in the address assigning procedure. When a DHCPv6 client successfully got a valid IPv6 address, DHCPv6 snooping creates its binding database. ND Snooping is designed for a stateless auto-configuration assigned IPv6 address and manually configured IPv6 address. Before assigning an IPv6 address, the host must perform Duplicate Address Detection first. ND snooping detects DAD messages (DAD Neighbor Solicitation (NS) and DAD Neighbor Advertisement (NA)) to build its binding database. The NDP packet (NS and NA) is also used to detect whether a host is still reachable and determine whether to delete a binding or not.</p> <p>DHCP-PD snooping performs DHCPv6 snooping of Prefix Delegation (PD) to setup bindings between the Delegating Router (assigned with an IPv6 prefix) and the corresponding Requesting Router. The bindings can be used to validate the source prefix in the packets.</p>
Data Glean	Select to enable or disable the data-glean function here. In some circumstances (DAD-NS packet lost or Switch reboot), a valid IPv6 address cannot be found in the binding table for some devices and as a result traffic to and from these devices are denied by the IPv6 source guard. The data-glean function provides a method for the Switch to recover the lost IPv6 addresses using IPv6 Duplicate Address Detection (DAD).
VID List	Enter the VLAN ID list used here.

Click the **Apply** button to accept the changes made.

Click the **Edit** button to re-configure the specific entry.

Click the **Delete** button to remove the specified entry.

After selecting the **IPv6 Snooping DHCP Entry Settings** tab option, the following page will be available.

Figure 9-60 IPv6 Snooping (IPv6 Snooping DHCP Entry Settings) Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch stacking unit ID here.
From Port - To Port	Select the range of ports that will be used here.
Binding Max Entries	Enter the maximum number of IPv6 snooping binding entries that is allowed here. The range is from 0 to 1024.

Click the **Apply** button to accept the changes made.

Click the **Clear** button to clear DHCPv6 snooping entries from the specified port.

After selecting the **IPv6 Snooping NDP Entry Settings** tab option, the following page will be available.

Figure 9-61 IPv6 Snooping (IPv6 Snooping NDP Entry Settings) Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch stacking unit ID here.
From Port - To Port	Select the range of ports that will be used here.

Parameter	Description
Binding Max Entries	Enter the maximum number of IPv6 snooping binding entries that is allowed here. The range is from 0 to 1024.

Click the **Apply** button to accept the changes made.

Click the **Clear** button to clear ND snooping entries from the specified port.

After selecting the **IPv6 Snooping DHCP-PD Entry Settings** tab option, the following page will be available.

Port	Protocol	Max Entries	
eth1/0/1	DHCP-PD	1024	Clear
eth1/0/2	DHCP-PD	1024	Clear
eth1/0/3	DHCP-PD	1024	Clear
eth1/0/4	DHCP-PD	1024	Clear
eth1/0/5	DHCP-PD	1024	Clear
eth1/0/6	DHCP-PD	1024	Clear
eth1/0/7	DHCP-PD	1024	Clear
eth1/0/8	DHCP-PD	1024	Clear
eth1/0/9	DHCP-PD	1024	Clear
eth1/0/10	DHCP-PD	1024	Clear

Figure 9-62 IPv6 Snooping (IPv6 Snooping DHCP-PD Entry Settings) Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch stacking unit ID here.
From Port - To Port	Select the range of ports that will be used here.
Binding Max Entries	Enter the maximum number of IPv6 snooping binding entries that is allowed here. The range is from 0 to 1024.

Click the **Apply** button to accept the changes made.

Click the **Clear** button to clear DHCPv6 PD snooping entries from the specified port.

IPv6 ND Inspection

This window is used to display and configure the IPv6 ND inspection settings.

To view the following window, click **Security > IMPB > IPv6 > IPv6 ND Inspection**, as shown below:

Figure 9-63 IPv6 ND Inspection Window

The fields that can be configured are described below:

Parameter	Description
Policy Name	Enter the policy name used here. This name can be up to 32 characters long.
Device Role	Select the device role here. Options to choose from are Host and Router . By default, the device's role is set as host and inspection for NS and NA messages are performed. If the device role is set as router, the NS and NA inspection is not performed. When performing NS/NA inspection, the message will be verified against the dynamic binding table learned from the ND protocol or from the DHCP.
Mode	Select the mode of ND inspection here. Options to choose from are: <ul style="list-style-type: none"> • Precise - Specifies to use the precise mode. ND inspection checks if the target address is the same as the source address in DANA/NA packets. • Fuzzy - Specifies to use the fuzzy mode. ND inspection checks if both the target and the source addresses exist in the binding table.
Validate Source-MAC	Select to enable or disable the validation of the source MAC address option here. When the Switch receives an ND message that contains a link-layer address, the source MAC address is checked against the link-layer address. The packet will be dropped if the link-layer address and the MAC addresses are different from each other.
Target Port	Tick this option to specify the target port.
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the appropriate port range used for the configuration here.

Click the **Apply** button to accept the changes made.

Click the **Edit** button to re-configure the specific entry.

Click the **Delete** button to remove the specified entry.

IPv6 RA Guard

This window is used to display and configure the IPv6 Router Advertisement (RA) guard settings.

To view the following window, click **Security > IMPB > IPv6 > IPv6 RA Guard**, as shown below:

Figure 9-64 IPv6 RA Guard Window

The fields that can be configured are described below:

Parameter	Description
Policy Name	Enter the policy name here. This name can be up to 32 characters long.
Device Role	Select the device role here. Options to choose from are Host and Router . By default, the device's role is Host , which will block all the RA packets. If the device's role is Router , RA packets will be forwarded according to the port's bound ACL.
Match IPv6 Access List	Enter or select the IPv6 access list to match here. Click the Please Select button to select an existing ACL from the list.
Target Port	Tick this option to specify the target port.
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the appropriate port range used for the configuration here.

Click the **Apply** button to accept the changes made.

Click the **Edit** button to re-configure the specific entry.

Click the **Delete** button to remove the specified entry.

After clicking the **Please Select** button, the following window will appear:

Figure 9-65 ACL Access List Window

Select the radio button next to the entry to use that ACL in the configuration.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

Click the **OK** button to accept the selection made.

IPv6 DHCP Guard

This window is used to display and configure the IPv6 DHCP guard settings.

To view the following window, click **Security > IMPB > IPv6 > IPv6 DHCP Guard**, as shown below:

Figure 9-66 IPv6 DHCP Guard Window

The fields that can be configured are described below:

Parameter	Description
Policy Name	Enter the policy name here. This name can be up to 32 characters long.
Device Role	Select the device role here. Options to choose from are Client and Server . By default, the device's role is set as Client , which will block all the DHCPv6 packets from the DHCPv6 Server. If the device's role is set as Server , DHCPv6 Server packets will be forwarded according to the port's bound ACL.
Match IPv6 Access List	Enter or select the IPv6 access list to match here. Click the Please Select button to select an existing ACL from the list.
Target Port	Tick this option to specify the target port.
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the appropriate port range used for the configuration here.

Click the **Apply** button to accept the changes made.

Click the **Edit** button to re-configure the specific entry.

Click the **Delete** button to remove the specified entry.

After clicking the **Please Select** button, the following window will appear:

Figure 9-67 ACL Access List Window

Select the radio button next to the entry to use that ACL in the configuration.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

Click the **OK** button to accept the selection made.

IPv6 Source Guard

IPv6 Source Guard Settings

This window is used to display and configure the IPv6 source guard settings.

To view the following window, click **Security > IMPB > IPv6 > IPv6 Source Guard > IPv6 Source Guard Settings**, as shown below:

Figure 9-68 IPv6 Source Guard Settings Window

The fields that can be configured in **IPv6 Source Guard Policy Settings** are described below:

Parameter	Description
Policy Name	Enter the policy name here. This name can be up to 32 characters long.
Global Auto-Configure Address	Select to permit or deny data traffic from the auto-configured global address. It is useful when all global addresses on a link are assigned by DHCP and the administrator that wants to block hosts with self-configured addresses from sending traffic.
Validate Address	Select to enable or disable the validate address feature here. This is used to enable the IPv6 source guard to perform the validate address feature.
Validate Prefix	Select to enable or disable the validate prefix feature here. This is used to enable the IPv6 source guard to perform the IPv6 prefix-guard operation.
Link Local Traffic	Select to permit or deny hardware permitted data traffic sent by the link-local address.

Click the **Apply** button to accept the changes made.

Click the **Edit** button to re-configure the specific entry.

Click the **Delete** button to remove the specified entry.

The fields that can be configured in **IPv6 Source Guard Attach Policy Settings** are described below:

Parameter	Description
Policy Name	Enter the policy name here. This name can be up to 32 characters long.
VID List	Select and enter the target VLAN ID(s) here. This VID can be 1, 4, 5, and 6.
Target Port	Select this option to specify the target port.
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the appropriate port range used for the configuration here.

Click the **Apply** button to accept the changes made.

Click the **Delete All** button to remove all the entries.

Click the **Delete** button to remove the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

IPv6 Neighbor Binding

This window is used to display and configure the IPv6 neighbor binding settings.

To view the following window, click **Security > IMPB > IPv6 > IPv6 Source Guard > IPv6 Neighbor Binding**, as shown below:

Figure 9-69 IPv6 Neighbor Binding Window

The fields that can be configured in **IPv6 Neighbor Binding Settings** are described below:

Parameter	Description
MAC Address	Enter the MAC address used here.
VID	Enter the VLAN ID used here. This value must be between 1 and 4094.
IPv6 Address	Enter the IPv6 address used here.
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the appropriate port range used for the configuration here.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **IPv6 Neighbor Binding Entry** are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this search here.
From Port - To Port	Select the appropriate port range used for the search here.
IPv6 Address	Enter the IPv6 address to find here.
MAC Address	Enter the MAC address to find here.
VID	Enter the VLAN ID to find here.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Delete** button to remove the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

DHCP Server Screening

This function allows users to not only to restrict all DHCP server packets but also to receive any specified DHCP server packet by any specified DHCP client. It is useful when one or more DHCP servers are present on the network and both provide DHCP services to different distinct groups of clients.

When the DHCP Server Screening function is enabled on a port, all DHCP server packets received on this ports will be redirected to the CPU for a software-based check. Legal DHCP server packets will be forwarded out and illegal DHCP server packets will be dropped.

When DHCP Server Screening function is enabled all DHCP Server packets will be filtered from a specific port.

DHCP Server Screening Global Settings

This window is used to display and configure the global DHCP server screening settings.

To view the following window, click **Security > DHCP Server Screening > DHCP Server Screening Global Settings**, as shown below:

DHCP Server Screening Global Settings

Trap Settings

Trap State:

Profile Settings

Profile Name:

Total Entries: 1

Profile Name	Client MAC	Bind Client MAC		
Profile	-	Binding	Delete	Delete Profile

1/1 < < 1 > >

Log Information

Log Buffer Entries (10-1024): Default

Total Entries: 0

VLAN	Server IP	Client MAC	Occurrence
------	-----------	------------	------------

Figure 9-70 DHCP Server Screening Global Settings Window

The fields that can be configured in **Trap Settings** are described below:

Parameter	Description
Trap State	Select to enable or disable the DHCP server screening trap here.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Profile Settings** are described below:

Parameter	Description
Profile Name	Enter the DHCP server screening profile name here. This name can be up to 32 characters long.

Click the **Create** button to create a new profile.

Click the **Binding** button to configure the client MAC address in the profile.

Click the **Delete** button to remove the specified entry.

Click the **Delete Profile** button to remove the specified profile.

The fields that can be configured in **Log Information** are described below:

Parameter	Description
Log Buffer Entries	Enter the logged buffer entries value here. This value must be between 10 and 1024. By default, this value is 32. Select the Default option to use the default value.

Click the **Apply** button to accept the changes made.

Click the **Clear Log** button to clear the log.

After clicking the **Binding** button, the following window will appear:

Figure 9-71 Bind Client MAC Window

The fields that can be configured are described below:

Parameter	Description
Client MAC	Enter the MAC address used here.

Click the **Apply** button to accept the changes made.

DHCP Server Screening Port Settings

This window is used to display and configure the DHCP server screening port settings.

To view the following window, click **Security > DHCP Server Screening > DHCP Server Screening Port Settings**, as shown below:

Unit	From Port	To Port	State	Server IP	Profile Name	
1	eth1/0/1	eth1/0/1	Disabled	.	32 chars	Apply
Port	State	Server IP	Profile Name			
eth1/0/1	Disabled	-	-	Delete		
eth1/0/2	Disabled	-	-	Delete		
eth1/0/3	Disabled	-	-	Delete		
eth1/0/4	Disabled	-	-	Delete		
eth1/0/5	Disabled	-	-	Delete		
eth1/0/6	Disabled	-	-	Delete		
eth1/0/7	Disabled	-	-	Delete		
eth1/0/8	Disabled	-	-	Delete		

Figure 9-72 DHCP Server Screening Port Settings Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the appropriate port range used for the configuration here.
State	Select to enable or disable the DHCP server screening function on the port(s) specified.
Server IP	Enter the DHCP server IP address here.
Profile Name	Enter the DHCP server screening profile that will be used for the port(s) specified here.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the specified entry.

ARP Spoofing Prevention

This window is used to display and configure the ARP spoofing prevention settings. When an entry is created, ARP packets whose sender IP address matches the gateway IP address, of an entry, but its sender MAC address field does not match the gateway MAC address, of the entry, will be dropped by the system. The ASP will bypass the ARP packets whose sender IP address doesn't match the configured gateway IP address.

If an ARP address matches a configured gateway's IP address, MAC address, and port list, then bypass the Dynamic ARP Inspection (DAI) check no matter if the receiving port is ARP trusted or untrusted.

To view the following window, click **Security > ARP Spoofing Prevention**, as shown below:

Figure 9-73 ARP Spoofing Prevention Window

The fields that can be configured in **ARP Spoofing Prevention Logging State** are described below:

Parameter	Description
ARP Spoofing Prevention Logging State	Select to enable or disable the ARP spoofing prevention logging state here.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **ARP Spoofing Prevention** are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the appropriate port range used for the configuration here.
Gateway IP	Enter the gateway IP address used here.
Gateway MAC	Enter the gateway MAC address used here.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the specified entry.

BPDU Attack Protection

This window is used to display and configure the BPDU attack protection settings. In generally, there are two states in the BPDU attack protection function. One is normal state, and another is under attack state. The under attack state has three modes: drop, block, and shutdown. A BPDU protection enabled port will enter an under attack state when it receives one STP BPDU packet and it will take action based on the configuration.

BPDU protection has a higher priority than the (Forward BPDU) FBPDU setting configured by configure STP command in the determination of BPDU handling. That is, when FBPDU is configured to forward STP BPDU but BPDU protection is enabled, then the port will not forward STP BPDU.

BPDU protection also has a higher priority than the BPDU tunnel port setting in determination of BPDU handling. That is, when a port is configured as BPDU tunnel port for STP, it will forward STP BPDU. But if the port is BPDU protection enabled. Then the port will not forward STP BPDU.

To view the following window, click **Security > BPDU Attack Protection**, as shown below:

Figure 9-74 BPDU Attack Protection Window

The fields that can be configured in **BPDU Attack Protection Global Settings** are described below:

Parameter	Description
BPDU Attack Protection State	Select to enable or disable the global BPDU attack protection state here.
BPDU Attack Protection Trap State	Select to enable or disable the BPDU attack protection trap state here.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **BPDU Attack Protection Port Settings** are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the appropriate port range used for the configuration here.
State	Select to enable or disable the BPDU attack protection state on the port(s) specified.
Mode	Select the BPDU attack protection mode that will be applied to the port(s) specified. Options to choose from are Drop , Block and Shutdown . <ul style="list-style-type: none"> • Drop - Drop all received BPDU packets when the port enters under attack state. • Block - Drop all packets (include BPDU and normal packets) when the port enters under attack state. • Shutdown - Shut down the port when the port enters under attack state.

Click the **Apply** button to accept the changes made.

NetBIOS Filtering

This window is used to display and configure the NetBIOS filtering settings.

To view the following window, click **Security > NetBIOS Filtering**, as shown below:

Port	NetBIOS Filtering State	Extensive NetBIOS Filtering State
eth1/0/1	Disabled	Disabled
eth1/0/2	Disabled	Disabled
eth1/0/3	Disabled	Disabled
eth1/0/4	Disabled	Disabled
eth1/0/5	Disabled	Disabled
eth1/0/6	Disabled	Disabled
eth1/0/7	Disabled	Disabled
eth1/0/8	Disabled	Disabled

Figure 9-75 NetBIOS Filtering Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the range of ports that will be used for this configuration here.
NetBIOS Filtering State	Select to enable or disable the NetBIOS filtering state on the specified port(s). This is used to permit or deny NetBIOS packets on physical ports.
Extensive NetBIOS Filtering State	Select to enable or disable the extensive NetBIOS filtering state on the specified port(s). This is used to permit or deny NetBIOS packets over 802.3 frames on physical ports.

Click the **Apply** button to accept the changes made.

MAC Authentication

This window is used to display and configure the MAC authentication settings. MAC authentication is a feature designed to authenticate a user by MAC address when the user is trying to access the network via the Switch. The Switch itself can perform the authentication based on a local database or be a RADIUS client and perform the authentication process via the RADIUS protocol with a remote RADIUS server.

To view the following window, click **Security > MAC Authentication**, as shown below:

Figure 9-76 MAC Authentication Window

The fields that can be configured in **MAC Authentication Global Settings** are described below:

Parameter	Description
MAC Authentication State	Select to enable or disable the global MAC authentication state.
MAC Authentication Trap State	Select to enable or disable the MAC authentication trap state.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **MAC Authentication User Name and Password Settings** are described below:

Parameter	Description
User Name	Enter the username used for MAC authentication here. This name can be up to 16 characters long. Tick the Default option to restore the username to the client MAC address here.
Password	Enter the password used for MAC authentication here. Tick the Encrypt option save this password in the encrypted form. Tick the Default option to restore the password to the client MAC address here.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **MAC Authentication Port Settings** are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the appropriate port range used for the configuration here.
State	Select to enable or disable MAC authentication for the port(s) specified here.

Click the **Apply** button to accept the changes made.

Web-based Access Control

Web-based Access Control (WAC) is a feature designed to authenticate a user when the user is trying to access the Internet via the Switch. The authentication process uses the HTTP or HTTPS protocol. The Switch enters the authenticating stage when users attempt to browse Web pages (e.g., <http://www.dlink.com>) through a Web browser. When the Switch detects HTTP or HTTPS packets and this port is unauthenticated, the Switch will launch a pop-up user name and password window to query users. Users are not able to access the Internet until the authentication process is passed.

The Switch can be the authentication server itself and do the authentication based on a local database, or be a RADIUS client and perform the authentication process via the RADIUS protocol with a remote RADIUS server. The client user initiates the authentication process of WAC by attempting to gain Web access.

D-Link's implementation of WAC uses a virtual IP that is exclusively used by the WAC function and is not known by any other modules of the Switch. In fact, to avoid affecting a Switch's other features, WAC will only use a virtual IP address to communicate with hosts. Thus, all authentication requests must be sent to a virtual IP address but not to the IP address of the Switch's physical interface.

Virtual IP works like this, when a host PC communicates with the WAC Switch through a virtual IP, the virtual IP is transformed into the physical IPIF (IP interface) address of the Switch to make the communication possible. The host PC and other servers' IP configurations do not depend on the virtual IP of WAC. The virtual IP does not respond to any ICMP packets or ARP requests, which means it is not allowed to configure a virtual IP on the same subnet as the Switch's IPIF (IP interface) or the same subnet as the host PCs' subnet.

As all packets to a virtual IP from authenticated and authenticating hosts will be trapped to the Switch's CPU, if the virtual IP is the same as other servers or PCs, the hosts on the WAC-enabled ports cannot communicate with the server or PC which really own the IP address. If the hosts need to access the server or PC, the virtual IP cannot be the same as the one of the server or PC. If a host PC uses a proxy to access the Web, to make the authentication work properly the user of the PC should add the virtual IP to the exception of the proxy configuration. If the virtual IP is not configured, then access cannot start Web authentication.

The Switch's implementation of WAC features a user-defined port number that allows the configuration of the TCP port for either the HTTP or HTTPS protocols. This TCP port for HTTP or HTTPS is used to identify the HTTP or HTTPS packets that will be trapped to the CPU for authentication processing, or to access the login page. If not specified, the default port number for HTTP is 80 and the default port number for HTTPS is 443. If no protocol is specified, the default protocol is HTTP.

The following diagram illustrates the basic six steps all parties go through in a successful Web Authentication process:

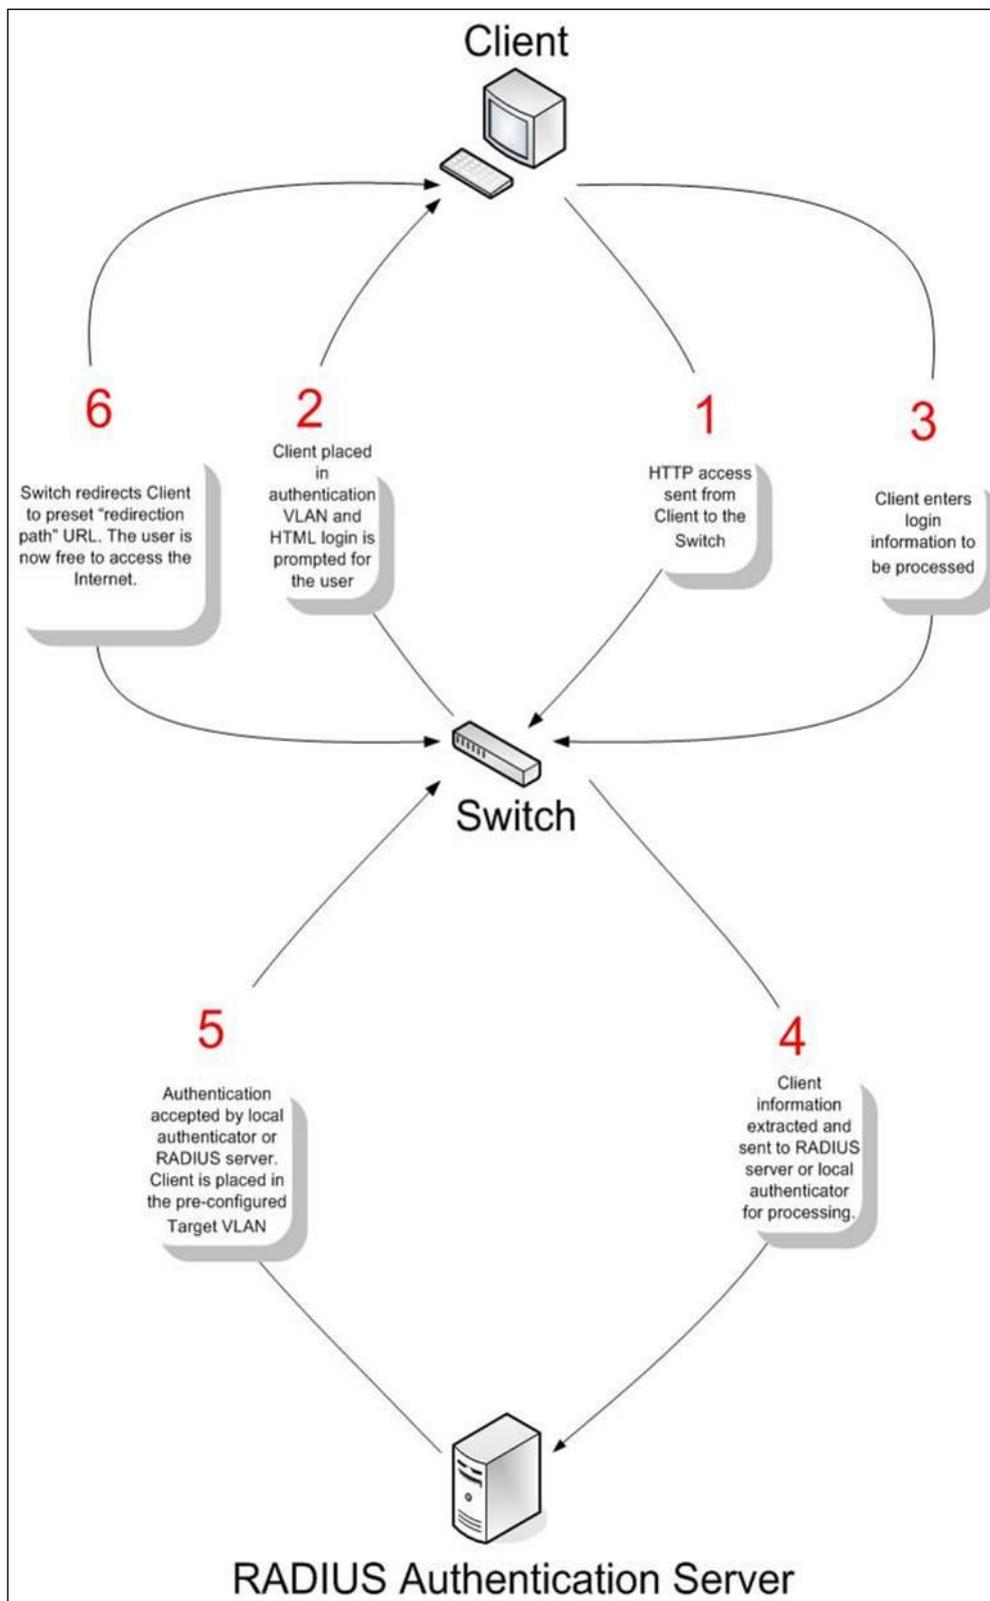


Figure 9-77 RADIUS Authentication Server

Conditions and Limitations

- If the client is utilizing DHCP to attain an IP address, the authenticating VLAN must provide a DHCP server or a DHCP relay function so that client may obtain an IP address.
- Certain functions exist on the Switch that will filter HTTP packets, such as the ACL function. The user needs to be very careful when setting filter functions for the target VLAN, so that these HTTP packets are not denied by the Switch.

- If a RADIUS server is to be used for authentication, the user must first establish a RADIUS Server with the appropriate parameters, including the target VLAN, before enabling Web Authentication on the Switch.

Web Authentication

This window is used to display and configure the Web authentication settings.

To view the following window, click **Security > Web-based Access Control > Web Authentication**, as shown below:

Figure 9-78 Web Authentication Window

The fields that can be configured are described below:

Parameter	Description
Web Authentication State	Select to enable or disable the global Web authentication state.
Trap State	Select to enable or disable the Web authentication trap state.
Virtual IPv4	Enter the virtual IPv4 address used here. The virtual IP of Web authentication is just the characterization of the Web authentication function on the Switch. All Web authentication processes communicate with this IP address, however, the virtual IP does not respond to any ICMP packet or ARP request. So it's not allowed to configure virtual IP in the same subnet as the Switch's IP interface or the same subnet as the host PCs' subnet, otherwise the Web authentication cannot operate correctly. The defined URL only takes effect when the virtual IP address is configured. The users get the FQDN URL stored on the DNS server to get the virtual IP address. The obtained IP address must match the virtual IP address configured by the command. If the IPv4 virtual IP is not configured, the IPv4 access cannot start a Web authentication.
Virtual IPv6	Enter the virtual IPv6 address used here. If the IPv6 virtual IP is not configured, the IPv6 access cannot start a Web authentication.
Virtual URL	Enter the virtual URL used here. This URL can be up to 128 characters long.
Redirection Path	Enter the redirection path here. This path can be up to 128 characters long.

Click the **Apply** button to accept the changes made.



NOTE: The WAC virtual IP address should be configured before enabling WAC because WAC will not function correctly if the virtual IP is not configured.

WAC Port Settings

This window is used to display and configure the WAC port settings.

To view the following window, click **Security > Web-based Access Control > WAC Port Settings**, as shown below:

Unit	From Port	To Port	State
1	eth1/0/1	eth1/0/1	Disabled

Port	State
eth1/0/1	Disabled
eth1/0/2	Disabled
eth1/0/3	Disabled
eth1/0/4	Disabled
eth1/0/5	Disabled
eth1/0/6	Disabled
eth1/0/7	Disabled
eth1/0/8	Disabled

Figure 9-79 WAC Port Settings Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the appropriate port range used for the configuration here.
State	Select to enable or disable the WAC feature on the port(s) specified.

Click the **Apply** button to accept the changes made.

WAC Customize Page

This window is used to display and configure the WAC customized login page.

To view the following window, click **Security > Web-based Access Control > WAC Customize Page**, as shown below:

Figure 9-80 WAC Customize Page Window

The fields that can be configured are described below:

Parameter	Description
Page Title	Enter a custom page title message here. This message can be up to 128 characters long.
Login Window Title	Enter a custom login window title here. This title can be up to 64 characters long.
User Name Title	Enter a custom username title here. This title can be up to 32 characters long.
Password Title	Enter a custom password title here. This title can be up to 32 characters long.
Logout Window Title	Enter a custom logout window title here. This title can be up to 64 characters long.
Notification	Enter additional information to display in the notification area here. This information can be up to 128 characters long for each line. There a 5 lines available for additional information.

Click the **Set to Default** button to replace the information with the default information.

Click the **Apply** button to accept the changes made.

Japanese Web-based Access Control

JWAC Global Settings

This window is used to view and configure the Japanese Web-based Access Control (JWAC) global settings

To view the following window, click **Security > Japanese Web-based Access Control > JWAC Global Settings**, as shown below:

Figure 9-81 JWAC Global Settings Window

The fields that can be configured in **JWAC Global Settings** are described below:

Parameter	Description
JWAC State	Select to enable or disable the JWAC feature's global state here.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **JWAC Settings** are described below:

Parameter	Description
UDP Filtering	Select to enable or disable UDP filtering here.
Authentication Method	Select the authentication method used here. Options to choose from are MD5 , CHAP , PAP , MS-CHAP , and MS-CHAP-v2 .
Virtual IP	Select the virtual IP option used here. Options to choose from are IPv4 , IPv6 , and URL .
IPv4 Address	After selecting IPv4 as the Virtual IP , the following field will be available. Enter the virtual IPv4 address used here. All JWAC authentication processes communicate with this IP address, however, the virtual IP does not respond to any ICMP packets or ARP requests. So it's not allowed to configure virtual IP in the same subnet as the switch's IP interface or the same subnet as the host PCs' subnet, otherwise JWAC authentication cannot operate correctly. The defined URL only takes effect when the virtual IP address is configured. The users get the FQDN URL stored on the DNS server to get the virtual IP address. The obtained IP address must match the virtual IP address configured by the command. If the IPv4 virtual IP is not configured, the IPv4 access cannot start JWAC authentication.
IPv6 Address	After selecting IPv6 as the Virtual IP , the following field will be available. Enter the virtual IPv6 address used here. If the IPv6 virtual IP is not configured, the IPv6 access cannot start a JWAC authentication.

Parameter	Description
Virtual URL	After selecting URL as the Virtual IP , the following field will be available. Enter the virtual URL used here.
Forcible Logout	Select to enable or disable the forcible logout option here. When the forcible logout feature is enabled, a ping packet from an authenticated host to the JWAC switch with a TTL of 1 and a destination IP the same as virtual IP will be regarded as a logout request and the host will be moved back to unauthenticated state.
Redirect State	Select to enable or disable the redirection state here. When redirect is enabled, all Web access is redirected to the quarantine server or JWAC login page.
Redirect Destination	Select the redirect destination here. Options to choose from are Quarantine Server and JWAC Login Page . When redirecting to the quarantine server, the unauthenticated host will be redirected to the quarantine server when it tries to access a random URL. When redirecting to the JWAC login page, the unauthenticated host will be redirected to the JWAC login page in the switch to finish authentication. When redirecting to the quarantine server is specified, a quarantine server must be configured first before enabling the JWAC function globally. When redirect is disabled, all Web access is denied except for access to the quarantine server or JWAC login page.
Redirect Delay Time	Enter the redirect delay time value here. This value must be between 0 and 10 seconds. By default, this value 1 second.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Quarantine Server Settings** are described below:

Parameter	Description
Timeout	Enter the quarantine server's timeout value here. This value must be between 5 and 300 seconds. By default, this value is 30 seconds.
Monitor	Select to enable or disable the monitor option here. When the JWAC quarantine server monitor feature is enabled, the JWAC switch will monitor the quarantine server to ensure the server is okay. If the switch detects no quarantine server, it will redirect all unauthenticated HTTP accesses to the JWAC Login Page if the redirect option is enabled and the redirect destination is configured to be quarantine server.
URL	Select the whether the quarantine server uses an IPv4 or IPv6 address and enter the respective IP address in the space provided.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Update Server Settings** are described below:

Parameter	Description
IPv4 Network Prefix/Prefix Length	Enter the update server's IPv4 address and prefix length here. Any servers (like update.microsoft.com or some sites of Antivirus software companies, which ActiveX needs to access to accomplish the authentication before the client passes the authentication) should be added with its IP address or with the network address. By adding the network address, an entry can serve multiple update servers on the same network. Multiple update server addresses or network addresses can be configured.
IPv6 Network Prefix/Prefix Length	Enter the update server's IPv6 address and prefix length here.
Port	Enter the update server's port used here. This value must be between 1 and 65535. Also select whether this port is a TCP or UDP port.

Click the **Add** button to add a new entry based on the information entered.

Click the **Delete** button to remove the specified entry.

JWAC Port Settings

This window is used to view and configure the JWAC port settings.

To view the following window, click **Security > Japanese Web-based Access Control > JWAC Port Settings**, as shown below:

Port	State	Max Authenticating User
eth1/0/1	Disabled	100
eth1/0/2	Disabled	100
eth1/0/3	Disabled	100
eth1/0/4	Disabled	100
eth1/0/5	Disabled	100
eth1/0/6	Disabled	100
eth1/0/7	Disabled	100
eth1/0/8	Disabled	100
eth1/0/9	Disabled	100
eth1/0/10	Disabled	100

Figure 9-82 JWAC Port Settings Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the appropriate port range used for the configuration here.
State	Select to enable or disable the WAC feature on the port(s) specified.
Max Authenticating User	Enter the maximum number of authentication users allowed here. This value must be between 1 and 100.

Click the **Apply** button to accept the changes made.

JWAC Customize Page Language

This window is used to view and configure the JWAC customize page's language.

To view the following window, click **Security > Japanese Web-based Access Control > JWAC Customize Page Language**, as shown below:

Figure 9-83 JWAC Customize Page Language Window

The fields that can be configured are described below:

Parameter	Description
Customize Page Language	Select the language option that will be used when the JWAC login page is displayed.

Click the **Apply** button to accept the changes made.

JWAC Customize Page

This window is used to view and configure the JWAC customize page settings.

To view the following window, click **Security > Japanese Web-based Access Control > JWAC Customize Page**, as shown below:

Figure 9-84 JWAC Customize Page Window

The fields that can be configured are described below:

Parameter	Description
Page Title	Enter a custom page title message here. This message can be up to 128 characters long.
Login window Title	Enter a custom login window title here. This title can be up to 64 characters long.
User Name Title	Enter a custom username title here. This title can be up to 32 characters long.
Password Title	Enter a custom password title here. This title can be up to 32 characters long.
Logout window Title	Enter a custom logout window title here. This title can be up to 64 characters long.
Notification	Enter additional information to display in the notification area here. This information can be up to 128 characters long for each line. There are 5 lines available for additional information.

Click the **Set to Default** button to replace the information with the default information.

Click the **Apply** button to accept the changes made.

Network Access Authentication

Guest VLAN

This window is used to display and configure the network access authentication guest VLAN settings.

To view the following window, click **Security > Network Access Authentication > Guest VLAN**, as shown below:

Figure 9-85 Guest VLAN Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the appropriate port range used for the configuration here.
VID	Enter the VLAN ID used here. This value must be between 1 and 4094.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

Network Access Authentication Global Settings

This window is used to display and configure the global Network Access Authentication settings.

To view the following window, click **Security > Network Access Authentication > Network Access Authentication Global Settings**, as shown below:

Network Access Authentication Global Settings

Network Access Authentication MAC Format Settings

Case: Uppercase
 Delimiter: Dot
 Delimiter Number: 2

General Settings

Max Users (1-4096): 4096
 Deny MAC-Move: Disabled
 Authorization State: Enabled

User Information

User Name: 32 chars
 Password Type: Plain Text
 VID (1-4094):
 Password: 32 chars

Total Entries: 1

User Name	Password	Password Type	VID
user	*****	Plaintext	1

Figure 9-86 Network Access Authentication Global Settings Window

The fields that can be configured in **Network Access Authentication MAC Format Settings** are described below:

Parameter	Description
Case	Select the case format that will be used for the network access authentication MAC address here. Options to choose from are Lowercase and Uppercase .
Delimiter	Select the delimiter that will be used for the network access authentication MAC address here. Options to choose from are Hyphen , Colon , Dot , and None .
Delimiter Number	Select the delimiter number option here. Options to choose from are 1 , 2 , and 5 .

Click the **Apply** button to accept the changes made.

The fields that can be configured in **General Settings** are described below:

Parameter	Description
Max Users	Enter the maximum amount of users allowed here. This value must be between 1 and 1000. By default, this option is 1000.
Deny MAC-Move	Select to enable or disable the deny MAC-move feature here. This option controls whether to allow authenticated hosts to do roaming across different Switch ports and only controls whether a host, which is authenticated at a port set to the multi-authenticate mode, is allowed to move to another port. If a station is allowed to move, there are two situations. It may either need to be re-authenticated or directly moved to the new port without re-authentication based on the following rule. If the new port has the same authentication configuration as the original port, then re-authentication is not needed. The host will inherit the same authorization attributes with new port. The authenticated host can do roaming from port 1 to port 2, and inherit the authorization attributes without re-authentication. If the new port has the different authentication configuration as the original port, then re-authentication is needed. The authenticated host on port 1 can move and re-authenticated by port 2. If the new port has no authentication method enabled, then the station is directly moved to the new port. The session with the original port is removed. The authenticated host on port 1 can be moved to port 2.

Parameter	Description
	If this feature is disabled and an authenticated host moves to another port, then this is treated as a violation error.
Authorization State	Select to enable or disable the authorized state here. The option is used to enable or disable the acceptance of an authorized configuration. When authorization is enabled for authentication, the authorized attributes (for example VLAN, 802.1p default priority, bandwidth, and ACL) assigned by the RADIUS server will be accepted if the authorization status is enabled. Bandwidth and ACL are assigned on a per-port basis. If in the multi-authenticated mode, VLAN and 802.1p are assigned on a per-host basis. Otherwise, Bandwidth and ACL are assigned on a per-port basis.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **User Information** are described below:

Parameter	Description
User Name	Enter the user name used here. This name can be up to 32 characters long.
VID	Enter the VLAN ID used here.
Password Type	Select the password type option here. Options to choose from are Plain Text and Encrypted .
Password	Enter the password used here.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the specified entry.

Network Access Authentication Port Settings

This window is used to display and configure the network access authentication port settings.

To view the following window, click **Security > Network Access Authentication > Network Access Authentication Port Settings**, as shown below:

Port	Host Mode	VID List	CompAuth Mode	Max Users	Periodic	ReAuth	Inactivity Timer	Restart
eth1/0/1	Multi Auth		Any	4096	Disabled	3600	Disabled	60
eth1/0/2	Multi Auth		Any	4096	Disabled	3600	Disabled	60
eth1/0/3	Multi Auth		Any	4096	Disabled	3600	Disabled	60
eth1/0/4	Multi Auth		Any	4096	Disabled	3600	Disabled	60
eth1/0/5	Multi Auth		Any	4096	Disabled	3600	Disabled	60
eth1/0/6	Multi Auth		Any	4096	Disabled	3600	Disabled	60

Figure 9-87 Network Access Authentication Port Settings Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the appropriate port range used for the configuration here.
Host Mode	Select the host mode option that will be associated with the selected port(s) here. Options to choose from are Multi Host and Multi Auth . If the port is operated in the multi-host mode, and if one of the hosts is authenticated, then all other hosts are allowed to access the port. According to 802.1X authentication, if the re-authentication fails or the authenticated user logs off, the port will be blocked for a quiet period. The port restores the processing of EAPOL packets after the quiet period. If the port is operated in the multi-authenticated mode, then each host needs to be authenticated individually to access the port. A host is represented by its MAC address. Only the authorized host is allowed to access.
VID List Action	Select the VID list action here. Options to choose from are None , Add , and Delete .
VID List	After selecting the Multi Auth option as the Host Mode , the following parameter is available. Enter the VLAN ID used here. This is useful when different VLANs on the Switch have different authentication requirements. After the client is authenticated, the client will not be re-authenticated when received from other VLANs. This option is useful for trunk ports to do per-VLAN authentication control. When a port's authentication mode is changed to multi-host, the previous authentication VLAN(s) on this port will be cleared.
CompAuth Mode	Select the compound authentication mode option here. Options to choose from are Any and MAC-WAC . <ul style="list-style-type: none"> • Selecting Any specifies that if any of the authentication method (802.1X, MAC-based Access Control or WAC) to passes, then pass. • Selecting MAC-WAC specifies to verify MAC-based authentication first. If the client passes, WAC will be verified next. Both authentication methods need to be passed.
Max Users	Enter the maximum users value used here. This value must be between 1 and 4094.
Periodic	Select to enable or disable periodic re-authentication for the selected port here. This parameter only affects the 802.1X protocol.
ReAuth Timer	Enter the re-authentication timer value here. This value must be between 1 and 65535 seconds. By default, this value is 3600 seconds.
Inactivity State	Select to enable or disable the inactivity state here.
Inactivity Timer	When the Inactivity State is enabled, enter the inactivity timer value here. This value must be between 120 and 65535 seconds. This parameter only affects the WAC authentication protocol.
Restart	Enter the restart time value used here. This value must be between 1 and 65535 seconds.

Click the **Apply** button to accept the changes made.

Network Access Authentication Sessions Information

This window is used to view and clear the network access authentication session information.

To view the following window, click **Security > Network Access Authentication > Network Access Authentication Sessions Information**, as shown below:

Figure 9-88 Network Access Authentication Sessions Information Window

The fields that can be configured are described below:

Parameter	Description
Port	Select the appropriate Switch unit and port used for the query here.
MAC Address	Enter the MAC address used here.
Protocol	Select the protocol option used here. Options to choose from are MAC , WAC , JWAC , and DOT1X .

Click the **Clear by Port** button to clear the information based on the port selected.

Click the **Clear by MAC** button to clear the information based on the MAC address entered.

Click the **Clear by Protocol** button to clear the information based on the protocol selected.

Click the **Clear All** button to clear all the information in this table.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show All** button to locate and display all the entries.

Safeguard Engine

Periodically, malicious hosts on the network will attack the Switch by utilizing packet flooding (ARP Storm) or other methods. These attacks may increase the Switch's CPU load beyond its capability. To alleviate this problem, the Safeguard Engine function was added to the Switch's software.

The Safeguard Engine can help the overall operability of the Switch by minimizing the workload of the Switch while the attack is ongoing, thus making it capable to forward essential packets over its network in a limited bandwidth.

If the CPU load rises above the rising threshold value, the Safeguard Engine function will be activated and the Switch will enter the exhausted mode. In the exhausted mode, the Switch will limit the bandwidth available for ARP and broadcast IP packets. If the CPU load falls below the falling threshold value, the Safeguard Engine will be deactivated and the Switch will exit the exhausted mode and enter the normal mode.

Packets that are destined to the CPU can be classified into three groups. These groups, otherwise known as sub-interfaces, are logical interfaces that the CPU will use to identify certain types of traffic. The three groups are **Protocol**, **Manage**, and **Route**. Generally, the **Protocol** group should receive the highest priority when the Switch's CPU processes received packets and the **Route** group should receive the lowest priority as the Switch's CPU usually does get involved in the processing of routing packets. In the **Protocol** group, packets are protocol control packets identified by the router. In the **Manage** group, packets are destined to any router or system network management interface by means of interactive access protocols, like Telnet and SSH. In the **Route** group, packets are identified as traversing routing packets that is generally processed by the router CPU.

In the following table a list of supported protocols are displayed with their respective sub-interfaces (groups):

Protocol Name	Sub-interface (Group)	Description
802.1X	Protocol	Port-based Network Access Control
ARP	Protocol	Address resolution Protocol
BGP	Protocol	Border Gateway Protocol
DHCP	Protocol	Dynamic Host Configuration Protocol
DNS	Protocol	Domain Name System
DVMRP	Protocol	Distance Vector Multicast Routing Protocol
GVRP	Protocol	GARP VLAN Registration Protocol
ICMPv4	Protocol	Internet Control Message Protocol
ICMPv6-Neighbor	Protocol	IPv6 Internet Control Message Protocol Neighbor Discovery Protocol (NS/NA/RS/RA)
ICMPv6-Other	Protocol	IPv6 Internet Control Message Protocol except Neighbor Discovery Protocol (NS/NA/RS/RA)
IGMP	Protocol	Internet Group Management Protocol
LACP	Protocol	Link Aggregation Control Protocol
NTP	Protocol	Network Time Protocol
OSPF	Protocol	Open Shortest Path First
PIM	Protocol	Protocol Independent Multicast
PPPoE	Protocol	Point-to-point protocol over Ethernet
RIP	Protocol	Routing Information Protocol
SNMP	Manage	Simple Network Management Protocol
SSH	Manage	Secure Shell
STP	Protocol	Spanning Tree Protocol
Telnet	Manage	Telnet
TFTP	Manage	Trivial File Transfer Protocol
VRRP	Protocol	Virtual Router Redundancy Protocol
Web	Manage	Hypertext Transfer Protocol (HTTP) and Hypertext Transfer Protocol Secure (HTTPS)

A customized rate limit (in packets per second) can be assigned to the Safeguard Engine's sub-interfaces as a whole or to individual protocols specified by the user in the management interface. Be careful when customizing the rate limit for individual protocols, using this function, as improper rate limits can cause the Switch to process packets abnormally.



NOTE: When Safeguard Engine is enabled, the Switch will allot bandwidth to various traffic flows (ARP, IP) using the FFP (Fast Filter Processor) metering table to control the CPU utilization and limit traffic. This may limit the speed of routing traffic over the network.

Safeguard Engine Settings

This window is used to display and configure the safeguard engine settings.

To view the following window, click **Security > Safeguard Engine > Safeguard Engine Settings**, as shown below:

Figure 9-89 Safeguard Engine Settings Window

The fields that can be configured in **Safeguard Engine Settings** are described below:

Parameter	Description
Safeguard Engine State	Select to enable or disable the safeguard engine feature here.
Trap State	Select to enable or disable the safeguard engine trap state here.

The fields that can be configured in **CPU Utilization Settings** are described below:

Parameter	Description
Rising Threshold	Enter the rising threshold value here. This value must be between 20% and 100%. This value is used to configure the acceptable level of CPU utilization before the Safeguard Engine mechanism is enabled. Once the CPU utilization reaches this percentage level, the Switch will move into Exhausted mode, based on the parameters provided in this window.
Falling Threshold	Enter the falling threshold value here. This value must be between 20% and 100%. This value is used to configure the acceptable level of CPU utilization as a percentage, where the Switch leaves the Safeguard Engine state and returns to normal mode.

Click the **Apply** button to accept the changes made.

CPU Protect Counters

This window is used to view and clear the CPU protection counter information.

To view the following window, click **Security > Safeguard Engine > CPU Protect Counters**, as shown below:

Figure 9-90 CPU Protect Counters Window

The fields that can be configured are described below:

Parameter	Description
Sub Interface	Select the sub-interface option here. Options to choose from are Manage , Protocol , Route , and All . This option specifies to clear the CPU protect related counters of sub-interfaces.
Protocol Name	Select the protocol name option here.

Click the **Clear** button to clear the information based on the selections made.

Click the **Clear All** button to clear all the information in this table.

CPU Protect Sub-Interface

This window is used to display and configure the CPU protection sub-interface settings.

To view the following window, click **Security > Safeguard Engine > CPU Protect Sub-Interface**, as shown below:

Unit	Total	Drop
1	23	0

Figure 9-91 CPU Protect Sub-Interface Window

The fields that can be configured in **CPU Protect Sub-Interface** are described below:

Parameter	Description
Sub-Interface	Select the sub-interface option here. Options to choose from are Manage , Protocol , and Route .
Rate Limit	Enter the rate limit value used here. This value must be between 0 and 1024 packets per second. Tick the No Limit option to disable the rate limit.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Sub-Interface Information** are described below:

Parameter	Description
Sub-Interface	Select the sub-interface option here. Options to choose from are Manage , Protocol , and Route .

Click the **Find** button to locate a specific entry based on the information entered.

CPU Protect Type

This window is used to display and configure the CPU protection type settings.

To view the following window, click **Security > Safeguard Engine > CPU Protect Type**, as shown below:

Figure 9-92 CPU Protect Type Window

The fields that can be configured in **CPU Protect Type** are described below:

Parameter	Description
Protocol Name	Select the protocol name option here.
Rate Limit	Enter the rate limit value used here. This value must be between 0 and 1024 packets per second. Tick the No Limit option to disable the rate limit.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Protect Type Information** are described below:

Parameter	Description
Type	Select the protocol type here. After selecting the protocol type, the Rate Limit assigned to the protocol type will be displayed. Select the unit option to specify the unit ID of the Switch in the physical stack.

Click the **Find** button to locate a specific entry based on the information entered.

Trusted Host

This window is used to display and configure the trusted host settings.

To view the following window, click **Security > Trusted Host**, as shown below:

Figure 9-93 Trusted Host Window

The fields that can be configured are described below:

Parameter	Description
ACL Name	Enter the access class' name here. This name can be up to 32 characters long.

Parameter	Description
Type	Select the trusted host type here. Options to choose from are Telnet , SSH , Ping , HTTP , and HTTPS .

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the specific entry.

Traffic Segmentation Settings

This window is used to display and configure the traffic segmentation settings. When the traffic segmentation forwarding domain is specified, packets received by the port will be restricted in Layer 2 packet forwarding to interfaces within the domain. When the forwarding domain of a port is empty, Layer 2 forwarding for packets received by the port is not restricted.

The traffic segmentation member list can be comprised of different interface types, for example port and port-channel in the same forwarding domain. If the interfaces specified by the command include a port-channel, all the member ports of this port-channel will be included in the forwarding domain.

If the forwarding domain of an interface is empty, then there is no restriction on Layer 2 forwarding of packets received by the port.

To view the following window, click **Security > Traffic Segmentation Settings**, as shown below:

The screenshot shows the 'Traffic Segmentation Settings' window. At the top, there are six dropdown menus: 'Unit' (set to 1), 'From Port' (set to eth1/0/1), 'To Port' (set to eth1/0/1), 'Forward Unit' (set to 1), 'From Forward Port' (set to eth1/0/1), and 'To Forward Port' (set to eth1/0/1). To the right of these are 'Add' and 'Delete' buttons. Below this is a section titled 'Unit 1 Settings' containing a table:

Port	Forwarding Domain
eth1/0/12	eth1/0/14

Figure 9-94 Traffic Segmentation Settings Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the receiving Switch unit that will be used for this configuration here.
From Port - To Port	Select the receiving port range used for the configuration here.
Forward Unit	Select the forward Switch unit that will be used for this configuration here.
From Forward Port ~ To Forward Port	Select the forward port range used for the configuration here.

Click the **Add** button to add a new entry based on the information entered.

Click the **Delete** button to remove an entry based on the information entered.

Storm Control Settings

This window is used to display and configure the storm control settings.

To view the following window, click **Security > Storm Control Settings**, as shown below:

Storm Control Settings

Storm Control Trap Settings

Trap State:

Storm Control Polling Settings

Polling Interval (5-600): sec Shutdown Retries (0-360): times Infinite

Storm Control Port Settings

Unit	From Port	To Port	Type	Action	Level Type	PPS Rise (0-1488100)	PPS Low (0-1488100)
<input type="text" value="1"/>	<input type="text" value="eth1/0/1"/>	<input type="text" value="eth1/0/1"/>	<input type="text" value="Broadcast"/>	<input type="text" value="Drop"/>	<input type="text" value="PPS"/>	<input type="text"/>	<input type="text"/>

Total Entries: 78

Port	Storm	Action	Threshold	Current	State
eth1/0/1	Broadcast	Drop	-	-	Inactive
	Multicast		-	-	Inactive
	Unicast		-	-	Inactive
eth1/0/2	Broadcast	Drop	-	-	Inactive
	Multicast		-	-	Inactive
	Unicast		-	-	Inactive

Figure 9-95 Storm Control Settings Window

The fields that can be configured in **Storm Control Trap Settings** are described below:

Parameter	Description
Trap State	Select the storm control trap option here. Options to choose from are None , Storm Occur , Storm Clear , and Both . When None is selected, no traps will be sent. When Storm Occur is selected, a trap notification will be sent when a storm event is detected. When Storm Clear is selected, a trap notification will be sent when a storm event is cleared.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Storm Control Polling Settings** are described below:

Parameter	Description
Polling Interval	Enter the interval value used here. This value must be between 5 and 600 seconds. By default, this value is 5 seconds.
Shutdown Retries	Enter the shutdown retries value used here. This value must be between 0 and 360. By default, this value is 3. Tick the Infinite option to disable this feature.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Storm Control Port Settings** are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the appropriate port range used for the configuration here.
Type	Select the type of storm attack that will be controlled here. Options to choose from are Broadcast , Multicast , and Unicast . When the action is configured as the shutdown mode, the unicast refers to both known and unknown unicast packets; that is, if the known and unknown unicast packets hit the specified threshold, the port will be shutdown. Otherwise, unicast refers to unknown unicast packets.

Parameter	Description
Action	Select the action that will be taken here. Options to choose from are None , Shutdown , and Drop . Selecting None specifies not to filter the storm packets. Selecting Shutdown specifies to shut down the port when the value specified for rise threshold is reached. Selecting Drop specifies to discards packets that exceed the risen threshold.
Level Type	Select the level type option here. Options to choose from are PPS , Kbps , and Level .
PPS Rise	Enter the rise packets per second value here. This option specifies the rise threshold value in packets count per second. This value must be between 0 and 1488100 packets per second. If the low PPS value is not specified, the default value is 80% of the specified risen PPS.
PPS Low	Enter the low packets per second value here. This option specifies the low threshold value in packets count per second. This value must be between 0 and 14488100 packets per second. If the low PPS value is not specified, the default value is 80% of the specified risen PPS.

Click the **Apply** button to accept the changes made.

After selecting the **Kbps** option as the **Level Type**, the following parameters are available.

The screenshot shows the 'Storm Control Port Settings' window. The 'Level Type' dropdown is set to 'Kbps'. The 'Action' dropdown is set to 'Drop'. The 'Type' dropdown is set to 'Broadcast'. The 'From Port' and 'To Port' are both set to 'eth1/0/1'. The 'Unit' dropdown is set to '1'. There are two input fields for 'KBPS Rise (0-1000000)' and 'KBPS Low (0-1000000)' Kbps, both currently empty. An 'Apply' button is visible at the bottom right.

Figure 9-96 Storm Control Settings (Level Type - Kbps) Window

The additional fields that can be configured in **Storm Control Port Settings** are described below:

Parameter	Description
KBPS Rise	Enter the rise KBPS value used here. This option specifies the rise threshold value as a rate of kilobits per second at which traffic is received on the port. This value must be between 0 and 1000000 Kbps.
KBPS Low	Enter the low KBPS value used here. This option specifies the low threshold value as a rate of kilobits per second at which traffic is received on the port. This value must be between 0 and 1000000 Kbps. If the low KBPS is not specified, the default value is 80% of the specified risen KBPS.

Click the **Apply** button to accept the changes made.

After selecting the **Level** option as the **Level Type**, the following parameters are available.

The screenshot shows the 'Storm Control Port Settings' window. The 'Level Type' dropdown is set to 'Level'. The 'Action' dropdown is set to 'Drop'. The 'Type' dropdown is set to 'Broadcast'. The 'From Port' and 'To Port' are both set to 'eth1/0/1'. The 'Unit' dropdown is set to '1'. There are two input fields for 'Level Rise (0-100)' % and 'Level Low (0-100)' %, both currently empty. An 'Apply' button is visible at the bottom right.

Figure 9-97 Storm Control Settings (Level Type - Level) Window

The additional fields that can be configured in **Storm Control Port Settings** are described below:

Parameter	Description
Level Rise	Enter the rise level value used here. This option specifies the rise threshold value as a percentage of the total bandwidth per port at which traffic is received on the port. This value must be between 1% and 100%.

Parameter	Description
Level Low	Enter the low level value used here. This option specifies the low threshold value as a percentage of the total bandwidth per port at which traffic is received on the port. This value must be between 1% and 100%. If the low level is not specified, the default value is 80% of the specified risen level.

Click the **Apply** button to accept the changes made.

DoS Attack Prevention Settings

This window is used to display and configure the Denial-of-Service (DoS) attack prevention settings. The following well-known DoS types which can be detected by most Switches:

- **Land Attack:** This type of attack involves IP packets where the source and destination address are set to the address of the target device. It may cause the target device to reply to itself continuously.
- **Blat Attack:** This type of attack will send packets with the TCP/UDP source port equal to the destination port of the target device. It may cause the target device to respond to itself.
- **TCP-Null:** This type of attack involves port scanning by using specific packets which contain a sequence number of 0 and no flags.
- **TCP-Xmas:** This type of attack involves port scanning by using specific packets which contain a sequence number of 0 and the Urgent (URG), Push (PSH), and FIN flags.
- **TCP SYN-FIN:** This type of attack involves port scanning by using specific packets which contain SYN and FIN flags.
- **TCP SYN SrcPort Less 1024:** This type of attack involves port scanning by using specific packets which contain source port 0 to 1023 and SYN flag.
- **Ping of Death Attack:** A ping of death is a type of attack on a computer that involves sending a malformed or otherwise a malicious ping to a computer. A ping is normally 64 bytes in size (many computers cannot handle a ping larger than the maximum IP packet size which is 65535 bytes). The sending of a ping of this size can crash the target computer. Traditionally, this bug has been relatively easy to exploit. Generally, sending a 65536 byte ping packet is illegal according to networking protocol, but a packet of such a size can be sent if it is fragmented; when the target computer reassembles the packet, a buffer overflow can occur, which often causes a system crash.
- **TCP Tiny Fragment Attack:** The Tiny TCP Fragment attacker uses IP fragmentation to create extremely small fragments and force the TCP header information into a separate packet fragment to pass through the check function of the router and issue an attack.
- **All Types:** All of above types.

To view the following window, click **Security > DoS Attack Prevention Settings**, as shown below:

DoS Type	State	Action
Land Attack	Disabled	Drop
Blat Attack	Disabled	Drop
TCP Null	Disabled	Drop
TCP Xmas	Disabled	Drop
TCP SYN-FIN	Disabled	Drop
TCP SYN SrcPort Less 1024	Disabled	Drop
Ping of Death Attack	Disabled	Drop
TCP Tiny Fragment Attack	Disabled	Drop

Figure 9-98 DoS Attack Prevention Settings Window

The fields that can be configured in **SNMP Server Enable Traps DoS Settings** are described below:

Parameter	Description
Trap State	Select to enable or disable the DoS attack prevention trap state here.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **DoS Attack Prevention Settings** are described below:

Parameter	Description
DoS Type Selection	Tick the DoS type option that will be prevented here.
State	Select to enable or disable the global DoS attack prevention state here.
Action	Select the action that will be taken when the DoS attack was detected here. The only option to select here is Drop .

Click the **Apply** button to accept the changes made.

Zone Defense Settings

This window is used to display and configure the Zone Defense settings. When Zone Defense is enabled, the ACL resources will be reserved for Zone Defense. If the Switch does not have enough ACL resources for Zone Defense, it cannot be enabled.

ZoneDefense is triggered when abnormal network traffic conditions meet pre-configured thresholds on the firewall. When this happens, the firewall immediately and automatically contacts the Switch and issues commands to them, that result in blocking any traffic to and from the suspicious host.

To view the following window, click **Security > Zone Defense Settings**, as shown below:

Figure 9-99 Zone Defense Settings Window

The fields that can be configured in **Zone Defense Settings** are described below:

Parameter	Description
State	Select to enable or disable the Zone Defense function here.

Click the **Apply** button to accept the changes made.

SSH

Secure Shell (SSH) is a program allowing secure remote login and secure network services over an insecure network. It allows a secure login to remote host computers, a safe method of executing commands on a remote end node, and will provide secure encrypted and authenticated communication between two non-trusted hosts. SSH, with its array of unmatched security features is an essential tool in today's networking environment. It is a powerful guardian against numerous existing security hazards that now threaten network communications.

The steps required to use the SSH protocol for secure communication between a remote PC (the SSH client) and the Switch (the SSH server) are as follows:

- Create a user account with admin-level access using the User Accounts window. This is identical to creating any other admin-level User Account on the Switch, including specifying a password. This password is used to logon to the Switch, once a secure communication path has been established using the SSH protocol.
- Configure the User Account to use a specified authorization method to identify users that are allowed to establish SSH connections with the Switch using the SSH User Authentication Mode window. There are three choices as to the method SSH will use to authorize the user, which are Host Based, Password, and Public Key.
- Configure the encryption algorithm that SSH will use to encrypt and decrypt messages sent between the SSH client and the SSH server, using the SSH Authentication Method and Algorithm Settings window.
- Finally, enable SSH on the Switch using the SSH Configuration window.

After completing the preceding steps, a SSH Client on a remote PC can be configured to manage the Switch using a secure, in band connection.

SSH Global Settings

This window is used to display and configure the global SSH settings.

To view the following window, click **Security > SSH > SSH Global Settings**, as shown below:

Figure 9-100 SSH Global Settings Window

The fields that can be configured are described below:

Parameter	Description
IP SSH Server State	Select to enable or disable the global SSH server state.
IP SSH Service Port	Enter the SSH service port number used here. This value must be between 1 and 65535. By default, this number is 22.
Authentication Timeout	Enter the authentication timeout value here. This value must be between 30 and 600 seconds. By default, this value is 120 seconds.
Authentication Retries	Enter the authentication retries value here. This value must be between 1 and 32. By default, this value is 3.

Click the **Apply** button to accept the changes made.

Host Key

This window is used to view and generate the SSH host key.

To view the following window, click **Security > SSH > Host Key**, as shown below:

Figure 9-101 Host Key Window

The fields that can be configured in **Host Key Management** are described below:

Parameter	Description
Crypto Key Type	Select the crypto key type used here. Options to choose from are the Rivest Shamir Adleman (RSA) key type and the Digital Signature Algorithm (DSA) key type.
Key Modulus	Select the key modulus value here. Options to choose from are 360 , 512 , 768 , 1024 , and 2048 bit.

Click the **Generate** button to generate a host key based on the selections made.

Click the **Delete** button to remove a host key based on the selections made.

The fields that can be configured in **Host Key** are described below:

Parameter	Description
Crypto Key Type	Select the crypto key type used here. Options to choose from are the Rivest Shamir Adleman (RSA) key type and the Digital Signature Algorithm (DSA) key type.

After clicking the **Generate** button, the following window will appear:

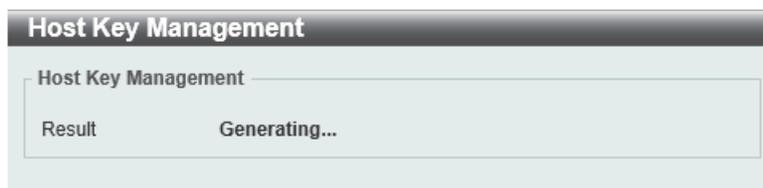


Figure 9-102 Host Key (Generating) Window

After the key was successfully generated, the following window will appear.



Figure 9-103 Host Key (Generating, Success) Window

SSH Server Connection

This window is used to view the SSH server connections table.

To view the following window, click **Security > SSH > SSH Server Connection**, as shown below:

The screenshot shows a window titled "SSH Server Connection". It contains an "SSH Table" section with the text "Total Entries: 1" above a table. The table has five columns: SID, Version, Cipher, User ID, and Client IP Address. There is one row of data.

SID	Version	Cipher	User ID	Client IP Address
0	V2	aes256-cbc/hmac-sha1...	user	10.90.90.14

Figure 9-104 SSH Server Connection Window

SSH User Settings

This window is used to display and configure the SSH user settings.

To view the following window, click **Security > SSH > SSH User Settings**, as shown below:

Figure 9-105 SSH User Settings Window

The fields that can be configured are described below:

Parameter	Description
User Name	Enter the SSH user's username used here. This name can be up to 32 characters long.
Authentication Method	Select the authentication methods used here. Options to choose from are Password , Public Key , and Host-based .
Key File	After selecting the Public Key or Host-based option as the Authentication Method , enter the public key here.
Host Name	After selecting the Host-based option as the Authentication Method , enter the host name here.
IPv4 Address	After selecting the Host-based option as the Authentication Method , select and enter the IPv4 address here.
IPv6 Address	After selecting the Host-based option as the Authentication Method , select and enter the IPv6 address here.

Click the **Apply** button to accept the changes made.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

SSH Client Settings

This window is used to display and configure the SSH client settings.

To view the following window, click **Security > SSH > SSH Client Settings**, as shown below:

Figure 9-106 SSH Client Settings Window

The fields that can be configured are described below:

Parameter	Description
Authentication Method	Select the authentication method here. Options to choose from are:

Parameter	Description
	<ul style="list-style-type: none"> • Password - Specifies to use the password authentication method for this user account. This is the default authentication method. • Public Key - Specifies to use the public key authentication method for this user account. Enter the URL of a local file to be used as the public key of this user.
Public Key File Path	Enter the path and filename of the local file to be used as the public key here.
Private Key File Path	Enter the path of the local file to be used as the private key here.

Click the **Apply** button to accept the changes made.

SSL

Secure Sockets Layer (SSL) is a security feature that will provide a secure communication path between a server and client through the use of authentication, digital signatures and encryption. These security functions are implemented through the use of a cipher suite, which is a security string that determines the exact cryptographic parameters, specific encryption algorithms and key sizes to be used for an authentication session and consists of three levels:

- **Key Exchange:** The first part of the cipher suite string specifies the public key algorithm to be used. This Switch utilizes the Rivest Shamir Adleman (RSA) public key algorithm and the Digital Signature Algorithm (DSA), specified here as the DHE DSS Diffie-Hellman (DHE) public key algorithm. This is the first authentication process between client and server as they “exchange keys” in looking for a match and therefore authentication to be accepted to negotiate encryptions on the following level.
- **Encryption:** The second part of the cipher suite that includes the encryption used for encrypting the messages sent between client and host. The Switch supports two types of cryptology algorithms:
 - **Stream Ciphers** - There are two types of stream ciphers on the Switch, RC4 with 40-bit keys and RC4 with 128-bit keys. These keys are used to encrypt messages and need to be consistent between client and host for optimal use.
 - **CBC Block Ciphers** - CBC refers to Cipher Block Chaining, which means that a portion of the previously encrypted block of encrypted text is used in the encryption of the current block. The Switch supports the 3DES EDE encryption code defined by the Data Encryption Standard (DES) and the Advanced Encryption Standard (AES) to create the encrypted text.
- **Hash Algorithm:** This part of the cipher suite allows the user to choose a message digest function which will determine a Message Authentication Code. This Message Authentication Code will be encrypted with a sent message to provide integrity and prevent against replay attacks. The Switch supports three hash algorithms, MD5 (Message Digest 5), SHA (Secure Hash Algorithm), and SHA256.

These three parameters are uniquely assembled in four choices on the Switch to create a three-layered encryption code for secure communication between the server and the client. The user may implement any one or combination of the cipher suites available, yet different cipher suites will affect the security level and the performance of the secured connection. The information included in the cipher suites is not included with the Switch and requires downloading from a third source in a file form called a certificate. This function of the Switch cannot be executed without the presence and implementation of the certificate file and can be downloaded to the Switch by utilizing a TFTP server or the Switch file system. The Switch supports TLS 1.0, TLS 1.1, and TLS 1.2. Other versions of SSL may not be compatible with this Switch and may cause problems upon authentication and transfer of messages from client to server.

When the SSL function has been enabled, the web will become disabled. To manage the Switch through the web based management while utilizing the SSL function, the web browser must support SSL encryption and the header of the URL must begin with https:// (Ex. https://xx.xx.xx.xx). Any other method will result in an error and no access can be authorized for the web-based management.

Users can download a certificate file for the SSL function on the Switch from a TFTP server. The certificate file is a data record used for authenticating devices on the network. It contains information on the owner, keys for authentication and digital signatures. Both the server and the client must have consistent certificate files for optimal use of the SSL function. Currently, the Switch comes with a certificate pre-loaded though the user may need to download more, depending on user circumstances.

SSL Global Settings

This window is used to display and configure the global SSL settings.

To view the following window, click **Security > SSL > SSL Global Settings**, as shown below:

Figure 9-107 SSL Global Settings Window

The fields that can be configured in **SSL Global Settings** are described below:

Parameter	Description
SSL Status	Select to enable or disable the global SSL status here.
Service Policy	Enter the service policy name here. This name can be up to 32 characters long.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Import File** are described below:

Parameter	Description
File Select	Select the file type that will be loaded here. Options to choose from are Certificate and Private Key . After selecting the file type, browse to the appropriate file, located on the local computer, by pressing the Browse button.
Destination File Name	Enter the destination file name used here. This name can be up to 32 characters long.

Click the **Apply** button to accept the changes made.

Click the **Generate** button in the **SSL-Self-signed Certificate** section to generate a new self-signed certificate, regardless if there is a built-in self-signed certificate or not. The certificate generated does not affect the user-downloaded certificates.

Crypto PKI Trustpoint

This window is used to display and configure the crypto PKI trust point settings.

To view the following window, click **Security > SSL > Crypto PKI Trustpoint**, as shown below:

Figure 9-108 Crypto PKI Trustpoint Window

The fields that can be configured are described below:

Parameter	Description
Trustpoint	Enter the name of the trust-point that is associated with the imported certificates and key pairs here. This name can be up to 32 characters long.
File System Path	Enter the file system path for certificates and key pairs here.
Password	Enter the encrypted password phrase that is used to undo encryption when the private keys are imported here. The password phrase is a string of up to 64 characters. If the password phrase is not specified, the NULL string will be used.
TFTP Server Path	Enter the TFTP server path here.
Type	Select the type of certificate that will be imported here. Options to choose from are Both , CA , and Local . <ul style="list-style-type: none"> • Selecting Both specifies to import the CA certificate, local certificate and key pairs. • Selecting CA specifies to import the CA certificate only. • Selecting Local specifies to import local certificate and key pairs only.

Click the **Apply** button to accept the changes made.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Delete** button to remove the specified entry.

SSL Service Policy

This window is used to display and configure the SSL service policy settings.

To view the following window, click **Security > SSL > SSL Service Policy**, as shown below:

Policy Name	Version	Cipher Suites	Session Cache Timeout (sec)	Secure Trustpoint	Edit	Delete
Policy	TLS 1.0, TLS 1.1...	DHE_DSS_WITH_3DES_ED...	600			

Figure 9-109 SSL Service Policy Window

The fields that can be configured are described below:

Parameter	Description
Policy Name	Enter the SSL service policy name here. This name can be up to 32 characters long.
Version	Select the Transport Layer Security (TLS) version here. Options to choose from are TLS 1.0 , TLS 1.1 , and TLS 1.2 .
Session Cache Timeout	Enter the session cache timeout value used here. This value must be between 60 and 86400 seconds. By default, this value is 600 seconds.
Secure Trustpoint	Enter the secure trust point name here. This name can be up to 32 characters long.
Cipher Suites	Select the cipher suites that will be associated with this profile here.

Click the **Apply** button to accept the changes made.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Edit** button to re-configure the specific entry.

Click the **Delete** button to remove the specified entry.

SFTP Server Settings

This window is used to display and configure the Secure File Transfer Protocol (SFTP) server settings. SFTP is a remotely secure file transfer protocol over a reliable data stream. Because SFTP itself does not provide authentication and security, the SFTP server runs as a sub-system of the SSH server.



NOTE: Only IPv4 SFTP servers are supported.

To view the following window, click **Security > SFTP Server Settings**, as shown below:

Figure 9-110 SFTP Server Settings Window

The fields that can be configured are described below:

Parameter	Description
SFTP Server	Select to globally enable or disable the SFTP server feature here.
Idle Timeout	Enter the idle timeout value here. If the SFTP server detects no operation after the duration of the idle timer for a specific SFTP session, the Switch will close this SFTP session. The range is from 30 to 600 seconds. By default, this value is 120 seconds.

Click the **Apply** button to accept the changes made.

Network Protocol Port Protect Settings

This window is used to display and configure the network protocol port protection settings.

To view the following window, click **Security > Network Protocol Port Protect Settings**, as shown below:

Figure 9-111 Network Protocol Port Protect Settings Window

The fields that can be configured are described below:

Parameter	Description
TCP Port Protect State	Select to enable or disable the TCP port network protocol protection function here.
UDP Port Protect State	Select to enable or disable the UDP port network protocol protection function here.

Click the **Apply** button to accept the changes made.

10. OAM

CFM
Cable Diagnostics
Ethernet OAM
DDM

CFM

CFM Settings

This window is used to display and configure the Connectivity Fault Management (CFM) settings.

To view the following window, click **OAM > CFM > CFM Settings**, as shown below:

CFM Settings

CFM Global Settings

CFM State Enabled Disabled

AIS Trap State Enabled Disabled

LCK Trap State Enabled Disabled Apply

All MPs Reply LTRs Enabled Disabled Apply

CFM Domain Name Settings

Domain Name Domain Level Apply

Total Entries: 1

Domain Name	Domain Level	MIP Creation	SenderID TLV	
domain	0	None	None	Edit Delete Add MA

Figure 10-1 CFM Settings Window

The fields that can be configured in **CFM Global Settings** are described below:

Parameter	Description
CFM State	Select to globally enable or disable the CFM feature here.
AIS Trap State	Select to enable or disable the Alarm Indication Signal (AIS) trap feature here. If the trap status of AIS is enabled, once an ETH-AIS event occurs or an ETH-AIS event clears, a trap will be sent out.
LCK Trap State	Select to enable or disable the Locked Signal (LCK) trap feature here. If the trap status of LCK is enabled, once an ETH-LCK event occurs or an ETH-LCK event clears, a trap will be sent out.
All MPs Reply LTRs	Select to enable or disable the all MPs Link-Trace Reply (LTR) feature here. According to IEEE 802.1ag, a Bridge replies with one LTR to a Link-Trace Message (LTM). This feature can make all MPs on an LTM's forwarding path reply with LTRs, whether they are on a Bridge or not.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **CFM Domain Name Settings** are described below:

Parameter	Description
Domain Name	Enter the Maintenance Domain (MD) name here. This name can be up to 22 characters long. The name does not allow spaces. Each MD has a unique

Parameter	Description
	name amongst all those used or available to a service provider or operator. It facilitates easy identification of administrative responsibility for each maintenance domain.
Domain Level	Enter the Maintenance Domain (MD) level here. The range is from 0 to 7. A unique MD level is assigned to define the hierarchical relationship between domains. The larger range of domain has the higher value of level.

Click the **Apply** button to accept the changes made.

Click the **Edit** button to modify the specified entry.

Click the **Delete** button to delete the specified entry.

Click the **Add MA** button to add a new Maintenance Association (MA) rule.

After clicking the **Edit** button, the following page will appear.

Figure 10-2 CFM Settings (Edit) Window

The fields that can be configured in the table are described below:

Parameter	Description
MIP Creation	<p>Select the Maintenance domain Intermediate Point (MIP) option here. The creation of MIPs on a maintenance domain is useful for tracing the link, MIP by MIP. It also allows the user to perform a loopback from an MEP to an MIP. An enumerated value indicates whether the management entity can create MIP Half Functions (MHF) for a maintenance domain.</p> <p>Options to choose from are None, Auto, and Explicit.</p> <ul style="list-style-type: none"> • None - Specifies not to create the MIP for a maintenance domain. • Auto - Specifies that MIPs will always be created on any port in this MD, when there is no MEP configured on that port for the MAs with the same VID at this MD level or any higher active MD levels, and at the same time there is an MEP configured on that port for the MA with the same VID at the next lower active MD level or there is no MA with the same VID at any lower active MD levels. For an intermediate Switch in an MA, the setting should be Auto in order for the MIPs to be created on this device. • Explicit - Specifies that MIPs will be created on any port for the MAs in this maintenance, when there is no MEP configured on that port for the MAs with the same VID at this MD level or any higher active MD levels, and at the same time there is an MEP configured on that port for the MA with the same VID at the next lower active MD level.
SenderID TLV	<p>This option is used to configure the default transmission of the sender ID TLV by MPs in an MD. Select one of the following options:</p> <ul style="list-style-type: none"> • None - Specifies not to transmit the sender ID TLV.

Parameter	Description
	<ul style="list-style-type: none"> • Chassis - Specifies to transmit the sender ID TLV with the chassis ID information. • Manage - Specifies to transmit the sender ID TLV with the managed address information. • Chassis_Manage - Specifies to transmit the sender ID TLV with the chassis ID information and the managed address information.

Click the **Apply** button to accept the changes made.

After clicking the **Add MA** button, the following page will appear.

Figure 10-3 CFM Settings (Add MA) Window

The fields that can be configured are described below:

Parameter	Description
MA Name	Enter the Maintenance Association (MA) entry name here. This name can be up to 22 characters long. Each MA in an MD must have a unique MA name. MAs configured in different MDs may have the same MA identifier. When the MA entry is deleted, the configuration on it is also deleted.
MA VID	Enter the Maintenance Association (MA) entry VLAN ID here. The range is from 1 to 4094.

Click the **Apply** button to accept the changes made.

Click the **Back** button to return to the previous window.

Click the **Edit** button to modify the specified entry.

Click the **Delete** button to delete the specified entry.

Click the **Add MEP** button to add a new Maintenance association End Point (MEP) entry.

After clicking the **Edit** button, the following page will appear.

Figure 10-4 CFM Settings (Add MA, Edit) Window

The fields that can be configured in the table are described below:

Parameter	Description
MA Mode	<p>Select the MA mode here. Options to choose from are:</p> <ul style="list-style-type: none"> • Software - Specifies that the MA works in the CFM software mode. • Hardware - Specifies that the MA works in the CFM hardware mode. <p>The CFM hardware mode is used to improve the performance of the CCM process. In the CFM hardware mode, the CCM packet is processed by hardware and in general does not need to involve the CPU. In addition, the CCM interval can be set to the lowest value of 3.3ms which is not supported in the CFM software mode due to the CPU capability constraints.</p> <p>The CFM hardware and software mode can be used together. The user can configure an MA as the CFM hardware mode. Then, all MEPs in the MA will be working in the CFM hardware mode. For some MAs, if the performance of the CCM process is considered, e.g. requiring 3.3ms and 10ms CCM interval, and the MEPs in the MA are down MEPs, the user can use the CFM hardware mode; For other MAs, if the performance of the CCM process is not a problem, or up MEPs and MIPs need to be set up, or full CFM function are required, the CFM software mode is a better choice.</p>
MIP Creation	<p>This option is used to configure the MIP creation for an MA. Select one of the following options:</p> <ul style="list-style-type: none"> • None - Specifies not to create the MIP on ports in an MA. • Auto - Specifies that MIPs will be created on any port for this MA, when there is no MEP configured on that port for the MAs with the same VID at this MD level or any higher active MD levels, and at the same time there is an MEP configured on that port for the MA with the same VID at the next lower active MD level or there is no MA with the same VID at any lower active MD levels. For an intermediate Switch in an MA, the setting should be Auto in order for the MIPs to be created on this device. • Explicit - Specifies that MIPs will be created on any port for this MA, when there is no MEP configured on that port for the MAs with the same VID at this MD level or any higher active MD levels, and at the same time there is an MEP configured on that port for the MA with the same VID at the next lower active MD level. • Defer - Specifies to inherit the settings configured for the maintenance domain that the MA is associated with. This is the default value.
CCM Interval	<p>Select the Continuity Check Message (CCM) interval value here. Options to choose from are 3.3ms, 10ms, 100ms, 1sec, 10sec, 1min, and 10min. An MEP will transmit a CCM packet periodically across the MA. The CCM interval indicates the interval at which CCMs are sent by a MEP in a MA.</p>
SenderID TLV	<p>This option is used to configure the transmission of the sender ID TLV by MPs for an MA. Select one of the following options:</p> <ul style="list-style-type: none"> • None - Specifies not to transmit the sender ID TLV. In the CFM hardware mode, the value is fixed to none. • Chassis - Specifies to transmit the sender ID TLV with the chassis ID information. • Manage - Specifies to transmit the sender ID TLV with the managed address information. • Chassis_Manage - Specifies to transmit the sender ID TLV with the chassis ID information and the managed address information. • Defer - Specifies to inherit the setting configured for the maintenance domain that the MA is associated with. This is the default value.
MEPID List	<p>Enter the Maintenance association End Point (MEP) ID contained in the MA here. The range is from 1 to 8191.</p>

Click the **Apply** button to accept the changes made.

After clicking the **Add MEP** button, the following page will appear.

CFM MEP Settings

CFM MEP Settings

Domain Name domain MA Name ma

MEPID (1-8191) Port 1 eth1/0/1

Direction Up

Apply Back

Total Entries: 1

MEPID	Port	Direction	
1	eth1/0/11	Up	Show Detail Remote MEP Edit LCK Edit DM Edit LM Delete

Figure 10-5 CFM Settings (Add MA, Add MEP) Window

The fields that can be configured are described below:

Parameter	Description
MEPID	Enter the MEP ID here. The range is from 1 to 8191. Each MEP configured in the same MA must have a unique MEP ID. The MEP on different MA can have the same MEPID. Before creating a MEP, its MEP ID should be configured in the MA's MEP ID list.
Port	Select the Switch unit ID and port number that will be used here.
Direction	Select the direction of the MEP here. Options to choose from are Up and Down . <ul style="list-style-type: none"> • Up - Specifies to create an inward facing (up) MEP. • Down - Specifies to create an outward facing (down) MEP.

Click the **Apply** button to accept the changes made.

Click the **Back** button to return to the previous window.

Click the **Show Detail** button to view more detailed information about the specified MEP.

Click the **Remote MEP** button to view the remove MEP table.

Click the **Edit LCK** button to modify the LCK settings of the specified entry.

Click the **Edit DM** button to access the CFM Delay Measurement (DM) settings.

Click the **Edit LM** button to access the CFM Loss Measurement (LM) settings.

Click the **Delete** button to delete the specified entry.

After clicking the **Show Detail** button, the following page will appear.

CFM MEPID Information			
Domain Name	domain		
MA Name	ma		
MEPID	1		
Mode	Software		
Port	eth1/0/11		
Direction	Up		
CFM Port Status	Disabled		
MAC Address	F0-7D-68-34-01-1A		
MEP State	Disabled		
CCM State	Disabled		
PDU Priority	7		
Fault Alarm	None		
Alarm Time	250 centisecond((1/100)s)		
Alarm Reset Time	1000 centisecond((1/100)s)		
Highest Fault	None		
AIS State	Disabled		
AIS Period	1 Second		
AIS Client Level	Invalid		
AIS Status	Not Detected		
LCK State	Disabled		
LCK Period	1 Second		
LCK Client Level	Invalid		
LCK Status	Not Detected		
LCK Action	Stop		
Out-of-Sequence CCMs Received	0		
Cross-connect CCMs	0		
Error CCMs Received	0	Normal CCMs Received	0
Port Status CCMs Received	0	If Status CCMs Received	0
CCMs transmitted	0	In-order LBRs Received	0
Out-of-order LBRs Received	0	Next LTM Trans ID	0
Unexpected LTRs Received	0	LBRs Transmitted	0
AIS PDUs Received	0	AIS PDUs Transmitted	0
LCK PDUs Received	0	LCK PDUs Transmitted	0

Figure 10-6 CFM Settings (Add MA, Add MEP, MEPID Detail) Window

Click the **Edit** button to modify the specified entry.

Click the **Back** button to return to the previous window.

After clicking the **Edit** button, the following page will appear.

CFM MEPID Information			
Domain Name	domain		
MA Name	ma		
MEPID	1		
Mode	Software		
Port	eth1/0/11		
Direction	Up		
CFM Port Status	Disabled		
MAC Address	F0-7D-68-34-01-1A		
MEP State	Disabled <input type="button" value="v"/>		
CCM State	Disabled <input type="button" value="v"/>		
PDU Priority	7 <input type="button" value="v"/>		
Fault Alarm	None <input type="button" value="v"/>		
Alarm Time	250	centisecond((1/100)s)	
Alarm Reset Time	1000	centisecond((1/100)s)	
Highest Fault	None		
AIS State	Disabled <input type="button" value="v"/>		
AIS Period	1 Second <input type="button" value="v"/>		
AIS Client Level	0 <input type="button" value="v"/>		
AIS Status	Not Detected		
LCK State	Disabled <input type="button" value="v"/>		
LCK Period	1 Second <input type="button" value="v"/>		
LCK Client Level	0 <input type="button" value="v"/>		
LCK Status	Not Detected		
LCK Action	Stop		
Out-of-Sequence CCMs Received	0		
Cross-connect CCMs	0		
Error CCMs Received	0	Normal CCMs Received	0
Port Status CCMs Received	0	If Status CCMs Received	0
CCMs transmitted	0	In-order LBRs Received	0
Out-of-order LBRs Received	0	Next LTM Trans ID	0
Unexpected LTRs Received	0	LBRs Transmitted	0
AIS PDUs Received	0	AIS PDUs Transmitted	0
LCK PDUs Received	0	LCK PDUs Transmitted	0

Figure 10-7 CFM Settings (Add MA, Add MEP, MEPID Detail, Edit) Window

The fields that can be configured are described below:

Parameter	Description
MEP State	Select to enable or disable the MEP state on the interface here.
CCM State	Select to enable or disable the CCM state here.
PDU Priority	Select the PDU priority value here. The range is from 0 to 7. This feature is used to define the 802.1p priority that is set in the CCM and other CFM PDUs transmitted by the MEP.
Fault Alarm	<p>Select the type of defects whose fault alarms can be sent by this MEP. Options to choose from are None, All, MAC-Status, Remote-CCM, Error-CCM, and XCON-CCM.</p> <ul style="list-style-type: none"> • None - Specifies that no fault alarm will be sent. • All - Specifies that the fault alarms can be sent for all types of defects. • MAC-Status - Specifies that the fault alarms can be sent for the defects whose priority is equal to or higher than <i>DefMACstatus</i>. • Remote-CCM - Specifies that the fault alarms can be sent for the defects whose priority is equal to or higher than <i>DefRemoteCCM</i>. • Error-CCM - Specifies that the fault alarms can be sent for the defects whose priority is equal to or higher than <i>DefErrorCCM</i>. • XCON-CCM - Specifies that only the fault alarm of <i>DefXconCCM</i> can be sent.

Parameter	Description
Alarm Time	Enter the time period used to define the time from when a defect is detected on the MEP to when a fault alarm will be sent. The range is from 250 to 1000 centiseconds. By default, this value is 250 centiseconds.
Alarm Reset Time	Enter the time period used to define the time from when all defects detected on the MEP are removed to when the fault alarm mechanism will be reset. The range is from 250 to 1000 centiseconds. By default, this value is 1000 centiseconds.
AIS State	Select the enable or disable the AIS feature on this interface here.
AIS Period	Select the transmitting interval of the AIS PDU here. Options to choose from are 1 Second and 1 Minute . The default period is 1 second.
AIS Client Level	Select the client level ID to which the MEP sends the AIS PDUs here. The default client MD level is that the most immediate client layer Maintenance domain Intermediate Points (MIP) and MEPs exist on. The range is from 0 to 7.
LCK State	Select the enable or disable the LCK feature on this interface here.
LCK Period	Select the transmitting interval of the LCK PDU here. Options to choose from are 1 Second and 1 Minute . The default period is 1 second.
LCK Client Level	Select the client level ID to which the MEP sends the LCK PDU here. The default client MD level is the MD level that the most immediate client layer MIPs and MEPs exist on. The range is from 0 to 7.

Click the **Apply** button to accept the changes made.

Click the **Back** button to return to the previous window.

After clicking the **Remote MEP** button, the following page will appear.

Figure 10-8 CFM Settings (Add MA, Add MEP, Remote MEP) Window

Click the **Back** button to return to the previous window.

After clicking the **Edit LCK** button, the following page will appear.

Figure 10-9 CFM Settings (Add MA, Add MEP, Edit LCK) Window

The fields that can be configured are described below:

Parameter	Description
State	Select to Start or Stop the administrative lock action here. This feature will result in the MEP to send LCK PDUs to a client level MEP.

Click the **Apply** button to accept the changes made.

Click the **Back** button to return to the previous window.

After clicking the **Edit DM** button, the following page will appear.

The screenshot shows the 'CFM DM Settings' window with three main sections: 'CFM DM Settings', 'CFM DM Test', and 'Clear CFM DM'. Each section contains input fields for Domain Name, MEPID, MA Name, and other parameters. The 'CFM DM Test' section includes a MAC Address field and a Percentile field. The 'Clear CFM DM' section includes a Type dropdown and 'Clear', 'Back', and 'Clear All' buttons. Below these sections is a summary table with the following data:

State	Enabled
DMM Transmitted	10
DMR Received	0
DMM Received	0
DMR Transmitted	0

ID	MAC Address	Status	Period:Interval	PCT	Priority	FD nanosec	FDV nanosec	Start Time
1	00-11-22-33-44-55	Running	1s:10s	75	0	0	0	2015-12-01 10:20:38

Figure 10-10 CFM Settings (Add MA, Add MEP, Edit DM) Window

The fields that can be configured in **CFM DM Settings** are described below:

Parameter	Description
State	Select to enable or disable the ITU Y.1731 frame Delay Measurement (DM) feature here. When the administrative state of frame delay measurement function is enabled on an MEP, the MEP will be enabled to generate timestamp information, and can reply DMR messages when receiving DMM messages.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **CFM DM Test** are described below:

Parameter	Description
MAC Address	Enter the MAC address for the DM test here.
Period Interval	Select the period interval time here. This specifies the transmitting period of the DDM message and diagnostic interval. Options to choose from are: <ul style="list-style-type: none"> 100ms-1sec - The transmission period is 100 milliseconds and the diagnostic interval is 1 second. 1sec-10sec - The transmission period is 1 second and the diagnostic interval is 10 seconds. This is the default value. 10sec-1min - The transmission period is 10 seconds and the diagnostic interval is 1 minute.
Percentile	Enter the percentile value here. This specifies the percentile of Frame Delay (FD) and Frame Delay Variation (FDV) measurement. The range is from 0 to 100. The default value is 75.
PDU Priority	Select the PDU priority value here. The range is from 0 to 7. This specifies the 802.1p priority to be set in the DMM messages transmitted by the MEP. The default value is the PDU priority of the MEP.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Clear CFM DM** are described below:

Parameter	Description
Type	Select the type of information to clear here. Options to choose from are: <ul style="list-style-type: none"> • Result - Specifies to clear the stored DM results. • Statistics - Specifies to clear the stored statistics of ETH-DM frames (DMM and DMR).

Click the **Clear** button to clear the CFM DM statistics information based on the selection made.

Click the **Clear All** button to clear all the CFM DM statistics information.

Click the **Back** button to return to the previous window.

After clicking the **Edit LM** button, the following page will appear.

CFM LM Settings

CFM LM Settings

Domain Name: domain MA Name: ma
MEPID: 1 State: Disabled

CFM LM Test

Domain Name: domain MA Name: ma
MEPID: 1 MAC Address: 00-84-57-00-00-00
Period: 1sec PDU Priority: None

Clear CFM LM

Domain Name: domain MA Name: ma
MEPID: 1 Type: Result

State: Enabled
LMM Transmitted: 3
LMR Received: 0
LMM Received: 0
LMR Transmitted: 0

ID	MAC Address	Status	Period	Priority	Far-End	Near-End	Start Time
1	00-11-22-33-44-55	Running	1sec	0	0	0	2015-12-01 10:23:18

Figure 10-11 CFM Settings (Add MA, Add MEP, Edit LM) Window

The fields that can be configured in **CFM LM Settings** are described below:

Parameter	Description
State	Select to enable or disable the ITU Y.1731 Loss Measurement (LM) feature here. When the administrative state of frame loss measurement function is enabled on an MEP, the MEP will maintain the counters of frame loss measurement function, and can reply LMR messages when receiving LMM messages.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **CFM LM Test** are described below:

Parameter	Description
MAC Address	Enter the MAC address for the LM test here.

Parameter	Description
Period	Select the time period here. This specifies the transmitting interval of the LM PDU. Options to choose from are 100ms , 1sec , and 10sec .
PDU Priority	Select the PDU priority value here. The range is from 0 to 7. This specifies the 802.1p priority to be set in the LMM messages transmitted by the MEP. The default value is the PDU priority of the MEP.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Clear CFM LM** are described below:

Parameter	Description
Type	Select the type of information to clear here. Options to choose from are: <ul style="list-style-type: none"> • Result - Specifies to clear the stored LM results. • Statistics - Specifies to clear the stored statistics of ETH-LM frames (LMM and LMR).

Click the **Clear** button to clear the CFM LM statistics information based on the selection made.

Click the **Clear All** button to clear all the CFM LM statistics information.

Click the **Back** button to return to the previous window.

CFM Port Settings

This window is used to display and configure the CFM port settings.

To view the following window, click **OAM > CFM > CFM Port Settings**, as shown below:

Unit	From Port	To Port	State
1	eth1/0/1	eth1/0/1	Disabled

Unit 1 Settings

Port	State	MAC Address
eth1/0/1	Disabled	80-26-89-8D-A8-00
eth1/0/2	Disabled	80-26-89-8D-A8-01
eth1/0/3	Disabled	80-26-89-8D-A8-02
eth1/0/4	Disabled	80-26-89-8D-A8-03
eth1/0/5	Disabled	80-26-89-8D-A8-04
eth1/0/6	Disabled	80-26-89-8D-A8-05
eth1/0/7	Disabled	80-26-89-8D-A8-06
eth1/0/8	Disabled	80-26-89-8D-A8-07

Figure 10-12 CFM Port Settings Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit ID that will be used here.
From Port - To Port	Select the Switch port range that will be used here.
State	Select the enable or disable the CFM feature on the specified port(s) here.

Click the **Apply** button to accept the changes made.

Click the **Show Detail** button to more detailed information about the CFM settings on the specified port.

After clicking the **Show Detail** button, the following page will appear.

CFM Port Detail

CFM Port Detail

Port: eth1/0/11
 State: Enabled
 MAC Address: F0-7D-68-34-01-1A

Domain Name	Level	MA Name	VID	MEPID	Direction
domain	0	ma	1	1	Up

Figure 10-13 CFM Port Settings (View Detail) Window

Click the **Back** button to return to the previous window.

CFM Loopback Test

This window is used to display and configure the CFM loopback test settings.

To view the following window, click **OAM > CFM > CFM Loopback Test**, as shown below:

CFM Loopback Test

CFM Loopback Test

MAC Address: 00-84-57-00-00-00

Remote MEPID (1-8191):

MEPID (1-8191):

MA Name: 22 chars

Domain Name: 22 chars

LBM Number (1-65535): 4

LBM Payload Length (0-1500): 0

LBM Payload Pattern: 1500 chars

PDU Priority: None

Figure 10-14 CFM Loopback Test Window

The fields that can be configured are described below:

Parameter	Description
MAC Address	Select and enter the destination MAC address here.
Remote MEPID	Select and enter the remote MEP ID here. The range is from 1 to 8191.
MEPID	Enter the MEP ID that will initiate the loopback test here. The range is from 1 to 8191.
MA Name	Enter the MA name here. This name can be up to 22 characters long.
Domain Name	Enter the MD name here. This name can be up to 22 characters long.
LBM Number	Enter the number of LBMs to be sent here. The range is from 1 to 65535. By default, this value is 4.
LBM Payload Length	Select and enter the payload length of the LBM to be sent here. The range is from 0 to 1500. By default, this value is 0.
LBM Payload Pattern	Select and enter the LBM payload pattern here. This specifies an arbitrary amount of data to be included in a Data TLV, along with an indication whether the Data TLV is to be included. This string can be up to 1500 characters long. No spaces are allowed.

Parameter	Description
PDU Priority	Select the 802.1p priority to be set in the transmitted LBMs here. If not specified, it uses the same priority as the CCMs sent by the MA. The range is from 0 to 7. Select the None option to use the default setting.

Click the **Apply** button to accept the changes made.

CFM Linktrace Settings

This window is used to display and configure the CFM link-trace settings.

To view the following window, click **OAM > CFM > CFM Linktrace Settings**, as shown below:

Transaction ID	MEPID	MAC Address	Start Time	
0	1	00-11-22-33-44-55	2015-12-01 10:53:41	Show Detail

Figure 10-15 CFM Linktrace Settings Window

The fields that can be configured in **CFM Linktrace Settings** are described below:

Parameter	Description
MAC Address	Enter the destination MAC address here.
MEPID	Enter the MEP ID here used to initiate the link-trace feature. The range is from 1 to 8191.
MA Name	Enter the MA name here. The name can be up to 22 characters long.
Domain Name	Enter the MD name here. The name can be up to 22 characters long.
TTL	Enter the link-trace message's TTL value here. The range is from 2 to 255. The default value is 64.
PDU Priority	Select the 802.1p priority to be set in the transmitted LBMs here. If not specified, it uses the same priority as the CCMs sent by the MA. The range is from 0 to 7. Select the None option to use the default setting.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Find and Clear CFM Linktrace** are described below:

Parameter	Description
MEPID	Enter the MEP ID here. The range is from 1 to 8191.
MA Name	Enter the MA name here. The name can be up to 22 characters long.
Domain Name	Enter the MD name here. The name can be up to 22 characters long.


Click the **Find** button to locate a specific entry based on the information entered.

Click the **Clear** button to clear the entries based on the information specified.

Click the **Clear All** button to clear the information associated with all entries.

Click the **Show Detail** button to view more detailed information about the link-trace entry.

After clicking the **Show Detail** button, the following page will appear.

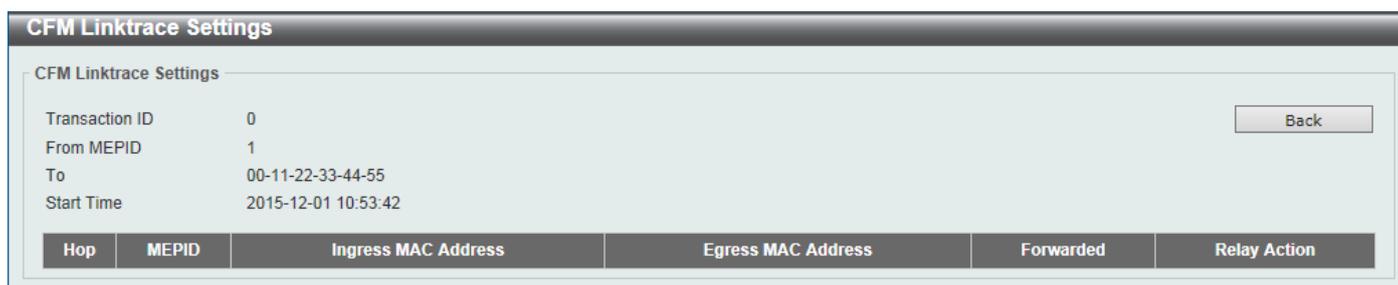

The screenshot shows the 'CFM Linktrace Settings' window. It contains a form with the following fields: Transaction ID (0), From MEPID (1), To (00-11-22-33-44-55), and Start Time (2015-12-01 10:53:42). A 'Back' button is located in the top right corner. Below the form is a table with the following columns: Hop, MEPID, Ingress MAC Address, Egress MAC Address, Forwarded, and Relay Action.


Figure 10-16 CFM Linktrace Settings (Show Detail) Window

Click the **Back** button to return to the previous window.

CFM Packet Counter

This window is used to find and display the CFM packet counter information.

To view the following window, click **OAM > CFM > CFM Packet Counter**, as shown below:

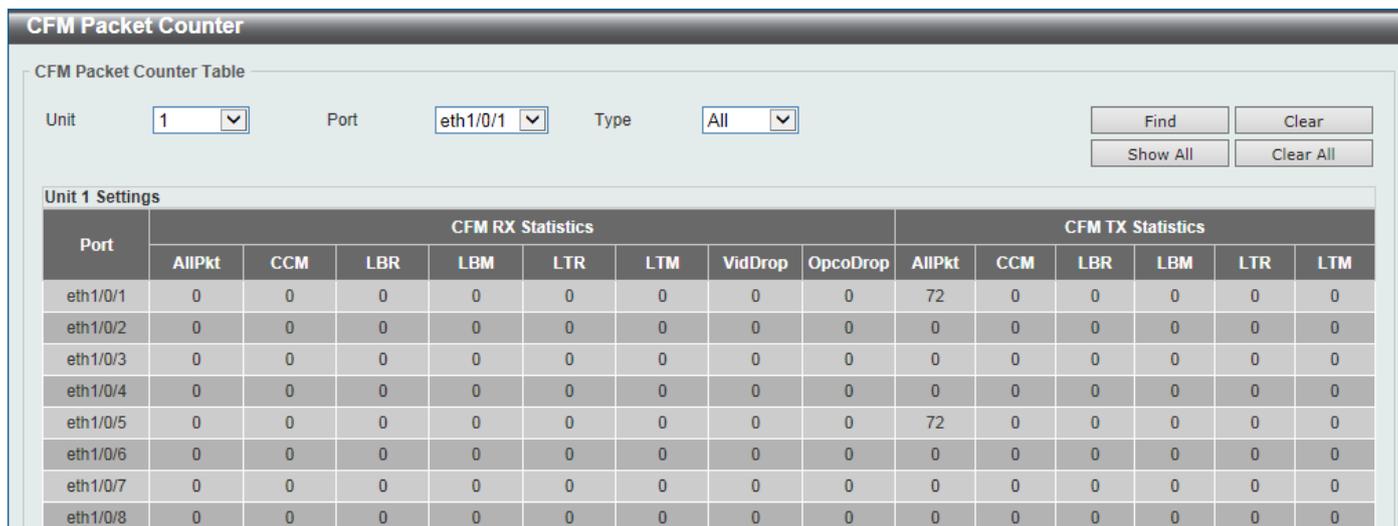

The screenshot shows the 'CFM Packet Counter' window. It features a search section with 'Unit' (1), 'Port' (eth1/0/1), and 'Type' (All) dropdown menus, and 'Find', 'Clear', 'Show All', and 'Clear All' buttons. Below is the 'Unit 1 Settings' table:

Port	CFM RX Statistics								CFM TX Statistics					
	AllPkt	CCM	LBR	LBM	LTR	LTM	VidDrop	OpcoDrop	AllPkt	CCM	LBR	LBM	LTR	LTM
eth1/0/1	0	0	0	0	0	0	0	0	72	0	0	0	0	0
eth1/0/2	0	0	0	0	0	0	0	0	0	0	0	0	0	0
eth1/0/3	0	0	0	0	0	0	0	0	0	0	0	0	0	0
eth1/0/4	0	0	0	0	0	0	0	0	0	0	0	0	0	0
eth1/0/5	0	0	0	0	0	0	0	0	72	0	0	0	0	0
eth1/0/6	0	0	0	0	0	0	0	0	0	0	0	0	0	0
eth1/0/7	0	0	0	0	0	0	0	0	0	0	0	0	0	0
eth1/0/8	0	0	0	0	0	0	0	0	0	0	0	0	0	0

Figure 10-17 CFM Packet Counter Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit ID that will be used here.
Port	Select the Switch port that will be used here.
Type	Select the type of counter information that will be cleared or displayed here. Options to choose from are All , TX , and RX .

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Clear** button to clear the counter information based on the information specified.

Click the **Show All** button to display all the entries.

Click the **Clear All** button to clear the counter information associated with all entries.

CFM Counter CCM

This window is used to view and clear the CFM CCM counter information.

To view the following window, click **OAM > CFM > CFM Counter CCM**, as shown below:

MEPID	VID	Level	Direction	Port	XCON	Error	Normal
1	1	0	Up	eth1/0/11	0	0	0
Total					0	0	0

Figure 10-18 CFM Counter CCM Window

Click the **Clear** button to clear the counter information associated with all entries.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

CFM MIP CCM Table

This window is used to display the MIP CCM database entries.

To view the following window, click **OAM > CFM > CFM MIP CCM Table**, as shown below:

MA Name	VID	MAC Address	Port
Total Entries: 0			

Figure 10-19 CFM MIP CCM Table Window

CFM MEP Fault Table

This window is used to display the MEPs that have faults.

To view the following window, click **OAM > CFM > CFM MEP Fault Table**, as shown below:

Domain Name	MA Name	MEPID	Status	AIS Status	LCK Status
Total Entries: 0					

Figure 10-20 CFM MEP Fault Table Window

Cable Diagnostics

The cable diagnostics feature is designed primarily for administrators or customer service representatives to verify and test copper cables; it can rapidly determine the quality of the cables and the types of error.

To view the following window, click **OAM > Cable Diagnostics**, as shown below:

The screenshot shows the 'Cable Diagnostics' window. At the top, there are three dropdown menus: 'Unit' (set to 1), 'From Port' (set to eth1/0/1), and 'To Port' (set to eth1/0/1). A 'Test' button is located to the right of these menus. Below the configuration area is a section titled 'Unit 1 Settings' with a 'Clear All' button. The main part of the window is a table with the following data:

Port	Type	Link Status	Test Result	Cable Length (M)	
eth1/0/1	1000BASE-T	Link Up	Pair 1 Short at 1M	-	Clear
			Pair 2 Ok at 0M	-	
			Pair 3 Ok at 4M	-	
			Pair 4 Short at 1M	-	
eth1/0/2	1000BASE-T	Link Down	-	-	Clear
eth1/0/3	1000BASE-T	Link Up	-	-	Clear
eth1/0/4	1000BASE-T	Link Down	-	-	Clear
eth1/0/5	1000BASE-T	Link Down	-	-	Clear
eth1/0/6	1000BASE-T	Link Down	-	-	Clear

Figure 10-21 Cable Diagnostics Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the appropriate port range used for the configuration here.

Click the **Test** button to test the specific port.

Click the **Clear** button to clear all the information for the specific port.

Click the **Clear All** button to clear all the information in this table.



NOTE: Cable diagnostic function limitations. Cable length detection is only supported on GE ports.



NOTE: The maximum cable diagnosis length is 120 meters.



NOTE: The deviation of cable length detection is about 5 meters for GE ports.

Fault messages:

- **Open** - This pair is left open.
- **Short** - Two lines of this pair is shorted.
- **CrossTalk** - Lines of this pair is short with lines in other pairs.


- **Unknown** - The diagnosis does not obtain the cable status, please try again.
- **NA** - No cable was found, maybe it's because cable is out of diagnosis specification or the quality is too bad.

Ethernet OAM

Ethernet OAM Settings

This window is used to display and configure the Ethernet Operations, Administration, and Maintenance (OAM) settings.

To view the following window, click **OAM > Ethernet OAM > Ethernet OAM Settings**, as shown below:

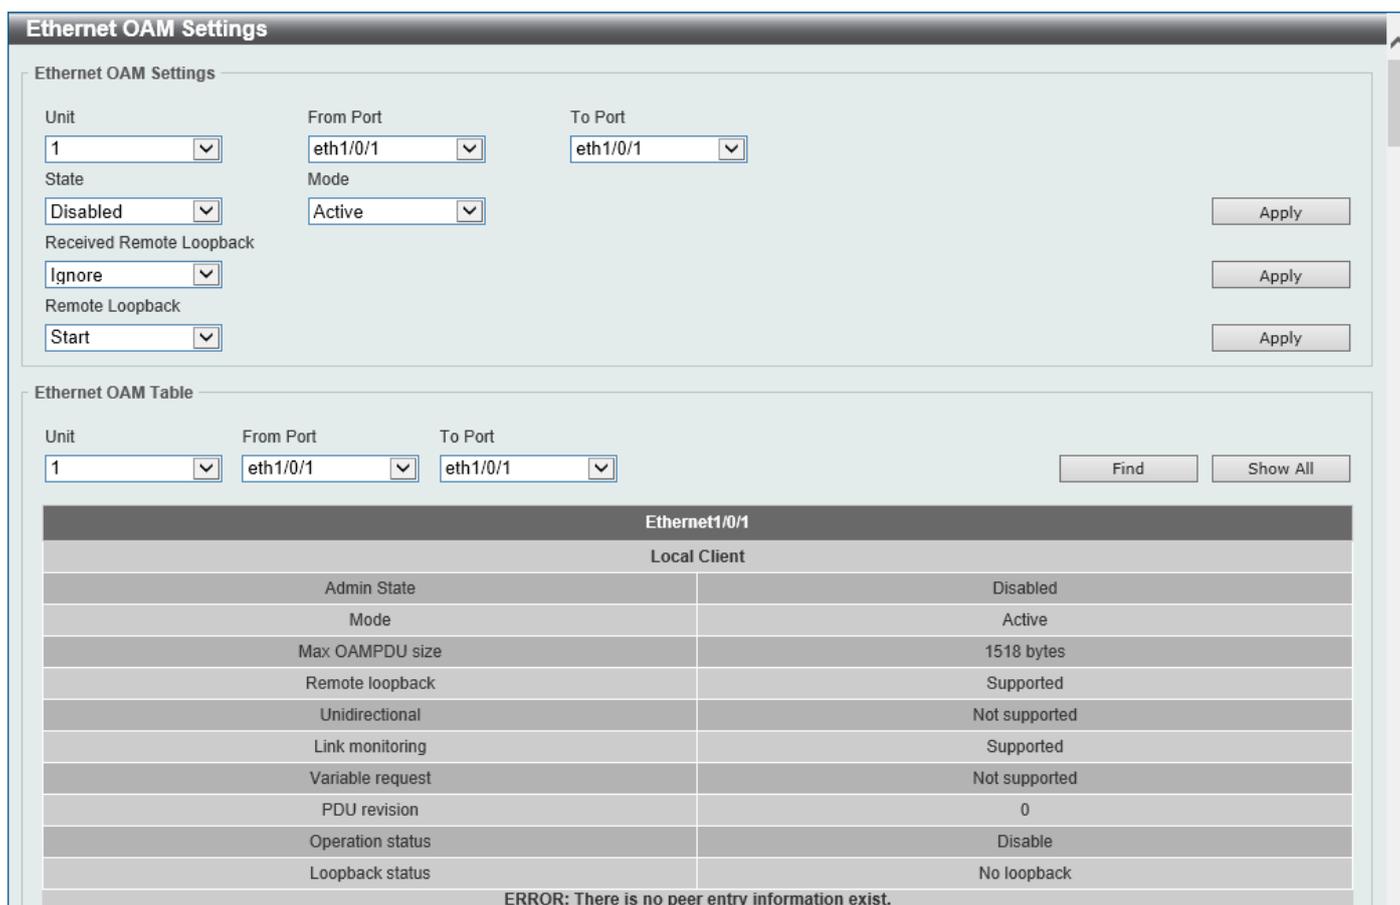

Ethernet OAM Settings

Ethernet OAM Settings

Unit: 1, From Port: eth1/0/1, To Port: eth1/0/1, State: Disabled, Mode: Active, Received Remote Loopback: Ignore, Remote Loopback: Start

Ethernet OAM Table

Unit: 1, From Port: eth1/0/1, To Port: eth1/0/1

Ethernet1/0/1	
Local Client	
Admin State	Disabled
Mode	Active
Max OAMPDU size	1518 bytes
Remote loopback	Supported
Unidirectional	Not supported
Link monitoring	Supported
Variable request	Not supported
PDU revision	0
Operation status	Disable
Loopback status	No loopback

ERROR: There is no peer entry information exist.

Figure 10-22 Ethernet OAM Settings Window

The fields that can be configured in **Ethernet OAM Settings** are described below:

Parameter	Description
Unit	Select the Switch unit ID that will be used here.
From Port - To Port	Select the Switch port range that will be used here.
State	Select to enable or disable the Ethernet OAM feature on the specified port(s) here. After enabling this function on the interface, the interface will start OAM discovery. If the OAM mode of this interface is active, it initiates the discovery. Otherwise, it reacts to the discovery received from the peer.
Mode	Select the Ethernet OAM mode here. Options to choose from are Active and Passive . The following two actions are allowed by ports in the active mode, but disallowed by ports in the passive mode. (1) Initiate OAM discovery. (2) Start or stop remote loopback.

Parameter	Description
Received Remote Loopback	<p>Select to configure the behavior of the received remote loopback requirement from the peer on the specified port(s) here. Options to choose from are Ignore and Process.</p> <ul style="list-style-type: none"> • Ignore - Specifies not to react to remote loopback requirements from a peer. • Process - Specifies to react to remote loopback requirements from a peer. <p>The feature is used to configure the client to process or to ignore the received Ethernet OAM remote loopback feature. In the remote loopback mode, all user traffic will not be processed. Ignoring the received remote loopback feature will prevent the port from entering the remote loopback mode.</p>
Remote Loopback	<p>Select the remote loopback action here. Options to choose from are Start and Stop.</p> <ul style="list-style-type: none"> • Start - Specifies to request the peer to change to the remote loopback mode. • Stop - Specifies to request the peer to change to the normal operation mode. <p>If the remote peer is configured to ignore the remote loopback request, then the remote peer will not enter or exit the remote loopback mode upon receiving the request. To start the remote peer to enter the remote loopback mode, administrators must ensure that the local client is in the active mode and the OAM connection is established. If the local client is already in the remote loopback mode, then this feature cannot be applied.</p>

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Ethernet OAM Table** are described below:

Parameter	Description
Unit	Select the Switch unit ID that will be used here.
From Port - To Port	Select the Switch port range that will be used here.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show All** button to display all the entries.

Ethernet OAM Configuration Settings

This window is used to display and configure the Ethernet OAM configuration settings.

To view the following window, click **OAM > Ethernet OAM > Ethernet OAM Configuration Settings**, as shown below:

Ethernet OAM Configuration Settings

Ethernet OAM Configuration Settings

Unit: 1, From Port: eth1/0/1, To Port: eth1/0/1, Dying Gasp: Disabled, Critical Event: Disabled

Link Monitor: Error Symbol, Notify State: Enabled, Threshold (0-4294967295): 1, Window (10-600): 10 Deciseconds

Ethernet OAM Configuration Table

Unit	From Port	To Port	Find	Show All
1	eth1/0/1	eth1/0/1		
Ethernet1/0/1				
Ethernet oam state				Disabled
Mode				Active
Dying gasp				Enabled
Critical event				Enabled
Remote loopback OAMPDU				Not Processed
Error symbol period event				
Notify state				Enabled
Threshold				1 Error Symbol
Window				10 deciseconds
Error frame event				
Notify state				Enabled
Threshold				1 Error Frame
Window				10 deciseconds
Error frame period event				
Notify state				Enabled
Threshold				1 Error Frame
Window				14881000 Frames
Error frame seconds event				
Notify state				Enabled
Threshold				1 Error Seconds
Window				600 deciseconds
Ethernet1/0/2				
Ethernet oam state				Disabled

Figure 10-23 Ethernet OAM Configuration Settings Window

The fields that can be configured in **Ethernet OAM Configuration Settings** are described below:

Parameter	Description
Unit	Select the Switch unit ID that will be used here.
From Port - To Port	Select the Switch port range that will be used here.
Dying Gasp	Select to enable or disable the dying gasp feature here. This feature is used to configure the capability of the dying gasp event. If the capability for the dying gasp event is disabled, the port will never send out OAM PDUs with the dying gasp event bit set when an unrecoverable local failure condition has occurred.
Critical Event	Select to enable or disable the critical event feature here. This feature is used to configure the capability of the critical event. If the capability for a critical event is disabled, the port will never send out OAM PDUs with critical event bit set when an unspecified critical event has occurred.
Link Monitor	Select the link monitor feature here. Options to choose from are Error Symbol , Error Frame , Error Frame Seconds , and Error Frame Period . <ul style="list-style-type: none"> Error Symbol - This feature is used to enable notifying the Ethernet OAM error symbol event and configure the monitor threshold and window on the specified port.

Parameter	Description
	<ul style="list-style-type: none"> • Error Frame - This feature is used to enable notifying the Ethernet OAM error frame event and configure the monitor threshold and window on the specified port. • Error Frame Seconds - This feature is used to enable notifying the Ethernet OAM error frame second event and configure the monitor threshold and window on the specified port. • Error Frame Period - This feature is used to enable notifying the Ethernet OAM error frame period event and configure the monitor threshold and window on the specified port.
Notify State	Select to enable or disable the notify state here.
Threshold	<p>Enter the threshold value here.</p> <ul style="list-style-type: none"> • When Error Symbol is selected as the link monitor, enter the number of symbol errors here. If symbol errors occur in the specified window and it exceeds the threshold value, then the event is generated. The range is from 0 to 4294967295. • When Error Frame is selected as the link monitor, enter the number of frame errors here. If the error frames occur in the specified window and exceeds the threshold value, then an error frame event is triggered. The range is from 0 to 4294967295. • When Error Frame Seconds is selected as the link monitor, enter the number of error frames in seconds here. If the number of the error frames occurred in the specified window and exceeds the threshold value, then the frame event is triggered. The range is from 1 to 900 seconds. • When Error Frame Period is selected as the link monitor, enter the number of frame errors that must occur for this event to be triggered here. The range is from 0 to 4294967295.
Window	<p>Enter the window value here.</p> <ul style="list-style-type: none"> • When Error Symbol is selected as the link monitor, enter the amount of time over which the threshold is defined here. If threshold symbol errors occur within the period, an event notification OAM PDU should be generated with an error symbol period event TLV, indicating that the threshold has been crossed in this window. The range is from 10 to 600 deciseconds. • When Error Frame is selected as the link monitor, enter the amount of time over which the threshold is defined here. If the threshold frame errors occur within the period, an event notification OAM PDU will be generated with an error frame event TLV, indicating that the threshold has been crossed in this window. The range is from 10 to 600 deciseconds. • When Error Frame Seconds is selected as the link monitor, enter the amount of time over which the threshold is defined here. If threshold frame errors occur within the period, an event notification OAM PDU will be generated with an error frame seconds summary event TLV indicating that the threshold has been crossed in this window. The range is from 100 to 9000 deciseconds. • When Error Frame Period is selected as the link monitor, enter the number of frames over which the threshold is defined here. If threshold frame errors occur within the period, an event notification OAM PDU should be generated with an error frame period event TLV indicating that the threshold has been crossed in this window. The lower bound is the number of minimum frame-size frames that can be received in 100ms on the underlying physical layer. The upper bound is the number of minimum frame-size frames that can be received in one minute on the underlying physical layer. The range is from 148810 to 892860000.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Ethernet OAM Configuration Table** are described below:

Parameter	Description
Unit	Select the Switch unit ID that will be used here.
From Port - To Port	Select the Switch port range that will be used here.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show All** button to display all the entries.

Ethernet OAM Event Log Table

This window is used to view and clear the Ethernet OAM event log table.

To view the following window, click **OAM > Ethernet OAM > Ethernet OAM Event Log Table**, as shown below:

Ethernet OAM Event Log Table

Ethernet OAM Event Log Table

Unit: 1 Port: eth1/0/1 Action: Find Find

Ethernet1/0/1 Records Statistics					
Local Faults	Link Fault	0	Remote Faults	Link Fault	0
	Dying Gasp	0		Dying Gasp	0
	Critical Event	0		Critical Event	0
Local event Logs	Errored Symbol	0	Remote event Logs	Errored Symbol	0
	Errored Frame	0		Errored Frame	0
	Errored Frame Period	0		Errored Frame Period	0
	Errored Frame Second	0	Errored Frame Second	0	

Total Entries: 0

Ethernet1/0/1 Event Log Table							
Index	Location	Type	Time Stamp	Value	Window	Threshold	Accumulated Errors

Figure 10-24 Ethernet OAM Event Log Table Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit ID that will be used here.
Port	Select the Switch port that will be used here.
Action	Select the Find option to find and display the log entries associated with the specified port. Select the Clear option to clear the log entries associated with the specified port.

Click the **Find** button to find and display the log entries associated with the specified port.

Ethernet OAM Statistics Table

This window is used to view and clear the Ethernet OAM statistics table.

To view the following window, click **OAM > Ethernet OAM > Ethernet OAM Statistics Table**, as shown below:

Ethernet OAM Statistics Table			
Unit	From Port	To Port	Action
1	eth1/0/1	eth1/0/1	Find
Ethernet1/0/1			
Information OAMPDU TX	0	Information OAMPDU RX	0
Unique event notification OAMPDU TX	0	Unique event notification OAMPDU RX	0
Duplicate event notification OAMPDU TX	0	Duplicate event notification OAMPDU RX	0
Loopback control OAMPDU TX	0	Loopback control OAMPDU RX	0
Variable request OAMPDU TX	0	Variable request OAMPDU RX	0
Variable response OAMPDU TX	0	Variable response OAMPDU RX	0
Organization specific OAMPDU TX	0	Organization specific OAMPDU RX	0
Unsupported OAMPDU TX	0	Unsupported OAMPDU RX	0
Frame lost due to OAM	0		
Ethernet1/0/2			
Information OAMPDU TX	0	Information OAMPDU RX	0
Unique event notification OAMPDU TX	0	Unique event notification OAMPDU RX	0

Figure 10-25 Ethernet OAM Statistics Table Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit ID that will be used here.
From Port - To Port	Select the Switch port range that will be used here.
Action	Select the Find option to find and display the statistics information associated with the specified port. Select the Clear option to clear the statistics information associated with the specified port(s).

Click the **Find** button to find and display the statistics information associated with the specified port(s).

Click the **Show All** button to display all the statistics information.

Ethernet OAM DULD Settings

This window is used to display and configure the Ethernet OAM D-Link Unidirectional Link Detection (DULD) settings. DULD is an extension of 802.3ah Ethernet OAM. It provides a mechanism to detect a unidirectional point-to-point Ethernet link without PHY support. OAM vendor specific messages are used in the detection. The detection process is started after OAM discovery was started but does not complete the negotiation in the configured discovery time.

To view the following window, click **OAM > Ethernet OAM > Ethernet OAM DULD Settings**, as shown below:

Port	Admin State	Oper Status	Action	Link Status	Discovery Time(sec)
Ethernet1/0/1	Disabled	Disabled	Normal	Unknown	5
Ethernet1/0/2	Disabled	Disabled	Normal	Unknown	5
Ethernet1/0/3	Disabled	Disabled	Normal	Unknown	5
Ethernet1/0/4	Disabled	Disabled	Normal	Unknown	5
Ethernet1/0/5	Disabled	Disabled	Normal	Unknown	5
Ethernet1/0/6	Disabled	Disabled	Normal	Unknown	5
Ethernet1/0/7	Disabled	Disabled	Normal	Unknown	5
Ethernet1/0/8	Disabled	Disabled	Normal	Unknown	5
Ethernet1/0/9	Disabled	Disabled	Normal	Unknown	5
Ethernet1/0/10	Disabled	Disabled	Normal	Unknown	5

Figure 10-26 Ethernet OAM DULD Settings Window

The fields that can be configured in **Ethernet OAM DULD Settings** are described below:

Parameter	Description
Recovery Time	Enter the time interval value used by DULD to decide how long to recover the disabled port here. When the timer has expired, the disabled port by DULD will be recovered automatically. 0 represents that this function is disabled. This value is either 0 seconds or in the range from 60 to 1000000 seconds.
Unit	Select the Switch unit ID that will be used here.
From Port - To Port	Select the Switch port range that will be used here.
Admin State	Select to enable or disable the admin state here. This feature is used to enable Ethernet OAM unidirectional link detection on the specified port(s).
Action	Select the action that will be taken here. Options to choose from are Normal and Shutdown .
Discovery Time	Enter the discovery time value here. The range is from 5 to 65535 seconds. By default, this value is 5 seconds. If the OAM discovery does not successfully negotiate before discovery time expired, OAM unidirectional link detection will start.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Ethernet OAM DULD Table** are described below:

Parameter	Description
Unit	Select the Switch unit ID that will be used here.
From Port - To Port	Select the Switch port range that will be used here.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show All** button to display all the entries.

DDM

This folder contains windows that perform Digital Diagnostic Monitoring (DDM) functions on the Switch. There are windows that allow the user to view the digital diagnostic monitoring status of SFP/SFP+ modules inserting to the Switch and to configure alarm settings, warning settings, temperature threshold settings, voltage threshold settings, bias current threshold settings, Tx power threshold settings, and Rx power threshold settings.

DDM Settings

The window is used to view and configure the action that will occur for specific ports when an exceeding alarm threshold or warning threshold event is encountered.

To view the following window, click **OAM > DDM > DDM Settings**, as shown below:

Figure 10-27 DDM Settings Window

The fields that can be configured in **DDM Global Settings** are described below:

Parameter	Description
Transceiver Monitoring Traps Alarm	Select to enable or disable the transceiver monitoring traps alarm feature here.
Transceiver Monitoring Traps Warning	Select to enable or disable the transceiver monitoring traps warning feature here.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **DDM Shutdown Settings** are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the appropriate port range used for the configuration here.
State	Use the drop-down menu to enable or disable the DDM state.
Shutdown	Specify whether to shut down the port, when the operating parameter exceeds the Alarm or Warning threshold. <ul style="list-style-type: none"> Alarm - Shutdown the port when the configured alarm threshold range is exceeded.

Parameter	Description
	<ul style="list-style-type: none"> • Warning - Shutdown the port when the configured warning threshold range is exceeded. • None - The port will never shutdown regardless if the threshold ranges are exceeded or not. This is the default.

Click the **Apply** button to accept the changes made.

DDM Temperature Threshold Settings

This window is used to display and configure the DDM Temperature Threshold Settings for specific ports on the Switch.

To view the following window, click **OAM > DDM > DDM Temperature Threshold Settings**, as shown below:

DDM Temperature Threshold Settings

DDM Temperature Threshold Settings

Unit: 1 Port: eth1/0/1 Action: Add Type: Low Alarm Value (-128-127.996): Celsius Apply

Unit 1 Settings

Port	Current	High Alarm (Celsius)	High Warning (Celsius)	Low Warning (Celsius)	Low Alarm (Celsius)
eth1/0/21	28.384	78.000	73.000	-8.000	-13.000

Note: ++ : high alarm, + : high warning, - : low warning, -- : low alarm
A: The threshold is administratively configured.

Figure 10-28 DDM Temperature Threshold Settings Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
Port	Select the port used for the configuration here.
Action	Select the action that will be taken here. Options to choose from are Add and Delete .
Type	Select the type of temperature threshold. Options to choose from are Low Alarm , Low Warning , High Alarm , and High Warning .
Value	Enter the threshold value. This value must be between -128 and 127.996 °C.

Click the **Apply** button to accept the changes made.

DDM Voltage Threshold Settings

This window is used to display and configure the DDM Voltage Threshold Settings for specific ports on the Switch.

To view the following window, click **OAM > DDM > DDM Voltage Threshold Settings**, as shown below:

DDM Voltage Threshold Settings

DDM Voltage Threshold Settings

Unit: 1, Port: eth1/0/1, Action: Add, Type: Low Alarm, Value: 0-6.55 V

Apply

Unit 1 Settings

Port	Current	High Alarm (V)	High Warning (V)	Low Warning (V)	Low Alarm (V)
eth1/0/21	3.310	3.700	3.600	3.000	2.900

Note: ++: high alarm, +: high warning, -: low warning, --: low alarm
A: The threshold is administratively configured.

Figure 10-29 DDM Voltage Threshold Settings Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
Port	Select the port used for the configuration here.
Action	Select the action that will be taken here. Options to choose from are Add and Delete .
Type	Select the type of voltage threshold. Options to choose from are Low Alarm , Low Warning , High Alarm , and High Warning .
Value	Enter the threshold value. This value must be between 0 and 6.55 Volt.

Click the **Apply** button to accept the changes made.

DDM Bias Current Threshold Settings

This window is used to display and configure the threshold of the bias current for specific ports on the Switch.

To view the following window, click **OAM > DDM > DDM Bias Current Threshold Settings**, as shown below:

DDM Bias Current Threshold Settings

DDM Bias Current Threshold Settings

Unit: 1, Port: eth1/0/1, Action: Add, Type: Low Alarm, Value: 0-131 mA

Apply

Unit 1 Settings

Port	Current	High Alarm (mA)	High Warning (mA)	Low Warning (mA)	Low Alarm (mA)
eth1/0/21	7.880	11.800	10.800	5.000	4.000

Note: ++: high alarm, +: high warning, -: low warning, --: low alarm
A: The threshold is administratively configured.

Figure 10-30 DDM Bias Current Threshold Settings Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
Port	Select the port used for the configuration here.

Parameter	Description
Action	Select the action that will be taken here. Options to choose from are Add and Delete .
Type	Select the type of bias current threshold. Options to choose from are Low Alarm , Low Warning , High Alarm , and High Warning .
Value	Enter the threshold value. This value must be between 0 and 131 mA.

Click the **Apply** button to accept the changes made.

DDM TX Power Threshold Settings

This window is used to display and configure the threshold of TX power for specific ports on the Switch.

To view the following window, click **OAM > DDM > DDM TX Power Threshold Settings**, as shown below:

DDM TX Power Threshold Settings

DDM TX Power Threshold Settings

Unit: 1 Port: eth1/0/1 Action: Add Type: Low Alarm Power Unit: mW Value (0-6.5535): mW

Unit 1 Settings

Port	Current		High Alarm		High Warning		Low Warning		Low Alarm	
	mW	dBm	mW	dBm	mW	dBm	mW	dBm	mW	dBm
eth1/0/21	0.034	-14.719	0.832	-0.800	0.661	-1.800	0.316	-5.000	0.251	-6.000

Note: ++: high alarm, +: high warning, -: low warning, --: low alarm
A: The threshold is administratively configured.

Figure 10-31 DDM TX Power Threshold Settings Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
Port	Select the port used for the configuration here.
Action	Select the action that will be taken here. Options to choose from are Add and Delete .
Type	Select the type of TX power threshold. Options to choose from are Low Alarm , Low Warning , High Alarm , and High Warning .
Power Unit	Select the power unit here. Options to choose from are mW and dBm .
Value	Enter the threshold value either in mW or dBm here. <ul style="list-style-type: none"> When selecting mW in the Power Unit drop-down list, this value must be between 0 and 6.5535. When selecting dBm in the Power Unit drop-down list, this value must be between -40 and 8.1647.

Click the **Apply** button to accept the changes made.

DDM RX Power Threshold Settings

This window is used to display and configure the threshold of RX power for specific ports on the Switch.

To view the following window, click **OAM > DDM > DDM RX Power Threshold Settings**, as shown below:

DDM RX Power Threshold Settings

Unit: 1 Port: eth1/0/1 Action: Add Type: Low Alarm Power Unit: mW Value (0-6.5535): mW Apply

Unit 1 Settings

Port	Current		High Alarm		High Warning		Low Warning		Low Alarm	
	mW	dBm	mW	dBm	mW	dBm	mW	dBm	mW	dBm
eth1/0/21	0.000	-	1.000	0.000	0.794	-1.000	0.016	-18.013	0.010	-20.000

Note: ++ : high alarm, + : high warning, - : low warning, -- : low alarm
A: The threshold is administratively configured.

Figure 10-32 DDM RX Power Threshold Settings Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
Port	Select the port used for the configuration here.
Action	Select the action that will be taken here. Options to choose from are Add and Delete .
Type	Select the type of RX power threshold. Options to choose from are Low Alarm , Low Warning , High Alarm , and High Warning .
Power Unit	Select the power unit here. Options to choose from are mW and dBm .
Value	Enter the threshold value either in mW or dBm here. <ul style="list-style-type: none"> When selecting mW in the Power Unit drop-down list, this value must be between 0 and 6.5535. When selecting dBm in the Power Unit drop-down list, this value must be between -40 and 8.1647.

Click the **Apply** button to accept the changes made.

DDM Status Table

This window is used to display the current operating digital diagnostic monitoring parameters and their values on the SFP module for specified ports.

To view the following window, click **OAM > DDM > DDM Status Table**, as shown below:

DDM Status Table

Total Entries: 1

Port	Temperature (Celsius)	Voltage (V)	Bias Current (mA)	TX Power		RX Power	
				mW	dBm	mW	dBm
eth1/0/21	25.496	3.315	0.225	0.034	-14.681	0.000	-

Note: ++ : high alarm, + : high warning, - : low warning, -- : low alarm

Figure 10-33 DDM Status Table Window

11. MPLS

[MPLS LDP Information Settings](#)
[MPLS LSP Trigger Information](#)
[MPLS Forwarding Settings](#)
[MPLS LDP Neighbor Password Settings](#)
[MPLS LDP Neighbor Targeted Settings](#)
[MPLS LDP Neighbor Information](#)
[MPLS Global Settings](#)
[MPLS LDP Interface Settings](#)
[MPLS LDP Session Information](#)
[MPLS LDP Statistic](#)
[MPLS LDP Binding Table](#)
[MPLS LDP Discovery Information](#)
[MPLS QoS Settings](#)
[Ping MPLS](#)
[Traceroute MPLS IPv4](#)

MPLS LDP Information Settings

This window is used to display and configure the Multiprotocol Label Switching (MPLS) Label Distribution Protocol (LDP) information settings.

To view the following window, click **MPLS > MPLS LDP Information Settings**, as shown below:

Figure 11-1 MPLS LDP Information Settings Window

The fields that can be configured are described below:

Parameter	Description
LSR ID	Enter the Label Switching Router (LSR) ID here. The IPv4 address must be an IPv4 address of an existing interface. The LSR ID is used to identify the LSR in the MPLS network. Select the Default option to use the default setting.
LDP Version	In this field the LDP version will be displayed.
LDP State	Select to enable or disable the LDP feature here.
TCP Port	In this field the LDP TCP port number will be displayed.

Parameter	Description
UDP Port	In this field the LDP UDP port number will be displayed.
Max PDU Length	In this field the LDP maximum PDU length value will be displayed.
Initial Backoff	Enter the initial back-off delay time here. The LDP back-off delay time is a mechanism to prevent an endless sequence of session setup failures that occur between two LSRs with incompatible settings. The range is from 15 to 65535 seconds. Select the Default option to use the default value, which is 15 seconds.
Max Backoff	Enter the maximum back-off delay time here. The range is from 120 to 65535 seconds. Select the Default option to use the default value, which is 600 seconds.
Transport Address	Enter the transport IPv4 address here. The transport address is used to establish a LDP TCP connection. Select the Default option to use the default setting. Selecting the Interface option specifies to use the IP address of the corresponding interface as the transmission address for the session on each interface.
Keep-Alive Time	Enter the keep-alive time value here. LDP maintains a keep-alive hold timer for each peer session. If the keep-alive hold timer expires without receipt of an LDP PDU from the peer, LDP terminates the LDP session. The range is from 15 to 65535 seconds. Select the Default option to use the default value, which is 40 seconds.
Link Hello Interval	Enter the link hello interval value here. The range is from 1 to 65535 seconds. Select the Default option to use the default value, which is 5 seconds.
Link Hello Hold Time	Enter the link hello hold time value here. The range is from 5 to 65535 seconds. Select the Default option to use the default value, which is 15 seconds.
Hello Source Address Type	Select the source address type of the hello packet here. Options to choose from are: <ul style="list-style-type: none"> • Interface - Specifies that the IP address of each interface is used as the hello source address. • Router ID - Specifies that the LSR ID (router ID) will be used as the hello source address. • IP Address - Specifies to manually enter the IP address used as the hello source address.
Hello Source Address	Enter the IP address that will be used as the hello source address here.
Distribution Method	Select the distribution method here. Options to choose from are: <ul style="list-style-type: none"> • DU - Specifies the downstream unsolicited distribution mode. • DoD - Specifies the downstream on-demand distribution mode. <p>If the mode is configured as Downstream-on-Demand mode, the downstream LSR advertises a label mapping when an upstream connection makes an explicit request. If the mode is configured as Downstream-Unsolicited mode, the downstream LSR advertises a label mapping when a label is learned in the routing table.</p> Select the Default option to use the default setting, which is DU.
LSP Control Mode	Select the Label-Switched Path (LSP) control mode here. Options to choose from are Independent and Ordered . In Independent LSP Control mode, each LSR independently binds a label to a Forwarding Equivalence Class (FEC) and distributes the binding to its label distribution peers. In Ordered LSP Control mode, an LSR only binds a label to a FEC if it is the egress LSR for that FEC, or if it has already received a label binding for that FEC from its next hop for that FEC. Select the Default option to use the default setting, which is Independent .

Parameter	Description
Label Retention Mode	<p>Select the label retention mode here. Options to choose from are Liberal and Conservative. If the label distribution method is Downstream-Unsolicited and the label retention mode is conservative, once the LSR received label bindings from LSRs which are not its next hop for that FEC, it discards such bindings. If the label retention mode is liberal, it maintains such bindings. It helps to speed up the setup of LSP in case there is a change in the next hop.</p> <p>Select the Default option to use the default setting, which is Liberal.</p>
Loop Detection	<p>Select to enable or disable the loop detection feature here. LDP loop detection makes use of the Path Vector and Hop Count TLVs carried by the label request and label mapping messages to prevent looping of LDP messages. If enabled, LDP does not send the LDP message that violates the path vector check or hop count check to next hop.</p>
Path Vector Limit	<p>Enter the path vector limit value here. The range is from 1 to 255. If loop detection is enabled, the LDR ID that is in the path vector list of the label mapping message or the label request message or the path vector length exceeds the maximum length, then it is deemed that a loop occurs.</p> <p>Select the Default option to use the default value, which is 254.</p>
Hop Count Limit	<p>Enter the hop count limit here. The range is from 1 to 255. This feature is used to configure the maximum number of hops permitted in the LSP setup.</p> <p>Select the Default option to use the default value, which is 254.</p>
Authentication	<p>Select to enable or disable the authentication feature here. If the LDP MD5 authentication is enabled, the LSR applies the MD5 algorithm to compute the MD5 digest for the TCP segment that will be sent to the peer. This computation makes use of the peer password as well as the TCP segment. When the LSR receives a TCP segment with an MD5 digest, it validates the segment by calculating the MD5 digest (using its own record of the password) and compares the computed digest with the received digest. If the comparison fails, the segment is dropped without any response to the sender. The LSR ignores LDP Hellos from any LSR for which a password has not been configured.</p>
PHP	<p>Select the Penultimate Hop Popping (PHP) behavior here. Options to choose from are Implicit Null and Explicit Null. If the egress router advertises the Implicit Null label, the upstream will do PHP. If the egress router advertises the Explicit Null label, the upstream will keep the outer label without popping.</p>
Trap Status	<p>Select to enable or disable the LDP trap feature here.</p>
Graceful Restart	<p>Select to enable or disable the graceful restart feature here. LDP graceful restart provides a mechanism that helps to minimize the negative effects on MPLS traffic caused by the Label Switching Router's (LSR) control plane restart. It extends the LDP to preserve the MPLS forwarding state during LDP session recovery, so that the data plane is not impacted. The graceful restart will be used by the LDP session only when both local and peer are enabled.</p>
Neighbor Liveness Time	<p>Enter the neighbor liveness time value here. When the device detects that its LDP session with a neighbor went down, it tries to re-establish LDP communication with the neighbor in the reconnection time. The reconnection time is set according to the lesser of the FT reconnect timeout value advertised by the neighbor and the local neighbor liveness time. If the LDP session cannot be established within the reconnection time, all associated stale label forwarding entries will be deleted. If LDP graceful restart is enabled, the advertised FT reconnect timeout is set according to the neighbor liveness time value. The range is from 5 to 300 seconds.</p> <p>Select the Default option to use the default value.</p>
Recovery Time	<p>Enter the recovery time value here. If LDP graceful restart is enabled and an LDP session is re-established, the device will complete the exchange of the label mapping information with its neighbor within the recovery time. After the recovery timer expired, the device will delete all label forwarding entries that are marked stale. The range is from 12 to 600 seconds.</p> <p>Select the Default option to use the default value.</p>

Click the **Apply** button to accept the changes made.

MPLS LSP Trigger Information

This window is used to display and configure the MPLS Label-Switched Path (LSP) trigger information. The LSP trigger filter rules are IP access list rules that it is used to control the IP routes that can be used to trigger the establishment of an LSP.

To view the following window, click **MPLS > MPLS LSP Trigger Information**, as shown below:

MPLS LSP Trigger Information

MPLS LSP Trigger Information

SN (1-10000) Action

IP Address Mask Any

SN (1-10000)

Total Entries: 1

SN	Prefix FEC	Action
1	Any	Permit

1/1

Figure 11-2 MPLS LSP Trigger Information Window

The fields that can be configured are described below:

Parameter	Description
SN	Enter the sequence number of the LSP trigger filter rule here. When creating a new rule, if not specified, the SN begins from 10 and is incremented by 10. The range is from 1 to 10000.
Action	Select the action that will be taken here. Options to choose from are: <ul style="list-style-type: none"> Permit - Specifies to permit LDP in establishing the LSP to follow the IP prefix FEC. Deny - Specifies no permit LDP in establishing the LSP to follow the IP prefix FEC.
IP Address	Enter the IPv4 address FEC on which the rule will apply.
Mask	Enter the subnet mask FEC on which the rule will apply. Selecting the Any option specifies that the rule will apply on any IP prefix FEC.

Click the **Apply** button to accept the changes made.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Clear All** button to clear all the information related to the SN entered.

Click the **Delete** button to remove the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

MPLS Forwarding Settings

This window is used to display and configure the MPLS forwarding settings.

The **Static FTN Settings** section is used to add or delete a static FEC-To-NHLFE Map (FTN) entry. FEC stands for Forwarding Equivalence Class and NHLFE stands for Next Hop Label Forwarding Entry. At the ingress Label Edge

Router (LER), the incoming IP packets that are classified to the Forwarding Equivalence Class (FEC) will be pushed with the MPLS label and forwarded to the next hop according to the FEC-to-NHLFE (FTN).

The **Static ILM Settings** section is used to add a static Incoming Label Map (ILM) entry. At LSR, the incoming MPLS packets that are matched to the incoming label will be processed according configured ILM action. The label operation is either swapping the incoming top label to configured outgoing label or popping the top label and then forwards the packets to the next-hop.

To view the following window, click **MPLS > MPLS Forwarding Settings**, as shown below:

Figure 11-3 MPLS Forwarding Settings Window

The fields that can be configured for **Static FTN Settings** are described below:

Parameter	Description
FEC	Enter the FEC IPv4 address of the static FTN here.
Mask	Enter the FEC subnet mask of the static FTN here.
Out Label	Enter the out label value for this FEC here. The range is from 0 to 999.
Next Hop	Enter the next hop IPv4 address of this FEC here.

Click the **Apply** button to accept the changes made.

Click the **Delete by IP** button to delete the specified entry based on the IP address entered.

Click the **Delete All** button to delete all the entries.

The fields that can be configured for **Static ILM Settings** are described below:

Parameter	Description
In Label	Enter the incoming label value of the ILM here. The range is from 0 to 999.
Forward Action	Select the forward action that will be taken here. Options to choose from are Swap Label and Pop .
Swap Label	After selecting to use the Swap Label forward action, enter the swap label value here. The range is from 0 to 999.
Next Hop	After selecting to use the Swap Label forward action, enter the next hop IPv4 address of the FEC here.
FEC	Enter the FEC IPv4 address that will be associated with the ILM here.
Mask	Enter the FEC subnet mask that will be associated with the ILM here.

Click the **Apply** button to accept the changes made.

Click the **Delete by In Label** button to delete the specified entry based on the In Label entered.

Click the **Delete All** button to delete all the entries.

The fields that can be configured for **Find FTN** are described below:

Parameter	Description
IP Address	Enter the FEC IPv4 address of the FTN here.
Mask	Enter the FEC subnet mask of the FTN here.

Click the **Find** button to locate a specific entry based on the information entered.

MPLS LDP Neighbor Password Settings

This window is used to display and configure the MPLS LDP neighbor password settings. If the MD5 authentication is enabled, the LSR only establishes sessions with the peer when they exchange the same password. The password setting will be applied to negotiation with link neighbors or targeted neighbors.

To view the following window, click **MPLS > MPLS LDP Neighbor Password Settings**, as shown below:

Figure 11-4 MPLS LDP Neighbor Password Settings Window

The fields that can be configured are described below:

Parameter	Description
Neighbor IP	Enter the neighbor IPv4 address here. This address will also be the neighbor's (peer) LSR ID.
Password	Enter the LDP peer password here. Select the Default option to use the default password (which is empty).

Click the **Apply** button to accept the changes made.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

MPLS LDP Neighbor Targeted Settings

This window is used to display and configure the MPLS LDP neighbor targeted settings. LDP sends the targeted hello message at the configured interval to discover the neighbor. For a discovered neighbor, LDP maintains a hold-timer. The neighbor will time out if the timer has expired without the receipt of a hello message from the neighbor.

To view the following window, click **MPLS > MPLS LDP Neighbor Targeted Settings**, as shown below:

Figure 11-5 MPLS LDP Neighbor Targeted Settings Window

The fields that can be configured are described below:

Parameter	Description
Neighbor Targeted	Enter the LSR ID of the targeted peer here. The targeted peer is used to establish the LDP session with the non-directly connected neighbor.
Targeted Hello Interval	Enter the interval to the hello message for sessions with extended peers here. The range is from 5 to 65535 seconds. Select the Default option to use the default value.
Targeted Hello Hold Time	Enter the hold-time of the hello messages for sessions with extended peers here. The range is from 15 to 65535 seconds. Select the Default option to use the default value.
Targeted Hello Source Address Type	Select the target hello source address type here. Options to choose from are: <ul style="list-style-type: none"> • Interface - Specifies that the IP address of each interface is used as the hello-source address. • Router ID - Specifies that the router ID (LSR ID) is used as the hello-source address. • IP Address - Specifies to enter the IP address that will be used as the hello-source address.
Targeted Hello Source Address	After selecting IP Address as the type, enter the IP address that will be used as the hello-source address here.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

MPLS LDP Neighbor Information

This window is used to view and clear the MPLS LDP neighbor information.

To view the following window, click **MPLS > MPLS LDP Neighbor Information**, as shown below:

Figure 11-6 MPLS LDP Neighbor Information Window

The fields that can be configured are described below:

Parameter	Description
Peer	Enter the IP address which is used as the peer LSR ID here.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Clear by Peer** button to clear the information related to the peer entered.

Click the **Clear All** button to clear all the MPLS LDP neighbor information.

MPLS Global Settings

This window is used to display and configure the global MPLS settings.

To view the following window, click **MPLS > MPLS Global Settings**, as shown below:

Figure 11-7 MPLS Global Settings Window

The fields that can be configured for **MPLS Global Settings** are described below:

Parameter	Description
MPLS Global State	Select to globally enable or disable the MPLS feature here.
LSP Trap State	Select to enable or disable the MPLS LSP trap feature here.

Click the **Apply** button to accept the changes made.

The fields that can be configured for **MPLS Interface Settings** are described below:

Parameter	Description
Interface VID	Enter the interface VLAN ID that will be used here. The range is from 1 to 4094.
MPLS State	Select to enable or disable the MPLS feature for the specified interface here.

Click the **Apply** button to accept the changes made.

Click the **Find** button to locate a specific entry based on the information entered.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

MPLS LDP Interface Settings

This window is used to display and configure the MPLS LDP interface settings.

To view the following window, click **MPLS > MPLS LDP Interface Settings**, as shown below:

MPLS LDP Interface Settings

MPLS LDP Interface Settings

Interface VID (1-4094)

LDP State

Discovery Accept

Distribution Mode

Discovery Hello Interval (1-65535) sec Default

Discovery Hello Hold Time (5-65535) sec Default

Interface VID (1-4094)

Total Entries: 1

Interface	Admin State	Oper State	Targeted Hello Accept	Hello Interval (sec)	Hello Hold Time (sec)	Distribution Method
vlan1	Disabled	Disabled	Acceptable	5	15	DU

1/1

Figure 11-8 MPLS LDP Interface Settings Window

The fields that can be configured are described below:

Parameter	Description
Interface VID	Enter the interface VLAN ID used here. The range is from 1 to 4094.
LDP State	Select to enable or disable the LDP feature on the specified interface here.
Discovery Accept	Select to enable or disable the discovery accept feature here. If targeted hello message acceptance is disabled in the interface, and if the received targeted hello is not coming from the local configured targeted peer, the message will be ignored. If targeted hello message acceptance is enabled in the interface, LSR will honor the received targeted hello messages sent by all neighbors.
Distribution Mode	Select the distribution mode here. Options to choose from are: <ul style="list-style-type: none"> • DU - Specifies the downstream unsolicited distribution mode. • DoD - Specifies the downstream on-demand distribution mode.
Discovery Hello Interval	Enter the discovery hello interval value here. The range is from 1 to 65535 seconds. Select the Default option to use the default value.

Parameter	Description
Discovery Hello Hold Time	Enter the discovery hello hold-time value here. The range is from 5 to 65535 seconds. Select the Default option to use the default value.

Click the **Apply** button to accept the changes made.

Click the **Find** button to locate a specific entry based on the information entered.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

MPLS LDP Session Information

This window is used to find and display the MPLS LDP session information.

To view the following window, click **MPLS > MPLS LDP Session Information**, as shown below:

Peer	Status	Role	Keep-Alive (sec)	Distribution Method	Show Detail	Show Statistic
1.2.3.4:0	OPERATIONAL	Active	40	DU	Show Detail	Show Statistic
3.4.5.6:0	OPERATIONAL	Passive	40	DU	Show Detail	Show Statistic

Figure 11-9 MPLS LDP Session Information Window

The fields that can be configured are described below:

Parameter	Description
Peer	Enter the IP address which is used as the peer LSR ID here.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show Detail** button to view more detailed information for the specified entry.

Click the **Show Statistics** button to view statistics information for the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Show Detail** button, the following page will appear.

The screenshot shows a window titled "MPLS LDP Session Detail". It contains a list of session parameters and their values. A "Back" button is located in the bottom right corner.

Parameter	Value
Peer	1.2.3.4:0
Status	OPERATIONAL
Role	Active
Keep-Alive (sec)	40
Remain Time (sec)	28
Create Time	2000-6-9 19:33:41
Distribution Method	DU
Loop Detection	Enabled
Max PDU Length	1500
Graceful Restart	Disabled
Reconnection Time (sec)	0
Recovery Time (sec)	0
Address List	101.1.1.1, 192.168.102.1, 152.1.1.1, 1.2.3.4, 60.1.1.4, 103.1.1.1

Figure 11-10 MPLS LDP Session Information (Show Detail) Window

Click the **Back** button to return to the previous window.

After clicking the **Show Statistics** button, the following page will appear.

The screenshot shows a window titled "MPLS LDP Session Statistics". It contains a table with two columns: "TX" and "RX". There are also "Back" and "Refresh" buttons in the top right corner.

	TX	RX
Notification Message	1	2
Initialization Message	1	1
Keep-Alive Message	119	119
Address Message	1	2
Address Withdraw Message	0	1
Label Mapping Message	30	40
Label Request Message	3	6
Label Withdraw Message	4	5
Label Release Message	25	17
Label Abort Message	0	1

Figure 11-11 MPLS LDP Session Information (Show Statistics) Window

Click the **Back** button to return to the previous window.

MPLS LDP Statistic

This window is used to display MPLS LDP statistics.

To view the following window, click **MPLS > MPLS LDP Statistic**, as shown below:

MPLS LDP Statistic	
MPLS LDP Statistic	
SessionAttempts	0
SessionRejectedNoHelloErrors	0
SessionRejectedAdErrors	0
SessionRejectedMaxPduErrors	0
SessionRejectedLRErrors	0
BadLdpIdentifierErrors	0
BadPduLengthErrors	0
BadMessageLengthErrors	0
BadTlvLengthErrors	0
MalformedTlvValueErrors	0
KeepAliveTimerExpErrors	0
ShutdownReceivedNotifications	0
ShutdownSentNotifications	0

Figure 11-12 MPLS LDP Statistic Window

MPLS LDP Binding Table

This window is used to display the MPLS LDP binding table.

To view the following window, click **MPLS > MPLS LDP Binding Table**, as shown below:

MPLS LDP Binding Table					
MPLS LDP Binding Table					
Total Entries: 0					
FEC	State	In Label	Upstream	Out Label	Downstream

Figure 11-13 MPLS LDP Binding Table Window

MPLS LDP Discovery Information

This window is used to display MPLS LDP discovery information.

To view the following window, click **MPLS > MPLS LDP Discovery Information**, as shown below:

MPLS LDP Discovery Information	
MPLS LDP Discovery Information	
Local LDP Identifier	10.90.90.90:0
Interfaces	Show Detail
Targeted Hellos	Show Detail

Figure 11-14 MPLS LDP Discovery Information Window

Click the [Show Detail](#) link to view more detailed information related to the topic.

After clicking the [Show Detail](#) link next to **Interfaces**, the following page will appear.

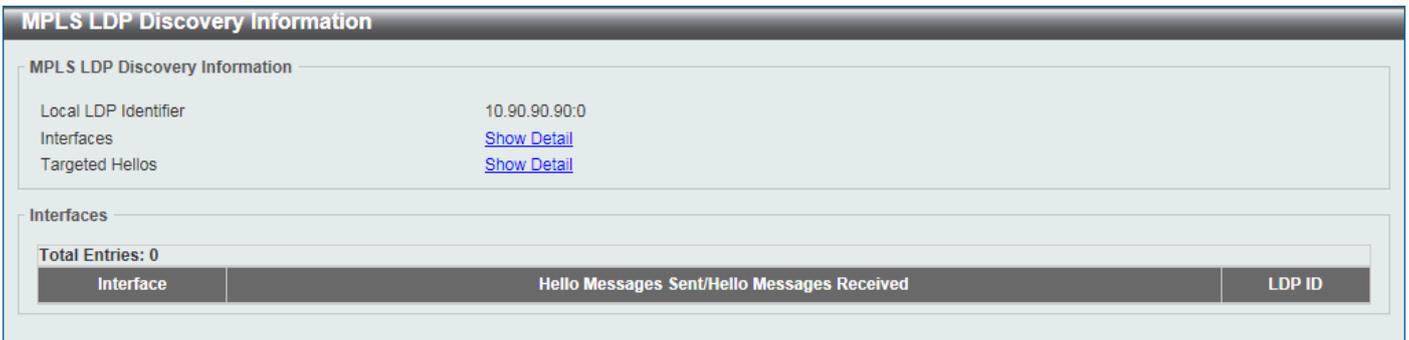


Figure 11-15 MPLS LDP Discovery Information (Show Detail) Window

After clicking the [Show Detail](#) link next to **Targeted Hellos**, the following page will appear.



Figure 11-16 MPLS LDP Discovery Information (Show Detail) Window

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

MPLS QoS Settings

This window is used to display and configure the MPLS QoS settings.

To view the following window, click **MPLS > MPLS QoS Settings**, as shown below:

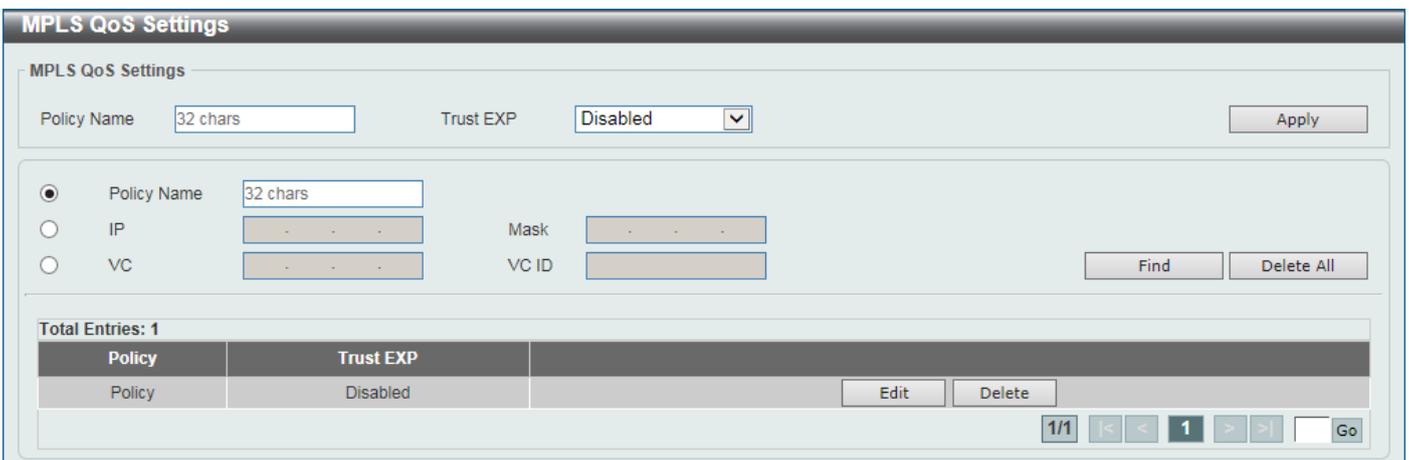


Figure 11-17 MPLS QoS Settings Window

The fields that can be configured are described below:

Parameter	Description
Policy Name	Enter the MPLS QoS policy name here. This name can be up to 32 characters long. The MPLS QoS policy can be applied to MPLS FECs.
Trust EXP	Select to enable or disable the trust EXP feature here. If the EXP is trusted, the matched packets are scheduled according to the EXP to the priority mapping of the MPLS QoS policy. Otherwise, the packets are scheduled according to the 802.1p priority.
IP	Select and enter the FEC IP address here associated with the QoS policy.
Mask	Select and enter the FEC subnet mask here associated with the QoS policy.
VC	Select and enter the FEC VC address here associated with the QoS policy.
VC ID	Select and enter the FEC VC ID here associated with the QoS policy.

Click the **Apply** button to accept the changes made.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Delete All** button to delete all the entries associated with the information selected/entered.

Click the **Edit** button to configure more detailed settings related to the specific entry.

Click the **Delete** button to remove the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Edit** button, the following page will appear.

Figure 11-18 MPLS QoS Settings (Edit) Window

Click the **Add** button to add a new entry.

Click the **Delete** button to remove the specific entry.

Click the **Apply** button to accept the changes made.

Click the **Back** button to return to the previous window.

After clicking the **Add** button, the following page will appear.

MPLS QoS Detail Settings

Policy: Policy

Inbound EXP to CoS Settings | Outbound CoS to EXP Settings | Binding FECs Settings

Inbound EXP to CoS

EXP	CoS	
0	2	<input type="checkbox"/> Default
1	0	<input type="checkbox"/> Default
2	1	<input type="checkbox"/> Default
3	3	<input type="checkbox"/> Default
4	4	<input type="checkbox"/> Default
5	5	<input type="checkbox"/> Default
6	6	<input type="checkbox"/> Default
7	7	<input type="checkbox"/> Default

Add Delete Apply

Back

Figure 11-19 MPLS QoS Settings (Edit, Add) Window

The fields that can be configured are described below:

Parameter	Description
CoS	Select the list of CoS values (on the right) to be mapped to EXP values (on the left) here. This feature is used to configure the Class of Service (CoS) to the Experimental bits (EXP) mapping of the policy. The range is from 0 to 7. Select the Default option to use the default value.

Click the **Apply** button to accept the changes made.

Click the **Back** button to return to the previous window.

After clicking the **Outbound CoS to EXP Settings** tab, the following page will appear.

MPLS QoS Detail Settings

Policy: Policy

Inbound EXP to CoS Settings | **Outbound CoS to EXP Settings** | Binding FECs Settings

Outbound CoS to EXP

CoS	EXP
-----	-----

Add Delete Apply

Back

Figure 11-20 MPLS QoS Settings (Edit, Outbound CoS to EXP Settings) Window

Click the **Add** button to add a new entry.

Click the **Delete** button to remove the specific entry.

Click the **Apply** button to accept the changes made.

Click the **Back** button to return to the previous window.

After clicking the **Add** button, the following page will appear.

The screenshot shows the 'MPLS QoS Detail Settings' window with the 'Outbound CoS to EXP Settings' tab selected. The table below shows the configuration for CoS values 0 through 7. Each CoS value is mapped to an EXP value (all set to 0) and a 'Default' checkbox (all unchecked).

CoS	EXP	Default
0	0	<input type="checkbox"/>
1	0	<input type="checkbox"/>
2	0	<input type="checkbox"/>
3	0	<input type="checkbox"/>
4	0	<input type="checkbox"/>
5	0	<input type="checkbox"/>
6	0	<input type="checkbox"/>
7	0	<input type="checkbox"/>

Figure 11-21 MPLS QoS Settings (Edit, Outbound CoS to EXP Settings, Add) Window

The fields that can be configured are described below:

Parameter	Description
EXP	Select the EXPs (on the right) to be mapped to CoS values (on the left) here. This feature is used to configure the class EXP to CoS mapping of the policy. The range is from 0 to 7. Select the Default option to use the default value.

Click the **Apply** button to accept the changes made.

Click the **Back** button to return to the previous window.

After clicking the **Binding FECs Settings** tab, the following page will appear.

The screenshot shows the 'MPLS QoS Detail Settings' window with the 'Binding FECs Settings' tab selected. The configuration fields are as follows:

- IP:** [Input field]
- Mask:** [Input field]
- VC:** [Input field]
- VC ID:** [Input field]

The table below shows the binding FECs configuration:

Binding FECs
VC 1/10.1.1.1

Figure 11-22 MPLS QoS Settings (Edit, Binding FECs Settings) Window

The fields that can be configured are described below:

Parameter	Description
IP	Enter the FEC IP address here. Use this feature to apply an MPLS QoS policy to FECs. The QoS policy will be applied to all MPLS packets of the FEC. A FEC can only be bound to at most one policy.
Mask	Enter the FEC subnet mask here.

Parameter	Description
VC	Enter the FEC VC address here.
VC ID	Enter the FEC VC ID here.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove an entry based on the information selected/entered.

Click the **Delete All** button to remove all the entries associated with this feature.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

Click the **Back** button to return to the previous window.

Ping MPLS

This window is used to check the connectivity of the LSP for the specified FEC. If there is no LSP for the specified FEC, the “Destination unreachable” message will be displayed. Otherwise, MPLS echo request messages will be sent out along with the LSP of the specified FEC. If the egress LSR received the request message, it will reply the request message sender with an MPLS echo reply message. If the sender cannot receive replies before the timeout, the “Request timed out” message will be displayed.

To view the following window, click **MPLS > Ping MPLS**, as shown below:

Figure 11-23 Ping MPLS Window

The fields that can be configured are described below:

Parameter	Description
IPv4 Address	Select and enter the FEC IPv4 address here whose LSP connectivity will be checked.
Mask	Select and enter the FEC subnet mask here.
VC	Select and enter the FEC VC IP address here.
VC ID	Select and enter the FEC VC ID here.
Ping Times	Enter the ping time amount here. This is the amount of ping packets that will be sent out. The range is from 1 and 255.
Timeout	Enter the ping timeout value here. The range is from 1 to 99 seconds.

Click the **Start** button to initiate the MPLS ping.

After clicking the **Start** button, the following page will appear.



Figure 11-24 Ping MPLS (Start) Window

Click the **Stop** button to stop the MPLS ping.

Click the **Back** button to return to the previous window.

Traceroute MPLS IPv4

This window is used for hop-by-hop fault localization as well as path tracing the LSP of the specified FEC. If there is no LSP for the specified FEC, the "Destination unreachable" message will be displayed. Otherwise, MPLS echo request messages will be sent out to along the LSP of the specified FEC. The TTL in the outmost label of the MPLS echo requests is set successively to 1, 2, 3, and so on. It forces the echo request expired at each successive LSR along the LSP. The LSR returns an MPLS echo reply. If the sender cannot receive a reply before the timeout, the trace route will stop.

To view the following window, click **MPLS > Traceroute MPLS IPv4**, as shown below:

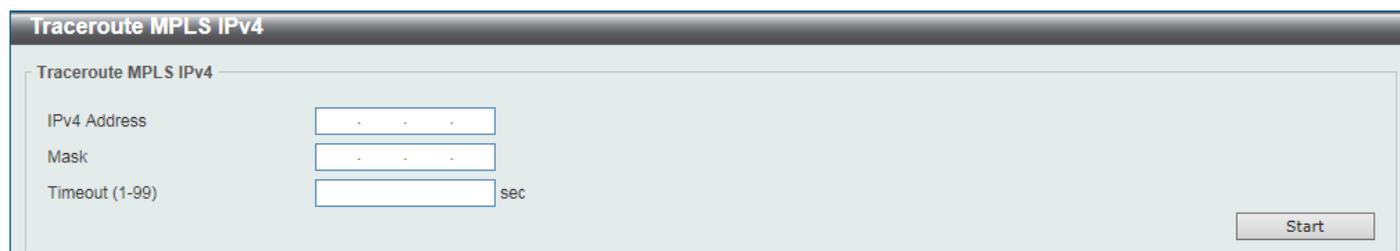


Figure 11-25 Traceroute MPLS IPv4 Window

The fields that can be configured are described below:

Parameter	Description
IPv4 Address	Enter the FEC IPv4 address here whose LSP connectivity will be checked.
Mask	Enter the FEC subnet mask here.
Timeout	Enter the trace-route timeout value here. The range is from 1 to 99 seconds.

Click the **Start** button to initiate the MPLS route trace.

After clicking the **Start** button, the following page will appear.



Figure 11-26 Traceroute MPLS IPv4 (Start) Window

Click the **Stop** button to stop the MPLS route trace.

Click the **Back** button to return to the previous window.

12. MPLS L2VPN

[VPWS Settings](#)
[L2VC Interface Description](#)
[VPLS Settings](#)
[VPLS MAC Address Table](#)

VPWS Settings

This window is used to display and configure the Virtual Private Wire Service (VPWS) settings.

To view the following window, click **MPLS L2VPN > VPWS Settings**, as shown below:

Figure 12-1 VPWS Settings Window

The fields that can be configured for **VPWS Settings** are described below:

Parameter	Description
Unit	Select the Switch unit ID that will be used here.
Port	Select the port that will be used here.
SVID	Select and enter the encapsulated VLAN ID here. The range is from 1 to 4094.
Peer	Enter the peer LSR ID here that is used to identify the other end Provider Edge (PE).
VC ID	Enter the Pseudo-Wire (PW) service instance ID here. It is used to uniquely identify the VPWS and it must be unique at both PEs. The range is from 1 to 4294967295.
Type	Select the type here. Options to choose from are None , Manual , Raw , Tagged , Manual Raw , and Manual Tagged . For the raw mode, S-tags will not be sent over the PW. For the tagged mode, S-tags will be sent over the PW. By default, the PW type is in the Ethernet-tag mode.
MTU	Enter the local CE-PE link's MTU value here that will be advertised to the remote peer. If the MTU is configured as 0, the LDP will not advertise the local MTU. The MTU must be same at both the local and remote devices. The range is from 0 to 65535 bytes. By default, this value is 1500 bytes.

Click the **Apply** button to accept the changes made.

The fields that can be configured for **Find VPWS** are described below:

Parameter	Description
VC ID	Enter the Pseudo-Wire (PW) service instance ID here. The range is from 1 to 4294967295.

Click the **Apply** button to accept the changes made.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show All** button to display all the available entries.

Click the **Edit** button to configure more detailed settings associated with the specific entry.

Click the **Show Detail** button to view more detailed information about the specific entry.

Click the **Delete** button to remove the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Edit** button, the following page will appear.

Figure 12-2 VPWS Settings (Edit) Window

Click the **Back** button to return to the previous window.

The fields that can be configured for **PW Settings** are described below:

Parameter	Description
PW Name	Select and enter the Pseudo-Wire (PW) name here. This name can be up to 64 characters long. Select the None option to use the default setting.

Click the **Apply** button to accept the changes made.

The fields that can be configured for **PW Redundancy Settings** are described below:

Parameter	Description
Peer	Enter the peer LSR ID here that is used to identify the other end Provider Edge (PE).

Parameter	Description
VC ID	Enter the PW service instance ID here. The range is from 1 to 4294967295.
Delay	Enter the delay value here. This is to switch back to the primary PW with the specified delay time after the primary PW comes back. The range is from 0 to 180 seconds. Selecting the Never option specifies not to switch back to the primary PW even if it comes back. This is the default option.

Click the **Apply** button to accept the changes made.

The fields that can be configured for **Dot1q Tunneling Ethertype Settings** are described below:

Parameter	Description
Dot1q Tunneling Ethertype	Enter the outer TPID for the service VLAN tag here. This value is in the hexadecimal from 0x1 to 0xFFFF. Select the None option to disable this feature.

Click the **Apply** button to accept the changes made.

The fields that can be configured for **VLAN Mode Settings** are described below:

Parameter	Description
VLAN Mode	Select the VLAN mode of the PW here. Options to choose from are: <ul style="list-style-type: none"> • No Change - Specifies not to change the VLAN tag on the ingress packet. This can only be applied on Ethernet VLAN-based ACs. • Add VLAN - Specifies to add the configured VLAN tag to the ingress packet. The default action for port-based ACs is to add the VLAN ID 0. This can be applied on both Ethernet-based and Ethernet VLAN-based ACs. • Change VLAN - Specifies to change the VLAN tag of the ingress packet to the configured VLAN ID. This can only be applied on Ethernet VLAN-based ACs. Select the None option to use the default setting.

Click the **Apply** button to accept the changes made.

The fields that can be configured for **Egress VLAN Mode Settings** are described below:

Parameter	Description
Egress VLAN Mode	Select the egress VLAN mode of the PW here. Options to choose from are: <ul style="list-style-type: none"> • Strip - Specifies that the outer-tag of the packet will be stripped before egress on the AC. • Change VLAN - Specifies that the outer-tag of the packet will be changed to the VLAN ID of the AC before egress on the AC. This can only be applied on Ethernet VLAN-based ACs. Select the None option to use the default setting.

Click the **Apply** button to accept the changes made.

After clicking the **Show Detail** button, the following page will appear.

VPWS Detail Information

VPWS Detail Information Table

VC ID	1
Peer IP Address	10.90.90.15
Operate Status	Down
Name	VC1/10.90.90.15
Description	
Local AC	Eth1/0/1
Status	Down
VLAN Mode	Default
802.1q Tunneling Ethernet Type	0x8100
Egress VLAN Mode	Strip VLAN
Remote AC Status	N/A
MPLS VC Labels	Local N/A, Remote N/A
Outbound Tunnel label	N/A
MTU	Local 1500, Remote 0
Group ID	Local 0, Remote 0
Signaling Protocol	LDP
Local VCCV Capabilities:	
CC:	Type 2, Type 3
CV:	LSP ping
Remote VCCV Capabilities:	
CC:	N/A
CV:	N/A
VC Statistics:	
RX Bytes: 0, RX Packets: 0	
TX Bytes: 0, TX Packets: 0	

Figure 12-3 VPWS Settings (Show Detail) Window

Click the **Back** button to return to the previous window.

L2VC Interface Description

This window is used to display and configure the Layer 2 Virtual Circuit (L2VC) interface description.

To view the following window, click **MPLS L2VPN > L2VC Interface Description**, as shown below:

L2VC Interface Description

Create L2VC Interface Description

L2VC Interface Name	Description	
<input type="text" value="64 chars"/>	<input type="text" value="64 chars"/>	<input type="button" value="Apply"/>

Find L2VC Interface Description

L2VC Interface Name			
<input type="text" value="64 chars"/>	<input type="button" value="Find"/>	<input type="button" value="Show All"/>	

Total Entries: 1

Interface	Status	Administrative	Description	
L2VC VC1/10.90.90.15	down	enabled		<input type="button" value="Delete Description"/>

1/1

Figure 12-4 L2VC Interface Description Window

The fields that can be configured for **Create L2VC Interface Description** are described below:

Parameter	Description
L2VC Interface Name	Enter the L2VC interface name here. This name can be up to 64 characters long.
Description	Enter the L2VC interface description here. This name can be up to 64 characters long.

Click the **Apply** button to accept the changes made.

The fields that can be configured for **Find L2VC Interface Description** are described below:

Parameter	Description
L2VC Interface Name	Enter the L2VC interface name here. This name can be up to 64 characters long.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show All** button to display all the available entries.

Click the **Delete Description** button to delete the description for the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

VPLS Settings

This window is used to display and configure the Virtual Private LAN Service (VPLS) settings.

To view the following window, click **MPLS L2VPN > VPLS Settings**, as shown below:

Figure 12-5 VPLS Settings Window

The fields that can be configured for **VPLS Settings** are described below:

Parameter	Description
VPLS Name	Enter the VPLS instance name here. This name can be up to 32 characters long.
VPLS Type	Select the VPLS type here. Options to choose from are: <ul style="list-style-type: none"> • Manual - Specifies to manually configure neighbors and use LDP for signaling. • Autodiscovery - Specifies to use BGP for auto-discovery and signaling.

Click the **Apply** button to accept the changes made.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show All** button to display all the available entries.

The fields that can be configured for **VPLS AC Settings** are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the range of ports that will be used for this configuration here.
SVID	Select and enter the SVID here. The range is from 1 to 4094.
VPLS Name	Enter the VPLS instance name here. This name can be up to 32 characters long.

Click the **Apply** button to accept the changes made.

Click the **Edit** button to configure more detailed settings related to the specific entry.

Click the **Show Detail** button to view more detailed information about the specific entry.

Click the **Delete** button to remove the specific entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

After clicking the **Edit** button, the following page will appear.

VPLS Settings

VPLS Settings

VPLS Name: VPLS Back

VPLS ID (1-4294967295):

PW Type:

MTU (0-65535):

MAC Limit (0-1000000): Apply

Neighbor Settings

Remote Peer: VC ID (1-4294967295): Type: no-split-horizon Apply

Dot1q Tunneling Ethertype Settings

Dot1q Tunneling Ethertype (0x1-0xFFFF)

None Apply

VLAN Mode Settings

VLAN Mode

None Apply

Egress VLAN Mode Settings

Egress VLAN Mode

None Apply

Figure 12-6 VPLS Settings (Edit) Window

Click the **Back** button to return to the previous window.

The fields that can be configured for **VPLS Settings** are described below:

Parameter	Description
VPLS ID	Select and enter the VPLS instance ID here. The range is from 1 to 4294967295.
PW Type	Select the PW type here. Options to choose from are: <ul style="list-style-type: none"> • Raw - Specifies that the service type is in the Ethernet-raw mode. It means that the encapsulation of all PWs in the VPLS is in the Ethernet-raw mode. • Tagged - Specifies that the service type is in the Ethernet-tagged mode. It means that the encapsulation of all PWs in the VPLS is in the Ethernet-tagged mode.
MTU	Select and enter the local AC link's MTU value of a VPLS that will be advertised to remote peers in this VPLS here. The MTU value must be same at both the local and remote sites to establish the PW. If the MTU is specified as 0, then local the MTU will not be advertised to remote peers in the VPLS. The range is from 0 to 65535 bytes. By default, this value is 1500 bytes.
MAC Limit	Select and enter the MAC limit value here. This is used to configure the MAC address learning entry number limitation in the VPLS. After a non-zero MAC address learning limitation was configure here, and when the number of MAC addresses learned exceeds this limit, the packets with unlearned source MAC addresses in the VPLS will be dropped. The range is from 0 to 1000000.

Click the **Apply** button to accept the changes made.

The fields that can be configured for **Neighbor Settings** are described below:

Parameter	Description
Remote Peer	Enter the LSR ID that is used to identify the PE to which the peer belongs to here.
VC ID	Enter the PW VC ID here. The range is from 1 to 4294967295. It is used with the IP address to uniquely identify a peer for a VPLS. If not specified, the PW ID is set by the VPN ID of this VPLS.
Type	Select the type here. Options to choose from are Backup and Standalone . Selecting the Backup option will create a backup peer for PW redundancy of an H-VPLS.
No-Split-Horizon	Selecting this option specifies that a peer is used as the spoke PW. The packets from other PWs in the VPLS can be forwarded to this PW and the packets from this PW can be forwarded to other PWs in the VPLS. If this option is not specified, the peer is used as a network PW. The packets from other network PWs in a VPLS must not be forwarded to this PW and the packets from this PW must not be forwarded to other network PWs in the VPLS.

Click the **Apply** button to accept the changes made.

The fields that can be configured for **Dot1q Tunneling Ethertype Settings** are described below:

Parameter	Description
Dot1q Tunneling Ethertype	Enter the outer TPID for the service VLAN tag here. This value is in the hexadecimal form and the range is from 0x1 to 0xFFFF.

Click the **Apply** button to accept the changes made.

The fields that can be configured for **VLAN Mode Settings** are described below:

Parameter	Description
VLAN Mode	<p>Select the VLAN mode of the VPLS here. The VLAN mode will affect the VLAN handling of the encapsulated packet for all PWs that belong to this VPLS. Options to choose from are:</p> <ul style="list-style-type: none"> • No Change - Specifies not to change the VLAN tag on the ingress packet. This can only be applied on Ethernet VLAN-based ACs. • Add VLAN - Specifies to add the configured VLAN tag to the ingress packet. The default action for port-based ACs is to add the VLAN ID of 0. This can be applied on both Ethernet-based and Ethernet VLAN-based ACs. • Change VLAN - Specifies to change the VLAN tag of the ingress packet to the configured VLAN ID. This can only be applied on Ethernet VLAN-based ACs. <p>Select the None option to use the default setting.</p>

Click the **Apply** button to accept the changes made.

The fields that can be configured for **Egress VLAN Mode Settings** are described below:

Parameter	Description
Egress VLAN Mode	<p>Select the egress VLAN mode of the VPLS here. The egress VLAN mode will affect the outer VLAN tag handling before the decapsulated packet egress on ACs belonging to this VPLS. Options to choose from are:</p> <ul style="list-style-type: none"> • Strip - Specifies that the outer-tag of the packet will be stripped before egress on the AC. • Change VLAN - Specifies that the outer-tag of the packet will be changed to the VLAN ID of the AC before egress on the AC. This can only be applied on Ethernet VLAN-based ACs. <p>Select the None option to use the default setting.</p>

Click the **Apply** button to accept the changes made.

After clicking the **Show Detail** button, the following page will appear.

VPLS Detail Information Table	
VPLS Name	VPLS
Operate Status	Down
Type	Manual
VPLS ID	0
Service Type	Tagged
MTU	1500
MAC Limit	0
VLAN mode	Default
802.1q tunneling Ethernet Type	0x8100
Egress VLAN Mode	Default
Peers Via Pseudowires	Show Detail
Local ACs	Show Detail

Figure 12-7 VPLS Settings (Show Detail) Window

Click the [Show Detail](#) link to view more detailed information about the topic.

Click the **Back** button to return to the previous window.

After clicking the [Show Detail](#) link for **Peers Via Pseudowires**, for example, the following page will appear.

Figure 12-8 VPLS Settings (Show Detail, Show Detail) Window

Click the **Back** button to return to the previous window.

VPLS MAC Address Table

This window is used to clear and display VPLS MAC address information.

To view the following window, click **MPLS L2VPN > VPLS MAC Address Table**, as shown below:

Figure 12-9 VPLS MAC Address Table Window

The fields that can be configured are described below:

Parameter	Description
VPLS Name	Enter the VPLS instance name here. This name can be up to 32 characters long.
IP Address	Enter the LSR ID that is used to identify the PE to which the peer belongs to here.
VC ID	Enter the PW VC ID here. The range is from 1 to 4294967295.
Interface	Select the Switch unit ID that will be used here.

Parameter	Description
	Select the port that will be used here.
VLAN	Enter the service VLAN ID here. The range is from 1 to 4094.
MAC Address	Enter the MAC address that will be used here.
Type	Select the type of information to be specified in the search query here. Options to choose from are None , Peer , and AC .

Click the **Clear By PW** button to clear the information associated with the PW specified.

Click the **Clear By AC** button to clear the information associated with the AC specified.

Click the **Clear By MAC** button to clear the information associated with the MAC address specified.

Click the **Clear By VPLS** button to clear the information associated with the VPLS specified.

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Clear All** button to clear all the information displayed in the table.

Click the **Show All** button to display all the available entries.

13. Monitoring

[VLAN Counter](#)
[Utilization](#)
[Statistics](#)
[Mirror Settings](#)
[sFlow](#)
[Device Environment](#)
[External Alarm Settings](#)

VLAN Counter

This window is used to display and configure the VLAN counter settings. This is used to create a control entry for traffic statistics on specified Layer 2 VLAN interface(s).

To view the following window, click **Monitoring > VLAN Counter**, as shown below:

Figure 13-1 VLAN Counter Window

The fields that can be configured for **VLAN Counter Settings** are described below:

Parameter	Description
Interface VLAN	Enter the VLAN ID that will be used here. The range is from 1 to 4094.
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the range of ports that will be used for this configuration here. Select the All option to use all the ports in this configuration.
Frame Type	Select the frame type here. Options to choose from are: <ul style="list-style-type: none"> • Broadcast - Specifies to count only broadcast frames. • Multicast - Specifies to count only multicast frames. • Unicast - Specifies to count only unicast frames. • Any - Specifies to count all frames regardless of the frame type. • All - Specifies to count the four frame types mentioned above.
Traffic Direction	Select the traffic direction here. Options to choose from are: <ul style="list-style-type: none"> • RX - Specifies to count ingress traffic. • TX - Specifies to count egress traffic. • Both - Specifies to count ingress and egress traffic.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to delete the specified entry (or entries) based on the information entered/selected.

The fields that can be configured for **VLAN Counter Table** are described below:

Parameter	Description
Interface VLAN	Enter the VLAN ID that will be used in the display here. The range is from 1 to 4094. Select the All option to display counter information associated with all VLAN interfaces.
Traffic Direction	Select the traffic direction to display here. Options to choose from are: <ul style="list-style-type: none"> • RX - Specifies to display ingress traffic count settings. • TX - Specifies to display egress traffic count settings. • Both - Specifies to display ingress and egress traffic count settings.

Click the **Find** button to display entries in the table based on the information entered/selected.


Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

Utilization

Port Utilization

This window is used to view the port utilization table.

To view the following window, click **Monitoring > Utilization > Port Utilization**, as shown below:

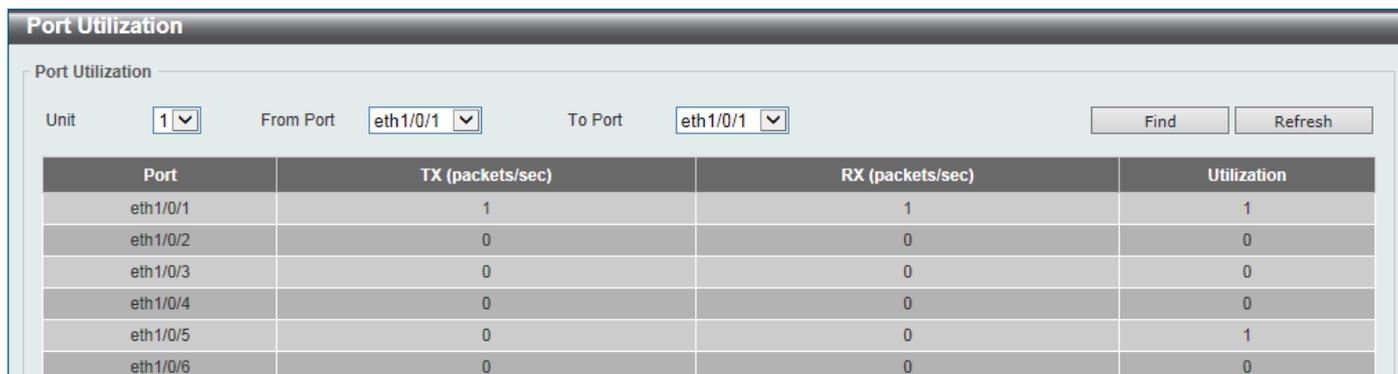

The screenshot shows the 'Port Utilization' window with the following configuration and data:

Unit: 1 | From Port: eth1/0/1 | To Port: eth1/0/1 | Find | Refresh

Port	TX (packets/sec)	RX (packets/sec)	Utilization
eth1/0/1	1	1	1
eth1/0/2	0	0	0
eth1/0/3	0	0	0
eth1/0/4	0	0	0
eth1/0/5	0	0	1
eth1/0/6	0	0	0

Figure 13-2 Port Utilization Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used here.
From Port - To Port	Select the range of ports that will be used here.

Click the **Find** button to display entries in the table based on the information entered/selected.

Click the **Refresh** button to refresh the information displayed in the table.

History Utilization

This window is used to view the memory, CPU and port history utilization.

To view the following window, click **Monitoring > Utilization > History Utilization**, as shown below:

History Utilization

History Utilization

Type: Memory Unit: 1 Time Based: 15 Minutes Slot Index: All Find

Type	Start Time	End Time	Utilization
Memory	13 Jan 2021 15:26:51	13 Jan 2021 15:11:51	39%
Memory	13 Jan 2021 15:11:51	13 Jan 2021 14:56:51	39%
Memory	13 Jan 2021 14:56:51	13 Jan 2021 14:41:51	39%
Memory	13 Jan 2021 14:41:51	13 Jan 2021 14:26:51	39%
Memory	13 Jan 2021 14:26:51	13 Jan 2021 14:11:51	39%

Figure 13-3 History Utilization (Memory) Window

After selecting **CPU** as the **Type**, the following window will appear:

History Utilization

History Utilization

Type: CPU Time Based: 15 Minutes Slot Index: All Find

Type	Start Time	End Time	Utilization
CPU	13 Jan 2021 15:27:20	13 Jan 2021 15:12:20	14%
CPU	13 Jan 2021 15:12:20	13 Jan 2021 14:57:20	14%
CPU	13 Jan 2021 14:57:20	13 Jan 2021 14:42:20	14%
CPU	13 Jan 2021 14:42:20	13 Jan 2021 14:27:20	15%
CPU	13 Jan 2021 14:27:20	13 Jan 2021 14:12:20	15%

Figure 13-4 History Utilization (CPU) Window

After selecting **Port** as the **Type**, the following window will appear:

History Utilization

History Utilization

Type: Port Unit: 1 From Port: eth1/0/1 To Port: eth1/0/1 Time Based: 15 Minutes Slot Index: All Find

Port	Start Time	End Time	Utilization
eth1/0/1	13 Jan 2021 15:27:40	13 Jan 2021 15:12:40	0%
eth1/0/1	13 Jan 2021 15:12:40	13 Jan 2021 14:57:40	0%
eth1/0/1	13 Jan 2021 14:57:40	13 Jan 2021 14:42:40	0%
eth1/0/1	13 Jan 2021 14:42:40	13 Jan 2021 14:27:40	0%
eth1/0/1	13 Jan 2021 14:27:40	13 Jan 2021 14:12:40	0%

Figure 13-5 History Utilization (Port) Window

The fields that can be configured are described below:

Parameter	Description
Type	Select the history utilization type to display here. Options to choose from are: <ul style="list-style-type: none"> • Memory - Specifies to display the historical memory utilization information. • CPU - Specifies to display the historical CPU utilization information. • Port - Specifies to display the historical port utilization information.
Unit	Select the Switch unit that will be used here.
From Port - To Port	Select the range of ports that will be used here.

Parameter	Description
Time Based	<p>Select the time-based statistical count value here. Options to choose from are:</p> <ul style="list-style-type: none"> • 15 Minutes - Specifies to display slots of 15-minute based information. • 1 Day - Specifies to display slots of daily based information. <p>For 15-minute based statistics, slot 1 represents the time from 15 minutes ago until now, slot 2 represents the time from 30 minutes ago until 15 minutes ago and so on. For 1-day based statistics, slot 1 represents the time from 24 hours ago until now and slot 2 represents the time from 48 hours ago until 24 hours ago.</p>
Slot Index	<p>Select the slot index here.</p> <ul style="list-style-type: none"> • After selecting to use 15 minute slots, the options to choose from are All, and 1 to 5. • After selecting to use 1 day slots, the options to choose from are All, and 1 to 2.


Click the **Find** button to display entries in the table based on the information selected.

Statistics

Port

This window is used to view the port statistics information.

To view the following window, click **Monitoring > Statistics > Port**, as shown below:

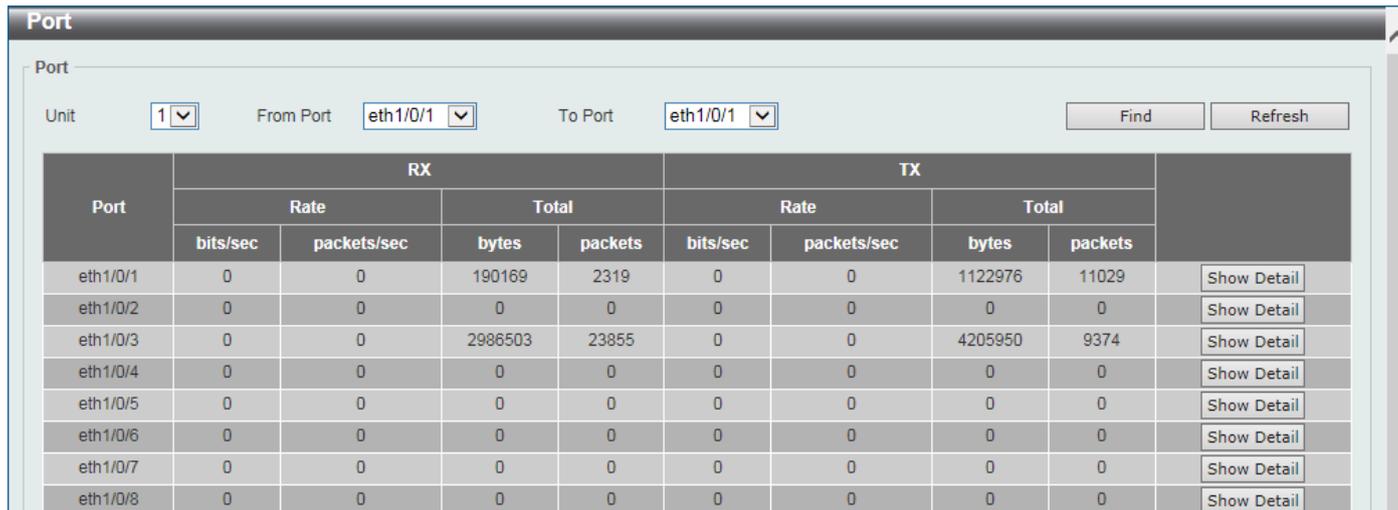

The screenshot shows the 'Port' window with the following configuration: Unit: 1, From Port: eth1/0/1, To Port: eth1/0/1. The table displays statistics for ports eth1/0/1 through eth1/0/8. Each row includes 'Show Detail' buttons.

Port	RX				TX				Show Detail
	Rate		Total		Rate		Total		
	bits/sec	packets/sec	bytes	packets	bits/sec	packets/sec	bytes	packets	
eth1/0/1	0	0	190169	2319	0	0	1122976	11029	Show Detail
eth1/0/2	0	0	0	0	0	0	0	0	Show Detail
eth1/0/3	0	0	2986503	23855	0	0	4205950	9374	Show Detail
eth1/0/4	0	0	0	0	0	0	0	0	Show Detail
eth1/0/5	0	0	0	0	0	0	0	0	Show Detail
eth1/0/6	0	0	0	0	0	0	0	0	Show Detail
eth1/0/7	0	0	0	0	0	0	0	0	Show Detail
eth1/0/8	0	0	0	0	0	0	0	0	Show Detail

Figure 13-6 Port Window

The fields that can be configured are described below:


Parameter	Description
Unit	Select the Switch unit that will be used in this display here.
From Port - To Port	Select the range of ports that will be used in this display here.

Click the **Find** button to display entries in the table based on the information selected.

Click the **Refresh** button to refresh the information displayed in the table.

Click the **Show Detail** button to view more detailed statistics information on the specified port.

After clicking the **Show Detail** button, the following window will appear:

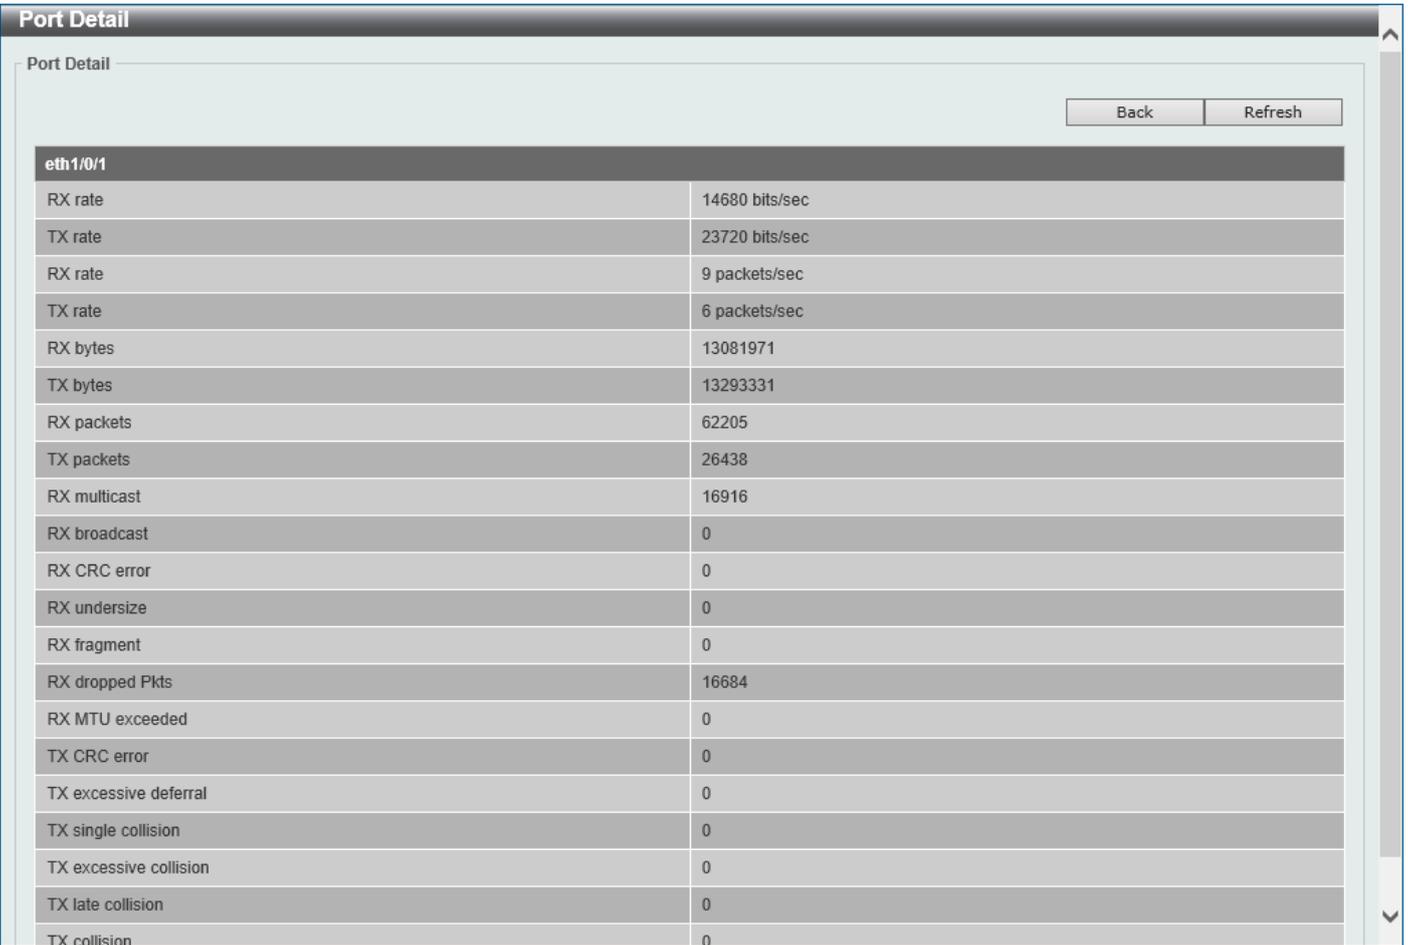

eth1/0/1	
RX rate	14680 bits/sec
TX rate	23720 bits/sec
RX rate	9 packets/sec
TX rate	6 packets/sec
RX bytes	13081971
TX bytes	13293331
RX packets	62205
TX packets	26438
RX multicast	16916
RX broadcast	0
RX CRC error	0
RX undersize	0
RX fragment	0
RX dropped Pkts	16684
RX MTU exceeded	0
TX CRC error	0
TX excessive deferral	0
TX single collision	0
TX excessive collision	0
TX late collision	0
TX collision	0

Figure 13-7 Port (Show Detail) Window

Click the **Back** button to return to the previous window.

Click the **Refresh** button to refresh the information displayed in the table.

CPU Port

This window is used to view the CPU statistics information.

To view the following window, click **Monitoring > Statistics > CPU Port**, as shown below:

Type	PPS	Total	Drop
802.1X	0	0	0
ARP	0	191	1
BGP	0	0	0
CFM	0	0	0
CTP	0	0	0
DHCP	0	0	0
DHCPv6	0	0	0
DNS	0	0	0
DVMRP	0	0	0
ERPS	0	0	0
GVRP	0	0	0
ICMP	0	8767	0
ICMPv6	0	0	0
IGMP	0	0	0
ISIS	0	0	0
LACP	0	0	0
LLDP	0	0	0
MLD	0	0	0
NDP	0	0	0
OAM	0	0	0
OSPFv2	0	0	0
OSPFv3	0	0	0
PIM-IPv4	0	0	0
PIM-IPv6	0	0	0
RCP	0	0	0
Reserved-IPv4-IPMC	0	0	0

Figure 13-8 CPU Port Window

The fields that can be configured are described below:

Parameter	Description
Type	Select the type of information to display here. Options to choose from are All , Layer 2 (L2), Layer 3 (L3), and Protocol .

Click the **Find** button to display entries in the table based on the information selected.

Click the **Refresh** button to refresh the information displayed in the table.

Click the **Clear All** button clear all the statistics information displayed in the table.

Interface Counters

This window is used to view the interface counter information.

To view the following window, click **Monitoring > Statistics > Interface Counters**, as shown below:

Port	InOctets	InUcastPkts	InMcastPkts	InBcastPkts	OutOctets	OutUcastPkts	OutMcastPkts	OutBcastPkts	Show Errors
eth1/0/1	190169	1151	207	961	1122976	755	4607	5667	Show Errors
eth1/0/2	0	0	0	0	0	0	0	0	Show Errors
eth1/0/3	3032288	10927	5991	7263	4278175	9217	127	175	Show Errors
eth1/0/4	0	0	0	0	0	0	0	0	Show Errors
eth1/0/5	0	0	0	0	0	0	0	0	Show Errors
eth1/0/6	0	0	0	0	0	0	0	0	Show Errors
eth1/0/7	0	0	0	0	0	0	0	0	Show Errors
eth1/0/8	0	0	0	0	0	0	0	0	Show Errors

Figure 13-9 Interface Counters (Port) Window

The fields that can be configured are described below:

Parameter	Description
Type	Select the type of information to display here. Options to choose from are Port and VLAN .
Unit	Select the Switch unit that will be used in this display here.
From Port - To Port	Select the range of ports that will be used in this display here.

Click the **Find** button to display entries in the table based on the information selected.

Click the **Refresh** button to refresh the information displayed in the table.

Click the **Show Errors** button to view more detailed error information on the specified port.

After clicking the **Show Errors** button, the following window will appear:

eth1/0/1 Counters Errors	
Align-Err	0
Fcs-Err	0
Rcv-Err	0
Undersize	0
Xmit-Err	0
OutDiscard	0
Single-Col	0
Multi-Col	0
Late-Col	0
Excess-Col	0
Runts	0
Symbol-Err	0
DeferredTx	0
IntMacTx	0

Figure 13-10 Interface Counters (Show Errors) Window

Click the **Back** button to return to the previous window.

Click the **Refresh** button to refresh the information displayed in the table.

After selecting **VLAN** as the **Type**, the following window will appear:

Figure 13-11 Interface Counters (VLAN) Window

The fields that can be configured are described below:

Parameter	Description
Type	Select the type of information to display here. Options to choose from are Port and VLAN .
Interface VLAN	Enter the VLAN ID that will be used in this display here.

Click the **Find** button to display entries in the table based on the information selected/entered.

Click the **Refresh** button to refresh the information displayed in the table.

Interface History Counters

This window is used to view the history counter information per interface.

To view the following window, click **Monitoring > Statistics > Interface History Counters**, as shown below:

Frame Size/Type	Frame Count
rxHCTotalPkts	348
txHCTotalPkts	1272
rxHCUnicastPkts	296
txHCUnicastPkts	253
rxHCMulticastPkts	6
txHCMulticastPkts	1012
rxHCBroadcastPkts	46
txHCBroadcastPkts	7
rxHCOctets	57096
txHCOctets	184353
rxHCPkt64Octets	211
rxHCPkt65to127Octets	52
rxHCPkt128to255Octets	36
rxHCPkt256to511Octets	5
rxHCPkt512to1023Octets	44
rxHCPkt1024to1518Octets	0
rxHCPkt1519to1522Octets	0
rxHCPkt1519to2047Octets	0
rxHCPkt2048to4095Octets	0
rxHCPkt4096to9216Octets	0
rxHCPkt9217to16383Octets	0
txHCPkt64Octets	932
txHCPkt65to127Octets	74
txHCPkt128to255Octets	80
txHCPkt256to511Octets	94

Figure 13-12 Interface History Counters (Port) Window

The fields that can be configured are described below:

Parameter	Description
Type	Select the type of information to display here.
Unit	Select the Switch unit that will be used in this display here.
Port	Select the port that will be used in this display here.
Time Based	<p>Select the time-based statistical count value here. Options to choose from are:</p> <ul style="list-style-type: none"> • 15 Minutes - Specifies to display slots of 15-minute based information. • 1 Day - Specifies to display slots of daily based information. <p>For 15-minute based statistics, slot 1 represents the time from 15 minutes ago until now, slot 2 represents the time from 30 minutes ago until 15 minutes ago and so on. For 1-day based statistics, slot 1 represents the time from 24 hours ago until now and slot 2 represents the time from 48 hours ago until 24 hours ago.</p>
Slot index	<p>Select the slot index here.</p> <ul style="list-style-type: none"> • After selecting to use 15 minute slots, the options to choose from are All, and 1 to 5. • After selecting to use 1 day slots, the options to choose from are All, and 1 to 2.

Click the **Find** button to display entries in the table based on the information selected/entered.

Counters

This window is used to view and clear counter information.

To view the following window, click **Monitoring > Statistics > Counters**, as shown below:

Port	linkChange	
eth1/0/1	2	Show Detail
eth1/0/2	0	Show Detail
eth1/0/3	1	Show Detail
eth1/0/4	0	Show Detail
eth1/0/5	0	Show Detail
eth1/0/6	0	Show Detail
eth1/0/7	0	Show Detail
eth1/0/8	0	Show Detail

Figure 13-13 Counters (Port) Window

The fields that can be configured are described below:

Parameter	Description
Type	Select the type of information to display here. Options to choose from are Port and VLAN .
Unit	Select the Switch unit that will be used in this display here.
From Port - To Port	Select the range of ports that will be used in this display here.

Click the **Find** button to display entries in the table based on the information selected.

Click the **Refresh** button to refresh the counter information displayed in the table.

Click the **Clear** button clear the counter information displayed in the table based on the information selected.

Click the **Clear All** button clear all the counter information displayed in the table.

Click the **Show Detail** button to view more detailed counter information on the specified port.

After clicking the **Show Detail** button, the following window will appear:

The screenshot shows a window titled "Port Counters Detail". At the top right, there are "Back" and "Refresh" buttons. Below the title bar, the text "Port Counters Detail" is displayed. The main content is a table with a dark header row labeled "eth1/0/1 Counters". The table lists various network statistics and their corresponding values.

eth1/0/1 Counters	
rxHCTotalPkts	2415
txHCTotalPkts	1633
rxHCUnicastPkts	1930
txHCUnicastPkts	1633
rxHCMulticastPkts	49
txHCMulticastPkts	0
rxHCBroadcastPkts	436
txHCBroadcastPkts	0
rxHCOctets	276199
txHCOctets	1517643
rxHCPkt64Octets	1975
rxHCPkt65to127Octets	101
rxHCPkt128to255Octets	51
rxHCPkt256to511Octets	265
rxHCPkt512to1023Octets	23
rxHCPkt1024to1518Octets	0
rxHCPkt1519to1522Octets	0
rxHCPkt1519to2047Octets	0
rxHCPkt2048to4095Octets	0
rxHCPkt4096to9216Octets	0
rxHCPkt9217to16383Octets	0
txHCPkt64Octets	38
txHCPkt65to127Octets	76

Figure 13-14 Counters (Show Detail) Window

Click the **Back** button to return to the previous window.

Click the **Refresh** button to refresh the information displayed in the table.

After selecting **VLAN** as the **Type**, the following window will appear:

The screenshot shows a window titled "Counters". At the top, there are search filters: "Type" with a dropdown menu set to "VLAN", and "Interface VLAN (1-4094)" with an empty text input field. To the right of these filters are four buttons: "Find", "Refresh", "Clear", and "Clear All". Below the filters, it says "Total Entries: 1". The main content is a table with two columns of statistics for "eth1/0/10 in L2VLAN 1".

eth1/0/10 in L2VLAN 1			
rxHCUnicastPkts	0	rxHCUnicastOctets	0
rxHCMulticastPkts	0	rxHCMulticastOctets	0
rxHCBroadcastPkts	0	rxHCBroadcastOctets	0
rxHCTotalPkts	0	rxHCTotalOctets	0
txHCUnicastPkts	0	txHCUnicastOctets	0
txHCMulticastPkts	0	txHCMulticastOctets	0
txHCBroadcastPkts	0	txHCBroadcastOctets	0
txHCTotalPkts	0	txHCTotalOctets	0

At the bottom right of the table area, there is a pagination control showing "1/1" and navigation buttons.

Figure 13-15 Counters (VLAN) Window

The fields that can be configured are described below:

Parameter	Description
Type	Select the type of information to display here. Options to choose from are Port and VLAN .
Interface VLAN	Enter the VLAN ID that will be used in this display here.

Click the **Find** button to display entries in the table based on the information selected/entered.

Click the **Refresh** button to refresh the counter information displayed in the table.

Click the **Clear** button clear the counter information displayed in the table based on the information selected/entered.

Click the **Clear All** button clear all the counter information displayed in the table.

Mirror Settings

This window is used to display and configure the mirror feature's settings. The Switch allows users to copy frames transmitted and received on a port and redirect the copies to another port. Attach a monitoring device to the mirroring port, such as a sniffer or an RMON probe, to view details about the packets passing through the first port. This is useful for network monitoring and troubleshooting purposes.

To view the following window, click **Monitoring > Mirror Settings**, as shown below:

Figure 13-16 Mirror Settings Window

The fields that can be configured for **RSPAN VLAN Settings** are described below:

Parameter	Description
VID List	Enter the VLAN list ID(s) that will be associated with this configuration here.

Click the **Add** button to add the VLAN(s) to the configuration.

Click the **Delete** button to delete the VLAN(s) from the configuration.

The fields that can be configured for **Mirror Settings** are described below:

Parameter	Description
Session Number	Select the mirror session number for this entry here. This number is between 1 and 4.
Destination	<p>Tick the checkbox, next to the Destination option, to configure the destination for this port mirror entry.</p> <p>In the first drop-down menu select the destination type option. Options to choose from are Port, Remote VLAN, and Replace.</p> <ul style="list-style-type: none"> • Port - After selecting this option, select the Switch Unit ID and destination Port number from the drop-down menus. • Remote VLAN - After selecting this option, select the Switch Unit ID and destination Port number from the drop-down menus and enter the VID in the space provided. The VID must be between 2 and 4094. • Replace - After selecting this option, enter the ACL Access List name and VID (VLAN ID) in the spaces provided.
Source	<p>Tick the checkbox, next to the Source option, to configure the source for this port mirror entry.</p> <p>In the first drop-down menu select the source type option. Options to choose from are Port, ACL, VLAN, and Remote VLAN.</p> <ul style="list-style-type: none"> • Port - After selecting this option, select the Switch Unit ID, From Port and To Port numbers from the drop-down menus. Lastly select the Frame Type option from the last drop-down menu. Options to choose from are Both, RX, TX, and TX Forwarding. When selecting Both, traffic in both the incoming and outgoing directions will be mirrored. When selecting RX, traffic in only the incoming direction will be mirrored. When selecting TX, traffic in only the outgoing direction will be mirrored. Select the CPU RX option to also monitor CPU RX traffic. • ACL - After selecting this option, enter the ACL Name in the space provided. • VLAN - After selecting this option, enter the VID List in the space provided and select the Frame Type from the drop-down menu. • Remote VLAN - After selecting this option, enter the VID in the space provided. The VID must be between 2 and 4094.

Click the **Add** button to add the newly configured mirror entry based on the information entered.

Click the **Delete** button to delete an existing mirror entry based on the information entered.

The fields that can be configured for **Mirror Session Table** are described below:

Parameter	Description
Mirror Session Type	<p>Select the mirror session type of information that will be displayed from the drop-down menu. Options to choose from are All Session, Session Number, Remote Session, and Local Session.</p> <p>After selecting the Session Number option, select the session number from the second drop-down menu. This number is from 1 to 4.</p>

Click the **Find** button to locate a specific entry based on the information entered.

Click the **Show Detail** button to view more detailed information about the mirror session.

After clicking the **Show Detail** button, the following window will appear:

Mirror Session Detail	
Mirror Session Detail	
Session Number	1
Session Type	Local Session
Both Port	
RX Port	
TX Port	
TX Forwarding Port	
CPU RX	monitored
RX VLAN	
Flow Based Source	
Destination Port	eth1/0/1

Figure 13-17 Mirror Settings (Show Detail) Window

Click the **Back** button to return to the previous page.

sFlow

sFlow Agent Information

This window is used to view the sFlow agent information.

To view the following window, click **Monitoring > sFlow > sFlow Agent Information**, as shown below:

sFlow Agent Information	
sFlow Agent Information	
sFlow Agent Version	1.3;D-Link Corporation Inc.;1.00
sFlow Agent Address	10.90.90.90
sFlow Agent IPv6 Address	FE80::8226:89FF:FE8D:A700

Figure 13-18 sFlow Agent Information Window

sFlow Receiver Settings

This window is used to display and configure receivers for the sFlow agents. Receivers cannot be added to or removed from the sFlow agent.

To view the following window, click **Monitoring > sFlow > sFlow Receiver Settings**, as shown below:

sFlow Receiver Settings

sFlow Receiver Settings

Receiver Index (1-4) Owner Name

Expire Time (1-2000000) sec Infinite Max Datagram Size (700-1400) bytes

Collector Address UDP Port (1-65535)

VRF Name

Total Entries: 4

Index	Owner	Expire Time	Current Countdown Time	Max Datagram Size	Address	VRF Name	Port	Datagram Version	
1		0	0	1400	0.0.0.0		6343	5	<input type="button" value="Reset"/>
2		0	0	1400	0.0.0.0		6343	5	<input type="button" value="Reset"/>
3		0	0	1400	0.0.0.0		6343	5	<input type="button" value="Reset"/>
4		0	0	1400	0.0.0.0		6343	5	<input type="button" value="Reset"/>

Figure 13-19 sFlow Receiver Settings Window

The fields that can be configured are described below:

Parameter	Description
Receiver Index	Enter the index number of the receiver here. This number must be between 1 and 4.
Owner Name	Enter the owner name of the receiver here. This name can be up to 32 characters long.
Expire Time	Enter the expiration time for the entry here. The parameters of the entry will reset when the timer expired. The range is from 1 to 2000000 seconds. Selecting Infinite specifies that the entry will not expire.
Max Datagram Size	Enter the maximum number of data bytes of a single sFlow datagram here. The range is from 700 to 1400 bytes. By default, this value is 1400 bytes.
Collector Address	Enter the remote sFlow collector's IPv4 or IPv6 address here.
UDP Port	Enter the remote sFlow collector's UDP port number here. This number must be between 1 and 65535. By default, this value is 6343.
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long.

Click the **Apply** button to accept the changes made.

Click the **Reset** button to reset the specified entry's settings to the default settings.

sFlow Sampler Settings

This window is used to display and configure the sFlow sampler settings.

To view the following window, click **Monitoring > sFlow > sFlow Sampler Settings**, as shown below:

Figure 13-20 sFlow Sampler Settings Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the appropriate port range used for the configuration here.
Instance	Enter the instance index number if multiple samplers are associated with one interface. The valid range is from 1 to 65535.
Receiver	Enter the receiver index for this sampler. If not specified, the value is 0. This value must be between 1 and 4.
Mode	Select the mode here. Options to choose from are Inbound and Outbound . <ul style="list-style-type: none"> Selecting Inbound specifies to sample ingress packets. This is the default direction of a sampler. Selecting Outbound specifies to sample egress packets.
Sampling Rate	Enter packet sampling rate here. This value must be between 0 and 65536. Entering 0 will disable this function. If not specified, the default value is 0.
Max Header Size	Enter the maximum number of bytes that should be copied from sampled packets. This value must be between 18 and 256 bytes. By default, this value is 128 bytes.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

sFlow Poller Settings

This window is used to display and configure the sFlow poller settings.

To view the following window, click **Monitoring > sFlow > sFlow Poller Settings**, as shown below:

Figure 13-21 sFlow Poller Settings Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the appropriate port range used for the configuration here.
Instance	Enter the instance index number if multiple samplers are associated with one interface. The valid range is from 1 to 65535.
Receiver	Enter the receiver index value for this poller here. This value must be between 1 and 4.
Interval	Enter the maximum number of seconds between successive polling samples. This value must be between 0 and 120 seconds. Entering 0 will disable this feature. By default this value is 0.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the specified entry.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

Device Environment

The device environment feature displays the Switch internal temperature status.

To view the following window, click **Monitoring > Device Environment**, as shown below:

Device Environment

Detail Temperature Status

Unit	Temperature Descr/ID	Current/Threshold Range
1	Central Temperature /1	26C/0~45C

Status code: * temperature is out of threshold range

Detail Fan Status

Items	Status
Unit	1
Right Fan 1	(OK)
Right Fan 2	(OK)
Right Fan 3	(OK)
Right Fan 4	(OK)

Detail Power Status

Unit	Power Module	Power Status
1	Power 1	In-operation
	Power 2	Empty

Figure 13-22 Device Environment Window

External Alarm Settings

This window is used to display and configure the external alarm settings. This is used to enable monitoring the external alarm source status or to configure external alarm message for a channel. The source of alarm is located outside of the Switch and is monitored via pre-defined connecting channels. Each channel represents a specific alarm event. The status of an alarm source can be either in the alarm state or in the normal state. If the source is absent or the source is present and in the normal state, the status will be normal. The status will be abnormal if the source is in the abnormal state. A notification will be sent when the monitoring status is changed.

To view the following window, click **Monitoring > External Alarm Settings**, as shown below:

External Alarm Settings

External Alarm Trap Settings

External Alarm Trap State Enabled Disabled Apply

External Alarm Settings

Unit Channel Message Apply

Total Entries: 2

Unit	Channel	Status	Message	
1	1	Normal	External Alarm 1	Default
	2	Normal	External Alarm 2	Default

1/1 ◀ < 1 > ▶ Go

Figure 13-23 External Alarm Settings Window

The fields that can be configured in **External Alarm Trap Settings** are described below:

Parameter	Description
External Alarm Trap State	Select to enable or disable the external alarm trap state here.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **External Alarm Settings** are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
Channel	Select the channel to be configured here. The range is from 1 to 2.
Message	Enter the alarm message associated with the channel here. This string can be up to 128 characters long.

Click the **Apply** button to accept the changes made.

Click the **Default** button return the entry to the default settings.

Enter a page number and click the **Go** button to navigate to a specific page when multiple pages exist.

14. Green

Power Saving EEE

Power Saving

This window is used to display and configure the power saving settings of the Switch.

To view the following window, click **Green > Power Saving**, as shown below:

Figure 14-1 Power Saving Global Settings Window

The fields that can be configured in **Power Saving Global Settings** are described below:

Parameter	Description
Link Detection Power Saving	Select this option to enable or disable the link detection state. When enabled, a port which has a link down status will be turned off to save power to the Switch. This will not affect the port's capabilities when the port status is link up.
Length Detection Power Saving	Select this option to enable or disable the cable length detection power saving feature. This feature will allow the Switch to automatically detect the cable length connected to the port and increase or reduce the required power to this port accordingly to save power.
Scheduled Port-shutdown Power Saving	Select this option to enable or disable applying the power saving by scheduled port shutdown.
Scheduled Dim-LED Power Saving	Select this option to enable or disable applying the power saving by scheduled dimming LEDs.
Administrative Dim-LED	Select this option to enable or disable the port LED function.

Click the **Apply** button to accept the changes made.

The fields that can be configured in **Time Range Settings** are described below:

Parameter	Description
Type	DIM-LED is selected as the power saving type.
Time Range	Enter the name of the time range to associate with the power saving type.

Click the **Apply** button to accept the changes made for each individual section.

Click the **Delete** button to remove the specified entry.



NOTE: The **hibernation** feature can only be configured when physical stacking is disabled on this Switch.

After clicking the **Power Saving Shutdown Settings** tab, the following page will appear.

Port	Time Range
eth1/0/1	Delete
eth1/0/2	Delete
eth1/0/3	Delete
eth1/0/4	Delete
eth1/0/5	Delete
eth1/0/6	Delete

Figure 14-2 Power Saving Shutdown Settings Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the appropriate port range used for the configuration here.
Time Range	Enter the name of the time range to associate with the ports.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the specified entry.

EEE

Energy Efficient Ethernet (EEE) is defined in IEEE 802.3az. It is designed to reduce the energy consumption of a link when no packets are being sent.

To view the following window, click **Green > EEE**, as shown below:

EEE Settings

Unit: 1 | From Port: eth1/0/1 | To Port: eth1/0/1 | State: Disabled | Apply

Unit 1 Settings

Port	State
eth1/0/1	Disabled
eth1/0/2	Disabled
eth1/0/3	Disabled
eth1/0/4	Disabled
eth1/0/5	Disabled
eth1/0/6	Disabled
eth1/0/7	Disabled
eth1/0/8	Disabled

Figure 14-3 EEE Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
From Port - To Port	Select the appropriate port range used for the configuration here.
State	Select this option to enable or disable the state of this feature here.

Click the **Apply** button to accept the changes made.

15. OpenFlow

OpenFlow Settings

OpenFlow Settings

This window is used to display and configure the OpenFlow settings.

To view the following window, click **OpenFlow > OpenFlow Settings** and select the **OpenFlow Global Settings** tab, as shown below:

Figure 15-1 OpenFlow Global Settings Window

The fields that can be configured are described below:

Parameter	Description
Global State	Select to globally enable or disable the OpenFlow function here.
Mode	Select the OpenFlow mode here. Options to choose from are: <ul style="list-style-type: none"> • Pure - Specifies that all the ports are in the OpenFlow pipeline. • Hybrid - Specifies that some ports are in the OpenFlow pipeline and some are in the normal pipeline.
Fail-Mode	Select the fail mode here. Options to choose from are: <ul style="list-style-type: none"> • Secure - Specifies that the switch will stop sending packets and messages to the controllers. Flow entries will continue to expire according to their timeouts. • Standalone - Specifies that the switch will stop sending packets and messages to the controllers. Flow entries are removed. Legacy functions still work on existing normal ports. This mode is only available on Hybrid switches.
Clear Statistics Cookie ID	Enter the cookie ID of the flow entry here. Statistics related to the specified flow entry will be cleared.
Table-Miss Action	Select the table miss action here. Options to choose from are: <ul style="list-style-type: none"> • Default - Specifies to use the default action. • Drop - Specifies to clear the table-miss entries and to drop unknown packets. • Controller - Specifies to apply the actions to the table-miss entries. The action set is to output to the controller. Unknown packets are sent to the controller

Click the **Apply** button to accept the changes made.

Click the **Clear** button to clear the statistics.

To view the following window, select the **OpenFlow Port** tab, as shown below:

Unit	From Port	To Port	OpenFlow State
1	eth1/0/1	eth1/0/1	Disabled

Port	State
eth1/0/1	Disabled
eth1/0/2	Disabled
eth1/0/3	Disabled
eth1/0/4	Disabled
eth1/0/5	Disabled
eth1/0/6	Disabled
eth1/0/7	Disabled
eth1/0/8	Disabled
eth1/0/9	Disabled
eth1/0/10	Disabled

Figure 15-2 OpenFlow Port Settings Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the stacking unit ID of the Switch that will be configured here.
From Port - To Port	Select the range of ports that will be used for this configuration here.
OpenFlow State	Select to enable or disable the OpenFlow function on the specified port(s) here.

Click the **Apply** button to accept the changes made.

To view the following window, select the **OpenFlow Controller** tab, as shown below:

IP Address	Service Port (1-65535)	Connection
10.90.90.254	6653	TCP

IP Address	Port	Connection	Role	Status
10.90.90.254	6653	TCP	Equal	Down

Figure 15-3 OpenFlow Controller Settings Window

The fields that can be configured are described below:

Parameter	Description
IP Address	Enter the IPv4 address of the controller here.
Service Port	Enter the TCP service port number for the connection to the controller here. The range is from 1 to 65535. By default, this is 6653.
Connection	Select the connection method here. Options to choose from are: <ul style="list-style-type: none"> TCP - Specifies to use a TCP connection.

Parameter	Description
	<ul style="list-style-type: none">• TLS - Specifies to use a TLS connection.

Click the **Apply** button to accept the changes made.

Click the **Delete** button to remove the specified entry.

16. Save and Tools

[Save Configuration](#)
[Firmware Upgrade & Backup](#)
[Configuration Restore & Backup](#)
[Log Backup](#)
[Ping](#)
[Trace Route](#)
[Reset](#)
[Reboot System](#)
[DLMS Settings](#)

Save Configuration

This window is used to save the running configuration to the start-up configuration. This is to prevent the loss of configuration in the event of a power failure.

To view the following window, click **Save > Save Configuration**, as shown below:

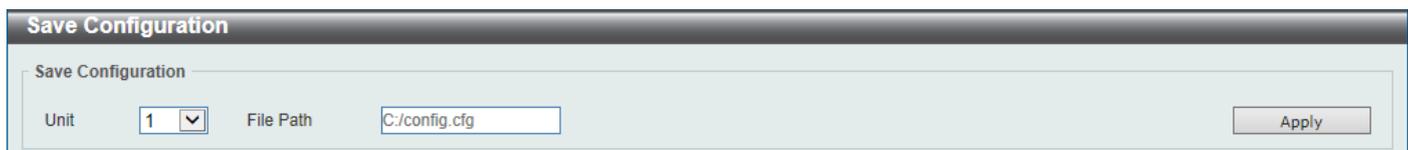


Figure 16-1 Save Configuration Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
File Path	Enter the filename and path in the space provided.

Click the **Apply** button to save the configuration.

Firmware Upgrade & Backup

Firmware Upgrade from HTTP

This window is used to initiate a firmware upgrade from a local PC using HTTP.

To view the following window, click **Tools > Firmware Upgrade & Backup > Firmware Upgrade from HTTP**, as shown below:

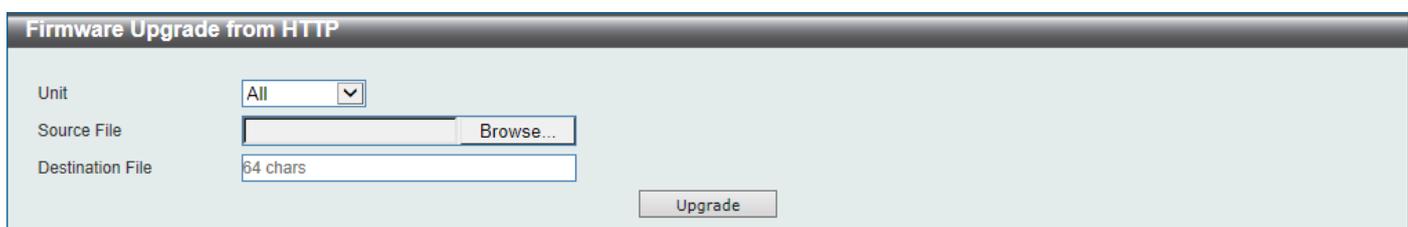


Figure 16-2 Firmware Upgrade from HTTP Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
Source File	In this field the source firmware file's filename and path will be displayed after selection. To navigate to the location of the firmware file located on the local PC, either double click in the text box or click the Browse button.
Destination File	Enter the destination path and location where the new firmware should be stored on the Switch. This field can be up to 64 characters long.

Click the **Upgrade** button to initiate the firmware upgrade.

Firmware Upgrade from TFTP

This window is used to initiate a firmware upgrade from a TFTP server.

To view the following window, click **Tools > Firmware Upgrade & Backup > Firmware Upgrade from TFTP**, as shown below:

Figure 16-3 Firmware Upgrade from TFTP Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
TFTP Server IP	Enter the TFTP server IP address here. When select the IPv4 option, enter the IPv4 address of the TFTP server in the space provided. When the IPv6 option is selected, enter the IPv6 address of the TFTP server in the space provided.
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long.
Source File	Enter the source filename and path of the firmware file located on the TFTP server here. This field can be up to 64 characters long.
Destination File	Enter the destination path and location where the new firmware should be stored on the Switch. This field can be up to 64 characters long.

Click the **Upgrade** button to initiate the firmware upgrade.

Firmware Upgrade from FTP

This window is used to initiate a firmware upgrade from an FTP server.

To view the following window, click **Tools > Firmware Upgrade & Backup > Firmware Upgrade from FTP**, as shown below:

Figure 16-4 Firmware Upgrade from FTP Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
FTP Server IP	Enter the FTP server IP address here. When select the IPv4 option, enter the IPv4 address of the FTP server in the space provided. When the IPv6 option is selected, enter the IPv6 address of the FTP server in the space provided.
TCP Port	Enter the TCP port number used for the FTP connection here. The range is from 1 to 65535.
User Name	Enter the user name used for the FTP connection here. This name can be up to 32 characters long.
Password	Enter the password used for the FTP connection here. This password can be up to 15 characters long.
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long.
Source File	Enter the source filename and path of the firmware file located on the FTP server here. This field can be up to 64 characters long.
Destination File	Enter the destination path and location where the new firmware should be stored on the Switch. This field can be up to 64 characters long.

Click the **Upgrade** button to initiate the firmware upgrade.

Firmware Upgrade from RCP

This window is used to initiate a firmware upgrade from an RCP server.

To view the following window, click **Tools > Firmware Upgrade & Backup > Firmware Upgrade from RCP**, as shown below:

Figure 16-5 Firmware Upgrade from RCP Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
RCP Server IP	Enter the RCP server IP address here.
User Name	Enter the user name used for the RCP connection here. This name can be up to 32 characters long.
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long.
Source File	Enter the source filename and path of the firmware file located on the RCP server here. This field can be up to 64 characters long.
Destination File	Enter the destination path and location where the new firmware should be stored on the Switch. This field can be up to 64 characters long.

Click the **Upgrade** button to initiate the firmware upgrade.

Firmware Upgrade from SFTP

This window is used to initiate a firmware upgrade from an SFTP server.

To view the following window, click **Tools > Firmware Upgrade & Backup > Firmware Upgrade from SFTP**, as shown below:

Figure 16-6 Firmware Upgrade from SFTP Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
SFTP Server IP	Enter the IPv4 address of the SFTP server here.
User Name	Enter the user name used for the SFTP connection here. This name can be up to 32 characters long.
Password	Enter the password used for the SFTP connection here. This password can be up to 15 characters long.
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long.
Source File	Enter the source filename and path of the firmware file located on the SFTP server here. This field can be up to 64 characters long.
Destination File	Enter the destination path and location where the new firmware should be stored on the Switch. This field can be up to 64 characters long.

Click the **Upgrade** button to initiate the firmware upgrade.

Firmware Backup to HTTP

This window is used to initiate a firmware backup to a local PC using HTTP.

To view the following window, click **Tools > Firmware Upgrade & Backup > Firmware Backup to HTTP**, as shown below:

The screenshot shows a web interface window titled "Firmware Backup to HTTP". It has a light blue background. On the left, there are two labels: "Unit" and "Source File". The "Unit" label is next to a dropdown menu showing "1". The "Source File" label is next to a text input field with a "64 chars" label. To the right of the input fields is a button labeled "Backup".

Figure 16-7 Firmware Backup to HTTP Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
Source File	Enter the source filename and path of the firmware file located on the Switch here. This field can be up to 64 characters long.

Click the **Backup** button to initiate the firmware backup.

Firmware Backup to TFTP

This window is used to initiate a firmware backup to a TFTP server.

To view the following window, click **Tools > Firmware Upgrade & Backup > Firmware Backup to TFTP**, as shown below:

Figure 16-8 Firmware Backup to TFTP Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
TFTP Server IP	Enter the TFTP server IP address here. When select the IPv4 option, enter the IPv4 address of the TFTP server in the space provided. When the IPv6 option is selected, enter the IPv6 address of the TFTP server in the space provided.
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long.
Source File	Enter the source filename and path of the firmware file located on the Switch here. This field can be up to 64 characters long.
Destination File	Enter the destination filename and path of the firmware file to be backed up to the TFTP server here. This field can be up to 64 characters long.

Click the **Backup** button to initiate the firmware backup.

Firmware Backup to FTP

This window is used to initiate a firmware backup to an FTP server.

To view the following window, click **Tools > Firmware Upgrade & Backup > Firmware Backup to FTP**, as shown below:

Figure 16-9 Firmware Backup to FTP Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
FTP Server IP	Enter the FTP server IP address here. When select the IPv4 option, enter the IPv4 address of the FTP server in the space provided. When the IPv6 option is selected, enter the IPv6 address of the FTP server in the space provided.
TCP Port	Enter the TCP port number used for the FTP connection here. The range is from 1 to 65535.
User Name	Enter the user name used for the FTP connection here. This name can be up to 32 characters long.
Password	Enter the password used for the FTP connection here. This password can be up to 15 characters long.
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long.
Source File	Enter the source filename and path of the firmware file located on the Switch here. This field can be up to 64 characters long.
Destination File	Enter the destination filename and path of the firmware file to be backed up to the FTP server here. This field can be up to 64 characters long.

Click the **Backup** button to initiate the firmware backup.

Firmware Backup to RCP

This window is used to initiate a firmware backup to an RCP server.

To view the following window, click **Tools > Firmware Upgrade & Backup > Firmware Backup to RCP**, as shown below:

Figure 16-10 Firmware Backup to RCP Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
RCP Server IP	Enter the RCP server IP address here.
User Name	Enter the user name used for the RCP connection here. This name can be up to 32 characters long.
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long.
Source File	Enter the source filename and path of the firmware file located on the Switch here. This field can be up to 64 characters long.

Parameter	Description
Destination File	Enter the destination filename and path of the firmware file to be backed up to the RCP server here. This field can be up to 64 characters long.

Click the **Backup** button to initiate the firmware backup.

Firmware Backup to SFTP

This window is used to initiate a firmware backup to an SFTP server.

To view the following window, click **Tools > Firmware Upgrade & Backup > Firmware Backup to SFTP**, as shown below:

Figure 16-11 Firmware Backup to SFTP Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
SFTP Server IP	Enter the IPv4 address of the SFTP server here.
User Name	Enter the user name used for the SFTP connection here. This name can be up to 32 characters long.
Password	Enter the password used for the SFTP connection here. This password can be up to 15 characters long.
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long.
Source File	Enter the source filename and path of the firmware file located on the Switch here. This field can be up to 64 characters long.
Destination File	Enter the destination filename and path of the firmware file to be backed up to the SFTP server here. This field can be up to 64 characters long.

Click the **Backup** button to initiate the firmware backup.

Configuration Restore & Backup

Configuration Restore from HTTP

This window is used to initiate a configuration restore from a local PC using HTTP.

To view the following window, click **Tools > Configuration Restore & Backup > Configuration Restore from HTTP**, as shown below:

Figure 16-12 Configuration Restore from HTTP Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
Source File	In this field the source configuration file's filename and path will be displayed after selection. To navigate to the location of the configuration file located on the local PC, either double click in the text box or click the Browse button.
Destination File	Enter the destination path and location where the configuration file should be stored on the Switch. This field can be up to 64 characters long. Select the running-config option to restore and overwrite the running configuration file on the Switch. Select the startup-config option to restore and overwrite the start-up configuration file on the Switch.
Replace	Select this option to replace the configuration file on the Switch with this one.

Click the **Restore** button to initiate the configuration restore.

Configuration Restore from TFTP

This window is used to initiate a configuration restore from a TFTP server.

To view the following window, click **Tools > Configuration Restore & Backup > Configuration Restore from TFTP**, as shown below:

Figure 16-13 Configuration Restore from TFTP Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
TFTP Server IP	Enter the TFTP server IP address here. When select the IPv4 option, enter the IPv4 address of the TFTP server in the space provided. When the IPv6 option is selected, enter the IPv6 address of the TFTP server in the space provided.

Parameter	Description
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long.
Source File	Enter the source filename and path of the configuration file located on the TFTP server here. This field can be up to 64 characters long.
Destination File	Enter the destination path and location where the configuration file should be stored on the Switch. This field can be up to 64 characters long. Select the running-config option to restore and overwrite the running configuration file on the Switch. Select the startup-config option to restore and overwrite the start-up configuration file on the Switch.
Replace	Select this option to replace the configuration file on the Switch with this one.

Click the **Restore** button to initiate the configuration restore.

Configuration Restore from FTP

This window is used to initiate a configuration restore from an FTP server.

To view the following window, click **Tools > Configuration Restore & Backup > Configuration Restore from FTP**, as shown below:

Figure 16-14 Configuration Restore from FTP Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
FTP Server IP	Enter the FTP server IP address here. When select the IPv4 option, enter the IPv4 address of the FTP server in the space provided. When the IPv6 option is selected, enter the IPv6 address of the FTP server in the space provided.
TCP Port	Enter the TCP port number used for the FTP connection here. The range is from 1 to 65535.
User Name	Enter the user name used for the FTP connection here. This name can be up to 32 characters long.
Password	Enter the password used for the FTP connection here. This password can be up to 15 characters long.
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long.
Source File	Enter the source filename and path of the configuration file located on the FTP server here. This field can be up to 64 characters long.

Parameter	Description
Destination File	Enter the destination path and location where the configuration file should be stored on the Switch. This field can be up to 64 characters long. Select the running-config option to restore and overwrite the running configuration file on the Switch. Select the startup-config option to restore and overwrite the start-up configuration file on the Switch.
Replace	Select this option to replace the configuration file on the Switch with this one.

Click the **Restore** button to initiate the configuration restore.

Configuration Restore from RCP

This window is used to initiate a configuration restore from an RCP server.

To view the following window, click **Tools > Configuration Restore & Backup > Configuration Restore from RCP**, as shown below:

Figure 16-15 Configuration Restore from RCP Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
RCP Server IP	Enter the RCP server IP address here.
User Name	Enter the user name used for the RCP connection here. This name can be up to 32 characters long.
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long.
Source File	Enter the source filename and path of the configuration file located on the RCP server here. This field can be up to 64 characters long.
Destination File	Enter the destination path and location where the configuration file should be stored on the Switch. This field can be up to 64 characters long. Select the running-config option to restore and overwrite the running configuration file on the Switch. Select the startup-config option to restore and overwrite the start-up configuration file on the Switch.
Replace	Select this option to replace the configuration file on the Switch with this one.

Click the **Restore** button to initiate the configuration restore.

Configuration Restore from SFTP

This window is used to initiate a configuration restore from an SFTP server.

To view the following window, click **Tools > Configuration Restore & Backup > Configuration Restore from SFTP**, as shown below:

Figure 16-16 Configuration Restore from SFTP Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
SFTP Server IP	Enter the IPv4 address of the SFTP server here.
User Name	Enter the user name used for the SFTP connection here. This name can be up to 32 characters long.
Password	Enter the password used for the SFTP connection here. This password can be up to 15 characters long.
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long.
Source File	Enter the source filename and path of the configuration file located on the SFTP server here. This field can be up to 64 characters long.
Destination File	Enter the destination path and location where the configuration file should be stored on the Switch. This field can be up to 64 characters long. Select the running-config option to restore and overwrite the running configuration file on the Switch. Select the startup-config option to restore and overwrite the start-up configuration file on the Switch.
Replace	Select this option to replace the configuration file on the Switch with this one.

Click the **Restore** button to initiate the configuration restore.

Configuration Backup to HTTP

This window is used to initiate a configuration file backup to a local PC using HTTP.

To view the following window, click **Tools > Configuration Restore & Backup > Configuration Backup to HTTP**, as shown below:

Figure 16-17 Configuration Backup to HTTP Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
Source File	Enter the source filename and path of the configuration file located on the Switch here. This field can be up to 64 characters long. Select the running-config option to back up the running configuration file from the Switch. Select the startup-config option to back up the start-up configuration file from the Switch.

Click the **Backup** button to initiate the configuration file backup.

Configuration Backup to TFTP

This window is used to initiate a configuration file backup to a TFTP server.

To view the following window, click **Tools > Configuration Restore & Backup > Configuration Backup to TFTP**, as shown below:

Figure 16-18 Configuration Backup to TFTP Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
TFTP Server IP	Enter the TFTP server IP address here. When select the IPv4 option, enter the IPv4 address of the TFTP server in the space provided. When the IPv6 option is selected, enter the IPv6 address of the TFTP server in the space provided.
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long.
Source File	Enter the source filename and path of the configuration file located on the Switch here. This field can be up to 64 characters long. Select the running-config option to back up the running configuration file from the Switch. Select the startup-config option to back up the start-up configuration file from the Switch.
Destination File	Enter the destination path and location where the configuration file should be stored on the TFTP server. This field can be up to 64 characters long.

Click the **Backup** button to initiate the configuration file backup.

Configuration Backup to FTP

This window is used to initiate a configuration file backup to an FTP server.

To view the following window, click **Tools > Configuration Restore & Backup > Configuration Backup to FTP**, as shown below:

Figure 16-19 Configuration Backup to FTP Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
FTP Server IP	Enter the FTP server IP address here. When select the IPv4 option, enter the IPv4 address of the FTP server in the space provided. When the IPv6 option is selected, enter the IPv6 address of the FTP server in the space provided.
TCP Port	Enter the TCP port number used for the FTP connection here. The range is from 1 to 65535.
User Name	Enter the user name used for the FTP connection here. This name can be up to 32 characters long.
Password	Enter the password used for the FTP connection here. This password can be up to 15 characters long.
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long.
Source File	Enter the source filename and path of the configuration file located on the Switch here. This field can be up to 64 characters long. Select the running-config option to back up the running configuration file from the Switch. Select the startup-config option to back up the start-up configuration file from the Switch.
Destination File	Enter the destination path and location where the configuration file should be stored on the FTP server. This field can be up to 64 characters long.

Click the **Backup** button to initiate the configuration file backup.

Configuration Backup to RCP

This window is used to initiate a configuration file backup to an RCP server.

To view the following window, click **Tools > Configuration Restore & Backup > Configuration Backup to RCP**, as shown below:

Figure 16-20 Configuration Backup to RCP Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
RCP Server IP	Enter the RCP server IP address here.
User Name	Enter the user name used for the RCP connection here. This name can be up to 32 characters long.
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long.
Source File	Enter the source filename and path of the configuration file located on the Switch here. This field can be up to 64 characters long. Select the running-config option to back up the running configuration file from the Switch. Select the startup-config option to back up the start-up configuration file from the Switch.
Destination File	Enter the destination path and location where the configuration file should be stored on the RCP server. This field can be up to 64 characters long.

Click the **Backup** button to initiate the configuration file backup.

Configuration Backup to SFTP

This window is used to initiate a configuration file backup to an SFTP server.

To view the following window, click **Tools > Configuration Restore & Backup > Configuration Backup to SFTP**, as shown below:

Figure 16-21 Configuration Backup to SFTP Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
SFTP Server IP	Enter the IPv4 address of the SFTP server here.
User Name	Enter the user name used for the SFTP connection here. This name can be up to 32 characters long.
Password	Enter the password used for the SFTP connection here. This password can be up to 15 characters long.
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long.
Source File	Enter the source filename and path of the configuration file located on the Switch here. This field can be up to 64 characters long. Select the running-config option to back up the running configuration file from the Switch. Select the startup-config option to back up the start-up configuration file from the Switch.
Destination File	Enter the destination path and location where the configuration file should be stored on the SFTP server. This field can be up to 64 characters long.

Click the **Backup** button to initiate the configuration file backup.

Certificate & Key Restore & Backup

Certificate & Key Restore from HTTP

This window is used to initiate a certificate and key restore from a local PC using HTTP.

To view the following window, click **Tools > Certificate & Key Restore & Backup > Certificate & Key Restore from HTTP**, as shown below:

Figure 16-22 Certificate & Key Restore from HTTP Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
Source File	In this field the source certificate and key file's filename and path will be displayed after selection. To navigate to the location of the certificate and key file located on the local PC, either double click in the text box or click the Browse button.
Destination File	Enter the destination path and location where the new certificate and key should be stored on the Switch. This field can be up to 64 characters long.

Click the **Restore** button to initiate the certificate and key restore.

Certificate & Key Restore from TFTP

This window is used to initiate a certificate and key restore from a TFTP server.

To view the following window, click **Tools > Certificate & Key Restore & Backup > Certificate & Key Restore from TFTP**, as shown below:

Figure 16-23 Certificate & Key Restore from TFTP Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
TFTP Server IP	Enter the TFTP server IP address here. When select the IPv4 option, enter the IPv4 address of the TFTP server in the space provided. When the IPv6 option is selected, enter the IPv6 address of the TFTP server in the space provided.
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long.
Source File	Enter the source filename and path of the certificate and key file located on the TFTP server here. This field can be up to 64 characters long.
Destination File	Enter the destination path and location where the new certificate and key should be stored on the Switch. This field can be up to 64 characters long.

Click the **Restore** button to initiate the certificate and key restore.

Certificate & Key Restore from FTP

This window is used to initiate a certificate and key restore from an FTP server.

To view the following window, click **Tools > Certificate & Key Restore & Backup > Certificate & Key Restore from FTP**, as shown below:

Figure 16-24 Certificate & Key Restore from FTP Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
FTP Server IP	Enter the FTP server IP address here. When select the IPv4 option, enter the IPv4 address of the FTP server in the space provided. When the IPv6 option is selected, enter the IPv6 address of the FTP server in the space provided.
TCP Port	Enter the TCP port number used for the FTP connection here. The range is from 1 to 65535.
User Name	Enter the user name used for the FTP connection here. This name can be up to 32 characters long.
Password	Enter the password used for the FTP connection here. This password can be up to 15 characters long.
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long.
Source File	Enter the source filename and path of the certificate and key file located on the FTP server here. This field can be up to 64 characters long.
Destination File	Enter the destination path and location where the new certificate and key should be stored on the Switch. This field can be up to 64 characters long.

Click the **Restore** button to initiate the certificate and key restore.

Certificate & Key Restore from RCP

This window is used to initiate a certificate and key restore from an RCP server.

To view the following window, click **Tools > Certificate & Key Restore & Backup > Certificate & Key Restore from RCP**, as shown below:

Figure 16-25 Certificate & Key Restore from RCP Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
RCP Server IP	Enter the RCP server IP address here.
User Name	Enter the user name used for the RCP connection here. This name can be up to 32 characters long.
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long.
Source File	Enter the source filename and path of the certificate and key file located on the RCP server here. This field can be up to 64 characters long.
Destination File	Enter the destination path and location where the new certificate and key should be stored on the Switch. This field can be up to 64 characters long.

Click the **Restore** button to initiate the certificate and key restore.

Certificate & Key Restore from SFTP

This window is used to initiate a certificate and key restore from an SFTP server.

To view the following window, click **Tools > Certificate & Key Restore & Backup > Certificate & Key Restore from SFTP**, as shown below:

Figure 16-26 Certificate & Key Restore from SFTP Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
SFTP Server IP	Enter the IPv4 address of the SFTP server here.
User Name	Enter the user name used for the SFTP connection here. This name can be up to 32 characters long.
Password	Enter the password used for the SFTP connection here. This password can be up to 15 characters long.
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long.
Source File	Enter the source filename and path of the certificate and key file located on the SFTP server here. This field can be up to 64 characters long.
Destination File	Enter the destination path and location where the new certificate and key should be stored on the Switch. This field can be up to 64 characters long.

Click the **Restore** button to initiate the certificate and key restore.

Public Key Backup to HTTP

This window is used to initiate a public key backup to a local PC using HTTP.

To view the following window, click **Tools > Certificate & Key Upgrade & Backup > Public Key Backup to HTTP**, as shown below:

The screenshot shows a web interface window titled "Public Key Backup to HTTP". Inside the window, there are two input fields: "Unit" with a dropdown menu showing "1" and "Source File" with a text input field containing "64 chars". A "Backup" button is located to the right of the "Source File" field.

Figure 16-27 Public Key Backup to HTTP Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
Source File	Enter the source filename and path of the certificate and key file located on the Switch here. This field can be up to 64 characters long.

Click the **Backup** button to initiate the certificate and key backup.

Public Key Backup to TFTP

This window is used to initiate a public key backup to a TFTP server.

To view the following window, click **Tools > Certificate & Key Upgrade & Backup > Public Key Backup to TFTP**, as shown below:

Figure 16-28 Public Key Backup to TFTP Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
TFTP Server IP	Enter the TFTP server IP address here. When select the IPv4 option, enter the IPv4 address of the TFTP server in the space provided. When the IPv6 option is selected, enter the IPv6 address of the TFTP server in the space provided.
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long.
Source File	Enter the source filename and path of the certificate and key file located on the Switch here. This field can be up to 64 characters long.
Destination File	Enter the destination filename and path of the certificate and key file to be backed up to the TFTP server here. This field can be up to 64 characters long.

Click the **Backup** button to initiate the certificate and key backup.

Public Key Backup to FTP

This window is used to initiate a public key backup to an FTP server.

To view the following window, click **Tools > Certificate & Key Upgrade & Backup > Public Key Backup to FTP**, as shown below:

Figure 16-29 Public Key Backup to FTP Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
FTP Server IP	Enter the FTP server IP address here. When select the IPv4 option, enter the IPv4 address of the FTP server in the space provided. When the IPv6 option is selected, enter the IPv6 address of the FTP server in the space provided.
TCP Port	Enter the TCP port number used for the FTP connection here. The range is from 1 to 65535.
User Name	Enter the user name used for the FTP connection here. This name can be up to 32 characters long.
Password	Enter the password used for the FTP connection here. This password can be up to 15 characters long.
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long.
Source File	Enter the source filename and path of the certificate and key file located on the Switch here. This field can be up to 64 characters long.
Destination File	Enter the destination filename and path of the certificate and key file to be backed up to the FTP server here. This field can be up to 64 characters long.

Click the **Backup** button to initiate the certificate and key backup.

Public Key Backup to RCP

This window is used to initiate a public key backup to an RCP server.

To view the following window, click **Tools > Certificate & Key Upgrade & Backup > Public Key Backup to RCP**, as shown below:

Figure 16-30 Public Key Backup to RCP Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
RCP Server IP	Enter the RCP server IP address here.
User Name	Enter the user name used for the RCP connection here. This name can be up to 32 characters long.
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long.
Source File	Enter the source filename and path of the certificate and key file located on the Switch here. This field can be up to 64 characters long.

Parameter	Description
Destination File	Enter the destination filename and path of the certificate and key file to be backed up to the RCP server here. This field can be up to 64 characters long.

Click the **Backup** button to initiate the certificate and key backup.

Public Key Backup to SFTP

This window is used to initiate a public key backup to an SFTP server.

To view the following window, click **Tools > Certificate & Key Upgrade & Backup > Public Key Backup to SFTP**, as shown below:

Figure 16-31 Public Key Backup to SFTP Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit that will be used for this configuration here.
SFTP Server IP	Enter the IPv4 address of the SFTP server here.
User Name	Enter the user name used for the SFTP connection here. This name can be up to 32 characters long.
Password	Enter the password used for the SFTP connection here. This password can be up to 15 characters long.
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long.
Source File	Enter the source filename and path of the certificate and key file located on the Switch here. This field can be up to 64 characters long.
Destination File	Enter the destination filename and path of the certificate and key file to be backed up to the SFTP server here. This field can be up to 64 characters long.

Click the **Backup** button to initiate the certificate and key backup.

Log Backup

Log Backup to HTTP

This window is used to initiate a system log backup to a local PC using HTTP.

To view the following window, click **Tools > Log Backup > Log Backup to HTTP**, as shown below:

Figure 16-32 Log Backup to HTTP Window

The fields that can be configured are described below:

Parameter	Description
Log Type	<p>Select the log type that will be backed up to the local PC using HTTP.</p> <ul style="list-style-type: none"> When the System Log option is selected, the system log will be backed up. When the Attack Log is selected, the attack log will be backed up.

Click the **Backup** button to initiate the system log backup.

Log Backup to TFTP

This window is used to initiate a system log backup to a TFTP server.

To view the following window, click **Tools > Log Backup > Log Backup to TFTP**, as shown below:

Figure 16-33 Log Backup to TFTP Window

The fields that can be configured are described below:

Parameter	Description
TFTP Server IP	Enter the TFTP server IP address here. When select the IPv4 option, enter the IPv4 address of the TFTP server in the space provided. When the IPv6 option is selected, enter the IPv6 address of the TFTP server in the space provided.
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long.
Destination File	Enter the destination path and location where the log file should be stored on the TFTP server. This field can be up to 64 characters long.
Log Type	<p>Select the log type that will be backed up to the TFTP server.</p> <ul style="list-style-type: none"> When the System Log option is selected, the system log will be backed up. When the Attack Log is selected, the attack log will be backed up.

Click the **Backup** button to initiate the system log backup.

Log Backup to RCP

This window is used to initiate a system log backup to an RCP server.

To view the following window, click **Tools > Log Backup > Log Backup to RCP**, as shown below:

Figure 16-34 Log Backup to RCP Window

The fields that can be configured are described below:

Parameter	Description
RCP Server IP	Enter the RCP server IP address here.
User Name	Enter the user name used for the RCP connection here. This name can be up to 32 characters long.
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long.
Destination File	Enter the destination path and location where the log file should be stored on the RCP server. This field can be up to 64 characters long.
Log Type	Select the log type that will be backed up to the RCP server. <ul style="list-style-type: none"> When the System Log option is selected, the system log will be backed up. When the Attack Log is selected, the attack log will be backed up.

Click the **Backup** button to initiate the system log backup.

Log Backup to SFTP

This window is used to initiate a system log backup to an SFTP server.

To view the following window, click **Tools > Log Backup > Log Backup to SFTP**, as shown below:

Figure 16-35 Log Backup to SFTP Window

The fields that can be configured are described below:

Parameter	Description
SFTP Server IP	Enter the IPv4 address of the SFTP server here.
User Name	Enter the user name used for the SFTP connection here. This name can be up to 32 characters long.
Password	Enter the password used for the SFTP connection here. This password can be up to 15 characters long.
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long.
Destination File	Enter the destination path and location where the log file should be stored on the SFTP server. This field can be up to 64 characters long.
Log Type	Select the log type that will be backed up to the SFTP server. <ul style="list-style-type: none"> When the System Log option is selected, the system log will be backed up. When the Attack Log is selected, the attack log will be backed up.

Click the **Backup** button to initiate the system log backup.

Ping

Ping is a small program that sends ICMP Echo packets to the IP address you specify. The destination node then responds to or “echoes” the packets sent from the Switch. This is very useful to verify connectivity between the Switch and other nodes on the network.

To view the following window, click **Tools > Ping**, as shown below:

The screenshot shows the 'Ping' configuration window. It is divided into two main sections: 'IPv4 Ping' and 'IPv6 Ping'. Each section contains several configuration options:

- IPv4 Ping:**
 - VRF Name: 12 chars
 - Target IPv4 Address: (selected radio button)
 - Domain Name: 255 chars
 - Ping Times (1-255): (input field) Infinite
 - Timeout (1-99): 1 sec
 - Frequency (0-86400): 0 sec
 - Length (1-1420): 56 bytes
 - ToS (0-255): 0
 - Stop Time (0-99): 0
 - Source IPv4 Address: (input field)
 - Start button
- IPv6 Ping:**
 - Target IPv6 Address: 2233::1 (selected radio button)
 - Domain Name: 255 chars
 - Ping Times (1-255): (input field) Infinite
 - Timeout (1-99): 1 sec
 - Frequency (0-86400): 0 sec
 - Length (1-1420): 56 bytes
 - Stop Time (0-99): 0
 - Source IPv6 Address: (input field)
 - Start button

Figure 16-36 Ping Window

The fields that can be configured in **IPv4 Ping** are described below:

Parameter	Description
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long.
Target IPv4 Address	Select and enter an IP address to be pinged.
Domain Name	Select and enter the domain name of the system to discover.
Ping Times	Enter the number of times desired to attempt to Ping the IPv4 address configured in this window. Users may enter a number of times between 1 and 255. Tick the Infinite check box to keep sending ICMP Echo packets to the specified IP address until the program is stopped.
Timeout	Select a timeout period between 1 and 99 seconds for this Ping message to reach its destination. If the packet fails to find the IP address in this specified time, the Ping packet will be dropped.
Frequency	Enter the frequency time for the ping here. The range is from 0 to 86400.
Length	Enter the length value here. This specifies the number of data bytes to send. The default value is 56, which translates into 64 ICMP data bytes when combined with the 8 bytes of ICMP header data. It does not include any VLAN or IEEE 802.1Q tag length. The range is from 1 to 1420 bytes.
ToS	Enter the ToS value here. This is used to configure the QoS on ICMP datagrams. The range is from 0 to 255.
Stop Time	Enter the stop time value here. This specifies to stop the ping after the amount of times entered here. If this value is configured as 0, then the ping can only be stopped by clicking the Stop button manually. The range is from 0 to 99.
Source IPv4 Address	Enter the source IPv4 address. If the current Switch has more than one IP address, you can enter one of them to this field. When entered, this IPv4 address will be used as the packets' source IP address sent to the remote host, or as primary IP address.

Click the **Start** button to initiate the Ping Test for each individual section.

The fields that can be configured in **IPv6 Ping** are described below:

Parameter	Description
Target IPv6 Address	Enter an IPv6 address to be pinged.
Domain Name	Select and enter the domain name of the system to discover.
Ping Times	Enter the number of times desired to attempt to Ping the IPv6 address configured in this window. Users may enter a number of times between 1 and 255. Tick the Infinite check box to keep sending ICMPv6 Echo packets to the specified IPv6 address until the program is stopped.
Timeout	Select a timeout period between 1 and 99 seconds for this Ping message to reach its destination. If the packet fails to find the IPv6 address in this specified time, the Ping packet will be dropped.
Frequency	Enter the frequency time for the ping here. The range is from 0 to 86400.
Length	Enter the length value here. This specifies the number of data bytes to send. The default value is 56, which translates into 64 ICMPv6 data bytes when combined with the 8 bytes of ICMPv6 header data. It does not include any VLAN or IEEE 802.1Q tag length. The range is from 1 to 1420 bytes.
Stop Time	Enter the stop time value here. This specifies to stop the ping after the amount of times entered here. If this value is configured as 0, then the ping can only be stopped by clicking the Stop button manually. The range is from 0 to 99.
Source IPv6 Address	Enter the source IPv6 address. If the current Switch has more than one IPv6 address, you can enter one of them to this field. When entered, this IPv6

Parameter	Description
	address will be used as the packets' source IPv6 address sent to the remote host, or as primary IPv6 address.

Click the **Start** button to initiate the Ping Test for each individual section.

After clicking the **Start** button in **IPv4 Ping** section, the following **IPv4 Ping Result** section will appear:

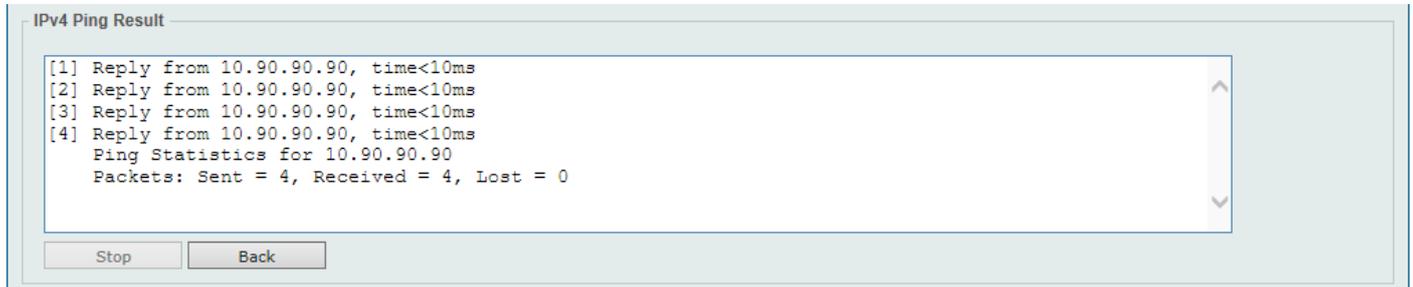


Figure 16-37 Ping (Start) Window

Click the **Stop** button to halt the Ping Test.

Click the **Back** button to return to the IPv4 Ping section.

Trace Route

The trace route page allows the user to trace a route between the Switch and a given host on the network.

To view the following window, click **Tools > Trace Route**, as shown below:

The screenshot shows the 'Trace Route' window with two sections: IPv4 Trace Route and IPv6 Trace Route. Each section contains a list of configuration parameters with input fields and radio buttons for selection. A 'Start' button is located at the bottom right of each section.

IPv4 Trace Route Configuration:

- VRF Name: 12 chars
- IPv4 Address: []
- Domain Name: 255 chars
- Initial TTL (1-255): 1
- Max TTL (1-255): 30
- Port (1-65535): 33434
- Timeout (1-65535): 5 sec
- Length (1-1420): 40 bytes
- ToS (0-255): 0
- Frequency (0-86400): 0 sec
- Source IPv4 Address: []
- Probe Number (1-1000): 1

IPv6 Trace Route Configuration:

- IPv6 Address: 2233::1
- Domain Name: 255 chars
- Initial TTL (1-255): 1
- Max TTL (1-255): 30
- Port (1-65535): 33434
- Timeout (1-65535): 5 sec
- Length (1-1420): 40 bytes
- Frequency (0-86400): 0 sec
- Source IPv6 Address: 2233::2
- Probe Number (1-1000): 1

Figure 16-38 Trace Route Window

The fields that can be configured in **IPv4 Trace Route** are described below:

Parameter	Description
VRF Name	Enter the name of the VRF instance here. This name can be up to 12 characters long.
IPv4 Address	Select and enter the IPv4 address of the destination here.
Domain Name	Select and enter the domain name of the destination here.
Initial TTL	Enter the initial Time-To-Live (TTL) value here. The range is from 1 to 255.
Max TTL	Enter the Time-To-Live (TTL) value of the trace route request here. This is the maximum number of routers that a trace route packet can pass. The trace route option will cross while seeking the network path between two devices. The range for the TTL is 1 to 255 hops.
Port	Enter the port number here. The value range is from 1 to 65535.
Timeout	Enter the timeout period while waiting for a response from the remote device here. A value of 1 to 65535 seconds can be specified. The default is 5 seconds.
Length	Enter the length value here. This specifies the number of bytes of the outgoing datagram. The range is from 1 to 1420 bytes.
ToS	Enter the ToS value here. This specifies the ToS to be set in the IP header of the outgoing datagram. The range is from 0 to 255.
Frequency	Enter the frequency time for the trace route here. The range is from 0 to 86400.
Source IPv4 Address	Enter the source IPv4 address here. The specified IPv4 address must one of the IPv4 addresses configured for the Switch.

Parameter	Description
Probe Number	Enter the probe time number here. The range is from 1 to 1000. If unspecified, the default value is 1.

Click the **Start** button to initiate the route trace for each individual section.

The fields that can be configured in **IPv6 Trace Route** are described below:

Parameter	Description
IPv6 Address	Select and enter the IPv6 address of the destination here.
Domain Name	Select and enter the domain name of the destination here.
Initial TTL	Enter the initial Time-To-Live (TTL) value here. The range is from 1 to 255.
Max TTL	Enter the Time-To-Live (TTL) value of the trace route request here. This is the maximum number of routers that a trace route packet can pass. The trace route option will cross while seeking the network path between two devices. The range for the TTL is 1 to 255 hops.
Port	Enter the port number here. The value range is from 1 to 65535.
Timeout	Enter the timeout period while waiting for a response from the remote device here. A value of 1 to 65535 seconds can be specified. The default is 5 seconds.
Length	Enter the length value here. This specifies the number of bytes of the outgoing datagram. The range is from 1 to 1420 bytes.
Frequency	Enter the frequency time for the trace route here. The range is from 0 to 86400.
Source IPv6 Address	Enter the source IPv6 address here. The specified IPv6 address must one of the IPv6 addresses configured for the Switch.
Probe Number	Enter the probe time number here. The range is from 1 to 1000. If unspecified, the default value is 1.

Click the **Start** button to initiate the route trace for each individual section.

After clicking the **Start** button in **IPv4 Trace Route** section, the following **IPv4 Trace Route Result** section will appear:

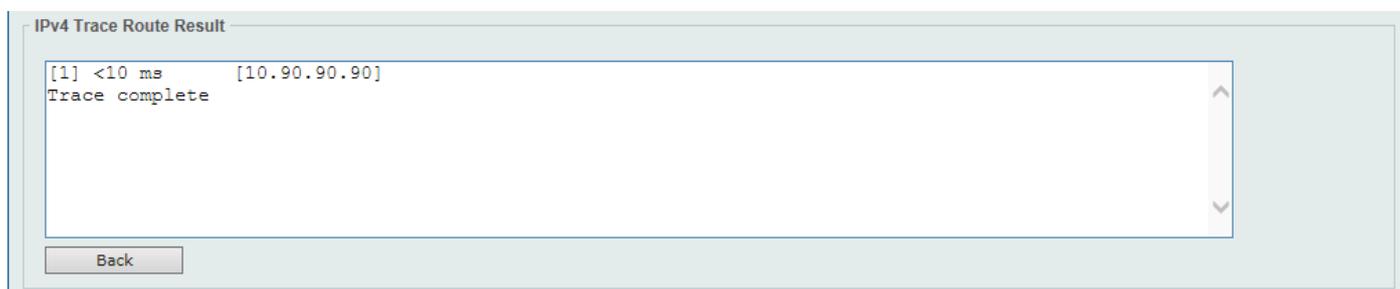


Figure 16-39 Trace Route (Start) Window

Click the **Back** button to stop the trace route and return to the IPv4 Trace Route section.

Reset

This window is used to reset the Switch's configuration to the factory default settings.

To view the following window, click **Tools > Reset**, as shown below:

Figure 16-40 Reset Window

Select one of the following options:

- The Switch will reset to its factory default settings and then reboot.
- The Switch will reset to its factory default settings and then reboot. This option excludes the IP address.
- The Switch will reset to its factory default settings and not reboot. This option excludes the stacking information.

Click the **Apply** button to initiate the reset.

Reboot System

This window is used to reboot the Switch and alternatively save the configuration before doing so.

To view the following window, click **Tools > Reboot System**, as shown below:

Figure 16-41 Reboot System Window

The field that can be configured in **Reboot System** is described below:

Parameter	Description
Do you want to save the settings?	Click Yes to save all configuration changes that was made during this session. Click No to discard all configuration changes that was made during this session.

Click the **Reboot** button to alternatively save the settings and reboot the master Switch.

The field that can be configured in **Reboot System** is described below:

Parameter	Description
Unit	Enter the Switch unit ID.

Click the **Reboot** button to alternatively save the settings and reboot the specified Switch.



Figure 16-42 Reboot System (Rebooting) Window

DLMS Settings

This window is used to display and configure the D-Link License Management System (DLMS) settings.

The license specifies the feature options that are enabled on the Switch. License keys are sold in the market. It may be printed on a physical package or be displayed in an e-mail or a portal.

The user needs to register the license key on the Global Registration Portal to get the activation code. Install the proper activation code rather than license key to activate/unlock some features.

After the activation code was installed successfully, reboot the Switch to activate the license.

To view the following window, click **Tools > DLMS Settings**, as shown below:



Figure 16-43 DLMS Settings Window

The fields that can be configured are described below:

Parameter	Description
Unit	Select the Switch unit ID that will be used here.
DLMS Activation Code	Enter the DLMS activation code. This code should be 25 characters long.

Click the **Apply** button to accept the changes made.

Appendix A - Password Recovery Procedure

This section describes the procedure for resetting passwords on the D-Link DGS-3630 Series Switch.

Authenticating any user who tries to access networks is necessary and important. The basic authentication method used to accept qualified users is through a local login, utilizing a Username and Password. Sometimes, passwords will be forgotten or destroyed, so network administrators need to reset these passwords. This section will explain how the **Password Recovery** feature can help network administrators reach this goal.

The following steps explain how to use the Password Recovery feature on this Switch to easily recover passwords. Complete these steps to reset the password:

- For security reasons, the Password Recovery feature requires the user to physically access the device. Therefore this feature is only applicable when there is a direct connection to the console port of the device. It is necessary for the user needs to attach a terminal or PC with terminal emulation to the console port of the Switch.
- Power on the Switch. After the **UART init** is loaded to 100%, the Switch will allow 2 seconds for the user to press the hotkey [^] (**Shift+6**) to enter the "Password Recovery Mode." Once the Switch enters the "Password Recovery Mode," all ports on the Switch will be disabled.

```

Boot Procedure                                     v2.00.002
-----
Power On Self Test ..... 100 %

MAC Address   : 80-26-89-8D-A7-00
H/W Version   : A1

Please Wait, Loading 2.10.008 Runtime Image ..... 100 %
UART init ..... 100 %

```

```

Password Recovery Mode
Switch(reset-config)#

```

In the "Password Recovery Mode" only the following commands can be used.

Command	Description
<code>no enable password</code>	This command is used to delete all account level passwords.
<code>no login password</code>	This command is used to clear the local login methods.
<code>no username</code>	This command is used to delete all local user accounts.
<code>password-recovery</code>	This command is used to initiate the password recovery procedure.
<code>reload</code>	This command is used to save and reboot the Switch.
<code>reload clear running-config</code>	This command is used to reset the running configuration to the factory default settings and then reboot the Switch.
<code>show running-config</code>	This command is used to display the current running configuration.
<code>show username</code>	This command is used to display local user account information.

Appendix B - System Log Entries

The following table lists all possible entries and their corresponding meanings that will appear in the System Log of this Switch.

802.1X

Log Description	Severity
<p>Event Description: 802.1X Authentication failure.</p> <p>Log Message: 802.1X authentication fail [due to <reason>] from (Username: <username>, <interface-id>, MAC: <mac-address>)</p> <p>Parameters Description:</p> <p>reason: The reason for the failed authentication.</p> <p>username: The user that is being authenticated.</p> <p>interface-id: The interface name.</p> <p>macaddr: The MAC address of the authenticated device.</p>	Critical
<p>Event Description: 802.1X Authentication successful.</p> <p>Log Message: 802.1X authentication success (Username: <username>, <interface-id>, MAC: <mac-address>)</p> <p>Parameters Description:</p> <p>username: The user that is being authenticated.</p> <p>interface-id: The interface name.</p> <p>macaddr: The MAC address of the authenticated device.</p>	Informational

AAA

Log Description	Severity
<p>Event Description: AAA global state is enabled or disabled.</p> <p>Log Message: AAA is <status></p> <p>Parameters Description:</p> <p>status: The status indicates the AAA enabled or disabled.</p>	Informational
<p>Event Description: Successful login.</p> <p>Log Message: Successful login through <exec-type> [from <client-ip>] authenticated by AAA <aaa-method> <server-ip> (Username: <username>)</p> <p>Parameters Description:</p> <p>exec-type: It indicates the EXEC types, e.g.: Console, Telnet, SSH, Web, Web (SSL).</p> <p>client-ip: It indicates the client's IP address if valid through IP protocol.</p> <p>aaa-method: It indicates the authentication method, e.g.: none, local, server.</p> <p>server-ip: It indicates the AAA server IP address if authentication method is remote server.</p> <p>username: It indicates the username for authentication.</p>	Informational
<p>Event Description: Login failed.</p> <p>Log Message: Login failed through <exec-type> [from <client-ip>] authenticated by AAA <aaa-method> <server-ip> (Username: <username>)</p> <p>Parameters Description:</p> <p>exec-type: It indicates the EXEC types, e.g.: Console, Telnet, SSH, Web, Web (SSL).</p> <p>client-ip: It indicates the client's IP address if valid through IP protocol.</p> <p>aaa-method: It indicates the authentication method, e.g.: none, local, server.</p> <p>server-ip: It indicates the AAA server IP address if authentication method is remote server.</p> <p>username: It indicates the username for authentication.</p>	Warning

Log Description	Severity
<p>Event Description: Login failed due to AAA server timeout or improper configuration.</p> <p>Log Message: Login failed through <exec-type> [from <client-ip>] due to AAA server <server-ip> timeout (Username: <username>)</p> <p>Parameters Description:</p> <p>exec-type: It indicates the EXEC types, e.g.: Console, Telnet, SSH, Web, Web (SSL).</p> <p>client-ip: It indicates the client's IP address if valid through IP protocol.</p> <p>server-ip: It indicates the AAA server IP address if authentication method is remote server.</p> <p>username: It indicates the username for authentication.</p>	Warning
<p>Event Description: Enable privilege successfully.</p> <p>Log Message: Successful enable privilege through <exec-type> [from <client-ip>] authenticated by AAA <aaa-method> <server-ip> (Username: <username>)</p> <p>Parameters Description:</p> <p>exec-type: It indicates the EXEC types, e.g.: Console, Telnet, SSH, Web, Web (SSL).</p> <p>client-ip: It indicates the client's IP address if valid through IP protocol.</p> <p>aaa-method: It indicates the authentication method, e.g.: none, local, server.</p> <p>server-ip: It indicates the AAA server IP address if authentication method is remote server.</p> <p>username: It indicates the username for authentication.</p>	Informational
<p>Event Description: Enable privilege failure.</p> <p>Log Message: Enable privilege failed through <exec-type> [from <client-ip>] authenticated by AAA <aaa-method> <server-ip> (Username: <username>)</p> <p>Parameters Description:</p> <p>exec-type: It indicates the EXEC types, e.g.: Console, Telnet, SSH, Web, Web (SSL).</p> <p>client-ip: It indicates the client's IP address if valid through IP protocol.</p> <p>aaa-method: It indicates the authentication method, e.g.: none, local, server.</p> <p>server-ip: It indicates the AAA server IP address if authentication method is remote server.</p> <p>username: It indicates the username for authentication.</p>	Warning
<p>Event Description: the remote server does not respond to the enable password authentication request.</p> <p>Log Message: Enable privilege failed through <exec-type> [from <client-ip>] due to AAA server <server-ip> timeout (Username: <username>)</p> <p>Parameters Description:</p> <p>exec-type: It indicates the EXEC types, e.g.: Console, Telnet, SSH, Web, Web (SSL).</p> <p>client-ip: It indicates the client's IP address if valid through IP protocol.</p> <p>server-ip: It indicates the AAA server IP address if authentication method is remote server.</p> <p>username: It indicates the username for authentication.</p>	Warning
<p>Event Description: RADIUS assigned a valid VLAN ID attributes.</p> <p>Log Message: RADIUS server <server-ip> assigned VID: <vid> to port <interface-id> (Username: <username>)</p> <p>Parameters Description:</p> <p>server-ip: It indicates the RADIUS server IP address.</p> <p>vid: The assign VLAN ID that authorized by from RADIUS server.</p> <p>interface-id: It indicates the port number of the client authenticated.</p> <p>username: It indicates the username for authentication.</p>	Informational
<p>Event Description: RADIUS assigned a valid bandwidth attributes.</p> <p>Log Message: RADIUS server <server-ip> assigned <direction> bandwidth: <threshold> to port <interface -id> (Username: <username>)</p> <p>Parameters Description:</p>	Informational

Log Description	Severity
<p>server-ip: It indicates the RADIUS server IP address.</p> <p>direction: It indicates the direction for bandwidth control, e.g.: ingress or egress.</p> <p>threshold: The assign threshold of bandwidth that authorized by from RADIUS server.</p> <p>interface-id: It indicates the port number of the client authenticated.</p> <p>username: It indicates the username for authentication.</p>	
<p>Event Description: RADIUS assigned a valid priority attributes.</p> <p>Log Message: RADIUS server <server-ip> assigned 802.1p default priority: <priority> to port <interface -id> (Username: <username>)</p> <p>Parameters Description:</p> <p>server-ip: It indicates the RADIUS server IP address.</p> <p>priority: The assign priority that authorized by from RADIUS server.</p> <p>interface-id: It indicates the port number of the client authenticated.</p> <p>username: It indicates the username for authentication.</p>	Informational
<p>Event Description: RADIUS assigned ACL script but fails to apply to the system due to insufficient resource.</p> <p>Log Message: RADIUS server <server-ip> assigns <username> ACL failure at port <interface -id> (<acl-script>)</p> <p>Parameters Description:</p> <p>server-ip: It indicates the RADIUS server IP address.</p> <p>username: It indicates the username for authentication.</p> <p>interface-id: It indicates the port number of the client authenticated.</p> <p>acl-script: The assign ACL script that authorized by from RADIUS server.</p>	Warning

ARP

Log Description	Severity
<p>Event Description: Gratuitous ARP detected duplicate IP.</p> <p>Log Message: Conflict IP was detected with this device (IP: <ipaddr>, MAC: <macaddr>, Port <[unitID:]portNum>, Interface: <ipif_name>)</p> <p>Parameters Description:</p> <p>ipaddr: The IP address which is duplicated with our device.</p> <p>macaddr: The MAC address of the device that has duplicated IP address as our device.</p> <p>unitID: 1.Integer value;2.Represent the id of the device in the stacking system.</p> <p>portNum: 1.Integer value;2.Represent the logic port number of the device.</p> <p>ipif_name: The name of the interface of the switch which has the conflict IP address.</p>	Warning

ARP Spoofing Prevention

Log Description	Severity
<p>Event Description: a fake ARP packet detect by ARP Spoofing Prevention.</p> <p>Log Message: Gateway <ipaddr> is under attack by <macaddr> from <intf-name></p> <p>Parameters Description:</p> <p>ipaddr: The IP address of gateway.</p> <p>macaddr: The MAC address of hacker.</p> <p>intf_name: The name of the interface of hacker.</p>	Warning

Auto Image

Log Description	Severity
<p>Event Description: This message means that Autoimage Firmware upgraded successfully.</p> <p>Log Message: The downloaded firmware was successfully executed by DHCP Autoimage update (TFTP Server IP: <ipaddr>)</p> <p>Parameters Description: ipaddr: TFTP Server IP address.</p>	Informational
<p>Event Description: This message means that Autoimage Firmware upgraded unsuccessfully.</p> <p>Log Message: The downloaded firmware was not successfully executed by DHCP Autoimage update (TFTP Server IP: <ipaddr>)</p> <p>Parameters Description: ipaddr: TFTP Server IP address.</p>	Informational

Auto Save

Log Description	Severity
<p>Event Description: Record the event when the configure information of DDP is saved automatically.</p> <p>Log Message: CONFIG-6-DDPSAVECONFIG: [Unit <unitID>], Configuration automatically saved to flash due to configuring from DDP (Username: <username>, IP: <ipaddr>)</p> <p>Parameters Description: Unit: Box ID. username: Represent current login user. ipaddr: Represent client IP address.</p>	Informational

Auto Surveillance VLAN

Log Description	Severity
<p>Event Description: When a new surveillance device is detected on an interface.</p> <p>Log Message: New surveillance device detected (<interface-id>, MAC: <mac-address>)</p> <p>Parameters Description: interface-id: Interface name. mac-address: Surveillance device MAC address.</p>	Informational
<p>Event Description: When an interface which is enabled surveillance VLAN joins the surveillance VLAN automatically.</p> <p>Log Message: <interface-id> add into surveillance VLAN <vid></p> <p>Parameters Description: interface-id: Interface name. vid: VLAN ID.</p>	Informational
<p>Event Description: When an interface leaves the surveillance VLAN and at the same time, no surveillance device is detected in the aging interval for that interface, the log message will be sent.</p> <p>Log Message: <interface-id> remove from surveillance VLAN <vid></p> <p>Parameters Description: interface-id: Interface name.</p>	Informational

Log Description	Severity
vid: VLAN ID.	

BGP

Log Description	Severity
<p>Event Description: BGP FSM with Peer has gone to the successfully established state.</p> <p>Log Message: BGP-6-ESTABLISH: BGP connection is successfully established (Peer:<ipaddr>)</p> <p>Parameters Description: ipaddr: IP address of BGP peer.</p>	Informational
<p>Event Description: BGP connection is normally closed.</p> <p>Log Message: BGP-6-NORMALCLOSE: BGP connection is normally closed (Peer:<ipaddr>)</p> <p>Parameters Description: ipaddr: IP address of BGP peer.</p>	Informational
<p>Event Description: BGP connection is closed due to error (Error Code, Error Sub code and Data fields Refer to RFC).</p> <p>Log Message: BGP-4-ERRRCLOSE: BGP connection is closed due to error (Code:<num> Subcode:<num> Field:<field> Peer:<ipaddr>)</p> <p>Parameters Description: num: Error Code or Error Sub code is defined in RFC 4271 etc. field: field value when an error happen. ipaddr: IP address of the BGP peer.</p>	Warning
<p>Event Description: Receive a BGP notify packet with an undefined error code or sub error code in RFC 4271.</p> <p>Log Message: BGP-4-RCVUNKOWNERR: BGP Notify: unknown Error code(num), Sub Error code(num), Peer:<ipaddr></p> <p>Parameters Description: num: Error Code or Error Sub code is defined in RFC 4271 etc. ipaddr: IP address of BGP peer.</p>	Warning
<p>Event Description: Receive a BGP update packet but the next hop points to a local interface.</p> <p>Log Message: BGP-4-BADNHOP: BGP Update Attr NHop: Erroneous NHop <ipaddr> Peer:<ipaddr></p> <p>Parameters Description: ipaddr: IP address of BGP peer.</p>	Warning
<p>Event Description: BGP connection is closed due to some events happens. (Event refer to RFC)</p> <p>Log Message: BGP-4-EVENTCLOSE: BGP connection is closed due to Event: <num> (Peer:<ipaddr>)</p> <p>Parameters Description: num: Event is defined in RFC 4271 etc. ipaddr: IP address of BGP peer.</p>	Warning
<p>Event Description: BGP connection is closed due to receive notify packet. (Error Code and Error Sub code refer to RFC).</p> <p>Log Message: BGP-4-NOTIFYCLOSE: BGP connection is closed due to Notify: Code <num> Subcode <num> (Peer:<ipaddr>)</p> <p>Parameters Description: num: Error Code or Error Sub code is defined in RFC 4271 etc.</p>	Warning

Log Description	Severity
ipaddr: IP address of BGP peer.	
Event Description: The number of BGP prefix received from this neighbor reaches the threshold. Log Message: BGP-6-PEERPFXMAX: The number of prefix received reaches <num>, max <limit> (Peer <ipaddr>) Parameters Description: num: The number of prefix received. limit: Max number of prefix allowed to receive. ipaddr: IP address of BGP peer.	Informational
Event Description: The total BGP prefix number received exceeds the limit. Log Message: BGP-6-TOTALPFXMAX: The total number of prefix received reaches max prefix limit	Informational
Event Description: BGP received unnecessary AS4-PATH attribute from new (4-bytes AS) BGP peer. Log Message: BGP-4-RCVUNNECEAS4PATH: Received AS4-PATH attribute from new (4-bytes AS) peer. (Peer <ipaddr>). Parameters Description: ipaddr: IP address of BGP peer.	Warning
Event Description: BGP received unnecessary AS4-AGGREGATOR attribute from new (4-bytes AS) BGP peer. Log Message: BGP-4-RCVUNNECEAS4AGGRE: Received AS4-AGGREGATOR attribute from new (4-bytes AS) peer. (Peer <ipaddr>) Parameters Description: ipaddr: IP address of BGP peer.	Warning
Event Description: BGP received AS_CONFED_SEQUENCE or AS_CONFED_SET path segment type in AS4-PATH attribute. Log Message: BGP-4-RCVASCONFEDINAS4PATH: Received AS_CONFED_SEQUENCE or AS_CONFED_SET path segment type in AS4-PATH attribute. (Peer <ipaddr>) Parameters Description: ipaddr: IP address of BGP peer.	Warning
Event Description: BGP received invalid AS4-PATH attribute. Log Message: BGP-4-RCVBADAS4PATH: Received invalid AS4-PATH attribute. Value: <STRING> (Peer <ipaddr>) Parameters Description: STRING: Detailed description about the invalid attribute. ipaddr: IP address of BGP peer.	Warning
Event Description: BGP received invalid AS4- AGGREGATOR attribute. Log Message: BGP-4-RCVBADAS4AGGRE: Received invalid AS4- AGGREGATOR attribute. Value: <STRING> (Peer <ipaddr>) Parameters Description: STRING: Detailed description about the invalid attribute. ipaddr: IP address of BGP peer.	Warning

BPDU Protection

Log Description	Severity
Event Description: Record the event when the BPDU attack happened. Log Message: <interface-id> enter STP BPDU under protection state (mode: <mode>)	Informational

Log Description	Severity
<p>Parameters Description:</p> <p>interface-id: Interface on which detected STP BPDU attack.</p> <p>mode: BPDU Protection mode of the interface.</p> <p>Mode can be drop, block, or shutdown.</p>	
<p>Event Description: Record the event when the STP BPDU attack recovered.</p> <p>Log Message: <interface-id> recover from BPDU under protection state</p> <p>Parameters Description:</p> <p>interface-id: Interface on which detected STP BPDU attack.</p>	Informational

CFM

Log Description	Severity
<p>Event Description: Cross-connect is detected</p> <p>Log Message: CFM cross-connect. VLAN:<vlanid>, Local(MD Level:<mdlevel>, Interface:<interface-id>, Direction:<mepdirection>) Remote(MEPID:<mepid>, MAC:<macaddr>)</p> <p>Parameters Description:</p> <p>vlanid: Represents the VLAN identifier of the MEP.</p> <p>mdlevel: Represents the MD level of the MEP.</p> <p>interface-id: Represents the interface number of the MEP.</p> <p>mepdirection: Can be "inward" or "outward".</p> <p>mepid: Represents the MEPID of the MEP. The value 0 means unknown MEPID.</p> <p>macaddr: Represents the MAC address of the MEP. The value all zeros mean unknown MAC address.</p> <p>Note: In CFM hardware mode, remote MEP information (mepid and macaddr) is unknown.</p>	Critical
<p>Event Description: Error CFM CCM packet is detected.</p> <p>Log Message: CFM error CCM. MD Level:<mdlevel>, VLAN:<vlanid>, Local(Interface:<interface-id>, Direction:<mepdirection>) Remote(MEPID:<mepid>, MAC:<macaddr>)</p> <p>Parameters Description:</p> <p>vlanid: Represents the VLAN identifier of the MEP.</p> <p>mdlevel: Represents MD level of the MEP.</p> <p>interface-id: Represents the interface number of the MEP.</p> <p>mepdirection: Can be "inward" or "outward".</p> <p>mepid: Represents the MEPID of the MEP. The value 0 means unknown MEPID.</p> <p>macaddr: Represents the MAC address of the MEP. The value all zeros means unknown MAC address.</p> <p>Note: In CFM hardware mode, remote MEP information (mepid and macaddr) is unknown.</p>	Warning
<p>Event Description: Cannot receive the remote MEP's CCM packet.</p> <p>Log Message: CFM remote down. MD Level:<mdlevel>, VLAN:<vlanid>, Local(Interface:<interface-id>, Direction:<mepdirection>)</p> <p>Parameters Description:</p> <p>vlanid: Represents the VLAN identifier of the MEP.</p> <p>mdlevel: Represents the MD level of the MEP.</p> <p>interface-id: Represents the interface number of the MEP.</p> <p>mepdirection: Represents the MEP direction, which can be "inward" or "outward".</p> <p>mepid: Represents the MEPID of the MEP.</p> <p>macaddr: Represents the MAC address of the MEP.</p>	Warning

Log Description	Severity
<p>Event Description: Remote MEP's MAC reports an error status.</p> <p>Log Message: CFM remote MAC error. MD Level:<mdlevel>, VLAN:<vlanid>, Local(Interface:<interface-id>, Direction:<mepdirection>)</p> <p>Parameters Description:</p> <p>vlanid: Represents the VLAN identifier of the MEP.</p> <p>mdlevel: Represents the MD level of the MEP.</p> <p>interface-id: Represents the interface number of the MEP.</p> <p>mepdirection: Represents the MEP direction, which can be "inward" or "outward".</p> <p>mepid: Represents the MEPID of the MEP.</p> <p>macaddr: Represents the MAC address of the MEP.</p>	Warning
<p>Event Description: Remote MEP detects CFM defects.</p> <p>Log Message: CFM remote detects a defect. MD Level:<mdlevel>, VLAN:<vlanid>, Local(Interface:<interface-id>, Direction:<mepdirection>)</p> <p>Parameters Description:</p> <p>vlanid: Represents the VLAN identifier of the MEP.</p> <p>mdlevel: Represents the MD level of the MEP.</p> <p>interface-id: Represents the interface number of the MEP.</p> <p>mepdirection: Represents the MEP direction, which can be "inward" or "outward".</p> <p>mepid: Represents the MEPID of the MEP.</p> <p>macaddr: Represents the MAC address of the MEP.</p>	Informational

CFM Extension

Log Description	Severity
<p>Event Description: AIS condition detected.</p> <p>Log Message: AIS condition detected. MD Level:<mdlevel>, VLAN:<vlanid>, Local(Interface:<interface-id>, Direction:<mepdirection>, MEPID:<mepid>)</p> <p>Parameters Description:</p> <p>vlanid: Represents the VLAN identifier of the MEP.</p> <p>mdlevel: Represents the MD level of the MEP.</p> <p>interface-id: Represents the interface number of the MEP.</p> <p>mepdirection: Represents the direction of the MEP. This can be "inward" or "outward".</p> <p>mepid: Represents the MEPID of the MEP.</p>	Notification
<p>Event Description: AIS condition cleared.</p> <p>Log Message: AIS condition cleared. MD Level:<mdlevel>, VLAN:<vlanid>, Local(Interface:<interface-id>, Direction:<mepdirection>, MEPID:<mepid>)</p> <p>Parameters Description:</p> <p>vlanid: Represents the VLAN identifier of the MEP.</p> <p>mdlevel: Represents the MD level of the MEP.</p> <p>interface-id: Represents the interface number of the MEP.</p> <p>mepdirection: Represents the direction of the MEP. This can be "inward" or "outward".</p> <p>mepid: Represents the MEPID of the MEP.</p>	Notification
<p>Event Description: LCK condition detected.</p> <p>Log Message: LCK condition detected. MD Level:<mdlevel>, VLAN:<vlanid>, Local(Interface:<interface-id>, Direction:<mepdirection>, MEPID:<mepid>)</p> <p>Parameters Description:</p> <p>vlanid: Represents the VLAN identifier of the MEP.</p> <p>mdlevel: Represents the MD level of the MEP.</p> <p>interface-id: Represents the interface number of the MEP.</p>	Notification

Log Description	Severity
mepdirection: Represents the direction of the MEP. This can be "inward" or "outward". mepid: Represents the MEPID of the MEP.	
Event Description: LCK condition cleared. Log Message: LCK condition cleared. MD Level:<mdlevel>, VLAN:<vlanid>, Local(Interface:<interface-id>, Direction:<mepdirection>, MEPID:<mepid>) Parameters Description: vlanid: Represents the VLAN identifier of the MEP. mdlevel: Represents the MD level of the MEP. interface-id: Represents the interface number of the MEP. mepdirection: Represents the direction of the MEP. This can be "inward" or "outward". mepid: Represents the MEPID of the MEP.	Notification

Configuration/Firmware

Log Description	Severity
Event Description: Firmware upgraded successfully. Log Message: [Unit <unitID>],Firmware upgraded by <session> successfully (Username: <username>[, IP: <ipaddr>, MAC: <macaddr>], Server IP: <serverIP>, File Name: <pathFile>) Parameters Description: unitID: The unit ID. session: The user's session. username: Represent current login user. ipaddr: Represent client IP address. macaddr: Represent client MAC address. serverIP: Server IP address. pathFile: Path and file name on server.	Informational
Event Description: Firmware upgraded unsuccessfully. Log Message: [Unit <unitID>],Firmware upgraded by <session> unsuccessfully (Username: <username>[, IP: <ipaddr>, MAC: <macaddr>], Server IP: <serverIP>, File Name: <pathFile>) Parameters Description: unitID: The unit ID. session: The user's session. username: Represent current login user. ipaddr: Represent client IP address. macaddr: Represent client MAC address. serverIP: Server IP address. pathFile: Path and file name on server.	Warning
Event Description: Firmware uploaded successfully. Log Message: [Unit <unitID>],Firmware uploaded by <session> successfully (Username: <username>[, IP: <ipaddr>, MAC: <macaddr>], Server IP: <serverIP>, File Name: <pathFile>) Parameters Description: unitID: The unit ID. session: The user's session. username: Represent current login user. ipaddr: Represent client IP address. macaddr: Represent client MAC address. serverIP: Server IP address.	Informational

Log Description	Severity
<p>pathFile: Path and file name on server.</p> <p>Event Description: Firmware uploaded unsuccessfully.</p> <p>Log Message: [Unit <unitID>],Firmware uploaded by <session> unsuccessfully (Username: <username>[, IP: <ipaddr>, MAC: <macaddr>], Server IP: <serverIP>, File Name: <pathFile>)</p> <p>Parameters Description:</p> <p>unitID: The unit ID.</p> <p>session: The user's session.</p> <p>username: Represent current login user.</p> <p>ipaddr: Represent client IP address.</p> <p>macaddr: Represent client MAC address.</p> <p>serverIP: Server IP address.</p> <p>pathFile: Path and file name on server.</p>	Warning
<p>Event Description: Configuration downloaded successfully.</p> <p>Log Message: [Unit <unitID>],Configuration downloaded by <session> successfully. (Username: <username>[, IP: <ipaddr>, MAC: <macaddr>], Server IP: <serverIP>, File Name: <pathFile>)</p> <p>Parameters Description:</p> <p>unitID: The unit ID.</p> <p>session: The user's session.</p> <p>username: Represent current login user.</p> <p>ipaddr: Represent client IP address.</p> <p>macaddr: Represent client MAC address.</p> <p>serverIP: Server IP address.</p> <p>pathFile: Path and file name on server.</p>	Informational
<p>Event Description: Configuration downloaded unsuccessfully.</p> <p>Log Message: [Unit <unitID>],Configuration downloaded by <session> unsuccessfully. (Username: <username>[, IP: <ipaddr>, MAC: <macaddr>], Server IP: <serverIP>, File Name: <pathFile>)</p> <p>Parameters Description:</p> <p>unitID: The unit ID.</p> <p>session: The user's session.</p> <p>username: Represent current login user.</p> <p>ipaddr: Represent client IP address.</p> <p>macaddr: Represent client MAC address.</p> <p>serverIP: Server IP address.</p> <p>pathFile: Path and file name on server.</p>	Warning
<p>Event Description: Configuration uploaded successfully.</p> <p>Log Message: [Unit <unitID>],Configuration uploaded by <session> successfully. (Username: <username>[, IP: <ipaddr>, MAC: <macaddr>], Server IP: <serverIP>, File Name: <pathFile>)</p> <p>Parameters Description:</p> <p>unitID: The unit ID.</p> <p>session: The user's session.</p> <p>username: Represent current login user.</p> <p>ipaddr: Represent client IP address.</p> <p>macaddr: Represent client MAC address.</p> <p>serverIP: Server IP address.</p> <p>pathFile: Path and file name on server.</p>	Informational
<p>Event Description: Configuration uploaded unsuccessfully.</p>	Warning

Log Description	Severity
<p>Log Message: [Unit <unitID>],Configuration uploaded by <session> unsuccessfully. (Username: <username>[, IP: <ipaddr>, MAC: <macaddr>], Server IP: <serverIP>, File Name: <pathFile>)</p> <p>Parameters Description:</p> <p>unitID: The unit ID.</p> <p>session: The user's session.</p> <p>username: Represent current login user.</p> <p>ipaddr: Represent client IP address.</p> <p>macaddr: Represent client MAC address.</p> <p>serverIP: Server IP address.</p> <p>pathFile: Path and file name on server.</p>	
<p>Event description: Configuration saved to flash by console.</p> <p>Log Message: [Unit <unitID>,]Configuration saved to flash by console (Username: <username>)</p> <p>Parameters description:</p> <p>unitID: The unit ID.</p> <p>username: Represent current login user.</p>	Informational
<p>Event description: Configuration saved to flash by remote.</p> <p>Log Message: [Unit <unitID>,]Configuration saved to flash (Username: <username>, IP: <ipaddr>)</p> <p>Parameters description:</p> <p>unitID: The unit ID.</p> <p>username: Represent current login user.</p> <p>ipaddr: Represent client IP address.</p>	Informational
<p>Event description: Configuration saved to flash by console.</p> <p>Log Message: [Unit <unitID>,]System log saved to flash by console (Username: <username>)</p> <p>Parameters description:</p> <p>unitID: The unit ID.</p> <p>username: Represent current login user.</p>	Informational
<p>Event description: Configuration saved to flash by remote.</p> <p>Log Message: [Unit <unitID>,]System log saved to flash (Username: <username>, IP: <ipaddr>)</p> <p>Parameters description:</p> <p>unitID: The unit ID.</p> <p>username: Represent current login user.</p> <p>ipaddr: Represent client IP address.</p>	Informational
<p>Event Description: Unknown type files downloaded unsuccessfully.</p> <p>Log Message: [Unit <unitID>],Downloaded by <session> unsuccessfully. (Username: <username>[, IP: <ipaddr>, MAC: <macaddr>], Server IP: <serverIP>, File Name: <pathFile>)</p> <p>Parameters Description:</p> <p>unitID: The unit ID.</p> <p>session: The user's session.</p> <p>username: Represent current login user.</p> <p>ipaddr: Represent client IP address.</p> <p>macaddr: Represent client MAC address.</p> <p>serverIP: Server IP address.</p> <p>pathFile: Path and file name on server.</p>	Warning

NOTE:

- The user's session refers to Console, Web, SNMP, Telnet, SSH, and DDP sessions.
- If the Switch is in the standalone state, there will be no unit ID in the log message.
- If the configuration or firmware was downloaded or uploaded through the console, there will be no IP address and MAC address information in the log message.

DAD

Log Description	Severity
<p>Event Description: When DUT receives Neighbor Solicitation (NS) message with reduplicated address in the DAD duration, DUT will add a log.</p> <p>Log Message: Duplicate address <ipv6address> on <interface-id> via receiving Neighbor Solicitation Messages</p> <p>Parameters Description: ipv6address: IPv6 address in Neighbor Solicitation Messages. interface-id: port interface ID.</p>	Warning
<p>Event Description: When DUT receives Neighbor Advertisement (NA) message with reduplicated address in the DAD duration, DUT will add a log.</p> <p>Log Message: Duplicate address <ipv6address> on <interface-id> via receiving Neighbor Advertisement Messages</p> <p>Parameters Description: ipv6address: IPv6 address in Neighbor Advertisement Messages. interface-id: port interface ID.</p>	Warning

DDM

Log Description	Severity
<p>Event Description: when the any of SFP parameters exceeds from the warning threshold.</p> <p>Log Message: Optical transceiver <interface-id> <component> <high-low> warning threshold exceeded</p> <p>Parameters Description: interface-id: port interface ID. component: DDM threshold type. It can be one of the following types: temperature supply voltage bias current TX power RX power high-low: High or low threshold.</p>	Warning
<p>Event Description: when the any of SFP parameters exceeds from the alarm threshold.</p> <p>Log Message: Optical transceiver <interface-id> <component> <high-low> alarm threshold exceeded</p> <p>Parameters Description: interface-id: port interface ID. component: DDM threshold type. It can be one of the following types: temperature</p>	Critical

Log Description	Severity
supply voltage bias current TX power RX power high-low: High or low threshold.	
Event Description: when the any of SFP parameters recovers from the warning threshold. Log Message: Optical transceiver <interface-id> <component> back to normal Parameters Description: interface-id: port interface ID. component: DDM threshold type. It can be one of the following types: temperature supply voltage bias current TX power RX power	Warning

DHCPv6 Client

Log Description	Severity
Event Description: DHCPv6 client interface administrator state changed. Log Message: DHCPv6 client on interface <ipif-name> changed state to [enabled disabled] Parameters Description: <ipif-name>: Name of the DHCPv6 client interface.	Informational
Event Description: DHCPv6 client obtains an IPv6 address from a DHCPv6 server. Log Message: DHCPv6 client obtains an ipv6 address <ipv6address> on interface <ipif-name> Parameters Description: ipv6address: IPv6 address obtained from a DHCPv6 server. ipif-name: Name of the DHCPv6 client interface.	Informational
Event Description: The IPv6 address obtained from a DHCPv6 server starts renewing. Log Message: The IPv6 address <ipv6address> on interface <ipif-name> starts renewing Parameters Description: ipv6address: IPv6 address obtained from a DHCPv6 server. ipif-name: Name of the DHCPv6 client interface.	Informational
Event Description: The IPv6 address obtained from a DHCPv6 server renews success. Log Message: The IPv6 address <ipv6address> on interface <ipif-name> renews success Parameters Description: ipv6address: IPv6 address obtained from a DHCPv6 server. ipif-name: Name of the DHCPv6 client interface.	Informational
Event Description: The IPv6 address obtained from a DHCPv6 server starts rebinding. Log Message: The IPv6 address <ipv6address> on interface <ipif-name> starts rebinding	Informational

Log Description	Severity
Parameters Description: ipv6address: IPv6 address obtained from a DHCPv6 server. ipif-name: Name of the DHCPv6 client interface.	
Event Description: The IPv6 address obtained from a DHCPv6 server rebinds success. Log Message: The IPv6 address <ipv6address> on interface <ipif-name> rebinds success Parameters Description: ipv6address: IPv6 address obtained from a DHCPv6 server. ipif-name: Name of the DHCPv6 client interface.	Informational
Event Description: The IPv6 address from a DHCPv6 server was deleted. Log Message: The IPv6 address <ipv6address> on interface <ipif-name> was deleted Parameters Description: ipv6address: IPv6 address obtained from a DHCPv6 server. ipif-name: Name of the DHCPv6 client interface.	Informational
Event Description: DHCPv6 client PD interface administrator state changed. Log Message: DHCPv6 client PD on interface <intf-name> changed state to <enabled disabled> Parameters Description: intf-name: Name of the DHCPv6 client PD interface.	Informational
Event Description: DHCPv6 client PD obtains an IPv6 prefix from a delegation router. Log Message: DHCPv6 client PD obtains an ipv6 prefix <ipv6networkaddr> on interface <intf-name> Parameters Description: ipv6networkaddr: IPv6 prefix obtained from a delegation router. intf-name: Name of the DHCPv6 client PD interface.	Informational
Event Description: The IPv6 prefix obtained from a delegation router starts renewing. Log Message: The IPv6 prefix <ipv6networkaddr> on interface <intf-name> starts renewing Parameters Description: ipv6networkaddr: IPv6 prefix obtained from a delegation router. intf-name: Name of the DHCPv6 client PD interface.	Informational
Event Description: The IPv6 prefix obtained from a delegation router renews success. Log Message: The IPv6 prefix <ipv6networkaddr> on interface <intf-name> renews success. Parameters Description: ipv6anetworkaddr: IPv6 prefix obtained from a delegation router. intf-name: Name of the DHCPv6 client PD interface.	Informational
Event Description: The IPv6 prefix obtained from a delegation router starts rebinding. Log Message: The IPv6 prefix <ipv6networkaddr> on interface <intf-name> starts rebinding Parameters Description: ipv6address: IPv6 prefix obtained from a delegation router. intf-name: Name of the DHCPv6 client PD interface.	Informational
Event Description: The IPv6 prefix obtained from a delegation router rebinds success. Log Message: The IPv6 prefix <ipv6networkaddr> on interface <intf-name> rebinds success Parameters Description: ipv6address: IPv6 prefix obtained from a delegation router. intf-name: Name of the DHCPv6 client PD interface.	Informational

Log Description	Severity
Event Description: The IPv6 prefix from a delegation router was deleted. Log Message: The IPv6 prefix <ipv6networkaddr> on interface <intf-name> was deleted Parameters Description: ipv6address: IPv6 prefix obtained from a delegation router. intf-name: Name of the DHCPv6 client PD interface.	Informational

DHCPv6 Relay

Log Description	Severity
Event Description: DHCPv6 relay on a specify interface's administrator state changed. Log Message: DHCPv6 relay on interface <ipif-name> changed state to [enabled disabled] Parameters Description: <ipif-name>: Name of the DHCPv6 relay agent interface.	Informational

DHCPv6 Server

Log Description	Severity
Event Description: The address of the DHCPv6 Server pool is used up. Log Message: The address of the DHCPv6 Server pool <pool-name> is used up Parameters Description: <pool-name>: Name of the DHCPv6 Server pool.	Informational
Event Description: The number of allocated IPv6 addresses is equal to 4096. Log Message: The number of allocated ipv6 addresses of the DHCPv6 Server pool is equal to 4096	Informational

DLMS

Log Description	Severity
Event Description: Input an illegal activation code. Log Message: Illegal activation code (AC: <string25>) Parameters Description: <string25>: Activation Code.	Informational
Event Description: License Expired. Log Message: License expired (license:<license-model>, AC: <string25>) Parameters Description: <license-model>: License Model Name. <string25>: Activation Code.	Critical
Event Description: License successfully installed. Log Message: License successfully installed (license:<license-model>, AC: <string25>) Parameters Description: <license-model>: License Model Name. <string25>: Activation Code.	Informational

Log Description	Severity
Event Description: The Activation Code is unbound. Log Message: Unbound Activation Code (AC: <string25>) Parameters Description: <string25>: Activation Code.	Critical
Event Description: When a license is going to expire, it will be logged before 30 days. Log Message: License will expire in 30 days. (license:<license-model>, AC: <string25>) Parameters Description: <license-model>: License Model Name. <string25>: Activation Code.	Informational

DNS Resolver

Log Description	Severity
Event Description: Duplicate Domain name cache added, leads a dynamic domain name cache be deleted. Log Message: Duplicate Domain name case name: <domainname>, static IP: <ipaddr>, dynamic IP:<ipaddr> Parameters Description: domainname: the domain name string. ipaddr: IP address.	Informational

DoS Prevention

Log Description	Severity
Event Description: Detect DOS attack. Log Message: <dos-type> is dropped from (IP: <ip-address> Port <interface-id>) Parameters Description: dos-type: DOS attack type. ip-address: IP address. interface-id: Interface name.	Notification

DULD

Log Description	Severity
Event Description: A unidirectional link has been detected on this port. Log Message: DULD <INTERFACE-ID> is detected as unidirectional link Parameters Description: INTERFACE-ID: The interface name.	Warning

Dynamic ARP Inspection

Log Description	Severity
Event Description: Detect illegal ARP packet. Log Message: Illegal ARP <type> packets (IP: <ip-address>, MAC: <mac-address>, VLAN <vlan-id>, on <interface-id>)	Warning

Log Description	Severity
Parameters Description: type: The type of ARP packet, it indicates that ARP packet is request or ARP response. ipaddr: IP address. macaddr: MAC address. vlanid: VLAN ID. interface-id: Interface name.	
Event Description: Detect legal ARP packet. Log Message: Legal ARP <type> packets (IP: <ip-address>, MAC: <mac-address>, VLAN <vlan-id>, on <interface-id>) Parameters Description: type: The type of ARP packet, it indicates that ARP packet is request or ARP response. ipaddr: IP address. macaddr: MAC address. vlanid: VLAN ID. interface-id: Interface name.	Informational

ERPS

Log Description	Severity
Event Description: manual switch is issued. Log Message: "Manual switch is issued on node (MAC: <macaddr>, instance <InstanceID>)" Parameters Description: macaddr: MAC address. InstanceID: Instance ID.	Warning
Event Description: signal fail is detected. Log Message: "Signal fail detected on node (MAC: <macaddr>, instance <InstanceID>)" Parameters Description: macaddr: MAC address. InstanceID: Instance ID.	Warning
Event Description: Signal fail cleared. Log Message: "Signal fail cleared on node(MAC: <macaddr>, instance <InstanceID>)" Parameters Description: macaddr: MAC address. InstanceID: Instance ID.	Warning
Event Description: Force switch is issued. Log Message: "Force switch is issued on node (MAC: <macaddr>, instance <InstanceID>)" Parameters Description: macaddr: MAC address. InstanceID: Instance ID.	Warning
Event Description: Clear command is issued. Log Message: "Clear command is issued on node (MAC: <macaddr>, instance <InstanceID>)" Parameters Description: macaddr: MAC address.	Warning

Log Description	Severity
InstanceID: Instance ID.	
Event Description: "RPL owner conflicted. Log Message: "RPL owner conflicted on the node (MAC: <macaddr>, instance <InstanceID>)" Parameters Description: macaddr: MAC address. InstanceID: Instance ID.	Warning

Ethernet OAM

Log Description	Severity
Event Description: Dying gasp event (remote). Log Message: OAM dying gasp event received (Port<interface-id>) Parameters Description: interface-id: The interface name.	Warning
Event Description: Dying gasp event (local). Log Message: Device encountered an OAM dying gasp event.	Warning
Event Description: Critical event (remote). Log Message: OAM critical event received (Port<interface-id>) Parameters Description: interface-id: The interface name.	Warning
Event Description: Critical event (local). Log Message: Device encountered an OAM critical event (Port<interface-id>, <condition>) Parameters Description: interface-id: The interface name. condition: Display string for the condition of generating critical link event. e.g. OAM disable, Port shutdown, Port link down, Packet overload.	Warning
Event Description: Errored Symbol Period Event (remote). Log Message: Errored symbol period event received (Port <interface-id>) Parameters Description: interface-id: The interface name.	Warning
Event Description: Errored Frame Event (remote). Log Message: Errored frame event received(Port <interface-id>) Parameters Description: interface-id: The interface name.	Warning
Event Description: Errored Frame Period Event (remote). Log Message: Errored frame period event received(Port <interface-id>) Parameters Description: interface-id: The interface name.	Warning
Event Description: Errored Frame Seconds Summary Event (remote). Log Message: Errored frame seconds summary event received (Port <interface-id>) Parameters Description: interface-id: The interface name.	Warning
Event Description: Remote loopback start. Log Message: OAM Remote loopback started (Port <interface-id>) Parameters Description: interface-id: The interface name.	Warning

Log Description	Severity
Event Description: Remote loopback stop. Log Message: OAM Remote loopback stopped (Port <interface-id>) Parameters Description: interface-id: The interface name.	Warning
Event description: Errored Symbol Period Event (local) Log Message: Device encountered an errored symbol period event (Port <interface-id>) Parameters description: interface-id: The interface name.	Warning
Event description: Errored Frame Event (local) Log Message: Device encountered an errored frame event (Port <interface-id>) Parameters description: interface-id: The interface name.	Warning
Event description: Errored Frame Period Event (local) Log Message: Device encountered an errored frame period event (Port <interface-id>) Parameters description: interface-id: The interface name.	Warning
Event description: Errored Frame Seconds Summary Event (local) Log Message: Device encountered an errored frame seconds summary event (Port <interface-id>) Parameters description: interface-id: The interface name.	Warning

Interface

Log Description	Severity
Event Description: Port link up. Log Message: Port <portNum> link up, <link state> Parameters Description: portNum: 1.Interger value;2.Represent the logic port number of the device. link state: for ex: , 100Mbps FULL duplex.	Informational
Event Description: Port link down. Log Message: Port <portNum> link down Parameters Description: portNum: 1.Interger value;2.Represent the logic port number of the device.	Informational

IP Directed Broadcast

Log Description	Severity
Event Description: IP Directed-broadcast rate exceed 50 packets per second on a certain subnet. Log Message: IP Directed Broadcast packet rate is high on subnet. [(IP: %s)] Parameters Description: IP: the Broadcast IP destination address.	Informational
Event Description: IP Directed-broadcast rate exceed 100 packets per second. Log Message: IP Directed Broadcast rate is high	Informational

IP Source Guard

Log Description	Severity
<p>Event Description: When there is no hardware rule resource to set DHCP Snooping entry into IPSG table, the syslog will be record.</p> <p>Log Message: Failed to set IPSG entry due to no hardware rule resource. (IP: <IPADDR>, MAC: <MACADDR>, VID: <VLANID>, Interface <INTERFACE-ID>)</p> <p>Parameters Description: ipaddr: IP address. macaddr: MAC address. vlanid: VLAN ID. interface-id: Interface name.</p>	Warning

IPv6 Snooping

Log Description	Severity
<p>Event Description: IPv6 data glean failed.</p> <p>Log Message: Failed to glean (IP: <IPADDR>, MAC: <MACADDR>, VID: <VLANID>, Port <INTERFACE-ID>)</p> <p>Parameters Description: IPADDR: The IP address of IPv6 Snooping entry. MACADDR: The MAC address of IPv6 Snooping entry. VLANID: The VID of IPv6 Snooping entry. INTERFACE_ID: The port of IPv6 Snooping entry.</p>	Notification
<p>Event Description: IPv6 data glean succeeded.</p> <p>Log Message: Glean to recover (IP: <IPADDR>, MAC: <MACADDR>, VID: <VLANID>, Port <INTERFACE-ID>)</p> <p>Parameters Description: IPADDR: The IP address of IPv6 Snooping entry. MACADDR: The MAC address of IPv6 Snooping entry. VLANID: The VID of IPv6 Snooping entry. INTERFACE_ID: The port of IPv6 Snooping entry.</p>	Informational

IPv6 Source Guard

Log Description	Severity
<p>Event Description: When there is no hardware rule resource to set IPv6 Snooping entry into IPv6SG table, the syslog will be record.</p> <p>Log Message: Failed to set IPv6SG entry due to no hardware rule resource. (IP: <IPADDR>, MAC: <MACADDR>, VID: <VLANID>, Interface <INTERFACE-ID>)</p> <p>Parameters Description: ipaddr: The IPv6 address of IPv6 Snooping entry. macaddr: The MAC address of IPv6 Snooping entry. vlanid: The VID of IPv6 Snooping entry. interface-id: The interface of IPv6 Snooping entry.</p>	Warning

LACP

Log Description	Severity
Event Description: Link Aggregation Group link up. Log Message: Link Aggregation Group <group_id> link up Parameters Description: group_id: The group id of the link up aggregation group.	Informational
Event Description: Link Aggregation Group link down. Log Message: Link Aggregation Group <group_id> link down Parameters Description: group_id: The group id of the link down aggregation group.	Informational
Event Description: Member port attach to Link Aggregation Group. Log Message: <ifname> attach to Link Aggregation Group <group_id> Parameters Description: ifname: The interface name of the port that attach to aggregation group. group_id: The group id of the aggregation group that port attach to.	Informational
Event Description: Member port detach from Link Aggregation Group. Log Message: <ifname> detach from Link Aggregation Group <group_id> Parameters Description: ifname: The interface name of the port that detach from aggregation group. group_id: The group id of the aggregation group that port detach from.	Informational

LBD

Log Description	Severity
Event Description: Loop back is detected under port-based mode. Log Message: IfInfo LBD loop occurred Parameters Description: IfInfo: The interface info.	Critical
Event Description: Port recovered from LBD blocked state under port-based mode. Log Message: IfInfo LBD loop recovered Parameters Description: IfInfo: The interface info.	Critical
Event Description: Loop back is detected under VLAN-based mode. Log Message: IfInfo VLAN <vlanID> LBD loop occurred Parameters Description: IfInfo: The interface info. vlanID: The VLAN ID number.	Critical
Event Description: Port recovered from LBD blocked state under VLAN-based mode. Log Message: IfInfo VLAN <vlanID> LBD loop recovered Parameters Description: IfInfo: The interface info. vlanID: The VLAN ID number.	Critical
Event Description: The number of VLANs that loop back has occurred hit the specified number. Log Message: Loop VLAN numbers overflow	Critical

LLDP-MED

Log Description	Severity
<p>Event Description: LLDP-MED topology change detected.</p> <p>Log Message: LLDP-MED topology change detected (on port <portNum>. chassis id: <chassisType>, <chassisID>, port id: <portType>, <portID>, device class: <deviceClass>)</p> <p>Parameters Description:</p> <p>portNum: The port number.</p> <p>chassisType: chassis ID subtype.</p> <p>Value list:</p> <ol style="list-style-type: none"> 1. chassisComponent(1) 2. interfaceAlias(2) 3. portComponent(3) 4. macAddress(4) 5. networkAddress(5) 6. interfaceName(6) 7. local(7) <p>chassisID: chassis ID.</p> <p>portType: port ID subtype.</p> <p>Value list:</p> <ol style="list-style-type: none"> 1. interfaceAlias(1) 2. portComponent(2) 3. macAddress(3) 4. networkAddress(4) 5. interfaceName(5) 6. agentCircuitId(6) 7. local(7) <p>portID: port ID.</p> <p>deviceClass: LLDP-MED device type.</p>	Notification
<p>Event Description: Conflict LLDP-MED device type detected.</p> <p>Log Message: Conflict LLDP-MED device type detected (on port <portNum>, chassis id: <chassisType>, <chassisID>, port id: <portType>, <portID>, device class: <deviceClass>)</p> <p>Parameters Description:</p> <p>portNum: The port number.</p> <p>chassisType: chassis ID subtype.</p> <p>Value list:</p> <ol style="list-style-type: none"> 1. chassisComponent(1) 2. interfaceAlias(2) 3. portComponent(3) 4. macAddress(4) 5. networkAddress(5) 6. interfaceName(6) 7. local(7) <p>chassisID: chassis ID.</p> <p>portType: port ID subtype.</p> <p>Value list:</p> <ol style="list-style-type: none"> 1. interfaceAlias(1) 2. portComponent(2) 3. macAddress(3) 4. networkAddress(4) 	Notification

Log Description	Severity
5. interfaceName(5) 6. agentCircuitId(6) 7. local(7) portID: port ID. deviceClass: LLDP-MED device type.	
Event Description: Incompatible LLDP-MED TLV set detected. Log Message: Incompatible LLDP-MED TLV set detected (on port <portNum>, chassis id: <chassisType>, <chassisID>, port id: <portType>, <portID>, device class: <deviceClass>) Parameters Description: portNum: The port number. chassisType: chassis ID subtype. Value list: 1. chassisComponent(1) 2. interfaceAlias(2) 3. portComponent(3) 4. macAddress(4) 5. networkAddress(5) 6. interfaceName(6) 7. local(7) chassisID: chassis ID. portType: port ID subtype. Value list: 1. interfaceAlias(1) 2. portComponent(2) 3. macAddress(3) 4. networkAddress(4) 5. interfaceName(5) 6. agentCircuitId(6) 7. local(7) portID: port ID. deviceClass: LLDP-MED device type.	Notification

Login/Logout

Log Description	Severity
Event Description: Login through console successfully. Log Message: [Unit <unitID>,)Successful login through Console (Username: <username>) Parameters Description: unitID: The unit ID. username: Represent current login user.	Informational
Event Description: Login through console unsuccessfully. Log Message: [Unit <unitID>,) Login failed through Console (Username: <username>) Parameters Description: unitID: The unit ID. username: Represent current login user.	Warning
Event Description: Console session timed out. Log Message: [Unit <unitID>,) Console session timed out (Username: <username>)	Informational

Log Description	Severity
Parameters Description: unitID: The unit ID. username: Represent current login user.	
Event Description: Logout through console. Log Message: [Unit <unitID>,) Logout through Console (Username: <username>) Parameters Description: unitID: The unit ID. username: Represent current login user.	Informational
Event Description: Login through Telnet successfully. Log Message: Successful login through Telnet (Username: <username>, IP: <ipaddr>) Parameters Description: username: Represent current login user. ipaddr: Represent client IP address.	Informational
Event Description: Login through Telnet unsuccessfully. Log Message: Login failed through Telnet (Username: <username>, IP: <ipaddr>) Parameters Description: username: Represent current login user. ipaddr: Represent client IP address.	Warning
Event Description: Telnet session timed out. Log Message: Telnet session timed out (Username: <username>, IP: <ipaddr>) Parameters Description: username: Represent current login user. ipaddr: Represent client IP address.	Informational
Event Description: Logout through Telnet. Log Message: Logout through Telnet (Username: <username>, IP: <ipaddr>) Parameters Description: username: Represent current login user. ipaddr: Represent client IP address.	Informational
Event Description: Login through SSH successfully. Log Message: Successful login through SSH (Username: <username>, IP: <ipaddr>) Parameters Description: username: Represent current login user. ipaddr: Represent client IP address.	Informational
Event Description: Login through SSH unsuccessfully. Log Message: Login failed through SSH (Username: <username>, IP: <ipaddr>) Parameters Description: username: Represent current login user. ipaddr: Represent client IP address.	Critical
Event Description: SSH session timed out. Log Message: SSH session timed out (Username: <username>, IP: <ipaddr>) Parameters Description: username: Represent current login user. ipaddr: Represent client IP address.	Informational
Event Description: Logout through SSH. Log Message: Logout through SSH (Username: <username>, IP: <ipaddr>) Parameters Description: username: Represent current login user. ipaddr: Represent client IP address.	Informational

MAC

Log Description	Severity
<p>Event Description: the host has passed MAC authentication.</p> <p>Log Message: MAC-based Access Control host login success (MAC: <mac-address>, <interface-id>, VID: <vlan-id>)</p> <p>Parameters Description: mac-address: the host MAC addresses. interface-id: the interface on which the host is authenticated. vlan-id: the VLAN ID on which the host exists.</p>	Informational
<p>Event Description: the host has aged out.</p> <p>Log Message: MAC-based Access Control host aged out (MAC: <mac-address>, <interface-id>, VID: <vlan-id>)</p> <p>Parameters Description: mac-address: the host MAC addresses. interface-id: the interface on which the host is authenticated. vlan-id: the VLAN ID on which the host exists.</p>	Informational
<p>Event Description: the host failed to pass the authentication.</p> <p>Log Message: MAC-based Access Control host login fail (MAC: <mac-address>, <interface-id>, VID: <vlan-id>)</p> <p>Parameters Description: mac-address: the host MAC addresses. interface-id: the interface on which the host is authenticated. vlan-id: the VLAN ID on which the host exists.</p>	Critical
<p>Event Description: the authorized user number on the whole device has reached the maximum user limit.</p> <p>Log Message: MAC-based Access Control enters stop learning state</p>	Warning
<p>Event Description: the authorized user number on the whole device is below the maximum user limit in a time interval.</p> <p>Log Message: MAC-based Access Control recovers from stop learning state</p>	Warning
<p>Event Description: the authorized user number on an interface has reached the maximum user limit.</p> <p>Log Message: <interface-id> enters MAC-based Access Control stop learning state</p> <p>Parameters Description: interface-id: the interface on which the host is authenticated.</p>	Warning
<p>Event Description: the authorized user number on an interface is below the maximum user limit in a time interval.</p> <p>Log Message: <interface-id> recovers from MAC-based Access Control stop learning state</p> <p>Parameters Description: interface-id: the interface on which the host is authenticated.</p>	Warning

MLAG

Log Description	Severity
<p>Event Description: MLAG group link change.</p> <p>Log Message: Multi-Chassis Link Aggregation Group <group id > <link status></p> <p>Parameters Description: group id: The MLAG group ID.</p>	Informational

Log Description	Severity
<p>Link status: The link status.</p> <p>Value list:</p> <ol style="list-style-type: none"> link up: The first member port of the group is link up. link down: The last member port of the group is link down. 	
<p>Event Description: MLAG logical switch change.</p> <p>Log Message: The MLAG logical switch is <status></p> <p>Parameters Description:</p> <p>status: The logical switch status.</p> <p>Value list:</p> <ol style="list-style-type: none"> built up: The MLAG logical switch is established. destroy: The MLAG logical switch is destroyed. 	Informational
<p>Event Description: MLAG join the conflict.</p> <p>Log Message: The MLAG state is conflict (<conflict>)</p> <p>Parameters Description:</p> <p>conflict: The causes of conflict.</p> <p>Value list:</p> <ol style="list-style-type: none"> domain is different: The domain is different from the peer device. device id is same: The device ID is the same as the peer switch. hello interval is different: The hello interval is different from the peer switch. MLAG found third device: A third device connected to the MLAG. peer-link is not set: The peer-link interface is not set. 	Informational
<p>Event Description: The MLAG group uses a different configuration as the peer switch.</p> <p>Log Message: The MLAG group <group_id> is down (<causes>)</p> <p>Parameters Description:</p> <p>group id: The MLAG group ID.</p> <p>causes: The cause of configuration conflict.</p> <p>Value list:</p> <ol style="list-style-type: none"> group ID is not existed: The MLAG group ID does not exist. algorithm is different: The link aggregation algorithm is different. total member port is over maximum number: The summary of local port numbers and peer port numbers are over the maximum number supported. 	Informational

MPLS

Log Description	Severity
<p>Event Description: LSP is up.</p> <p>Log Message: LSP <lsp_id> is up</p> <p>Parameters Description:</p> <p>lsp_id: The established LSP ID.</p>	Informational
<p>Event Description: LSP is down.</p> <p>Log Message: LSP <lsp_id> is down</p> <p>Parameters Description:</p> <p>lsp_id: The deleted LSP ID.</p>	Informational

MSTP Debug

Log Description	Severity
<p>Event Description: Topology changed.</p> <p>Log Message: Topology changed ([[Instance:<InstanceID>] , <portNum> ,MAC: <macaddr>])</p> <p>Parameters Description:</p> <p>InstanceID: Instance ID.</p> <p>portNum: Port ID.</p> <p>macaddr: MAC address.</p>	Notification
<p>Event Description: Spanning Tree new Root Bridge.</p> <p>Log Message: [CIST CIST Regional MSTI Regional] New Root bridge selected ([Instance: <InstanceID>],MAC: <macaddr>, Priority:<value>)</p> <p>Parameters Description:</p> <p>InstanceID: Instance ID.</p> <p>macaddr: Mac address.</p> <p>value: priority value.</p>	Informational
<p>Event Description: Spanning Tree Protocol is enabled.</p> <p>Log Message: Spanning Tree Protocol is enabled</p>	Informational
<p>Event Description: Spanning Tree Protocol is disabled.</p> <p>Log Message: Spanning Tree Protocol is disabled</p>	Informational
<p>Event Description: New root port.</p> <p>Log Message: New root port selected ([[Instance:<InstanceID>], <portNum>])</p> <p>Parameters Description:</p> <p>InstanceID: Instance ID.</p> <p>portNum: Port ID.</p>	Notification
<p>Event Description: Spanning Tree port status changed.</p> <p>Log Message: Spanning Tree port status change ([[Instance:<InstanceID>], <portNum>]) <old_status> -> <new_status></p> <p>Parameters Description:</p> <p>InstanceID: Instance ID.</p> <p>portNum: Port ID.</p> <p>old_status:</p> <p>new_status:</p> <p>The port of STP state. The value may be Disable, Discarding, Learning, Forwarding.</p>	Notification
<p>Event Description: Spanning Tree port role changed.</p> <p>Log Message: Spanning Tree port role change. ([[Instance:<InstanceID>], <portNum>]) <old_role> -> <new_role></p> <p>Parameters Description:</p> <p>InstanceID: Instance ID.</p> <p>portNum: Port ID.</p> <p>old_role:</p> <p>new_status:</p> <p>The port role of stp. The value may be DisabledPort, AlternatePort, BackupPort, RootPort, DesignatedPort, MasterPort.</p>	Informational
<p>Event Description: Spanning Tree instance created.</p> <p>Log Message: Spanning Tree instance created. (Instance:<InstanceID>)</p> <p>Parameters Description:</p> <p>InstanceID: Instance ID.</p>	Informational
<p>Event Description: Spanning Tree instance deleted.</p> <p>Log Message: Spanning Tree instance deleted. (Instance:<InstanceID>)</p>	Informational

Log Description	Severity
Parameters Description: InstanceID: Instance ID.	
Event Description: Spanning Tree Version changed. Log Message: Spanning Tree version change.(New version:<new_version>) Parameters Description: new_version: New STP version.	Informational
Event Description: Spanning Tree MST configuration ID name and revision level changed. Log Message: Spanning Tree MST configuration ID name and revision level change (name:<name> revision level <revision_level>) Parameters Description: name: New name. revision_level: New revision level.	Informational
Event Description: Spanning Tree MST configuration ID VLAN mapping table deleted. Log Message: Spanning Tree MST configuration ID VLAN mapping table change (instance: <InstanceID> delete vlan <startvlanid> [- <endvlanid>]) Parameters Description: InstanceID: Instance ID. startvlanid-endvlanid: VLAN list.	Informational
Event Description: Spanning Tree MST configuration ID VLAN mapping table added. Log Message: Spanning Tree MST configuration ID VLAN mapping table change (instance: <InstanceID> add vlan <startvlanid> [- <endvlanid>]) Parameters Description: InstanceID: Instance ID. startvlanid-endvlanid: VLAN list.	Informational
Event Description: Spanning Tree port role change to alternate port due to the guard root. Log Message: Spanning Tree port role change (Instance: <InstanceID>, <portNum>) to alternate port due to the guard root Parameters Description: InstanceID: Instance ID. portNum: Port ID.	Informational
Event Description: Spanning Tree loop guard blocking. Log Message: Spanning Tree loop guard blocking(Instance: <InstanceID>, <portNum>) Parameters Description: InstanceID: Instance ID. portNum: Port ID.	Informational

OSPFv2

Log Description	Severity
Event Description: OSPF interface link state changed. Log Message: OSPF interface <intf-name> changed state to [Up Down] Parameters Description: intf-name: Name of OSPF interface.	Informational
Event Description: OSPF interface administrator state changed. Log Message: OSPF protocol on interface <intf-name> changed state to [Enabled Disabled]	Informational

Log Description	Severity
Parameters Description: intf-name: Name of OSPF interface.	
Event Description: One OSPF interface changed from one area to another. Log Message: OSPF interface <intf-name> changed from area <area-id> to area <area-id> Parameters Description: intf-name: Name of OSPF interface. area-id: OSPF area ID.	Informational
Event Description: One OSPF neighbor state changed from Loading to Full. Log Message: OSPF nbr <nbr-id> on interface <intf-name> changed state from Loading to Full Parameters Description: intf-name: Name of OSPF interface. nbr-id: Neighbor's router ID.	Notification
Event Description: One OSPF neighbor state changed from Full to Down. Log Message: OSPF nbr <nbr-id> on interface <intf-name> changed state from Full to Down Parameters Description: intf-name: Name of OSPF interface. nbr-id: Neighbor's router ID.	Notification
Event Description: One OSPF neighbor state's dead timer expired. Log Message: OSPF nbr <nbr-id> on interface <intf-name> dead timer expired Parameters Description: intf-name: Name of OSPF interface. nbr-id: Neighbor's router ID.	Notification
Event Description: One OSPF virtual neighbor state changed from Loading to Full. Log Message: OSPF nbr <nbr-id> on virtual link changed state from Loading to Full Parameters Description: nbr-id: Neighbor's router ID.	Notification
Event Description: One OSPF virtual neighbor state changed from Full to Down. Log Message: OSPF nbr <nbr-id> on virtual link changed state from Full to Down Parameters Description: nbr-id: Neighbor's router ID.	Notification
Event Description: OSPF router ID was changed. Log Message: OSPF router ID changed to <router-id> Parameters Description: router-id: OSPF router ID.	Informational

Peripheral

Log Description	Severity
Event Description: Fan Recovered. Log Message: Unit <unit-id>, <fan-descr> back to normal Parameters Description: Unit <id>: The unit ID. <fan-descr>: For example, right fan, left fan etc.	Critical
Event Description: Fan Fail. Log Message: Unit <unit-id> <fan-descr> failed	Critical

Log Description	Severity
Parameters Description: Unit <id>: The unit ID. <fan-descr>: For example, right fan, left fan etc.	
Event Description: Temperature sensor enters alarm state. Log Message: Unit <unit-id> <thermal-sensor-descr> detects abnormal temperature <degree> Parameters Description: unitID: The unit ID. thermal-sensor-descr: Description of the sensor. degree: The current temperature of the sensor.	Warning
Event Description: Temperature recovers to normal. Log Message: Unit <unit-id> <thermal-sensor-descr> temperature back to normal Parameters Description: unitID: The unit ID. thermal-sensor-descr: Description of the sensor. degree: The current temperature of the sensor.	Informational
Event Description: Power failed. Log Message: Unit <unit-id> <power-descr> failed Parameters Description: Unit <id>: The unit ID. power-descr: Describe the power.	Critical
Event Description: Power is recovered. Log Message: Unit <unit-id> <power-descr> back to normal Parameters Description: Unit <id>: The unit ID. power-descr: Describe the power.	Critical
Event Description: External Alarm state to change. Log Message: Unit <unit-id> External Alarm Channel <channelID>:<alarmMsg> Parameters Description: Unit <id>: The unit ID. channelID: The channel ID. alarmMsg: The alarm Msg.	Critical

PoE

Log Description	Severity
Event Description: Total power usage threshold is exceeded. Log Message: Unit <unit-id> usage threshold <percentage> is exceeded Parameters Description: unit-id: The box ID. percentage: Usage threshold.	Warning
Event Description: Total power usage threshold is recovered. Log Message: Unit <unit-id> usage threshold <percentage> is recovered Parameters Description: unit-id: The box ID. percentage: Usage threshold.	Warning
Event Description: PD doesn't reply the ping request. Log Message: PD alive check failed. (Port: <portNum>, PD: <ipaddr>)	Warning

Log Description	Severity
portNum: The port number. ipaddr: The IP (IPv4/IPv6) address of PD.	

Port

Log Description	Severity
Event Description: Port linkup. Log Message: Port <port> link up, <nway> Parameters Description: port: Represents the logical port number. nway: Represents the speed and duplex of link.	Informational
Event Description: Port link down. Log Message: Port <port> link down Parameters Description: port: Represents the logical port number.	Informational

Port Security

Log Description	Severity
Event Description: Address full on a port. Log Message: MAC address <mac-address> causes port security violation on <interface-id> Parameters Description: macaddr: The violation MAC address. interface-id: The interface name.	Warning
Event Description: Address full on system. Log Message: Limit on system entry number has been exceeded	Warning

Reboot Schedule

Log Description	Severity
Event Description: Tips is about will to reboot switch within the specified time. Log Message: Display "Reboot scheduled in 5 minutes" when the countdown equals 5 minutes	Warning
Event Description: Tips is about will to reboot switch within the specified time. Log Message: Display "Reboot scheduled in 1 minute" when the countdown equals 1 minute	Critical
Event Description: after schedule reboot in a specific interval. Log Message: System was restarted by schedule in an interval time	Informational
Event Description: after schedule reboot at specific time. Log Message: System was restarted by schedule at specific time	Informational
Event Description: after schedule reboot happens with save_before_reboot configured. Log Message: Configuration was saved by schedule	Informational

Safeguard

Log Description	Severity
<p>Event Description: When the CPU utilization is over the rising threshold, the switch enters exhausted mode, and the syslog will be recorded.</p> <p>Log Message: Unit <unit-id>, Safeguard Engine enters EXHAUSTED mode</p> <p>Parameters Description: unit-id: Unit ID.</p>	Warning
<p>Event Description: When the CPU utilization is lower than the falling threshold, the switch enters normal mode, and the syslog will be recorded.</p> <p>Log Message: Unit <unit-id>, Safeguard Engine enters NORMAL mode</p> <p>Parameters Description: unit-id: Unit ID.</p>	Informational

SD Card Management

Log Description	Severity
<p>Event Description: schedule execute configuration failure.</p> <p>Log Message: Entry <entry-name> to execute configuration <filename> at time <time-range> failure</p> <p>Parameters Description: entry-name: The name for this schedule execute configuration entry. filename: The filename of the configuration. time-range: The name of the time range.</p>	Warning
<p>Event Description: schedule backup configuration or log failure.</p> <p>Log Message: Entry <entry-name> to backup <type>:<filename> at time <time-range> failure</p> <p>Parameters Description: entry-name: The name for this schedule execute configuration entry. type: Configuration or log. filename: The filename of the configuration. time-range: The name of the time range.</p>	Warning
<p>Event Description: schedule execute configuration success.</p> <p>Log Message: Entry <entry-name> to execute configuration <filename> success at time <time-range></p> <p>Parameters Description: entry-name: The name for this schedule execute configuration entry. filename: The filename of the configuration. time-range: The name of the time range.</p>	Informational
<p>Event Description: schedule backup configuration or log success.</p> <p>Log Message: Entry <entry-name> to backup <type>:<filename> success at time <time-range></p> <p>Parameters Description: entry-name: The name for this schedule execute configuration entry. type: Configuration or log. filename: The filename of the configuration. time-range: The name of the time range.</p>	Informational

SNMP

Log Description	Severity
Event Description: SNMP request received with invalid community string. Log Message: SNMP request received from <ipaddr> with invalid community string Parameters Description: ipaddr: The IP address.	Informational

SRM

Log Description	Severity
Event Description: When stacking succeed and the master detects some slave has different SRM mode. Log Message: Unit <unitID> SRM mode is different with master Parameters Description: unitID: the Unit ID of device in the stacking system.	Alert

SSH

Log Description	Severity
Event Description: SSH server is enabled. Log Message: SSH server is enabled	Informational
Event Description: SSH server is disabled. Log Message: SSH server is disabled	Informational

Stacking

Log Description	Severity
Event Description: Hot insertion. Log Message: Unit: <unitID>, MAC: <macaddr> Hot insertion Parameters Description: unitID: Box ID. Macaddr: MAC address.	Informational
Event Description: Hot removal. Log Message: Unit: <unitID>, MAC: <macaddr> Hot removal Parameters Description: unitID: Box ID. Macaddr: MAC address.	Informational
Event Description: Stacking topology change. Log Message: Stacking topology is <Stack_TP_TYPE>. Master(Unit <unitID>, MAC:<macaddr>) Parameters Description: Stack_TP_TYPE: The stacking topology type is one of the following: 1. Ring 2. Chain unitID: Box ID. Macaddr: MAC address.	Critical

Log Description	Severity
Event Description: Backup master changed to master. Log Message: Backup master changed to master. Master (Unit: <unitID>) Parameters Description: unitID: Box ID.	Informational
Event Description: Slave changed to master. Log Message: Slave changed to master. Master (Unit: <unitID>) Parameters Description: unitID: Box ID.	Informational
Event Description: Box ID conflict. Log Message: Hot insert failed, box ID conflict: Unit <unitID> conflict (MAC: <macaddr> and MAC: <macaddr>) Parameters Description: unitID: Box ID. macaddr: The MAC addresses of the conflicting boxes.	Critical
Event Description: Stacking port link up. Log Message: Stacking port <portID> link up Parameters Description: portID: port ID.	Critical
Event Description: Stacking port link down. Log Message: Stacking port <portID> link down Parameters Description: portID: port ID.	Critical
Event Description: SIO interface link up. Log Message: SIO interface Unit <unitID> SIO<SIOID> link up Parameters Description: unitID: Box ID. SIOD: SIO ID.	Critical
Event Description: SIO interface link down. Log Message: SIO interface Unit <unitID> SIO<SIOID> link down Parameters Description: unitID: Box ID. SIOD: SIO ID.	Critical

Storm Control

Log Description	Severity
Event Description: Storm occurrence. Log Message: <Broadcast Multicast Unicast> storm is occurring on <interface-id> Parameters Description: Broadcast: Storm is resulted by broadcast packets(DA = FF:FF:FF:FF:FF:FF). Multicast: Storm is resulted by multicast packets, including unknown L2 multicast, known L2 multicast, unknown IP multicast and known IP multicast. Unicast: Storm is resulted by unicast packets, including both known and unknown unicast packets. interface-id: The interface ID on which a storm is occurring.	Warning
Event Description: Storm cleared. Log Message: <Broadcast Multicast Unicast> storm is cleared on <interface-id> Parameters Description:	Informational

Log Description	Severity
Broadcast: Broadcast storm is cleared. Multicast: Multicast storm is cleared. Unicast: Unicast storm (including both known and unknown unicast packets) is cleared. interface-id: The interface ID on which a storm is cleared.	
Event Description: Port shut down due to a packet storm. Log Message: <interface-id> is currently shut down due to the <Broadcast Multicast Unicast> storm Parameters Description: interface-id: The interface ID on which is error-disabled by storm. Broadcast: The interface is disabled by broadcast storm. Multicast: The interface is disabled by multicast storm. Unicast: The interface is disabled by unicast storm (including both known and unknown unicast packets).	Warning

System

Log Description	Severity
Event Description: This log will be generated when system warm start. Log Message: [Unit <unitID>,]System warm start Parameters Description: unitID: The unit ID.	Critical
Event Description: This log will be generated when system cold start. Log Message: [Unit <unitID>,]System cold start Parameters Description: unitID: The unit ID.	Critical
Event Description: This log will be generated when system start up. Log Message: [Unit <unitID>,]System started up. Parameters Description: unitID: The unit ID.	Critical

Telnet

Log Description	Severity
Event Description: Successful login through Telnet. Log Message: Successful login through Telnet (Username: <username>, IP: <ipaddr>) Parameters Description: ipaddr: The IP address of Telnet client. username: the user name that used to login Telnet server.	Informational
Event Description: Login failed through Telnet. Log Message: Login failed through Telnet (Username: <username>, IP: <ipaddr>) Parameters Description: ipaddr: The IP address of Telnet client. username: the user name that used to login Telnet server.	Warning
Event Description: Logout through Telnet. Log Message: Logout through Telnet (Username: <username>, IP: <ipaddr>) Parameters Description: ipaddr: The IP address of Telnet client.	Informational

Log Description	Severity
username: the user name that used to login Telnet server.	
Event Description: Telnet session timed out. Log Message: Telnet session timed out (Username: <username>, IP: <ipaddr>) Parameters Description: ipaddr: The IP address of Telnet client. username: the user name that used to login Telnet server.	Informational

Traffic Control

Log Description	Severity
Event Description: Broadcast storm occurrence. Log Message: <interface-id> Broadcast storm is occurring Parameters Description: interface-id: The interface name.	Warning
Event Description: Broadcast storm cleared. Log Message: <interface-id> Broadcast storm has cleared Parameters Description: interface-id: The interface name.	Informational
Event Description: Multicast storm occurrence. Log Message: <interface-id> Multicast storm is occurring Parameters Description: interface-id: The interface name.	Warning
Event Description: Multicast Storm cleared. Log Message: <interface-id>Multicast storm has cleared Parameters Description: interface-id: The interface name.	Informational
Event Description: Unicast storm occurrence. Log Message: <interface-id> Unicast storm is occurring Parameters Description: interface-id: The interface name.	Warning
Event Description: Unicast Storm cleared. Log Message: <interface-id> Unicast storm has cleared Parameters Description: interface-id: The interface name.	Informational
Event Description: Port shut down due to a packet storm. Log Message: <interface-id> is currently shut down due to a packet storm Parameters Description: interface-id: The interface name.	Warning

Voice VLAN

Log Description	Severity
Event Description: When a new voice device is detected on an interface. Log Message: New voice device detected (<interface-id>, MAC: <mac-address>) Parameters Description: interface-id: Interface name.	Informational

Log Description	Severity
mac-address: Voice device MAC address.	
Event Description: When an interface which is in auto voice VLAN mode joins the voice VLAN. Log Message: <interface-id> add into voice VLAN <vid> Parameters Description: interface-id: Interface name. vid: VLAN ID.	Informational
Event Description: When an interface leaves the voice VLAN and at the same time, no voice device is detected in the aging interval for that interface, the log message will be sent. Log Message: <interface-id> remove from voice VLAN <vid> Parameters Description: interface-id: Interface name. vid: VLAN ID.	Informational

VPLS

Log Description	Severity
Event Description: VPLS link up. Log Message: VPLS <vpls_name> link up Parameters Description: vpls_name: The name of the link up VPLS.	Informational
Event Description: VPLS link down. Log Message: VPLS <vpls_name> link down Parameters Description: vpls_name: The name of the link down VPLS.	Informational

VPWS

Log Description	Severity
Event Description: Pseudo wire link down. Log Message: Pseudowire id <vc_id> peer ip <ipaddr> link down Parameters Description: vc_id: The link down pseudo wire ID. ipaddr: The peer ip address of the link down pseudo wire.	Informational
Event Description: Pseudo wire link up. Log Message: Pseudowire id <vc_id> peer ip <ipaddr> link up Parameters Description: vc_id: The link up pseudo wire ID. ipaddr: The peer ip address of the link up pseudo wire.	Informational
Event Description: Pseudo wire is deleted. Log Message: Pseudowire id <vc_id> peer ip <ipaddr> is deleted Parameters Description: vc_id: The deleted pseudo wire ID. ipaddr: The peer ip address of the deleted pseudo wire.	Informational
Event Description: Pseudo wire link standby. Log Message: Pseudowire id <vc_id> peer ip <ipaddr> link standby	Informational

Log Description	Severity
Parameters Description: vc_id: The link standby pseudo wire ID. ipaddr: The peer ip address of the link standby pseudo wire.	

VRRP Debug

Log Description	Severity
Event Description: One virtual router state becomes Master. Log Message: VR <vr-id> at interface <intf-name> switch to Master Parameters Description: vr-id: VRRP virtual router ID. intf-name: Interface name on which virtual router is based.	Informational
Event Description: One virtual router state becomes Backup. Log Message: VR <vr-id> at interface <intf-name> switch to Backup Parameters Description: vr-id: VRRP virtual router ID. intf-name: Interface name on which virtual router is based.	Informational
Event Description: One virtual router state becomes Init. Log Message: VR <vr-id> at interface <intf-name> switch to Init Parameters Description: vr-id: VRRP virtual router ID. intf-name: Interface name on which virtual router is based.	Informational
Event Description: Authentication type mismatch of one received VRRP advertisement message. Log Message: Authentication type mismatch on VR <vr-id> at interface <intf-name> Parameters Description: vr-id: VRRP virtual router ID. intf-name: Interface name on which virtual router is based.	Warning
Event Description: Authentication checking fail of one received VRRP advertisement message. Log Message: Authentication fail on VR <vr-id> at interface <intf-name>. Auth type <auth-type> Parameters Description: vr-id: VRRP virtual router ID. intf-name: Interface name on which virtual router is based. Auth-type: VRRP interface authentication type.	Warning
Event Description: Checksum error of one received VRRP advertisement message. Log Message: Received an ADV msg with incorrect checksum on VR <vr-id> at interface <intf-name> Parameters Description: vr-id: VRRP virtual router ID. intf-name: Interface name on which virtual router is based.	Warning
Event Description: Virtual router ID mismatch of one received VRRP advertisement message. Log Message: Received ADV msg virtual router ID mismatch. VR <vr-id> at interface <intf-name> Parameters Description: vr-id: VRRP virtual router ID. intf-name: Interface name on which virtual router is based.	Warning

Log Description	Severity
<p>Event Description: Advertisement interval mismatch of one received VRRP advertisement message.</p> <p>Log Message: Received ADV msg adv interval mismatch. VR <vr-id> at interface <intf-name></p> <p>Parameters Description: vr-id: VRRP virtual router ID. intf-name: Interface name on which virtual router is based.</p>	Warning
<p>Event Description: A virtual MAC address is added into switch L2 table.</p> <p>Log Message: Added a virtual MAC <vrrp-mac-addr> into L2 table</p> <p>Parameters Description: vrrp-mac-addr: VRRP virtual MAC address.</p>	Notification
<p>Event Description: A virtual MAC address is deleted from switch L2 table.</p> <p>Log Message: Deleted a virtual MAC <vrrp-mac-addr> from L2 table</p> <p>Parameters Description: vrrp-mac-addr: VRRP virtual MAC address.</p>	Notification
<p>Event Description: A virtual MAC address is adding into switch L3 table.</p> <p>Log Message: Added a virtual IP <vrrp-ip-addr> MAC <vrrp-mac-addr> into L3 table</p> <p>Parameters Description: vrrp-ip-addr: VRRP virtual IP address. vrrp-mac-addr: VRRP virtual MAC address.</p>	Notification
<p>Event Description: A virtual MAC address is deleting from switch L3 table.</p> <p>Log Message: Deleted a virtual IP <vrrp-ip-addr> MAC <vrrp-mac-addr> from L3 table</p> <p>Parameters Description: vrrp-ip-addr: VRRP virtual IP address. vrrp-mac-addr: VRRP virtual MAC address.</p>	Notification
<p>Event Description: Failed when adding a virtual MAC into switch chip L2 table.</p> <p>Log Message: Failed to add virtual MAC <vrrp-mac-addr> into chip L2 table. Errcode <vrrp-errcode></p> <p>Parameters Description: vrrp-mac-addr: VRRP virtual MAC address. vrrp-errcode: Errcode of VRRP protocol behavior.</p>	Error
<p>Event Description: Failed when deleting a virtual MAC from switch chip L2 table.</p> <p>Log Message: Failed to delete virtual MAC <vrrp-mac-addr> from chip L2 table. Errcode <vrrp-errcode></p> <p>Parameters Description: vrrp-mac-addr: VRRP virtual MAC address. vrrp-errcode: Errcode of VRRP protocol behavior.</p>	Error
<p>Event Description: Failed when adding a virtual MAC into switch L3 table. The L3 table is full.</p> <p>Log Message: Failed to add virtual IP <vrrp-ip-addr> MAC <vrrp-mac-addr> into L3 table. L3 table is full</p> <p>Parameters Description: vrrp-ip-addr: VRRP virtual IP address. vrrp-mac-addr: VRRP virtual MAC address.</p>	Error
<p>Event Description: Failed when adding a virtual MAC into switch L3 table. The port where the MAC is learned from is invalid.</p> <p>Log Message: Failed to add virtual IP <vrrp-ip-addr> MAC <vrrp-mac-addr> into L3 table. Port <mac-port> is invalid</p> <p>Parameters Description: vrrp-ip-addr: VRRP virtual IP address.</p>	Error

Log Description	Severity
vrrp-mac-addr: VRRP virtual MAC address. mac-port: port number of VRRP virtual MAC.	
Event Description: Failed when adding a virtual MAC into switch L3 table. The interface where the MAC is learned from is invalid. Log Message: Failed to add virtual IP <vrrp-ip-addr> MAC <vrrp-mac-addr> into L3 table. Interface <mac-intf> is invalid Parameters Description: vrrp-ip-addr: VRRP virtual IP address. vrrp-mac-addr: VRRP virtual MAC address. mac-intf: interface id on which VRRP virtual MAC address is based.	Error
Event Description: Failed when adding a virtual MAC into switch L3 table. The box where the MAC is learned from is invalid. Log Message: Failed to add virtual IP <vrrp-ip-addr> MAC <vrrp-mac-addr> into L3 table. Box id <mac-box> is invalid Parameters Description: vrrp-ip-addr: VRRP virtual IP address. vrrp-mac-addr: VRRP virtual MAC address. mac-box: stacking box number of VRRP virtual MAC.	Error
Event Description: Failed when adding a virtual MAC into switch chip's L3 table. Log Message: Failed to add virtual IP <vrrp-ip-addr> MAC <vrrp-mac-addr> into chip L3 table. Errcode <vrrp-errcode> Parameters Description: vrrp-ip-addr: VRRP virtual IP address. vrrp-mac-addr: VRRP virtual MAC address. vrrp-errcode: Err code of VRRP protocol behavior.	Error
Event Description: Failed when deleting a virtual MAC from switch chip's L3 table. Log Message: Failed to delete virtual IP <vrrp-ip-addr> MAC <vrrp-mac-addr> from chip L3 table. Errcode <vrrp-errcode> Parameters Description: vrrp-ip-addr: VRRP virtual IP address. vrrp-mac-addr: VRRP virtual MAC address. vrrp-errcode: Err code of VRRP protocol behavior.	Error

WAC

Log Description	Severity
Event Description: When a client host fails to authenticate. Log Message: Web-Authentication host login fail (User Name: <string>, IP: <ipaddr ipv6address>, MAC: <macaddr>, Port: <[unitID:]portNum>, VID: <vlan-id>) Parameters Description: string: User name. ipaddr: IP address. ipv6address: IPv6 address. macaddr: MAC address. unitID: The unit ID. portNum: The port number. vlan-id: The vlan id number.	Warning
Event Description: This log will be triggered when the number of authorized users reaches the maximum user limit on the whole device. Log Message: Web-Authentication enters stop learning state	Warning

Log Description	Severity
<p>Event Description: This log will be triggered when the number of authorized users is below the maximum user limit on whole device in a time interval (The interval is project dependent).</p> <p>Log Message: Web-Authentication recovers from stop learning state</p>	Warning
<p>Event Description: When a client host authenticated successful.</p> <p>Log Message: Web-Authentication host login success (Username: <string>, IP: <ipaddr ipv6address>, MAC: <macaddr>, Port: <[unitID:] portNum>, VID: <vlan-id>)</p> <p>Parameters Description: string: User name. ipaddr: IP address. ipv6address: IPv6 address. macaddr: MAC address. unitID: The unit ID. portNum: The port number. vlan-id: The vlan id number.</p>	Informational

Web

Log Description	Severity
<p>Event Description: Successful login through Web.</p> <p>Log Message: Successful login through Web (Username: <username>, IP: <ipaddr>)</p> <p>Parameters Description: username: The use name that used to login HTTP server. ipaddr: The IP address of HTTP client.</p>	Informational
<p>Event Description: Login failed through Web.</p> <p>Log Message: Login failed through Web (Username: <username>, IP: <ipaddr>)</p> <p>Parameters Description: username: The use name that used to login HTTP server. ipaddr: The IP address of HTTP client.</p>	Warning
<p>Event Description: Web session timed out.</p> <p>Log Message: Web session timed out (Username: <username>, IP: <ipaddr>)</p> <p>Parameters Description: username: The use name that used to login HTTP server. ipaddr: The IP address of HTTP client.</p>	Informational
<p>Event Description: Logout through Web.</p> <p>Log Message: Logout through Web (Username: <username>, IP: <ipaddr>)</p> <p>Parameters Description: username: The use name that used to login HTTP server. ipaddr: The IP address of HTTP client.</p>	Informational
<p>Event Description: Successful login through Web (SSL).</p> <p>Log Message: Successful login through Web(SSL) (Username: <username>, IP: <ipaddr>)</p> <p>Parameters Description: username: The use name that used to login HTTPS server. ipaddr: The IP address of HTTPS client.</p>	Informational
<p>Event Description: Login failed through Web (SSL).</p> <p>Log Message: Login failed through Web(SSL) (Username: <username>, IP: <ipaddr>)</p> <p>Parameters Description:</p>	Warning

Log Description	Severity
username: The use name that used to login HTTPS server. ipaddr: The IP address of HTTPS client.	
Event Description: Web (SSL) session timed out. Log Message: Web(SSL) session timed out (Username: <username>, IP: <ipaddr>) Parameters Description: username: The use name that used to login HTTPS server. ipaddr: The IP address of HTTPS client.	Informational
Event Description: Logout through Web (SSL). Log Message: Logout through Web(SSL) (Username: <username>, IP: <ipaddr>) Parameters Description: username: The use name that used to login HTTPS server. ipaddr: The IP address of HTTPS client.	Informational

Zone Defense

Log Description	Severity
Event Description: Zone defense function has been enabled. Log Message: Zone defense function has been enabled by <session> (Username: <username>, IP: <ipaddr>) Parameters Description: session: The user's session, ex: Console, SNMP, WEB, Telnet. username: Represent current login user. (This field will be empty if user's session is SNMP.) ipaddr: Represent user's IP address. This field will be empty if user's session is console.	Warning
Event Description: Zone defense function has been disabled. Log Message: Zone defense function has been disabled by <session> (Username: <username>, IP: <ipaddr>) Parameters Description: session: The user's session, ex: Console, SNMP, WEB, Telnet. username: Represent current login user. (This field will be empty if user's session is SNMP.) ipaddr: Represent user's IP address. This field will be empty if user's session is console.	Warning

Appendix C - Trap Entries

The following table lists all possible trap log entries and their corresponding meanings that will appear in the Switch.

802.1X

Trap Name	Description	OID
dDot1xExtLoggedSuccess	The trap is sent when a host has successfully logged in (passed 802.1X authentication). Binding objects: (1) ifIndex (2) dnaSessionClientMacAddress (3) dnaSessionAuthVlan (4) dnaSessionAuthUserName	1.3.6.1.4.1.17 1.14.30.0.1
dDot1xExtLoggedFail	The trap is sent when a host failed to pass 802.1X authentication (login failed). Binding objects: (1) ifIndex (2) dnaSessionClientMacAddress (3) dnaSessionAuthVlan (4) dnaSessionAuthUserName (5) dDot1xExtNotifyFailReason	1.3.6.1.4.1.17 1.14.30.0.2

802.3ah OAM

Trap Name	Description	OID
dot3OamThresholdEvent	This notification is sent when a local or remote threshold crossing event is detected. Binding objects: (1) dot3OamEventLogTimestamp (2) dot3OamEventLogOui (3) dot3OamEventLogType (4) dot3OamEventLogLocation (5) dot3OamEventLogWindowHi (6) dot3OamEventLogWindowLo (7) dot3OamEventLogThresholdHi (8) dot3OamEventLogThresholdLo (9) dot3OamEventLogValue (10) dot3OamEventLogRunningTotal (11) dot3OamEventLogEventTotal	1.3.6.1.2.1.15 8.0.1
dot3OamNonThresholdEvent	This notification is sent when a local or remote non-threshold crossing event is detected. Binding objects: (1) dot3OamEventLogTimestamp (2) dot3OamEventLogOui (3) dot3OamEventLogType (4) dot3OamEventLogLocation (5) dot3OamEventLogEventTotal	1.3.6.1.2.1.15 8.0.2

Authentication Fail

Trap Name	Description	OID
authenticationFailure	An authenticationFailure trap signifies that the SNMPv2 entity, acting in an agent role, has received a protocol message that is not properly authenticated. While all implementations of the SNMPv2 must be capable of generating this trap, the snmpEnableAuthenTraps object indicates whether this trap will be generated.	1.3.6.1.6.3.1.1.5.5

BGP

Trap Name	Description	OID
bgpEstablishedNotification	The bgpEstablishedNotification event is generated when the BGP FSM enters the established state. Binding objects: (1) bgpPeerRemoteAddr (2) bgpPeerLastError (3) bgpPeerState	1.3.6.1.2.1.15.0.1
bgpBackwardTransNotification	The bgpBackwardTransNotification event is generated when the BGP FSM moves from a higher numbered state to a lower numbered state. Binding objects: (1) bgpPeerRemoteAddr (2) bgpPeerLastError (3) bgpPeerState	1.3.6.1.2.1.15.0.2

BPDU Protection

Trap Name	Description	OID
dBpduProtectionAttackOccur	This trap is sent when the BPDU attack happened on an interface. Binding objects: (1) ifIndex (2) dBpduProtectionIfCfgMode	1.3.6.1.4.1.17.1.14.47.0.1
dBpduProtectionAttackRecover	This trap is sent when the BPDU attack recovered on an interface. Binding objects: (1) ifIndex	1.3.6.1.4.1.17.1.14.47.0.2

CFM

Trap Name	Description	OID
dot1agCfmFaultAlarm	This trap is initiated when a connectivity defect is detected. Binding objects: (1) dot1agCfmMepHighestPrDefect	1.3.111.2.802.1.1.8.0.1

CFM Extension

Trap Name	Description	OID
dCfmAisOccurred	This trap is initiated when local MEP enters AIS status. Binding objects: (1) dCfmEventMdIndex (2) dCfmEventMaIndex (3) dCfmEventMepIdentifier	1.3.6.1.4.1.17 1.14.86.0.1
dCfmAisCleared	This trap is initiated when local MEP exits AIS status. Binding objects: (1) dCfmEventMdIndex (2) dCfmEventMaIndex (3) dCfmEventMepIdentifier	1.3.6.1.4.1.17 1.14.86.0.2
dCfmLockOccurred	This trap is initiated when local MEP enters lock status. Binding objects: (1) dCfmEventMdIndex (2) dCfmEventMaIndex (3) dCfmEventMepIdentifier	1.3.6.1.4.1.17 1.14.86.0.3
dCfmLockCleared	This trap is initiated when local MEP exits lock status. Binding objects: (1) dCfmEventMdIndex (2) dCfmEventMaIndex (3) dCfmEventMepIdentifier	1.3.6.1.4.1.17 1.14.86.0.4

DDM

Trap Name	Description	OID
dDdmAlarmTrap	A notification is generated when an abnormal alarm situation occurs or recovers from an abnormal alarm situation to normal status. Only when the current value > low warning or current value < high warning will send recover trap. Binding objects: (1) dDdmNotifyInfoIndex, (2) dDdmNotifyInfoComponent (3) dDdmNotifyInfoAbnormalLevel (4) dDdmNotifyInfoThresholdExceedOrRecover	1.3.6.1.4.1.17 1.14.72.0.1
dDdmWarningTrap	A notification is generated when an abnormal warning situation occurs or recovers from an abnormal warning situation to normal status. Binding objects: (1) dDdmNotifyInfoIndex, (2) dDdmNotifyInfoComponent (3) dDdmNotifyInfoAbnormalLevel (4) dDdmNotifyInfoThresholdExceedOrRecover	1.3.6.1.4.1.17 1.14.72.0.2

DHCP Server Screen Prevention

Trap Name	Description	OID
dDhcpFilterAttackDetected	When DHCP Server Screen is enabled, if the switch received the forge DHCP Server packet, the switch will trap the event if any attacking packet is received. Binding objects: (1) dDhcpFilterLogBufServerIpAddr (2) dDhcpFilterLogBufClientMacAddr (3) dDhcpFilterLogBufferVlanId (4) dDhcpFilterLogBufferOccurTime	1.3.6.1.4.1.17 1.14.133.0.1

DoS Prevention

Trap Name	Description	OID
dDosPreveAttackDetectedPacket	The trap is sent when detect DOS attack. Binding objects: (1) dDoSPrevCtrlAttackType (2) dDosPrevNotifInfoDropIpAddr (3) dDosPrevNotifInfoDropPortNumber	1.3.6.1.4.1.17 1.14.59.0.2

ERPS

Trap Name	Description	OID
dErpsFailedetectedNotif	A dErpsFailureNotification is sent when dErpsNotificationEnabled is 'true' and a signal failure is detected.	1.3.6.1.4.1.17 1.14.78.0.1
dErpsFailureClearedNotif	A dErpsFailureClearedNotif is sent when dErpsNotificationEnabled is 'true' and a signal failure is cleared.	1.3.6.1.4.1.17 1.14.78.0.2
dErpsRPLOwnerConflictNotif	A dErpsOwnerConflictNotif is sent when dErpsNotificationEnabled is 'true' and RPL owner conflict is detected.	1.3.6.1.4.1.17 1.14.78.0.3

ErrDisable

Trap Name	Description	OID
dErrDisNotifyPortDisabledAssert	The trap is sent when a port enters into error disabled state. Binding objects: (1) dErrDisNotifyInfoPortIfIndex (2) dErrDisNotifyInfoReasonID	1.3.6.1.4.1.17 1.14.45.0.1
dErrDisNotifyPortDisabledClear	The trap is sent when a port loop restarts after the interval time. Binding objects: (1) dErrDisNotifyInfoPortIfIndex (2) dErrDisNotifyInfoReasonID	1.3.6.1.4.1.17 1.14.45.0.2

External Alarm

Trap Name	Description	OID
dExternalAlarmStatusChg	The commander switch will send this notification when External alarm state is changed. Binding objects: (1) dExternalAlarmUnitID (2) dExternalAlarmChannel (3) dExternalAlarmStatus	1.3.6.1.4.1.17 1.14.32.0.1

Gratuitous ARP

Trap Name	Description	OID
agentGratuitousARPTrap	The trap is sent when IP address conflicted. Binding objects: (1) ipaddr (2) macaddr (3) portNumber (4) agentGratuitousARPInterfaceName	1.3.6.1.4.1.17 1.14.75.0.1

IP-MAC-Port Binding

Trap Name	Description	OID
dImpbViolationTrap	The address violation notification is generated when IP-MAC-Port Binding address violation is detected. Binding objects: (1) ifIndex (2) dImpbViolationIpAddrType (3) dImpbViolationIpAddress (4) dImpbViolationMacAddress (5) dImpbViolationVlan	1.3.6.1.4.1.17 1.14.22.0.1

LACP

Trap Name	Description	OID
linkup	A linkUp trap signifies that the SNMP entity, acting in an agent role, has detected that the ifOperStatus object for one of its communication links left the down state and transitioned into some other state (but not into the notPresent state). This other state is indicated by the included value of ifOperStatus. Binding objects: (1) ifIndex (2) ifAdminStatus (3) ifOperStatus	1.3.6.1.6.3.1.1 .5.4
linkDown	A linkDown trap signifies that the SNMP entity, acting in an agent role, has detected that the ifOperStatus object for one of its communication links is about to enter the down state from some other state (but not	1.3.6.1.6.3.1.1 .5.3

Trap Name	Description	OID
	from the notPresent state). This other state is indicated by the included value of ifOperStatus. Binding objects: (1) ifIndex (2) ifAdminStatus (3) ifOperStatus	

LBD

Trap Name	Description	OID
swPortLoopOccurred	The trap is sent when a port loop occurs. Binding objects: (1) swLoopDetectPortIndex	1.3.6.1.4.1.17 1.14.46.0.1
swPortLoopRestart	The trap is sent when a port loop restarts after the interval time. Binding objects: (1) swLoopDetectPortIndex	1.3.6.1.4.1.17 1.14.46.0.2
swVlanLoopOccurred	The trap is sent when a port loop occurs under LBD VLAN-based mode. Binding objects: (1) swLoopDetectPortIndex (2) swVlanLoopDetectVID	1.3.6.1.4.1.17 1.14.46.0.3
swVlanLoopRestart	The trap is sent when a port loop restarts under LBD VLAN-based mode after the interval time. Binding objects: (1) swLoopDetectPortIndex (2) swVlanLoopDetectVID	1.3.6.1.4.1.17 1.14.46.0.4

LDP

Trap Name	Description	OID
mplsLdpInitSessionThresholdExceeded	This notification is generated when the back off is enabled, and the number of Session Initialization messages exceeds the value of the 'mplsLdpEntityInitSessionThreshold'.	1.3.6.1.2.1.10. 166.4.0.1
mplsLdpPathVectorLimitMismatch	This notification is sent when the 'mplsLdpEntityPathVectorLimit' does NOT match the value of the 'mplsLdpPeerPathVectorLimit' for a specific Entity.	1.3.6.1.2.1.10. 166.4.0.2
mplsLdpSessionUp	If this notification is sent when the value of 'mplsLdpSessionState' enters the 'operational(5)' state.	1.3.6.1.2.1.10. 166.4.0.3
mplsLdpSessionDown	This notification is sent when the value of 'mplsLdpSessionState' leaves the 'operational(5)' state.	1.3.6.1.2.1.10. 166.4.0.4

LLDP-MED

Trap Name	Description	OID
IldpRemTablesChange	A IldpRemTablesChange notification is sent when the value of IldpStatsRemTableLastChangeTime changes. Binding objects: (1) IldpStatsRemTablesInserts (2) IldpStatsRemTablesDeletes (3) IldpStatsRemTablesDrops (4) IldpStatsRemTablesAgeouts	1.0.8802.1.1.2 .0.0.1
IldpXMedTopologyChangeDetected	A notification generated by the local device sensing a change in the topology that indicates that a new remote device attached to a local port, or a remote device disconnected or moved from one port to another. Binding objects: (1) IldpRemChassisIdSubtype (2) IldpRemChassisId (3) IldpXMedRemDeviceClass	1.0.8808.1.1.2 .1.5.4795.0.1

MAC-based Access Control

Trap Name	Description	OID
dMacAuthLoggedSuccess	The trap is sent when a MAC-based Access Control host is successfully logged in. Binding objects: (1) ifIndex (2) dnaSessionClientMacAddress (3) dnaSessionAuthVlan	1.3.6.1.4.1.17 1.14.153.0.1
dMacAuthLoggedFail	The trap is sent when a MAC-based Access Control host login fails. Binding objects: (1) ifIndex (2) dnaSessionClientMacAddress (3) dnaSessionAuthVlan	1.3.6.1.4.1.17 1.14.153.0.2
dMacAuthLoggedAgesOut	The trap is sent when a MAC-based Access Control host ages out. Binding objects: (1) ifIndex (2) dnaSessionClientMacAddress (3) dnaSessionAuthVlan	1.3.6.1.4.1.17 1.14.153.0.3

MAC Notification

Trap Name	Description	OID
dL2FdbMacNotification	This trap indicate the MAC addresses variation in the address table. Binding objects: (1) dL2FdbMacChangeNotifyInfo	1.3.6.1.4.1.17 1.14.3.0.1
dL2FdbMacNotificationWithVID	This trap indicate the MAC addresses variation in the address table.	1.3.6.1.4.1.17 1.14.3.0.2

Trap Name	Description	OID
	Binding objects: (1) dL2FdbMacChangeNotifyInfoWithVID	

MPLS

Trap Name	Description	OID
mplsXCUp	This notification is generated when the mplsXCOperStatus object for one or more contiguous entries in the mplsXCTable is about to enter the up state from another state.	1.3.6.1.2.1.10.166.2.0.1
mplsXCDown	This notification is generated when the mplsXCOperStatus object for one or more contiguous entries in the mplsXCTable is about to enter the up state from another state.	1.3.6.1.2.1.10.166.2.0.2

MSTP

Trap Name	Description	OID
newRoot	The newRoot trap indicates that the sending agent has become the new root of the Spanning Tree; the trap is sent by a bridge soon after its election as the new root, e.g., upon expiration of the Topology Change Timer, immediately subsequent to its election. Implementation of this trap is optional.	1.3.6.1.2.1.17.0.1
topologyChange	A topologyChange trap is sent by a bridge when any of its configured ports transitions from the Learning state to the Forwarding state, or from the Forwarding state to the Blocking state. The trap is not sent if a newRoot trap is sent for the same transition. Implementation of this trap is optional.	1.3.6.1.2.1.17.0.2

Peripheral

Trap Name	Description	OID
dEntityExtFanStatusChg	The commander switch will send this notification when a fan fails (dEntityExtEnvFanStatus is 'fault') or recovers (dEntityExtEnvFanStatus is 'ok'). Binding objects: (1) dEntityExtEnvFanUnitId (2) dEntityExtEnvFanIndex (3) dEntityExtEnvFanStatus	1.3.6.1.4.1.17.1.14.5.0.1
dEntityExtThermalStatusChg	The commander switch will send this notification when a thermal alarms (dEntityExtEnvTempStatus is 'abnormal') or recover(dEntityExtEnvTempStatus is 'ok'). Binding objects: (1) dEntityExtEnvTempUnitId (2) dEntityExtEnvTempIndex (3) dEntityExtEnvTempStatus	1.3.6.1.4.1.17.1.14.5.0.2

Trap Name	Description	OID
dEntityExtPowerStatusChg	The commander switch will send this notification when a power module fails, recovers or is removed. Binding objects: (1) dEntityExtEnvPowerUnitId (2) dEntityExtEnvPowerIndex (3) dEntityExtEnvPowerStatus	1.3.6.1.4.1.17 1.14.5.0.3

PIM6-SM

Trap Name	Description	OID
pimNeighborLoss	A pimNeighborLoss notification signifies the loss of an adjacency with a neighbor. This notification should be generated when the neighbor timer expires, and the router has no other neighbor on the same interface with the same IP version and a lower IP address than itself. This notification is generated whenever the counter pimNeighborLossCount is incremented, subject to the rate limit specified by pimNeighborLossNotificationsPeriod. Binding objects: (1) pimNeighborUpTime	1.3.6.1.2.1.15 7.0.1
pimInvalidRegister	A pimInvalidRegister notification signifies that an invalid PIM Register message was received by this device. This notification is generated whenever the counter pimInvalidRegisterMsgsRcvd is incremented, subject to the rate limit specified by pimInvalidRegisterNotificationPeriod. Binding objects: (1) pimGroupMappingPimMode (2) pimInvalidRegisterAddressType (3) pimInvalidRegisterOrigin (4) pimInvalidRegisterGroup (5) pimInvalidRegisterRp	1.3.6.1.2.1.15 7.0.2
pimInvalidJoinPrune	A pimInvalidJoinPrune notification signifies that an invalid PIM Join/Prune message was received by this device. This notification is generated whenever the counter pimInvalidJoinPruneMsgsRcvd is incremented, subject to the rate limit specified by pimInvalidJoinPruneNotificationPeriod. Binding objects: (1) pimGroupMappingPimMode (2) pimInvalidJoinPruneAddressType (3) pimInvalidJoinPruneOrigin (4) pimInvalidJoinPruneGroup (5) pimInvalidJoinPruneRp (6) pimNeighborUpTime	1.3.6.1.2.1.15 7.0.3
pimRPMappingChage	A pimRPMappingChange notification signifies a change to the active RP mapping on this device. This notification is generated whenever the counter pimRPMappingChangeCount is incremented, subject	1.3.6.1.2.1.15 7.0.4

Trap Name	Description	OID
	to the rate limit specified by pimRPMappingChangeNotificationPeriod. Binding objects: (1) pimGroupMappingPimMode (2) pimGroupMappingPrecedence	
pimInterfaceElection	A pimInterfaceElection notification signifies that a new DR or DF has been elected on a network. This notification is generated whenever the counter pimInterfaceElectionWinCount is incremented, subject to the rate limit specified by pimInterfaceElectionNotificationPeriod. Binding objects: (1) pimInterfaceAddressType (2) pimInterfaceAddress	1.3.6.1.2.1.15 7.0.5

PoE

Trap Name	Description	OID
pethMainPowerUsageOnNotification	This trap indicates PSE Threshold usage indication is on, the usage power is above the threshold. At least 500 msec must elapse between notifications being emitted by the same object instance. Binding objects: (1) pethMainPseConsumptionPower	1.3.6.1.2.1.10 5.0.2
pethMainPowerUsageOffNotification	This trap indicates PSE Threshold usage indication is off, The usage power is below the threshold. At least 500 msec must elapse between notifications being emitted by the same object instance. Binding objects: (1) pethMainPseConsumptionPower	1.3.6.1.2.1.10 5.0.3
dPoelfPowerDeniedNotification	This Notification indicates if PSE state diagram enters the state POWER_DENIED. At least 500 msec must elapse between notifications being emitted by the same object instance. Binding objects: (1) pethPsePortPowerDeniedCounter	1.3.6.1.4.1.17 1.14.24.0.1
dPoelfPowerOverLoadNotification	This trap indicates if PSE state diagram enters the state ERROR_DELAY_OVER. At least 500 msec must elapse between notifications being emitted by the same object instance. Binding objects: (1) pethPsePortOverLoadCounter	1.3.6.1.4.1.17 1.14.24.0.2
dPoelfPowerShortCircuitNotification	This trap indicates if PSE state diagram enters the state ERROR_DELAY_SHORT. At least 500 msec must elapse between notifications being emitted by the same object instance. Binding objects: (1) pethPsePortShortCounter	1.3.6.1.4.1.17 1.14.24.0.3
dPoelfPdAliveFailOccurNotification	This trap indicates if the PD device has the stop working or no response problem. At least 500 msec must elapse between notifications being emitted by the same object instance.	1.3.6.1.4.1.17 1.14.24.0.4

Port

Trap Name	Description	OID
linkup	A notification is generated when port linkup. Binding objects: (1) ifIndex (2) ifAdminStatus (3) ifOperStatus	1.3.6.1.6.3.1.1 .5.4
linkDown	A notification is generated when port link down. Binding objects: (1) ifIndex (2) ifAdminStatus (3) ifOperStatus	1.3.6.1.6.3.1.1 .5.3

Port Security

Trap Name	Description	OID
dPortSecMacAddrViolation	When the port security trap is enabled, new MAC addresses that violate the pre-defined port security configuration will trigger trap messages to be sent out. Binding objects: (1) ifIndex (2) dPortSecIfCurrentStatus (3) dPortSecIfViolationMacAddress	1.3.6.1.4.1.17 1.14.8.0.1

Reboot Schedule

Trap Name	Description	OID
agentRebootIn5Min	This trap is sent when the countdown equals 5 minutes.	1.3.6.1.4.1.17 1.14.170.0.1
agentRebootIn1Min	This trap is sent when the countdown equals 1 minute.	1.3.6.1.4.1.17 1.14.170.0.2

RMON

Trap Name	Description	OID
risingAlarm	The SNMP trap that is generated when an alarm entry crosses its rising threshold and generates an event that is configured for sending SNMP traps. Binding objects: (1) alarmIndex (2) alarmVariable (3) alarmSampleType (4) alarmValue (5) alarmRisingThreshold	1.3.6.1.2.1.16. 0.1

Trap Name	Description	OID
fallingAlarm	The SNMP trap that is generated when an alarm entry crosses its falling threshold and generates an event that is configured for sending SNMP traps. Binding objects: (1) alarmIndex (2) alarmVariable (3) alarmSampleType (4) alarmValue (5) alarmFallingThreshold	1.3.6.1.2.1.16.0.2

Safeguard

Trap Name	Description	OID
dSafeguardChgToExhausted	This trap indicates System change operation mode from normal to exhaust. Binding objects: (1) dSafeguardEngineCurrentMode	1.3.6.1.4.1.17 1.14.19.1.1.0.1
dSafeguardChgToNormal	This trap indicates system change operation mode from exhausted to normal. Binding objects: (1) dSafeguardEngineCurrentMode	1.3.6.1.4.1.17 1.14.19.1.1.0.2

SIM

Trap Name	Description	OID
swSingleIPMSColdStart	The commander switch will send this notification when its member generates a cold start notification. Binding objects: (1) swSingleIPMSID (2) swSingleIPMSMacAddr	1.3.6.1.4.1.17 1.12.8.6.0.11
swSingleIPMSWarmStart	The commander switch will send this notification when its member generates a warm start notification. Binding objects: (1) swSingleIPMSID (2) swSingleIPMSMacAddr	1.3.6.1.4.1.17 1.12.8.6.0.12
swSingleIPMSLinkDown	The commander switch will send this notification when its member generates a link down notification. Binding objects: (1) swSingleIPMSID (2) swSingleIPMSMacAddr (3) ifIndex	1.3.6.1.4.1.17 1.12.8.6.0.13
swSingleIPMSLinkUp	The commander switch will send this notification when its member generates a link up notification. Binding objects: (1) swSingleIPMSID (2) swSingleIPMSMacAddr (3) ifIndex	1.3.6.1.4.1.17 1.12.8.6.0.14

Trap Name	Description	OID
swSingleIPMSAuthFail	The commander switch will send this notification when its member generates an authentication failure notification. Binding objects: (1) swSingleIPMSID (2) swSingleIPMSMacAddr	1.3.6.1.4.1.17 1.12.8.6.0.15
swSingleIPMSnewRoot	The commander switch will send this notification when its member generates a new root notification. Binding objects: (1) swSingleIPMSID (2) swSingleIPMSMacAddr	1.3.6.1.4.1.17 1.12.8.6.0.16
swSingleIPMSTopologyChange	The commander switch will send this notification when its member generates a topology change notification. Binding objects: (1) swSingleIPMSID (2) swSingleIPMSMacAddr	1.3.6.1.4.1.17 1.12.8.6.0.17

Stacking

Trap Name	Description	OID
dStackInsertNotification	Unit Hot Insert notification. Binding objects: (1) dStackNotifyInfoBoxId (2) dStackInfoMacAddr	1.3.6.1.4.1.17 1.14.9.0.1
dStackRemoveNotification	Unit Hot Remove notification. Binding objects: (1) dStackNotifyInfoBoxId (2) dStackInfoMacAddr	1.3.6.1.4.1.17 1.14.9.0.2
dStackFailureNotification	Unit Failure notification. Binding objects: (1) dStackNotifyInfoBoxId	1.3.6.1.4.1.17 1.14.9.0.3
dStackTPChangeNotification	The stacking topology change notification. Binding objects: (1) dStackNotifyInfoTopologyType (2) dStackNotifyInfoBoxId (3) dStackInfoMacAddr	1.3.6.1.4.1.17 1.14.9.0.4
dStackRoleChangeNotification	The stacking unit role change notification. Binding objects: (1) dStackNotifyInfoRoleChangeType (2) dStackNotifyInfoBoxId	1.3.6.1.4.1.17 1.14.9.0.5

Start

Trap Name	Description	OID
coldStart	A coldStart trap signifies that the SNMPv2 entity, acting in an agent role, is reinitializing itself and that its configuration may have been altered.	1.3.6.1.6.3.1.1 .5.1

Trap Name	Description	OID
warmStart	A warmStart trap signifies that the SNMPv2 entity, acting in an agent role, is reinitializing itself such that its configuration is unaltered.	1.3.6.1.6.3.1.1.5.2

Storm Control

Trap Name	Description	OID
dStormCtrlOccurred	This trap is sent when dStormCtrlNotifyEnable is 'stormOccurred' or 'both' and a storm is detected. Binding objects: (1) ifIndex (2) dStormCtrlNotifyTrafficType	1.3.6.1.4.1.17 1.14.25.0.1
dStormCtrlStormCleared	This trap is sent when dStormCtrlNotifyEnable is 'stormCleared' or 'both' and a storm is cleared. Binding objects: (1) ifIndex (2) dStormCtrlNotifyTrafficType	1.3.6.1.4.1.17 1.14.25.0.2

System File

Trap Name	Description	OID
dsfUploadImage	The notification is sent when the user uploads image file successfully.	1.3.6.1.4.1.17 1.14.14.0.1
dsfDownloadImage	The notification is sent when the user downloads image file successfully.	1.3.6.1.4.1.17 1.14.14.0.2
dsfUploadCfg	The notification is sent when the user uploads configuration file successfully.	1.3.6.1.4.1.17 1.14.14.0.3
dsfDownloadCfg	The notification is sent when the user downloads configuration file successfully.	1.3.6.1.4.1.17 1.14.14.0.4
dsfSaveCfg	The notification is sent when the user saves configuration file successfully.	1.3.6.1.4.1.17 1.14.14.0.5

Upload/Download

Trap Name	Description	OID
agentFirmwareUpgrade	This trap is sent when the process of upgrading the firmware via SNMP has finished. Binding objects: (1) swMultiImageVersion	1.3.6.1.4.1.17 1.12.1.7.2.0.7
agentCfgOperCompleteTrap	The trap is sent when the configuration is completely saved, uploaded or downloaded. Binding objects: (1) unitID (2) agentCfgOperate (3) agentLoginUserName	1.3.6.1.4.1.17 1.12.1.7.2.0.9

VPWS

Trap Name	Description	OID
pwDown	This notification is generated when the pwOperStatus object for one or more contiguous entries in the pwTable which are about to enter the down(2) or lowerLayerDown(6) state from any other state, except for transition from the notPresent(5) state.	1.3.6.1.2.1.10.246.0.1
pwUp	This notification is generated when the pwOperStatus object for one or more contiguous entries in the pwTable which are about to enter the up(1) state from some other state except the notPresent(5) state and given that the pwDown notification issued for these entries.	1.3.6.1.2.1.10.246.0.2
pwDeleted	This notification is generated when the PW has been deleted, i.e., when the pwRowStatus has been set destroy(6) or the PW has been deleted by a non-MIB application or due to an auto-discovery process.	1.3.6.1.2.1.10.246.0.3

VRRP

Trap Name	Description	OID
vrrpTrapNewMaster	The newMaster trap indicates that the sending agent has transitioned to 'Master' state. Binding objects: (1) vrrpOperMasterIpAddr	1.3.6.1.2.1.68.0.1
vrrpTrapAuthFailure	A vrrpAuthFailure trap signifies that a packet has been received from a router whose authentication key or authentication type conflicts with this router's authentication key or authentication type. Implementation of this trap is optional. Binding objects: (1) vrrpTrapPacketSrc (2) vrrpTrapAuthErrorType	1.3.6.1.2.1.68.0.2

WAC

Trap Name	Description	OID
swWACLoggedSuccess	The trap is sent when a WAC client pass the authentication. Binding objects: (1) swWACAuthStatePort (2) swWACAuthStateOriginalVid (3) swWACAuthStateMACAddr (4) swWACAuthUserName (5) swWACClientAddrType (6) swWACClientAddress	1.3.6.1.4.1.17.1.14.154.0.1
swWACLoggedFail	The trap is sent when a WAC client failed to pass the authentication. Binding objects: (1) swWACAuthStatePort (2) swWACAuthStateOriginalVid	1.3.6.1.4.1.17.1.14.154.0.2

Trap Name	Description	OID
	(3) swWACAuthStateMACAddr (4) swWACAuthUserName (5) swWACClientAddrType (6) swWACClientAddress	

Appendix D - RADIUS Attributes Assignment

The RADIUS Attributes Assignment on the DGS-3630 is used in the following modules: Console, Telnet, SSH, Web, 802.1X, MAC-based Access Control, JWAC, and WAC.

The description that follows explains the following RADIUS Attributes Assignment types:

- Privilege Level
- Ingress/Egress Bandwidth
- 802.1p Default Priority
- VLAN
- ACL
- CoA

To assign the **Privilege Level** by the RADIUS server, the proper parameters should be configured on the RADIUS server. The table below shows the parameters for the bandwidth.

The parameters of the Vendor-Specific attributes are:

Vendor-Specific Attribute	Description	Value	Usage
Vendor-ID	Defines the vendor.	171 (DLINK)	Required
Vendor-Type	Defines the attribute.	1	Required
Attribute-Specific Field	Used to assign the privilege level of the user to operate the switch.	Range (1-15)	Required

If the user has configured the privilege level attribute of the RADIUS server (for example, level 15) and the Console, Telnet, SSH, and Web authentication is successful, the device will assign the privilege level (according to the RADIUS server) to this access user. However, if the user does not configure the privilege level attribute and authenticates successfully, the device will not assign any privilege level to the access user. If the privilege level is configured less than the minimum supported value or greater than the maximum supported value, the privilege level will be ignored.

To assign the **Ingress/Egress Bandwidth** by the RADIUS server, the proper parameters should be configured on the RADIUS Server. The table below shows the parameters for bandwidth.

The parameters of the Vendor-Specific attributes are:

Vendor-Specific Attribute	Description	Value	Usage
Vendor-ID	Defines the vendor.	171 (DLINK)	Required
Vendor-Type	Defines the attribute.	2 (for ingress bandwidth) 3 (for egress bandwidth)	Required
Attribute-Specific Field	Used to assign the bandwidth of a port.	Unit (Kbits)	Required

If the user has configured the bandwidth attribute of the RADIUS server (for example, ingress bandwidth 1000Kbps) and 802.1X authentication is successful, the device will assign the bandwidth (according to the RADIUS server) to the port. However, if the user does not configure the bandwidth attribute and authenticates successfully, the device will not assign any bandwidth to the port. If the bandwidth attribute is configured on the RADIUS server with a value of "0", the effective bandwidth will be set "no_limited", and if the bandwidth is configured less than "0" or greater than maximum supported value, the bandwidth will be ignored.

To assign the **802.1p Default Priority** by the RADIUS server, the proper parameters should be configured on the RADIUS server. The table below shows the parameters for 802.1p default priority.

The parameters of the Vendor-Specific attributes are:

Vendor-Specific Attribute	Description	Value	Usage
Vendor-ID	Defines the vendor.	171 (DLINK)	Required
Vendor-Type	Defines the attribute.	4	Required
Attribute-Specific Field	Used to assign the 802.1p default priority of the port.	0 to 7	Required


If the user has configured the 802.1p priority attribute of the RADIUS server (for example, priority 7) and the 802.1X, or MAC based authentication is successful, the device will assign the 802.1p default priority (according to the RADIUS server) to the port. However, if the user does not configure the priority attribute and authenticates successfully, the device will not assign a priority to this port. If the priority attribute is configured on the RADIUS server is a value out of range (>7), it will not be set to the device.

To assign the **VLAN** by the RADIUS server, the proper parameters should be configured on the RADIUS server. To use VLAN assignment, RFC 3580 defines the following tunnel attributes in RADIUS packets.

The table below shows the parameters for a VLAN:

RADIUS Tunnel Attribute	Description	Value	Usage
Tunnel-Type	This attribute indicates the tunneling protocol(s) to be used (in the case of a tunnel initiator) or the tunneling protocol in use (in the case of a tunnel terminator).	13 (VLAN)	Required
Tunnel-Medium-Type	This attribute indicates the transport medium being used.	6 (802)	Required
Tunnel-Private-Group-ID	This attribute indicates group ID for a particular tunneled session.	A string (VID)	Required

A summary of the Tunnel-Private-Group-ID Attribute format is shown below.

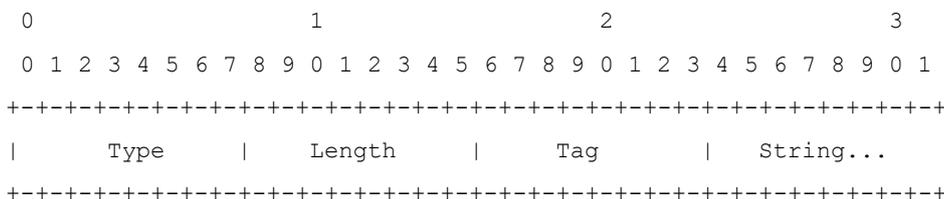

The table below shows the definition of Tag field (different with RFC 2868):

Tag field value	String field format
0x01	VLAN name (ASCII)
0x02	VLAN ID (ASCII)
Others (0x00, 0x03 ~ 0x1F, >0x1F)	When the Switch receives the VLAN setting string, it will think it is the VLAN ID first. In other words, the Switch will check all existing VLAN IDs and check if there is one matched. If the Switch can find one matched, it will move to that VLAN. If the Switch cannot find the matched VLAN ID, it will think the VLAN setting string as a "VLAN Name". Then it will check that it can find out a matched VLAN Name.

Note: A tag field of greater than 0x1F is interpreted as the first octet of the following field.

If the user has configured the VLAN attribute of the RADIUS server (for example, VID 3) and the 802.1X, or MAC based Access Control, or WAC authentication is successful, the port will be assigned to VLAN 3. However if the user does not configure the VLAN attributes, when the port is not guest VLAN member, it will be kept in its current authentication VLAN, and when the port is guest VLAN member, it will be assigned to its original VLAN.

To assign the **ACL** by the RADIUS server, the proper parameters should be configured on the RADIUS server. The table below shows the parameters for an ACL.

Vendor Specific Attribute (VSA) ACL Script

The parameters of the Vendor-Specific Attribute are:

RADIUS Tunnel Attribute	Description	Value	Usage
Vendor-ID	Defines the vendor.	171 (DLINK)	Required
Vendor-Type	Defines the attribute.	14 (for ACL script)	Required
Attribute-Specific Field	Used to assign the ACL script. The format is based on Access Control List (ACL) Commands .	ACL Script For example: ip access-list a1;permit host 10.90.90.100;exit; mac access-list extended m1;permit host 00-00-00-01-90-10 any; exit;	Required

If the user has configured the ACL attribute of the RADIUS server (for example, ACL script: ip access-list a1;permit host 10.90.90.100;exit; mac access-list extended m1;permit host 00-00-00-01-90-10 any; exit;), and the 802.1X, MAC-based Access Control, JWAC or WAC authentication is successful, the device will assign the ACL script according to the RADIUS server. The enter **Access-List Configuration Mode** and exit **Access-List Configuration Mode** must be a pair, otherwise the ACP script will be reject. For more information about the ACL module, refer to **Access Control List (ACL) Commands** chapter.

NAS-Filter-Rule (92)

The table below shows the parameters for NAS-Filter-Rule:

RADIUS Tunnel Attribute	Description	Value	Usage
NAS-Filter-Rule	This attribute indicates the filter rules to be applied for the user.	A string (concatenating the individual filter rules, separated by a NULL (0x00) octet)	Required

Filter Rule Format

Use the permit command to add a permit entry. Use the deny command to add a deny entry.

{permit | deny} in tcp from any to {any | DST-IP-ADDR | DST-IP-NET-ADDR | DST-IPV6-ADDR | DST-IPV6-NET-ADDR} [TCP-PORT-RANGE]

{permit | deny} in udp from any to {any | DST-IP-ADDR | DST-IP-NET-ADDR | DST-IPV6-ADDR | DST-IPV6-NET-ADDR} [UDP-PORT-RANGE]

{permit | deny} in icmp from any to {any | DST-IP-ADDR | DST-IP-NET-ADDR | DST-IPV6-ADDR | DST-IPV6-NET-ADDR} [ICMP-TYPE]

{permit | deny} in ip from any to {any | DST-IP-ADDR | DST-IP-NET-ADDR | DST-IPV6-ADDR | DST-IPV6-NET-ADDR}

{permit | deny} in IP-PROT-VALUE from any to {any | DST-IP-ADDR | DST-IP-NET-ADDR | DST-IPV6-ADDR | DST-IPV6-NET-ADDR}

Filter Rule Format

any	Specifies any source IP address or any destination IP address to be configured.
<i>DST-IP-ADDR</i>	Specifies a specific destination host IP address.
<i>DST-IP-NET-ADDR</i>	Specifies a group of destination IP addresses with a mask width of the form 1.2.3.4/24.
<i>DST-IPV6-ADDR</i>	Specifies a specific destination host IPv6 address.
<i>DST-IPV6-NET-ADDR</i>	Specifies a group of destination IPv6 network of the form 2000::1/64.
tcp, udp, icmp	Specifies Layer 4 protocols.
ip	Specifies that any protocol will match.
<i>IP-PROT-VALUE</i>	Specifies the IP protocol value. The valid value is from 0 to 255.
<i>TCP-PORT-RANGE</i>	(Optional) Specifies to match TCP port or port range. The form is like 22-23, 80.
<i>UDP-PORT-RANGE</i>	(Optional) Specifies to match UDP port or port range. The form is like 56, 67-68.
<i>ICMP-TYPE</i>	(Optional) Specifies the ICMP message type. The valid number for the message type is from 0 to 255.

Example

This example shows how to deny host's telnet service on the RADIUS server.

```
Nas-filter-Rule="deny in tcp from any to any 23"
Nas-filter-Rule+="permit in ip from any to any"
```

This example shows how to limit host to access a group of IP address on the RADIUS server.

```
Nas-filter-Rule="permit in ip from any to 10.10.10.1/24"
Nas-filter-Rule+="permit in ip from any to fe80::d1:1/64"
```

The parameters of the Vendor-Specific Attribute are:

RADIUS Tunnel Attribute	Description	Value	Usage
Vendor-ID	Defines the vendor.	171 (DLINK)	Required
Vendor-Type	Defines the attribute.	14 (for ACL script)	Required
Attribute-Specific Field	IPv6 filter rule. Used to accept IPv6 address related inputs.	This attribute indicates either of the following IP modes for NAS-Filter-Rule 1=Forward IPv4 and IPv6 traffic 2=Forward IPv4-only traffic (drop any IPv6 traffic) If this attribute is not assigned by RADIUS server, forward IPv4-only traffic, any IPv6 packet will be dropped.	Required



NOTE: If both proprietary ACL script (VSA14) and standard NAS-Filter-Rule (92) are assigned at the same time, NAS-Filter-Rule (92) will take effect, and VSA14 will be ignored.

To assign the **CoA** by the RADIUS server, the proper parameters should be configured on the RADIUS server. The table below shows the parameters for CoA.

The parameters of the Vendor-Specific attributes are:

RADIUS Tunnel Attribute	Description	Value	Usage
Vendor-ID	Defines the vendor.	171 (DLINK)	Required
Vendor-Type	Defines the attribute.	23 (need to register it)	Required
Attribute-Specific Field	Used to assign the Dlink-AV-Pair.	disable-host-port bounce-host-port	Required

RADIUS CoA is used to change client authorizations in the following use cases:

- **Session termination with port shutdown:** The RADIUS server CoA disable port command administratively shuts down the authentication port that is hosting a session, resulting in session termination. This command is useful when a host is known to cause problems on the network and network access needs to be immediately blocked for the host. To restore network access on the port, re-enable it using a non-RADIUS mechanism. This command is carried in a standard CoA-Request message that has this new vendor-specific attribute (VSA): Dlink-AV-Pair = disable-host-port.
- **Session termination with port bounce:** When a CoA message is used to change the VLAN for an authenticated host, end devices such as printers do not have a mechanism to detect the VLAN change, so they do not renew the lease for their DHCP address in the new VLAN. The port bounce feature can be used to force the end device to initiate DHCP re-negotiation by causing a link flap on the authenticated port. The port is bounced if the following VSA attribute-value pair is received in the CoA message from the RADIUS server: Dlink-AV-Pair = bounce-host-port.

Appendix E - IETF RADIUS Attributes Support

Remote Authentication Dial-In User Service (RADIUS) attributes carry specific authentication, authorization, information and configuration details for the request and reply. This appendix lists the RADIUS attributes currently supported by the Switch.

RADIUS attributes are supported by the IETF standard and Vendor-Specific Attribute (VSA). VSA allows the vendor to create an additionally owned RADIUS attribute. For more information about D-Link VSA, refer to the **RADIUS Attributes Assignment** Appendix.

IETF standard RADIUS attributes are defined in the RFC 2865 Remote Authentication Dial-In User Service (RADIUS), RFC 2866 RADIUS Accounting, RFC 2868 RADIUS Attributes for Tunnel Protocol Support, and RFC 2869 RADIUS Extensions.

The following table lists the IETF RADIUS attributes supported by the D-Link Switch.

RADIUS Authentication Attributes:

Number	IETF Attribute
1	User-Name
2	User-Password
3	CHAP-Password
4	NAS-IP-Address
5	NAS-Port
6	Service-Type
7	Framed-Protocol
8	Framed-IP-Address
12	Framed-MTU
18	Reply-Message
24	State
26	Vendor-Specific
27	Session-Timeout
29	Termination-Action
30	Called-Station-ID
31	Calling-Station-ID
32	NAS-Identifier
60	CHAP-Challenge
61	NAS-Port-Type
64	Tunnel-Type
65	Tunnel-Medium-Type
77	Connect-Info
79	EAP-Message
80	Message-Authenticator
81	Tunnel-Private-Group-ID
85	Acct-Interim-Interval
87	NAS-Port-ID
95	NAS-IPv6-Address

RADIUS Accounting Attributes:

Number	IETF Attribute
1	User-Name
4	NAS-IP-Address
5	NAS-Port
6	Service-Type
8	Framed-IP-Address
31	Calling-Station-ID
32	NAS-Identifier
40	Acct-Status-Type
41	Acct-Delay-Time
42	Acct-Input-Octets
43	Acct-Output-Octets
44	Acct-Session-ID
45	Acct-Authentic
46	Acct-Session-Time
47	Acct-Input-Packets
48	Acct-Output-Packets
49	Acct-Terminate-Cause
52	Acct-Input-Gigawords
53	Acct-Output-Gigawords
61	NAS-Port-Type
92	RADIUS Filter Rule Attribute
95	NAS-IPv6-Address