



DSL-302G Quick Installation Guide for PPPoA Connection

- 1) Set your PC or router to “Obtain an IP Address automatically” (see **Appendix A** below if you are not sure how to do that). Restart it if you are asked to do so.
- 2) There are two ways you could install and configure DSL-302G:
 - a. Using your web browser (eg. Internet Explorer)
 - b. Using the Ethernet Wizard Installation Utility on the CD (Please refer to the QIG in the package)

Using Web Browser

- 3) Connect either Ethernet or USB connection from your PC to the DSL-302G.

If you have not installed the DSL-302G USB driver before, unplug the USB connection first. You need to install it from the CD (SETUP.EXE), restart your PC and then connect the USB connection.
- 4) You could configure the DSL-302G using your web browser (eg. Internet Explorer).

If you are using **Ethernet** connection, type in **http://10.1.1.1/** in the address location.

If you are using **USB** connection, type in **http://10.1.1.2/** in the address location.
- 5) Press “Enter” and you will get the following prompt. Enter the User Name and Password (both are “admin” by default).

Enter Network Password

Please type your user name and password.

Site: 10.1.1.1

Realm: DSL-302G

User Name: admin

Password: *****

Save this password in your password list

OK Cancel

D-Link®

6) Under **Quick Configuration**, configure your PPPoA account as the steps given below.

1. Quick Configuration

Use this page to quickly configure the system.

Refresh Rate: **2. Select "No Refresh"**

Connection Type: PPPoA VC-Mux

VPI: 8

VCI: 35

3. Enter your account info as provided by your ISP

Security Protocol: PAP CHAP

Username: user@isp.com.au

Password: *****

4. Click on "Save & Reboot"

Save & Reboot Delete Cancel Help

PPP Information			
IP Address	Mask	Gateway	Connection Status
0.0.0.0	0.0.0.0	0.0.0.0	VC down Connect

Copyright © 2002 D-Link, Inc. All rights reserved.

Your configuration is all done.

7) You may need to refresh your browser to look at your new settings. You could check your status by looking under **System View** as below:



DSL-302G Configuration Manager GUI - Microsoft Internet Explorer

Address: http://10.1.1.1/hag/pages/home.ssi

D-Link
Building Networks For People

System View

Use this page to get the summary on the existing configuration of your device.

Refresh Rate:

Device		DSL					
Model:	DSL-302G	Operational Status:	<input checked="" type="checkbox"/> Showtime/Data				
S/W Version:	R2.01M.B12.AU(021206a/W78.1.7)	DSL Version:	W78.1.7				
Mode:	Bridging	Standard:	G.dmt				
Up Time:	2:44:19	Up	Speed	Latency	Down	Speed	Latency
Time:	Thu Jan 01 05:07:23 1970	128 Kbps	Fast	512 Kbps	Fast		
Time Zone:	GMT						
Daylight Saving Time:	OFF						
Name:	-						
Domain Name:	-						
WAN Interfaces							
Interface	Encapsulation	IP Address	Mask	Gateway	Lower Interface	VPI/VCI	Status
ppp-0	PPPoA	203.103.156.150	255.255.255.255	203.103.156.1	aal5-0	8/35	<input checked="" type="button" value="Connected"/> <input type="button" value="Disconnect"/>

Copyright © 2002 D-Link, Inc. All rights reserved.

Using Ethernet Wizard Installation Utility

8) Please refer to the QIG included in your package.



APPENDIX A

If you are going to connect the DSL-302G to your computer (no router):

Setup Your Computer

- First set your computer up to **obtain IP address automatically:**
 - in Win95/98 - Control Panel > Network > TCP/IP (linked to your network card) > Properties.
- in Windows 2000/XP – Control Panel > Network Connections > Local Area Connection > Properties.

Connect your computer to the DSL-302G (using straight-through cable), make sure you are getting a link light on the modem's Ethernet port.

Restart PC.

After rebooting check the IP address that you have got:

- in Win95/98 - go to Start > Run > winipcfg > OK > select your adapter and look under IP Address.
- in Win2000/XP go to Start > Run > cmd > OK > ipconfig /all > look for IP Address.

It should be something like 10.1.1.x

If it is not - do the following:

- in Win95/98 - go to Start > Run > winipcfg > OK > select your adapter and press Release All and then Renew All.
- in Win2000/XP go to Start > Run > cmd > OK > ipconfig /release (hit Enter) > ipconfig /renew (hit Enter)

If the modem will be connected to a router:

Connect the ethernet port of DSL-302G to Internet port (WAN port or External port) of your router. Make sure you are getting a link light on the modem's Ethernet port. If you do not get a link light you may need to change the type of cable you are using (cross-over or straight).

Set your router's WAN port to "Obtain IP address automatically" (Dynamic IP).

Connect your computer to one of the LAN ports on the router.

~End of Document~