



## ***DSL-302G Quick Installation Guide for PPPoE Connection***

- 1) Set your PC or router to “Obtain an IP Address automatically” (see **Appendix A** below if you are not sure how to do that). Restart it if you are asked to do so.
- 2) Connect the Ethernet connection from your PC to the DSL-302G.
- 3) You could configure the DSL-302G using your web browser (eg. Internet Explorer).  
Type in **http://10.1.1.1/** in the address location.
- 4) Press “Enter” and you will get the following prompt. Enter the User Name and Password (both are “admin” by default).

**Enter Network Password** ? X

 Please type your user name and password.

Site: 10.1.1.1

Realm: DSL-302G

User Name: admin

Password: xxxxxx

Save this password in your password list

OK Cancel

5) Under **Quick Configuration**, configure your PPPoE account as the steps given below.

**1.** Quick Configuration

**2.** Select "No Refresh"

**3.** Select "PPPoE LLC"

**4.** Enter your account info as provided by your ISP

**5.** Click on "Save & Reboot"

PPP Information			
IP Address	Mask	Gateway	Connection Status
0.0.0.0	0.0.0.0	0.0.0.0	VC down <b>Connect</b>

Copyright © 2002 D-Link, Inc. All rights reserved.

Your configuration is all done.

6) You might need to refresh your browser to look at your new settings. You could check your status by looking under **System View** as below:



DSL-302G Configuration Manager GUI - Microsoft Internet Explorer

Address: http://10.1.1.1/hag/pages/home.ssi

### D-Link Building Networks For People

**System View**

Use this page to get the summary on the existing configuration of your device.

Refresh Rate:

Device		DSL					
<b>Model:</b>	DSL-302G	<b>Operational Status:</b>	<input checked="" type="checkbox"/> Showtime/Data				
<b>S/W Version:</b>	R2.01M.B12.AU(021206a/W78.1.7)	<b>DSL Version:</b>	W78.1.7				
<b>Mode:</b>	Bridging	<b>Standard:</b>	G.dmt				
<b>Up Time:</b>	2:44:19	<b>Up</b>	<b>Speed</b>	<b>Latency</b>	<b>Down</b>	<b>Speed</b>	<b>Latency</b>
<b>Time:</b>	Thu Jan 01 05:07:23 1970	128 Kbps	Fast	512 Kbps	Fast		
<b>Time Zone:</b>	GMT						
<b>Daylight Saving Time:</b>	OFF						
<b>Name:</b>	-						
<b>Domain Name:</b>	-						
WAN Interfaces							
Interface	Encapsulation	IP Address	Mask	Gateway	Lower Interface	VPI/VCI	Status
ppp-0	PPPOE	203.103.156.150	255.255.255.255	203.103.156.1	aal5-0	8/35	<input checked="" type="checkbox"/> Connected <input type="button" value="Disconnect"/>

Copyright © 2002 D-Link, Inc. All rights reserved.



## APPENDIX A

### **If you are going to connect the DSL-302G to your computer (no router):**

#### **Setup Your Computer**

- First set your computer up to **obtain IP address automatically:**
  - in Win95/98 - Control Panel > Network > TCP/IP (linked to your network card) > Properties.
- in Windows 2000/XP – Control Panel > Network Connections > Local Area Connection > Properties.

Connect your computer to the DSL-302G (using straight-through cable), make sure you are getting a link light on the modem's Ethernet port.

Restart PC.

After rebooting check the IP address that you have got:

- in Win95/98 - go to Start > Run > winipcfg > OK > select your adapter and look under IP Address.
- in Win2000/XP go to Start > Run > cmd > OK > ipconfig /all > look for IP Address.

It should be something like 10.1.1.x

If it is not - do the following:

- in Win95/98 - go to Start > Run > winipcfg > OK > select your adapter and press Release All and then Renew All.
- in Win2000/XP go to Start > Run > cmd > OK > ipconfig /release (hit Enter) > ipconfig /renew (hit Enter)

### **If the modem will be connected to a router:**

Connect the ethernet port of DSL-302G to Internet port (WAN port or External port) of your router. Make sure you are getting a link light on the modem's Ethernet port. If you do not get a link light you may need to change the type of cable you are using (cross-over or straight).

Set your router's WAN port to "Obtain IP address automatically" (Dynamic IP).

Connect your computer to one of the LAN ports on the router.

~End of Document~