

**D-Link®**

WIRELESS ADSL2/2+ MODEM ROUTER  
DSL-G604T

**QUICK  
INSTALLATION  
GUIDE**

A large, light gray, stylized letter 'D' logo is positioned in the background, partially overlapping the text. The 'D' has a white, rounded rectangular cutout in its center.

# CONTENTS OF PACKAGING

## CONTENTS



### **INSTALLATION CD**

INCLUDES SET-UP WIZARD & TECHNICAL MANUALS



### **ADSL2/2+ MODEM ROUTER**

DSL-G604T



### **12V 1.25A POWER ADAPTER**

ADAPTER



### **ETHERNET CABLE (RJ-45 CABLE)**

CONNECT THE ROUTER TO YOUR PC DURING SET-UP



If any of these items are missing from your packaging contact your reseller

# PRODUCT SET-UP

## CD SET-UP WIZARD



### SET-UP WIZARD CD

The CD contains all of the instructions required to set-up DSL-G604T



### INSERT CD

Insert the CD into the CD drive of your computer. The set-up wizard should start automatically. Make sure that your internet connection is active. (Do not plug in DSL-G604T yet)



### SET-UP WIZARD

Select your language from the list of options and follow the steps within the wizard to complete the set-up of DSL-G604T

## ADVANCED SET-UP [ACCESS VIA IP ADDRESS]

To configure DSL-G604T manually (without the set-up CD) connect your computer to the DSL-G604T using the ethernet cable provided. Then connect the power cable on the DSL-G604T. The power light will display as solid green.

Then simply open a browser window and enter the IP address in the browser address field:

IP ADDRESS: <http://10.1.1.1>

USERNAME: admin

PASSWORD: admin

# TROUBLESHOOTING

## SET-UP AND CONFIGURATION PROBLEMS

### 1. HOW DO I CONFIGURE MY DSL-G604T ROUTER WITHOUT THE CD, OR CHECK MY WIRELESS NETWORK NAME (SSID) AND WIRELESS ENCRYPTION KEY?

- Connect your PC to the router using an Ethernet cable.
- Open a web browser and enter the address <http://10.1.1.1>
- The default username is admin. The default password is admin.
- If you have changed the password and can not remember it, you will need to reset the router to set the password back to admin.

### 2. HOW DO I RESET MY DSL-G604T ROUTER TO FACTORY DEFAULT SETTINGS?

- Ensure the router is powered on.
  - Use a ballpoint or paper clip to push down the reset button.
- Note: Resetting the router to factory default will erase the current configuration settings. To re-configure your settings, log into the router as outlined in question 1, then run the Setup Wizard.

### 3. HOW DO I ADD A NEW WIRELESS CLIENT OR PC IF I HAVE FORGOTTEN MY WIRELESS NETWORK NAME (SSID) OR WIRELESS ENCRYPTION KEY?

- Every PC that needs to connect to the router wirelessly, you will need to ensure you use the correct Wireless Network Name (SSID) and encryption key.
- Use the web based user interface (as described in question 1 above) to check or choose your wireless settings.
- Make sure you write down these settings so that you can enter them into each wirelessly connected PC. You will find a dedicated area on the back of this document, this important information for future use.

### 4. WHY CAN I NOT GET AN INTERNET CONNECTION?

For ADSL users please contact your ISP to make sure the service has been enabled/connected by your ISP and that your ISP username and password is correct.

## TECHNICAL SUPPORT

### Australia:

Tel: 1300-766-868

24/7(24Hrs, 7days a week) technical support

<http://www.dlink.com.au>

e-mail: [support@dlink.com.au](mailto:support@dlink.com.au)

### New Zealand:

Tel: 0800-900-900

24/7(24Hrs, 7days a week) technical support

<http://www.dlink.co.nz>

e-mail: [support@dlink.co.nz](mailto:support@dlink.co.nz)

## NOTES

## NOTES

## NOTES

# WIRELESS NETWORK REMINDER

Wireless Network Name (SSID)

Wireless Network Password