



# User Manual

## HD Wi-Fi Camera

DCS-935L

---

# Manual Overview

D-Link reserves the right to revise this publication and to make changes in the content hereof without obligation to notify any person or organization of such revisions or changes. Information in this document may become obsolete as our services and websites develop and change. Please refer to the [www.mydlink.com](http://www.mydlink.com) website for the most current information.

## Manual Revision

Revision	Date	Description
1.00	October 01, 2014	DCS-935L Revision A1 with firmware version 1.00

## Trademarks

D-Link and the D-Link logo are trademarks or registered trademarks of D-Link Corporation or its subsidiaries in the United States or other countries. All other company or product names mentioned herein are trademarks or registered trademarks of their respective companies.

Copyright © 2014 by D-Link Corporation.

All rights reserved. This publication may not be reproduced, in whole or in part, without prior expressed written permission from D-Link Corporation.

---

# Table of Contents

<b>Product Overview</b> .....	<b>5</b>	Image Setup .....	30
Package Contents.....	5	Audio and Video.....	31
System Requirements.....	5	Motion Detection .....	32
Introduction .....	6	Sound Detection.....	33
Features.....	7	Mail .....	34
Hardware Overview .....	8	FTP.....	35
Front View.....	8	Snapshot.....	36
Rear View .....	9	Video Clip .....	37
<b>Installation</b> .....	<b>10</b>	Time and Date.....	38
Wireless Installation Considerations.....	11	Day/Night Mode .....	39
Zero Configuration Setup.....	12	Maintenance .....	40
Mobile App Setup .....	15	Admin .....	40
Mounting the Camera.....	16	System .....	41
Direct Connect Mode.....	17	Firmware Upgrade.....	42
mydlink.....	18	Status .....	43
<b>Configuration</b> .....	<b>19</b>	Device Info .....	43
Accessing the Web Configuration Utility .....	19	System Log.....	44
Live Video .....	20	Event Log.....	45
Setup.....	22	<b>Wireless Security</b> .....	<b>46</b>
Wizard .....	22	What is WEP? .....	46
Internet Connection Setup Wizard.....	23	What is WPA? .....	47
Network.....	26	Configuring the DCS-935L with a Router .....	48
Wireless Setup.....	28	<b>Troubleshooting</b> .....	<b>54</b>
Dynamic DNS .....	29		

**Wireless Basics .....56**  
    Wireless Modes.....60

**Networking Basics .....61**  
    Check your IP address.....61  
    Statically Assign an IP Address .....62

**Technical Specifications .....63**

# Product Overview

## Package Contents

- DCS-935L HD Wi-Fi Camera
- Power Adapter
- Quick Install Guide
- Mounting Kit

If any of the above items are missing, please contact your reseller.

**Note:** Using a power supply with a different voltage than the one included with your product will cause damage and void the warranty for this product.

**Note:** You can power this camera with a USB battery that supplies 5 V and at least 1.5 A of power.



## System Requirements

- Computer with Microsoft Windows® 8/7/Vista, or Mac with OS X 10.6 or higher
- PC with 1.3GHz or above and at least 128MB RAM
- Internet Explorer 7, Firefox 12, Safari 6, or Chrome 20 or higher version with Java installed and enabled
- Existing 802.11b/g/n/ac wireless network
- iPhone, iPad, or Android smartphone or tablet\*

\* Please refer to the mobile app's store page to check whether your device is compatible.

# Introduction

Congratulations on your purchase of the DCS-935L HD Wi-Fi Camera. The DCS-935L is a versatile and unique solution for your small office or home. Unlike a standard webcam, the DCS-935L is a complete system with a built-in CPU and web server that transmits high quality video images for security and surveillance. The IR LED provides around the clock surveillance regardless of the lighting conditions. The DCS-935L can be accessed remotely, and controlled from any PC/Notebook over your local network or through the Internet via a web browser. The simple installation and intuitive web-based interface offer easy integration with your Ethernet/Fast Ethernet or 802.11b/g/n/ac wireless network. The DCS-935L also comes with remote monitoring and motion/sound detection features for a complete and cost-effective home security solution.

# Features

## **Simple to Use**

The DCS-935L is a stand-alone system with a built-in CPU, requiring no special hardware or software such as PC frame grabber cards. The DCS-935L supports both ActiveX mode for Internet Explorer and Java mode for other browsers such as Firefox® and Safari®.

## **Supports a Variety of Platforms**

Supporting TCP/IP networking, HTTP, and other Internet related protocols. The DCS-935L can also be integrated easily into other Internet/Intranet applications because of its standards-based features.

## **Wireless AC Support**

The DCS-935L offers 802.11ac wireless, making the DCS-935L easy to integrate into your existing network environment. The DCS-935L also works 802.11n/g/b routers or access points for added flexibility. The Site Survey feature also allows you to view and connect to any available wireless networks.

## **Web Configuration**

Using a standard Web browser, administrators can configure and manage the Network Camera directly from its own Web page via Intranet or Internet. This means you can access your DCS-935L anytime, anywhere in the world.

## **Broad Range of Applications**


With today's high-speed Internet services, the Network Camera can provide the ideal solution for delivering live video images over the Intranet and Internet for remote monitoring. The Network Camera allows remote access using a Web browser for live image viewing, and allows the administrator to manage and control the Network Camera anytime, anywhere in the world. Many applications exist, including industrial and public monitoring of homes, offices, banks, hospitals, child-care centers, and amusement parks.

## **Comprehensive Day/Night Surveillance**

The built-in infrared LEDs enable night time viewing of up to 16 feet (5 meters), allowing you to keep watch over an area, even in complete darkness.

# Hardware Overview

## Front View

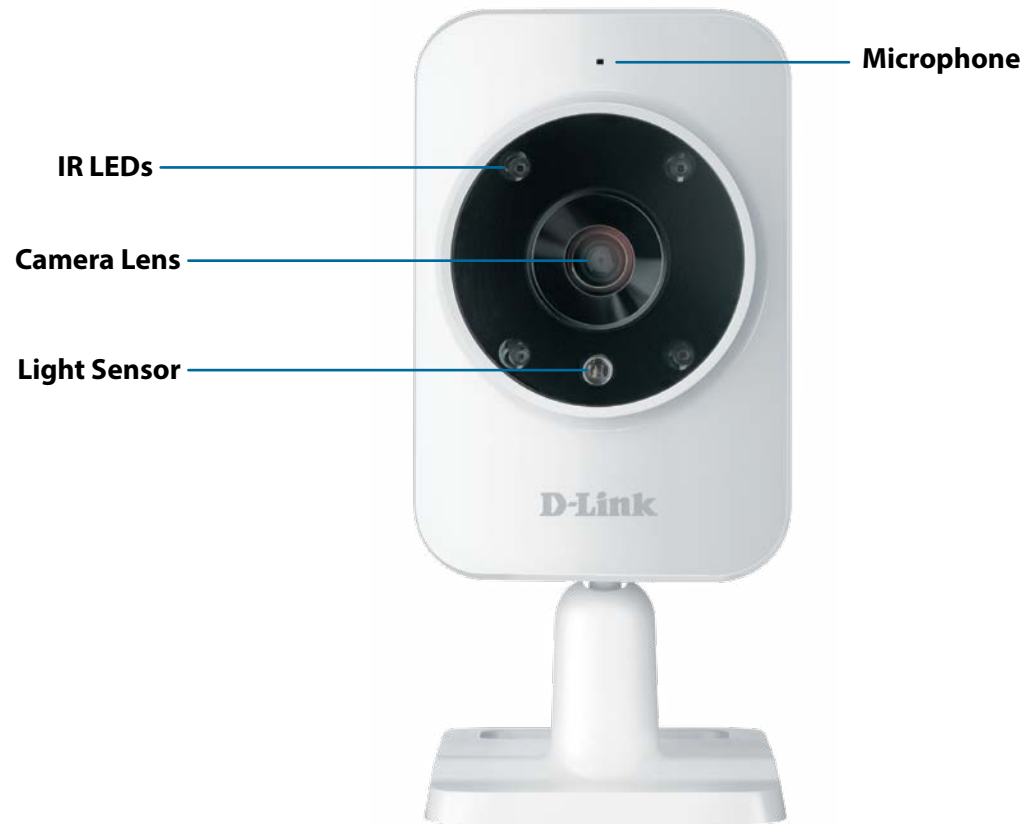



## Rear View



# Installation

There are two ways to set up your camera:

**Zero Configuration Setup:** If you have a mydlink-enabled router (D-Link cloud router), this is the easiest way to set up your camera. Refer to **Zero Configuration Setup** on page 12.

**mydlink Lite Mobile App:** If you do not have a mydlink-enabled router, you can use the mydlink Lite mobile app to guide you through setup and initial configuration of your camera. Refer to **Mobile App Setup** on page 15.

# Wireless Installation Considerations

The D-Link Wireless Network Camera lets you access your network using a wireless connection from anywhere within the operating range of your wireless network. However, the number, thickness and location of walls, ceilings, or other objects that the wireless signals must pass through, may limit the range. Typical ranges vary depending on the types of materials and background RF (radio frequency) noise in your home or business. The key to maximizing wireless range is to follow these basic guidelines:

1. Minimize the number of walls and ceilings between your adapter and other network devices (such as your Network Camera) - each wall or ceiling can reduce your adapter's range from 3-90 feet (1-30 meters).
2. Be aware of the direct line between network devices. A wall that is 1.5 feet thick (.5 meters), at a 45-degree angle appears to be almost 3 feet (1 meter) thick. At a 2-degree angle, it looks over 42 feet (14 meters) thick. Position your devices so that the signal will travel straight through a wall or ceiling (instead of at an angle) for better reception.
3. Building Materials make a difference. A solid metal door or aluminum studs may weaken the wireless signal. Try to position your access points, wireless routers, and other networking devices where the signal passes through drywall or open doorways. Materials and objects such as glass, steel, metal, walls with insulation, water (fish tanks), mirrors, file cabinets, brick, and concrete will degrade your wireless signal.
4. Keep your product at least 3-6 feet or 1-2 meters away from electrical devices or appliances that generate RF noise.
5. If you are using 2.4GHz cordless phones or other radio frequency sources (such as microwave ovens), your wireless connection may degrade dramatically or drop completely. Make sure your 2.4GHz phone base is as far away from your wireless devices as possible. The base transmits a signal even if the phone is not in use.


# Zero Configuration Setup

**If you have a mydlink-enabled Cloud Router**, you can take advantage of Zero Configuration Setup. Zero Configuration automatically configures your camera's settings for you, and adds the camera to your mydlink account automatically. This type of setup allows you to set up your camera by simply plugging it in and connecting it to your router.

Connect your camera to your mydlink-enabled Cloud Router and Zero Configuration will automatically configure your DCS-935L and add the camera to your mydlink account. After the short time it takes to do this you can remotely access your camera from the website (<http://www.mydlink.com>) to manage and monitor your DCS-935L.


## Plug in the External Power Adapter

Connect the power adapter to the microUSB port on the back of the camera. Plug the power adapter in to a wall outlet.

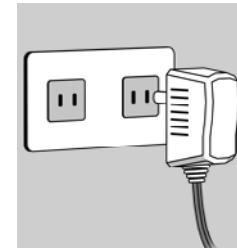


## Press the WPS button on your camera

Press and hold the WPS button for three seconds. The blue WPS status LED will start blinking.

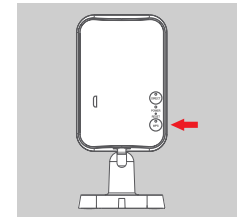

## Press the WPS button on your Cloud Router

Press the WPS button on your router within 60 seconds. The WPS button is usually on the side or back of your Cloud Router. The DCS-935L will automatically create a secure wireless connection to your router and reboot. When it has successfully connected, the Power LED will be lit green and the Direct LED will be turned off.

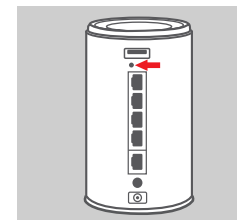

## Check Your mydlink Account

From any computer with an Internet connection, open a web browser and login to your mydlink account. The mydlink page will check for new devices and display a **New device Found!** pop-up notification in the bottom-left corner. Click the notification to continue.

The screenshot shows the mydlink web interface for a DIR-605L router. The top navigation bar includes 'My Devices', 'Shared Devices', 'My Services', and 'My Profile'. The main content area displays 'Router Status' and 'Settings' tabs. The router status section shows a signal strength indicator, a 'Reboot' button, and network information: Model Name (DIR-605L), Network Name (SSID) (Taonet), Internet IP (192.168.1.103), LAN IP (192.168.0.1), and Connected Devices (5 device(s)). Below this is a 'Connection List' table with columns for Device, Device Name, IP Address, MAC Address, and Block. The table lists five devices, including 'CardboardBox', 'HeiGuy', and several unnamed devices. A 'New Device Found!' notification is visible in the bottom-left corner, showing 'DCS-935L'.

Device	Device Name	IP Address	MAC Address	Block
	CardboardBox	192.168.0.110	00 28 2D 02 FE FA	<input type="checkbox"/>
	--	192.168.0.120	04 54 53 50 53 18	<input type="checkbox"/>
	HeiGuy	192.168.0.100	00 1A 92 E2 4D C9	<input type="checkbox"/>
	--	192.168.0.121	28 E0 2C DC 0A BE	<input type="checkbox"/>
	--	192.168.0.101	F0 A2 25 AA 8C C3	<input type="checkbox"/>

A summary and confirmation notification will appear with the automatically configured details. Make a note of the details and click **Yes** to add the camera to your account.

The screenshot shows a 'Confirming New Device' dialog box. It asks, 'Do you want to add this new device to your mydlink account?'. Below the question, the following details are listed: Device Name: DCS-935L, mydlink Number: 44441252, Network name (SSID): dddddd, and Admin Password: oic953XZ. At the bottom, there are two buttons: 'Not now' and 'Yes'.

**Confirming New Device**

Do you want to add this new device to your mydlink account?

**Device Name: DCS-935L**  
**mydlink Number: 44441252**  
**Network name (SSID): dddddd**  
**Admin Password: oic953XZ**


You can change these default settings by going to **Advanced Settings** after add it to your device list.

## Section 2 - Installation

Zero Configuration will navigate to the mydlink Live View tab for your camera where you will see a screen similar to the following.

Your camera is now set up, and you can skip to **mydlink** on page 18 to learn more about the mydlink features of this camera, or to **Configuration** on page 19 for advanced configuration of your camera.

**Note:** If you see a white haze when viewing in night vision mode, the night vision light on the camera may be reflecting off a nearby surface. Try repositioning and aiming the camera.

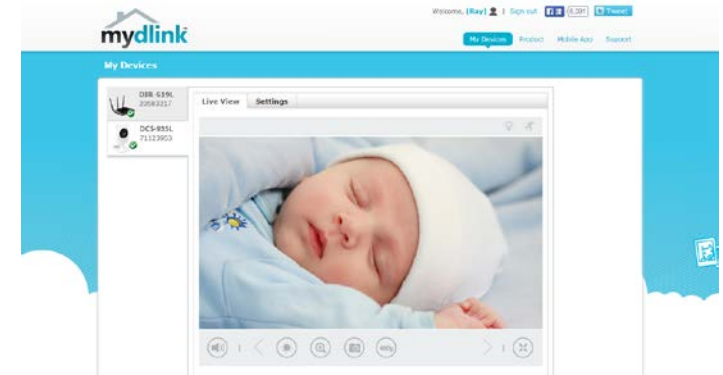

# Mobile App Setup

If you do not have a **mydlink-enabled Cloud Router**, you can configure your camera through the mydlink Lite mobile app. Search for the free **mydlink Lite** app on the App Store or Google Play and download it to your smartphone or tablet. You can also use a QR code reading app to scan the corresponding code for your device below.




Launch the **mydlink Lite** app and tap on the **Local** button at the bottom, then tap the **Add Camera** button. Follow the onscreen prompts to set up and install your camera.


## Mounting the Camera

To mount your camera on a wall or ceiling, please follow the steps below. It is recommended that you configure the camera before mounting.

Depending on the material of the wall or ceiling, use proper tools to drill two holes 25mm deep, 40mm apart with a 6mm drill bit where you marked. Insert the screws into the holes. If the wall is made out of concrete, drill the holes first, then insert the plastic anchors to support the screws.

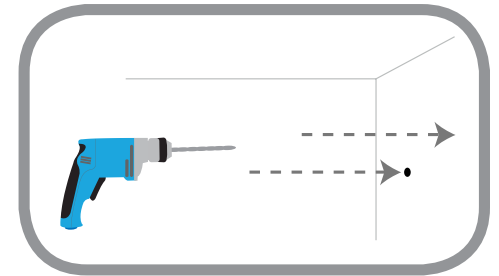

Place the mounting base over the screws that are mounted on the wall. Make sure to fit the screw-heads over the big holes and slide it downward to lock firmly. Lightly pull the base forward to make sure that it is locked. Adjust the angle of the camera as desired.

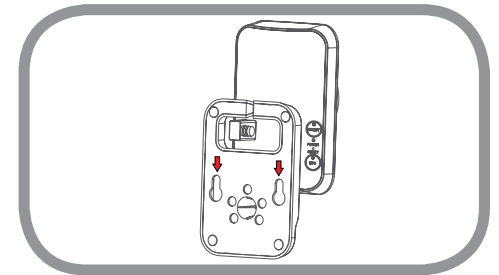





## Direct Connect Mode

The DCS-935L can be used as a portable camera that you can take with you. Direct Connect Mode lets you wirelessly connect your mobile device directly to your camera. You can then use your mobile device as a monitor for your camera.

Connect your camera to the power adapter to turn it on. Alternatively, you can use a microUSB cable to connect your camera to a USB battery that supplies 5 V and at least 1.5 A of power.

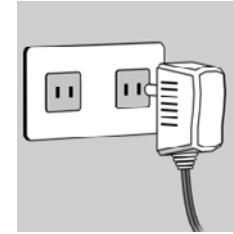

If the Direct LED is not lit green, press the Direct button to switch to Direct Connect Mode.

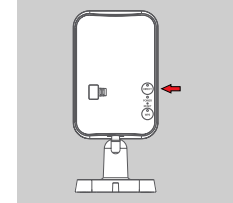


On your mobile device, connect to your camera's Wi-Fi network. The network name will be **DCS-935L-XXXX**, where XXXX is a 4-digit code. The network name and password are printed on a label attached to your camera.

You can now use the mydlink Lite app to view your camera. Please note that your mobile device must be within wireless range to view your camera.

# mydlink

After registering your camera with a mydlink account in the Camera Installation Wizard, you will be able to remotely access your camera from the **www.mydlink.com** website. After signing in to your mydlink account, you will see a screen similar to the following:

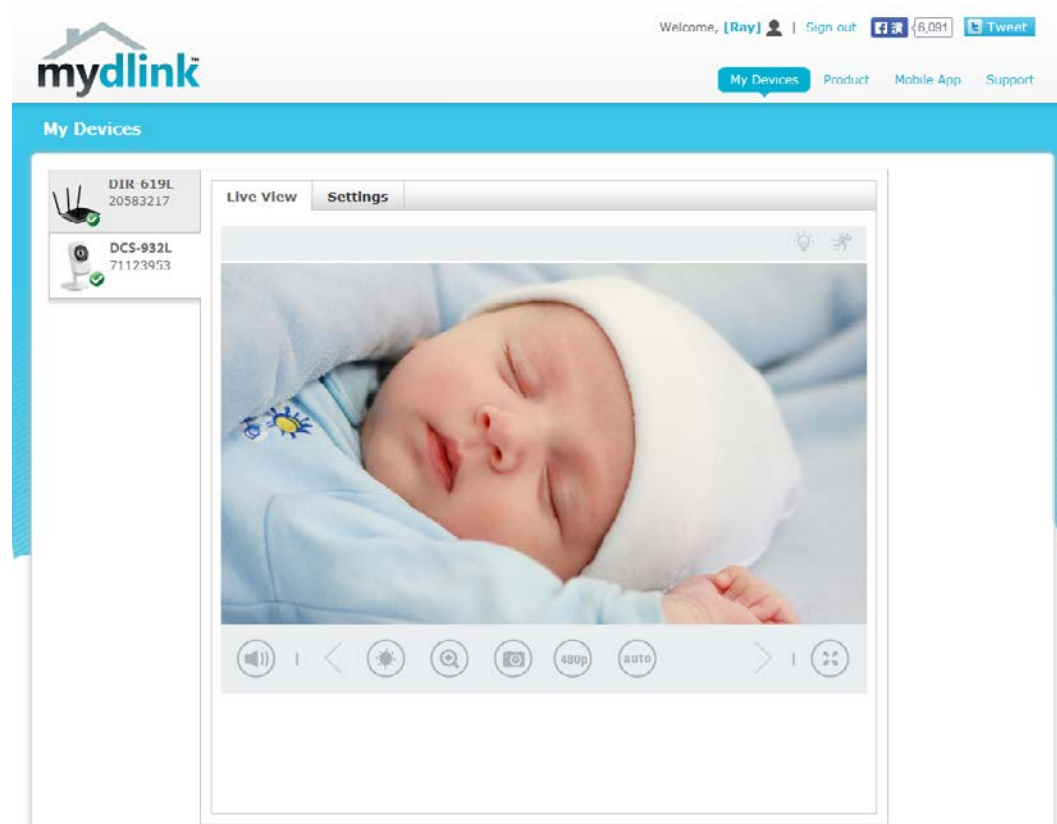

For more details on using your camera with mydlink, go to the **Support** section of the mydlink website and check the **User Manual** section for your product to find the latest instruction guide for your camera's mydlink features.

# Configuration

## Accessing the Web Configuration Utility


After installing and setting up your camera with the mydlink Lite app, you are ready to use your camera. The camera's built-in Web configuration utility is designed to allow you to easily access and configure your DCS-935L.

To log in, use a web browser on your PC to go to the **www.mydlink.com** website and log in to your account. Select your camera, click on the **Settings** tab, then click on the **Advanced Settings** button. Use the User name **admin** and the password you created while setting up the camera. If you did not create a password, the default password is blank. After entering your password, click **OK**.

**Note:** If you are directly connecting your PC to the camera, the default IP is **10.255.255.1**

Please make sure that you have the latest version of Java application installed on your computer to ensure proper operation when viewing the video in Java mode. The Java application can be downloaded at no cost from Sun's web site (<http://www.java.com>).

When you connect to the home page of your camera, you may be prompted to download ActiveX. If you want to use ActiveX to view your video images instead of Java, then you must download ActiveX.

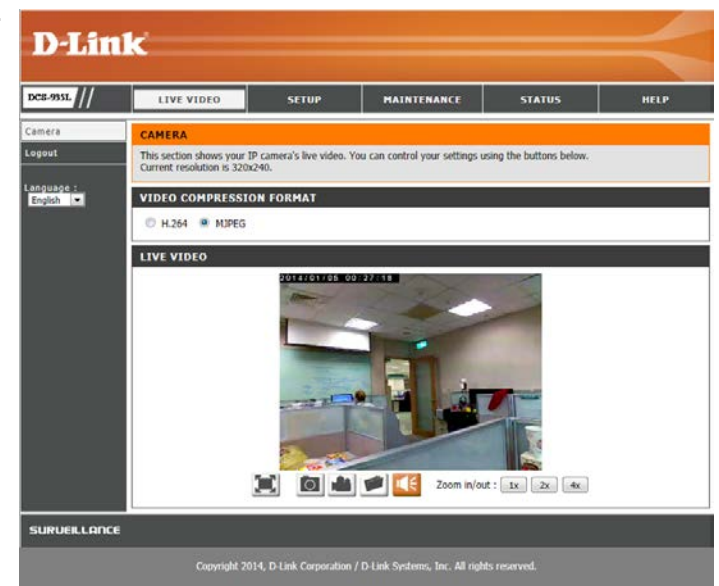










# Live Video

The Live Video page lets you view the live video stream from your camera. You can choose which video profile to view by selecting H.264 or MJPEG. For information on adjusting the video profiles, refer to **Audio and Video** on page 31.

Please make sure that you have the latest version of Java installed on your computer to ensure proper operation when viewing the video in Java mode. The Java application can be downloaded free from Sun's web site (<http://www.java.com>).

The screenshot displays the D-Link DCS-935L web interface. At the top, the D-Link logo is visible. Below it, a navigation bar includes 'DCS-935L //', 'LIVE VIDEO', 'SETUP', 'MAINTENANCE', 'STATUS', and 'HELP'. The 'LIVE VIDEO' tab is active. On the left sidebar, there are links for 'Camera', 'Logout', and a 'Language' dropdown menu set to 'English'. The main content area features a 'CAMERA' section with a description: 'This section shows your IP camera's live video. You can control your settings using the buttons below. Current resolution is 320x240.' Below this is the 'VIDEO COMPRESSION FORMAT' section, where 'H.264' is unselected and 'MJPEG' is selected. The 'LIVE VIDEO' section contains a video player showing a live feed of an office interior. The video player includes a timestamp '2014/01/05 00:27:18' and a 'Zoom in/out' control with buttons for '1x', '2x', and '4x'. At the bottom of the interface, the word 'SURVEILLANCE' is displayed, followed by the copyright notice: 'Copyright 2014, D-Link Corporation / D-Link Systems, Inc. All rights reserved.'

Icon	Button Name	Function
	Full Screen button	Switches to a full screen view of the camera video.
	Snapshot button	Takes a snapshot of the image currently displayed on the screen and saves it to the hard drive in the folder specified using the Storage folder button.
	Video recording button	Triggers the camera's recording function. This will record the video displayed on the screen and saves it to the hard drive in the folder specified using the Storage folder button.
	Storage folder button	Sets the storage folder for snapshots and video recordings.
	Listen button	Sends the audio received from the camera's microphone through to the PC's speakers.
	IR LED On/Off button	Turns the Infrared lights on or off.  (The icon only appears when you activate the manual IR option which can be found under the Day/Night Mode section of the Audio and Video Setup tab.)
Zoom in/out:   	Zoom buttons	Zooms in or out of the picture.

# Setup Wizard

This section allows you to begin setup wizards which will guide you through the process of getting your camera's various functions configured. If you are comfortable with adjusting the settings manually, you may skip the wizards and adjust settings manually as needed.

**Internet Connection Setup Wizard:** You may choose to configure your network by using the Internet Connection Setup Wizard that includes step-by-step instructions. Please refer to **Internet Connection Setup Wizard** on page 23 for more details.

**Manual Internet Connection Setup:** If you would rather manually set up the camera internet connection, you can refer to **Network Setup** on page 26 which provides more details on the information required.

The screenshot displays the D-Link web interface for the DCS-935L camera. At the top, the D-Link logo is visible. Below it is a navigation bar with tabs for LIVE VIDEO, SETUP, MAINTENANCE, STATUS, and HELP. The main content area is titled 'INTERNET CONNECTION SETTINGS' and contains the following text: 'In this section, you can setup the IP camera's network interface settings. If you are configuring this device for the first time, D-Link recommends that you click the Internet Connection Setup Wizard button, and follow the instructions on screen. If you wish to modify or configure the IP camera settings manually, click the Manual Internet Connection Setup button.' Below this text are two buttons: 'Internet Connection Setup Wizard' and 'Manual Internet Connection Setup'. On the left side, there is a vertical menu with options: Wizard, Network Setup, Wireless Setup, Dynamic DNS, Image Setup, Audio and Video, Motion Detection, Sound Detection, Mail, FTP, Snapshot, Video Clip, Time and Date, Day/Night Mode, and Logout. On the right side, there is a 'Helpful Hints..' section with the text: 'If you are an advanced user and have configured an Internet camera before, click 'Manual Internet Connection Setup' to input all the settings manually.' At the bottom of the page, there is a 'SURVEILLANCE' section and a copyright notice: 'Copyright 2014, D-Link Corporation / D-Link Systems, Inc. All rights reserved.'

## Internet Connection Setup Wizard

This wizard will guide you through a step-by-step process to configure your new D-Link Camera and connect the camera to the Internet.

Click **Next** to continue.

Select how the camera will connect to the Internet.

**If your router is connected to a router, or you are unsure how your camera will connect to the Internet, select DHCP Connection.**

**If your ISP has assigned you a static IP, select Static IP Address** and enter the following details:

**IP Address:** Enter the IP address that the camera will use on your network. You may need to get this information from your ISP or network administrator.

**Subnet Mask:** The default value is "255.255.255.0." Used to determine if the destination is part of the same network segment.


**Default Gateway:** The gateway used to forward data to destinations in a different subnet. Invalid gateway settings may cause the failure of transmissions to a different subnet.

**Primary DNS:** Primary domain name server that translates names to IP addresses.

**Secondary DNS:** Secondary domain name server to backup the Primary DNS.

**If you are required to connect using PPPoE, select PPPoE** and enter the User ID and Password for your PPPoE connection.

Click **Next** to continue.

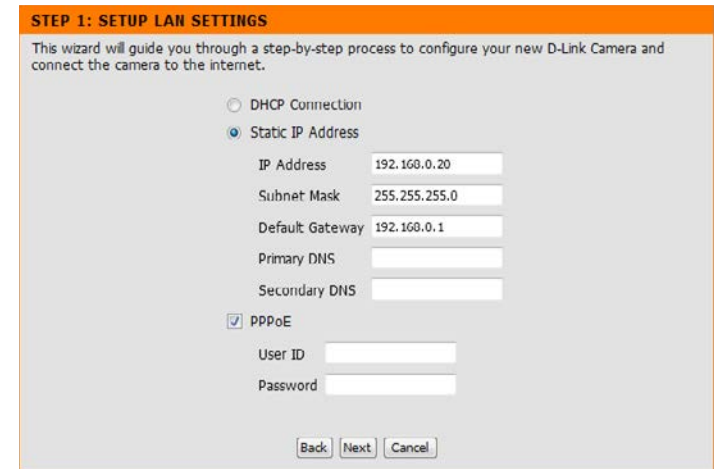

## Section 3 - Configuration

A Dynamic DNS account allows you to access your camera over the Internet when you have an IP address that changes each time you connect to the Internet. If you have a Dynamic DNS account, click **DDNS Enable** and enter the following details:

**Server Address:** Select your Dynamic DNS Server from the pull down menu.

**Host Name:** Enter the host name of the DDNS server.

**User Name:** Enter your username or e-mail address used to connect to the DDNS.

**Password:** Enter your password used to connect to the DDNS server.


**Timeout:** You can setup how often the camera notifies the DDNS server of its current global IP address by entering a whole number in hours.

Click **Next** to continue.

Enter a name for your camera. Click **Next** to continue.

Select the time zone that the camera is in so that scheduled events occur at the correct time.

Click **Next** to continue.

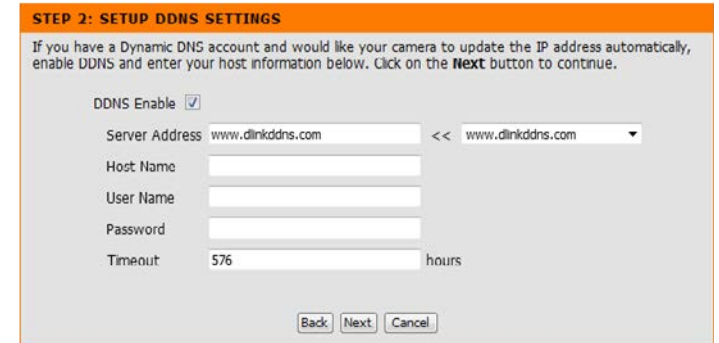

**STEP 2: SETUP DDNS SETTINGS**

If you have a Dynamic DNS account and would like your camera to update the IP address automatically, enable DDNS and enter your host information below. Click on the **Next** button to continue.

DDNS Enable


Server Address  <<  ▼

Host Name

User Name

Password


Timeout  hours

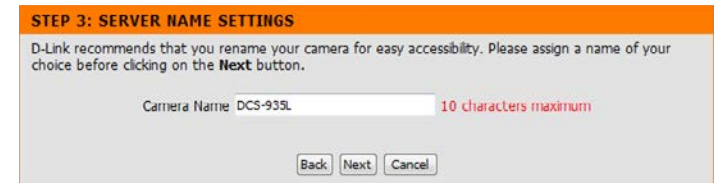

**STEP 3: SERVER NAME SETTINGS**

D-Link recommends that you rename your camera for easy accessibility. Please assign a name of your choice before clicking on the **Next** button.

Camera Name  10 characters maximum

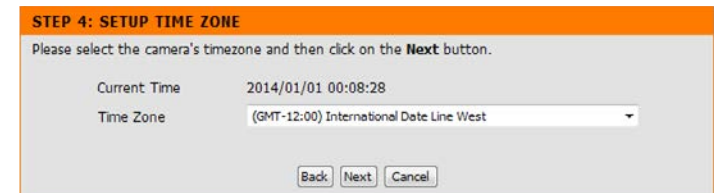

**STEP 4: SETUP TIME ZONE**

Please select the camera's timezone and then click on the **Next** button.

Current Time 2014/01/01 00:08:28

Time Zone  ▼



## Section 3 - Configuration

---

A summary of the options you selected is displayed for confirmation. If you are happy with the selected configuration, click **Next**. Otherwise, click **Back** to make the required changes.

**STEP 5: SETUP COMPLETE**

Here is a summary of your camera settings. Click **Back** to modify the settings, or click **Apply** if all settings are correct. It is recommended you write down this information for future access or reference.

IP Address	DHCP Connection
IP Camera Name	DCS-935L
Time Zone	(GMT-12:00) International Date Line West
DDNS	Disable

# Network

This section allows you to configure your network settings.

**DHCP** Select this connection if you have a DHCP server running on your network and **Connection:** would like a dynamic IP address to be updated to your camera automatically.

**Static IP Address:** You may obtain a static or fixed IP address and other network information from your network administrator for your camera.

**IP Address:** Enter the IP address that the camera will use on your network. You may need to get this information from your ISP or network administrator.

**Subnet Mask:** The default value is "255.255.255.0." Used to determine if the destination is part of the same subnet.

**Default Gateway:** The gateway used to forward frames to destinations in a different subnet. Invalid gateway settings may cause the failure of transmissions to a different subnet.

**Primary DNS:** Primary domain name server that translates names to IP addresses.

**Secondary DNS:** Secondary domain name server to backup the Primary DNS.

**PPPoE Settings:** If you are using a PPPoE connection, enable it and enter the User ID(username) and Password for your PPPoE account. You can get this information from your Internet service provider (ISP).

**D-Link**

DCS-935L // LIVE VIDEO SETUP MAINTENANCE STATUS HELP

Wizard  
 Network Setup  
 Wireless Setup  
 Dynamic DNS  
 Image Setup  
 Audio and Video  
 Motion Detection  
 Sound Detection  
 Mail  
 FTP  
 Snapshot  
 Video Clip  
 Time and Date  
 Day/Night Mode  
 Logout

**NETWORK SETUP**  
 You can configure your LAN and Internet settings here.

**LAN SETTINGS**

DHCP Connection  
 Static IP Address

IP Address   
 Subnet Mask   
 Default Gateway   
 Primary DNS   
 Secondary DNS

PPPoE

User ID   
 Password

**PORT SETTINGS**

HTTP Port   
 RTSP Port

**HTTPS SETTINGS**

HTTPS Enable   
 HTTPS Port

**UPnP SETTINGS**

UPnP Enable   
 UPnP Port Forward

External HTTP Port   
 External HTTPS Port   
 External RTSP Port

**BONJOUR SETTINGS**

Bonjour Enable   
 Bonjour Name  32 characters maximum  
 (Characters you may use in a Bonjour Name: "upper or lower case letters", "numbers" and "hyphens".)

**Helpful Hints...**

Select "DHCP Connection" if you are running a DHCP server on your network and would like an IP address assigned to your camera automatically. You may choose to manually enter a Static IP Address and all the relevant network information or select PPPoE. If you connect your DCS-935L directly to the Internet that uses a PPPoE service, if you choose PPPoE you must enter the user ID and password that was given by your Internet Service Provider.

DNS (Domain Name System) server is an Internet service that translates domain names (i.e. www.dlink.com) into IP addresses (i.e. 192.168.0.20). The IP addresses can be obtained from your ISP.

Primary DNS: Primary domain name server that translates names to IP addresses.  
 Secondary DNS: Secondary domain name server to backup the primary one.

Port Settings - Most ISPs do not open port 80 (a DCS-935L default video transfer port) for their residential customers, the DCS-935L has the ability to use a different port by enabling the second http port for its video streaming. Any unused ports can be used such as port 800, 801, etc. Remember that if the DCS-935L is behind a router, you will need to forward that port to the DCS-935L's IP Address. When accessing the camera, you would need to type the camera's IP Address followed by the colon character and the port number (for example http://192.168.0.20:800).

UPnP Settings will allow you to configure your camera as an UPnP device in the network.

Bonjour provides a simple way of discovering various services on your camera.

**SURVEILLANCE**

Copyright 2014, D-Link Corporation / D-Link Systems, Inc. All rights reserved.

**Port Settings:** You may configure which ports to use for HTTP and RTSP access to the camera.

**HTTPS Settings:** You may enable and configure which ports to use for HTTPS access to the camera.

**UPnP Enable:** Enable this setting to configure your camera as an UPnP device in the network.

**UPnP Port Forward:** Enable this to allow your camera to use UPnP to configure port forwarding on your router. Set the HTTP, HTTPS, and RTSP ports you wish to use for UPnP port forwarding.

**Bonjour:** Checking the **Bonjour** box will allow the camera to be discoverable on the network and visible to Apple devices.

Click **Save Settings** to save your changes.

**D-Link**

DCS-935L // LIVE VIDEO SETUP MAINTENANCE STATUS HELP

Wizard  
 Network Setup  
 Wireless Setup  
 Dynamic DNS  
 Image Setup  
 Audio and Video  
 Motion Detection  
 Sound Detection  
 Mail  
 FTP  
 Snapshot  
 Video Clip  
 Time and Date  
 Day/Night Mode  
 Logout

**NETWORK SETUP**  
 You can configure your LAN and Internet settings here.  
 Save Settings Don't Save Settings

**LAN SETTINGS**  
 DHCP Connection  
 Static IP Address  
 IP Address 192.168.0.20  
 Subnet Mask 255.255.255.0  
 Default Gateway 192.168.0.1  
 Primary DNS  
 Secondary DNS  
 PPPoE  
 User ID  
 Password

**PORT SETTINGS**  
 HTTP Port 80  
 RTSP Port 554

**HTTPS SETTINGS**  
 HTTPS Enable   
 HTTPS Port 443

**UPnP SETTINGS**  
 UPnP Enable  
 UPnP Port Forward  
 External HTTP Port 80  
 External HTTPS Port 443  
 External RTSP Port 554

**BONJOUR SETTINGS**  
 Bonjour Enable  
 Bonjour Name  32 characters maximum  
 (Characters you may use in a Bonjour Name: "upper or lower case letters", "numbers" and "hyphens".)  
 Save Settings Don't Save Settings

**Helpful Hints...**  
 Select "DHCP Connection" if you are running a DHCP server on your network and would like an IP address assigned to your camera automatically. You may choose to manually enter a Static IP Address and all the relevant network information or select PPPoE if you connect your DCS-935L directly to the Internet that uses a PPPoE service. If you choose PPPoE you must enter the user ID and password that was given by your Internet Service Provider.  
 DNS (Domain Name System) server is an Internet service that translates domain names (e.g. www.dlink.com) into IP addresses (i.e. 192.168.0.20). The IP addresses can be obtained from your ISP.  
 - Primary DNS: Primary domain name server that translates names to IP addresses.  
 - Secondary DNS: Secondary domain name server to backup the primary one.  
 Port Settings - Most ISPs do not open port 80 (a DCS-935L default video transfer port) for their residential customers, the DCS-935L has the ability to use a different port by enabling the second HTTP port for its video streaming. Any unused ports can be used such as port 800, 801, etc. Remember that if the DCS-935L is behind a router, you will need to forward that port to the DCS-935L's IP Address. When accessing the camera, you would need to type the camera's IP Address followed by the colon character and the port number (for example http://192.168.0.20:800).  
 UPnP Settings will allow you to configure your camera as an UPnP device in the network.  
 Bonjour provides a simple way of discovering various services on your camera.

**SURVEILLANCE**  
 Copyright 2014, D-Link Corporation / D-Link Systems, Inc. All rights reserved.

# Wireless Setup

This section allows you to set up and configure the wireless settings on your camera.

**SSID:** Enter the network name (SSID) of the wireless network you want to connect to. You can also click the **Site Survey** button below to choose an available network and fill in settings automatically.

**Connection Mode:** Use **Infrastructure** if you are connecting your camera to a wireless router or access point. Use **Ad-Hoc** if you are wirelessly connecting to your PC without a wireless router or access point.

**Security Mode:** For security, you can choose **None**, **WEP**, **WPA-PSK**, or **WPA2-PSK**. Select the same encryption method that is being used by your wireless device/ router.

**Cipher Type:** If you chose **WPA-PSK** or **WPA2-PSK**, choose whether to use **TKIP** or **AES**.

**Pre-Shared Key:** Enter the key (password) for your wireless network. Check the **Show Hidden Key** box to reveal the password you have entered.

Click the **Save Settings** button to save your changes.

The screenshot shows the D-Link web interface for the DCS-935L camera. The top navigation bar includes 'DCS-935L', 'LIVE VIDEO', 'SETUP', 'MAINTENANCE', 'STATUS', and 'HELP'. The left sidebar lists various setup options: Wizard, Network Setup, Wireless Setup, Dynamic DNS, Image Setup, Audio and Video, Motion Detection, Sound Detection, Mail, FTP, Snapshot, Video Clip, Time and Date, Day/Night Mode, and Logout. The main content area is titled 'WIRELESS SETUP' and contains the following fields and options:

- SSID:** myhomenetwork
- Connection Mode:** Infrastructure (selected), Ad-Hoc
- Security Mode:** None, WEP, WPA-PSK, WPA2-PSK (selected)
- Cipher Type:** TKIP, AES (selected)
- Pre-Shared Key:** [Redacted]

Buttons for 'Save Settings' and 'Don't Save Settings' are located below the settings. A 'Site Survey' button is also present next to the SSID field. The right sidebar contains 'Helpful Hints...' text providing additional information about wireless setup and security.

# Dynamic DNS

DDNS allows you to access your camera using a domain name instead of an IP address. To do this, you will need to have an account with one of the DDNS services listed in the drop-down box on this page.

**DDNS:** Check this box to enable the DDNS function.

**Server Address:** Select your Dynamic DNS Server from the pull down menu.

**Host Name:** Enter the host name of the DDNS server.

**User Name:** Enter your username or e-mail address used to connect to the DDNS server.

**Password:** Enter your password used to connect to the DDNS server.

**Timeout:** You can set up how often the camera notifies the DDNS server of its current global IP address by entering a whole number in hours.

Click the **Save Settings** button to save your changes.

**D-Link**

DCS-935L // LIVE VIDEO SETUP MAINTENANCE STATUS HELP

Wizard  
Network Setup  
Wireless Setup  
Dynamic DNS  
Image Setup  
Audio and Video  
Motion Detection  
Sound Detection  
Mail  
FTP  
Snapshot  
Video Clip  
Time and Date  
Day/Night Mode  
Logout

**DYNAMIC DNS**

The Dynamic DNS feature allows you to host a server (Web, FTP, Camera, etc.) using a domain name that you have purchased (www.whateveryournameis.com) from your broadband Internet Service Provider (ISP). Using a DDNS service, your friends can enter your host name to connect to your IP Camera regardless of your IP address.

Save Settings Don't Save Settings

**DYNAMIC DNS SETTINGS**

DDNS Enable

Server Address www.dlinkddns.com < c www.dlinkddns.com

Host Name

User Name

Password

Timeout 376 hours

Status Disabled

Save Settings Don't Save Settings

Helpful hints...  
Dynamic DNS is useful if you have a DSL or Cable service provider that changes your modem IP address periodically. This will allow you to assign a website domain name to your camera instead of connecting through an IP address.

**SURVEILLANCE**

Copyright 2014, D-Link Corporation / D-Link Systems, Inc. All rights reserved.

# Image Setup

This section allows you to configure the image settings for your camera.

**Brightness:** Allows you to adjust the brightness level.

**Contrast:** Allows you to adjust the contrast level.

**Sharpness:** Allows you to adjust image sharpness.

**Mirror:** Horizontally flip the video.

**Frequency:** Adjusts the video output. By default this is set to **Off**, but you may override the setting by manually selecting either **50Hz** or **60Hz**

**Saturation:** Allows you to adjust the saturation level.

**Hue:** Allows you to adjust the hue of the video.

**B/W:** Changes the images recorded on the camera to be in black and white.

**Flip:** Check this box to vertically flip the video. If the camera is installed upside down, Flip Image and Mirror should both be checked.

Click the **Save Settings** button to save your changes.

The screenshot shows the D-Link web interface for the DCS-935L camera. The main content area is titled "IMAGE SETUP" and contains the following elements:

- Navigation Menu:** Wizard, Network Setup, Wireless Setup, Dynamic DNS, Image Setup (selected), Audio and Video, Motion Detection, Sound Detection, Mail, FTP, Snapshot, Video Clip, Time and Date, Day/Night Mode, Logout.
- IMAGE SETUP Header:** "Your changes made for the image settings will be reflected immediately. The results can be seen and found in the Live Video window below." Buttons: Save Settings, Don't Save Settings.
- LIVE VIDEO:** A video window showing a live feed of an office interior. The timestamp "2013/10/08 08:17:02" is visible.
- IMAGE SETTINGS:**
  - Brightness: 50
  - Contrast: 50
  - Sharpness: 50
  - Mirror:
  - Frequency: Off
  - Saturation: 60
  - Hue: 50
  - B/W:
  - Flip:
- Buttons:** Reset to Default, Save Settings, Don't Save Settings.
- Helpful Hints:**
  - Brightness:** It is used to compensate for black&white screens.
  - Saturation:** It controls the strength of color from black and white to bold colors.
  - Contrast:** Adjustable to control the contrast of colors between the object. It helps to improve the image under a dull grey sky.
  - Hue:** It controls different degree of a color stimulating to human eyes.
  - Sharpness:** It is used to adjust image sharpness.
  - B/W:** Select to enable or disable black-and-white mode for your camera.
  - Mirror:** Select this feature to obtain mirror image.
  - Flip:** Select this feature when your camera is installed upside down on the ceiling.
  - Frequency:**

At the bottom of the page, it says "SURVEILLANCE" and "Copyright 2014, D-Link Corporation / D-Link Systems, Inc. All rights reserved."

# Audio and Video

This section allows you to configure the audio and video settings for your camera.

**Encode Type:** Your camera has separate settings for the H.264 and MJPEG video streams.

**Resolution:** Select the desired video resolution from 1280x720, 800x600, 720x480, 640x480, and 320x240. Higher settings offer better quality, but will require more bandwidth to stream.

**Bit Rate/JPEG Quality:** Select the bitrate(H.264) or quality(MJPEG) for the video stream. Higher bitrates and quality will require more bandwidth.

**Frame Rate:** Select the frame rate(FPS) to use for the video stream. Higher settings offer better quality, but will require more bandwidth to stream.

**RTSP URL:** The URL used to connect to the camera when viewing from QuickTime or a mobile device.

**Microphone Enable:** Check this box to enable the camera's microphone.

**Volume:** Use this dropdown box to adjust the volume of the camera's audio.

Click **Save Settings** to save your changes.

**D-Link**

DCS-935L // LIVE VIDEO SETUP MAINTENANCE STATUS HELP

**AUDIO AND VIDEO**  
In this section, you can configure the camera video quality, resolution, and frame rate.  
Save Settings Don't Save Settings

**VIDEO PROFILE**

Encode Type	Resolution	Bit Rate	Frame Rate	RTSP URL
H.264	1280x720	768 Kbps	15	play1.adp
MJPEG	320x240	Medium	5	play2.adp

**AUDIO SETUP**

Microphone Enable

Volume 90

Save Settings Don't Save Settings

**Helpful Hints...**

**Resolution**  
The options depend on display system used.

**Bit Rate**  
(Kbps per second) - Select a fixed bandwidth for your camera operation. Higher value means a higher quality image but consumes more network bandwidth.

**Frame Rate**  
(frames per second) - The higher the frame rate, the smoother the video will appear. Note that a higher frame rate setting also uses more bandwidth.

**Jpeg Quality**  
Default value is Medium.

**Microphone**  
Enable this feature to hear audio from the camera's microphone.

**SURVEILLANCE**

Copyright 2014, D-Link Corporation / D-Link Systems, Inc. All rights reserved.



# Motion Detection

Motion detection enables the camera to monitor the video feed for movement. Here, you can adjust the sensitivity and percentage settings, which work together to determine whether motion is detected by the camera or not.

**Enable Video Motion:** Select this box to enable the motion detection feature of your camera.

**Sensitivity:** Specifies how sensitive motion detection will be from 0% to 100%. A low sensitivity setting means that there must be large changes between two images in order to detect motion, and a high sensitivity setting means that even small changes will cause motion to be detected.

Low sensitivities may be useful when monitoring an area that has flickering lights or a window to the outside in view. High sensitivities may be useful when monitoring an area that rarely changes, such as a storeroom or warehouse.


**Percentage:** Specifies how much of the area being monitored for motion must change for motion to be detected. A low percentage means that only part of the area being monitored needs to change to detect motion, and a high percentage means that most of the area needs to change to detect motion.

Low percentages can be useful when monitoring a large area such as an entire room, and high percentages can be useful when you are only monitoring a specific part of the camera's view, such as a doorway.

**Drawing Mode:** Select **Draw Motion Area** to select the area of the picture to monitor for movement to trigger recording or a snapshot. Use your mouse to click and drag on the area that you would like to monitor for motion. Select **Erase Motion Area** to clear a selected region and stop the camera from monitoring that area of the picture.

**Clear:** Clears all motion detection areas from the picture.

Click **Save Settings** to save your changes.

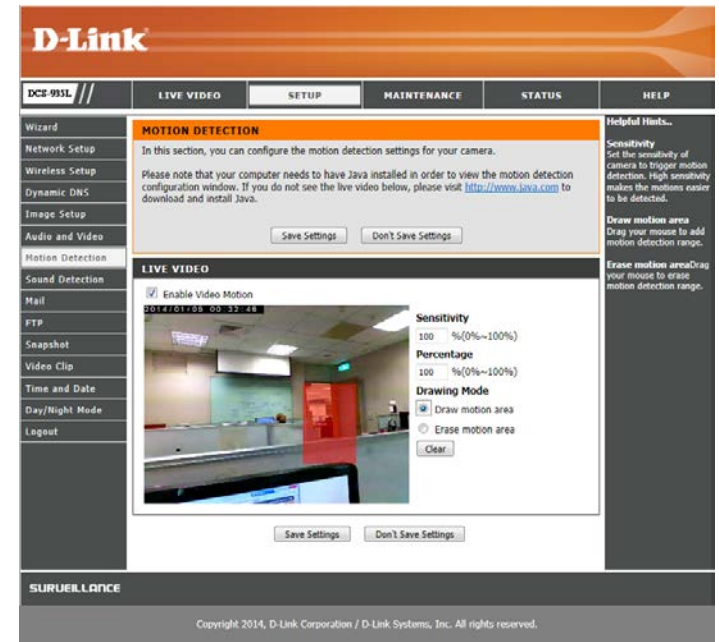



# Sound Detection

Motion detection enables the camera to monitor the environment for loud sounds. You may set the volume threshold used to determine whether sound was detected or not. If this option is selected, the trigger by option under **Video Clip**, or **Snapshot** should also be selected.

**Enable Sound Detection:** Select this box to enable the sound detection feature of your camera.

**Detection Level:** Specify the volume level that a sound must exceed in order to trigger the sound detection feature.

Click **Save Settings** to save your changes.

The screenshot shows the D-Link web interface for the DCS-935L camera. The top navigation bar includes 'LIVE VIDEO', 'SETUP', 'MAINTENANCE', 'STATUS', and 'HELP'. The left sidebar lists various configuration options, with 'Sound Detection' selected. The main content area is titled 'SOUND DETECTION' and contains the following settings:

- Sound Detection:**  Enable  Disable
- Detection Level:** 90 dB

Below the settings is a bar chart showing sound levels over time. The y-axis ranges from 40 to 100 dB. Most bars are blue and below the 90 dB threshold, but one bar is highlighted in pink and exceeds the threshold. At the bottom of the settings area are 'Save Settings' and 'Don't Save Settings' buttons. The footer of the page reads 'SURVEILLANCE' and 'Copyright 2014, D-Link Corporation / D-Link Systems, Inc. All rights reserved.'

# Mail

This section allows you to configure your camera to send snapshots and video clips to an e-mail address. If you are not sure what settings to use, check with your e-mail service provider.

**SMTP Server Address:** This is the domain name or IP address of your external e-mail server.

**SMTP Server Port:** This is the port used by your external e-mail server.

**Sender e-mail Address:** This is the e-mail address listed as the sender for your notification e-mails.

**Receiver e-mail Address:** This is the e-mail address that your notification e-mails will be sent to.

**User Name:** If the SMTP server uses authentication, enter your user name.

**Password:** If the SMTP server uses authentication, enter your password.

**Use SSL-TLS/STARTTLS:** If your SMTP server requires SSL-TLS or STARTTLS, select it here.

For example, if you want to use Gmail with SSL-TLS for e-mail notifications, you can follow the setup procedure as below:

- Step 1** - Enter "smtp.gmail.com" in SMTP Server Address.
- Step 2** - Change the SMTP server port number from 25 to 465.
- Step 3** - Enter your gmail e-mail address in Sender E-mail Address.
- Step 4** - Enter the destination e-mail address in Receiver E-mail Address.
- Step 5** - Enter the user name required to access the SMTP server.
- Step 6** - Enter the password required to access the SMTP server.
- Step 7** - Select SSL-TLS and then click Save Settings.
- Step 8** - Click the Test button to send a test e-mail will be sent.

**Note:** You can also use **STARTTLS**, which will use SMTP server port number **587**. If you want to use a Yahoo SMTP server, the SMTP server address will be different between each registered region, and only SMTP port **465** is supported for **SSL-TLS**.

The screenshot shows the D-Link web interface for the DCS-935L camera. The main content area is titled "MAIL" and contains the following sections:

- MAIL:** A introductory text block explaining the purpose of the settings, followed by "Save Settings" and "Don't Save Settings" buttons.
- E-MAIL ACCOUNT:** A form with the following fields:
  - SMTP Server Address: [Text Input]
  - SMTP Server Port: [Text Input] 25 (Default is 25)
  - Sender E-mail Address: [Text Input]
  - Receiver E-mail Address: [Text Input]
  - User Name: [Text Input]
  - Password: [Text Input]
  - Use SSL-TLS/STARTTLS: [Radio] No [Radio] SSL-TLS [Radio] STARTTLS
- TEST E-MAIL ACCOUNT:** A section with a "Test" button and a message: "A test e-mail will be sent to the e-mail account listed above."

On the right side, there is a "Helpful Hints..." section with the following text:

- SMTP Server Address:** This is the domain name or IP address of your external email server.
- Sender E-mail Address:** This is the email address of the person sending the camera snapshots.
- Receiver E-mail Address:** This is the email address of recipient for the SMTP server.
- User Name:** The user name of your email account.
- Password:** The password of your email account.
- Use SSL-TLS/STARTTLS:** Select SSL-TLS or STARTTLS if SMTP server requires TLS authentication.

The bottom of the page shows the "SURVEILLANCE" header and a copyright notice: "Copyright 2014, D-Link Corporation / D-Link Systems, Inc. All rights reserved."

# FTP

This section allows you to configure your camera to send snapshots and video clips to an FTP server.

**Host Name:** Enter the IP address of the FTP server that you will be connecting to.

**Port:** Enter the port of the FTP server that you will be connecting to.

**User Name:** Enter the user name of your FTP server account.

**Password:** Enter the password of your FTP server account.

**Path:** Enter the destination path/folder to save files to on the FTP server.

**Passive Mode:** Enabling passive mode may help you reach your FTP server if your camera is behind a router protected by a firewall.

**Test FTP Server:** Clicking on the **Test** button will send a test JPEG snapshot to the FTP server specified above to make sure that your settings are correct.

The screenshot shows the D-Link DCS-935L web interface. The top navigation bar includes 'LIVE VIDEO', 'SETUP', 'MAINTENANCE', 'STATUS', and 'HELP'. The left sidebar lists various configuration options: Wizard, Network Setup, Wireless Setup, Dynamic DNS, Image Setup, Audio and Video, Motion Detection, Sound Detection, Mail, FTP, Snapshot, Video Clip, Time and Date, Day/Night Mode, and Logout. The main content area is titled 'FTP' and contains the following configuration options:

- FTP SERVER:**
  - Host Name: [Text Input]
  - Port: 21 (Default is 21)
  - User Name: [Text Input]
  - Password: [Text Input]
  - Path: [Text Input]
  - Passive Mode:  Yes  No
- TEST FTP SERVER:**
  - A JPEG file will be sent to the above FTP server for testing. (File name: test\_date\_time.jpg)
  - [Test] button
  - [Save Settings] button
  - [Don't Save Settings] button

Helpful Hints... on the right side of the page:

- Host Name:** This is the IP address of the FTP server that you will be connecting to.
- Port:** The default port is 21.
- User Name:** The user name required for accessing the external FTP server.
- Password:** The password of the external FTP server.
- Passive mode:** Enabling passive mode will allow access to an external FTP server if your camera is behind a router protected by a firewall.
- Test FTP server:** An image file will be sent to the FTP server after you click Test.

# Snapshot

The snapshot feature lets you send image snapshots via FTP or e-mail when a trigger is activated.

**Snapshot:** Check this box to enable the Snapshot function.

**Trigger By:** Select whether to record when triggered by **Motion** or **Sound**, according to a **Schedule** or **Always** record.

**Snapshot Type:** Select whether to take a single snapshot or to take 6 snapshots with a selectable interval between them.

**Target:** Select where you want the snapshot to be sent. It may be uploaded to an FTP or sent to an e-mail address.

Click **Save Settings** to save your changes.

**D-Link**

DCS-935L // LIVE VIDEO SETUP MAINTENANCE STATUS HELP

**SNAPSHOT**

In order to enable your camera to take snapshots, you must select the checkbox of 'Snapshot'. Then, you can determine the trigger event(s) and FTP and/or E-mail notification(s).

Save Settings Don't Save Settings

**SNAPSHOT**

Snapshot

Trigger by: Motion

Only During

Day: Sun Mon Tue Wed Thu Fri Sat

Time: Start 00:00 End 00:00

Snapshot Type:  Single snapshot  6 snapshots with 1 second interval (3 frames before and 3 frames after motion frame)

Target:  FTP  E-mail

Save Settings Don't Save Settings

**Helpful Hints...**

Snapshot is the ability to store or send pictures to a remote E-mail or FTP server based on motion detection, external sensor input triggered.

**Trigger by:** MotionBegin snapshot after a motion is detected. SoundBegin snapshot after sound is detected.

**Snapshot Type:** You can set JPEG settings from Video Profile 3, Single snapshot or 6 snapshots here.

**6 snapshots:** Select to take continuous 6 pictures for each snapshot.

**Target:** You can select the target as FTP or E-mail for the snapshot.

**SURVEILLANCE**

Copyright 2014, D-Link Corporation / D-Link Systems, Inc. All rights reserved.

# Video Clip

Video Clip allows you to send video clips via FTP or e-mail when a trigger is activated.

**Video Clip:** Check this box to enable the Video Clip function.

**Trigger By:** Select whether to record when triggered by **Motion** or **Sound**, according to a **Schedule** or **Always** record.

**Video Clip:** Here you can specify how much video to record before and after the event.

**Target:** Select where you want the video clip to be sent. It may be uploaded to an FTP or sent to an e-mail address.

Click **Save Settings** to save your changes.

**D-Link**

DCS-935L // LIVE VIDEO SETUP MAINTENANCE STATUS HELP

**VIDEO CLIP**

Video Clip is a feature to send video clips via FTP or E-Mail when a trigger is activated.

Save Settings

**VIDEO CLIP**

Video Clip

Trigger by:  Motion

Only During:

Day:  Sun  Mon  Tue  Wed  Thu  Fri  Sat

Time: Start 00:00 End 00:00

Video Clip: Pre-event recording: 5 Seconds

Maximum duration: 10 Seconds

Target:  FTP  E-mail

**Helpful Hints...**

Video Clip is the ability to store or send video clips to a remote E-mail or FTP server based on motion detection, external sensor input triggered.

**Trigger by**  
**MotionBegin**  
 video clipping after a motion is detected.  
**SoundBegin**  
 video clipping after sound is detected.

**Video Clip**  
 You can set Pre-event recording and Maximum duration here.

**Pre-event recording**  
 Specify how much seconds of video will be recorded, before the video clip is taken.

**Maximum duration**  
 Specify how much seconds of video clip.

**Target**  
 You can select the target as FTP or E-mail for the video clip.

**SURVEILLANCE**

Copyright 2014, D-Link Corporation / D-Link Systems, Inc. All rights reserved.

# Time and Date

This section allows you to configure the settings of the internal system clock for your camera.

**Time Zone:** Select the time zone for your region from the drop down menu.

**Daylight Saving:** If your region uses Daylight Saving time, you can enable it here. Select **Set DST Manually** if you want to manually set the offset and the period of time that the Daylight Saving correction should be used.

**Synchronize NTP Server:** Network Time Protocol will synchronize your camera with an Internet time server. Choose the one that is closest to your camera.

**Set the Date and Time Manually:** If **Synchronize NTP Server** is disabled, you can set the date and time manually. You can also click the **Copy Your Computer's Time Settings** button to automatically copy the date and time of the PC you are using.

Click **Save Settings** to save your changes.

The screenshot shows the D-Link web interface for the DCS-935L camera. The main navigation bar includes 'LIVE VIDEO', 'SETUP', 'MAINTENANCE', 'STATUS', and 'HELP'. The 'SETUP' menu is expanded to show 'TIME AND DATE'. The 'TIME AND DATE' section contains the following configuration options:

- TIME AND DATE:** A brief description of the section and buttons for 'Save Settings' and 'Don't Save Settings'.
- TIME CONFIGURATION:**
  - Current Time: 2014/01/05 00:36:34
  - Time Zone: (GMT-12:00) International Date Line West
  - Daylight Saving:  (checked)
  - Auto Daylight Saving:  (unchecked)
  - Set DST Manually:  (checked)
    - Offset: +100
    - Start: Month (Jan), Week (1st), Day of Week (Sunday), Hour (00), Minute (00)
    - End: Month (Jan), Week (1st), Day of Week (Sunday), Hour (00), Minute (00)
- AUTOMATIC TIME CONFIGURATION:**
  - Synchronize with NTP Server:  (checked)
  - NTP Server: [Text Field] << Select NTP Server
- SET THE DATE AND TIME MANUALLY:**
  - Set Date and Time Manually:  (unchecked)
  - Buttons: 'Save Settings' and 'Don't Save Settings'

Helpful Hints... on the right side of the page:

- Time Zone:** The geographical zone for the local time setting.
- Automatic Time Configuration:** With this option selected, the camera will synchronize its date and time settings with an NTP server over the Internet upon camera start up. If the timeserver cannot be reached, no time settings will be applied.
- NTP server:** The IP address or domain name of the Time Server.
- Daylight Saving:** Enable daylight saving that will adjust the time depending on the daylight saving time offset and date.
- You may also Set the Date and Time Manually or Copy your Computer's Time Settings.**

At the bottom of the page, there is a 'SURVEILLANCE' section and a copyright notice: Copyright 2014, D-Link Corporation / D-Link Systems, Inc. All rights reserved.

# Day/Night Mode

This section allows you to configure when Day and Night modes are used. Day mode uses the infrared cut filter to provide a corrected color image for times where there is available lighting. Night mode moves the filter out of the way to use all available light, and turns on the IR LED illuminators to allow for clear black and white video in dark areas with little to no light.

**Auto:** This mode will automatically switch between Day and Night mode based on the amount of available lighting.

**Manual:** This mode allows you to manually switch between modes through the **Live Video** page.

**Always Day Mode:** This sets the camera to always use Day mode.

**Always Night Mode:** This sets the camera to always use Night mode.

**Day Mode Schedule:** This sets the camera to use Day mode during the times you specify, and will switch to Night mode outside the times you specify.

The screenshot shows the D-Link web interface for the DCS-935L camera. The main navigation menu on the left includes Wizard, Network Setup, Wireless Setup, Dynamic DNS, Image Setup, Audio and Video, Motion Detection, Sound Detection, Mail, FTP, Snapshot, Video Clip, Time and Date, Day/Night Mode, and Logout. The 'Day/Night Mode' page is active, displaying the following content:

- DAY/NIGHT MODE**: In this section, you can configure the Day/Night mode switching method. Day/Night mode ensures good video illumination in both day and night environments. In Day mode, IR illumination is off, IR light is blocked and the video is in color. In Night mode, IR illumination is on, IR light is visible and the video is in black and white.
  - Save Settings
  - Don't Save Settings
- DAY/NIGHT MODE SETTINGS**:
  - Day/Night Mode:
    - Auto
    - Manual
    - Always Day Mode
    - Always Night Mode
    - Day Mode Schedule
  - Time Range: 00 : : 00 ~ 00 : : 00 (Example : 08:00 ~ 18:30)
  - Save Settings
  - Don't Save Settings

The 'Helpful Hints...' sidebar on the right provides additional information:

- Auto** - Camera automatically switches between Day and Night mode. The camera normally works in Day mode. It automatically changes to Night mode in darker lighting.
- Manual** - User can manually control the camera to work in Day or Night mode on the live video view page.
- Always Day Mode** - The camera always works in the Day mode.
- Always Night Mode** - The camera always works in the Night mode.
- Day Mode Schedule** - The camera works in Day mode based on the day and time configured in the schedule. The camera changes to Night mode during all other times.

At the bottom of the page, it says 'SURVEILLANCE' and 'Copyright 2014, D-Link Corporation / D-Link Systems, Inc. All rights reserved.'



# Maintenance Admin

This section allows you to change the administrator's password and configure the server settings for your camera. You can also manage the user account(s) that are allowed to access to your camera.

**Admin Password:** To change the admin password used to log into the web interface, enter the old password, then enter the new password and retype it in the next text box, then click **Apply**.

**Camera Name:** Specify a name for your camera.

**LED Control:** Select **Normal** to enable the LED on the back of the device, or select **Off** to disable the LED. Turning this off may be useful if you do not want the camera to be noticeable.

**Snapshot URL Authentication:** Select **Enable** to allow access to the current camera snapshot via the web address indicated.

**OSD Time:** Select **Enable** to allow the current time to be added to the camera video, and select a color to use for the text.

**Add User Account:** You can create new users to provide viewing access for your camera's video. User accounts will only be able to access the **Live Video** section of the web configuration interface, but cannot access any other parts or change any settings.

To create a new user, enter a user name, password, and retype the password, then click **Add**. A maximum of 8 user accounts can be created.

**User List:** Displays the account names of authorized users. You can modify or delete an account by clicking on its modify or delete icon.

The screenshot shows the D-Link web interface for the Maintenance Admin section. The page is titled "ADMIN" and contains the following sections:

- ADMIN:** A message stating: "Here you can change the administrator's password and configure the server setting for your camera. You can also add, modify and/or delete the user account(s)."
- ADMIN PASSWORD SETTING:** Fields for "Old Password", "New Password", and "Retype Password", each with a "31 characters maximum" warning. "Apply" and "Cancel" buttons are present.
- SERVER SETTING:** Fields for "Camera Name" (10 characters maximum), "LED Control" (Normal/Off), "Snapshot URL Authentication" (Enable/Disable), "OSD Time" (Enable/Disable), and "Color" (white). "Apply" and "Cancel" buttons are present.
- ADD USER ACCOUNT:** Fields for "User Name", "Password", and "Retype Password", each with a "31 characters maximum" warning. "Add" and "Cancel" buttons are present. A note indicates "10 users maximum".
- USER LIST:** A table with columns for "no.", "name", "modify", and "delete".

At the bottom of the page, it says "SURVEILLANCE" and "Copyright 2014, D-Link Corporation / D-Link Systems, Inc. All rights reserved."



# System

This section allows you to save and restore your configuration, restore the factory settings, and/or restart the camera.


**Save To Local Hard Drive:** Click the **Save Configuration** button to save the current camera configuration to your local PC.

**Load From Local Hard Drive:** To load a previously saved configuration, click the **Browse...** button, select your saved configuration file, then click the **Restore Configuration From File** button.

**Restore To Factory Default:** Click the **Restore Factory Defaults** button to reset all settings back to the factory defaults. Please note that this will erase any changes you have made to the settings of the camera.

**Reboot The Device:** Click the **Reboot the Device** button to reboot the camera.

**Schedule Reboot:** You can schedule the camera to reboot according to a schedule. Select the days and time you want the camera to automatically reboot.

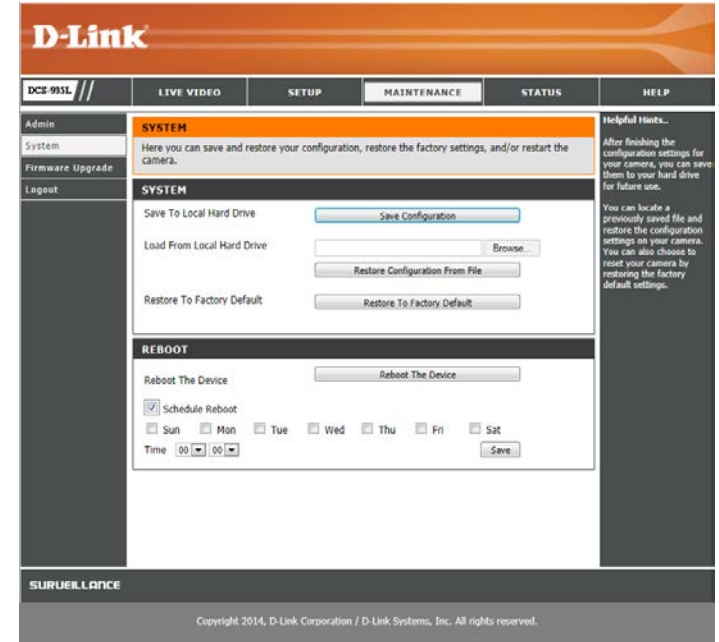

# Firmware Upgrade

Your current firmware version and date will be displayed on your screen. You may go to the D-Link Support Page to check for the latest firmware versions available.

To upgrade your firmware, please download and save the latest firmware version from the D-Link Support Page to your local hard drive. Locate the file on your local hard drive by using the **Browse...** button, then click the **Upload** button to start the firmware upgrade.

The screenshot displays the D-Link web interface for the DCS-935L camera. The top navigation bar includes 'LIVE VIDEO', 'SETUP', 'MAINTENANCE', 'STATUS', and 'HELP'. The 'MAINTENANCE' tab is active. The main content area is titled 'FIRMWARE UPGRADE' and contains the following text:

**FIRMWARE UPGRADE**

A new firmware upgrade may be available for your camera. It is recommended that you keep your camera firmware up to date to maintain and improve its functionality and performance. Click here [D-Link Support Page](#) to check for the latest available firmware version.

To upgrade the firmware on your IP camera, please download and save the latest firmware version from the D-Link Support Page to your local hard drive. Locate the file on your local hard drive by clicking the Browse button. Once you have found and opened the file using the browse button, click the Upload button to start the firmware upgrade.

**FIRMWARE INFORMATION**

Current Firmware Version : v1.00 b10

**FIRMWARE UPGRADE**

File Path :


On the right side, there is a 'Helpful Hints...' section with text: 'Firmware updates are released periodically to improve the functionality of your IP camera and also to add new features. If you run into a problem with a specific feature of the IP camera, check our support site by clicking and see if updated firmware is available for your IP camera.'

At the bottom of the page, there is a 'SURVEILLANCE' section and a copyright notice: 'Copyright 2014, D-Link Corporation / D-Link Systems, Inc. All rights reserved.'

# Status

## Device Info

This section displays information about your camera and its current network and wireless status.

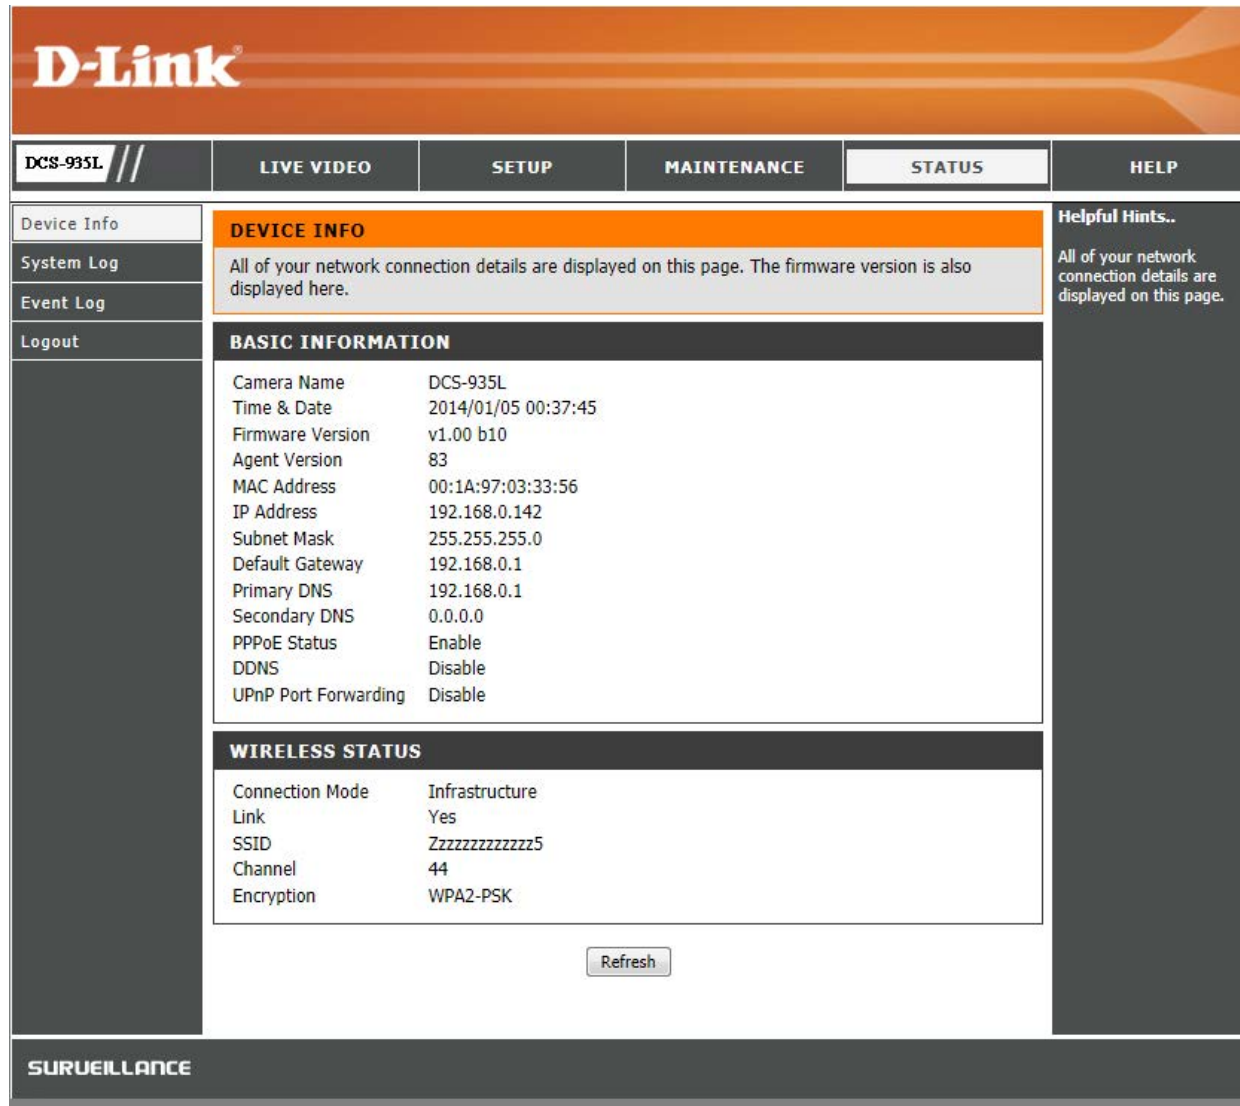

The screenshot shows the D-Link web interface for a DCS-935L camera. The top navigation bar includes 'DCS-935L', 'LIVE VIDEO', 'SETUP', 'MAINTENANCE', 'STATUS', and 'HELP'. The 'STATUS' tab is selected, and the 'Device Info' sub-tab is active. The main content area is divided into two sections: 'BASIC INFORMATION' and 'WIRELESS STATUS'. A 'Refresh' button is located at the bottom of the wireless status section. A 'Helpful Hints..' sidebar on the right provides additional context.

BASIC INFORMATION	
Camera Name	DCS-935L
Time & Date	2014/01/05 00:37:45
Firmware Version	v1.00 b10
Agent Version	83
MAC Address	00:1A:97:03:33:56
IP Address	192.168.0.142
Subnet Mask	255.255.255.0
Default Gateway	192.168.0.1
Primary DNS	192.168.0.1
Secondary DNS	0.0.0.0
PPPoE Status	Enable
DDNS	Disable
UPnP Port Forwarding	Disable

WIRELESS STATUS	
Connection Mode	Infrastructure
Link	Yes
SSID	Zzzzzzzzzzzz5
Channel	44
Encryption	WPA2-PSK

Refresh

Helpful Hints..  
All of your network connection details are displayed on this page.

SURVEILLANCE

# System Log

The system log records network events that have occurred.

The screenshot shows the D-Link web interface for the DCS-935L device. The top navigation bar includes links for LIVE VIDEO, SETUP, MAINTENANCE, STATUS (selected), and HELP. The left sidebar contains links for Device Info, System Log (selected), Event Log, and Logout. The main content area is titled 'SYSTEM LOG' and contains a description: 'The system log records camera system events that have occurred.' Below this is a 'CURRENT LOG' section with the following entries:

Time	Event
Jan 5 00:14:03	Lost network link.
Jan 5 00:14:09	Network link is recovered, try to run DHCP.
Jan 5 00:14:12	IP address acquire success
Jan 5 00:14:13	UPnP stop
Jan 5 00:14:14	UPnP start
Jan 5 00:14:23	Lost network link.
Jan 5 00:14:28	Network link is recovered, try to run DHCP.
Jan 5 00:14:31	IP address acquire success
Jan 5 00:14:31	UPnP stop
Jan 5 00:14:32	UPnP start
Jan 5 00:14:40	Lost network link.
Jan 5 00:14:46	Network link is recovered, try to run DHCP.
Jan 5 00:14:46	IP address acquire success
Jan 5 00:14:46	UPnP stop
Jan 5 00:14:48	UPnP start
Jan 5 00:14:56	Lost network link.

On the right side, there is a 'Helpful Hints..' section with the text: 'You can you can refresh the log by clicking on the Refresh button.'

# Event Log

The event log records camera events that have occurred.

The screenshot displays the D-Link web interface for the DCS-935L camera. At the top, the D-Link logo is visible on an orange background. Below the logo is a navigation bar with tabs for 'DCS-935L //', 'LIVE VIDEO', 'SETUP', 'MAINTENANCE', 'STATUS' (which is highlighted), and 'HELP'. On the left side, there is a sidebar menu with options: 'Device Info', 'System Log', 'Event Log' (highlighted), and 'Logout'. The main content area is divided into three sections: an orange header for 'EVENT LOG', a grey box containing the text 'The event log records camera events that have occurred.', and a dark grey box for 'CURRENT LOG' which is currently empty. A 'Refresh' button is centered below the 'CURRENT LOG' section. On the right side, there is a 'Helpful Hints..' section with the text: 'You can you can refresh the log by clicking on the Refresh button.'

# Wireless Security

This section will show you the different levels of security you can use to protect your data from intruders.

The DCS-935L offers the following types of security:

- WPA2-PSK (Pre-Shared Key)
- WPA-PSK (Pre-Shared Key)
- WEP (Wired Equivalent Privacy)

## What is WEP?

WEP stands for Wired Equivalent Privacy. It is based on the IEEE 802.11 standard and uses the RC4 encryption algorithm. WEP provides security by encrypting data over your wireless network so that it is protected as it is transmitted from one wireless device to another.

To gain access to a WEP network, you must know the key. The key is a string of characters that you create. When using WEP, you must determine the level of encryption. The type of encryption determines the key length. 128-bit encryption requires a longer key than 64-bit encryption. Keys are defined by entering in a string in HEX (hexadecimal - using characters 0-9, A-F) or ASCII (American Standard Code for Information Interchange – alphanumeric characters) format. ASCII format is provided so you can enter a string that is easier to remember. The ASCII string is converted to HEX for use over the network. Four keys can be defined so that you can change keys easily.

# What is WPA?

WPA, or Wi-Fi Protected Access, is a Wi-Fi standard that was designed to improve the security features of WEP (Wired Equivalent Privacy).

The 2 major improvements over WEP:

Improved data encryption through the Temporal Key Integrity Protocol (TKIP). TKIP scrambles the keys using a hashing algorithm and, by adding an integrity-checking feature, ensures that the keys haven't been tampered with. WPA2 is based on 802.11i and uses Advanced Encryption Standard instead of TKIP.

User authentication, which is generally missing in WEP, through the extensible authentication protocol (EAP). WEP regulates access to a wireless network based on a computer's hardware-specific MAC address, which is relatively simple to be sniffed out and stolen. EAP is built on a more secure public-key encryption system to ensure that only authorized network users can access the network.

WPA-PSK/WPA2-PSK uses a passphrase or key to authenticate your wireless connection. The key is an alpha-numeric password between 8 and 63 characters long. The password can include symbols (!?\*&\_) and spaces. This key must be the exact same key entered on your wireless router or access point.

# Configuring the DCS-935L with a Router

D-Link's DCS-935L is a versatile and cost effective Network Camera offering both video and audio monitoring. It can also serve as a powerful surveillance system in security applications. The DCS-935L can be used with any wired or 802.11n/g wireless router. This section explains how to view the camera from either the Internet or from inside your internal network.

Components Needed:

- 1 DCS-935L Network Camera
- 1 Ethernet Cable
- A Wired or Wireless router such as the D-Link DIR-655 Wireless Router
- Ethernet based PC for system configuration

## Setting up the DCS-935L for Use Behind a Router

Installing a DCS-935L Network Camera on your network is an easy 4–step procedure:

1. Assign a local IP address to your network camera.
2. View the network camera using your Internet Explorer web browser.
3. Access the router with your web browser.
4. Open virtual server ports to enable remote image viewing.

**Note:** *These are manual steps; however, if you decide to use the wizard, it will perform every step automatically.*

This section is designed to walk you through the setup process for installing your camera behind a router and enable remote video viewing. For the basic setup of the DCS-935L, follow the steps outlined in the Quick Installation Guide.


After you have completed the setup of the DCS-935L outlined in the Quick Installation Guide you will have an operating camera that has an assigned IP Address. Because you are using a router to share the Internet with one or more PCs, the IP Address assigned to the Network Camera will be a local IP Address. This allows viewing within your Local Area Network (LAN) until the router is configured to allow remote viewing of the camera over the Internet.



## 1. Find Your Camera's Local IP Address

Use the mydlink Lite app to set up your DCS-935L. Use a web browser on your PC to go to the **www.mydlink.com** website and log in to your account. Select your camera, click on the **Settings** tab, then click on the **Advanced Settings** button. Use the User name **admin** and the password you created while setting up the camera. If you did not create a password, the default password is blank. After entering your password, click **OK**.

After logging into the configuration interface, click **Status** at the top, then find your IP Address and write it down.

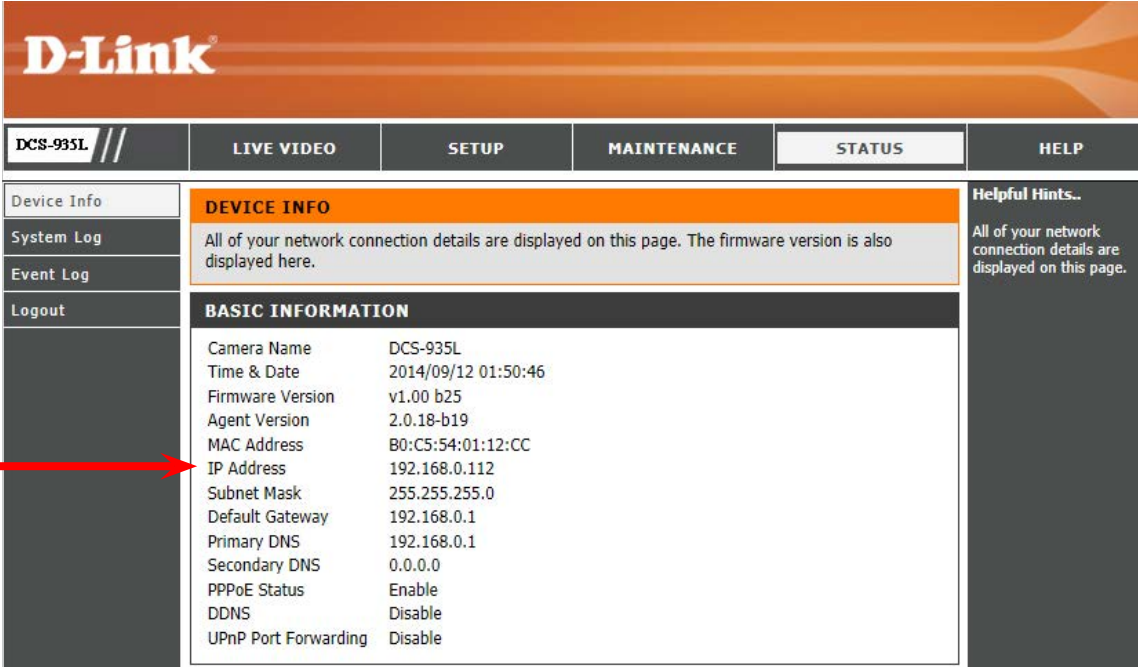

The screenshot shows the D-Link configuration interface for a DCS-935L camera. The top navigation bar includes tabs for LIVE VIDEO, SETUP, MAINTENANCE, STATUS, and HELP. The STATUS tab is selected. On the left, there is a sidebar with links for Device Info, System Log, Event Log, and Logout. The main content area is titled 'DEVICE INFO' and contains a 'BASIC INFORMATION' section with the following details:

Camera Name	DCS-935L
Time & Date	2014/09/12 01:50:46
Firmware Version	v1.00 b25
Agent Version	2.0.18-b19
MAC Address	B0:C5:54:01:12:CC
IP Address	192.168.0.112
Subnet Mask	255.255.255.0
Default Gateway	192.168.0.1
Primary DNS	192.168.0.1
Secondary DNS	0.0.0.0
PPPoE Status	Enable
DDNS	Disable
UPnP Port Forwarding	Disable

A red arrow points to the IP Address field, which displays 192.168.0.112. To the right of the main content area, there is a 'Helpful Hints..' section with the text: 'All of your network connection details are displayed on this page.'

## 2. View the Network Camera

Click on the **Setup** button at the top of the screen. Scroll to the bottom of the Network Setup page to display the ports used by HTTP and Streaming audio and video. If necessary, these ports can be changed if they are already in use by other devices (e.g. in a multiple camera environment).

**Note:** The HTTP port is required to be opened for the DCS-935L.

**D-Link**

DCS-935L // LIVE VIDEO **SETUP** MAINTENANCE STATUS HELP

Wizard

Network Setup

Wireless Setup

Dynamic DNS

Image Setup

Audio and Video

Motion Detection

Sound Detection

Mail

FTP

Snapshot

Video Clip

Time and Date

Day/Night Mode

Logout

**NETWORK SETUP**

You can configure your LAN and Internet settings here.

Save Settings Don't Save Settings

**LAN SETTINGS**

DHCP Connection

Static IP Address

IP Address

Subnet Mask

Default Gateway

Primary DNS

Secondary DNS

PPPoE

User ID

Password

**PORT SETTINGS**

HTTP Port

RTSP Port

**HTTPS SETTINGS**

HTTPS Enable

HTTPS Port

**Helpful Hints..**

Select "DHCP Connection" if you are running a DHCP server on your network and would like an IP address assigned to your camera automatically. You may choose to manually enter a Static IP Address and all the relevant network information or select PPPoE if you connect your DCS-935L directly to the Internet that uses a PPPoE service. If you choose PPPoE you must enter the user ID and password that was given by your Internet Service Provider.

**DNS** (Domain Name System) server is an Internet service that translates domain names (i.e. www.dlink.com) into IP addresses (i.e. 192.168.0.20). The IP addresses can be obtained from your ISP.

- **Primary DNS:** Primary domain name server that translates names to IP addresses.

- **Secondary DNS:** Secondary domain name server to backup the primary one.

**Port Settings** - Most ISPs do not open port 80 (a DCS-935L default video transfer port) for their residential customers, the DCS-935L has the ability

### Router Set-Up and Installation

The following steps generally apply to any router that you have on your network. The D-Link DIR-655 is used as an example to clarify the configuration process. Configure the initial settings of the DIR-655 by following the steps outlined in the DIR-655 Quick Installation Guide.

#### 3. Access the Router with Your Web Browser

If you have cable or DSL Internet service, you will most likely have a dynamically assigned WAN IP Address. 'Dynamic' means that your router's WAN IP address can change from time to time depending on your ISP. A dynamic WAN IP Address identifies your router on the public network and allows it to access the Internet. To find out what your router's WAN IP Address is, go to the Status menu on your router and locate the WAN information for your router (as shown on the next page). The WAN IP Address will be listed. This will be the address that you will need to type in your Web browser to view your camera over the Internet.

Your WAN IP Address will be listed on the router's **Status > Device Info** page.



The screenshot displays the D-Link web interface for a DCS-935L camera. The interface features a top navigation bar with the D-Link logo and menu items: LIVE VIDEO, SETUP, MAINTENANCE, STATUS, and HELP. The main content area is divided into a left sidebar with links for Device Info, System Log, Event Log, and Logout. The central pane shows the 'DEVICE INFO' page, which includes a 'HELPFUL HINTS...' section and two main data sections: 'BASIC INFORMATION' and 'WIRELESS STATUS'. A 'Refresh' button is located at the bottom of the data sections.

BASIC INFORMATION	
Camera Name	DCS-935L
Time & Date	2014/01/05 00:37:45
Firmware Version	v1.00 b10
Agent Version	83
MAC Address	00:1A:97:03:33:56
IP Address	192.168.0.142
Subnet Mask	255.255.255.0
Default Gateway	192.168.0.1
Primary DNS	192.168.0.1
Secondary DNS	0.0.0.0
PPPoE Status	Enable
DDNS	Disable
UPnP Port Forwarding	Disable

WIRELESS STATUS	
Connection Mode	Infrastructure
Link	Yes
SSID	Zzzzzzzzzzzzzzzz5
Channel	44
Encryption	WPA2-PSK

Note: Because a dynamic WAN IP can change from time to time depending on your ISP, you may want to obtain a Static IP address from your ISP. A Static IP address is a fixed IP address that will not change over time and will be more convenient for you to use to access your camera from a remote location. The Static IP Address will also allow you to access your camera attached to your router over the Internet.

### 4. Open Virtual Server Ports to Enable Remote Image Viewing

The firewall security features built into the DIR-655 router prevent users from accessing the video from the DCS-935L over the Internet. The router connects to the Internet over a series of numbered ports. The ports normally used by the DCS-935L are blocked from access over the Internet. Therefore, these ports need to be made accessible over the Internet. This is accomplished using the Virtual Server function on the DIR-655 router. The Virtual Server ports used by the camera must be opened through the router for remote access to your camera. Virtual Server is accessed by clicking on the **Advanced** tab of the router screen.

Follow these steps to configure your router's Virtual Server settings:

1. Click **Enabled**.
2. Enter a different name for each entry.
3. Enter your camera's local IP Address (e.g., 192.168.0.120) in the Private IP field.
4. Select TCP for HTTP port and TCP for 5556 - 5559 ports.
5. If you are using the default camera port settings, enter 80 into the Public and Private Port section, click **Apply**.
6. Scheduling should be set to Always so that the camera images can be accessed at any time.

Important: Some ISPs block access to port 80 and other commonly used Internet ports to conserve bandwidth. Check with your ISP so that you can open the appropriate ports accordingly. If your ISP does not pass traffic on port 80, you will need to change the port the camera uses from 80 to something else, such as 800. Not all routers are the same, so refer to your user manual for specific instructions on how to open ports.

Enter valid ports in the Virtual Server section of your router. Please make sure to check the box next to the camera name on the Virtual Server List to enable your settings.

**D-Link**

DIR-655 // SETUP ADVANCED TOOLS STATUS SUPPORT

**VIRTUAL SERVER**

The Virtual Server option allows you to define a single public port on your router for redirection to an internal LAN IP Address and Private LAN port if required. This feature is useful for hosting online services such as FTP or Web Servers.

Save Settings Don't Save Settings

**24--VIRTUAL SERVERS LIST**

	Name	IP Address	Port	Traffic Type	Schedule	Inbound Filter
<input checked="" type="checkbox"/>	DCS-930L	192.168.0.120	80	TCP	Always	Allow All
<input type="checkbox"/>		0.0.0.0	0	TCP	Always	Allow All
<input type="checkbox"/>		0.0.0.0	0	TCP	Always	Allow All

**Helpful Hints...**

Check the **Application Name** drop down menu for a list of predefined server types. If you select one of the predefined server types, click the arrow button next to the drop down menu to fill out the corresponding field.

You can select a computer from the list of DHCP clients in the **Computer Name** drop down menu, or you can manually enter the IP address of the computer at which you would like to open the specified port.

Select a schedule for when the virtual server will be enabled. If you do not see the schedule you need in

# Troubleshooting

This chapter provides solutions to problems that can occur during the installation and operation of the DCS-935L.

Read the following descriptions if you are having problems. (The examples below are illustrated in Windows Vista® and XP. If you have a different operating system, the screenshots on your computer will look similar to the following examples.)

## 1. What is Remote Access? How do I enable it?

Remote Access allows you to access your camera from any PC connected to the Internet through a web browser. This lets you view your camera feed and manage your camera's settings when you're away from home.

To enable Remote Access, simply use the mydlink Lite mobile app to set up your camera and register it with mydlink.

## 2. What can I do if I forget my password?

If you forget your password, you will need to perform a hard reset of your camera. This process will change all your settings back to the factory defaults.

To reset your camera, please use an unfolded paperclip to press and hold the RESET button for at least 10 seconds while your camera is plugged in.

## 3. Why does the LED not light up?

The power supply might be faulty. Confirm that you are using the provided DC 5V power supply for this network camera. Verify that the power supply is correctly connected. If the camera is functioning normally, the LED may have been disabled. See LED Control in **Admin** on page 40 for information about how to enable the LED.

## 4. Why is the camera's network connection unreliable?

There might be a problem with the network cable. To confirm that the cables are working, PING the address of a known device on the network. If the cabling is OK and your network is reachable, you should receive a reply similar to the following (...bytes = 32 time = 2 ms).

Another possible problem may be that the network device such as a hub or switch utilized by the Network Camera is not functioning properly. Please confirm the power for the devices are well connected and functioning properly.

### **5. Why does the Network Camera work locally but not remotely?**

This might be caused by the firewall protection. Check the Internet firewall with your system administrator. The firewall may need to have some settings changed in order for the Network Camera to be accessible outside your local LAN. For more information, please refer to the section about installing your camera behind a router.

Make sure that the Network Camera isn't conflicting with any Web server you may have running on your network.

The default router setting might be a possible reason. Check that the configuration of the router settings allow the Network Camera to be accessed outside your local LAN.

### **6. Why does a series of broad vertical white lines appear through out the image?**

It could be that the CMOS sensor (a square panel situated behind the lens that measures the light signals and changes it into a digital format so your computer can present it into an image that you are familiar with) has become overloaded when it has been exposed to bright lights such as direct exposure to sunlight or halogen lights. Reposition the Network Camera into a more shaded area immediately as prolonged exposure to bright lights will damage the CMOS sensor.

### **7. The camera is producing noisy images. How can I solve the problem?**

The video images might be noisy if the Network Camera is used in a very low light environment.

### **8. The images are poor quality, how can I improve the image quality?**

Make sure that your computer's display properties are set to at least 6-bit color. Using 16 or 256 colors on your computer will produce dithering artifacts in the image, making the image look as if it is of poor quality.

The configuration on the Network Camera image display is incorrect. The Web Configuration Video section of the Web management allows you to adjust the related-parameters for improved images such as: brightness, contrast, hue and light frequency. Please refer to the Web Configuration section for detailed information.

### **9. Why are no images available through the Web browser?**

ActiveX might be disabled. If you are viewing the images from Internet Explorer make sure ActiveX has been enabled in the Internet Options menu. You may also need to change the security settings on your browser to allow the ActiveX plug-in to be installed.

If you are using Internet Explorer with a version number lower than 7, then you will need to upgrade your Web browser software in order to view the streaming video transmitted by the Network Camera.

# Wireless Basics

D-Link wireless products are based on industry standards to provide easy-to-use and compatible high-speed wireless\* connectivity within your home, business or public access wireless networks. Strictly adhering to the IEEE standard, the D-Link wireless family of products will allow you to securely access the data you want, when and where you want it. You will be able to enjoy the freedom that wireless networking delivers.

A wireless local area network (WLAN) is a cellular computer network that transmits and receives data with radio signals instead of wires. Wireless LANs are used increasingly in both home and office environments, and public areas such as airports, coffee shops and universities. Innovative ways to utilize WLAN technology are helping people to work and communicate more efficiently. Increased mobility and the absence of cabling and other fixed infrastructure have proven to be beneficial for many users.

Under many circumstances, it may be desirable for mobile network devices to link to a conventional Ethernet LAN in order to use servers, printers or an Internet connection supplied through the wired LAN. A Wireless Router is a device used to provide this link.



## **What is Wireless?**

Wireless or WiFi technology is another way of connecting your computer to the network without using wires. WiFi uses radio frequency to connect wirelessly, so you have the freedom to connect computers anywhere in your home or office network.

## **Why D-Link Wireless?**

D-Link is the worldwide leader and award winning designer, developer, and manufacturer of networking products. D-Link delivers the performance you need at a price you can afford. D-Link has all the products you need to build your network.

## **How does wireless work?**

Wireless works similar to how cordless phone work, through radio signals to transmit data from one point A to point B. But wireless technology has restrictions as to how you can access the network. You must be within the wireless network range area to be able to connect your computer. There are two different types of wireless networks Wireless Local Area Network (WLAN), and Wireless Personal Area Network (WPAN).

## **Wireless Local Area Network (WLAN)**

In a wireless local area network, a device called an Access Point (AP) connects computers to the network. The access point has a small antenna attached to it, which allows it to transmit data back and forth over radio signals. With an indoor access point as seen in the picture, the signal can travel up to 300 feet. With an outdoor access point the signal can reach out up to 30 miles to serve places like manufacturing plants, industrial locations, college and high school campuses, airports, golf courses, and many other outdoor venues.

## Who uses wireless?

Wireless technology has become so popular in recent years that almost everyone is using it, whether it's for home, office, business, D-Link has a wireless solution for it.

### Home

- Gives everyone at home broadband access
- Surf the Web, check email, instant message, and etc
- Gets rid of the cables around the house
- Simple and easy to use

### Small Office and Home Office

- Stay on top of everything at home as you would at office
- Remotely access your office network from home
- Share Internet connection and printer with multiple computers
- No need to dedicate office space

## **Where is wireless used?**

Wireless technology is expanding everywhere not just at home or office. People like the freedom of mobility and it's becoming so popular that more and more public facilities now provide wireless access to attract people. The wireless connection in public places is usually called "hotspots".

Using a D-Link Cardbus Adapter with your laptop, you can access the hotspot to connect to Internet from remote locations like: Airports, Hotels, Coffee Shops, Libraries, Restaurants, and Convention Centers.

Wireless network is easy to setup, but if you're installing it for the first time it could be quite a task not knowing where to start. That's why we've put together a few setup steps and tips to help you through the process of setting up a wireless network.

### **Tips**

Here are a few things to keep in mind, when you install a wireless network.

#### **Centralize your router or Access Point**

Make sure you place the router/access point in a centralized location within your network for the best performance. Try to place the router/access point as high as possible in the room, so the signal gets dispersed throughout your home. If you have a two-story home, you may need a repeater to boost the signal to extend the range.

#### **Eliminate Interference**

Place home appliances such as cordless telephones, microwaves, and televisions as away as possible from the router/access point. This would significantly reduce any interfere that the appliances might cause since they operate on same frequency.

#### **Security**

Don't let you next-door neighbors or intruders connect to your wireless network. Secure your wireless network by turning on the WPA or WEP security feature on the router. Refer to product manual for detail information on how to set it up.

# Wireless Modes

There are basically two modes of networking:

- **Infrastructure** – All wireless clients will connect to an access point or wireless router.
- **Ad-Hoc** – Directly connecting to another computer, for peer-to-peer communication, using wireless network adapters on each computer, such as two or more DCS-935L wireless network Cardbus adapters.

An Infrastructure network contains an Access Point or wireless router. All the wireless devices, or clients, will connect to the wireless router or access point.

An Ad-Hoc network contains only clients, such as laptops with wireless cardbus adapters. All the adapters must be in Ad-Hoc mode to communicate.

# Networking Basics

## Check your IP address

After you install your new D-Link adapter, by default, the TCP/IP settings should be set to obtain an IP address from a DHCP server (i.e. wireless router) automatically. To verify your IP address, please follow the steps below.


Click on **Start > Run**. In the run box type **cmd** and click **OK**.

At the prompt, type **ipconfig** and press **Enter**.

This will display the IP address, subnet mask, and the default gateway of your adapter.

If the address is 0.0.0.0, check your adapter installation, security settings, and the settings on your router. Some firewall software programs may block a DHCP request on newly installed adapters.

If you are connecting to a wireless network at a hotspot (e.g. hotel, coffee shop, airport), please contact an employee or administrator to verify their wireless network settings.

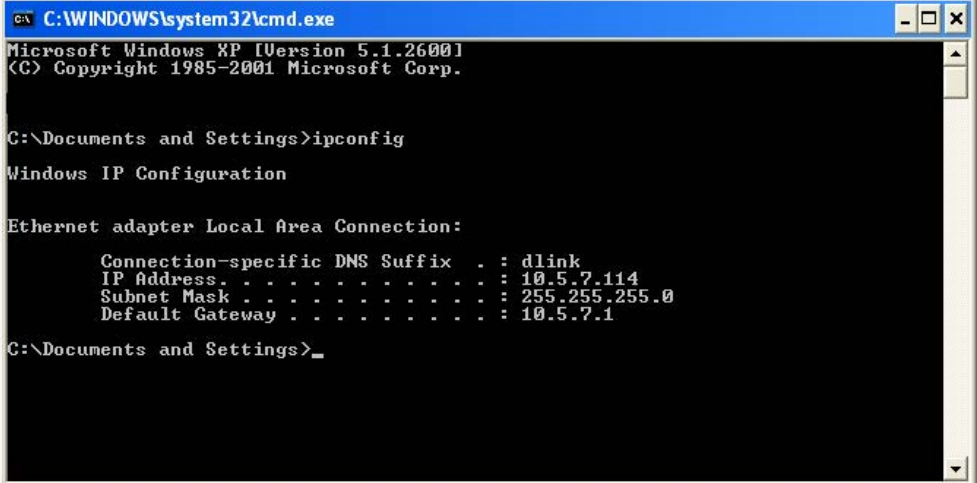

```
C:\WINDOWS\system32\cmd.exe
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

C:\Documents and Settings>ipconfig

Windows IP Configuration

Ethernet adapter Local Area Connection:

    Connection-specific DNS Suffix  . : dlink
    IP Address. . . . .               : 10.5.7.114
    Subnet Mask . . . . .            : 255.255.255.0
    Default Gateway . . . . .        : 10.5.7.1

C:\Documents and Settings>
```

## Statically Assign an IP Address

If you are not using a DHCP capable gateway/router, or you need to assign a static IP address, please follow the steps below:

### Step 1

Windows® Vista - Click on **Start > Control Panel > Network and Internet > Network and Sharing Center > Manage Network Connections**.

Windows XP - Click on **Start > Control Panel > Network Connections**.

### Step 2

Right-click on the **Local Area Connection** which represents your D-Link network adapter and select **Properties**.

### Step 3

Highlight **Internet Protocol (TCP/IP)** and click **Properties**.

### Step 4


Click **Use the following IP address** and enter an IP address that is on the same subnet as your network or the LAN IP address on your router.

**Example:** If the router's LAN IP address is 192.168.0.1, make your IP address 192.168.0.X where X is a number between 2 and 99. Make sure that the number you choose is not in use on the network. Set Default Gateway the same as the LAN IP address of your router (192.168.0.1).

Set Primary DNS the same as the LAN IP address of your router (192.168.0.1). The Secondary DNS is not needed or you may enter a DNS server from your ISP.

### Step 5

Click **OK** twice to save your settings.

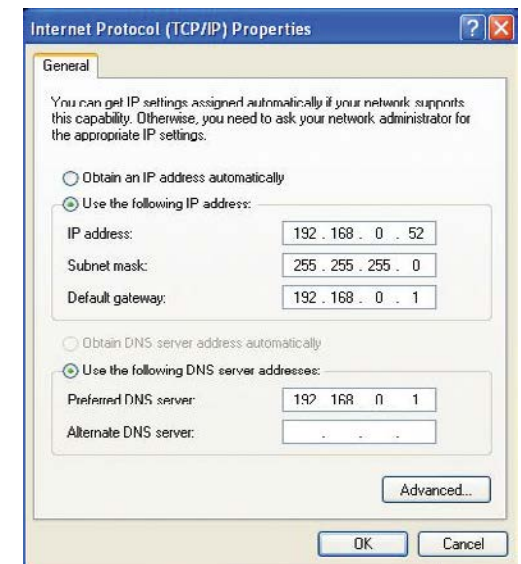

# Technical Specifications

## SYSTEM REQUIREMENTS

- Microsoft Windows® 8/7/Vista, or Mac with OS X 10.6 or higher
- PC with 1.3 GHz or above and at least 128 MB RAM
- Internet Explorer 7, Firefox 12, Safari 6, or Chrome 20 or higher version with Java installed and enabled

## NETWORKING PROTOCOL

- IPV4, ARP, TCP, UDP, ICMP
- DHCP Client
- NTP Client (D-Link)
- DNS Client
- DDNS Client (DynDNS and D-Link)
- SMTP Client
- FTP Client
- HTTP Server
- PPPoE
- UPnP Port Forwarding
- Bonjour
- UPnP
- RTP
- RTSP
- RTCP
- HTTP for configuration

## WIRELESS CONNECTIVITY

- 802.11b/g/n/ac Wireless with WEP/WPA/WPA2 security

## WIRELESS TRANSMIT POWER

- 802.11b: 16 dBm
- 802.11g: 12 dBm
- 802.11n: 12 dBm
- 802.11ac: 12 dBm

## SDRAM

- 64 MB

## FLASH MEMORY

- 16 MB

## RESET BUTTON

- Reset to factory default

## VIDEO CODECS

- H.264
- MJPEG
- JPEG for still images

## VIDEO FEATURES

- Adjustable image size and quality
- Time stamp and text overlay
- Flip and Mirror

## RESOLUTION

- 1280 x 720, 800 x 600, 720 x 480, 640 x 480, 320 x 240 at up to 30 fps

## LENS

- Focal length: 2.38 mm, F2.4

## SENSOR

- Megapixel 1/4 inch CMOS sensor

## IR LED

- 5 meter illumination distance with 4 LEDs and light sensor

### MINIMUM ILLUMINATION

- 0 lux with IR LEDs on

### VIEWING ANGLE

- Horizontal: 78.44°
- Vertical: 47.9°
- Diagonal: 85.98°

### DIGITAL ZOOM

- Up to 4x

### 3A CONTROL

- AGC (Auto Gain Control)
- AWB (Auto White Balance)
- AES (Auto Electronic Shutter)

### POWER

- Input: 100-240 V AC, 50/60 Hz
- Output: 5 V DC, 1.2 A
- External AC-to-DC switching power adapter

### DIMENSIONS

- 66.8 x 84.5 x 124.85 mm (2.63 x 3.33 x 4.92 in.)

### WEIGHT

- 160 grams (5.6 ounces)  $\pm$  5%

### POWER CONSUMPTION

- 3.5 watts maximum  $\pm$  5%

### OPERATING TEMPERATURE

- 0 °C to 40 °C (32 °F to 104 °F)

### STORAGE TEMPERATURE

- -20 °C to 70 °C (-4 °F to 158 °F)

### HUMIDITY

- 20-80% RH non-condensing

### EMISSION (EMI), SAFETY & OTHER CERTIFICATIONS

- FCC Class B
- IC
- C-Tick
- CE