



# User Manual

## DAP-1650 Wireless AC1200 Dual-band Gigabit Range Extender

# Table of Contents

<b>Product Overview</b> .....	<b>4</b>	Media Bridge Mode.....	35
Package Contents.....	4	Configuring Wireless Security .....	36
System Requirements .....	5	Network Settings .....	39
Introduction .....	6	Storage .....	42
Features.....	7	Media Server.....	45
Hardware Overview .....	8	Advanced .....	46
Connections .....	8	Access Point Mode .....	46
LEDs .....	9	Access Control.....	46
<b>Installation</b> .....	<b>10</b>	Advanced Wireless .....	47
Operation Modes.....	10	Guest Zone .....	48
Access Point Mode .....	11	QoS.....	49
Repeater Mode .....	12	Wi-Fi Protected Setup.....	50
Media Bridge Mode .....	13	User Limit.....	51
Wireless Installation Considerations.....	14	Repeater Mode .....	52
<b>Configuration</b> .....	<b>15</b>	Advanced Wireless .....	52
SharePort Mobile App (iOS, Android) .....	15	Wi-Fi Protected Setup.....	53
QRS Mobile App Setup .....	16	Media Bridge Mode .....	54
Web-based Configuration Utility .....	17	Advanced Wireless .....	54
Wireless Setup Wizard.....	18	Wi-Fi Protected Setup.....	55
Access Point Mode .....	19	Maintenance .....	56
Repeater Mode .....	22	Access Point Mode .....	56
Media Bridge Mode .....	24	Admin.....	56
Manual Configuration.....	26	System .....	57
Wireless Settings.....	26	Firmware .....	58
Access Point Mode .....	27	Time .....	59
Repeater Mode .....	31	System Check.....	60
		Schedules .....	61

## Table of Contents

---

Repeater Mode .....	62	What is WPS? .....	76
Admin.....	62	What is WPA? .....	77
System .....	63	<b>Connect to a Wireless Network.....</b>	<b>78</b>
Firmware .....	64	Windows® 8.....	78
Time .....	65	Windows® 7 .....	80
Media Bridge Mode .....	66	Windows Vista® .....	83
Admin.....	66	WPA/WPA2 .....	84
System .....	67	WPS/WCN 2.0 .....	86
Firmware .....	68	Using Windows® XP .....	87
Time .....	69	Configure WPA-PSK.....	88
Status .....	70	<b>Troubleshooting .....</b>	<b>90</b>
Device Info .....	70	<b>Networking Basics .....</b>	<b>94</b>
Logs .....	71	Check your IP address.....	94
Statistics .....	72	Statically Assign an IP address .....	95
Wireless .....	73	<b>Technical Specifications .....</b>	<b>96</b>
IPv6 .....	74	<b>Compliance Statements .....</b>	<b>98</b>
Help .....	75		
<b>Wireless Security .....</b>	<b>76</b>		
What is WEP? .....	76		

# Product Overview

## Package Contents



DAP-1650 Wireless AC1200 Dual Band Gigabit Cloud Router



Ethernet Cable



Power Adapter



WI-FI Configuration Note

If any of the above items are missing, please contact your reseller.

**Note:** Using a power supply with a different voltage rating than the one included with the DAP-1650 will cause damage and void the warranty for this product.

# System Requirements

<b>Network Requirements</b>	<ul style="list-style-type: none"><li>• An Ethernet-based Network</li><li>• IEEE 802.11ac/n/g/b/a wireless network (AP/Bridge/Repeater Mode)</li><li>• 10/100/1000 Ethernet</li></ul>
<b>Web-based Configuration Utility Requirements</b>	<p><b>Computer with the following:</b></p> <ul style="list-style-type: none"><li>• Windows®, Macintosh, or Linux-based operating system</li><li>• An installed Ethernet adapter</li></ul> <p><b>Browser Requirements:</b></p> <ul style="list-style-type: none"><li>• Internet Explorer® 7.0 or higher</li><li>• Mozilla Firefox 12.0 or higher</li><li>• Google™ Chrome 20.0 or higher</li><li>• Apple Safari 4.0 or higher</li></ul> <p><b>Windows® Users:</b> Make sure you have the latest version of Java installed. Visit <a href="http://www.java.com">www.java.com</a> to download the latest version.</p>

# Introduction

D-Link, an industry leader in networking, introduces the new D-Link DAP-1650 Wireless AC1200 Dual-band Gigabit Range Extender. With the ability to transfer files with a maximum combined wireless signal rate of up to 1200 Mbps<sup>1</sup>, the DAP-1650 gives you high-speed wireless network access for your home or office.

The DAP-1650 is compliant with the latest draft IEEE 802.11ac standard, meaning that it can connect and inter-operate with other 802.11ac compatible wireless client devices. The DAP-1650 is also backwards compatible with 802.11b/g/n devices. It can be flexibly configured to operate in 3 different modes: **Access Point**, **Media Bridge**, and **Repeater**. With its setup wizard, the DAP-1650 ensures that you will be up and running on a wireless network in just a matter of minutes.

The DAP-1650 features Wi-Fi Protected Access (WPA-PSK/WPA2-PSK) to provide an enhanced level of security for wireless data communications. The DAP-1650 also includes additional security features to keep your wireless connection safe from unauthorized access.

The DAP-1650 also supports Wi-Fi Protected Setup (WPS), repeater and wireless client operation modes each capable of being conveniently set up by using the PIN or Push Button methods.

<sup>1</sup> Maximum wireless signal rate derived from draft 802.11ac specifications. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead, lower actual data throughput rate. Environmental factors will adversely affect wireless signal range. Wireless range and speed rates are D-Link RELATIVE performance measurements based on the wireless range and speed rates of a standard Wireless N product from D-Link.


# Features

- **Faster Wireless Networking** - The DAP-1650 provides combined wireless speeds of up to 1200 Mbps<sup>1</sup>. This capability allows users to participate in real-time activities online, such as video streaming, online gaming, and real-time audio.
- **Flexible Operation Modes** - The DAP-1650 can operate as an Access Point, Repeater, and Media Bridge, meaning that you can customize its operation to suit your specific networking requirements.
- **Gigabit Ethernet Ports** - The built-in Gigabit Ethernet ports facilitate a wired connection of up to 1 Gbps, meaning that wired devices can also take advantage of the DAP-1650's high-speed wireless capabilities.
- **Compatible with IEEE 802.11n/g/b/a Devices** - The DAP-1650 is still fully compatible with the 802.11n/g/b/a standards, so it can connect with existing wireless adapters found on older devices.
- **Robust Security** - Use WPS (Wi-Fi Protected Setup) to create a secure connection to new devices in a matter of seconds by simply pushing a button or entering a PIN. There's also WPA/WPA2 security encryption, allowing you to customize your network's security.
- **User-friendly Setup Wizard** - Through its easy-to-use web-based user interface, the DAP-1650 lets you control what information is accessible to those on the wireless network, whether from the Internet or from your company's server. Configure your access point to your specific settings within minutes.

<sup>1</sup> Maximum wireless signal rate derived from draft 802.11ac specifications. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead, lower actual data throughput rate. Environmental factors will adversely affect wireless signal range. Wireless range and speed rates are D-Link RELATIVE performance measurements based on the wireless range and speed rates of a standard Wireless N product from D-Link.

# Hardware Overview


## Connections

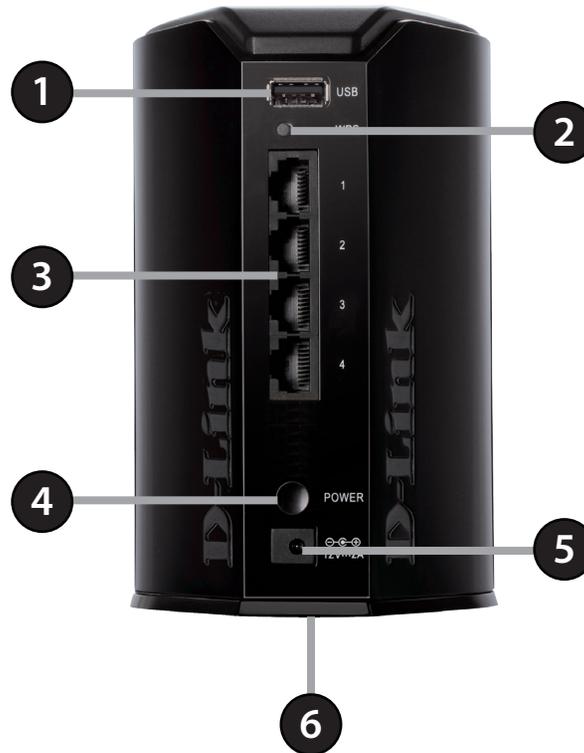

<b>1</b>	<b>USB Port</b>	Connect a USB storage device to enable network wide access.
<b>2</b>	<b>WPS Button</b>	Use WPS (Wi-Fi Protected Setup) to easily create a secure connection to new devices.
<b>3</b>	<b>LAN Ports</b>	Connect 10/100/1000 Ethernet devices such as computers, switches, and hubs.
<b>4</b>	<b>Power Switch</b>	Press to turn power to the unit on or off.
<b>5</b>	<b>Power Receptor</b>	Receptor for the supplied power adapter.
<b>6</b>	<b>Reset Button (base)</b>	Press the reset button to return the device back to it's factory conditions.

# Hardware Overview

## LEDs

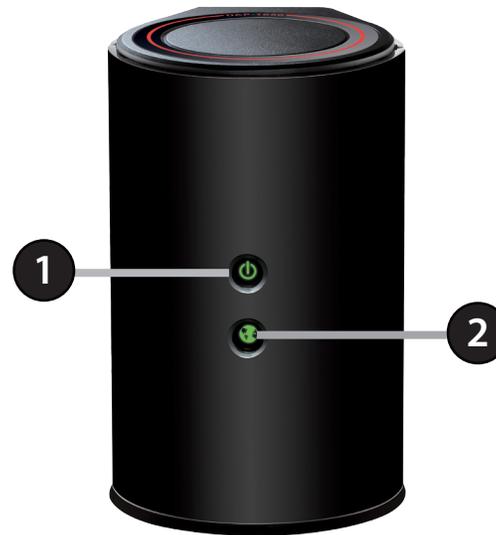

1	<b>Power LED</b>	A solid green light indicates a proper connection to the power supply. The light will blink green during the WPS process. The light will blink orange during boot up.
2	<b>Internet LED</b>	A solid light indicates connection on the Internet port. If the LED is orange, the connection is good but the access point cannot connect to the Internet.

# Installation

Please configure the DAP-1650 with a computer connected directly to the device. The following pages will explain the different operational modes you can use.


## Operation Modes

The DAP-1650 features three operation modes, enabling you to customize it to your networking requirements. Please refer to the following sections to determine which mode is most suitable for your network.

- Access Point mode - page 11
- Repeater mode - page 12
- Media Bridge mode - page 13


## Access Point Mode

Access Point (AP) mode adds wireless capability to your existing wired network. The DAP-1650 acts as a central connection point for any computer (client) that has an 802.11ac or backwards compatible 802.11n/g/b/a wireless network interface and is within range of the access point. Clients must connect to the network name (SSID) broadcast by the access point in order to wirelessly access the network. If wireless security is enabled on the access point, the client will need to enter a password to connect. In Access Point mode, multiple clients can connect wirelessly to the network at the same time.

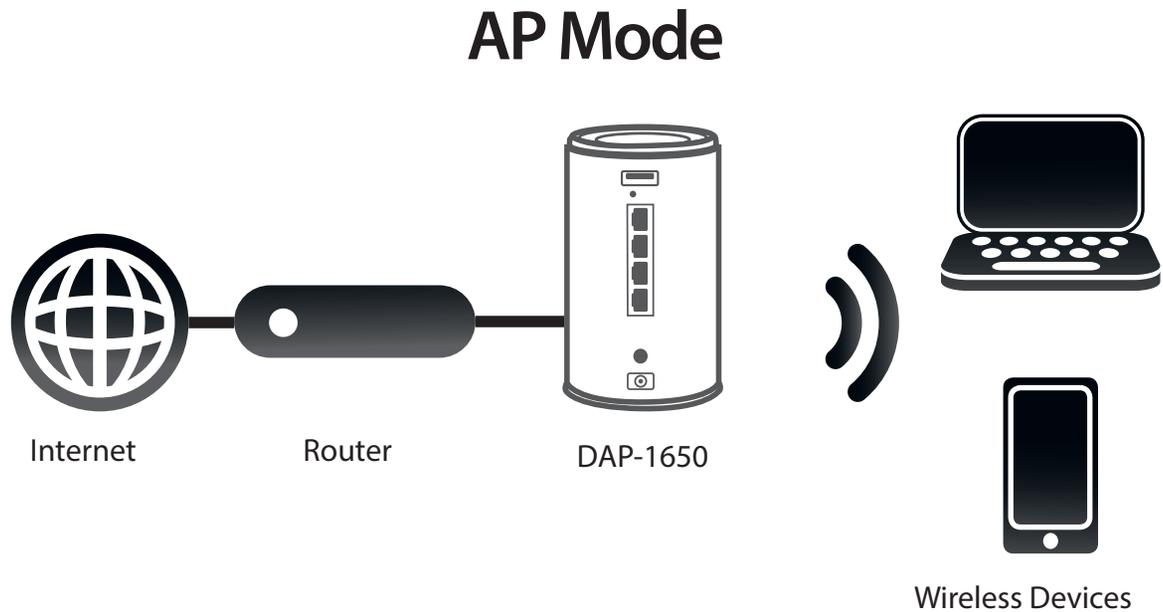

## Repeater Mode


In Repeater mode, the DAP-1650 extends the range of your existing wireless network by repeating the wireless signal of another access point or wireless router. The DAP-1650 and wireless router (if used) must be within range of each other. The extended wireless network can use the same SSID and security settings as the existing network, or you can choose to specify a new network name and security method.

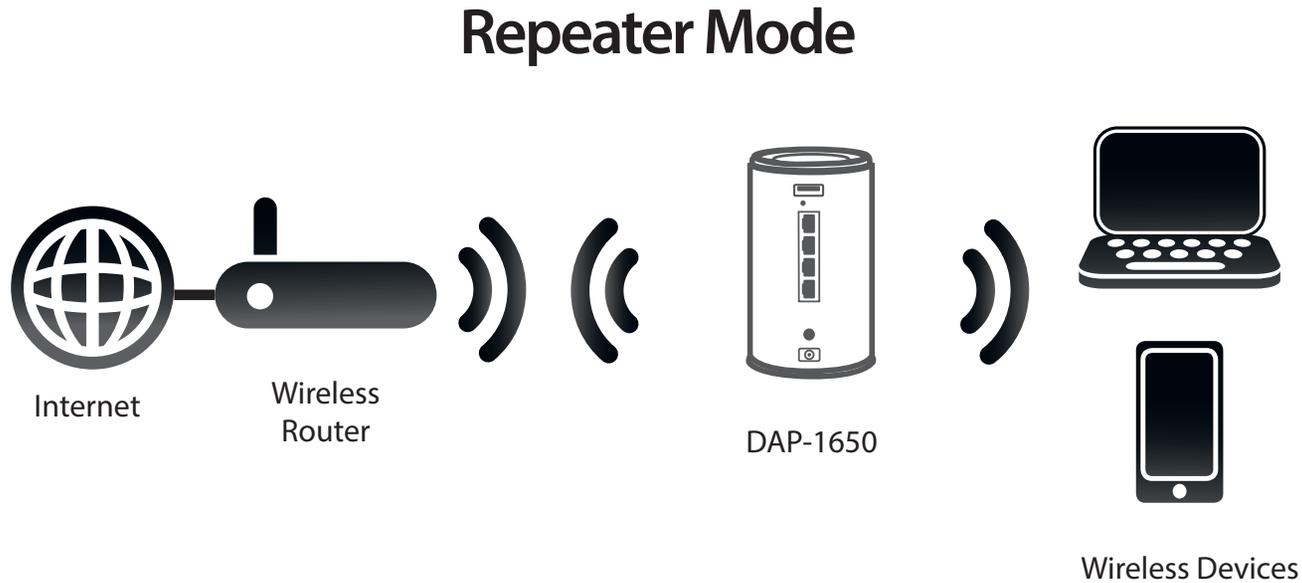

## Media Bridge Mode

In Media Bridge mode, the DAP-1650 creates a wireless link between two existing networks, and enables you to attach a wired device to a wireless network. The two networks must be within wireless reach of one another in order for bridge mode to be effective.

### Media Bridge Mode

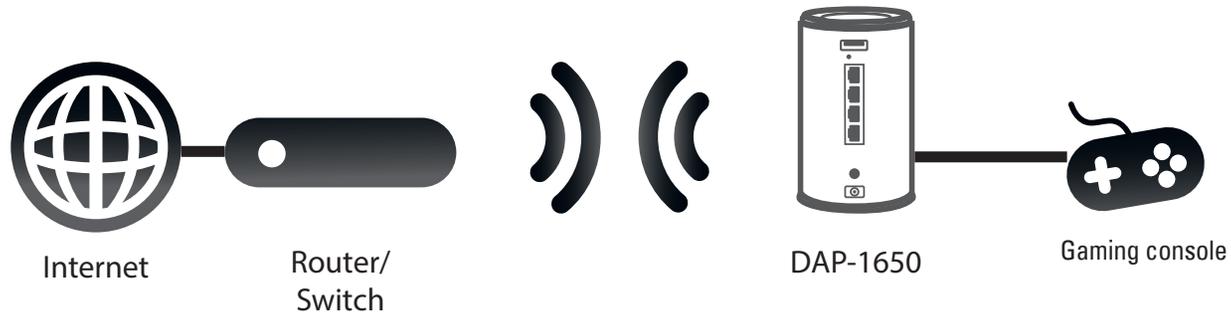

# Wireless Installation Considerations

The DAP-1650 wireless access point lets you access your network using a wireless connection from virtually anywhere within the operating range of the device. Keep in mind, however, that the number, thickness and location of walls, ceilings, or other objects that the wireless signals must pass through, may limit the range. Typical ranges vary depending on the types of materials and background RF (radio frequency) noise in your home or business. The key to maximizing wireless range is to follow these basic guidelines:

- Keep the number of walls and ceilings between the D-Link access point and other network devices to a minimum. Each wall or ceiling can reduce your adapter's range from 3-90 feet (1-30 meters.) Position your devices so that the number of walls or ceilings is minimized.
- Be aware of the direct line between network devices. A wall that is 1.5 feet thick (.5 meters), at a 45-degree angle appears to be almost 3 feet (1 meter) thick. At a 2-degree angle it appears over 42 feet (14 meters) thick! Position devices so that the signal will travel straight through a wall or ceiling (instead of at an angle) for better reception.
- Building materials make a difference. A solid metal door or aluminum studs may have a negative effect on range. Try to position access points, wireless routers, and computers so that the signal passes through drywall or open doorways. Materials and objects such as glass, steel, metal, walls with insulation, water (fish tanks), mirrors, file cabinets, brick, and concrete will degrade your wireless signal.
- Keep your product away (at least 3-6 feet or 1-2 meters) from electrical devices or appliances that generate RF noise.
- If you are using 2.4 GHz cordless phones or X-10 (wireless products such as ceiling fans, lights, and home security systems), your wireless connection may also be affected. Make sure your 2.4 GHz phone base is as far away from your wireless devices as possible. The base transmits a signal even if the phone is not in use.

# Configuration

## SharePort Mobile App (iOS, Android)

The SharePort Mobile app will allow you to access files from a USB storage drive that is plugged into your router. You must enable file sharing from the **Setup > Storage** page (refer to page 22) for this app to work properly.

1. Plug your USB storage drive into the USB port.

**Note:** The DAP-1650 supports hard drives with up to one terabyte of storage capacity.



2. Use your iOS or Android mobile device to scan the QR code to the right to download the **SharePort Mobile** app.

You can also search for the SharePort Mobile app directly in the iOS App Store or Google Play.



iOS



Android

3. From your iOS or Android mobile device, choose **Settings**.

**Note:** These steps are for the iOS version of the app. The Android version may differ slightly.



Settings

# QRS Mobile App Setup

The DAP-1650 can be set up from your iOS or Android smartphone or tablet device using the QRS Mobile app.

Search for “QRS Mobile” in the App Store or Google Play, or use your mobile device to scan the QR codes on the right to download the QRS Mobile app from the App Store (left) for your iOS device, or from Google Play (right) for your Android device.



For iOS



For Android

Connect to the Wi-Fi network that is displayed on the Wi-Fi Configuration Card included in your package (ex: **dlink-a8fa**). Then, enter the Wi-Fi password also printed on the Wi-Fi Configuration Card (**akbdj1936**).



# Web-based Configuration Utility



This section will show you how to configure your D-Link wireless access point using the web-based configuration utility.

If you wish to change the default settings or adjust the configuration of the DAP-1650, you may use the web-based configuration utility.

To access the configuration utility, open a web browser such as Internet Explorer and enter **http://dlinkap.local** in the address field.

Select **Admin** from the drop-down menu and then enter your password. Leave the password blank by default.


If you get a *Page Cannot be Displayed* error, please refer to "Troubleshooting" on page xc for assistance.

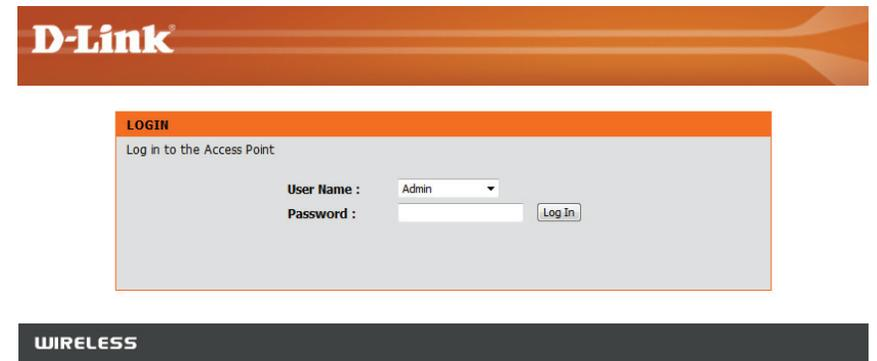


# Wireless Setup Wizard

Click **Launch Wireless Setup Wizard** to configure your access point.

If you want to configure the access point manually without running the wizard, skip to "Manual Configuration" on page 26.

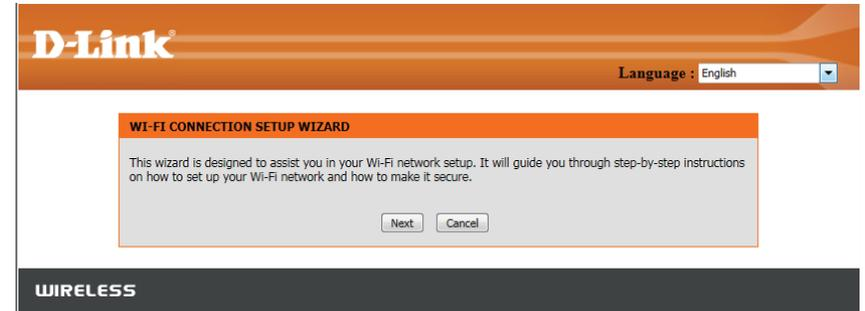

Click **Next** to continue.

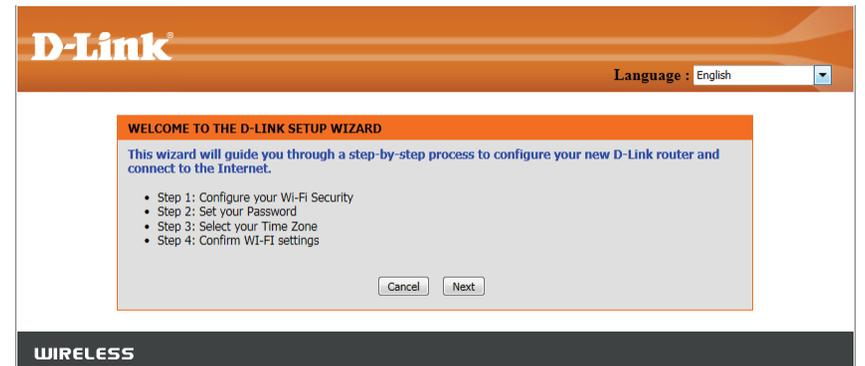

# Access Point Mode

This wizard is designed to assist you in configuring your DAP-1650 as an access point.

Select **Access Point** from the drop-down menu. Then, click **Next** to continue.

**SELECT YOUR OPERATION MODE**

Please select wireless mode. click next to continue. Access Point allows the device to act as the wireless transmitter for your route or become a separate Access Poit.

Wireless Mode :

**Access Point Mode**

Internet (Optional) Router (Optional) DAP-1650 Wireless Devices

This screen will help you to set a network name (SSID) and security password for your wireless network. Specify an SSID for both the 2.4 GHz and 5 GHz bands (these names must not be the same). It is possible to use the same wireless security password for both networks. If you wish to use a different password for each network (recommended) enter the desired passwords in the **2.4 GHz Wi-Fi Password** and **5 GHz Wi-Fi Password** fields.

Click **Next** to continue.

**CONFIGURE YOUR WI-FI SECURITY(2.4G)**

Give your Wi-Fi network a name.  
Wi-Fi Network Name (SSID):  
 (Using up to 32 characters)

Give your Wi-Fi network a password.  
Wi-Fi Password:  
 (Between 8 and 63 characters)

**CONFIGURE YOUR WI-FI SECURITY(5G)**

Give your Wi-Fi network a name.  
Wi-Fi Network Name (SSID):  
 (Using up to 32 characters)

Give your Wi-Fi network a password.  
Wi-Fi Password:  
 (Between 8 and 63 characters)

## Section 3 - Configuration

---

Enter your password. By default, Admin is selected as the username and cannot be changed, and by default, the password is blank.

Check the **Enable Graphical Authentication** box to enable CAPTCHA authentication for added security. Click **Next** to continue.

### SET YOUR PASSWORD

By default, your new D-Link Router does not have a password configured for administrator access to the Web-based configuration pages. To secure your new networking device, please set and verify a password below:

**Password :**

**Verify Password :**

**Enable Graphical Authentication :**

Select your time zone from the drop-down menu and click **Next** to continue.

### SELECT YOUR TIME ZONE

Select the appropriate time zone for your location. This information is required to configure the time-based options for router.

**Time Zone :**

A summary page will be displayed, showing the current settings for your 2.4 GHz and 5 GHz wireless networks. It is recommended that you make a note of this information for future reference.

Click **Finish** to save your network settings.

In order for your network settings to take effect AP will reboot automatically.


When the device has finished rebooting the main screen will display.



A dialog box will appear asking if you wish to save the address for the web-based configuration utility in your browser's bookmarks. Click **OK** to save and you will be taken to your browser's bookmark settings to save the address. Click **Cancel** to continue without saving a bookmark.

In order for your network settings to take effect the AP will reboot automatically.


When the device has finished rebooting the main screen will display.

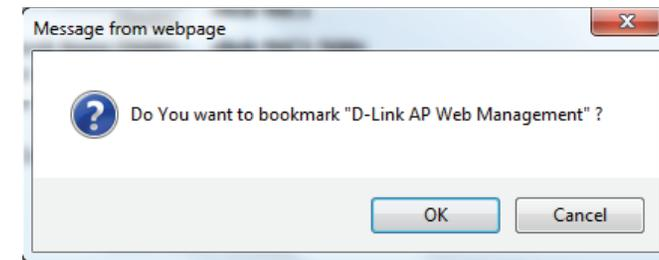

# Repeater Mode

This wizard is designed to assist you in configuring your DAP-1650 as a repeater to extend the range of your existing wireless network.

Select **Repeater** from the drop-down menu.

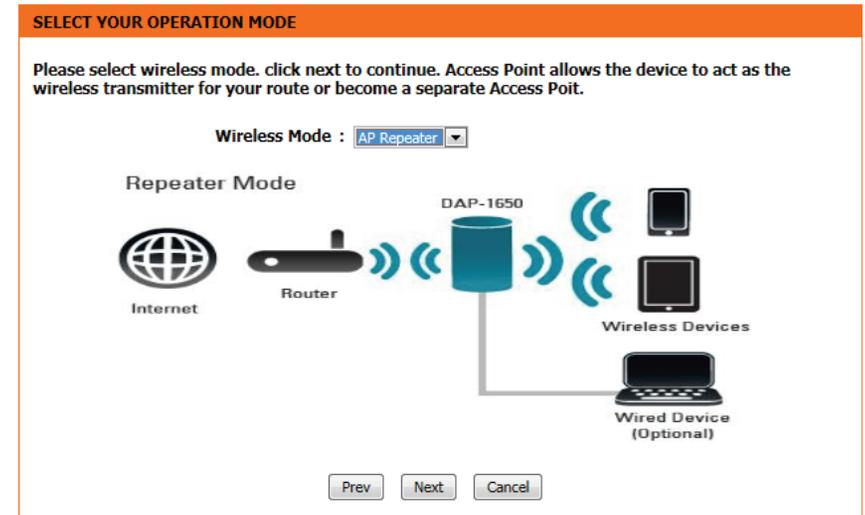

This screen will help you to set a network name (SSID) and security password for your wireless network. Specify an SSID for both the 2.4 GHz and 5 GHz bands (these names must not be the same). It is possible to use the same wireless security password for both networks. If you wish to use a different password for each network (recommended) enter the desired passwords in the **2.4 GHz Wi-Fi Password** and **5 GHz Wi-Fi Password** fields.

Click **Next** to continue.

**CONFIGURE YOUR WI-FI SECURITY(2.4G)**

Give your Wi-Fi network a name.  
Wi-Fi Network Name (SSID):  
 (Using up to 32 characters)

Give your Wi-Fi network a password.  
Wi-Fi Password:  
 (Between 8 and 63 characters)


**CONFIGURE YOUR WI-FI SECURITY(5G)**

Give your Wi-Fi network a name.  
Wi-Fi Network Name (SSID):  
 (Using up to 32 characters)

Give your Wi-Fi network a password.  
Wi-Fi Password:  
 (Between 8 and 63 characters)

Cancel Prev Next

The wizard will scan for available wireless networks.

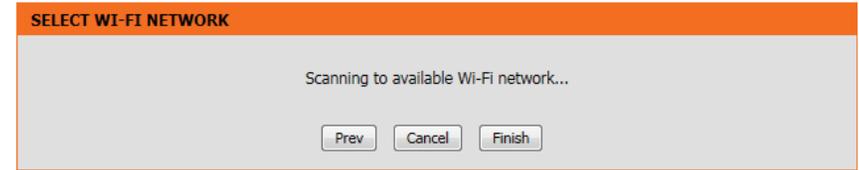

Select the network you wish to extend and click **Next**.

SELECT WI-FI NETWORK

SSID	BSSID	Channel	Type	Encrypt	Signal	Select
07869-5	00:18:e7:95:68:ab	48 (A+N)	AP	WPA-PSK (aes/kip)/WPA2-PSK(aes/kip)	100	<input type="radio"/>
D-Link	1c:bd:b9:c3:8f:40	149 (A+N)	AP	no	71	<input type="radio"/>
SWSWSW	00:94:e4:cd:d8:06	157 (A+N)	AP	WPA-PSK (aes/kip)/WPA2-PSK(aes/kip)	67	<input type="radio"/>
dlink1	fc:75:16:76:73:00	149 (A+N)	AP	no	65	<input type="radio"/>
dlink2	fc:75:16:76:73:01	149 (A+N)	AP	no	63	<input type="radio"/>

Enter your password for that wireless network and click **Next**.

ENTER WI-FI PASSWORD

Please enter Wi-Fi Password to establish wireless connection.

Wi-Fi Password :

Prev Next Cancel

A summary page will be displayed, showing the current settings for your 2.4 GHz and 5 GHz wireless networks. It is recommended that you make a note of this information for future reference.

Click **Finish** to save your network settings.

In order for your network settings to take effect the AP will reboot automatically.

When the device has finished rebooting the main screen will display.

CONFIRM WI-FI SETTINGS(2.4G)

Below is a detailed summary of your Wi-Fi security settings. Please print this page out, or write the information on a piece of paper, so you can configure the correct settings on your Wi-Fi devices.

Wi-Fi Network Name (SSID) : dlink-B7E4  
Wi-Fi Password : yxrea33028

CONFIRM WI-FI SETTINGS(5G)

Wi-Fi Network Name (SSID) : dlink-B7E4-5GHz  
Wi-Fi Password : yxrea33028

CONFIRM WI-FI SETTINGS(REPEATER)


Wi-Fi Network Name (SSID) : \_top\_of\_the\_list  
Wi-Fi Password : passw0rd

Cancel Prev Finish


# Media Bridge Mode

This wizard is designed to assist you in configuring your DAP-1650 as a media bridge to extend the range of your existing wireless network. This mode is particularly useful for attaching a wired device to a wireless network.

Select **Media Bridge** from the drop-down menu.

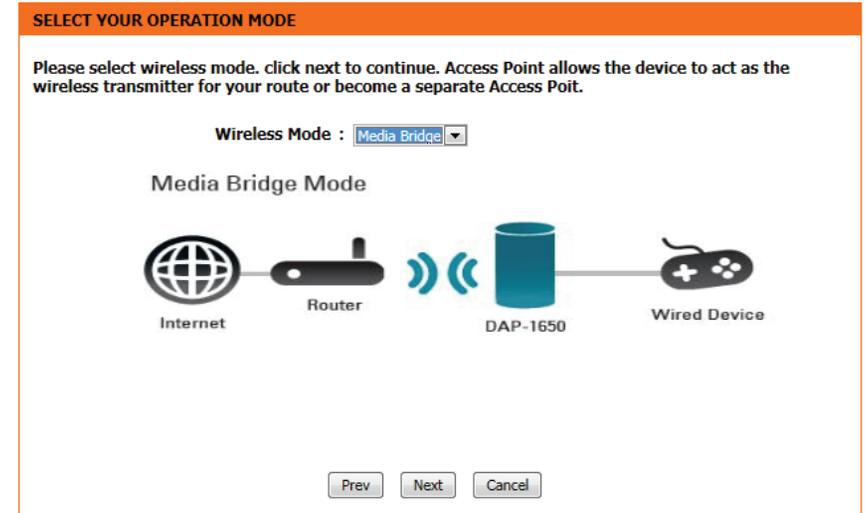

The wizard will scan for available wireless networks.

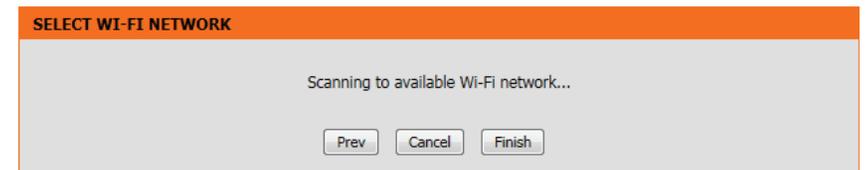

Select the network you wish to extend and click **Next**.

SSID	BSSID	Channel	Type	Encrypt	Signal	Select
07869-5	00:18:e7:95:68:ab	48 (A+N)	AP	WPA-PSK (aes/tkip)/WPA2-PSK(aes/tkip)	100	<input type="radio"/>
D-Link	1c:bd:b9:c3:8f:40	149 (A+N)	AP	no	71	<input type="radio"/>
SWSWSW	00:94:e4:cd:d8:06	157 (A+N)	AP	WPA-PSK (aes/tkip)/WPA2-PSK(aes/tkip)	67	<input type="radio"/>
dlink1	fc:75:16:76:73:00	149 (A+N)	AP	no	65	<input type="radio"/>
dlink2	fc:75:16:76:73:01	149 (A+N)	AP	no	63	<input type="radio"/>


Enter your password for that wireless network and click **Next**.

A summary page will be displayed, showing the current settings for your wireless network. It is recommended that you make a note of this information for future reference.


Click **Finish** to save your network settings.

In order for your network settings to take effect the AP will reboot automatically.

When the device has finished rebooting the main screen will display.

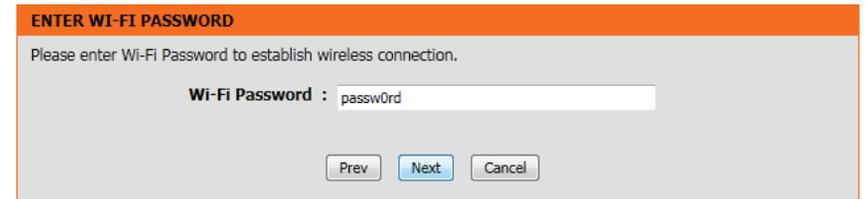

The screenshot shows a configuration window with an orange header titled "ENTER WI-FI PASSWORD". Below the header, the text reads "Please enter Wi-Fi Password to establish wireless connection." There is a text input field labeled "Wi-Fi Password" containing the text "passw0rd". At the bottom of the window, there are three buttons: "Prev", "Next" (which is highlighted in blue), and "Cancel".

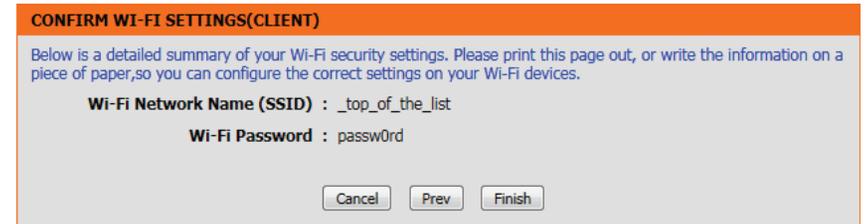

The screenshot shows a configuration window with an orange header titled "CONFIRM WI-FI SETTINGS(CLIENT)". Below the header, there is a blue text box containing the instruction: "Below is a detailed summary of your Wi-Fi security settings. Please print this page out, or write the information on a piece of paper,so you can configure the correct settings on your Wi-Fi devices." Below this, the settings are listed: "Wi-Fi Network Name (SSID) : \_top\_of\_the\_list" and "Wi-Fi Password : passw0rd". At the bottom of the window, there are three buttons: "Cancel", "Prev", and "Finish".

# Manual Configuration

## Wireless Settings

You may also manually configure your DAP-1650 instead of running the setup wizard. Please refer to the following pages for detailed instructions on how to manually configure the DAP-1650 for your desired operation mode.

Access Point mode - page 27

Repeater mode - page 31

Media Bridge mode - page 35

## Access Point Mode

### 2.4 GHz Band

**Wireless Mode:** Select **Access Point** from the drop-down menu.

**Enable Wireless:** Check the box to enable the wireless function for the **2.4 GHz** band. If you do not want to use wireless, uncheck the box to disable all wireless functions. You may also set up a specific time range (schedule). Select a schedule from the drop-down menu or click **Add New** to create a new schedule. By default, the schedule is set to **Always**.

**Wireless Network Name:** Specify a network name (SSID) to identify the 2.4 GHz network. This is the network name that wireless clients will search for when connecting to your wireless network.

**802.11 Mode:** Select one of the following:  
**802.11n Only** - Select if you are only using 802.11n wireless clients.  
**Mixed 802.11n and 802.11g** - Select if you are using a mix of 802.11n and 802.11g wireless clients.  
**Mixed 802.11n, 802.11g and 802.11b** - Select if you are using a mix of 802.11n, 802.11g, and 802.11b wireless clients.

**Enable Auto Channel Scan:** The **Auto Channel Scan** setting can be selected to allow the DAP-1650 to automatically choose the channel with the least amount of interference.

**Wireless Channel:** Indicates the channel setting for the DAP-1650. The channel can be changed to fit the channel setting for an existing wireless network or to reduce interference in congested areas. If you enable **Auto Channel Scan**, this option will not be available.

**Transmission Rate:** Use the drop-down menu to select the appropriate transmission rate in Mbits per second. Many users will want to use the default setting, **Best (automatic)**.

WIRELESS MODE SETTINGS	
Wireless Mode :	Access Point ▼
WIRELESS NETWORK SETTINGS	
Wireless Band : 2.4GHz Band	
Enable Wireless :	<input checked="" type="checkbox"/> Always ▼ <input type="button" value="New Schedule"/>
Wireless Network Name :	dlink-B7E4 (Also called the SSID)
802.11 Mode :	Mixed 802.11n, 802.11g and 802.11b ▼
Enable Auto Channel Scan :	<input checked="" type="checkbox"/>
Wireless Channel :	2.412 GHz - CH 1 ▼
Transmission Rate :	Best (automatic) ▼ (Mbit/s)
Channel Width :	20/40 MHz(Auto) ▼
Visibility Status :	<input checked="" type="radio"/> Visible <input type="radio"/> Invisible
WIRELESS SECURITY MODE	
Security Mode :	WPA-Personal ▼

**Channel Width:** Select the channel width:  
**Auto 20/40** - Select if you are using both 802.11n and non-802.11n wireless devices.

**Visibility Status:** **20 MHz** - Select if you are not using any 802.11n wireless clients. Select whether you would like the network name (SSID) of your wireless network to be **Visible** or **Invisible** to wireless clients. If **Invisible**, the SSID of the DAP-1650 will not be seen by site survey utilities, so wireless clients will have to manually enter the SSID of your wireless network in order to connect to it.

**Security Mode:** For information on how to set up wireless security, please refer to "Configuring Wireless Security" on page 36.

WIRELESS MODE SETTINGS	
Wireless Mode :	Access Point ▼

WIRELESS NETWORK SETTINGS	
Wireless Band : 2.4GHz Band	
Enable Wireless :	<input checked="" type="checkbox"/> Always ▼ <input type="button" value="New Schedule"/>
Wireless Network Name :	dlink-B7E4 (Also called the SSID)
802.11 Mode :	Mixed 802.11n, 802.11g and 802.11b ▼
Enable Auto Channel Scan :	<input checked="" type="checkbox"/>
Wireless Channel :	2.412 GHz - CH 1 ▼
Transmission Rate :	Best (automatic) ▼ (Mbit/s)
Channel Width :	20/40 MHz(Auto) ▼
Visibility Status :	<input checked="" type="radio"/> Visible <input type="radio"/> Invisible

WIRELESS SECURITY MODE	
Security Mode :	WPA-Personal ▼

## 5 GHz Band

**Enable Wireless:** Check the box to enable the wireless function for the **5 GHz** band. If you do not want to use wireless, uncheck the box to disable all wireless functions. You may also set up a specific time range (schedule). Select a schedule from the drop-down menu or click **Add New** to create a new schedule. By default, the schedule is set to **Always**.

**Wireless Network Name:** Specify a network name (SSID) to identify the 5 GHz network. This is the network name that wireless clients will search for when connecting to your wireless network. This name should be different to that of the 2.4 GHz network configured above.

**802.11 Mode:** Select one of the following:

- 802.11a Only** - Select if you are only using 802.11a wireless clients.
- 802.11n Only** - Select if you are only using 802.11n wireless clients.
- Mixed 802.11n and 802.11a** - Select if you are using a mix of 802.11n and 802.11a wireless clients.
- 802.11ac Only** - Select if you are only using 802.11ac wireless clients.
- Mixed 802.11ac and 802.11n** - Select if you are using a mix of 802.11ac and 802.11n wireless clients.
- Mixed 802.11ac, 802.11n and 802.11a** - Select if you are using a mix of 802.11ac, 802.11n, and 802.11a wireless clients.

**Enable Auto Channel Scan:** The **Auto Channel Scan** setting can be selected to allow the DAP-1650 to automatically choose the channel with the least amount of interference.

**Wireless Channel:** Indicates the channel setting for the DAP-1650. The channel can be changed to fit the channel setting for an existing wireless network or to reduce interference in congested areas. If you enable **Auto Channel Scan**, this option will not be available.

**WIRELESS NETWORK SETTINGS**

**Wireless Band : 5GHz Band**

**Enable Wireless :**  Always ▼ New Schedule

**Wireless Network Name :**  (Also called the SSID)

**802.11 Mode :**  ▼

**Enable Auto Channel Scan :**

**Wireless Channel :**  ▼

**Transmission Rate :**  ▼ (Mbit/s)

**Channel Width :**  ▼

**Visibility Status :**  Visible  Invisible

**WIRELESS SECURITY MODE**

**Security Mode :**  ▼

**Transmission Rate:** Use the drop-down menu to select the appropriate transmission rate in Mbits per second. Many users will want to use the default setting, **Best (automatic)**.

**Channel Width:** Select the channel width:  
**Auto 20/40/80** - Select this option if you are using a combination of 802.11ac, 802.11n, and other wireless devices.  
**Auto 20/40** - Select if you are using both 802.11n and non-802.11n wireless devices.  
**20 MHz** - Select if you are not using any 802.11n wireless clients.

**Visibility Status:** Select whether you would like the network name (SSID) of your wireless network to be **Visible** or **Invisible** to wireless clients. If **Invisible**, the SSID of the DAP-1650 will not be seen by site survey utilities, so wireless clients will have to manually enter the SSID of your wireless network in order to connect to it.

**Security Mode:** For information on how to set up wireless security, please refer to "Configuring Wireless Security" on page 36.

Click **Save Settings** at the bottom of the page to save the current configuration.

WIRELESS NETWORK SETTINGS	
Wireless Band :	5GHz Band
Enable Wireless :	<input checked="" type="checkbox"/> Always <input type="checkbox"/> New Schedule
Wireless Network Name :	dlink-B7E4-5GHz (Also called the SSID)
802.11 Mode :	Mixed 802.11ac, 802.11n and 802.11a
Enable Auto Channel Scan :	<input checked="" type="checkbox"/>
Wireless Channel :	5.180 GHz - CH 36
Transmission Rate :	Best (automatic) (Mbit/s)
Channel Width :	20/40/80 MHz(Auto)
Visibility Status :	<input checked="" type="radio"/> Visible <input type="radio"/> Invisible

WIRELESS SECURITY MODE	
Security Mode :	WPA-Personal

## Repeater Mode

Repeater mode re-broadcasts the wireless signal of an existing network to increase coverage. The existing wireless signal can be repeated by the DAP-1650 using both the 2.4 GHz and 5 GHz bands.

### 2.4 GHz Band

**Wireless Mode:** Select **Repeater** from the drop-down menu.

**Enable Wireless:** Check the box to enable the wireless function for the **2.4 GHz** band. If you do not want to use wireless, uncheck the box to disable all wireless functions. You may also set up a specific time range (schedule). Select a schedule from the drop-down menu or click **Add New** to create a new schedule. By default, the schedule is set to **Always**.

**Wireless Network Name:** Specify a network name (SSID) to identify the 5 GHz network. This is the network name that wireless clients will search for when connecting to your wireless network. This name should be different to that of the 2.4 GHz network configured above.

**802.11 Mode:** Select one of the following:

- 802.11a Only** - Select if you are only using 802.11a wireless clients.
- 802.11n Only** - Select if you are only using 802.11n wireless clients.
- Mixed 802.11n and 802.11a** - Select if you are using a mix of 802.11n and 802.11a wireless clients.
- 802.11ac Only** - Select if you are only using 802.11ac wireless clients.
- Mixed 802.11ac and 802.11n** - Select if you are using a mix of 802.11ac and 802.11n wireless clients.
- Mixed 802.11ac, 802.11n and 802.11a** - Select if you are using a mix of 802.11ac, 802.11n, and 802.11a wireless clients.

**Enable Auto Channel Scan:** The **Auto Channel Scan** setting can be selected to allow the DAP-1650 to automatically choose the channel with the least amount of interference.

WIRELESS MODE SETTINGS	
Wireless Mode :	Repeater ▼
WIRELESS NETWORK SETTINGS	
Wireless Band : 2.4GHz Band	
Enable Wireless :	<input checked="" type="checkbox"/> Always ▼ <input type="button" value="New Schedule"/>
Wireless Network Name :	dlink-B7E4 (Also called the SSID)
802.11 Mode :	Mixed 802.11n, 802.11g and 802.11b ▼
Enable Auto Channel Scan :	<input checked="" type="checkbox"/>
Wireless Channel :	2.412 GHz - CH 1 ▼
Transmission Rate :	Best (automatic) ▼ (Mbit/s)
Channel Width :	20/40 MHz(Auto) ▼
Visibility Status :	<input checked="" type="radio"/> Visible <input type="radio"/> Invisible

**Wireless Channel:** Indicates the channel setting for the DAP-1650. The channel can be changed to fit the channel setting for an existing wireless network or to reduce interference in congested areas. If you enable Auto Channel Scan, this option will not be available.

**Transmission Rate:** Use the drop-down menu to select the appropriate transmission rate in Mbits per second. Many users will want to use the default setting, *Best (automatic)*.

**Channel Width:** Select the channel width:  
**Auto 20/40/80** - Select this option if you are using a combination of 802.11ac, 802.11n, and other wireless devices.  
**Auto 20/40** - Select if you are using both 802.11n and non-802.11n wireless devices.  
**20 MHz** - Select if you are not using any 802.11n wireless clients.

**Visibility Status:** Select whether you would like the network name (SSID) of your wireless network to be **Visible** or **Invisible** to wireless clients. If **Invisible**, the SSID of the DAP-1650 will not be seen by site survey utilities, so wireless clients will have to manually enter the SSID of your wireless network in order to connect to it.

**Site Survey:** Click Site Survey to display a list of wireless networks in your area. You may select the wireless access point to connect to.

**Security Mode:** For information on how to set up wireless security, please refer to "Configuring Wireless Security" on page 36.

Click **Save Settings** at the bottom of the page to save the current configuration.

**WIRELESS MODE SETTINGS**

Wireless Mode : Repeater

**WIRELESS NETWORK SETTINGS**

Wireless Band : 2.4GHz Band

Enable Wireless :  Always  New Schedule

Wireless Network Name : dlink-B7E4 (Also called the SSID)

802.11 Mode : Mixed 802.11n, 802.11g and 802.11b

Enable Auto Channel Scan :

Wireless Channel : 2.412 GHz - CH 1

Transmission Rate : Best (automatic) (Mbit/s)

Channel Width : 20/40 MHz(Auto)

Visibility Status :  Visible  Invisible

**WIRELESS SECURITY MODE**

Security Mode : WPA-Personal

**SITE SURVEY**

Scan

Wi-Fi Network Name	BSSID	Channel	Type	Encrypt	Signal
--------------------	-------	---------	------	---------	--------

**WIRELESS NETWORK SETTINGS**

Enable Wireless :  Always  New Schedule

Wireless Network Name : dlink (Also called the SSID)

## 5 GHz Band

**Wireless Mode:** Select **Repeater** from the drop-down menu.

**Enable Wireless:** Check the box to enable the wireless function for the **5 GHz** band. If you do not want to use wireless, uncheck the box to disable all wireless functions. You may also set up a specific time range (schedule). Select a schedule from the drop-down menu or click **Add New** to create a new schedule. By default, the schedule is set to **Always**.

**Wireless Network Name:** Specify a network name (SSID) to identify the 5 GHz network. This is the network name that wireless clients will search for when connecting to your wireless network. This name should be different to that of the 2.4 GHz network configured above.

**802.11 Mode:** Select one of the following:  
**802.11a Only** - Select if you are only using 802.11a wireless clients.  
**802.11n Only** - Select if you are only using 802.11n wireless clients.  
**Mixed 802.11n and 802.11a** - Select if you are using a mix of 802.11n and 802.11a wireless clients.  
**802.11ac Only** - Select if you are only using 802.11ac wireless clients.  
**Mixed 802.11ac and 802.11n** - Select if you are using a mix of 802.11ac and 802.11n wireless clients.  
**Mixed 802.11ac, 802.11n and 802.11a** - Select if you are using a mix of 802.11ac, 802.11n, and 802.11a wireless clients.

**Enable Auto Channel Scan:** The **Auto Channel Scan** setting can be selected to allow the DAP-1650 to automatically choose the channel with the least amount of interference.

**Wireless Channel:** Indicates the channel setting for the DAP-1650. The channel can be changed to fit the channel setting for an existing wireless network or to reduce interference in congested areas. If you enable **Auto Channel Scan**, this option will not be available.

WIRELESS NETWORK SETTINGS

**Wireless Band :** 5GHz Band

**Enable Wireless :**  Always New Schedule

**Wireless Network Name :** dlink-B7E4-5GHz (Also called the SSID)

**802.11 Mode :** Mixed 802.11ac, 802.11n and 802.11a

**Enable Auto Channel Scan :**

**Wireless Channel :** 5.180 GHz - CH 36

**Transmission Rate :** Best (automatic) (Mbit/s)

**Channel Width :** 20/40/80 MHz(Auto)

**Visibility Status :**  Visible  Invisible

WIRELESS SECURITY MODE

**Security Mode :** WPA-Personal

**Transmission Rate:** Use the drop-down menu to select the appropriate transmission rate in Mbits per second. Many users will want to use the default setting, **Best (automatic)**.

**Channel Width:** Select the channel width:  
**Auto 20/40/80** - Select this option if you are using a combination of 802.11ac, 802.11n, and other wireless devices.  
**Auto 20/40** - Select if you are using both 802.11n and non-802.11n wireless devices.  
**20 MHz** - Select if you are not using any 802.11n wireless clients.

**Visibility Status:** Select whether you would like the network name (SSID) of your wireless network to be **Visible** or **Invisible** to wireless clients. If **Invisible**, the SSID of the DAP-1650 will not be seen by site survey utilities, so wireless clients will have to manually enter the SSID of your wireless network in order to connect to it.

**Security Mode:** For information on how to set up wireless security, please refer to "Configuring Wireless Security" on page 36.

Click **Save Settings** at the bottom of the page to save the current configuration.

### WIRELESS NETWORK SETTINGS

**Wireless Band :** 5GHz Band

**Enable Wireless :**  Always  New Schedule

**Wireless Network Name :** dlink-B7E4-5GHz (Also called the SSID)

**802.11 Mode :** Mixed 802.11ac, 802.11n and 802.11a

**Enable Auto Channel Scan :**

**Wireless Channel :** 5.180 GHz - CH 36

**Transmission Rate :** Best (automatic) (Mbit/s)

**Channel Width :** 20/40/80 MHz(Auto)

**Visibility Status :**  Visible  Invisible

### WIRELESS SECURITY MODE

**Security Mode :** WPA-Personal

## Media Bridge Mode

**Wireless Mode:** Select **Media Bridge** from the drop-down menu.

**Site Survey:** Click this button to scan for wireless networks. Select the wireless network you want the bridge to use and it's name will automatically be added to the Wireless Network Settings. All APs on the bridge must be using the same wireless channel.

**Enable Wireless:** Check the box to enable the wireless function for the **5 GHz** band. If you do not want to use wireless, uncheck the box to disable all wireless functions. You may also set up a specific time range (schedule). Select a schedule from the drop-down menu or click **Add New** to create a new schedule. By default, the schedule is set to **Always**.

**Wireless MAC clone:** Check the box to enable the MAC clone function.

**MAC Source:** Select **Auto** or **Manual** from the drop down menu to scan for the MAC address you wish to bridge. Select the MAC address from the scanned results and the MAC address will automatically be added.

**Security Mode:** For information on how to set up wireless security, please refer to "Configuring Wireless Security" on page 36.

Click **Save Settings** at the bottom of the page to save the current configuration.

**WIRELESS MODE SETTINGS**

Wireless Mode : Media Bridge

---

**SITE SURVEY**

Scan

Wi-Fi Network Name	BSSID	Channel	Type	Encrypt	Signal

---

**WIRELESS NETWORK SETTINGS**

Enable Wireless :  Always New Schedule

Wireless Network Name : dlink (Also called the SSID)

**WIRELESS MAC CLONE**

Enable :

MAC Source : Manual

MAC Address : 44 : 37 : E6 : B4 : A6 : 23

Scan

	Port	MAC Address
<input type="radio"/>	1	00:21:9b:57:2a:9b
<input checked="" type="radio"/>	1	44:37:e6:b4:a6:23
<input type="radio"/>	1	54:79:75:fe:77:ac
<input type="radio"/>	1	b8:a3:86:5f:08:bc

**Note:** The Bridge mode is not completely specified in the Wi-Fi or IEEE standards. This mode will work with other DAP-1650 units. Communication with other APs (even other D-Link APs) is not guaranteed.

## Configuring Wireless Security

Wireless security encryption prevents unauthorized users from accessing your wireless network. The DAP-1650 features two methods of wireless security encryption: Wired Equivalent Privacy (WEP), and Wi-Fi Protected Access (WPA). It is recommended that you use WPA security if your wireless devices support this standard, as it is more secure than the older WEP standard. For more details of wireless security standards, please refer to “Wireless Security” on page lxxvi.

**Note:** Unless otherwise specified, the security configuration process is the same for both the 2.4 GHz and 5 GHz bands.

### WEP

**Security Mode:** Select **WEP** from the drop-down menu.

**WEP Encryption:** The WEP standard offers two levels of encryption: 64-bit and 128-bit. Each level has the option of a key (password) consisting of either HEX digits or ASCII characters:

**64Bit (10 hex digits)** - Uses a key consisting of 10 hex digits (0-9, A-F).

**64Bit (5 ascii characters)** - Uses a key consisting of 5 ASCII characters (0-9, A-Z, plus symbols).

**128Bit (26 hex digits)** - Uses a key consisting of 26 hex digits (0-9, A-F).

**128bit (13 ascii characters)** - Uses a key consisting of 13 ASCII characters (0-9, A-Z, plus symbols).

**WEP Key 1:** Enter the desired WEP key (password) for your wireless network. The key should adhere to the requirements of WEP encryption method specified above.

**Authentication:** Select an authentication method from the drop-down menu

Click **Save Settings** at the bottom of the page to save the current configuration.

2.4GHZ WIRELESS SECURITY SETTING :	
Security Mode :	WEP
WEP Encryption :	64Bit(10 hex digits)
WEP Key 1 :	
Authentication :	Both

## WPA-Personal

**Security Mode:** Select **WPA-Personal** from the drop-down menu.

**WPA Mode:** There are two versions of WPA supported by the DAP-1650: **WPA** and **WPA2**. It is recommended that you use **Auto(WPA or WPA2)** so that the WPA2 version will be used if connecting wireless clients support it.

**Cipher Type:** Choose a cipher type from the drop-down menu.

**Pre-Shared Key:** Enter the desired pre-shared key (password) for the wireless network. Wireless clients will need this key in order to connect to your wireless network.

Click **Save Settings** at the bottom of the page to save the current configuration.

**2.4GHZ WIRELESS SECURITY SETTING :**

Security Mode : WPA-Personal ▼

WPA Mode : AUTO(WPA or WPA2) ▼

Cipher Type : TKIP and AES ▼

Pre-Shared Key : 1234567890

## WPA-Enterprise

WPA-Enterprise uses a RADIUS authentication server to provide centralized authentication for wireless access. If you are missing any of the information required for this setup, please contact your network administrator.

**Security Mode:** Select **WPA-Enterprise** from the drop-down menu.

**WPA Mode:** There are two versions of WPA supported by the DAP-1650; **WPA** and **WPA2**. It is recommended that you use **Auto(WPA or WPA2)** so that the WPA2 version will be used if connecting wireless clients support it.

**Cipher Type:** Choose a cipher type from the drop-down menu.

**RADIUS Server IP Address:** Enter the IP address for your network's RADIUS authentication server.

**Pre-Shared Key:** Enter the port for the RADIUS authentication server.

**Radius Server Shared Secret:** Enter the shared secret required by the RADIUS authentication server.

**2.4GHZ WIRELESS SECURITY SETTING :**

Security Mode : WPA-Enterprise ▼

WPA Mode : AUTO(WPA or WPA2) ▼

Cipher Type : TKIP and AES ▼

RADIUS Server IP Address : 0.0.0.0

RADIUS Server Port : 1812

RADIUS Server Shared Secret :

**Advanced**

Optional backup RADIUS server

Second RADIUS server IP Address : 0.0.0.0

Second RADIUS Server Port : 1812

Second RADIUS Server Shared Secret :

**Advanced:** Click on the **Advanced** button to display the setup options for an optional backup RADIUS server configuration.

**Second RADIUS Server IP Address:** Enter the IP address for your network's backup RADIUS authentication server.

**Second Pre-Shared Key:** Enter the port for the backup RADIUS authentication server.

**Second Radius Server Shared Secret:** Enter the shared secret required by the backup RADIUS authentication server.

Click **Save Settings** at the bottom of the page to save the current configuration.

### 2.4GHZ WIRELESS SECURITY SETTING :

**Security Mode :** WPA-Enterprise ▾

**WPA Mode :** AUTO(WPA or WPA2) ▾

**Cipher Type :** TKIP and AES ▾

**RADIUS Server IP Address :**

**RADIUS Server Port :**

**RADIUS Server Shared Secret :**

**Advanced**

**Optional backup RADIUS server**

**Second RADIUS server IP Address :**

**Second RADIUS Server Port :**

**Second RADIUS Server Shared Secret :**

# Network Settings

The Network Settings page enables you to configure the Local Area Network (LAN) settings for the access point. From this page you can adjust your local network's IP address settings, and configure IPv6.

**Device Name:** You can change the name of your access point to make it easier to identify. Enter a name for the access point in the field provided. If you change the device name, you should use this name in your web browser address bar when trying to access the web-based configuration utility.  
**Example:** http://devicename

**LAN IPv4 Connection Type:** Select how you would like to configure the access point's IP address settings from the drop-down menu:  
**Dynamic IP(DHCP)** - The access point will request an IP address from the DHCP server that it is connected to.  
**Static IP** - You can manually specify the IP address settings for the access point.

**IP Address:** Enter the IP address that you want to specify for the access point (Static IP only).

**Subnet Mask:** Enter the subnet mask to be used by the access point (Static IP only).

**Gateway Address:** Enter the default gateway address to be used by the access point (Static IP only).

**Primary DNS Server:** Enter the primary DNS server address to be used by the access point (Static IP only).

**Secondary DNS Server:** Enter the secondary DNS server address to be used by the access point (Static IP only).

Click **Save Settings** at the bottom of the page to save the current configuration.

DEVICE NAME
Device Name allows you to configure this device more easily. You can enter "http://device name" into your web browser instead of IP address for configuration. (Default: http://dlinkap)
Device Name : <input type="text" value="dlinkap"/>
LAN IPV4 CONNECTION TYPE
Choose the IPv4 mode to be used by the Access Point.
My LAN Connection is : <input type="text" value="Dynamic IP (DHCP)"/>

**My IPv6 Connection is:** Select **Link-Local Only** from the drop-down menu. This will set the access point's local IPv6 address.

**LAN IPv6 Link-Local Address:** The access point's local IPv6 address will be displayed here. This address should be used to access the web-based configuration utility through the IPv6 protocol.

Click **Save Settings** at the bottom of the page to save the current configuration.

**My IPv6 Connection is:** Select **Static IPv6** from the drop-down menu. This will allow you to assign a static IPv6 address to the access point.

**LAN IPv6 Address:** The router's local IPv6 address will be displayed here. This address should be used to access the web-based configuration utility through the IPv6 protocol.

**Subnet Prefix Length:** Enter the prefix length for IPv6 IP addresses on your network.

**Default Gateway:** Enter the default IPv6 gateway address for your network.

**Primary DNS Server:** Enter the primary IPv6 DNS server address for your network.

**Secondary DNS Server:** Enter the secondary IPv6 DNS server address for your network.

Click **Save Settings** at the bottom of the page to save the current configuration.

### IPv6 CONNECTION TYPE :

Choose the mode to be used by the AP to connect to the IPv6 Internet.

My IPv6 Connection is :

### LAN IPv6 ADDRESS SETTINGS :

Use this section to configure the internal network settings of your router. The LAN IPv6 Link-Local Address is the IPv6 Address that you use to access the Web-based management interface.

LAN IPv6 Link-Local Address :

### IPv6 CONNECTION TYPE :

Choose the mode to be used by the AP to connect to the IPv6 Internet.

My IPv6 Connection is :

### LAN IPv6 ADDRESS SETTINGS :

Enter the information provided by your Internet Service Provider(ISP);

LAN IPv6 Address :

Subnet Prefix Length :

Default Gateway :

Primary DNS Server :

Secondary DNS Server :

**My IPv6 Connection is:** Select **Autoconfiguration (SLAAC/DHCPv6)** from the drop-down menu. The access point will request IPv6 settings from a DHCPv6 server on your network.

**IPv6 DNS Settings:** You can select to have the access point automatically obtain DNS server settings from the DHCP server, or you can specify IPv6 DNS server settings to be used. If you select **Obtain IPv6 DNS automatically**, no further configuration is required.

**Primary DNS Server:** Enter the primary IPv6 DNS server address to be used.

**Secondary DNS Server:** Enter the secondary IPv6 DNS server address to be used.

Click **Save Settings** at the bottom of the page to save the current configuration.

### IPv6 CONNECTION TYPE :

Choose the mode to be used by the AP to connect to the IPv6 Internet.

My IPv6 Connection is :

### IPv6 DNS SETTINGS :

Obtain DNS server address automatically or enter a specific DNS server address.

Obtain IPv6 DNS Server automatically

Use the following IPv6 DNS Servers

Primary DNS Server :

Secondary DNS Server :

# Storage

This page allows the user to use a web browser to remotely access files stored on an SD card or USB storage drive plugged into the router. You can access storage device by `http://shareport.local` when you enable SharePort Web Access

The following parameters will be available for configuration:

- Enable SharePort Web Access:** Tick this option to enable the share port web access feature.
- HTTP Access Port:** Enter the HTTP Access Port number used here. By default, this value is 8181.
- HTTPS Access Port:** Enter the HTTPS Access Port number used here. By default, this value is 4433.
- Allow Remote Access:** Tick this option the allow remote access to this router.

In the **User Creation** section, the user can create and modify usernames and passwords.

The following parameters will be available for configuration:

- User Name:** In the **User Name** field we can enter the new username that will be created. Alternatively, if we want to modify an existing user account, select a username from the **drop-down** menu. It will automatically be added to the User Name field for modification.
- Password:** In the **Password** field, the user can enter the password that will be associated with the user account.
- Verify Password:** In the **Verify Password** field, the user can re-enter the password that will be associated with the user account.

Click the **Add/Edit** button the add a new user account or modify an existing account.

## STORAGE

Web File Access allows you to use a web browser to remotely access files stored on an SD card or USB storage drive plugged into the router. To use this feature, check the Enable Web File Access checkbox, then use the Admin account or create user accounts to manage access to your storage devices. After plugging in an SD card or USB storage drive, the new device will appear in the list with a link to it. You can then use this link to connect to the drive and log in with a user account.

Save Settings

Don't Save Settings

## SHAREPORT WEB ACCESS

Enable SharePort Web Access :

HTTP Access Port :

HTTPS Access Port :

Allow Remote Access :

## USER CREATION

User Name :  << User Name ▾

Password :

Verify Password :

## Section 3 - Configuration

In the **User List** section, the user can modify or delete different user settings for each account.

The following parameters will be available in the display.

- No.** Displays the number of the entry in the user list.
- User Name:** Displays the user name of the entry in the list.
- Access Path:** Displays the access path of the entry in the list.
- Permission:** Displays the permission settings of the entry in the list.

USER LIST					
No.	User Name	Access Path	Permission	Edit	Delete
1	admin	root	Read/Write		
2	Guest	USB:/Pictures	Read Only		
3	NewAccount	USB:/Video	Read/Write		

Click the **Edit** icon to edit the access path and permission, for each user.  
Click the **Delete** icon to delete an account from the list.

After click on the **Edit** button, this window will appear.

The following parameters will be available for configuration:

- User Name:** This field will display the current user name that will be modified.
- Folder:** This field will display the access path that this user will have access to, after logging in. Click the **Browse** button to navigate to a folder, located on the USB storage device.
- Permission:** Here the user can select the appropriate permission setting for this user account. Permissions available for selection, from the drop-down menu are **Read Only** and **Read/Write**.



The dialog box titled "APPEND NEW FOLDER" contains the following fields and buttons:

- User name :** A text input field containing "Guest".
- Folder :** A text input field containing "none" and a **Browse** button to its right.
- Permission :** A dropdown menu currently set to "Read Only".
- Append** button centered below the fields.
- OK** and **Cancel** buttons at the bottom.

**Read Only** permission will only allow this account to read data stored on the USB storage device within the constraints of the access path specified. **Read/Write** permission will allow this account to read and write data to and from the USB storage device within the constraints of the access path specified.

Click the **Append** button to add a blank account with the access path and permission specified.

Click the **OK** button to accept the changes made for the existing account.

Click the **Cancel** button to discard the changes made.

In the **Number Devices** section, the user can view information about the external USB storage devices inserted into the USB port of this router.


The following parameters will be available in the display

**Number of Devices:** This field will display the number of USB storage devices that are attached to the USB port of the router.

**Device:** This field will display the USB storage device's name.

**Total Space:** This field will display the total space that is available on the USB storage device attached.

**Free Space:** This field will display the free space that is available on the USB storage device attached.

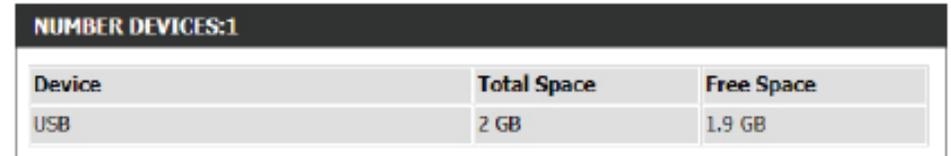


Device	Total Space	Free Space
USB	2 GB	1.9 GB

In the **HTTP Storage Link** section, the user can use this link to connect to the drive remotely after logging in with a user account.

Notice the path of the link(s) provided will point the external interface of this router. If no **DDNS** account is specified on the Dynamic DNS page, the WAN IP address will be used. If, however, a **DDNS** account is specified, then the domain name will be used.

Click on the **Save Settings** button to accept the changes made.

Click on the **Don't Save Settings** button to discard the changes made.

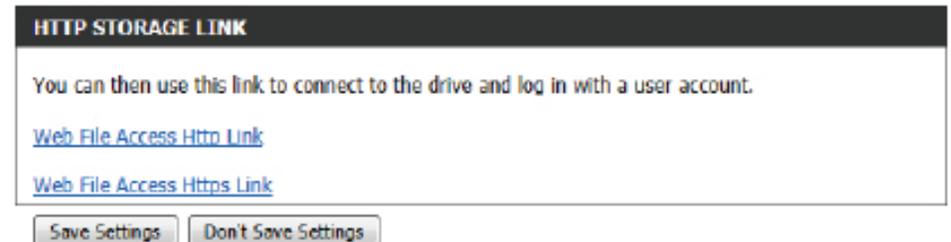

**HTTP STORAGE LINK**

You can then use this link to connect to the drive and log in with a user account.

[Web File Access Http Link](#)

[Web File Access Https Link](#)

# Media Server

This page will allow you to enable a DLNA Media Server or enable the iTunes Server. DLNA (Digital Living Network Alliance) is the standard for the interoperability of Network Media Devices (NMDs). The user can enjoy multimedia applications (music, pictures and videos) on your network connected PC or media devices. If you agree to share media with devices, any computer or device that connects to your network can play your shared music, pictures and videos.

**Note:** *The shared media may not be secure. Allowing any devices to stream is recommended only on secure networks.*

**DLNA Server:** Select whether to enable or disable the DLNA Media Server functions.

**DLNA Server Name:** Choose a name for your DLNA media server so that it can be found.

**Folder:** Choose the location of the folder you wish to share or check the box to use the root folder of the entire drive.

**iTunes Server:** Select whether to enable or disable the iTunes Server functions.

**Folder:** Choose the location of the iTunes Library folder you wish to share or check the box to use the root folder if it is located on the root folder of the connected drive.

### MEDIA SERVER

DLNA (Digital Living Network Alliance) is the standard for the interoperability of Network Media Devices (NMDs). The user can enjoy multi-media applications (music, pictures and videos) on your network connected PC or media devices. The iTunes server will allow iTunes software to automatically detect and play music from the router.

**NOTE: The shared media may not be secure. Allowing any devices to stream is recommended only on secure networks.**

### DLNA SERVER

DLNA Server :  Enable  Disable

DLNA Server Name :

Folder :  root

### ITUNES SERVER

iTunes Server :  Enable  Disable

Folder :  root

# Advanced

This section allows you to configure the advanced parameters of your DAP-1650. There will be different advanced features available for configuration based on the mode in which your device is operating. The instructions below are listed according to operation mode.

## Access Point Mode

### Access Control

MAC filtering allows you to control wireless access to your network according to clients' MAC addresses.

**Configure MAC Filtering:** Use the drop-down menu to select your desired MAC filtering method:  
**Turn MAC Filtering OFF** - No MAC filtering will be implemented.  
**Turn MAC Filtering ON and ALLOW** - MAC filtering will be turned on, and only MAC addresses listed in the table below will be allowed access.  
**Turn MAC Filtering ON and DENY** - MAC filtering will be turned on, and only MAC addresses listed in the table below will be denied access.

**Checkbox:** Check the box to include this MAC address in the MAC filtering rules.

**MAC Address:** Enter the MAC address of the client that you wish to filter. If the client is currently connected to the access point, you can select it from the **Client List** drop-down menu, and click << to automatically populate the field.

Click **Clear** to clear all fields. Click **Save Settings** at the bottom of the page to save the current configuration.

**ACCESS CONTROL SETTINGS**

Configure MAC Filtering below :

Turn MAC Filtering OFF ▼

	MAC Address		Client List	
<input type="checkbox"/>	00:00:00:00:00:00	<<	MAC Address ▼	Clear
<input type="checkbox"/>	00:00:00:00:00:00	<<	MAC Address ▼	Clear
<input type="checkbox"/>	00:00:00:00:00:00	<<	MAC Address ▼	Clear
<input type="checkbox"/>	00:00:00:00:00:00	<<	MAC Address ▼	Clear
<input type="checkbox"/>	00:00:00:00:00:00	<<	MAC Address ▼	Clear
<input type="checkbox"/>	00:00:00:00:00:00	<<	MAC Address ▼	Clear
<input type="checkbox"/>	00:00:00:00:00:00	<<	MAC Address ▼	Clear
<input type="checkbox"/>	00:00:00:00:00:00	<<	MAC Address ▼	Clear
<input type="checkbox"/>	00:00:00:00:00:00	<<	MAC Address ▼	Clear

## Advanced Wireless

On this page, you can adjust the advanced wireless settings for each wireless band.

**Transmit Power:** Select the desired transmission power of the wireless radio from the drop-down menu.

**WMM Enable:** Check the box to enable wireless multimedia (WMM), a QoS engine which can help to reduce lag and latency when transmitting multimedia over your wireless connection.

**Short GI:** Enabling a short guard interval (GI) can increase throughput. However, it can also increase error rate in some installations, due to increased sensitivity to radio-frequency reflections. Select the option that works best for your installation.

**WLAN Partition:** Enabling this option means that connection wireless clients will not be able to communicate with one another, but will still have access to network resources such as the Internet.

**Ethernet to WLAN Access:** When this is enabled there is no barrier to data flow from the Ethernet to wireless devices using the access point. If this is disabled, all data from the Ethernet to associated wireless devices is blocked. Wireless devices can still send data to the Ethernet

**HT 20/40 Coexistence:** Enable this option to reduce interference from other wireless networks in your area. If the channel width is operating at 40 MHz and there is another wireless network's channel overlapping and causing interference, the router will automatically change to 20 MHz.

**IGMP Snooping:** Enabling this option allows the access point to listen for internet group management protocol (IGMP) traffic, which can help to detect clients which require multicast streams.

Click **Save Settings** at the bottom of the page to save the current configuration.

**ADVANCED WIRELESS SETTINGS**

**Wireless Band :** 2.4GHz Band

**Transmit Power :** 100% ▾

**WMM Enable :**

**Short GI :**

**WLAN Partition :** Allow ▾

**Ethernet to WLAN Access :** Allow ▾

**HT20/40 Coexistence :**  Enable  Disable

---

**ADVANCED WIRELESS SETTINGS**

**Wireless Band :** 5GHz Band

**Transmit Power :** 100% ▾

**WMM Enable :**

**Short GI :**

**WLAN Partition :** Allow ▾

**Ethernet to WLAN Access :** Allow ▾

---

**ADVANCED WIRELESS SETTINGS**

**IGMP Snooping :**

## Guest Zone

The guest zone feature will allow you to create temporary zones that can be used by guests to access the Internet. These zones will be separate from your main wireless network.

**Enable Guest Zone:** Check to enable the guest zone feature. Select the schedule of time when the guest zone will be active. The schedule may be set to **Always**, which will allow the particular service to always be enabled. You can create your own times in the **Tools > Schedules** section.

**Wireless Band:** Displays the wireless band you are creating a zone for.

**Wireless Network Name:** Enter a wireless network name (SSID) that is different from your main wireless network.

**Security Mode:** Refer to “Wireless Security” on page lxxvi for more information regarding wireless security.

**WLAN Partition:** Tick the check box to prevent the guest clients from accessing other guests in the guest zone.

**SESSION 2.4GHZ**

**Enable Guest Zone :**  Always ▼ New Schedule

**Wireless Band :** 2.4GHz Band

**Wireless Network Name :**  (Also called the SSID)

**Security Mode :** None ▼

---

**SESSION 5GHZ**

**Enable Guest Zone :**  Always ▼ New Schedule

**Wireless Band :** 5GHz Band

**Wireless Network Name :**  (Also called the SSID)

**Security Mode :** None ▼

---

**WLAN PARTITION**

Enable this function to prevent guest clients accessing other guest clients in the Guest Zone.

**WLAN Partition :**

Save Settings
Don't Save Settings

## QoS

The QoS Engine option helps improve your network gaming performance by prioritizing applications. By default the QoS engine settings are disabled and application priority is not classified automatically.

**Enable QoS Engine:** This option is disabled by default. Enable this option for better performance and experience with online games and other interactive applications, such as VoIP.

**QoS Type:** Select from the menu to prioritize by port or by protocol. If you select by protocol the advanced QoS panel will appear below.

**Lan Port 1-4:** Select the port and the type of traffic you wish to prioritize on that port.

**Advanced QoS:** Use this panel to fine-tune your network traffic prioritization by protocol.

**ENABLE QoS**

Enable QoS :

QoS Type : Priority By Lan Port ▼

---

**PORT PRIORITY**

Lan Port 1 : Background ▼

Lan Port 2 : Best Effort ▼

Lan Port 3 : Video ▼

Lan Port 4 : Voice ▼

**ADVANCED QoS**

Ethernet to Wireless : 150 Mbits/sec

Wireless to Ethernet : 150 Mbits/sec

ACK/DHCP/ICMP/DNS Priority : Highest Priority ▼ Limit : 100 % Port : 53,67,68,546,547

Web Traffic Priority : Third Priority ▼ Limit : 100 % Port : 80,443,3128,8080

Mail Traffic Priority : Second Priority ▼ Limit : 100 % Port : 25,110,465,995

Ftp Traffic Priority : Low Priority ▼ Limit : 100 % Port : 20,21

User Defined-1 Priority : Highest Priority ▼ Limit : 100 % Port : 0 - 0

User Defined-2 Priority : Second Priority ▼ Limit : 100 % Port : 0 - 0

User Defined-3 Priority : Third Priority ▼ Limit : 100 % Port : 0 - 0

User Defined-4 Priority : Low Priority ▼ Limit : 100 % Port : 0 - 0

Other Traffic Priority : Low Priority ▼ Limit : 100 %

## Wi-Fi Protected Setup

This section allows you to configure how the DAP-1650 uses Wi-Fi Protected Setup (WPS) to create a secure wireless connection.

**Enable:** Check the box to enable WPS.

**Lock WPS-PIN Setup:** Check the box to disable WPS using the PIN method. If this option is selected, wireless clients will only be able to use the WPS-PBC (push-button connection) method.

**Current PIN:** Displays the current PIN which can be used by wireless clients to connect to the access point. Click **Reset PIN to Default** to return the PIN to its factory default. Click **Generate New PIN** to randomly generate a new PIN.

Click **Add Wireless Device With WPS** to activate the WPS-PBC (push-button) method. You will then have 120 seconds to press the WPS button on the new device that you wish to connect.

Click **Save Settings** at the bottom of the page to save the current configuration.

The screenshot shows a web interface for configuring Wi-Fi Protected Setup (WPS). It is divided into three main sections: 'WI-FI PROTECTED SETUP', 'PIN SETTINGS', and 'ADD WIRELESS STATION'. At the bottom, there are two buttons: 'Save Settings' and 'Don't Save Settings'.

WI-FI PROTECTED SETUP
Enable : <input checked="" type="checkbox"/>
Lock WPS-PIN Setup : <input type="checkbox"/>

PIN SETTINGS
Current PIN : 44319793
<input type="button" value="Reset PIN to Default"/> <input type="button" value="Generate New PIN"/>

ADD WIRELESS STATION
<input type="button" value="Add Wireless Device With WPS"/>

## User Limit

Here, you can set a maximum number of users that can be connected to the access point at any one time for each wireless band.

**Enable User Limit:** Check the box to enable the user limit function.

**User Limit:** Enter a number of users (between 1-32).

Click **Save Settings** at the bottom of the page to save the current configuration.

The screenshot shows two identical configuration panels for the 2.4GHz and 5GHz wireless bands. Each panel is titled 'USER LIMIT SETTINGS' and contains the following fields:

- Wireless Band :** 2.4GHz Band (top panel) / 5GHz Band (bottom panel)
- Enable User Limit :**
- User Limit(1 - 32) :**

At the bottom of the configuration area, there are two buttons: 'Save Settings' and 'Don't Save Settings'.

# Repeater Mode

## Advanced Wireless

### 2.4 GHz Band

**Transmit Power:** Select the desired transmission power of the wireless radio from the drop-down menu.

Click **Save Settings** at the bottom of the page to save the current configuration.

2.4GHZ ADVANCED WIRELESS SETTINGS :	
Transmit Power :	100% ▼
HT 20/40 Coexistence :	<input checked="" type="radio"/> Enable <input type="radio"/> Disable

### 5 GHz Band

**Transmit Power:** Select the desired transmission power of the wireless radio from the drop-down menu.

Click **Save Settings** at the bottom of the page to save the current configuration.

5GHZ ADVANCED WIRELESS SETTINGS :	
Transmit Power :	100% ▼

## Wi-Fi Protected Setup

This section allows you to configure how the DAP-1650 uses Wi-Fi Protected Setup (WPS) to create a secure wireless connection.

**Enable:** Check the box to enable WPS.

**Lock WPS-PIN Setup:** Check the box to disable WPS using the PIN method. If this option is selected, wireless clients will only be able to use the WPS-PBC (push-button connection) method.

**Current PIN:** Displays the current PIN which can be used by wireless clients to connect to the access point. Click **Reset PIN to Default** to return the PIN to its factory default. Click **Generate New PIN** to randomly generate a new PIN.

Click **Add Wireless Device With WPS** to activate the WPS-PBC (push-button) method. You will then have 120 seconds to press the WPS button on the new device that you wish to connect.

Click **Save Settings** at the bottom of the page to save the current configuration.

The screenshot shows the configuration interface for Wi-Fi Protected Setup (WPS) on a D-Link DAP-1650. It is divided into three main sections: 'WI-FI PROTECTED SETUP', 'PIN SETTINGS', and 'ADD WIRELESS STATION'. At the bottom, there are 'Save Settings' and 'Don't Save Settings' buttons.

WI-FI PROTECTED SETUP	
Enable :	<input checked="" type="checkbox"/>
Lock WPS-PIN Setup :	<input type="checkbox"/>

PIN SETTINGS	
Current PIN :	44319793
<input type="button" value="Reset PIN to Default"/> <input type="button" value="Generate New PIN"/>	

ADD WIRELESS STATION	
<input type="button" value="Add Wireless Device With WPS"/>	

# Media Bridge Mode

## Advanced Wireless

### 2.4 GHz Band

**Transmit Power:** Select the desired transmission power of the wireless radio from the drop-down menu.

Click **Save Settings** at the bottom of the page to save the current configuration.

2.4GHZ ADVANCED WIRELESS SETTINGS :	
Transmit Power :	100% ▼
HT 20/40 Coexistence :	<input checked="" type="radio"/> Enable <input type="radio"/> Disable

### 5 GHz Band

**Transmit Power:** Select the desired transmission power of the wireless radio from the drop-down menu.

Click **Save Settings** at the bottom of the page to save the current configuration.

5GHZ ADVANCED WIRELESS SETTINGS :	
Transmit Power :	100% ▼

## Wi-Fi Protected Setup

This section allows you to configure how the DAP-1650 uses Wi-Fi Protected Setup (WPS) to create a secure wireless connection.

**Enable:** Check the box to enable WPS.

**Lock WPS-PIN Setup:** Check the box to disable WPS using the PIN method. If this option is selected, wireless clients will only be able to use the WPS-PBC (push-button connection) method.

**Current PIN:** Displays the current PIN which can be used by wireless clients to connect to the access point. Click **Reset PIN to Default** to return the PIN to its factory default. Click **Generate New PIN** to randomly generate a new PIN.

Click **Add Wireless Device With WPS** to activate the WPS-PBC (push-button) method. You will then have 120 seconds to press the WPS button on the new device that you wish to connect.

Click **Save Settings** at the bottom of the page to save the current configuration.

The screenshot shows the configuration interface for Wi-Fi Protected Setup (WPS) on a D-Link DAP-1650. It is divided into three main sections:

- WI-FI PROTECTED SETUP:** Contains two checkboxes: "Enable" (checked) and "Lock WPS-PIN Setup" (unchecked).
- PIN SETTINGS:** Shows the "Current PIN" as 44319793. Below it are two buttons: "Reset PIN to Default" and "Generate New PIN".
- ADD WIRELESS STATION:** Contains a single button labeled "Add Wireless Device With WPS".

At the bottom of the page, there are two buttons: "Save Settings" and "Don't Save Settings".

# Maintenance

The maintenance section allows you to adjust the administrative settings of the router such as time and date, administrator password, and update the device's firmware. .

## Access Point Mode

### Admin

**New Password:** To change the password for the web-based configuration utility's admin account, enter a new password in the field provided.

**Confirm Password:** Re-enter the new password in this field.

**Gateway Name:** This allows you create a user friendly name for your device.

**Enable Graphical Authentication:** Click **Save Settings** at the bottom of the page to save the current configuration.

PASSWORD
Please enter the same password into both boxes, for confirmation.
New Password : <input type="password"/>
Verify Password : <input type="password"/>

SYSTEM NAME
Gateway Name : <input type="text" value="DAP-1650"/>

ADMINISTRATION
Enable Graphical : <input type="checkbox"/> Authentication

## System

The system page can be used to save and restore the device's configuration, as well as restore the factory default settings.


**Save Settings to Local Hard Drive:** Click **Save** to save the access point's current configuration to a file on your local computer. After clicking, a *Save File* dialog will appear, prompting you to save the configuration file on your computer.

**Load Settings From Local Hard Drive:** Click **Browse** to locate a previously saved configuration file on your local computer. Once the file has been located, click **Upload Settings** to apply the configuration in the file to the access point.  
**Note:** This will overwrite any current configuration.

**Restore to Factory Default Settings:** Click **Restore Device** to reset the DAP-1650's settings to the factory defaults.  
**Warning:** This will erase all current settings and cannot be undone.

**Reboot the Device:** Click **Reboot** to reboot the device. You will need to log in to the device again once the reboot has been completed.

**Remove Language Pack:** Click to remove a language pack from the device.

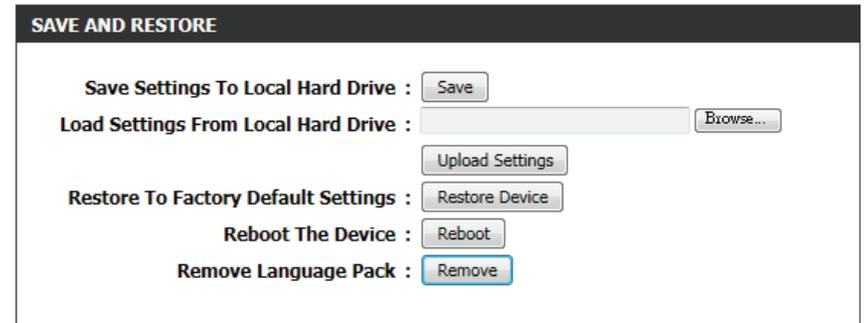

The screenshot shows a web interface titled "SAVE AND RESTORE". It contains several sections with corresponding buttons:

- Save Settings To Local Hard Drive :** A button labeled "Save".
- Load Settings From Local Hard Drive :** A text input field followed by a "Browse..." button.
- Upload Settings :** A button labeled "Upload Settings".
- Restore To Factory Default Settings :** A button labeled "Restore Device".
- Reboot The Device :** A button labeled "Reboot".
- Remove Language Pack :** A button labeled "Remove".

## Firmware

Use the firmware page to update the device's firmware, and add or remove language packs.

**Firmware Information:** This section displays information about the device's current firmware and language pack.  
**Note:** The access point must have an active Internet connected to check for firmware and language pack updates.

**Check the Latest Firmware and Language Pack Versions:** If the above check for firmware detected updates, the details will be displayed here. Click **Download** to download the update files to your computer.

**Firmware Upgrade:** Click **Browse** to locate a firmware file on your computer. Once located, click **Upload** to commence the firmware upgrade process. It is recommended that you save your current router configuration using the system page before you begin a firmware upgrade.  
**Warning:** You must use a wired connection to the access point to update the firmware.

**Language Pack Upgrade:** Click **Browse** to locate a language pack file on your computer. Once located, click **Upload** to commence the language pack upgrade process.

FIRMWARE INFORMATION	
Current Firmware Version :	1.00
Current Firmware Time :	09/27/2013 17:32:00
Check Online Now for Latest Firmware Version :	<input type="button" value="Check Now"/>

FIRMWARE UPGRADE	
<b>Note: Some firmware upgrades reset the configuration options to the factory defaults. Before performing an upgrade, be sure to save the current configuration.</b>	
To upgrade the firmware, your PC must have a wired connection to the router. Enter the name of the firmware upgrade file, and click on the Upload button.	
Upload :	<input type="text"/> <input type="button" value="Browse..."/> <input type="button" value="Upload"/>

LANGUAGE PACK UPGRADE	
Upload :	<input type="text"/> <input type="button" value="Browse..."/> <input type="button" value="Upload"/>

## Time

Use the time page to configure the time and date settings of the access point. You can also configure daylight saving adjustments and synchronize the access point's clock and calendar with an internet-based network time protocol (NTP) server.

**Time:** Displays the access point's current time and date.

**Time Zone:** Select your time zone from the drop-down menu.

**Enable Daylight Saving:** Check the box to have the access point automatically adjust the clock for daylight saving.

**Daylight Saving Offset:** Select the offset for beginning daylight saving from the drop-down menu.

**Daylight Saving Dates:** Use the drop-down menus to set the **Start** and **End** dates for daylight saving time.

**Enable NTP Server:** Check the box to have the access point automatically synchronize its clock and calendar with D-Link's Internet time server.

**NTP Server Used:** Type the address of the NTP server you would like to use in the field provided, or choose a pre-determined server from the drop-down menu and click << to populate the field.

**Set the Time and Date Manually:** Use the drop-down menus to manually configure the time and date. This option will not be available if **Enable NTP Server** is selected above.

Click **Save Settings** at the bottom of the page to save the current configuration.

**TIME AND DATE CONFIGURATION**

Time : 2000/01/01 06:23:27

Time Zone : (GMT+08:00) Taipei ▼

Enable Daylight Saving :

Daylight Saving Offset : +01:00 ▼

Daylight Saving Dates :

	Month	Week	Day of Week	Time
DST Start	Jan ▼	1st ▼	Sun ▼	12:00 AM ▼
DST End	Jan ▼	1st ▼	Sun ▼	12:00 AM ▼

**AUTOMATIC TIME AND DATE CONFIGURATION**

Automatically synchronize with D-Link's Internet time server

NTP Server Used : Select NTP Server ▼ Update Now

**SET THE TIME AND DATE MANUALLY**

Year	<span style="border: 1px solid gray; padding: 2px;">2009 ▼</span>	Month	<span style="border: 1px solid gray; padding: 2px;">Jan ▼</span>
		Day	<span style="border: 1px solid gray; padding: 2px;">1 ▼</span>
Hour	<span style="border: 1px solid gray; padding: 2px;">6 ▼</span>	Minute	<span style="border: 1px solid gray; padding: 2px;">23 ▼</span>
		Second	<span style="border: 1px solid gray; padding: 2px;">25 ▼</span>

Sync. your computer's time settings

Save Settings
Don't Save Settings

## System Check

**Host Name or IP Address:** Enter the host name or IP address for which you wish to conduct a ping test.

**Host Name or IPv6 Address:** Enter the host name or IPv6 address for which you wish to conduct a ping test.

**Ping Result:** Displays results of the ping test above.

PING TEST	
Host Name or IP Address :	<input type="text"/> <input type="button" value="Ping"/>
IPv6 PING TEST	
Host Name or IPv6 Address :	<input type="text"/> <input type="button" value="Ping"/>
PING RESULT	
Enter a host name or IP address above and click 'Ping'	

## Schedules

Use the schedules page to create new schedule rules for various access point functions. Schedules created here will be available for selection from schedule selection drop-down menus throughout the configuration utility.

**Name:** Enter a name to identify the new schedule rule.

**Day(s):** Select **All Week** to make the rule active for all days of the week. Select **Select Day(s)** to determine specific days on which to activate the rule. Days can be selected by checking the boxes below.

**All Day-24 hrs:** Check the box to make the rule active all day for the days selected above.

**Time format:** Select whether you would like to use **24-hour** or **12-hour** time format.

**Start Time:** Enter the time for the rule to become active on each of the days selected above.

**End Time:** Enter the time for the rule to become inactive on each of the days selected above.

Click **Add** to add the rule to the Schedule Rules List. Click **Cancel** to clear all fields.

**Schedule Rules List.** This table displays a summary of all current schedule rules. Click on the **Edit** icon to edit the rule, or click on the **Delete** icon to delete the rule from the list.

**ADD SCHEDULE RULE**

**Name :**

**Day(s) :**  All Week  Select Day(s)  
 Sun  Mon  Tue  Wed  Thu  Fri  Sat

**All Day - 24 hrs :**

**Time Format :**

**Start Time :**  :   (hour:minute)

**End Time :**  :   (hour:minute)

**SCHEDULE RULES LIST**

Name	Day(s)	Time Frame		

# Repeater Mode

## Admin

**New Password:** To change the password for the web-based configuration utility's admin account, enter a new password in the field provided.

**Confirm Password:** Re-enter the new password in this field.

**Gateway Name:** This allows you create a user friendly name for your device.

**Enable Graphical Authentication:** Click **Save Settings** at the bottom of the page to save the current configuration.

PASSWORD
Please enter the same password into both boxes, for confirmation.
New Password : <input type="password"/>
Verify Password : <input type="password"/>

SYSTEM NAME
Gateway Name : <input type="text" value="DAP-1650"/>

ADMINISTRATION
Enable Graphical : <input type="checkbox"/> Authentication

## System

The system page can be used to save and restore the device's configuration, as well as restore the factory default settings.

**Save Settings to Local Hard Drive:** Click **Save** to save the access point's current configuration to a file on your local computer. After clicking, a *Save File* dialog will appear, prompting you to save the configuration file on your computer.

**Load Settings From Local Hard Drive:** Click **Browse** to locate a previously saved configuration file on your local computer. Once the file has been located, click **Upload Settings** to apply the configuration in the file to the access point.  
**Note:** This will overwrite any current configuration.

**Restore to Factory Default Settings:** Click **Restore Device** to reset the DAP-1650's settings to the factory defaults.  
**Warning:** This will erase all current settings and cannot be undone.

**Reboot the Device:** Click **Reboot** to reboot the device. You will need to log in to the device again once the reboot has been completed.

**Remove Language Pack:** Click to remove a language pack from the device.

The screenshot shows a web interface titled "SAVE AND RESTORE" with a black header. Below the header, there are five rows of controls:

- Save Settings To Local Hard Drive :** A button labeled "Save".
- Load Settings From Local Hard Drive :** A text input field followed by a "Browse..." button.
- Upload Settings :** A button labeled "Upload Settings".
- Restore To Factory Default Settings :** A button labeled "Restore Device".
- Reboot The Device :** A button labeled "Reboot".
- Remove Language Pack :** A button labeled "Remove".

## Firmware

Use the firmware page to update the device's firmware, and add or remove language packs.

**Firmware Information:** This section displays information about the device's current firmware and language pack.  
**Note:** The access point must have an active Internet connected to check for firmware and language pack updates.

**Check the Latest Firmware and Language Pack Versions:** If the above check for firmware detected updates, the details will be displayed here. Click **Download** to download the update files to your computer.

**Firmware Upgrade:** Click **Browse** to locate a firmware file on your computer. Once located, click **Upload** to commence the firmware upgrade process. It is recommended that you save your current router configuration using the system page before you begin a firmware upgrade.  
**Warning:** You must use a wired connection to the access point to update the firmware.

**Language Pack Upgrade:** Click **Browse** to locate a language pack file on your computer. Once located, click **Upload** to commence the language pack upgrade process.

FIRMWARE INFORMATION	
Current Firmware Version :	1.00
Current Firmware Time :	09/27/2013 17:32:00
Check Online Now for Latest Firmware Version :	<input type="button" value="Check Now"/>

FIRMWARE UPGRADE	
<b>Note: Some firmware upgrades reset the configuration options to the factory defaults. Before performing an upgrade, be sure to save the current configuration.</b>	
To upgrade the firmware, your PC must have a wired connection to the router. Enter the name of the firmware upgrade file, and click on the Upload button.	
Upload :	<input type="text"/> <input type="button" value="Browse..."/> <input type="button" value="Upload"/>

LANGUAGE PACK UPGRADE	
Upload :	<input type="text"/> <input type="button" value="Browse..."/> <input type="button" value="Upload"/>

## Time

Use the time page to configure the time and date settings of the access point. You can also configure daylight saving adjustments and synchronize the access point's clock and calendar with an internet-based network time protocol (NTP) server.

**Time:** Displays the access point's current time and date.

**Time Zone:** Select your time zone from the drop-down menu.

**Enable Daylight Saving:** Check the box to have the access point automatically adjust the clock for daylight saving.

**Daylight Saving Offset:** Select the offset for beginning daylight saving from the drop-down menu.

**Daylight Saving Dates:** Use the drop-down menus to set the **Start** and **End** dates for daylight saving time.

**Enable NTP Server:** Check the box to have the access point automatically synchronize its clock and calendar with D-Link's Internet time server.

**NTP Server Used:** Type the address of the NTP server you would like to use in the field provided, or choose a pre-determined server from the drop-down menu and click << to populate the field.

**Set the Time and Date Manually:** Use the drop-down menus to manually configure the time and date. This option will not be available if **Enable NTP Server** is selected above.

Click **Save Settings** at the bottom of the page to save the current configuration.

**TIME AND DATE CONFIGURATION**

Time : 2000/01/01 06:23:27

Time Zone : (GMT+08:00) Taipei ▼

Enable Daylight Saving :

Daylight Saving Offset : +01:00 ▼

Daylight Saving Dates :

	Month	Week	Day of Week	Time
DST Start	Jan ▼	1st ▼	Sun ▼	12:00 AM ▼
DST End	Jan ▼	1st ▼	Sun ▼	12:00 AM ▼

**AUTOMATIC TIME AND DATE CONFIGURATION**

Automatically synchronize with D-Link's Internet time server

NTP Server Used : Select NTP Server ▼ Update Now

**SET THE TIME AND DATE MANUALLY**

Year	2009 ▼	Month	Jan ▼	Day	1 ▼
Hour	6 ▼	Minute	23 ▼	Second	25 ▼

Sync. your computer's time settings

Save Settings
Don't Save Settings

# Media Bridge Mode

## Admin

**New Password:** To change the password for the web-based configuration utility's admin account, enter a new password in the field provided.

**Confirm Password:** Re-enter the new password in this field.

**Gateway Name:** This allows you create a user friendly name for your device.

**Enable Graphical Authentication:** Click **Save Settings** at the bottom of the page to save the current configuration.

PASSWORD
Please enter the same password into both boxes, for confirmation.
New Password : <input type="password"/>
Verify Password : <input type="password"/>

SYSTEM NAME
Gateway Name : <input type="text" value="DAP-1650"/>

ADMINISTRATION
Enable Graphical : <input type="checkbox"/>

## System

The system page can be used to save and restore the device's configuration, as well as restore the factory default settings.

**Save Settings to Local Hard Drive:** Click **Save** to save the access point's current configuration to a file on your local computer. After clicking, a *Save File* dialog will appear, prompting you to save the configuration file on your computer.

**Load Settings From Local Hard Drive:** Click **Browse** to locate a previously saved configuration file on your local computer. Once the file has been located, click **Upload Settings** to apply the configuration in the file to the access point.  
**Note:** This will overwrite any current configuration.

**Restore to Factory Default Settings:** Click **Restore Device** to reset the DAP-1650's settings to the factory defaults.  
**Warning:** This will erase all current settings and cannot be undone.

**Reboot the Device:** Click **Reboot** to reboot the device. You will need to log in to the device again once the reboot has been completed.

**Remove Language Pack:** Click to remove a language pack from the device.

The screenshot shows a web interface titled "SAVE AND RESTORE" with a black header. Below the header, there are five rows of controls:

- Save Settings To Local Hard Drive :** A button labeled "Save".
- Load Settings From Local Hard Drive :** A text input field followed by a "Browse..." button.
- Restore To Factory Default Settings :** A button labeled "Restore Device".
- Reboot The Device :** A button labeled "Reboot".
- Remove Language Pack :** A button labeled "Remove".

## Firmware

Use the firmware page to update the device's firmware, and add or remove language packs.

**Firmware Information:** This section displays information about the device's current firmware and language pack.  
**Note:** The access point must have an active Internet connected to check for firmware and language pack updates.

**Check the Latest Firmware and Language Pack Versions:** If the above check for firmware detected updates, the details will displayed here. Click **Download** to download the update files to your computer.

**Firmware Upgrade:** Click **Browse** to locate a firmware file on your computer. Once located, click **Upload** to commence the firmware upgrade process. It is recommended that you save your current router configuration using the system page before you begin a firmware upgrade.  
**Warning:** You must use a wired connection to the access point to update the firmware.

**Language Pack Upgrade:** Click **Browse** to locate a language pack file on your computer. Once located, click **Upload** to commence the language pack upgrade process.

FIRMWARE INFORMATION	
Current Firmware Version :	1.00
Current Firmware Time :	09/27/2013 17:32:00
Check Online Now for Latest Firmware Version :	<input type="button" value="Check Now"/>

FIRMWARE UPGRADE	
<b>Note: Some firmware upgrades reset the configuration options to the factory defaults. Before performing an upgrade, be sure to save the current configuration.</b>	
To upgrade the firmware, your PC must have a wired connection to the router. Enter the name of the firmware upgrade file, and click on the Upload button.	
Upload :	<input type="text"/> <input type="button" value="Browse..."/> <input type="button" value="Upload"/>

LANGUAGE PACK UPGRADE	
Upload :	<input type="text"/> <input type="button" value="Browse..."/> <input type="button" value="Upload"/>

## Time

Use the time page to configure the time and date settings of the access point. You can also configure daylight saving adjustments and synchronize the access point's clock and calendar with an internet-based network time protocol (NTP) server.

**Time:** Displays the access point's current time and date.

**Time Zone:** Select your time zone from the drop-down menu.

**Enable Daylight Saving:** Check the box to have the access point automatically adjust the clock for daylight saving.

**Daylight Saving Offset:** Select the offset for beginning daylight saving from the drop-down menu.

**Daylight Saving Dates:** Use the drop-down menus to set the **Start** and **End** dates for daylight saving time.

**Enable NTP Server:** Check the box to have the access point automatically synchronize its clock and calendar with D-Link's Internet time server.

**NTP Server Used:** Type the address of the NTP server you would like to use in the field provided, or choose a pre-determined server from the drop-down menu and click << to populate the field.

**Set the Time and Date Manually:** Use the drop-down menus to manually configure the time and date. This option will not be available if **Enable NTP Server** is selected above.

Click **Save Settings** at the bottom of the page to save the current configuration.

**TIME AND DATE CONFIGURATION**

Time : 2000/01/01 06:23:27

Time Zone : (GMT+08:00) Taipei ▼

Enable Daylight Saving :

Daylight Saving Offset : +01:00 ▼

Daylight Saving Dates :

	Month	Week	Day of Week	Time
DST Start	Jan ▼	1st ▼	Sun ▼	12:00 AM ▼
DST End	Jan ▼	1st ▼	Sun ▼	12:00 AM ▼

**AUTOMATIC TIME AND DATE CONFIGURATION**

Automatically synchronize with D-Link's Internet time server

NTP Server Used : Select NTP Server ▼ Update Now

**SET THE TIME AND DATE MANUALLY**

Year	<span style="border: 1px solid gray; padding: 2px;">2009 ▼</span>	Month	<span style="border: 1px solid gray; padding: 2px;">Jan ▼</span>	Day	<span style="border: 1px solid gray; padding: 2px;">1 ▼</span>
Hour	<span style="border: 1px solid gray; padding: 2px;">6 ▼</span>	Minute	<span style="border: 1px solid gray; padding: 2px;">23 ▼</span>	Second	<span style="border: 1px solid gray; padding: 2px;">25 ▼</span>

Sync. your computer's time settings

Save Settings
Don't Save Settings

# Status

## Device Info

This page displays the current information for the DAP-1650, such as LAN and wireless LAN information and statistics.

**General:** Displays the access point's time and firmware version.

**LAN:** Displays the MAC address and the private (local) IP settings for the access point.

**Wireless LAN:** Displays the wireless MAC address and wireless settings such as SSID and channel for the 2.4 GHz wireless band.

**Wireless LAN 2:** Displays the wireless MAC address and wireless settings such as SSID and channel for the 5 GHz wireless band.

GENERAL
<p><b>Time</b> : 1999/12/31 10:22:58</p> <p><b>Firmware Version</b> : 1.00 Tue 13 Aug 2013</p>
LAN
<p><b>MAC Address</b> : c0:a0:bb:1c:b7:e4</p> <p><b>Connection</b> : DHCP Client</p> <p><b>IP Address</b> : 192.168.0.102</p> <p><b>Subnet Mask</b> : 255.255.255.0</p> <p><b>Gateway Address</b> : 192.168.0.1</p>
WIRELESS LAN(2.4G)
<p><b>MAC Address</b> : c0:a0:bb:1c:b7:e4</p> <p><b>Network Name (SSID)</b> : dlink-B7</p> <p><b>Channel</b> : 8</p> <p><b>Security Mode</b> : WPA/WPA2-PSK</p> <p><b>Wi-Fi Protected Setup</b> : Enabled/Configured</p>
WIRELESS LAN(5G)
<p><b>MAC Address</b> : c0:a0:bb:1c:b7:e6</p> <p><b>Network Name (SSID)</b> : dlink-B7E4-5GHz</p> <p><b>Channel</b> : 149</p> <p><b>Security Mode</b> : WPA/WPA2-PSK</p> <p><b>Wi-Fi Protected Setup</b> : Enabled/Configured</p>

# Logs

The DAP-1650 keeps a running log of events and activities occurring on the access point. If the device is rebooted, the logs will automatically be cleared.

**Log Options:** There are several types of logs that can be viewed: **System Activity, Debug Information, Attacks, Dropped Packets,** and **Notice**. Check the boxes to display log items of each type. Click **Apply Log Settings Now** to update the log options.

**First Page:** This button directs you to the first page of the log.

**Last Page:** This button directs you to the last page of the log.

**Previous Page:** This button directs you to the previous page of the log.

**Next Page:** This button directs you to the next page of the log.

**Clear Log:** This button clears all current log content.

**Save Log:** This button allows you to save the current log to a file on your local computer.

**Refresh:** This button refreshes the log.

**LOG OPTIONS**

System Activity :  System Activity  Debug Information  Attacks

Dropped Packets  Notice

**LOG DETAILS :**

**page 1 of 4**

Time	Message
Jul 15 23:52:46	rt18192cd_ dfs_det_chk_timer 722 DFS detected

## Statistics

The DAP-1650 keeps statistics of the traffic that passes through it. You can view the amount of packets that pass through the LAN and wireless portions of the network. The traffic counter will reset if the access point is rebooted. Use the buttons at the top of the page to **Refresh** or **Clear** the statistics.

### STATISTICS

Traffic Statistics displays Receive and Transmit packets passing through the device.

[Refresh Statistics](#) [Clear Statistics](#)

#### LAN STATISTICS

<b>Sent:</b> 13847	<b>Received:</b> 150104
<b>TX Packets Dropped:</b> 0	<b>RX Packets Dropped:</b> 0
<b>Collisions:</b> 0	<b>Errors:</b> 0

#### WIRELESS STATISTICS : 2.4GHZ

<b>Sent:</b> 1189	<b>Received:</b> 145795
<b>TX Packets Dropped:</b> 0	<b>RX Packets Dropped:</b> 0
<b>Collisions:</b> 0	<b>Errors:</b> 3827

#### WIRELESS STATISTICS : 5GHZ

<b>Sent:</b> 2018	<b>Received:</b> 334406
<b>TX Packets Dropped:</b> 0	<b>RX Packets Dropped:</b> 0
<b>Collisions:</b> 0	<b>Errors:</b> 2515

# Wireless

The wireless section allows you to view the wireless clients that are connected to your wireless access point.

**Connected Time:** Displays the amount of time the wireless client has been connected to the access point.

**MAC Address:** The Ethernet ID (MAC address) of the wireless client.

NUMBER OF WIRELESS CLIENTS(2.4G): 0	
MAC Address	Connected Time

NUMBER OF WIRELESS CLIENTS(5G): 0	
MAC Address	Connected Time

# IPv6

The IPv6 section displays a summary of the current IPv6 configuration.

**IPv6 Connection Type:** Displays the currently configured IPv6 connection type.

**LAN IPv6 Address:** This feild displays the current IPv6 address of the Access Point.

**IPv6 Default Gateway:** If configured this field will display the details of the default IPv6 gateway.

**LAN IPv6 Link-Local Address:** The access point's local IPv6 address will be displayed here. This address should be used to access the web-based configuration utility through the IPv6 protocol.

**Primary DNS Server:** If configured this field will display the details of the primary IPv6 DNS server address to be used.

**Secondary DNS Server:** If configured this field will display the details of the secondary IPv6 DNS server address to be used.

The screenshot shows a web interface for IPv6 configuration. At the top, there is an orange header with the text "IPv6". Below this is a grey box containing the message "All of your IPv6 network connection details are displayed on this page." Underneath is a black header with the text "IPv6 CONNECTION INFORMATION". The main content area is white and lists the following configuration details:

- IPv6 Connection Type :** Link-local Only
- LAN IPv6 Address :** None
- IPv6 Default Gateway :** None
- LAN IPv6 Link-Local Address :** fe80::c2a0:bbff:fe1c:b7e4/64
- Primary DNS Server :** None
- Secondary DNS Server :** None

# Help

The screenshot displays the D-Link configuration interface for a DAP-1650 device. At the top, the D-Link logo is visible on an orange background. Below the logo is a navigation bar with tabs for 'DAP-1650', 'AP', 'SETUP', 'ADVANCED', 'MAINTENANCE', 'STATUS', and 'HELP'. The 'HELP' tab is currently selected. On the left side, there is a 'MENU' sidebar. The main content area is titled 'SUPPORT MENU' and contains several sections of help topics:

- SUPPORT MENU**
  - [Setup](#)
  - [Advanced](#)
  - [Maintenance](#)
  - [Status](#)
- SETUP HELP**
  - [Setup Wizard](#)
  - [Wireless Setup](#)
  - [Network Settings](#)
  - [Storage](#)
  - [Media Server](#)
- ADVANCED HELP**
  - [Access Control](#)
  - [Advanced Wireless](#)
  - [Guest Zone](#)
  - [QoS](#)
  - [Wi-Fi Protected Setup](#)
  - [User Limit](#)
- MAINTENANCE HELP**
  - [Admin](#)
  - [System](#)
  - [Firmware](#)
  - [Time](#)
  - [System Check](#)
  - [Schedules](#)
- STATUS HELP**
  - [Device Info](#)
  - [Logs](#)
  - [Statistics](#)
  - [Wireless](#)
  - [IPv6](#)

At the bottom of the page, there is a dark grey bar with the word 'WIRELESS' in white capital letters.

# Wireless Security

This section will explain the different types of security you can use to protect your wireless network from intruders. Please note that some security methods may not be available for all operation modes. The DAP-1650 offers the following types of security:

- Wired Equivalent Privacy (WEP)
- Wi-Fi Protected Setup (WPS)
- Wi-Fi Protected Access (WPA/WPA2)
  - WPA - Personal
  - WPA - Enterprise

## What is WEP?

Wired Equivalent Privacy (WEP) is an older form of wireless encryption which operates only in 802.11g legacy mode. WEP uses hex digits to create an authentication key, and is considered to be less secure than the newer WPA/WPA2 security standards. It is recommended that you only use this security mode if your wireless clients do not support WPA/WPA2.

## What is WPS?

Wi-Fi Protected Setup (WPS) allows you to quickly and easily create a secure wireless connection between devices using a push-button or a PIN code. This method alleviates the need for users to change settings on their wireless devices, or remember security passwords. Many wireless devices have a physical push-button located somewhere on the exterior casing, while others may have a software button located within the device's configuration software. Please refer to your wireless device's documentation for further information on how to connect to the DAP-1650 using WPS.

# What is WPA?

WPA, or Wi-Fi Protected Access, is a Wi-Fi standard that was designed to improve the security features of WEP (Wired Equivalent Privacy).

The 2 major improvements over WEP:

- Improved data encryption through the Temporal Key Integrity Protocol (TKIP). TKIP scrambles the keys using a hashing algorithm and, by adding an integrity-checking feature, ensures that the keys haven't been tampered with. WPA2 is based on 802.11i and uses Advanced Encryption Standard (AES) instead of TKIP.
- User authentication, which is generally missing in WEP, through the extensible authentication protocol (EAP). WEP regulates access to a wireless network based on a computer's hardware-specific MAC address, which is relatively simple to be sniffed out and stolen. EAP is built on a more secure public-key encryption system to ensure that only authorized network users can access the network.

WPA-PSK/WPA2-PSK uses a passphrase or key to authenticate your wireless connection. The key is an alpha-numeric password between 8 and 63 characters long. The password can include symbols (!?\*&\_) and spaces. This key must be the exact same key entered on your wireless bridge or access point. WPA/WPA2 incorporates user authentication through the Extensible Authentication Protocol (EAP). EAP is built on a more secure public key encryption system to ensure that only authorized network users can access the network.

WPA/WPA2 has two main security levels; Personal, and Enterprise:

- **WPA/WPA2 - Personal** is sufficient for most home networks and uses a pre-shared key as described above to authenticate users and encrypt data.
- **WPA/WPA2 - Enterprise** is designed for medium-to-large scale networking environments and uses a centralized RADIUS server for authentication. Users must be registered and authorized by the RADIUS server in order to access the wireless network.

# Connect to a Wireless Network

## Windows® 8


It is recommended to enable wireless security (WPA/WPA2) on your wireless router or access point before configuring your wireless adapter. If you are joining an existing network, you will need to know the security key (Wi-Fi password) being used.

To join an existing network, locate the wireless network icon in the taskbar, next to the time display.



Wireless Icon

Clicking on this icon will display a list of wireless networks which are within connecting proximity of your computer. Select the desired network by clicking on the network name.

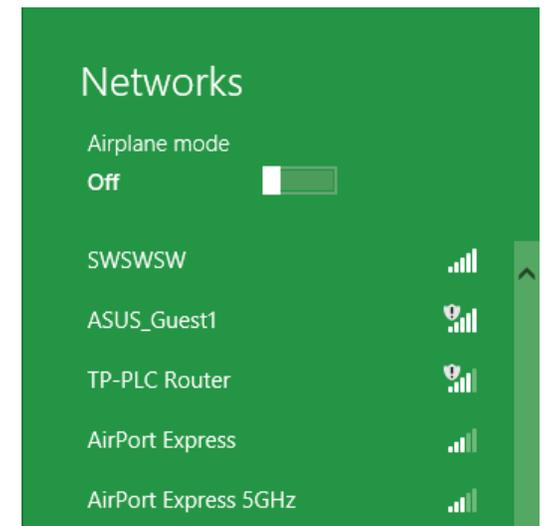


## Section 5 - Connecting to a Wireless Network


---

You will then be prompted to enter the network security key (Wi-Fi password) for the wireless network. Enter the password into the box and click **Next**.

If you wish to use Wi-Fi Protected Setup (WPS) to connect to the router, you can also press the WPS button on your router at this point to enable the WPS function.

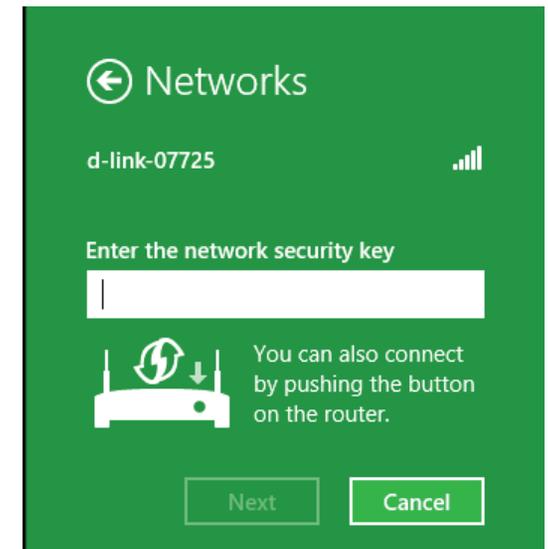

When you have established a successful connection to a wireless network, the word **Connected** will appear next to the name of the network to which you are connected.

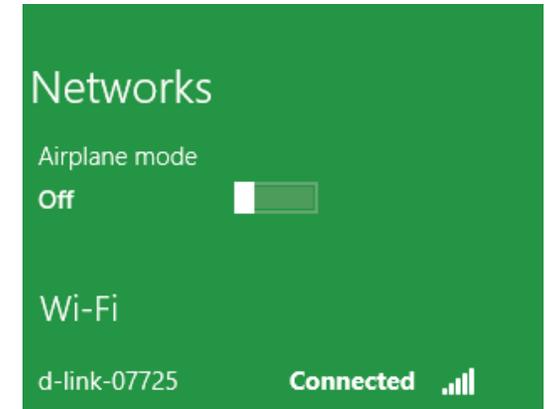

# Windows® 7

It is recommended to enable wireless security (WPA/WPA2) on your wireless router or access point before configuring your wireless adapter. If you are joining an existing network, you will need to know the security key or passphrase being used.

1. Click on the wireless icon in your system tray (lower-right corner).



Wireless Icon

2. The utility will display any available wireless networks in your area.




3. Highlight the wireless network (SSID) you would like to connect to and click the **Connect** button.

If you get a good signal but cannot access the Internet, check your TCP/IP settings for your wireless adapter. Refer to the Networking Basics section in this manual for more information.



4. The following window appears while your computer tries to connect to the router.

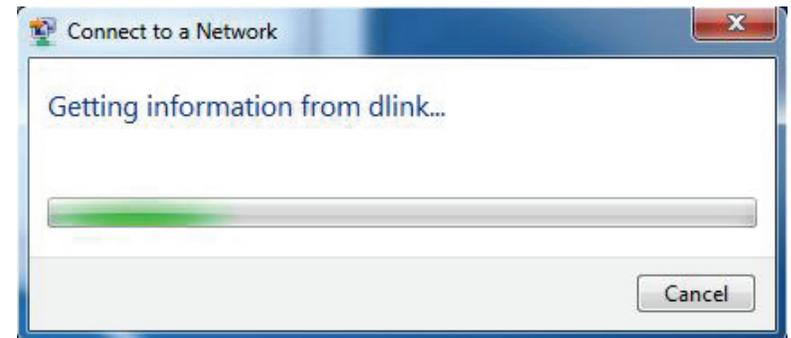

5. Enter the same security key or passphrase that is on your router and click **Connect**. You can also connect by pushing the WPS button on the router.

It may take 20-30 seconds to connect to the wireless network. If the connection fails, please verify that the security settings are correct. The key or passphrase must be exactly the same as on the wireless router.



# Windows Vista®

Windows Vista users may use the built-in wireless utility. If you are using another company's utility, please refer to the user manual of your wireless adapter for help with connecting to a wireless network. Most utilities will have a "site survey" option similar to the Windows Vista® utility as seen below.

If you receive the **Wireless Networks Detected** bubble, click on the center of the bubble to access the utility.


or

Right-click on the wireless computer icon in your system tray (lower-right corner next to the time). Select **Connect to a network**.



The utility will display any available wireless networks in your area. Click on a network (displayed using the SSID) and click the **Connect** button.


If you get a good signal but cannot access the Internet, check your TCP/IP settings of your wireless adapter. Refer to the **Networking Basics** section in this manual for more information.

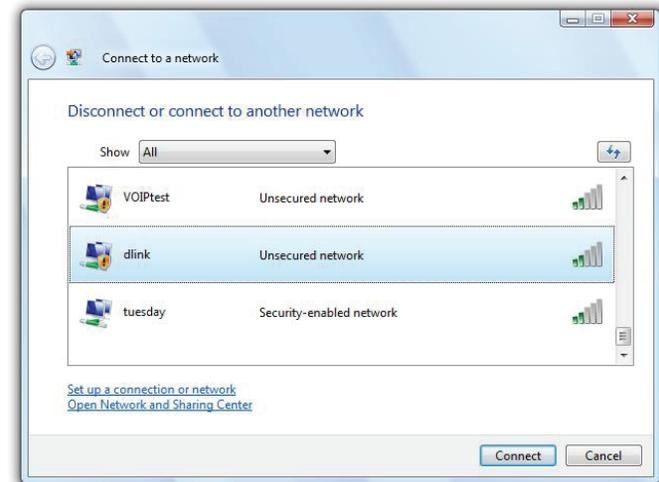

## WPA/WPA2


It is recommended to enable wireless security (WPA/WPA2) on your wireless router or access point before configuring your wireless adapter. If you are joining an existing network, you will need to know the security key or passphrase being used.

1. Open the Windows Vista Wireless Utility by right-clicking on the wireless computer icon in your system tray (lower right corner of screen). Select **Connect to a network**.
2. Highlight the Wi-Fi name (SSID) you would like to connect to and click **Connect**.

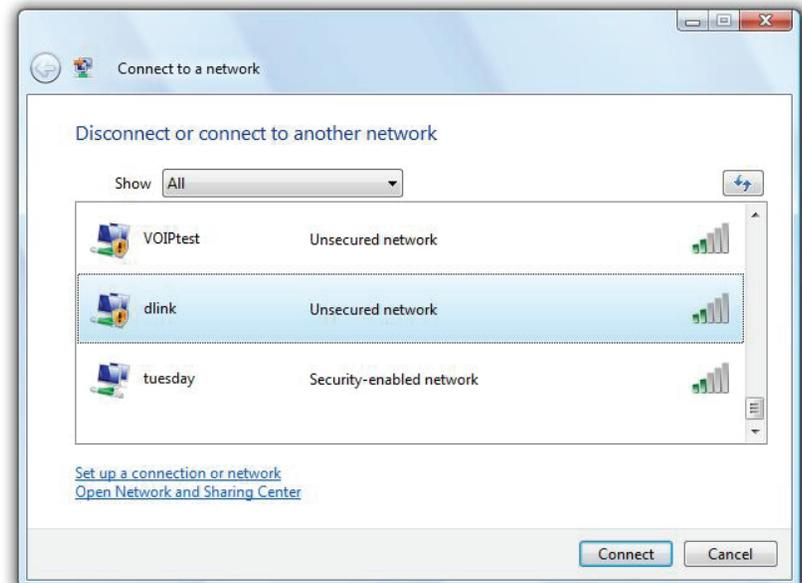

3. Enter the same security key or passphrase (Wi-Fi password) that is on your router and click **Connect**.

It may take 20-30 seconds to connect to the wireless network. If the connection fails, please verify that the security settings are correct. The key or passphrase must be exactly the same as on the wireless router.

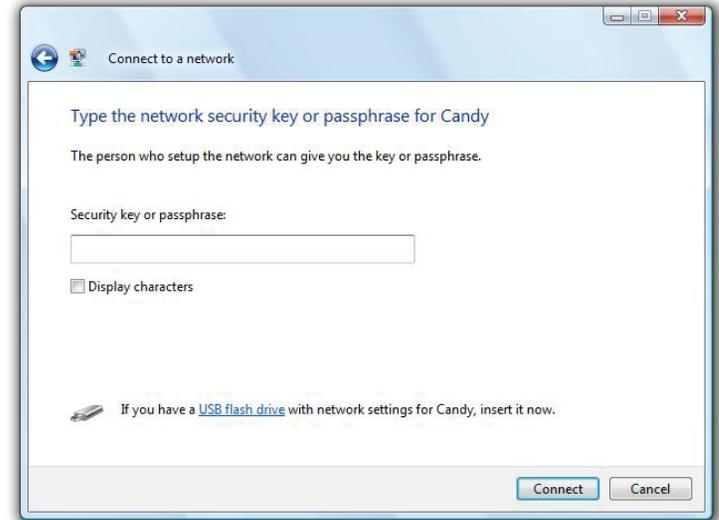

## WPS/WCN 2.0

The router supports Wi-Fi protection, referred to as WCN 2.0 in Windows Vista. The following instructions for setting this up depends on whether you are using Windows Vista to configure the router or third party software.

When you first set up the router, Wi-Fi protection is disabled and unconfigured. To enjoy the benefits of Wi-Fi protection, the router must be both enabled and configured. There are three basic methods to accomplish this: use Windows Vista's built-in support for WCN 2.0, use software provided by a third party, or manually configure.

If you are running Windows Vista, log into the router and click the **Enable** checkbox in the **Basic > Wireless** section. Use the Current PIN that is displayed on the **Advanced > Wi-Fi Protected Setup** section or choose to click the **Generate New PIN** button or **Reset PIN to Default** button.



If you are using third party software to set up Wi-Fi Protection, carefully follow the directions. When you are finished, proceed to the next section to set up the newly-configured router.

# Using Windows® XP

Windows® XP users may use the built-in wireless utility (Zero Configuration Utility). The following instructions are for Service Pack 2 users. If you are using another company's utility or Windows® 2000, please refer to the user manual of your wireless adapter for help with connecting to a wireless network. Most utilities will have a "site survey" option similar to the Windows® XP utility as seen below.




If you receive the **Wireless Networks Detected** bubble, click on the center of the bubble to access the utility.

or

Right-click on the wireless computer icon in your system tray (lower-right corner next to the time). Select **View Available Wireless Networks**.

The utility will display any available wireless networks in your area. Click on a network (displayed using the SSID) and click the **Connect** button.

If you get a good signal but cannot access the Internet, check the TCP/IP settings of your wireless adapter. Refer to the Networking Basics section in this manual for more information.

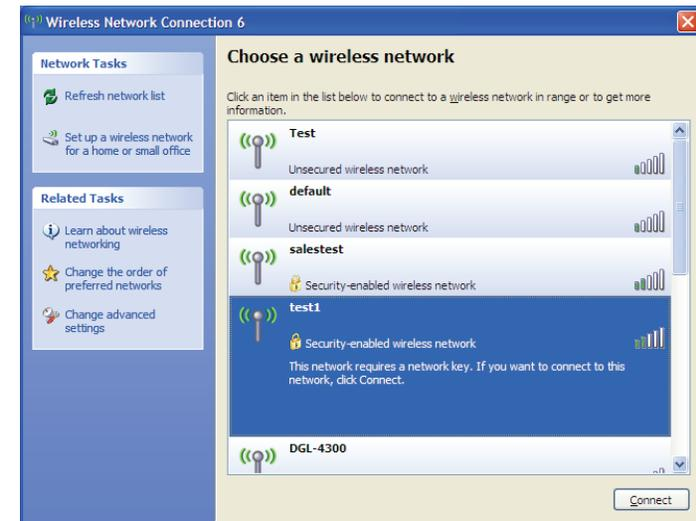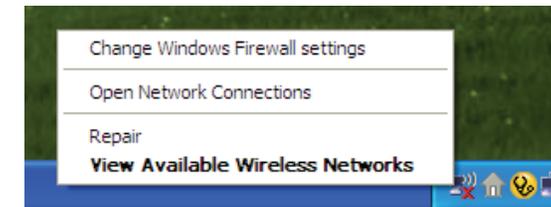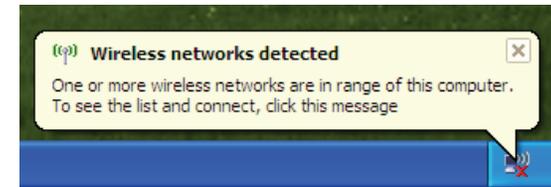


## Configure WPA-PSK

It is recommended to enable WEP on your wireless router or access point before configuring your wireless adapter. If you are joining an existing network, you will need to know the WEP key being used.

1. Open the Windows® XP Wireless Utility by right-clicking on the wireless computer icon in your system tray (lower-right corner of screen). Select **View Available Wireless Networks**.




2. Highlight the wireless network (SSID) you would like to connect to and click **Connect**.

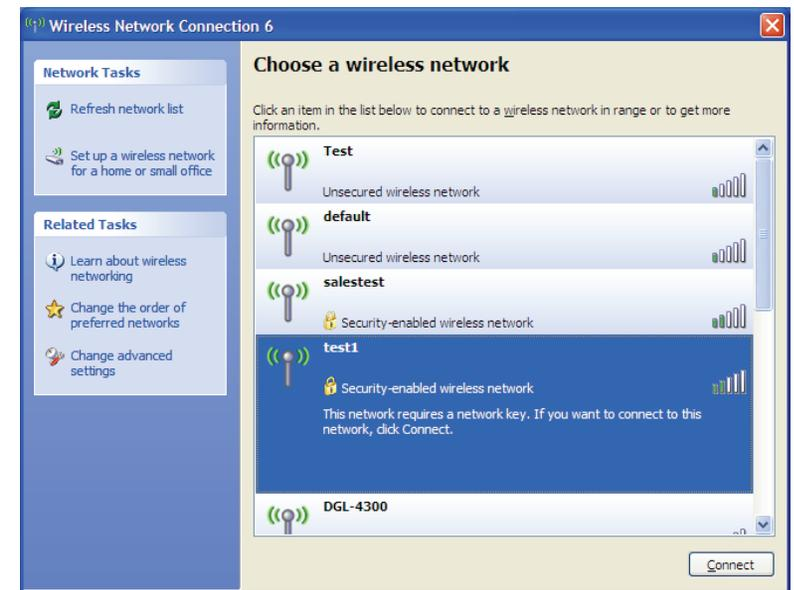

3. The **Wireless Network Connection** box will appear. Enter the WPA-PSK passphrase and click **Connect**.

It may take 20-30 seconds to connect to the wireless network. If the connection fails, please verify that the WPA-PSK settings are correct. The WPA-PSK passphrase must be exactly the same as on the wireless router.

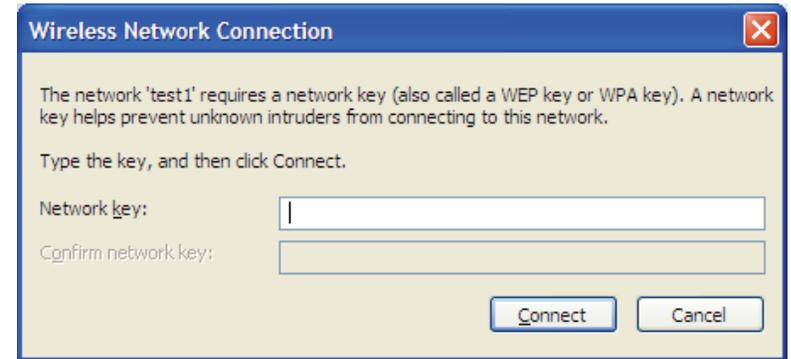

# Troubleshooting

This chapter provides solutions to problems that can occur during the installation and operation of the DAP-1650. Read the following descriptions if you are having problems.

## 1. Why can't I access the web-based configuration utility?

When entering the name or IP address of the D-Link access point (**http://dlinkap.local** for example), you are not connecting to a website on the Internet or have to be connected to the Internet. The device has the utility built-in to a ROM chip in the device itself. Your computer must be on the same IP subnet to connect to the web-based utility.

- Make sure you have an updated Java-enabled web browser. We recommend the following:
  - Microsoft Internet Explorer® 7.0 or higher
  - Mozilla Firefox® 12.0 or higher
  - Google Chrome™ 20.0 or higher
  - Apple Safari® 4.0 or higher
- Verify physical connectivity by checking for solid link lights on the device. If you do not get a solid link light, try using a different cable. If the computer is turned off, the link light may not be on.
- Disable any Internet security software running on the computer. Software firewalls such as ZoneAlarm, BlackICE, Sygate, Norton Personal Firewall, and Windows® XP firewall may block access to the configuration pages. Check the help files included with your firewall software for more information on disabling or configuring it.

- Configure your Internet settings:
  - Go to **Start > Settings > Control Panel**. Double-click the **Internet Options** icon. From the Security tab, click the button to restore the settings to their defaults.
  - Click the Connection tab and set the dial-up option to Never Dial a Connection. Click the LAN Settings button. Make sure nothing is checked. Click OK.
  - Go to the Advanced tab and click the button to restore these settings to their defaults. Click OK three times.
  - Close your web browser (if open) and open it.
- Access the web management. Open your web browser and enter the IP address of your D-Link access point in the address bar. This should open the login page for your the web management.
- If you still cannot access the configuration, unplug the power to the access point for 10 seconds and plug back in. Wait about 30 seconds and try accessing the configuration. If you have multiple computers, try connecting using a different computer.

### 2. What can I do if I forgot my password?

If you forgot your password, you must reset your access point. Unfortunately this process will change all your settings back to the factory defaults.

To reset the access point, locate the reset button (hole) on the rear panel of the unit. With the access point powered on, use a paperclip to hold the button down for 10 seconds. Release the button and the access point will go through its reboot process. Wait about 30 seconds to access the access point. The default address is **http://dlinkap.local**. When logging in, the username is Admin and leave the password box empty.

### 3. Why can't I connect to certain sites or send and receive emails when connecting through my access point?

If you are having a problem sending or receiving email, or connecting to secure sites such as eBay, banking sites, and Hotmail, we suggest lowering the MTU in increments of ten (Ex. 1492, 1482, 1472, etc).

**Note: AOL DSL+ users must use MTU of 1400.**

To find the proper MTU Size, you'll have to do a special ping of the destination you're trying to go to. A destination could be another computer, or a URL.

- Click on **Start** and then click **Run**.
- Windows® 95, 98, and ME users type in *command* (Windows® NT, 2000, and XP users type in *cmd*) and press **Enter** (or click **OK**).
- Once the window opens, you'll need to do a special ping. Use the following syntax:

```
ping [url] [-f] [-l] [MTU value]
```

Example: **ping yahoo.com -f -l 1472**

```
C:\>ping yahoo.com -f -l 1482
Pinging yahoo.com [66.94.234.13] with 1482 bytes of data:
Packet needs to be fragmented but DF set.
Packet needs to be fragmented but DF set.
Packet needs to be fragmented but DF set.
Packet needs to be fragmented but DF set.

Ping statistics for 66.94.234.13:
    Packets: Sent = 4, Received = 0, Lost = 4 (100% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 0ms, Average = 0ms

C:\>ping yahoo.com -f -l 1472
Pinging yahoo.com [66.94.234.13] with 1472 bytes of data:
Reply from 66.94.234.13: bytes=1472 time=93ms TTL=52
Reply from 66.94.234.13: bytes=1472 time=109ms TTL=52
Reply from 66.94.234.13: bytes=1472 time=125ms TTL=52
Reply from 66.94.234.13: bytes=1472 time=203ms TTL=52

Ping statistics for 66.94.234.13:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 93ms, Maximum = 203ms, Average = 132ms

C:\>
```

You should start at 1472 and work your way down by 10 each time. Once you get a reply, go up by 2 until you get a fragmented packet. Take that value and add 28 to the value to account for the various TCP/IP headers. For example, let's say that 1452 was the proper value, the actual MTU size would be 1480, which is the optimum for the network we're working with ( $1452+28=1480$ ).

Once you find your MTU, you can now configure your access point with the proper MTU size.

To change the MTU rate on your access point follow the steps below:

- Open your browser, enter the IP address of your access point (**192.168.0.50**) and click **OK**.
- Enter your username (Admin) and password (blank by default). Click **OK** to enter the web configuration page for the device.
- Click on **Setup** and then click **Manual Configure**.
- To change the MTU enter the number in the MTU field and click **Save Settings** to save your settings.
- Test your email. If changing the MTU does not resolve the problem, continue changing the MTU in increments of ten.

# Networking Basics

## Check your IP address


After you install your adapter, by default, the TCP/IP settings should be set to obtain an IP address from a DHCP server (i.e. wireless router) automatically. To verify your IP address, please follow the steps below.

Click on Start > Run. In the run box type **cmd** and click **OK**. (Windows® 7/Vista® users type cmd in the Start Search box.)

At the prompt, type **ipconfig** and press **Enter**.

This will display the IP address, subnet mask, and the default gateway of your adapter.

If the address is 0.0.0.0, check your adapter installation, security settings, and the settings on your router. Some firewall software programs may block a DHCP request on newly installed adapters.

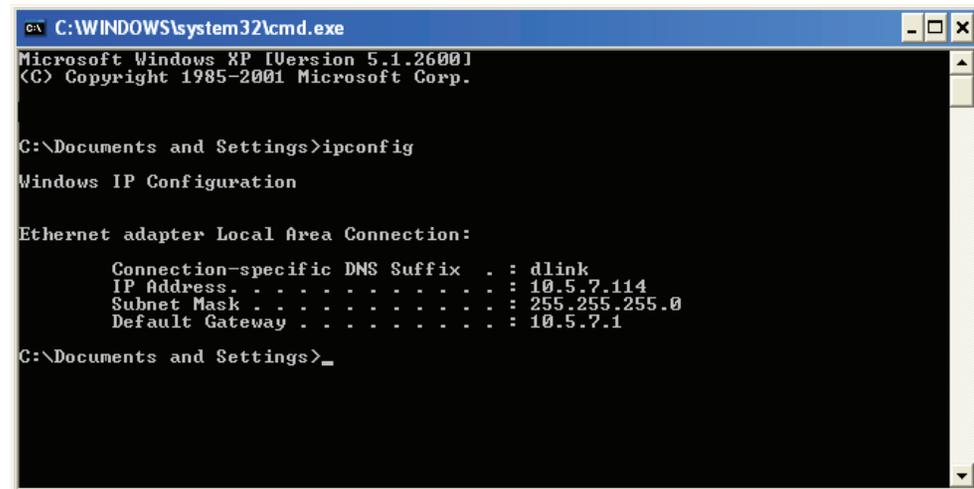

```
C:\WINDOWS\system32\cmd.exe
Microsoft Windows XP [Version 5.1.2600.1
(C) Copyright 1985-2001 Microsoft Corp.

C:\Documents and Settings>ipconfig

Windows IP Configuration

Ethernet adapter Local Area Connection:

    Connection-specific DNS Suffix  . : dlink
    IP Address . . . . . : 10.5.7.114
    Subnet Mask . . . . . : 255.255.255.0
    Default Gateway . . . . . : 10.5.7.1

C:\Documents and Settings>_
```

## Statically Assign an IP address

If you are not using a DHCP capable gateway/router, or you need to assign a static IP address, please follow the steps below:

- Step 1**
- Windows® 7 - Click on **Start > Control Panel > Network and Internet > Network and Sharing Center > Change Adapter Setting.**
  - Windows Vista® - Click on **Start > Control Panel > Network and Internet > Network and Sharing Center > Manage Network Connections.**
  - Windows® XP - Click on **Start > Control Panel > Network Connections.**
  - Windows® 2000 - From the desktop, right-click **My Network Places > Properties.**

**Step 2**  
Right-click on the **Local Area Connection** which represents your network adapter and select **Properties.**


**Step 3**  
Highlight **Internet Protocol (TCP/IP)** and click **Properties.**

**Step 4**  
Click **Use the following IP address** and enter an IP address that is on the same subnet as your network or the LAN IP address on your router.

**Example:** If the router's LAN IP address is 192.168.0.1, make your IP address 192.168.0.X where X is a number between 2 and 99. Make sure that the number you choose is not in use on the network. Set Default Gateway the same as the LAN IP address of your router (192.168.0.1).

Set Primary DNS the same as the LAN IP address of your router (192.168.0.1). The Secondary DNS is not needed or you may enter a DNS server from your ISP.

**Step 5**  
Click **OK** twice to save your settings.

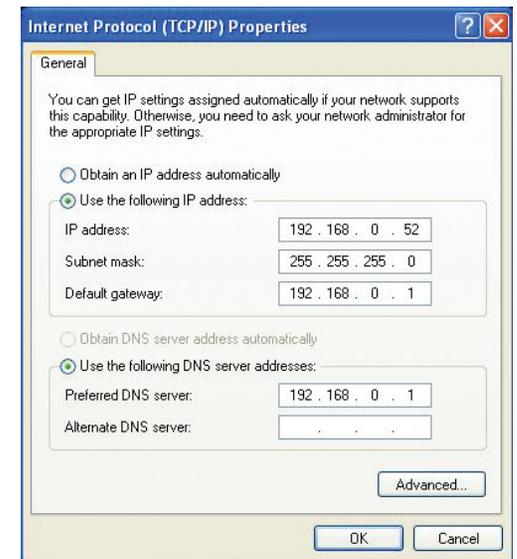

# Technical Specifications

General		
Device Interfaces	<ul style="list-style-type: none"> <li>• 802.11 a/b/g/n/ac wireless LAN</li> <li>• Four 10/100/1000 Gigabit LAN ports</li> </ul>	<ul style="list-style-type: none"> <li>• USB 2.0 port</li> </ul>
Antenna Type	<ul style="list-style-type: none"> <li>• 2x2 (2.4 GHz) and 2x2 (5 GHz) internal antennas</li> </ul>	
Standards	<ul style="list-style-type: none"> <li>• IEEE 802.11ac (draft)</li> <li>• IEEE 802.11n</li> <li>• IEEE 802.11g</li> <li>• IEEE 802.11b</li> </ul>	<ul style="list-style-type: none"> <li>• IEEE 802.11a</li> <li>• IEEE 802.3</li> <li>• IEEE 802.3u</li> </ul>
Minimum System Requirements	<ul style="list-style-type: none"> <li>• Windows 7/Vista/XP SP3 or Mac OS X 10.4 or higher</li> <li>• Microsoft Internet Explorer 6 or higher, Firefox 1.5 or higher, or other Java-enabled browser</li> </ul>	<ul style="list-style-type: none"> <li>• CD-ROM</li> <li>• Ethernet network interface</li> </ul>
Functionality		
Advanced Features	<ul style="list-style-type: none"> <li>• Guest zone</li> <li>• Web file access</li> <li>• Multi-language web setup wizard</li> <li>• Green Ethernet</li> </ul>	<ul style="list-style-type: none"> <li>• DLNA media server support</li> <li>• QoS</li> <li>• MAC address filter</li> </ul>
Mobile App Support	<ul style="list-style-type: none"> <li>• SharePort Mobile</li> </ul>	<ul style="list-style-type: none"> <li>• QRS Mobile</li> </ul>
Wireless Security	<ul style="list-style-type: none"> <li>• WPA &amp; WPA2 (Wi-Fi Protected Access)</li> </ul>	<ul style="list-style-type: none"> <li>• Wi-Fi Protected Setup (WPS) PIN/PBC</li> </ul>
Physical		

## Appendix B - Technical Specifications

---

Dimensions	• 93 x 116 x 145 mm (3.7 x 4.6 x 5.76 inches)	
Weight	• 330 grams (0.73 lbs)	
Power	• Input: 100 to 240 V AC, 50/60 Hz	• Output: 12 V DC, 2 A
Temperature	• Operating: 0 to 40 °C (32 to 104 °F)	• Storage: -20 to 65 °C (-4 to 149 °F)
Humidity	• Operating: 0% to 90% non-condensing	• Storage: 5% to 95% non-condensing
Certifications	<ul style="list-style-type: none"><li>• FCC Class B</li><li>• CE Class B</li><li>• C-Tick</li><li>• DLNA</li><li>• IPv6 Ready</li></ul>	<ul style="list-style-type: none"><li>• Wi-Fi Certified</li><li>• Wi-Fi Protected Setup (WPS)</li><li>• Wi-Fi Multimedia (WMM)</li><li>• Compatible with Windows 8</li></ul>

<sup>1</sup> Maximum wireless signal rate derived from IEEE Standard draft 802.11ac, 802.11n and 802.11g specifications. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead, lower actual data throughput rate. Environmental conditions will adversely affect wireless signal range.

<sup>2</sup> All Maximum transmission power values expressed are for dual-chain mode. Maximum transmission power and included antennas may vary depending on regional regulations.

<sup>3</sup> Range may vary depending on regional regulations.

# Compliance Statements

## **Trademarks:**

D-Link is a registered trademark of D-Link Corporation/D-Link Systems, Inc. Other trademarks or registered trademarks are the property of their respective owners.

## **Copyright Statement:**

No part of this publication or documentation accompanying this product may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from D-Link Corporation/D-Link Systems, Inc., as stipulated by the United States Copyright Act of 1976 and any amendments thereto. Contents are subject to change without prior notice.

Copyright ©2010-2011 by D-Link Corporation/D-Link Systems, Inc. All rights reserved.

## **CE Mark Warning:**

This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

## **Federal Communication Commission Interference Statement**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

Operations in the 5.15-5.25GHz band are restricted to indoor usage only.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

### **IMPORTANT NOTE:**

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Note: The country code selection is for non-US model only and is not available to all US model. Per FCC regulation, all WiFi product marketed in US must fixed to US operation channels only.

### **Industry Canada Statement**

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

### **Caution :**

- (i) the device for operation in the band 5150-5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems;
- (ii) high-power radars are allocated as primary users (i.e. priority users) of the bands 5250-5350 MHz and 5650-5850 MHz and that these radars could cause interference and/or damage to LE-LAN devices.

### **Avertissement:**

- (i) les dispositifs fonctionnant dans la bande 5 150-5 250 MHz sont réservés uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux;
- (ii) De plus, les utilisateurs devraient aussi être avisés que les utilisateurs de radars de haute puissance sont désignés utilisateurs principaux (c.-à-d., qu'ils ont la priorité) pour les bandes 5 250-5 350 MHz et 5 650-5 850 MHz et que ces radars pourraient causer du brouillage et/ou des dommages aux dispositifs LAN-EL.

### **IMPORTANT NOTE:**

#### Radiation Exposure Statement:

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

### **NOTE IMPORTANTE:**

#### Déclaration d'exposition aux radiations:

Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.

This radio transmitter (identify the device by certification number, or model number if Category II) has been approved by Industry Canada to operate with the antenna types listed below with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

Le présent émetteur radio (IC: 4216A-AP1665A1) a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés ci-dessous et ayant un gain admissible maximal et l'impédance requise pour chaque type d'antenne. Les types d'antenne non inclus dans cette liste, ou dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur.

### **TELEC Statement:**

電波法により5GHz帯は屋内使用に限ります。