

## CLI Reference Guide

Product Model: DXS-3600 Series  
Layer 2/3 Managed 10GbE Switch  
Release: 1.10

# DXS-3600 Series CLI Reference Guide

Software Release F/W: 1.10.023

## Copyright Statement

All rights reserved.

Without our written permission this document may not be excerpted, reproduced, transmitted, or otherwise in all or part by any party by any means.

## Preface

### Version Description

This manual's command descriptions are based on the software release 1.10.023. The commands listed here are the subset of commands that are supported by the DXS-3600 Series switch.

### Audience

This reference manual is intended for **network administrators** and other IT networking professionals responsible for managing the switch by using the Command Line Interface (CLI). The CLI is the primary management interface to the DXS-3600 Series switch, which will be generally be referred to simply as the "switch" within this manual. This manual is written in a way that assumes that you already have the experience and knowledge of Ethernet and modern networking principles for Local Area Networks.

### Document Layout

Preface	Describes how to use the CLI reference manual.
Table of Contents	Lists out the chapters discussed throughout this manual.
Chapters	Each chapter contains a specific grouping of CLI commands that are related to the topic labelled.
Appendices	Contains extra information related to this switch.

### Other Documentation

The documents below are a further source of information in regards to configuring and troubleshooting the switch . All the documents are available either from the CD, bundled with this switch, or from the D-Link website. Other documents related to this switch are:

- DXS-3600 Series Hardware Installation Guide
- DXS-3600 Series Web UI Reference Guide

### Conventions

Convention	Description
<b>Boldface Font</b>	Commands, command options and keywords are printed in boldface. Keywords, in the command line, are to be entered exactly as they are displayed.
<i>UPPERCASE ITALICS Font</i>	Parameters or values that must be specified are printed in <i>UPPERCASE ITALICS</i> . Parameters in the command line, are to be replaced with the actual values that are desired to be used with the command.
[ ]	Square brackets enclose an optional value or set of optional arguments.

Convention	Description
{a   b   c}	Braces enclose alternative keywords separated by vertical bars. Generally, one of the keywords in the separated list can be chosen.
[a   d   c]	Optional values or arguments are enclosed in square brackets and separated by vertical bars. Generally, one or more of the values or arguments in the separated list can be chosen.
Blue Courier Font	This convention is used to represent an example of a screen console display including example entries of CLI command input with the corresponding output. All examples used in this manual is based on the <b>DXS-3600-32S</b> switch in the DXS-3600 Series.

## Notes, Notices, and Cautions

Below are examples of the 3 types of indicators used in this manual. When administering your switch using the information in this document, you should pay special attention to these indicators. Each example below provides an explanatory remark regarding each type of indicator.



**NOTE:** A note indicates important information that helps you make better use of your device



**NOTICE:** A notice indicates either potential damage to hardware or loss of data and tells you how to avoid the problem



**CAUTION:** A caution indicates a potential for property damage, personal injury, or death.

## Command Descriptions

The information pertaining to each command in this reference guide is presented using a number of template fields. The fields are:

- **Description** - This is a short and concise statement describing the commands functionality.
- **Syntax** - The precise form to use when entering and issuing the command. The form conventions are described in the table shown under the section “Conventions” on page iv of this guide.
- **Syntax Description** - A table where each row describes the optional or required arguments, and their use, that can be issued with the command.
- **Default** - If the command sets a configuration value or administrative state of the switch then any default settings (i.e. without issuing the command) of the configuration is shown here.
- **Command Mode** - The mode in which the command can be issued. The modes are either User EXEC, Privileged EXEC, Global Configuration or a specific configuration mode. These modes are described in the section titled “Command Modes” on page v below.
- **Command Usage** - If necessary, a detailed description of the command and its various utilization scenarios is given here.
- **Example(s)** - Each command is accompanied by a practical example of the command being issued in a suitable scenario.

## Command Modes

There are several command modes available in the command-line interface (CLI). The set of commands available to the user depends on both the mode the user is currently in and their privilege level. For each case, the user can see all the commands that are available in a particular command mode by entering a question mark (?) at the system prompt.

The command-line interface has five privilege levels:

- **Basic User** - Privilege Level 1. This user account level has the lowest priority of the user accounts. The purpose of this type of user account level is for basic system checking.
- **Advanced User** - Privilege Level 3. This user account level is allowed to configure the terminal control setting. This user account can only show limited information that is not related to security.
- **Power User** - Privilege 8. This user account level can execute fewer commands than operator, including configuration commands other than the operator level and administrator level commands.

- **Operator** - Privilege Level 12. This user account level is used to grant system configuration rights for users who need to change or monitor system configuration, except for security related information such as user accounts and SNMP account settings, etc.
- **Administrator** - Privilege Level 15. This administrator user account level can monitor all system information and change any of the system configuration settings expressed in this configuration guide.

The command-line interface has a number of command modes. There are three basic command modes:

- **User EXEC mode**
- **Privileged EXEC mode**
- **Global Configuration mode**

All other sub-configuration modes can be accessed via global configuration mode.

When a user logs in to the Switch, the privilege level of the user determines the command mode the user will enter after initially logging in. The user will either log into user EXEC mode or privileged EXEC mode. Users with a basic user level will log into the Switch in user EXEC mode. Users with advanced user, power user, operator or administrator level accounts will log into the Switch in privileged EXEC mode. Therefore, user EXEC mode can operate at basic user level and privileged EXEC mode can operate at advanced user, power user, operator or administrator level. The user can only enter global configuration mode from privileged EXEC mode. Therefore, global configuration mode can be accessed by users who have advanced user, power user, operator or administrator level user accounts. As for sub-configuration modes, a subset of those can only be accessed by users who have the highest secure administrator level privileges.

The following table briefly lists the available command modes. Only the basic command modes and some of the sub-configuration modes are enumerated. The basic command modes and basic sub-configuration modes are further described in the following chapters. Descriptions for the rest of the sub-configuration modes are not provided in this section. For more information on the additional sub-configuration modes, the user should refer to the chapters relating to these functions.

The available command modes and privilege levels are described below:

<b>Command Mode / Privilege Level</b>	<b>Purpose</b>
User EXEC Mode / Basic User level	This level has the lowest priority of the user accounts. It is provided only to check basic system settings.
Privileged EXEC Mode / Advanced User level	This level is allowed to configure the terminal control setting. This user account can only show limited information that is not related to security.
Privileged EXEC Mode / Power User level	This level can execute less commands than operator, include the configure commands other than the operator level and administrator level commands.
Privileged EXEC Mode / Operator level	For changing both local and global terminal settings, monitoring, and performing certain system administration tasks. The system administration tasks that can be performed at this level includes the clearing of system configuration settings, except for any security related information, such as user accounts, SNMP account settings etc.
Privileged EXEC Mode / Administrator level	This level is identical to privileged EXEC mode at power user level, except that a user at the administrator level can monitor and clear security related settings.
Global Configuration Mode / Power User level	For applying global settings, including the configuration commands other than the operator level and administrator level commands.
Global Configuration Mode / Operator level	For applying global settings, except for security related settings, on the entire Switch. In addition to applying global settings on the entire Switch, the user can access other sub-configuration modes from global configuration mode.
Global Configuration Mode / Administrator level	For applying global settings on the entire Switch. In addition to applying global settings on the entire Switch, the user can access other sub-configuration modes from global configuration mode.
Interface Configuration Mode / Administrator level	For applying interface related settings.
VLAN Interface Configuration Mode	For applying VLAN interface related settings.
VLAN Configuration Mode	For applying settings to a VLAN.

Command Mode / Privilege Level	Purpose
IP Access-List Configuration Mode	For specifying filtering criteria for an IP access list.

### User EXEC Mode at Basic User Level

This command mode is mainly designed for checking basic system settings. This command mode can be entered by logging in as a basic user.

### Privileged EXEC Mode at Advanced User Level

This command mode is mainly designed for checking basic system settings, allowing users to change the local terminal session settings and carrying out basic network connectivity verification. One limitation of this command mode is that it cannot be used to display information related to security. This command mode can be entered by logging in as an advanced user.

### Privileged EXEC Mode at Power User Level

User logged into the switch in privileged EXEC mode at this level can execute fewer commands than operator, including the configuration commands other than the operator level and administrator level commands. The method to enter privileged EXEC mode at power user level is to login to the switch with a user account that has a privileged level of 8.

### Privileged EXEC Mode at Operator Level

Users logged into the Switch in privileged EXEC mode at this level can change both local and global terminal settings, monitor, and perform system administration tasks like clearing configuration settings (except for security related information such as user accounts, SNMP account settings etc.) The method to enter privileged EXEC mode at operator level is to login to the Switch with a user account that has a privilege level of 12.

### Privileged EXEC Mode at Administrator Level

This command mode has a privilege level of 15. Users logged in with this command mode can monitor all system information and change any system configuration settings mentioned in this Configuration Guide. The method to enter privileged EXEC mode at administrator level is to login to the Switch with a user account that has a privilege level of 15.

### Global Configuration Mode

The primary purpose of global configuration mode is to apply global settings on the entire Switch. Global configuration mode can be accessed at advanced user, power user, operator or administrator level user accounts. However, security related settings are not accessible at advanced user, power user or operator user accounts. In addition to applying global settings on the entire Switch, the user can also access other sub-configuration modes. In order to access the global configuration mode, the user must be logged in with the corresponding account level and use the configure terminal command in privileged EXEC mode.

In the following example, the user is logged in as an Administrator in privileged EXEC mode and uses the configure terminal command to access global configuration mode:

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#
```

The **exit** command is used to exit global configuration mode and return to privileged EXEC mode.

```
DXS-3600-32S(config)#exit
DXS-3600-32S#
```

The procedures to enter the different sub-configuration modes can be found in the related chapters in this Configuration Guide. The command modes are used to configure the individual functions.

## Interface Configuration Mode

Interface configuration mode is used to configure the parameters for an interface or a range of interfaces. An interface can be a physical port, VLAN, or other virtual interface. Thus, interface configuration mode is distinguished further according to the type of interface. The command prompt for each type of interface is slightly different.

## VLAN Interface Configuration Mode

VLAN interface configuration mode is one of the available interface modes and is used to configure the parameters of a VLAN interface.

To access VLAN interface configuration mode, use the following command in global configuration mode:

```
DXS-3600-32S (config) #interface vlan 1  
DXS-3600-32S (config-if) #
```

# Table of Contents

Basic CLI Commands.....	1
802.1X Commands.....	6
Access Control List (ACL) Commands.....	17
Address Resolution Protocol (ARP) Commands.....	40
Alternate Store and Forward (ASF) Commands.....	46
Authentication, Authorization, and Accounting (AAA) Commands.....	48
Border Gateway Protocol (BGP) Commands.....	65
Compound Authentication Commands.....	172
Configuration Commands.....	175
Counter Commands.....	187
CPU Commands.....	190
Debug Commands.....	191
DHCP Relay Commands.....	199
DHCP Server Commands.....	205
Distance Vector Multicast Routing Protocol (DVMRP) Commands.....	220
D-Link License Management System Commands.....	225
Domain Name System (DNS) Commands.....	227
DoS Attack Prevention Commands.....	230
Enhanced Transmission Selection (ETS) Commands.....	233
File System Commands.....	237
Filter Database (FDB) Commands.....	243
GARP VLAN Registration Protocol (GVRP) Commands.....	251
Internet Group Management Protocol (IGMP) Commands.....	257
IGMP Snooping Commands.....	266
Interface Commands.....	281
IP Access List Commands.....	284
IP Address Commands.....	287
IP Prefix List Commands.....	290
IP Multicast (IPMC) Commands.....	294
LINE Commands.....	301
Link Aggregation Commands.....	303
Link Layer Discovery Protocol (LLDP) Commands.....	309
LLDP-DCBX Commands.....	327
LLDP-MED Commands.....	332
Memory Commands.....	337
Mirror Commands.....	338
Multicast Filter Mode Commands.....	342
Multiprotocol Label Switching (MPLS) Commands.....	344
Network Connectivity Test Commands.....	377
Open Shortest Path First (OSPF) Version 2 Commands.....	379
Password Recovery Commands.....	417
Peripheral Commands.....	419
Port Commands.....	421
Port Security Commands.....	428
Priority-based Flow Control (PFC) Commands.....	436
Protocol Independent Commands.....	439
Protocol Independent Multicast (PIM) Commands.....	449
Quality of Service (QoS) Commands.....	467
Quantized Congestion Notification (QCN) Commands.....	487
RADIUS Commands.....	497
Remote Network MONitoring (RMON) Commands.....	502
Routing Information Protocol (RIP) Commands.....	508

Route Map Commands.....	523
Secure Shell (SSH) Commands.....	536
Simple Network Management Protocol (SNMP) Commands.....	539
Simple Network Time Protocol (SNTP) and Clock Commands.....	551
Spanning Tree Protocol (STP) Commands.....	557
Storm Control Commands.....	574
Switch Management Commands.....	578
Syslog Commands.....	584
TACACS+ Commands.....	591
TELNET Commands.....	595
Time Range Commands.....	597
Traffic Segmentation Commands.....	599
Upgrade and Maintenance Commands.....	601
Virtual LAN (VLAN) Commands.....	603
Virtual Private LAN Service (VPLS) Commands.....	616
Virtual Private Wire Service (VPWS) Commands.....	628
Virtual Router Redundancy Protocol (VRRP) Commands.....	632
VLAN Mapping Commands.....	642
VLAN Tunnel Commands.....	646
VRF-Lite Commands.....	653
Weighted Random Early Detection (WRED) Commands.....	659
Appendix A - Password Recovery Procedure.....	664
Appendix B - System Log Entries.....	665
Appendix C - Trap Entries.....	685



# Basic CLI Commands

## 1-1 help

This command is used to display a brief description of the help system. Use the help command in any command mode.

help

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Exec Mode Privileged Mode All Configuration Modes
<b>Command Default Level</b>	Level: 1
<b>Usage Guideline</b>	<p>This command provides a brief description of the context-sensitive help system, which functions as follow:</p> <ul style="list-style-type: none"> <li>• To list all commands available for a particular command mode, enter a question mark "?" at the system prompt.</li> <li>• To obtain a list of commands that begin with a particular character string, enter the abbreviated command entry immediately followed by a question mark "?". Do not leave a space between the keyword and question mark. This form of help is called word help, because it lists only the keywords or arguments that begin with the abbreviation you entered.</li> <li>• To list the keywords and arguments associated with a command, enter a question mark "?" in place of a keyword or argument on the command line. Leave a space between the keyword and question mark. This form of help is called command syntax help, because it lists the keywords or arguments that apply based on the command, keywords, and arguments you have already entered.</li> </ul>

**Note:** To complete a partial command name, enter the abbreviated command name followed by a <Tab> key. Example: **show addr <Tab>**. To enter the character "?" in the command argument, press Ctrl+V immediately followed by the character "?".

### Example

This example shows how to display a brief description of the help system. The field descriptions are self-explanatory.

```
DXS-3600-32S>help
```

```
Help may be requested at any point in a command by entering
a question mark '?'. If nothing matches, the help list will
be empty and you must backup until entering a '?' shows the
available options.
```

```
Two styles of help are provided:
```

1. Full help is available when you are ready to enter a command argument (e.g. 'ip ?') and describes each possible argument.
2. Partial help is provided when an abbreviated argument is entered and you want to know what arguments match the input (e.g. 'ip a?').

```
Note:
```

1. For completing a partial command name could enter the abbreviated command name immediately followed by a <Tab> key.
2. If wants to enter the character '?' in the command argument, please press ctrl+v immediately followed by the character '?'.

```
DXS-3600-32S>
```

**Example**

This example shows how to use the word 'help' to display all the privileged mode commands that begin with the letters "re". The letters entered, before the question mark, are reprinted on the next command line to allow the user to continue entering the command.

```
DXS-3600-32S#re?
reboot          rename
DXS-3600-32S#re
```

**Example**

This example shows how to use the command syntax, 'help', to display the next argument of a partially completed **ip access-list standard** command. The characters entered, before the question mark, is reprinted on the next command line to allow the user to continue entering the command.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip access-list standard ?
WORD          Access-list name(the first character must be a letter)
<1-1999>      Standard IP access-list number
DXS-3600-32S(config)#ip access-list standard
```

**1-2 prompt**

This command is used to customize the CLI prompt. Execute the **prompt** command in global configuration mode. To revert to the default prompt, execute the no form of this command.

```
prompt string
no prompt
```

**Parameters**

<i>string</i>	Enter the character string that will be displayed on screen as the CLI prompt here.
---------------	---

**Default**

The default prompt value is '**DXS-3600-32S**'.

**Command Mode**

Global Configuration Mode

**Command Default Level**

Level: 3

**Usage Guideline**

The default prompt string is the system's name. To restore the prompt to the default value, use the '**no prompt**' command in global configuration mode.

**Example**

This example shows how to configure a customized prompt string, used in the CLI. IN this example we'll change the prompt to the word 'Router'.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#prompt Router
Router(config)#
```

**1-3 banner login**

This command is used to configure and customized the banner that will be displayed before the username and password login prompts. Use the banner login command in global configuration mode. To disable the customized login banner, use no form of this command.

```
banner login c message c
no banner login
```

**Parameters**

<code>c</code>	Specifies the separator of the login banner message, for example a hash sign (#). The delimiting character is not allowed in the login banner message.
<code>message</code>	Enter the contents of the login banner, that will be displayed before the username and password login prompts, here.

**Default**

Displays the switch type and other contents defined by the system.

**Command Mode**

Global Configuration Mode

**Command Default Level**

Level: 3

**Usage Guideline**

Follow the banner login command with one or more blank spaces and a delimiting character of your choice. Enter one or more lines of text, terminating the message with the second occurrence of the delimiting character. For example with a hash sign (#) being the delimiting character, after inputting the delimiting character, press the enter key, then the login banner contents can be typed. The delimiting character need to be inputted then press enter to complete the type.

To reset the login banner contents to default, use the '**no banner login**' command in global configuration mode.

**Note:** The typed additional characters after the end delimiting character are invalid. These characters will be discarded by the system. The delimiting character can not be used in the text of login banner.

**Example**

This example shows how to configure the login banner. The hash sign (#) is used as the delimiting character. The starting delimiting character, banner contents and ending delimiting character will be entered before pressing the first enter key.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#banner login #Enter Command Line Interface#
DXS-3600-32S(config)#end
DXS-3600-32S#logout

Enter Command Line Interface

User Access Verification

Username:
```

**Example**

This example shows how to configure the login banner. The hash sign (#) is used as the delimiting character.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#banner login #
LINE c banner-text c, where 'c' is a delimiting character
Enter Command Line Interface
#
DXS-3600-32S(config)#end
DXS-3600-32S#logout

Enter Command Line Interface

User Access Verification

Username:
```

## 1-4 exit

This command is used to exit any configuration mode to the next highest mode in the CLI mode hierarchy. Use the exit command in any configuration mode. If the current mode is the highest mode (Exec Mode, Privileged Mode) in the CLI mode hierarchy, execute the exit command to close the active terminal session by logging off the switch.

**exit**

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Exec Mode Privileged Mode All Configuration Modes
<b>Command Default Level</b>	Level: 1
<b>Usage Guideline</b>	Use the exit command in the highest mode (Exec Mode, Privileged Mode) to exit the active session (exit from the mode process and log off from the device). If the current session is console, the account will logout. if there is another session running, it will be closed.  Use the exit command in any configuration mode to the next highest mode in the CLI mode hierarchy. For example, use the exit command in global configuration mode to return to privileged mode.

**Example** This example shows how to exit from the Line Configuration Mode to return to the Global Configuration Mode and exit from the Global Configuration Mode to return to the privileged mode.

```
DXS-3600-32S (config-line)#exit
DXS-3600-32S (config)#exit
DXS-3600-32S#
```

**Example** This example shows how to use the exit command, in the privileged mode, to logout of the current account.

```
DXS-3600-32S#exit

Switch con0 is now available

Press any key to login...

16 2000-01-22 01:20:37 INFO(6) Logout through Console (Username: admin)

                DXS-3600-32S TenGigabit Ethernet Switch

                Command Line Interface
                Firmware: Build 1.10.023
                Copyright(C) 2012 D-Link Corporation. All rights reserved.

User Access Verification

Username:
```

**Example** This example shows how to use the exit command, in the privileged mode, in a Telnet session, to exit this mode and close the active session.

```
DXS-3600-32S#exit
```

## 1-5 end

This command is used to end the current configuration mode and return to the highest mode in the CLI mode hierarchy. Use the end command in any configuration mode.

end

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Exec Mode Privileged Mode All Configuration Modes
<b>Command Default Level</b>	Level: 1
<b>Usage Guideline</b>	Execute this command to return back to the highest mode in the CLI mode hierarchy regardless of what configuration mode or configuration sub-mode currently located.

**Note:** This global command can be used in any mode, but if the current located mode is the highest mode in the CLI mode hierarchy (Exec Mode, Privileged Mode), executing this command will not have any effect. If the current located mode is any configuration mode, execute this command will return to the privileged mode.

**Example** This example shows how to use the end command in the Line Configuration Mode to return to the privileged mode.

```
DXS-3600-32S(config-line)#end
DXS-3600-32S#
```

**Example** This example shows how to use the end command in the privileged and EXEC mode.

```
DXS-3600-32S#end
DXS-3600-32S#disable
DXS-3600-32S>end
DXS-3600-32S>
```

---

# 802.1X Commands

## 2-1 dot1x default

This command is used to reset the IEEE 802.1X parameters on a specific port to their default settings.

**dot1x default**

<b>Parameters</b>	None.
<b>Default</b>	Port control mode - Auto Port PAE type - None Port control direction - Both Quiet period when authentication fails - 60 seconds Re-authentication interval when authentication succeeds - 3600 seconds Default timeout value waiting for a response from RADIUS - 30 seconds Default timeout value waiting for a reply from Supplicant - 30 seconds Default transmission interval from the Authenticator to the Supplicant - 30 seconds Default maximum number of authentication request - 2 times Re-authentication state on the port - Disabled
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	This command is used to reset all the IEEE 802.1X parameters on a specific port to their default settings.

**Example** This example shows how to reset the 802.1X parameters on port 1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#dot1x default
DXS-3600-32S(config-if)#
```

## 2-2 dot1x port-control

This command is used to manually control the authorization state on a specific port. Use the no form of this command to reset the authorization state of the specific port to its default state (auto).

**dot1x port-control {auto | force-authorized | force-unauthorized}**  
**no dot1x port-control**

### Parameters

<b>auto</b>	Specifies to enable IEEE 802.1X authentication. The state (authorized or unauthorized) for a specific port is determined according to the outcome of the authentication.
<b>force-authorized</b>	Specifies to force a specific port to change to the authorized state without an authentication exchange.
<b>force-unauthorized</b>	Specifies to deny all access on a specific port by forcing the port to change to the unauthorized state, ignoring all authentication attempts.

<b>Default</b>	The default authorization state is auto.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	The configuration for this command on a specific port won't be in operation if you don't configure the port as an IEEE 802.1X PAE authenticator by using the ' <b>dot1x pae authenticator</b> ' command.

**Example** This example shows how to deny all access to port 1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#dot1x port-control force-unauthorized
DXS-3600-32S(config-if)#
```

## 2-3 dot1x pae authenticator

This command is used to configure a specific port as an IEEE 802.1X port access entity (PAE) authenticator. Use the no form of this command to disable IEEE 802.1X authentication on the port.

```
dot1x pae authenticator
no dot1x pae
```

<b>Parameters</b>	None.
<b>Default</b>	The 802.1X is disabled on a port by default.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	You must also globally enable IEEE 802.1X authentication on the switch by using the ' <b>dot1x system-auth-control</b> ' command.

**Example** This example shows how to configure port 1 as an IEEE 802.1X PAE authenticator.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#dot1x pae authenticator
DXS-3600-32S(config-if)#
```

## 2-4 dot1x control-direction

This command is used to configure the direction of the traffic on a controlled port as unidirectional (in) or bidirectional (both). Use the no form of this command to reset the control direction of a port to its default value (both).

```
dot1x control-direction {both | in}
no dot1x control-direction
```

### Parameters

<b>both</b>	Specifies to enable bidirectional control. Both incoming and outgoing traffic through an IEEE 802.1X-enabled port are prevented if the port is not in the authorized state.
<b>in</b>	Specifies to enable unidirectional control. Incoming traffic through an IEEE 802.1X-enabled port is prohibited if the port is not the authorized state.

<b>Default</b>	The default is in bidirectional mode.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 8

**Usage Guideline**

The configuration for this command on a specific port won't be in operation if you don't configure the port as an IEEE 802.1X PAE authenticator by using the '**dot1x pae authenticator**' command.

When the port is in the force-unauthorized state or in the unauthorized state after authentication, the traffic is controlled based on the setting of this command.

When the port is in the force-authorized state or becomes authorized after authentication, the traffic will be allowed in both directions.

**Example**

This example shows how to specify the direction of traffic through Ethernet port 1. The direction is set as unidirectional.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#dot1x control-direction in
DXS-3600-32S(config-if)#
```

**2-5 dot1x timeout**

This command is used to configure the IEEE 802.1X timers.

```
dot1x timeout {quiet-period <sec 0-65535> | reauth-period <sec 1-65535> | server-timeout <sec 1-65535> |
  supp-timeout <sec 1-65535> | tx-period <sec 1-65535>}
```

**Parameters**

<b>quiet-period</b> <sec 0-65535>	Number of seconds that the switch will be in the quiet state in the wake of a failed authentication process. The range is 0 to 65535
<b>reauth-period</b> <sec 1-65535>	Number of seconds between re-authentication attempts. The range is 1 to 65535.
<b>server-timeout</b> <sec 1-65535>	Number of seconds that the switch will wait for the request from the authentication server before timing out the server. The range is 1 to 65535.
<b>supp-timeout</b> <sec 1-65535>	Number of seconds that the switch will wait for the response from the supplicant before timing out the supplicant. The range is 1 to 65535.
<b>tx-period</b> <sec 1-65535>	Number of seconds that the switch will wait for a response to an EAP-Request or Identity frame from the supplicant before retransmitting the request. The range is 1 to 65535

**Default**

The default quiet period when authentication fails is 60 seconds (quiet-period).  
 The default re-authentication interval when authentication succeeds is 3600 seconds (reauth-period).  
 The default timeout value waiting for a response from RADIUS is 30 seconds (server-timeout).  
 The default timeout value waiting for a reply from Supplicant is 30 seconds (supp-timeout).  
 The default transmission interval from the Authenticator to the Supplicant is 30 seconds (tx-period).

**Command Mode**

Interface Configuration Mode.

**Command Default Level**

Level: 8

**Usage Guideline**

The '**dot1x timeout reauth-period**' command is in operation only if you have enabled re-authentication by using the '**dot1x re-authentication interface configuration**' command.



**Example**

This example shows how to configure the quiet period, reauthentication period, server timeout value, supplicant timeout value, and transmission period for Ethernet port 1 to be 20, 1000, 15, 15, and 10 seconds, respectively.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#dot1x timeout quiet-period 20
DXS-3600-32S(config-if)#dot1x timeout reauth-period 1000
DXS-3600-32S(config-if)#dot1x timeout server-timeout 15
DXS-3600-32S(config-if)#dot1x timeout supp-timeout 15
DXS-3600-32S(config-if)#dot1x timeout tx-period 10
DXS-3600-32S(config-if)#
```

**2-6 dot1x max-req**

This command is used to configure the maximum number of times that the backend authentication state machine will retransmit an Extensible Authentication Protocol (EAP) request frame to the supplicant before restarting the authentication process. Use the no form of this command to reset the maximum number of times to its default value.

```
dot1x max-req <int 1-10>
no dot1x max-req
```

**Parameters**

<b>max-req</b> <int 1-10>	Number of times that the switch retransmits an EAP frame to the supplicant before restarting the authentication process. The range is 1 to 10.
---------------------------	--

**Default**

The default value is 2 times.

**Command Mode**

Interface Configuration Mode.

**Command Default Level**

Level: 8

**Usage Guideline**

This command is used to set the maximum number of times that the backend authentication state machine will retransmit an Extensible Authentication Protocol (EAP) request frame to the supplicant before restarting the authentication process.

**Example**

This example shows how to set the maximum number of retries allowed on port 1. The maximum number of retries is set to 3.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#dot1x max-req 3
DXS-3600-32S(config-if)#
```

**2-7 dot1x reauthentication**

This command is used to enable periodic reauthentication. Use the no form of this command to return to disable periodic reauthentication.

```
dot1x reauthentication
no dot1x reauthentication
```

**Parameters**

None.

**Default**

The periodic reauthentication on interface is disabled by default.

**Command Mode**

Interface Configuration Mode.

**Command Default Level**

Level: 8

**Usage Guideline** You can configure the number of seconds between reauthentication attempts by using the '**dot1x timeout reauth-period**' command.

**Example** This example shows how to enable periodic reauthentication on Ethernet port 1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#dot1x reauthentication
DXS-3600-32S(config-if)#
```

## 2-8 dot1x re-authenticate

This command is used to reauthenticate a specific port or a specific MAC address.

**dot1x re-authenticate** {**interface** <interface-id> | **mac-address** <mac-address>}

### Parameters

<b>interface</b> <interface-id>	(Optional) Specifies a port to reauthenticate. Valid interfaces are physical ports.
<b>mac-address</b> <mac-address>	(Optional) Specifies a MAC address to re-authenticate. The function can be used only if the authentication mode is host-based.

**Default** This command has no default value.

**Command Mode** Global Configuration Mode.

**Command Default Level** Level: 8

**Usage Guideline** Under port-based mode, use the parameter **interface** <interface-id> to re-authenticate a specific port. Under host-based mode, use the parameter **mac-address** <mac-address> to reauthenticate a specific MAC address.

**Example** This example shows how to reauthenticate Ethernet port 1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#dot1x re-authenticate interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config)#
```

## 2-9 dot1x initialize

This command is used to initialize the authenticator state machine on a specific port or associated with a specific MAC address.

**dot1x initialize** {**interface** <interface-id> | **mac-address** H.H.H}

### Parameters

<b>interface</b> <interface-id>	(Optional) Specifies a port on which the authenticator state machine will be initialized. Valid interfaces are physical ports.
<b>mac-address</b> H.H.H	(Optional) Specifies a MAC address with which the authenticator state machine associates will be initialized. The function can be used only if the authentication mode is host-based.

**Default** None.

**Command Mode** Global Configuration Mode.

**Command Default Level** Level: 8

**Usage Guideline** Under port-based mode, use the parameter **interface** *<interface-id>* to initialize a specific port. Under host-based mode, use the parameter **mac-address** *<mac-address>* to initialize a specific MAC address.

**Example** This example shows how to initialize the authenticator state machine on Ethernet port 1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#dot1x initialize interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config)#
```

## 2-10 dot1x system-auth-control

This command is used to globally enable IEEE 802.1X authentication on the switch. Use the no form of this command to disable IEEE 802.1X function.

```
dot1x system-auth-control
no dot1x system-auth-control
```

**Parameters** None.

**Default** 802.1X is disabled globally by default.

**Command Mode** Global Configuration Mode.

**Command Default Level** Level: 8

**Usage Guideline** Use this command to enable 802.1X authentication globally.

**Example** This example shows how to enable IEEE 802.1X authentication on the switch.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#dot1x system-auth-control
DXS-3600-32S(config)#
```

## 2-11 dot1x system-max-user

This command is used to configure the maximum number of users that can be learned via 802.1X authentication. Use the no form of this command to reset to the defaulting settings.

```
dot1x system-max-user <int 1-4096>
no dot1x system-max-user
```

### Parameters

<i>&lt;int 1-4096&gt;</i>	Specifies the maximum number of users.
---------------------------	--

**Default** By default, the maximum number of users that can be learned via 802.1X authentication is 4096.

**Command Mode** Global Configuration Mode.

**Command Default Level** Level: 8

**Usage Guideline** The setting is a global limitation on the maximum number of users that can be learned via 802.1X authentication. In addition to the global limitation, the maximum number of users per port is also limited.

**Example** This example shows how to configure the maximum number of users, that is allowed to be learned via the 802.1X authentication. The maximum number of users allowed is 128.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#dot1x system-max-user 128
DXS-3600-32S(config)#
```

## 2-12 dot1x port-max-user

This command is used to configure the maximum number of users that can be learned via 802.1X authentication on a specific port. Use the no form of this command to reset to the defaulting settings.

```
dot1x port-max-user <int 1-4096>
no dot1x port-max-user
```

### Parameters

<int 1-4096>	Specifies the maximum number of users on a port.
--------------	--

<b>Default</b>	By default, the maximum number of users that can be learned via 802.1X authentication on a port is 16.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	The setting is an interface limitation on the maximum number of users that can be learned via 802.1X authentication. In addition to the interface limitation, the global maximum number of users is also limited.

**Example** This example shows how to configure the maximum numbers of users allowed on port 1. The maximum number of users allowed is 32.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#dot1x port-max-user 32
DXS-3600-32S(config-if)#
```

## 2-13 dot1x system-fwd-pdu

This command is used to globally control the forwarding of EAPOL PDUs. Use the no form of this command to reset to the defaulting settings.

```
dot1x system-fwd-pdu
no dot1x system-fwd-pdu
```

<b>Parameters</b>	None.
<b>Default</b>	802.1X can not forward EAPOL PDUs by default.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	When 802.1X functionality is disabled globally or for a port, and if 802.1X is set to forward EAPOL PDUs both globally and for the port, a received EAPOL packet on the port will be flooded in the same VLAN to those ports which have 802.1X forwarding EAPOL PDUs enabled and 802.1X is disabled (globally or just for the port). 802.1X can not forward EAPOL PDUs by default.

**Example** This example shows how to enable the forwarding of EAPOL PDUs, globally, on the switch.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#dot1x system-fwd-pdu
DXS-3600-32S(config)#
```

## 2-14 dot1x port-fwd-pdu

This command used to control the forwarding of EAPOL PDUs on specific ports. Use the no form of this command to reset to the defaulting settings.

```
dot1x port-fwd-pdu
no dot1x port-fwd-pdu
```

<b>Parameters</b>	None.
<b>Default</b>	802.1X can not forward EAPOL PDUs on all ports by default.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	This is a per-port setting to control the forwarding of EAPOL PDUs. When 802.1X functionality is disabled globally or for a port, and if 802.1X is set to forward EAPOL PDUs both globally and for the port, a received EAPOL packet on the port will be flooded in the same VLAN to those ports which have 802.1X forwarding EAPOL PDUs and 802.1X is disabled (globally or just for the port). 802.1X can not forward EAPOL PDUs on all ports by default.

**Example** This example shows how to enable the forwarding of EAPOL PDUs on port 1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#dot1x system-fwd-pdu
DXS-3600-32S(config)#end

DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#no dot1x pae
DXS-3600-32S(config-if)#dot1x port-fwd-pdu
DXS-3600-32S(config-if)#
```

## 2-15 show dot1x

This command is used to display the IEEE 802.1X global configuration, interface configuration, authentication state, statistics, diagnostics, and session statistics.

```
show dot1x [[interface INTERFACE-ID] {auth-configuration | auth-state | statistics | diagnostics | session-
statistics}]
```

### Parameters

<b>interface</b> <i>INTERFACE-ID</i>	(Optional) Specifies a port to display authentication state, configuration, statistics, diagnostics, or session statistics.
<b>auth-configuration</b>	Displays the IEEE 802.1X interface configuration.
<b>auth-state</b>	Displays the IEEE 802.1X authentication state.
<b>statistics</b>	Displays the IEEE 802.1X information about the authenticator statistics
<b>diagnostics</b>	Displays the IEEE 802.1X information about the authenticator diagnostics.
<b>session-statistics</b>	Displays the IEEE 802.1X information about the authenticator session statistics.

<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	Use this command display the IEEE 802.1X global configuration, interface configuration, authentication state, statistics, diagnostics, and session statistics. When no interface is specified, information about all interfaces will be displayed.

**Example** This example shows how to display the 802.1X global configuration.

```
DXS-3600-32S#show dot1x
```

```
802.1X           : Disabled
Forward EAPOL PDU : Disabled
Max User        : 4096
```

```
DXS-3600-32S#
```

**Example** This example shows how to display the 802.1X configuration for the interface TenGigabitEthernet1/0/1.

```
DXS-3600-32S#show dot1x interface tenGigabitEthernet 1/0/1 auth-configuration
```

```
Interface       : TenGigabitEthernet1/0/1
Capability      : None
AdminCrlDir    : Both
OperCrlDir     : Both
Port Control   : Auto
QuietPeriod    : 60    sec
TxPeriod       : 30    sec
SuppTimeout    : 30    sec
ServerTimeout  : 30    sec
MaxReq         : 2     times
ReAuthPeriod   : 3600  sec
ReAuthenticate : Disabled
Forward EAPOL PDU On Port : Disabled
Max User On Port : 16
```

```
DXS-3600-32S#
```

**Example** This example shows how to display the 802.1X authentication state.

```
DXS-3600-32S#show dot1x auth-state
```

```
Status: A - Authorized; U - Unauthorized; (P) : Port-Based 802.1X;Pri:Priority
Interface      MAC Address      Auth PAE State      Backend State  Status  VID  Pri
-----
TenGigabitEthernet1/0/1 00-00-00-00-00-01 10  Authenticated  Idle        A    4004 3
TenGigabitEthernet1/0/1 00-00-00-00-00-02 10  Authenticated  Idle        A    1234 -
TenGigabitEthernet1/0/1 00-00-00-00-00-04 30  Authenticating Response  U    -    -
TenGigabitEthernet1/0/2 -                (P) - Authenticating Request  U    -    -
TenGigabitEthernet1/0/3 -                (P) - Connecting      Idle        U    -    -
TenGigabitEthernet1/0/14 -                (P) - Held            Fail        U    -    -

Total Authenticating Hosts :2
Total Authenticated Hosts  :2
```

```
DXS-3600-32S#
```

**Example**

This example shows how to display the 802.1X statistics for the interface TenGigabitEthernet1/0/1.

```
DXS-3600-32S#show dot1x interface tenGigabitEthernet 1/0/1 statistics
```

```
MAC Address : 00-00-00-00-00-02
Interface   : TenGigabitEthernet1/0/1

EAPOLFramesRx           0
EAPOLFramesTx           6
EAPOLStartFramesRx      0
EAPOLReqIdFramesTx      6
EAPOLLogoffFramesRx     0
EAPOLReqFramesTx        0
EAPOLRespIdFramesRx     0
EAPOLRespFramesRx       0
InvalidEAPOLFramesRx    0
EapLengthErrorFramesRx  0
LastEAPOLFrameVersion   0
LastEAPOLFrameSource    00-00-00-00-00-03
```

```
DXS-3600-32S#
```

**Example**

This example shows how to display the 802.1X diagnostics for the interface TenGigabitEthernet1/0/1.

```
DXS-3600-32S#show dot1x interface tenGigabitEthernet 1/0/1 diagnostics
```

```
MAC Address : 00-00-00-00-00-02
Interface   : TenGigabitEthernet1/0/1

EntersConnecting           20
EapLogoffsWhileConnecting  0
EntersAuthenticating      0
SuccessWhileAuthenticating 0
TimeoutsWhileAuthenticating 0
FailWhileAuthenticating   0
ReauthsWhileAuthenticating 0
EapStartsWhileAuthenticating 0
EapLogoffWhileAuthenticating 0
ReauthsWhileAuthenticated 0
EapStartsWhileAuthenticated 0
EapLogoffWhileAuthenticated 0
BackendResponses           0
BackendAccessChallenges    0
BackendOtherRequestsToSupplicant 0
BackendNonNakResponsesFromSupplicant 0
BackendAuthSuccesses       0
BackendAuthFails           0
```

```
DXS-3600-32S#
```

**Example**

This example shows how to display the 802.1X session statistics for the interface TenGigabitEthernet1/0/1.

```
DXS-3600-32S#show dot1x interface tenGigabitEthernet 1/0/1 session-statistics
```

```
MAC Address : 00-00-00-00-00-02
```

```
Interface   : TenGigabitEthernet1/0/1
```

```
SessionOctetsRx           0
SessionOctetsTx           0
SessionFramesRx           0
SessionFramesTx           0
SessionId                  ether1_1-1
SessionAuthenticMethod    Remote Authentication Server
SessionTime                3
SessionTerminateCause     NotTerminatedYet
SessionUserName            user_test
```

```
DXS-3600-32S#
```



# Access Control List (ACL) Commands

Throughout this chapter, we'll refer to two abbreviates called:

**ACL** - Access Control List.

**ACE** - Access Control Entry

## 3-1 ip access-list standard

This command is used to create or modify a standard IP ACL. This command will enter into the standard IP access-list configuration mode. Use the no command to remove a standard IP access-list.

**ip access-list standard** *{[id | name]}*

**no ip access-list standard** *{id | name}*

### Parameters

<i>id</i>	Enter the ID of standard IP ACL here. This value must be between 1 and 1999.
<i>name</i>	The name of the standard IP access-list to be configured. The name can be up to 32 characters.

<b>Default</b>	None.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	<p>Standard IP ACL only filters the IPv4 packet.</p> <p>The name must be unique among all (including MAC, IP, IPv6 or Expert) access-lists and the first character of name must be a letter.</p> <p>When creating an ACL, through assigning a name, an ID will be assigned automatically. The ID assignment rule will start from the maximum ID of 1999 and decrease 1 per new ACL.</p> <p>When creating an ACL through assigning an ID, a name will be assigned automatically. The name assignment rule is 'std-ip' + "-" + ID. If this name conflicts with the name of an existing ACL, then it will be renamed based on the following rule: 'std-ip' + "-" + ID + "alt".</p>

**Example** This example shows how to create a standard ACL.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip access-list standard Std-ip
DXS-3600-32S(config-std-nacl)#end
DXS-3600-32S#show access-list

Standard IP access list 1999 Std-ip
DXS-3600-32S#
```

## 3-2 permit | deny (ip standard access-list)

Use the **permit** command to add a permit entry. Use the **deny** command to add a deny entry. Use the no command to remove an entry.

**[sn] {permit | deny} {source source-wildcard | host source | any}**

**no sn**

**Parameters**

<i>sn</i>	(Optional) Specifies the ACE sequence number used. This number must be between 1 and 65535.
<i>source source-wildcard</i>	Specifies the source IP address. Masks are used with IP addresses in IP ACLs to specify what should be permitted and denied. Masks, in order to configure IP addresses on interfaces, start with 255 and have the large values on the left side. For example, IP address 209.165.202.129 with a 255.255.255.224 mask. Masks for IP ACLs are the reverse, for example, mask 0.0.0.255. This is sometimes called an inverse mask or a wildcard mask. When the value of the mask is broken down into binary (0s and 1s), the results determine which address bits are to be considered in processing the traffic. A 0 indicates that the address bits must be considered (exact match); a 1 in the mask is not considered.
<b>host</b> <i>source</i>	Specifies a specific source IP address.
<b>any</b>	Means any source IP address.

**Default** None.

**Command Mode** Standard IP Access-list Configuration Mode.

**Command Default Level** Level: 12

**Usage Guideline** A sequence number will be assigned automatically if the user does not assign it manually. The automatically assign sequence number starts from 10, and increase 10 per new entry. The start sequence number and sequence increment of the IP ACL can be configured manually.

**Example** This example shows how to create a standard IP ACL, named Std-ip. This entry will permit packets to the source network 10.20.0.0/16.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip access-list standard Std-acl
DXS-3600-32S(config-std-nacl)#permit 10.20.0.0 0.0.255.255
DXS-3600-32S(config-std-nacl)#end
DXS-3600-32S#show access-list

Standard IP access list 1998 Std-acl
  10 permit 10.20.0.0 0.0.255.255
Standard IP access list 1999 Std-ip
DXS-3600-32S#
```

**3-3 ip access-list extended**

This command is used to create or modify an extended IP ACL. This command will enter into the extended IP access-list configuration mode. Use the no command to remove an extended IP access-list.

```
ip access-list extended {[id | name]}
no ip access-list extended {id | name}
```

**Parameters**

<i>id</i>	Specifies the ID number of the extended IP ACL. This value must be between 2000 and 3999.
<i>name</i>	Specifies the name of the extended IP access-list to be configured. The name can be up to 32 characters.

**Default** None.

**Command Mode** Global Configuration Mode.

**Command Default Level** Level: 12

**Usage Guideline**

Extended IP ACL only filters IPv4 packets.

The name must be unique among all (including MAC, IP, IPv6 or Expert) access-lists and the first character of the name must be a letter.

When creating an ACL through assigning a name, an ID will be assigned automatically. The ID assignment rule will start from the maximum ID of 3999 and decrease 1 per new ACL.

When creating an ACL through assigning an ID, a name will be assigned automatically. The name assignment rule is 'ext-ip' + "-" + ID. If this name conflicts with the name of an existing ACL, then it will be renamed based on the following rule: 'ext-ip' + "-" + ID + "alt".

**Example**

This example shows how to create an extended ACL.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip access-list extended Ext-ip
DXS-3600-32S(config-ext-nacl)#end
DXS-3600-32S#show access-list
```

```
Standard IP access list 1998 Std-acl
  10 permit 10.20.0.0 0.0.255.255
Standard IP access list 1999 Std-ip
Extended IP access list 3999 Ext-ip
DXS-3600-32S#
```

**3-4 permit | deny (ip extended access-list)**

Use the **permit** command to add a permit entry. Use the **deny** command to add a deny entry. Use the **no** command to remove a specific entry.

**Extended IP ACL:**

```
[sn] {permit | deny} protocol {source source-wildcard | host source | any} {destination destination-wildcard | host destination | any} [precedence precedence] [tos tos] [fragments] [time-range time-range-name]
```

**Extended IP ACLs of some important protocols:**

```
[sn] {permit | deny} tcp {source source-wildcard | host source | any} [operator port] {destination destination-wildcard | host destination | any} [operator port] [tcp-flag] [precedence precedence] [tos tos] [fragments] [time-range time-range-name]
```

```
[sn] {permit | deny} udp {source source-wildcard | host source | any} [operator port] {destination destination-wildcard | host destination | any} [operator port] [precedence precedence] [tos tos] [fragments] [time-range time-range-name]
```

```
[sn] {permit | deny} icmp {source source-wildcard | host source | any} {destination destination-wildcard | host destination | any} [{icmp-type [icmp-code] | icmp-message}] [precedence precedence] [tos tos] [fragments] [time-range time-range-name]
```

```
no sn
```

**Parameters**

<i>sn</i>	(Optional) Specifies the ACE sequence number used. This number must be between 1 and 65535.
<i>protocol</i>	Specifies the name or number of an IP protocol: 'eigrp', 'esp', 'gre', 'igmp', 'ip', 'ipinip', 'ospf', 'pcp', 'pim', 'tcp', 'udp', 'icmp' or an integer in the range 0 to 255 representing an IP protocol number. To match any Internet protocol. Additional specific parameters for 'tcp', 'udp', and 'icmp'. The 'ip' means any IP Protocol.
<i>source</i>	Specifies the source IP address.
<i>source-wildcard</i>	Applies wildcard bits to the source.
<b>host source</b>	Specifies a specific source IP address.
<b>any</b>	Means any source or destination IP address.

<i>destination</i>	Specifies the destination IP address.
<i>destination-wildcard</i>	Applies wildcard bits to the destination.
<b>host destination</b>	Specifies a specific destination IP address.
<i>operator</i>	(Optional) Possible operators include 'eq' (equal), 'gt' (greater than), 'lt' (less than), 'neq' (not equal), and 'range' (inclusive range). A range needs two port numbers, while other operators only need one port number.
<i>port</i>	Specifies the Layer 4 port number as a decimal number (from 0 to 65535) or the name of a Layer 4 port. <b>TCP ports used:</b> 'bgp', 'chargen', 'daytime', 'discard', 'domain', 'echo', 'rexec', 'finger', 'ftp', 'ftp-data', 'gopher', 'hostname', 'ident', 'irc', 'klogin', 'kshell', 'login', 'lpd', 'nntp', 'snpp', 'pop2', 'pop3', 'smtp', 'sunrpc', 'shell', 'tacacs', 'telnet', 'time', 'uucp', 'whois', 'http'. <b>UDP ports used:</b> 'biff', 'bootpc', 'bootps', 'discard', 'irc', 'domain', 'echo', 'isakmp', 'mobile-ip', 'nameserver', 'netbios-dgm', 'netbios-ns', 'netbios-ss', 'nat-t', 'ntp', 'snpp', 'rip', 'snmp', 'snmptrap', 'sunrpc', 'syslog', 'tacacs', 'talk', 'tftp', 'time', 'who', 'xdmcp'.
<b>precedence precedence</b>	(Optional) Packets can be filtered by precedence level, as specified by a number from 0 to 7 or by name: routine (0), priority (1), immediate (2), flash (3), flash-override (4), critical (5), internet (6), network (7).
<b>tos tos</b>	(Optional) Packets can be filtered by type of service level, as specified by a number from 0 to 15 or by name: normal (0), min-monetary-cost(1), max-reliability (2), max-throughput (4), min-delay (8).
<i>fragments</i>	(Optional) Packet fragment filtering.
<b>time-range time-range-name</b>	(Optional) Specifies the name of time-period profile associated with the access-list delineating its activation period.
<i>tcp-flag</i>	(Optional) Specifies the TCP flag fields. The specified TCP header bits are: ack (acknowledge), fin (finish), psh (push), rst (reset), syn (synchronize), or urg (urgent).
<i>icmp-type</i>	(Optional) Specifies the ICMP message type. The valid number for the message type is from 0 to 255.
<i>icmp-code</i>	(Optional) Specifies the ICMP message code. The valid number for the message code is from 0 to 255.
<i>icmp-message</i>	(Optional) Specifies the ICMP message type name or the ICMP message type and code by name. Code names that can be used are 'administratively-prohibited', 'alternate-address', 'conversion-error', 'host-prohibited', 'net-prohibited', 'echo', 'echo-reply', 'pointer-indicates-error', 'host-isolated', 'host-precedence-violation', 'host-redirect', 'host-tos-redirect', 'host-tos-unreachable', 'host-unknown', 'host-unreachable', 'information-reply', 'information-request', 'mask-reply', 'mask-request', 'mobile-redirect', 'net-redirect', 'net-tos-redirect', 'net-tos-unreachable', 'net-unreachable', 'net-unknown', 'bad-length', 'option-missing', 'packet-fragment', 'parameter-problem', 'port-unreachable', 'precedence-cutoff', 'protocol-unreachable', 'reassembly-timeout', 'redirect-message', 'router-advertisement', 'router-solicitation', 'source-quench', 'source-route-failed', 'time-exceeded', 'timestamp-reply', 'timestamp-request', 'traceroute', 'ttl-expired', 'unreachable'.

<b>Default</b>	None.
<b>Command Mode</b>	Extended IP Access-list Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	A sequence number will be assigned automatically if the user did not assign it manually. The automatic assign sequence number start from 10 and increases by 10 per new entry. The start sequence number and sequence increment of IP ACL can be configured manually.

**Example**

This example shows how to use the extended IP ACL. The purpose is to deny Telnet access from the host, with the IP address 192.168.4.12, to any host in the network 192.168.1.0 and to permit any others.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip access-list extended Ext-ip
DXS-3600-32S(config-ext-nacl)#deny tcp host 192.168.4.12 192.168.1.0 0.0.255.255 eq telnet
DXS-3600-32S(config-ext-nacl)#permit ip any any
DXS-3600-32S(config-ext-nacl)#end
DXS-3600-32S#show access-list

Extended IP access list 3999 Ext-ip
  10 deny tcp host 192.168.4.12 192.168.1.0 0.0.255.255 eq telnet
  20 permit ip any any
DXS-3600-32S#
```

**3-5 ipv6 access-list**

This command is used to create or modify an IPv6 ACL. This command will enter into the IPv6 access-list configuration mode. Use the no command to remove an IPv6 access-list.

```
ipv6 access-list {name}
no ipv6 access-list {name}
```

**Parameters**

<i>name</i>	Specifies the name of the IP access-list to be configured. The name can be up to 32 characters long.
-------------	--

<b>Default</b>	None.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	Extended IPv6 ACL only filters the IPv6 packet. The name must be unique among all (including MAC, IP, IPv6 or Expert) access-lists and the first character of name must be a letter.

**Example**

This example shows how to create an IPv6 ACL:

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ipv6 access-list ext_ipv6
DXS-3600-32S(config-ipv6-nacl)#end
DXS-3600-32S#show access-list

Extended IP access list 3999 Ext-ip
  10 deny tcp host 192.168.4.12 192.168.1.0 0.0.0.255 eq telnet
  20 permit ip any any
Extended IPv6 access list ext_ipv6
DXS-3600-32S#
```

**3-6 permit | deny (ipv6 access-list)**

Use the **permit** command to add a permit entry. Use the **deny** command to add a deny entry. Use the no command to remove an entry.

**Extended IPv6 ACL:**

```
[sn] {permit | deny} protocol {source-ipv6-prefix/prefix-length | host source-ipv6-address | any} {destination-ipv6-prefix/prefix-length | host destination-ipv6-address | any} [dscp dscp] [flow-label flow-label] [fragments] [time-range time-range-name]
```

**Extended IPv6 ACLs of some important protocols:**

```
[sn] {permit | deny} tcp {source-ipv6-prefix/prefix-length | host source-ipv6-address | any} [operator port]
    {destination-ipv6-prefix/prefix-length | host destination-ipv6-address | any} [operator port] [tcp-flag] [dscp dscp]
    [flow-label flow-label] [fragments] [time-range time-range-name]
[sn] {permit | deny} udp {source-ipv6-prefix/prefix-length | host source-ipv6-address | any} [operator port]
    {destination-ipv6-prefix/prefix-length | host destination-ipv6-address | any} [operator port] [dscp dscp] [flow-
    label flow-label] [fragments] [time-range time-range-name]
[sn] {permit | deny} icmp {source-ipv6-prefix/prefix-length | host source-ipv6-address | any} {destination-ipv6-
    prefix/prefix-length | host destination-ipv6-address | any} [{icmp-type [icmp-code] | icmp-message}] [dscp
    dscp] [flow-label flow-label] [fragments] [time-range time-range-name]
no sn
```

**Parameters**

<i>sn</i>	(Optional) Specifies the ACE sequence number used. This number must be between 1 and 65535.
<i>protocol</i>	Specifies the name or number of an IPv6 protocol used. Protocol names, that can be used are 'esp', 'ipv6', 'pcp', 'sctp', 'tcp', 'udp', 'icmp' or an integer in the range 0 to 255 representing an IP protocol number. Additional specific parameters are used for 'tcp', 'udp', and 'icmp'. The 'ipv6' name means any IPv6 Protocol.
<i>source-ipv6-prefix</i>	Specifies the source IPv6 network address or network type.
<i>destination-ipv6-prefix</i>	Specifies the destination IPv6 network address or network type.
<i>prefix-length</i>	Specifies the prefix mask length.
<i>source-ipv6-address</i>	Specifies the source IPv6 address.
<i>destination-ipv6-address</i>	Specifies the destination IPv6 address.
<b>any</b>	Means any source or destination IPv6 address.
<i>operator</i>	(Optional) Possible operators include 'eq' (equal), 'gt' (greater than), 'lt' (less than), 'neq' (not equal), and 'range' (inclusive range). Note that the range operator needs two port numbers, while other operators only need one port number.
<i>port</i>	Specifies the Layer 4 port number as a decimal number (from 0 to 65535) or the name of a Layer 4 port. <b>TCP port names used:</b> 'bgp', 'chargen', 'daytime', 'discard', 'domain', 'echo', 'rexec', 'finger', 'ftp', 'ftp-data', 'gopher', 'hostname', 'ident', 'irc', 'klogin', 'kshell', 'login', 'lpd', 'nntp', 'snpp', 'pop2', 'pop3', 'smtp', 'sunrpc', 'shell', 'tacacs', 'telnet', 'time', 'uucp', 'whois', 'http'. <b>UDP port names used:</b> 'biff', 'bootpc', 'bootps', 'discard', 'irc', 'domain', 'echo', 'isakmp', 'mobile-ip', 'nameserver', 'netbios-dgm', 'netbios-ns', 'netbios-ss', 'nat-t', 'ntp', 'snpp', 'rip', 'snmp', 'snmptrap', 'sunrpc', 'syslog', 'tacacs', 'talk', 'tftp', 'time', 'who', 'xdmcp'.
<b>dscp</b> <i>dscp</i>	(Optional) Enter the DSCP value to match a differentiated services code point value against the traffic class value in the Traffic Class field of each IPv6 packet header. The acceptable range is from 0 to 255.
<i>fragments</i>	(Optional) Specifies packet fragment filtering.
<b>time-range</b> <i>time-range-name</i>	(Optional) Specifies the name of the time-period profile associated with the access-list delineating its activation period.
<i>tcp-flag</i>	(Optional) Specifies the TCP flag fields. The specified TCP header bits that can be used are 'ack' (acknowledge), 'fin' (finish), 'psh' (push), 'rst' (reset), 'syn' (synchronize), or 'urg' (urgent).
<i>icmp-type</i>	(Optional) Specifies the ICMP message type. The valid number for the message type is from 0 to 255.
<i>icmp-code</i>	(Optional) Specifies the ICMP message code. The valid number for the message code is from 0 to 255

<i>icmp-message</i>	(Optional) Specifies the ICMP message type name or the ICMP message type and code by name. Names that can be used are 'beyond-scope', 'destination-unreachable', 'echo-reply', 'echo-request', 'erroneous_header', 'hop-limit', 'multicast-listener-query', 'multicast-listener-done', 'multicast-listener-report', 'nd-na', 'nd-ns', 'next-header', 'no-admin', 'no-route', 'packet-too-big', 'parameter-option', 'parameter-problem', 'port-unreachable', 'reassembly-timeout', 'redirect', 'renum-command', 'renum-result', 'renum-seq-number', 'router-advertisement', 'router-renumbering', 'router-solicitation', 'time-exceeded', 'unreachable'.
<b>flow-label</b> <i>flow-label</i>	(Optional) Specifies the flow label value used. This value must be between 0 and 1048575.

<b>Default</b>	None.
<b>Command Mode</b>	IPv6 Access-list Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	A sequence number will be assigned automatically if the user did not assign it manually. Automatic assignment of sequence numbers start from 10, and increases by 10 for every new entry.

**Example** This example shows how to use the IPv6 ACL. The purpose is to deny FTP access from the host, with the IPv6 address of 19:18:43::12, to any host in the network 120:16:10::/48 and to permit any others.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip access-list extended ext_ipv6
DXS-3600-32S(config-ext-nacl)#deny tcp host 19:18:43::12 120:16:10::/48 eq ftp
DXS-3600-32S(config-ext-nacl)#permit any any
DXS-3600-32S(config-ext-nacl)#end
DXS-3600-32S#show access-lists

Extended IPv6 access list ext_ipv6
 10 deny tcp host 19:18:43::12 120:16:10::/48 eq ftp
 20 permit any any
DXS-3600-32S#
```

### 3-7 mac access-list

This command is used to create or modify an extended MAC ACL. This command will enter into the extended MAC access-list configuration mode. Use the no command to remove an extended MAC access-list.

```
mac access-list extended {[id | name]}
no mac access-list extended {id | name}
```

#### Parameters

<i>id</i>	Specifies the ID number of the extended MAC ACL. This value must be between 6000 and 7999.
<i>name</i>	Specifies the name of the extended MAC ACL to be configured. The name can be up to 32 characters long.

<b>Default</b>	None.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 12

**Usage Guideline**

Extended MAC ACL only filters the Non-IP packet. The name must be unique among all (including MAC, IP, IPv6 or Expert) access-lists and the first character of name must be a letter.

When creating an ACL through the assignment of a name, an ID will be assigned automatically. The ID assignment rule will start from the maximum ID of 7999 and decrease by 1 for every new ACL created.

When creating an ACL through the assignment of an ID, a name will be assigned automatically. The name assignment rule is 'ext-mac' + "-" + ID. If this name conflicts with the name of an existing ACL, then it will be renamed based on the following rule: 'ext-mac' + "-" + ID + "alt".

**Example**

This example shows how to create an extended MAC ACL.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#mac access-list extended 6001
DXS-3600-32S(config-mac-nacl)#end
DXS-3600-32S#show access-list

Extended IP access list 3999 ext_ipv6
  10 permit ip any any
Extended MAC access list 6001 ext-mac-6001
DXS-3600-32S#
```

**3-8 permit | deny (mac access-list)**

Use the **permit** command to add a permit entry. Use the **deny** command to add a deny entry. Use the **no** command to remove an entry.

```
[sn] {permit | deny} {source-mac-address mask | host source-mac-address | any} {destination-mac-address mask
| host destination-mac-address | any} [ethernet-type] [cos out [inner in]]
no sn
```

**Parameters**

<i>sn</i>	(Optional) Specifies the ACE sequence number. This number must be between 1 and 65535.
<i>source-mac-address</i>	Specifies the source MAC address.
<i>destination-mac-address</i>	Specifies the destination MAC address.
<i>mask</i>	Specifies the MAC address mask.
<b>any</b>	Means any source or destination MAC address.
<i>ethernet-type</i>	(Optional) Specifies the Ethernet type as a pair of hexadecimal numbers and the mask (from 0x0 to 0xFFFF) or the name of the Ethernet type. Names that can be used are 'arp', 'aarp', 'appletalk', 'decnet-iv', 'etype-6000', 'etype-8042', 'lat', 'lavc-sca', 'mop-console', 'mop-dump', 'vines-echo', 'vines-ip', 'xns-idp'.
<b>cos out</b>	Specifies the out priority value used. This value must be between 0 and 7.
<b>inner in</b>	(Optional) Specifies the inner priority value used. This value must be between 0 and 7.

**Default**

None.

**Command Mode**

Extended MAC Access-list Configuration Mode.

**Command Default Level**

Level: 12

**Usage Guideline**

A sequence number will be assigned automatically if the user did not assign it manually. Automatic assignment of sequence numbers will start from 10 and increase by 10 for every new entry created.



**Example**

This example shows how to use the extended MAC ACL. The purpose is to deny a host, with the MAC address of 0013.0049.8272, to send Ethernet frames of the type 'apply'.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#mac access-list extended 6001
DXS-3600-32S(config-mac-nacl)#25 deny host 0013.0049.8272 any aarp
DXS-3600-32S(config-mac-nacl)#end
DXS-3600-32S#show access-list

Extended IP access list 3999 ext_ipv6
  10 permit ip any any
Extended MAC access list 6001 ext-mac-6001
  25 deny host 00-13-00-49-82-72 any aarp
DXS-3600-32S#
```

**3-9 expert access-list**

This command is used to create or modify an extended expert ACL. This command will enter into the extended expert access-list configuration mode. Use the no command to remove an extended expert access-list.

```
expert access-list extended {[id | name]}
no expert access-list extended {id | name}
```

**Parameters**

<i>id</i>	Specifies the ID number of extended expert ACL. This number must be between 8000 and 9999.
<i>name</i>	Specifies the name of the extended expert ACL to be configured. The name can be up to 32 characters long.

**Default**

None.

**Command Mode**

Global Configuration Mode.

**Command Default Level**

Level: 12

**Usage Guideline**

The name must be unique among all (including MAC, IP, IPv6 or Expert) access-lists and the first character of name must be a letter.

When creating an ACL through the assignment of a name, an ID will be assigned automatically. The ID assign rule states to start from the maximum ID of 9999 and decrease 1 for every new ACL created.

When creating an ACL through the assignment of an ID, a name will be assigned automatically. The name assign rule is 'ext-expert' + "-" + ID. If this name conflicts with the name of an existing ACL, then it will be renamed based on the following rule: 'ext-expert' + "-" + ID + "alt"

**Example**

This example shows how to create an extended expert ACL.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#expert access-list extended exp_acl
DXS-3600-32S(config-exp-nacl)#end
DXS-3600-32S#show access-list

Extended IP access list 3999 ext_ipv6
  10 permit ip any any
Extended MAC access list 6001 ext-mac-6001
  25 deny host 00-13-00-49-82-72 any aarp
Extended EXPERT access list 9999 exp_acl
DXS-3600-32S#
```

### 3-10 permit | deny (expert access-list)

Use the **permit** command to add a permit entry. Use the **deny** command to add a deny entry. Use the **no** command to remove an entry.

#### Extended expert ACL:

```
[sn] {permit | deny} [ethernet-type] [[cos out [inner in]] | [vlan out [inner in]]] {source source-wildcard | host source | any} {source-mac-address mask | host source-mac-address | any} {destination destination-wildcard | host destination | any} {destination-mac-address mask | host destination-mac-address | any} [time-range time-range-name]
[sn] {permit | deny} protocol [vlan out [inner in]] {source source-wildcard | host source | any} {source-mac-address mask | host source-mac-address | any} {destination destination-wildcard | host destination | any} {destination-mac-address mask | host destination-mac-address | any} [precedence precedence] [tos tos] [fragments] [time-range time-range-name]
```

#### Extended expert ACLs of some important protocols:

```
[sn] {permit | deny} tcp [vlan out [inner in]] {source source-wildcard | host source | any} {source-mac-address mask | host source-mac-address | any} [operator port] {destination destination-wildcard | host destination | any} {destination-mac-address mask | host destination-mac-address | any} [operator port] [precedence precedence] [tos tos] [fragments] [time-range time-range-name] [tcp-flag]
[sn] {permit | deny} udp [vlan out [inner in]] {source source-wildcard | host source | any} {source-mac-address mask | host source-mac-address | any} [operator port] {destination destination-wildcard | host destination | any} {destination-mac-address mask | host destination-mac-address | any} [operator port] [precedence precedence] [tos tos] [fragments] [time-range time-range-name]
[sn] {permit | deny} icmp [vlan out [inner in]] {source source-wildcard | host source | any} {source-mac-address mask | host source-mac-address | any} {destination destination-wildcard | host destination | any} {destination-mac-address mask | host destination-mac-address | any} [icmp-type] [[icmp-type [icmp-code]] | [icmp-message]] [precedence precedence] [tos tos] [fragments] [time-range time-range-name]
```

no sn

#### Parameters

sn	(Optional) Specifies the ACE sequence number. This number must be between 1 and 65535.
source	Specifies the source IP address.
source-wildcard	Applies wildcard bits to the source.
host source	Specifies a specific source IP address.
any	Means any source or destination IP or MAC address.
destination	Specifies the destination IP address.
destination-wildcard	Applies wildcard bits to the destination.
host destination	Specifies a specific destination IP address.
source-mac-address	Specifies the source MAC address.
destination-mac-address	Specifies the destination MAC address.
mask	Specifies the MAC address mask.
vlan out	(Optional) Specifies the outer VID used. This value must be between 1 and 4094.
vlan inner in	(Optional) Specifies the inner VID used. This value must be between 1 and 4094.
cos out	(Optional) Specifies the outer priority value. This value must be between 0 and 7.
cos inner in	(Optional) Specifies the inner priority value. This value must be between 0 and 7.
ethernet-type	(Optional) Specifies the Ethernet type as a pair of hexadecimal numbers and mask (from 0x0 to 0xFFFF) or the name of an Ethernet type. Names that can be used are 'arp', 'aarp', 'appletalk', 'decnet-iv', 'etype-6000', 'etype-8042', 'lat', 'lavc-sca', 'mop-console', 'mop-dump', 'vines-echo', 'vines-ip', 'xns-idp'.

<i>protocol</i>	Specifies the name or number of an IP protocol used. Names that can be used are 'eigrp', 'esp', 'gre', 'igmp', 'ip', 'ipinip', 'ospf', 'pcp', 'pim', 'tcp', 'udp', 'icmp' or an integer in the range 0 to 255 representing an IP protocol number. This field is used to match any Internet protocol. There are additional specific parameters for 'tcp', 'udp', and 'icmp'. The 'ip' means any IP Protocol.
<i>operator</i>	(Optional) Specifies the operator used. Possible operators include 'eq' (equal), 'gt' (greater than), 'lt' (less than), 'neq' (not equal), and 'range' (inclusive range). A range needs two port numbers, while other operators only need one port number.
<i>port</i>	Specifies the Layer 4 port number as a decimal number (from 0 to 65535) or the name of a L4 port. <b>TCP port names used:</b> 'bgp', 'chargen', 'daytime', 'discard', 'domain', 'echo', 'rexec', 'finger', 'ftp', 'ftp-data', 'gopher', 'hostname', 'ident', 'irc', 'klogin', 'kshell', 'login', 'lpd', 'nntp', 'snpp', 'pop2', 'pop3', 'smtp', 'sunrpc', 'shell', 'tacacs', 'telnet', 'time', 'uucp', 'whois', 'http'. <b>UDP port names used:</b> 'biff', 'bootpc', 'bootps', 'discard', 'irc', 'domain', 'echo', 'isakmp', 'mobile-ip', 'nameserver', 'netbios-dgm', 'netbios-ns', 'netbios-ss', 'nat-t', 'ntp', 'snpp', 'rip', 'snmp', 'snmptrap', 'sunrpc', 'syslog', 'tacacs', 'talk', 'tftp', 'time', 'who', 'xdmcp'.
<b>precedence</b> <i>precedence</i>	(Optional) Packets can be filtered by their precedence level. This is specified by a number from 0 to 7 or by name. Names that can be used are routine (0), priority (1), immediate (2), flash (3), flash-override (4), critical (5), internet (6), network (7).
<b>tos</b> <i>tos</i>	(Optional) Packets can be filtered by their type of service level. This is specified by a number from 0 to 15 or by name. Names that can be used are normal (0), max-reliability (2), max-throughput (4), min-delay (8), min-monetary-cost (1).
<i>fragments</i>	(Optional) Specifies packet fragment filtering.
<b>time-range</b> <i>time-range-name</i>	(Optional) Specifies the name of the time-period profile associated with the access-list delineating its activation period.
<i>tcp-flag</i>	(Optional) Specifies the TCP flag fields. The specified TCP header bits can be 'ack' (acknowledge), 'fin' (finish), 'psh' (push), 'rst' (reset), 'syn' (synchronize), or 'urg' (urgent).
<i>icmp-type</i>	(Optional) Specifies the ICMP message type. The valid number for the message type is from 0 to 255.
<i>icmp-code</i>	(Optional) Specifies the ICMP message code. The valid number for the message code is from 0 to 255
<i>icmp-message</i>	(Optional) Specifies the ICMP message type name or the ICMP message type and code by name. Names that can be used are 'administratively-prohibited', 'alternate-address', 'conversion-error', 'host-prohibited', 'net-prohibited', 'echo', 'echo-reply', 'pointer-indicates-error', 'host-isolated', 'host-precedence-violation', 'host-redirect', 'host-tos-redirect', 'host-tos-unreachable', 'host-unknown', 'host-unreachable', 'information-reply', 'information-request', 'mask-reply', 'mask-request', 'mobile-redirect', 'net-redirect', 'net-tos-redirect', 'net-tos-unreachable', 'net-unreachable', 'net-unknown', 'bad-length', 'option-missing', 'packet-fragment', 'parameter-problem', 'port-unreachable', 'precedence-cutoff', 'protocol-unreachable', 'reassembly-timeout', 'redirect-message', 'router-advertisement', 'router-solicitation', 'source-quench', 'source-route-failed', 'time-exceeded', 'timestamp-reply', 'timestamp-request', 'traceroute', 'ttl-expired', 'unreachable'.

<b>Default</b>	None.
<b>Command Mode</b>	Extended Expert Access-list Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	A sequence number will be assigned automatically if the user did not assign it manually. The automatic assignment sequence number starts from 10 and increases by 10 for every new entry.

**Example**

This example shows how to use the extended MAC ACL. The purpose is to deny all the TCP packets with, the source IP address 192.168.4.12 and the source MAC address 001300498272.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#expert access-list extended exp_acl
DXS-3600-32S(config-exp-nacl)#deny tcp host 192.168.4.12 host 0013.0049.8272 any any
DXS-3600-32S(config-exp-nacl)#end
DXS-3600-32S#show access-list

Extended EXPERT access list 9999 exp_acl
  10 deny tcp host 192.168.4.12 host 00-13-00-49-82-72 any any
DXS-3600-32S#
```

**3-11 ip access-list resequence**

This command is used to reassign the sequence step and start sequence number of the IP ACL entries. Use the no command to default configuration.

```
ip access-list resequence {id | name} start-sn inc-sn
no ip access-list resequence {id | name}
```

**Parameters**

<i>id</i>	Specifies the ID number of IP ACL used. This number must be between 1 and 3999.
<i>name</i>	Specifies the name of the IP ACL to be configured. The name can be up to 32 characters long.
<i>start-sn</i>	Specifies the start sequence number.
<i>inc-sn</i>	Specifies the sequence step value.

**Default**

The start sequence number is 10 and the sequence step is 10.

**Command Mode**

Global Configuration Mode.

**Command Default Level**

Level: 12

**Usage Guideline**

Sequence numbers for the entries in an ACL are automatically generated when you create a new ACE but does not assign it manually. You can use the ip access-list resequence global configuration command to edit the start sequence number and sequence step in a IP ACL and change the order to automatically generated ID ACEs and apply them.

**Example**

This example shows how to resequence the entries of an ACL.

```
DXS-3600-32S# show access-lists

Standard IP access list 1999 Std-acl
  10 permit 10.20.0.0 0.0.255.255
  20 deny any
DXS-3600-32S# configure terminal
DXS-3600-32S(config)# ip access-list resequence Std-acl 20 40
DXS-3600-32S(config)# end
DXS-3600-32S# show access-lists

Standard IP access list 1999 Std-acl
  20 permit 10.20.0.0 0.0.255.255
  60 deny any
DXS-3600-32S#
```

### 3-12 list-remark text

This command is used to add remarks for the specified ACL. Use the no command to delete the remarks.

```
list-remark text
no list-remark
```

#### Parameters

<i>text</i>	Specifies the remark information. The information can be up to 256 characters.
-------------	--

<b>Default</b>	None.
<b>Command Mode</b>	Access-list Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	None.

**Example** This example shows how to add a remark in an ACL.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip access-list extended ip-ext-acl
DXS-3600-32S(config-ext-nacl)#list-remark this acl is to filter the host 192.168.4.12
DXS-3600-32S(config-ext-nacl)#end
DXS-3600-32S#show access-list

Extended IP access list 3999 ip-ext-acl
 10 deny tcp host 192.168.4.12
    this acl is to filter the host 192.168.4.12
DXS-3600-32S#
```

### 3-13 show access-lists

This command is used to display all ACLs or the specified ACL.

```
show access-list [id | name]
```

#### Parameters

<i>id</i>	Specifies the ID number of the ACL.
<i>name</i>	Specifies the name of the IP ACL to be configured. The name can be up to 32 characters long.

<b>Default</b>	None.
<b>Command Mode</b>	EXEC Mode.
<b>Command Default Level</b>	Level: 1
<b>Usage Guideline</b>	Use this command to display a specified ACL. If no ID or name is specified, all the ACLs will be displayed.

**Example**

This example shows how to display ACLs.

```

DXS-3600-32S# show access-list sip1

Standard IP access list 1999 sip1
  999 deny 2.2.2.2 0.0.255.255
DXS-3600-32S# show access-list 2001

Extended IP access list 2001 ext-ip-2001
  10 permit tcp host 1.1.1.1 eq echo any gt 6524 ack fin psh rst syn urg precedence internet
  tos 14
DXS-3600-32S# show access-list

Standard IP access list 1 std-ip-1
  999 deny 2.2.2.2 0.0.255.255
Standard IP access list 11 std-ip-11
  10 permit host 1.1.1.1
Standard IP access list 1999 sip1
  999 deny 2.2.2.2 0.0.255.255
Extended IP access list 2000 ext-ip-2000
Extended IP access list 2001 ext-ip-2001
  10 permit tcp host 1.1.1.1 eq echo any gt 6524 ack fin psh rst syn urg precedence internet
  tos 14
Extended IP access list 2011 ext-ip-2011
  10 deny ip 5.5.5.5 0.0.255.255 host 7.7.7.5 fragments precedence internet tos 5
Extended IP access list 2111 ext-ip-2111
  10 deny ip 5.5.5.5 0.0.255.255 host 7.7.7.5 precedence critical tos 6
Extended IP access list 3111 ext-ip-3111alt
Extended IP access list 3994 ext-ip-3111
Extended IPv6 access list ipv6-11
  10 deny tcp host 1:2::3 eq 655 host 2:3:4:: gt 555 ack fin psh
Extended IPv6 access list ipv6-1
  10 deny ipv6 1:2::3/32 host 2:22::
Extended MAC access list 6000 ext-mac-6000
  10 deny any any
Extended MAC access list 7999 mac1
  10 permit any any
Extended EXPERT access list 8000 ext-expert-8000
  10 deny any any host 1.1.1.22 host 00-11-22-33-44-55
Extended EXPERT access list 9999 exp1
  10 deny ip host 1.1.1.1 host 00-01-02-03-04-05 any any
DXS-3600-32S#

```

**3-14 ip access-group**

This command is used to apply a specific IP ACL to an interface. Use the no command to cancel the application.

```

ip access-group {id | name} {in | out}
no ip access-group {id | name} {in | out}

```

**Parameters**

<i>id</i>	Specifies the ID number of IP ACL used. This number must be between 1 and 3999.
<i>name</i>	Specifies the name of the IP ACL to be configured. The name can be up to 32 characters long.
<b>in</b>	Specifies to filter the incoming packets of the interface.
<b>out</b>	Specifies to filter the outgoing packets of the interface.

**Default**

None.

**Command Mode**

Interface Configuration Mode.

**Command Default Level** Level: 12

**Usage Guideline** Only one IP ACL can be attached to the ingress physical ports or egress physical ports.

Applying or binding an ACL to an interface will fail if there is any criteria statements that are not supported. An error message “Do not support fields: ...” will be displayed and all unsupported criteria statements of the ACL type will be listed.

**Example** This example shows how to apply an IP ACL to an interface. The purpose is to apply the ACL ‘ip-ext-acl’ attribute to the tenGigabitEthernet 1/0/5 interface, to filter incoming packets.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/5
DXS-3600-32S(config-if)#ip access-group ip-ext-acl in
DXS-3600-32S(config-if)#end
DXS-3600-32S#show access-group interface tenGigabitEthernet 1/0/5

Interface tenGigabitEthernet 1/0/5:
  ip access-group ip-ext-acl in
DXS-3600-32S#
```

### 3-15 ipv6 traffic-filter

This command is used to apply a specific IPv6 ACL to an interface. Use the no command to cancels the application.

```
ipv6 traffic-filter name {in | out}
no ipv6 traffic-filter name {in | out}
```

#### Parameters

<i>name</i>	Specifies the name of the IPv6 ACL to be configured. The name can be up to 32 characters long.
<b>in</b>	Specifies to filter the incoming packets of the interface.
<b>out</b>	Specifies to filter the outgoing packets of the interface.

**Default** None.

**Command Mode** Interface Configuration Mode.

**Command Default Level** Level: 12

**Usage Guideline** Only one IPv6 ACL can be attached to an ingress physical port or egress physical port.

Applying or binding an ACL to an interface will fail if there is any criteria statements that are not supported. An error message “Do not support fields: ...” will be displayed and all unsupported criteria statements of the ACL type will be listed.

**Example** This example shows how to apply an IPv6 ACL to an interface. The purpose is to apply the ACL ‘ext\_ipv6’ attribute to the tenGigabitEthernet 1/0/4 interface, to filter incoming packets.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/4
DXS-3600-32S(config-if)#ipv6 access-group ext_ipv6 in
DXS-3600-32S(config-if)# end
DXS-3600-32S# show access-group interface tenGigabitEthernet 1/0/4

Interface tenGigabitEthernet 1/0/4:
  ipv6 access-group ext_ipv6 in
DXS-3600-32S#
```

### 3-16 mac access-group

This command is used to apply a specific MAC ACL to an interface. Use the no command to cancel the application.

```
mac access-group {id | name} {in | out}
no mac access-group {id | name} {in | out}
```

#### Parameters

<i>id</i>	Specifies the ID number of the MAC ACL. This number must be between 6000 and 7999.
<i>name</i>	Specifies the name of the MAC ACL to be configured. The name can be up to 32 characters long.
<b>in</b>	Specifies to filter the incoming packets of the interface.
<b>out</b>	Specifies to filter the outgoing packets of the interface.

<b>Default</b>	None.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	<p>Only one MAC ACL can be attached to an ingress physical port or egress physical port.</p> <p>Applying or binding an ACL to an interface will fail if there is any criteria statements that are not supported. An error message “Do not support fields: ...” will be displayed and all unsupported criteria statements of the ACL type will be listed.</p>

**Example** This example shows how to apply a MAC ACL to an interface. The purpose is to apply the ACL 'ext\_mac' attribute to the tenGigabitEthernet 1/0/3 interface, to filter outgoing packets.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface range tenGigabitEthernet 1/0/1-1/0/3
DXS-3600-32S(config-if-range)#mac access-group ext_mac out
DXS-3600-32S(config-if-range)# end
DXS-3600-32S# show access-group interface tenGigabitEthernet 1/0/1-1/0/3

Interface tenGigabitEthernet 1/0/1:
  mac access-group ext_mac out
Interface tenGigabitEthernet 1/0/2:
  mac access-group ext_mac out
Interface tenGigabitEthernet 1/0/3:
  mac access-group ext_mac out
DXS-3600-32S#
```

### 3-17 expert access-group

This command is used to apply a specific expert ACL to an interface. Use the no command to cancel the application.

```
expert access-group {id | name} {in | out}
no expert access-group {id | name} {in | out}
```

#### Parameters

<i>id</i>	Specifies the ID number of the expert ACL. This number must be between 8000 and 9999.
-----------	---



<i>name</i>	Specifies the name of the expert ACL to be configured. The name can be up to 32 characters long.
<b>in</b>	Specifies to filter the incoming packets of the interface.
<b>out</b>	Specifies to filter the outgoing packets of the interface.

<b>Default</b>	None.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	Only one expert ACL can be attached to an ingress physical port or egress physical port.  Applying or binding an ACL to an interface will fail if there is any criteria statements that are not supported. An error message “Do not support fields: ...” will be displayed and all unsupported criteria statements of the ACL type will be listed.

**Example** This example shows how to apply an expert ACL to an interface. The purpose is to apply the ACL 'exp\_acl' attribute to the tenGigabitEthernet 1/0/2 interface, to filter incoming packets.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/2
DXS-3600-32S(config-if)#expert access-group exp_acl in
DXS-3600-32S(config-if)#end
DXS-3600-32S#show access-group interface tenGigabitEthernet 1/0/2

Interface tenGigabitEthernet 1/0/2:
  expert access-group exp_acl in
DXS-3600-32S#
```

### 3-18 show access-group

This command is used to display the ACL configuration of the interface.

**show access-group [interface *interface*]**

#### Parameters

<b>interface <i>interface</i></b>	Specifies the interface ID used.
-----------------------------------	----------------------------------

<b>Default</b>	None.
<b>Command Mode</b>	EXEC Mode.
<b>Command Default Level</b>	Level: 1
<b>Usage Guideline</b>	Displays the ACL applied to the interface. If no interface is specified, the ACLs applied to all the interfaces will be displayed.

**Example** This example shows how to display the ACL, applied to the interface.

```
DXS-3600-32S#show access-group

Interface tenGigabitEthernet 1/0/2:
  ipv6 access-group ipv6-11 in
  ipv6 access-group ipv6-1 out
  expert access-group exp1 in
Interface tenGigabitEthernet 1/0/11:
  ip access-group 11 in
  ip access-group std-ip-1 out
  mac access-group 6005 in
  mac access-group ext-mac-6000 out
DXS-3600-32S#
```

### 3-19 show ip access-group

This command is used to display the IP ACL configuration of the interface.

```
show ip access-group [interface interface]
```

#### Parameters

<b>interface</b> <i>interface</i>	Specifies the interface ID used.
-----------------------------------	----------------------------------

**Default** None.

**Command Mode** EXEC Mode.

**Command Default Level** Level: 1

**Usage Guideline** Displays the IP ACL applied to the interface. If no interface is specified, the IP ACLs applied to all the interfaces will be displayed.

**Example** This example shows how to display the IP ACL, applied to the interface.

```
DXS-3600-32S#show ip access-group

Interface tenGigabitEthernet 1/0/11:
  ip access-group 11 in
  ip access-group std-ip-1 out
DXS-3600-32S#
```

### 3-20 show ipv6 access-group

This command is used to display the IPv6 ACL configuration of the interface.

```
show ipv6 traffic-filter [interface interface]
```

#### Parameters

<b>interface</b> <i>interface</i>	Specifies the interface ID used.
-----------------------------------	----------------------------------

**Default** None.

**Command Mode** EXEC Mode.

**Command Default Level** Level: 1

**Usage Guideline** Displays the IPv6 ACL applied to the interface. If no interface is specified, the IPv6 ACLs applied to all the interfaces will be displayed.

**Example** This example shows how to display the IPv6 ACL, applied to the interface.

```
DXS-3600-32S#show ipv6 traffic-filter

Interface tenGigabitEthernet 1/0/2:
  ipv6 access-group ipv6-11 in
  ipv6 access-group ipv6-1 out
DXS-3600-32S#
```

### 3-21 show mac access-group

This command is used to display the MAC ACL configuration of the interface.

```
show mac access-group [interface interface]
```

#### Parameters

<b>interface</b> <i>interface</i>	Specifies the interface ID used.
-----------------------------------	----------------------------------

<b>Default</b>	None.
<b>Command Mode</b>	EXEC Mode.
<b>Command Default Level</b>	Level: 1
<b>Usage Guideline</b>	Displays the MAC ACL applied to the interface. If no interface is specified, the MAC ACLs applied to all the interfaces will be displayed.

**Example** This example shows how to display the MAC ACL, applied to the interface.

```
DXS-3600-32S#show mac access-group

Interface tenGigabitEthernet 1/0/11:
  mac access-group 6005 in
  mac access-group ext-mac-6000 out
DXS-3600-32S#
```

### 3-22 show expert access-group

This command is used to display the expert ACL configuration of the interface.

```
show expert access-group [interface interface]
```

#### Parameters

<b>interface</b> <i>interface</i>	Specifies the interface ID used.
-----------------------------------	----------------------------------

<b>Default</b>	None.
<b>Command Mode</b>	EXEC Mode.
<b>Command Default Level</b>	Level: 1
<b>Usage Guideline</b>	Displays the expert ACL applied to the interface. If no interface is specified, the expert ACLs applied to all the interfaces will be displayed.

**Example** This example shows how to display the expert ACL, applied to the interface.

```
DXS-3600-32S#show expert access-group
```

```
Interface tenGigabitEthernet 1/0/2:
  expert access-group exp1 in
DXS-3600-32S#
```

### 3-23 vlan access-map

This command is used to create a submap. This command will enter into the access-map configuration mode. The no form of this command deletes the submap.

```
vlan access-map map_name [map_sn]
no vlan access-map map_name [map_sn]
```

#### Parameters

<i>map_name</i>	Specifies the name of the hostmap to be configured. The name can be up to 32 characters long.
<i>map_sn</i>	Specifies the sequence number of the submap.

**Default** None.

**Command Mode** Global Configuration Mode.

**Command Default Level** Level: 12

**Usage Guideline** A sequence number will be assigned automatically if the user did not assign it manually. Automatic assignment of the sequence number starts from 10 and increases by 10 for every new entry.

**Example** This example shows how to create a VLAN access map.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#vlan access-map vlan-map 20
DXS-3600-32S(config-access-map)#
```

### 3-24 match ip / mac address

This command is used to associate an IP ACL or MAC ACL with a specific submap. The no form of this command removes the configuration.

```
match ip address {acl_name | acl_id}+8
no match ip address {acl_name | acl_id}+8
match mac address {acl_name | acl_id}+8
no match mac address {acl_name | acl_id}+8
```

#### Parameters

<i>acl_name</i>	Specifies the name of the ACL to be configured. The name can be up to 32 characters long.
<i>acl_id</i>	Specifies the sequence number of the ACL.
+8	Input parameters can be continuously, but not more than 8 times.

**Default** None.

**Command Mode** Access-map Configuration Mode.

<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	<p>One submap can only be associated with an IP ACL or a MAC ACL. You can not associate a submap with both an IP ACL and a MAC ACL.</p> <p>One submap can only be associated with at most 8 ACLs.</p> <p>One submap can not be associated with a non-existent ACL.</p> <p>One submap can not be associated with an ACL, which is NULL ACL.</p>

**Example** This example shows how to configure matching content in the submap.

```

DXS-3600-32S(config)# vlan access-map vlan-map 20
DXS-3600-32S(config-access-map)# match ip address 10 20 sp1 30 sp2
DXS-3600-32S(config-access-map)# end
DXS-3600-32S# show vlan access-map
VLAN access-map vlan-map 20
  match ip address: 10,20,sp1,30,sp2
  action: forward
DXS-3600-32S# configure terminal
DXS-3600-32S(config)# vlan access-map vlan-map 30
DXS-3600-32S(config-access-map)# match mac address 6710 6720 ext_mac 7760
DXS-3600-32S(config-access-map)# end
DXS-3600-32S# show vlan access-map
VLAN access-map vlan-map 20
  match ip address: 10,20,sp1,30,sp2
  action: forward
VLAN access-map vlan-map 30
  match mac address: 6710,6720,ext_mac,7760
  action: forward
DXS-3600-32S#

```

### 3-25 action

This command is used to set the forwarding, drop, and redirect actions of submaps in the VACL mode. Use the no command to return to the default configuration.

```

action forward
no action forward
action drop
no action drop
action redirect {port_id}
no action redirect {port_id}

```

#### Parameters

<i>port_id</i>	Specifies the redirection port used.
----------------	--------------------------------------

<b>Default</b>	Default action is forward.
<b>Command Mode</b>	Access-map Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	<p>One submap has only one action.</p> <p>The submap action is applied to all the associated ACLs.</p>

**Example** This example shows how to configure the action attribute in the submap.

```
DXS-3600-32S# show vlan access-map
VLAN access-map vlan-map 20
  match mac address: 6710,6720,ext_mac,7760,
  action: forward
DXS-3600-32S# configure terminal
DXS-3600-32S(config)# vlan access-map vlan-map 20
DXS-3600-32S(config-access-map)# action redirect tenGigabitEthernet 1/0/5
DXS-3600-32S(config-access-map)# end
DXS-3600-32S# show vlan access-map
VLAN access-map vlan-map 20
  match mac address: 6710,6720,ext_mac,7760,
  action: redirect tenGigabitEthernet 1/0/5
DXS-3600-32S#
```

### 3-26 vlan filter

This command is used to apply a hostmap in a VLAN. Use the no command to remove a hostmap from a VLAN.

```
vlan filter map_name vlan-list vlan_id
no vlan filter map_name vlan-list vlan_id
```

#### Parameters

<i>map_name</i>	Specifies the name of the hostmap.
<i>vlan_id</i>	Specifies the VLAN ID used.

<b>Default</b>	None.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	One VLAN Access Map can be applied to multiple VLANs. One VLAN can bind with only one VLAN Access Map.

**Example** This example shows how to apply the hostmap 'vlan-map' to VLAN 5.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#vlan filter vlan-map vlan-list 5
DXS-3600-32S(config)#end
DXS-3600-32S#show vlan filter

VLAN Map vlan-map
  Configured on VLANs: 5
DXS-3600-32S#
```

### 3-27 show vlan access-map

This command is used to display the VLAN access-map configuration of the interface.

```
show vlan access-map [map_name]
```

#### Parameters

<i>map_name</i>	Specifies the name of the hostmap to be configured. The name can be up to 32 characters long.
-----------------	---

<b>Default</b>	None.
<b>Command Mode</b>	EXEC Mode.
<b>Command Default Level</b>	Level: 1
<b>Usage Guideline</b>	None.

**Example** This example shows how to display the VLAN access map.

```
DXS-3600-32S#show vlan access-map
VLAN access-map vlan-map 10
  match ip access list: 110,220,stp_ip1,30,stp_ip2,
  action: forward
VLAN access-map vlan-map 20
  match mac access list: 6710,6720,ext_mac,7760,
  action: redirect tenGigabitEthernet 1/0/5
DXS-3600-32S#
```

### 3-28 show vlan filter

This command is used to display the VLAN filter configuration of the interface.

```
show vlan filter [{access_map map_name | vlan vlan_id}]
```

#### Parameters

<b>access_map</b> <i>map_name</i>	Specifies the name of the hostmap to be configured. The name can be up to 32 characters long.
<b>vlan</b> <i>vlan_id</i>	Specifies the VLAN ID used.

<b>Default</b>	None.
<b>Command Mode</b>	EXEC Mode.
<b>Command Default Level</b>	Level: 1
<b>Usage Guideline</b>	None.

**Example** This example shows how to display the VLAN filter.

```
DXS-3600-32S#show vlan filter
VLAN Map aa
  Configured on VLANs: 5-127,221-333
VLAN Map bb
  Configured on VLANs: 1111-1222
DXS-3600-32S#show vlan filter vlan 5
VLAN ID 5
  Binding VLAN Map aa
DXS-3600-32S#
```

# Address Resolution Protocol (ARP) Commands

## 4-1 arp

This command is used to add a permanent IP address and MAC address mapping to the ARP cache table. Use the **'no'** command to remove the IP-MAC address mapping.

```
arp [vrf <string 1-12>] ip-address mac-address
no arp [vrf <string 1-12>] ip-address
```

### Parameters

<b>vrf</b>	Specifies the VRF that the IP reside in. If no VRF name is specified, the global instance will be used.
<i>ip-address</i>	Enter the IP address that corresponds to the MAC address here.
<i>mac-address</i>	Enter the 48-bit data link layer address here.

<b>Default</b>	There is no static ARP entry in the ARP cache table.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	<p>This command adds a static ARP mapping entry to the system. If this dynamic ARP entry already exists, it will be replaced by the static ARP entry.</p> <p>If the new entry contains a different MAC address from the old one, the new entry will cover the old one.</p> <p>Using the <b>'no'</b> command, the user can delete static and dynamic entries however, local entries cannot be removed.</p> <p>Users can verify the settings by entering the <b>show ip arp</b> or <b>show arp</b> command.</p>

**Example** This example shows how to add a static ARP entry into the ARP cache table.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#arp 33.1.1.33 0050.BA00.0736
DXS-3600-32S(config)#
```

**Example** This example shows how to remove a static ARP entry, with the IP address 33.1.1.33, from the ARP cache table.

```
DXS-3600-32S(config)#no arp 33.1.1.33
DXS-3600-32S(config)#
```

## 4-2 arp timeout

This command is used to configure the timeout value for the dynamic ARP mapping record in the ARP cache table. Use the **'no'** command to restore it to the default configuration.

```
arp timeout minutes
no arp timeout
```

### Parameters

<i>minutes</i>	Enter the timeout value used here. This value must be between 0 and 65535 minutes.
----------------	--



<b>Default</b>	The default timeout value is 20 minutes.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	The ARP timeout setting is only applicable to the IP address and the MAC address mapping that are learned dynamically. The shorter the timeout, the truer the mapping table saved in the ARP cache, but the more network bandwidth occupied by the ARP. Hence the advantages and disadvantages should be weighted. Generally it is not necessary to configure the ARP timeout too shorter unless there is a special requirement.

Users can verify the settings by entering the **show arp timeout** command.

**Example** This example shows how to tonfigure the timeout value, for the dynamic ARP mapping record, to 120 minutes.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#arp timeout 120
DXS-3600-32S(config)#
```

**Example** This example shows how to restore the timeout value, for the dynamic ARP mapping record, to 20 minutes.

```
DXS-3600-32S(config)#no arp timeout
DXS-3600-32S(config)#
```

### 4-3 clear arp cache

This command is used to remove one or all dynamic ARP entries from the ARP cache table.

```
clear arp-cache [vrf <string 1-12>] [ip-address] [interface interface-name]
```

#### Parameters

<b>vrf</b>	Specifies the VRF that the IP reside in. If no VRF name is specified, the global instance will be used.
<b>ip-address</b>	(Optional) Enter the IP address of the dynamic ARP entry here.
<b>interface</b> interface-name	(Optional) Specifies the interface from which the dynamic ARP entry was learned.

<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	This command can be used to clear the dynamic ARP entries.  Use the <b>show ip arp</b> command to view the current state of the ARP cache table.

**Example** This example shows how to remove all dynamic ARP entries.

```
DXS-3600-32S#clear arp-cache
DXS-3600-32S#
```

**Example** This example shows how to remove a dynamic ARP entry with the IP address 1.1.1.1

```
DXS-3600-32S#clear arp-cache 1.1.1.1
DXS-3600-32S#
```

**Example** This example shows how to remove dynamic ARP entries from the IP interface **vlan1**.

```
DXS-3600-32S#clear arp-cache interface vlan1
DXS-3600-32S#
```

## 4-4 show arp

This command is used to display the Address Resolution Protocol (ARP) cache table.

```
show arp [vrf <string 1-12>] [ip-address [net-mask] | mac-address | {static | complete}]
```

### Parameters

<b>vrf</b>	Specifies the VRF that the IP reside in. If no VRF name is specified, the global instance will be used.
<i>ip-address</i>	(Optional) Enter the ARP entry of the specified IP address here.
<i>net-mask</i>	(Optional) Enter the ARP entries of the network segment included within the mask.
<i>mac-address</i>	(Optional) Enter the ARP entry of the specified MAC address.
<b>static</b>	(Optional) Specifies to display all the static ARP entries.
<b>complete</b>	(Optional) Specifies to display all the resolved dynamic ARP entries.

**Default** All entries in the ARP cache table will be displayed if no option is specified.

**Command Mode** Privileged Mode.

**Command Default Level** Level: 3

**Usage Guideline** Use this command to display the ARP cache table. Static and complete is mutually exclusive with each other.

**Example** This example shows how to display all the entries in the ARP cache table.

```
DXS-3600-32S#show arp

ARP timeout is 20 minutes.

Interface      IP Address      MAC Address      Type
-----
System         10.0.0.0        FF-FF-FF-FF-FF-FF Local/Broadcast
System         10.90.90.90     00-12-21-12-21-11 Local
System         10.1.1.5        00-12-21-12-21-18 Static
System         10.1.1.8        00-12-21-12-21-48 Static
System         10.1.1.9        00-05-5D-A5-32-3F Dynamic
System         10.255.255.255 FF-FF-FF-FF-FF-FF Local/Broadcast

Total Entries: 6

DXS-3600-32S#
```

**Example**

This example shows how to display the ARP cache table containing the IP address of 10.1.1.9.

```
DXS-3600-32S#show arp 10.1.1.9
```

```
ARP timeout is 20 minutes.
```

Interface	IP Address	MAC Address	Type
System	10.1.1.9	00-05-5D-A5-32-3F	Dynamic

```
Total Entries: 1
```

```
DXS-3600-32S#
```

**Example**

This example shows how to display the ARP cache table containing the netmask 10.1.0.0/255.255.0.0.

```
DXS-3600-32S#show arp 10.1.0.0 255.255.0.0
```

```
ARP timeout is 20 minutes.
```

Interface	IP Address	MAC Address	Type
System	10.1.1.5	00-12-21-12-21-18	Static
System	10.1.1.8	00-12-21-12-21-48	Static
System	10.1.1.9	00-05-5D-A5-32-3F	Dynamic

```
Total Entries: 3
```

```
DXS-3600-32S#
```

**Example**

This example shows how to display the ARP cache table containing static types for the netmask 10.1.0.0/255.255.0.0.

```
DXS-3600-32S#show arp 10.1.0.0 255.255.0.0 static
```

```
ARP timeout is 20 minutes.
```

Interface	IP Address	MAC Address	Type
System	10.1.1.5	00-12-21-12-21-18	Static
System	10.1.1.8	00-12-21-12-21-48	Static

```
Total Entries: 2
```

```
DXS-3600-32S#
```

**Example**

This example shows how to display the ARP cache table containing the MAC address 00:05:5D:A5:32:3F.

```
DXS-3600-32S#show arp 0005.5DA5.323F
```

```
ARP timeout is 20 minutes.
```

Interface	IP Address	MAC Address	Type
System	10.1.1.9	00-05-5D-A5-32-3F	Dynamic

```
Total Entries: 1
```

```
DXS-3600-32S#
```

**Example** This example shows how to display the ARP cache table containing static types.

```
DXS-3600-32S#show arp static
```

```
ARP timeout is 20 minutes.
```

Interface	IP Address	MAC Address	Type
System	10.1.1.5	00-12-21-12-21-18	Static
System	10.1.1.8	00-12-21-12-21-48	Static

```
Total Entries: 2
```

```
DXS-3600-32S#
```

**Example** This example shows how to display the ARP cache table containing all the completed entries.

```
DXS-3600-32S#show arp complete
```

```
ARP timeout is 20 minutes.
```

Interface	IP Address	MAC Address	Type
System	10.1.1.9	00-05-5D-A5-32-3F	Dynamic

```
Total Entries: 1
```

```
DXS-3600-32S#
```

## 4-5 show arp counter

This command is used to display the number of ARP entries in the ARP cache table.

```
show arp counter [vrf <string 1-12>]
```

### Parameters

<b>vrf</b>	Specifies the VRF that the IP reside in. If no VRF name is specified, the global instance will be used.
------------	---

**Default** None.

**Command Mode** Privileged Mode.

**Command Default Level** Level: 3

**Usage Guideline** Use this command to display the number of ARP entries in the ARP cache table.

**Example** This example shows how to display the number of ARP entries in the ARP cache table.

```
DXS-3600-32S#show arp counter
```

```
Total ARP Entry Counter: 3
```

```
DXS-3600-32S#
```

## 4-6 show arp timeout

This command is used to display the aging time of a dynamic ARP entry on the switch.

**show arp timeout**

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 3
<b>Usage Guideline</b>	Use this command to display the aging time of a dynamic ARP entry on the switch.

**Example** This example shows how to display the aging time value of a dynamic ARP entry on the switch.

```
DXS-3600-32S#show arp timeout
ARP timeout is 20 minutes.
DXS-3600-32S#
```

**4-7 show ip arp**

This command is used to display the Address Resolution Protocol (ARP) cache table.

**show ip arp [vrf <string 1-12>]**

**Parameters**

<b>vrf</b>	Specifies the VRF that the IP reside in. If no VRF name is specified, the global instance will be used.
------------	---

<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 3
<b>Usage Guideline</b>	Use this command to display the Address Resolution Protocol (ARP) cache table.

**Example** This example shows how to display the Address Resolution Protocol (ARP) cache table.

```
DXS-3600-32S#show ip arp
ARP timeout is 20 minutes.

Interface      IP Address      MAC Address      Type
-----
System         10.0.0.0        FF-FF-FF-FF-FF-FF Local/Broadcast
System         10.90.90.90     00-12-21-12-21-11 Local
System         10.255.255.255 FF-FF-FF-FF-FF-FF Local/Broadcast

Total Entries: 3
DXS-3600-32S#
```

# Alternate Store and Forward (ASF) Commands

## 5-1 enable asf

This command is used to enable the ASF feature.

**enable asf**

<b>Parameters</b>	None.
<b>Default</b>	Alternate store and forward feature is disabled.
<b>Command Mode</b>	Global Configuration Mode
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	Use this command to enable the alternate store and forward mode.

**Example** This example shows how to enable ASF.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#enable asf
DXS-3600-32S(config)#
```

## 5-2 no asf

This command is used to disable the ASF feature.

**no asf**

<b>Parameters</b>	None.
<b>Default</b>	Alternate store and forward feature is disabled.
<b>Command Mode</b>	Global Configuration Mode
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	Use this command to disable the alternate store and forward mode.

**Example** This example shows how to disable ASF.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#no asf
DXS-3600-32S(config)#
```

## 5-3 show asf

This command is to display the current ASF mode.

**show asf**

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 1
<b>Usage Guideline</b>	Use this command to display the current setting of the alternate store and forward feature.

**Example**

This example shows how to display the current settings for ASF.

```
DXS-3600-32S#show asf
```

```
Alternate Store and Forward: Disabled
```

```
DXS-3600-32S#
```

---

# Authentication, Authorization, and Accounting (AAA) Commands

## 6-1 aaa

This command is used to enable the Authentication, Authorization, and Accounting (AAA) security service. The no form of this command is used to disable the AAA security service.

```
aaa
no aaa
```

<b>Parameters</b>	None.
<b>Default</b>	By default, this feature is disabled.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	Use this command to enable AAA. If AAA is not enabled, none of the AAA commands can be configured.

**Example** This example shows how to enable the AAA security service.

```
DXS-3600-32S#configure terminal
DXS-3600-32S (config)#aaa
DXS-3600-32S (config)#
7      2011-11-14 11:55:14 INFO(6) Authentication Policy is enabled (Module: AAA)
DXS-3600-32S (config)#
```

## 6-2 aaa authentication login

This command is used to enable AAA login authentication and configure the login authentication method list. The no form of this command is used to delete the authentication method list.

```
aaa authentication login {default | list-name} method1 [method2...]
no aaa authentication login {default | list-name}
```

### Parameters

<b>default</b>	When this parameter is used, the following defined authentication method list is used as the default method for Login authentication.
<i>list-name</i>	Name of the user authentication method list. After the user-defined authentication method list created, you can use login authentication line configuration command to apply the login authentication method list to the specified terminal lines.
<i>method</i>	Syntax "{ <b>local</b>   <b>none</b>   <b>group</b> { <b>radius</b>   <b>tacacs+</b>   <i>group_name</i> }}". Up to four methods supported: <b>local</b> - Use the local user name database for authentication. <b>none</b> - By pass authentication. <b>group</b> - Can be followed by radius or tacacs+ or a group_name "group radius" means use all RADIUS servers group "group tacacs+" means use all TACACS+ server group. "group group_name" is the specific group created via aaa group server global configuration command.

<b>Default</b>	None. On the console, login will succeed without any authentication checks if the login authentication method list is not set.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 15



**Usage Guideline**

If the AAA login authentication security service is enabled on the device, users must use AAA for login authentication negotiation. You must use `aaa authentication login` to configure a default or optional method list for login authentication. The next method can be used for authentication only when the current method does not work. You need to apply the configured login authentication method to the terminal line which needs login authentication. Otherwise, the configured login authentication method is invalid.

**Example**

This example shows how to define an AAA login authentication method list, named 'list-1'. In the authentication method list, the RADIUS security server is used first for authentication. If the RADIUS security server does not respond, the local user database is used for authentication. After the login authentication method list has been created, you can use the Login Authentication Line Configuration command to apply this method list to the console, SSH, or other terminals.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#aaa authentication login list-1 group radius local
DXS-3600-32S(config)#
```

**6-3 aaa authentication enable**

This command is used to enable AAA enable authentication and configure the enable authentication method list. The `no` form of this command is used to delete the user authentication method list.

```
aaa authentication enable default method1 [method2...]
no aaa authentication enable default
```

**Parameters**

<b>default</b>	When this parameter is used, the following defined authentication method list is used as the default method for enable authentication.
<i>method</i>	Syntax " <b>{enable   none   group {radius   tacacs+   group_name}}</b> ". Up to four methods supported: <b>enable</b> - Uses the enable password for authentication. <b>none</b> - By pass authentication. <b>group</b> - Can be followed by radius or tacacs+ or a group_name " <b>group radius</b> " means use all RADIUS servers group " <b>group tacacs+</b> " means use all TACACS+ server group. " <b>group group_name</b> " is the specific group created via the ' <b>aaa group server global</b> ' configuration command.

**Default**

None. On the console, the enable password is used if it exists. If no password is set, the process will succeed anyway.

**Command Mode**

Global Configuration Mode.

**Command Default Level**

Level: 15

**Usage Guideline**

If the AAA enable authentication service is enabled on the device, users must use AAA for enable authentication negotiation. You must use `aaa authentication enable` to configure a default or optional method list for enable authentication. The next method can be used for authentication only when the current method does not work. The enable authentication function automatically takes effect after configuring the enable authentication method list.

**Example**

This example shows how to define an AAA enable authentication method list. In the authentication method list, the RADIUS security server is used first for authentication. If the RADIUS security server does not respond, the local user database is used for authentication.

After enabling the authentication method list defined, AAA security services will apply authentication to the user by enabling the privilege password.

```
DXS-3600-32S(config)#aaa
DXS-3600-32S(config)#aaa authentication enable default group radius local
DXS-3600-32S(config)#
```

**6-4 login authentication**

This command is used to apply the login authentication method list to the specified terminal lines. The no form of this command is used to remove the application of login authentication method list.

**login authentication {default | list-name}**  
**no login authentication**

**Parameters**

<b>default</b>	Apply the default Login authentication method list to the terminal line.
<i>list-name</i>	Apply the defined Login authentication method list to the terminal line.

**Default**

Uses the default set with the '**aaa authentication login**' command.

**Command Mode**

Line Configuration Mode.

**Command Default Level**

Level: 15

**Usage Guideline**

Once the default login authentication method list has been configured, it will be applied to all the terminals automatically. If non-default login authentication method list has been applied to the terminal, it will replace the default one. If you attempt to apply the undefined method list, it will prompt a warning message that the login authentication in this line is ineffective till it is defined.

**Example**

This example shows how to define the AAA login authentication method list, named 'list-1'. In the authentication method list, the local user database is used first for authentication. After that, this method list is applied to the console. After applying the login method list, called 'list-1', to the console, a user login from the console will be authentication by the AAA security servers.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#aaa authentication login list-1 local
DXS-3600-32S(config)#line console
DXS-3600-32S(config-line)#login authentication list-1
DXS-3600-32S(config-line)#
```

**6-5 aaa authorization exec**

This command is used to authorize the users logged in the NAS CLI and assign the authority level. The no form of this command is used to disable the aaa authorization exec function.

**aaa authorization exec {default | list-name} method1 [method2...]**  
**no aaa authorization exec {default | list-name}**

**Parameters**

<b>default</b>	When this parameter is used, the following defined method list is used as the default method for Exec authorization.
<i>list-name</i>	Name of the user authorization method list. After the user-defined authorization method list created, you can use <b>authorization exec</b> line configuration command to apply the authorization method list to the specified terminal lines.
<i>method</i>	Syntax " <b>{local   none   group {radius   tacacs+   group_name}}</b> ". Up to four methods supported: <b>local</b> - Use the local user name database for authorization. <b>none</b> - Do not perform authorization. <b>group</b> - Can be followed by radius or tacacs+ or a group_name " <b>group radius</b> " means use all RADIUS servers group " <b>group tacacs+</b> " means use all TACACS+ server group. " <b>group group_name</b> " is the specific group created via aaa group server global configuration command.

<b>Default</b>	The default value is disabled.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	It supports authorization of users logged in the NAS CLI and assignment of CLI authority level (0-15). The aaa authorization exec function is effective on condition that Login authentication function has been enabled. It can not enter the CLI if it fails to enable the aaa authorization exec. You must apply the exec authorization method to the terminal line; otherwise the configured method is ineffective.

<b>Example</b>	This example shows how to use the RADIUS server to authorize EXEC. After the authorization method list, called 'list-1' has been created, you can use the Authorization EXEC Line Configuration command to apply this method list to the console, SSH, or other terminals.
----------------	--

```
DXS-3600-32S#configure terminal
DXS-3600-32S (config)#aaa authorization exec list-1 group radius
DXS-3600-32S (config)#
```

**6-6 aaa authorization console**

This command is used to enable authorization function for users who has logged in the console. The no form of this command is used to disable the authorization function.

```
aaa authorization console
no aaa authorization console
```

<b>Parameters</b>	None.
<b>Default</b>	The default option is disabled.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	It supports to identify the users logged in from the console and from other terminals, configure whether to authorize the users logged in from the console or not. If the command authorization function is disabled on the console, the authorization method list applied to the console line is ineffective.

**Example**

This example shows how to enable the AAA authorization console function. The authorization method list, applied to the console line, via the Authorization EXEC Line Configuration command, will take effect.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#aaa authorization console
DXS-3600-32S(config)#
```

**6-7 authorization exec**

This command is used to authorize the users logged in the NAS CLI and assign the authority level. The no form of this command is used to disable the aaa authorization exec function.

```
authorization exec {default | list-name}
no authorization exec
```

**Parameters**

<b>default</b>	Specifies to use the default method of Exec authorization.
<i>list-name</i>	Specifies to apply a defined method list of Exec authorization.

**Default** The default value is disabled.

**Command Mode** Line Configuration Mode.

**Command Default Level** Level: 15

**Usage Guideline** Once the default exec authorization method list has been configured, it is applied to all terminals automatically. Once the non-default command authorization method list has been configured, it is applied to the line instead of the default method list. If you attempt to apply an undefined method list, a warning message will prompt that the exec authorization in this line is ineffective till the authorization method list is defined.

**Example**

This example shows how to configure the EXEC authorization method list, with the name of 'list-1', that uses the RADIUS server. If the security server does not respond, it will not perform authorization. After the configuration, the authorization command is applied to the console.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#aaa authentication login login-1 group tacacs+ local
DXS-3600-32S(config)#aaa authorization exec list-1 group radius none
DXS-3600-32S(config)#aaa authorization console
DXS-3600-32S(config)#line console
DXS-3600-32S(config-line)#authorization exec list-1
DXS-3600-32S(config-line)#login authentication login-1
DXS-3600-32S(config-line)#exit
DXS-3600-32S(config)#
```

**6-8 aaa accounting exec**

This command is used to account users in order to count the manage user activities. The no form of this command is used to disable the accounting function.

```
aaa accounting exec {default | list-name} start-stop method1 [method2...]
no aaa accounting exec {default | list-name}
```

**Parameters**

<b>default</b>	When this parameter is used, the following defined method list is used as the default method for Exec accounting.
<i>list-name</i>	Name of the Exec accounting method list. After the user-defined accounting method list created, you can use <b>accounting exec</b> line configuration command to apply the accounting method list to the specified terminal lines.
<i>method</i>	Syntax "{ <b>none</b>   <b>group</b> { <b>radius</b>   <i>group_name</i> }}". Up to four methods supported: <b>none</b> - Do not perform accounting. <b>group</b> - Can be followed by radius or a group_name " <b>group radius</b> " means use all RADIUS servers group " <b>group group_name</b> " is the specific group created via aaa group server global configuration command.

<b>Default</b>	The default option is disabled.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	It enables the exec accounting function after enabling the login authentication. After enabling the accounting function, it sends the account start information to the security server when the users log in the NAS CLI, and sends the account stop information to the security server when the users log out. If it does not send the account start information to the security server when a user logs in, it does not send the account stop information to the security server when a user logs out, either. The configured exec accounting method must be applied to the terminal line that needs accounting command; otherwise it is ineffective.

<b>Example</b>	This example shows how to perform accounting, of a managed user's activities, using RADIUS, and sends the accounting messages at the start and the end time of access. After the 'list-1' accounting method list has been created, you can use the Accounting EXEC Line Configuration command to apply this method list to the console, SSH, or to other terminals.
----------------	---

```
DXS-3600-32S#configure terminal
DXS-3600-32S (config)#aaa accounting exec list-1 start-stop group radius
DXS-3600-32S (config)#
```

**6-9 accounting exec**

This command is used to apply the exec accounting method list to the specified terminal lines in the line configuration mode. The no form of this command is used to disable the exec accounting function.

```
accounting exec {default | list-name}
no accounting exec
```

**Parameters**

<b>default</b>	Specifies to use the default method of Exec accounting.
<i>list-name</i>	Specifies to use a defined Exec accounting method list.

<b>Default</b>	By default, this feature is disabled.
<b>Command Mode</b>	Line Configuration Mode.
<b>Command Default Level</b>	Level: 15

**Usage Guideline**

Once the default exec accounting method list has been configured, it is applied to all terminals automatically. Once the non-default exec accounting method list has been configured, it is applied to the line instead of the default method list. If you attempt to apply an undefined method list, a warning message will prompt that the exec accounting in this line is ineffective till the exec accounting command method list is defined.

**Example**

This example shows how to configure the EXEC accounting method list, with the name of 'list-1', that uses the RADIUS server. If the security server does not response, it will not perform accounting. After the configuration, EXEC accounting is applied to the console.

After applying the login method list, 'list-1', to the console, when a user logs in from the console, it sends the account start information to the security server when the user has logged into the NAS's CLI. It also sends the account stop information to the security server when a user logs out.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#aaa accounting exec list-1 start-stop group radius
DXS-3600-32S(config)#line console
DXS-3600-32S(config-line)#accounting exec list-1
DXS-3600-32S(config-line)#
```

**6-10 ip http authentication aaa**

This command is used to specify an AAA authentication method for HTTP server users, use the ip http authentication aaa command in global configuration mode. To disable a configured authentication method, use the no form of this command.

```
ip http authentication aaa {exec-authorization {default | list-name} | login-authentication {default | list-name}}
no ip http authentication aaa {exec-authorization | login-authentication}
```

**Parameters**

<b>exec-authorization</b>	Specifies to configure the method list for exec authorization.
<b>login-authentication</b>	Specifies to configure the method list for login authentication.
<b>default</b>	Specifies to configure the default method list.
<i>listname</i>	Specifies to configure the name of the method list.

**Default**

None.

**Command Mode**

Global Configuration Mode.

**Command Default Level**

Level: 15

**Usage Guideline**

The '**ip http authentication aaa**' command specifies the AAA authentication method to be used for login when a client connects to the HTTP server. The local, RADISU and TACACS+ methods should be specified using the '**aaa authentication login**' command.

**Example**

This example shows how to specify that the method, configured for AAA, should be used for authentication for HTTP server users. The AAA login method is configured as the "local" username/password authentication method. This example specifies that the local username database will be used for login authentication and the EXEC authorization of HTTP sessions.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#aaa authentication login list-1 local
DXS-3600-32S(config)#aaa authorization exec list-1 local
DXS-3600-32S(config)#ip http authentication aaa login-authentication list-1
DXS-3600-32S(config)#ip http authentication aaa exec-authorization list-1
DXS-3600-32S(config)#
```

**6-11 aaa local authentication attempts**

This command is used to configure login attempt times.

```
aaa local authentication attempts max-attempts
no aaa local authentication attempts
```

<b>Parameters</b>	The range is between 1 and 255.
<b>Default</b>	The default value is 3.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	Use this command to configure login attempt times.

**Example**

This example shows how to configure the number of login attempt times to 6.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#aaa local authentication attempts 6
DXS-3600-32S(config)#
```

**6-12 aaa local authentication lockout-time**

This command is used to configure the length of the lockout-time when the login user has attempted for more than the limited times.

```
aaa local authentication lockout-time lockout-time
no aaa local authentication lockout-time
```

<b>Parameters</b>	The range is between 1 and 255.
<b>Default</b>	The default value is 60 seconds.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	Use this command to configure the length of lockout-time when the login user has attempted for more than the limited times.

**Example**

This example shows how to configure the length of the 'lockout-time' attribute, to 5 seconds.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#aaa local authentication lockout-time 5
DXS-3600-32S(config)#
```

## 6-13 aaa authentication network

This command is used to enable AAA network access authentication and configure the network access user authentication method list. The no form of this command is used to delete the network access user authentication method list.

```
aaa authentication network default method1 [method2...]
no aaa authentication network default
```

### Parameters

<b>default</b>	When this parameter is used, the following defined network access user authentication method list is used as the default method for user authentication.
<i>method</i>	Syntax "{ <b>local</b>   <b>none</b>   <b>group radius</b>   <b>group_name</b> }". Up to four methods supported: <b>local</b> - Specifies to use the local user name database for authentication. <b>none</b> - Specifies to bypass authentication. <b>group</b> - Specifies to be followed by radius or a group name. " <b>group radius</b> " means to use all RADIUS servers group. " <b>group group_name</b> " means to use a specific RADIUS group, created by means of the <b>aaa group server radius</b> global configuration command.

<b>Default</b>	None.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	If the AAA network access security service (such as 802.1X) is enabled on the device, users must use AAA for network access user authentication negotiation. You must use the ' <b>aaa authentication network</b> ' command to configure a default or optional method list for network access user authentication. The next method can be used for authentication only when the current method does not work.

<b>Example</b>	This example shows how to define the AAA authentication method list for the network access security service. In the authentication method list, the RADIUS security server is first used for authentication. If the RADIUS security server does not respond, the local user database is used for authentication.
----------------	--

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#aaa authentication network default group radius local
DXS-3600-32S(config)#
```

## 6-14 aaa authorization network

This command is used to authorize the service requests (including protocols like 802.1X) from the users that access the network. The no form of this command is used to disable the authorization function.

```
aaa authorization network default method1 [method2...]
no aaa authorization network default
```

### Parameters

<b>default</b>	When this parameter is used, the following defined method list is used as the default method for Network authorization.
----------------	---



<i>method</i>	<p>Syntax "{<b>local</b>   <b>none</b>   <b>group radius</b>   <b>group_name</b>}".</p> <p>Up to four methods supported:</p> <p><b>local</b> - Specifies to use the local user name database for authorization.</p> <p><b>none</b> - Specifies not to perform authorization.</p> <p><b>group</b> - Specifies to be followed by radius or a group name.</p> <p>"<b>group radius</b>" means to use all RADIUS servers group.</p> <p>"<b>group group_name</b>" means to use a specific RADIUS group, created by means of the <b>aaa group server radius</b> global configuration command.</p>
---------------	--

<b>Default</b>	By default, this feature is disabled.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	It supports authorization of all the service requests related to the network, such as 802.1X. If authorization is configured, all the authenticated users or interfaces will be authorized automatically. Three different authorization methods can be specified. If the access user authenticated method is specified in authorization method list, the authorization attributes will be applied, otherwise these attributes will be ignored.

Authenticated by method	Authorization configure method	Accept authorization attributes
group radius	group radius	Yes
group radius	local / none	No
local	group radius / none	No
local	local	No
none	group radius / local / none	No

The RADIUS server authorizes authenticated users by returning a series of attributes. Therefore, RADIUS authorization is based on RADIUS authentication. RADIUS authorization is performed only when the user passes the RADIUS authentication.

**Example** This example shows how to use the RADIUS server to authorize network services.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#aaa authorization network default group radius
DXS-3600-32S(config)#
```

## 6-15 aaa accounting network

This command is used to account users in order to count the network access fees. The no form of this command is used to disable the accounting function.

```
aaa accounting network default start-stop method1 [method2...]
no aaa accounting network default
```

### Parameters

<b>network</b>	Specifies to perform accounting of the network related service requests, including dot1x, etc.
<b>start-stop</b>	Send accounting messages at both the start time and the end time of access. Users are allowed to access the network, no matter whether the start accounting message enables the accounting successfully.

---

<i>method</i>	Syntax " <b>{none   group {radius   group_name}}</b> ". Up to four methods supported: <b>none</b> - Specifies not to perform authorization. <b>group</b> - Specifies to be followed by radius or a group name. " <b>group radius</b> " means to use all RADIUS servers group. " <b>group group_name</b> " means to use a specific RADIUS group, created by means of the <b>aaa group server radius</b> global configuration command.
<b>radius</b>	Specifies to use the RADIUS group for accounting.

---

<b>Default</b>	By default, this feature is disabled.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	It performs accounting of user activities by sending record attributes to the security server. Use the keyword <b>start-stop</b> to set the user accounting option.

**Example** This example shows how to perform the accounting of a network service request, from users, using RADIUS, and sends accounting messages at the start and the end time of access.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#aaa accounting network default start-stop group radius
DXS-3600-32S(config)#
```

---

## 6-16 aaa group server

This command is used to configure the AAA server group. The no form of this command is used to delete the server group.

```
aaa group server {radius | tacacs+} name
no aaa group server {radius | tacacs+} name
```

### Parameters

---

<i>name</i>	Enter the name of the server group. It cannot be the keywords "radius" and "tacacs+".
-------------	---

---

<b>Default</b>	None.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	This command is used to configure the AAA server group. Currently, the RADIUS and TACACS+ server groups are supported.

**Example** This example shows how to configure an AAA server group named 'group-1'.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#aaa group server radius group-1
DXS-3600-32S(config-sg-radius)#
```

---

## 6-17 server

This command is used to add a server to the AAA server group. The no form is used to delete a server.

```
server ip-addr
no server ip-addr
```

## Parameters

---

<i>ip-addr</i>	Enter the IP address of the server. The host can be created via <b>radius-server host</b> or <b>tacacs-server host</b> global configuration command.
----------------	--

---

<b>Default</b>	By default, no server is configured.
<b>Command Mode</b>	Server Group Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	Add a server to the specified server group. The default value is used if no port is specified.
<b>Example</b>	This example shows how to add a server IP address to the server group called 'group-1'.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#aaa group server radius group-1
DXS-3600-32S(config-sg-radius)#server 192.168.4.12

Warning: Server 192.168.4.12 is not defended

DXS-3600-32S(config-sg-radius)#
```

## 6-18 show aaa

This command is used to display AAA security service global configuration, use the '**show aaa**' command in EXEC mode.

```
show aaa
```

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	Use this command to show AAA security service global configuration.
<b>Example</b>	This example shows how to display the global configuration of the AAA security service.

```
DXS-3600-32S#show aaa

AAA State: Enabled
Console Authorization State: Disabled
Authentication Attempts: 3
Authentication Lockout-Time: 60 second(s)

DXS-3600-32S#
```

Display Parameters	Description
<b>AAA State</b>	AAA security service global state.
<b>Console Authorization State</b>	Console authorization state for users who has logged in the console.
<b>Authentication attempts</b>	Login attempt times.
<b>Authentication lockout-time</b>	Lockout-time when the login user has attempted for more than the limited times.

---

## 6-19 show aaa server group

This command is used to display AAA server group configuration, use the '**show aaa server group**' command in EXEC mode.

**show aaa server group**

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	Use this command to show AAA server group configuration.

**Example** This example shows how to display the AAA server group configuration.

```
DXS-3600-32S#show aaa server group

Group Name      Type      IP Address
-----
Authen_R        RADIUS    10.10.10.1
                10.10.10.2
Author_T         TACACS    10.10.10.20
                10.10.10.25
Authen_1X        RADIUS    10.90.90.100

3 total server group(s)

DXS-3600-32S#
```

Display Parameters	Description
<b>Group Name</b>	Name of AAA serve group.
<b>Type</b>	Type of Server group, RADIUS or TACACS+.
<b>IP Address</b>	RADIUS server IP address.

## 6-20 show aaa authentication

This command is used to display the AAA authentication method list. Use the show aaa authentication command in EXEC mode.

**show aaa authentication {login | enable | network}**

### Parameters

<b>login</b>	Display the login authentication method list.
<b>enable</b>	Display the enable authentication method list.
<b>network</b>	Display the network authentication method list.

<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	Use this command to show AAA authentication method list.

**Example**

This example shows how to display the AAA login authentication method list.

```
DXS-3600-32S#show aaa authentication login
```

```
Method List      Priority Method Name
-----
default          1        RADIUS
                  2        Authen_R
                  3        Local
auth_test        1        RADIUS
                  2        Authen_R
                  3        Local
```

```
DXS-3600-32S#
```

Display Parameters	Description
<b>Method List</b>	Authentication method list name.
<b>Priority</b>	Priority of authentication method.
<b>Method Name</b>	Name of authentication method.

**6-21 show aaa authorization**

This command is used to display the AAA authorization method list. Use the show aaa authorization command in EXEC mode.

```
show aaa authorization {exec | network}
```

**Parameters**

<b>exec</b>	Display the Exec authorization method list.
<b>network</b>	Display the Network authorization method list.

<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	Use this command to display the AAA authorization method list.

**Example**

This example shows how to display the AAA EXEC authorization method list.

```
DXS-3600-32S#show aaa authorization exec
```

```
Method List      Priority Method Name
-----
default          1        RADIUS
                  2        Author_R
                  3        Local
author           1        RADIUS
                  2        Author_R
                  3        Local
```

```
DXS-3600-32S#
```

Display Parameters	Description
<b>Method List</b>	Authorization method list name.
<b>Priority</b>	Priority of authorization method.
<b>Method Name</b>	Name of authorization method.

## 6-22 show aaa accounting

This command is used to display the AAA accounting method list. Use the show aaa accounting command in EXEC mode.

```
show aaa accounting {exec | network}
```

### Parameters

<b>exec</b>	Display the Exec accounting method list.
<b>network</b>	Display the Network accounting method list.

<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	Use this command to display the AAA accounting method list.

**Example** This example shows how to display the AAA EXEC accounting method list.

```
DXS-3600-32S#show aaa accounting exec
```

```
Method List   Priority   Method Name
-----
default      1         RADIUS
acct_ssh     1         Acct_R
```

```
DXS-3600-32S#
```

Display Parameters	Description
<b>Method List</b>	Accounting method list name.
<b>Priority</b>	Priority of accounting method.
<b>Method Name</b>	Name of accounting method.

## 6-23 show aaa application

This command is used to display the AAA application information. Use the show aaa application command in EXEC mode.

```
show aaa application [{line | http | network}]
```

### Parameters

<b>line</b>	Display the Line application information.
<b>http</b>	Display the HTTP application information.
<b>network</b>	Display the Network-Access application information.
	If the parameter is not specified, display all applications information.

<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	Use this command to display AAA application information.

**Example** This example shows how to display AAA application LINE information.

```
DXS-3600-32S#show aaa application line
```

```
Console:
```

```
  Login Method List: default
  Enable Method List: default
  Authorization Method List: default
  Accounting Method List: default
```

```
Telnet:
```

```
  Login Method List: login_list_1
  Enable Method List: default
  Authorization Method List: author_list_1
  Accounting Method List:
```

```
SSH:
```

```
  Login Method List: login_list_2
  Enable Method List: default
  Authorization Method List: default
  Accounting Method List: acct_list_1
```

```
DXS-3600-32S#
```

**Example** This example shows how to display all AAA application information.

```
DXS-3600-32S#show aaa application
```

```
Console:
```

```
  Login Method List: default
  Enable Method List: default
  Authorization Method List: default
  Accounting Method List: default
```

```
Telnet:
```

```
  Login Method List: login_list_1
  Enable Method List: default
  Authorization Method List: author_list_1
  Accounting Method List:
```

```
SSH:
```

```
  Login Method List: login_list_2
  Enable Method List: default
  Authorization Method List:
  Accounting Method List: acct_list_1
```

```
HTTP:
```

```
  Login Method List: login_list_1
  Authorization Method List: author_list_1
```

```
Network-Access:
```

```
  Authentication Method List: default
  Authorization Method List: default
  Accounting Method List: default
```

```
DXS-3600-32S#
```

Display Parameters	Description
<b>Login Method List</b>	Login authentication method list for EXEC login.
<b>Enable Method List</b>	Enable authentication method list for enable EXEC privilege.
<b>Authentication Method List</b>	Authentication method list for network-access user authentication.
<b>Authorization Method List</b>	Authorization method list for EXEC or network-access user.
<b>Accounting Method List</b>	Accounting method list for EXEC or network-access user.

## 6-24 ip vrf forwarding

This command is used to configure the Virtual Private Network (VPN) routing and forwarding (VRF) reference of an authentication, authorization, and accounting (AAA) RADIUS or TACACS+ server group. Use this command in the server-group configuration mode. To enable server groups to use the global (default) routing table, use the **no** form of this command.

```
ip vrf forwarding vrf-name
no ip vrf forwarding
```

### Parameters

<i>vrf-name</i>	Specifies the name assigned to a VRF.
-----------------	---------------------------------------

<b>Default</b>	No server is configured.
<b>Command Mode</b>	Server Group Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	Use this command to specify a VRF for an AAA RADIUS or TACACS+ server group. This command enables dial access users to utilize AAA servers in different routing domains.

**Example** The following example shows how to configure the VRF user to reference the RADIUS server in a different VRF server group:

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#aaa group server radius sg_global
DXS-3600-32S(config-aaa-group-server)#server-private 172.16.0.10.0254 timeout 5 retransmit 3
DXS-3600-32S(config-aaa-group-server)#exit
DXS-3600-32S(config)#
DXS-3600-32S(config)#aaa group server radius sg_water
DXS-3600-32S(config-aaa-group-server)#server-private 10.10.0.01 timeout 5 retransmit 3 key water
DXS-3600-32S(config-aaa-group-server)#ip vrf forwarding water
DXS-3600-32S(config-aaa-group-server)#end
DXS-3600-32S(config)#
```



# Border Gateway Protocol (BGP) Commands

## 7-1 address-family ipv4

This command is used to enter the IPv4 address family mode. Use the **no** form of this command to delete the configuration of an address family.

```
address-family ipv4 [{unicast | vrf VRF-NAME}]
no address-family ipv4 [{unicast | vrf VRF-NAME}]
```

### Parameters

<b>unicast</b>	Specifies to enter the IPv4 unicast address family configuration mode.
<b>vrf VRF-NAME</b>	Specifies the name of the VRF instance to enter IPv4 VRF address family configuration mode.

<b>Default</b>	None.
<b>Command Mode</b>	Router Configuration.
<b>Command Default Level</b>	Level: 8. (EI Mode Only Command)
<b>Usage Guideline</b>	<p>This command is used to enter the IPv4 address family mode. Different configuration parameters can be set in different address family modes. The IPv4 VRF address family mode is used to configure the BGP instance relation to every VRF instance. If no parameters are specified, it will enter the IPv4 unicast address family mode. Please note that only eBGP peers are supported in the IPv4 VRF address family.</p> <p>To exit from the address-family configuration mode, use the <b>exit-address-family</b> command.</p>

**Example** This example shows how to enter the IPv4 unicast address family and activate a peer session.

```
DXS-3600-32S# configure terminal
DXS-3600-32S(config)# router bgp 10
DXS-3600-32S(config-router)# address-family ipv4 unicast
DXS-3600-32S(config-router-af)# neighbor 5.5.5.5 activate
DXS-3600-32S(config-router-af)# exit-address-family
DXS-3600-32S(config-router)#
```

**Example** This example shows how to enter the VRF address family and create a BGP peer.

```
DXS-3600-32S# configure terminal
DXS-3600-32S(config)# router bgp 10
DXS-3600-32S(config-router)# address-family ipv4 vrf VPN-A
DXS-3600-32S(config-router-af)# neighbor 5.5.5.5 remote-as 20
DXS-3600-32S(config-router-af)# exit-address-family
DXS-3600-32S(config-router)#
```

## 7-2 address-family vpnv4

This command is used to enter the IPv4 VPN address family mode. Use the **no** form of this command to delete the configuration of the VPNv4 address family.

```
address-family vpnv4
no address-family vpnv4
```

<b>Parameters</b>	None.
<b>Default</b>	None.

<b>Command Mode</b>	Router Configuration.
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	<p>This command is used to enter the IPv4 VPN address family mode. The BGP peers activated in this mode are used to exchange VPN IPv4 routing information. Please note that only iBGP peers are supported in this address family now.</p> <p>To exit from this address-family configuration mode, use the <b>exit-address-family</b> command.</p>

**Example** This example shows how to enter the VPNv4 address family and activate a BGP peer.

```
DXS-3600-32S# configure terminal
DXS-3600-32S(config)# router bgp 120
DXS-3600-32S(config-router)# address-family vpnv4
DXS-3600-32S(config-router-af)# neighbor 10.2.2.5 activate
DXS-3600-32S(config-router-af)# neighbor 10.2.2.5 send-community extended
DXS-3600-32S(config-router-af)# exit-address-family
DXS-3600-32S(config-router)#
```

### 7-3 aggregate-address

This command is used to configure BGP aggregate entries. Use the **no** form of this command to delete the entry.

```
aggregate-address NETWORK-ADDRESS [summary-only] [as-set]
no aggregate-address NETWORK-ADDRESS
```

#### Parameters

<b>NETWORK-ADDRESS</b>	Specifies the network address and the sub-network mask that BGP will aggregate. For example, the format of <i>NETWORK-ADDRESS</i> can be 10.9.18.2/8.
<b>summary-only</b>	(Optional) Filters all more-specific routes from updates.
<b>as-set</b>	(Optional) Generates autonomous system set path information.

<b>Default</b>	None.
<b>Command Mode</b>	Router Configuration.
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	<p>Aggregates are used to minimize the size of routing tables. Aggregation combines the characteristics of several different routes and advertises a single route. The <b>aggregate-address</b> command creates an aggregate entry in the BGP routing table if any more-specific BGP routes are available in the specified range. Using the <b>summary-only</b> parameter advertises the prefix only, suppressing the more-specific routes to all neighbors.</p> <p>Use the <b>as-set</b> parameter to reduce the size of path information by listing each AS number only once, even if it was included in multiple paths that were aggregated. The <b>as-set</b> parameter is useful when aggregation of information results in incomplete path information.</p> <p>You can verify your settings by entering the <b>show ip bgp aggregate</b> command.</p>

**Example** This example shows how to propagate the network 172.0.0.0 and suppress a more specific route called 172.10.0.0

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 65534
DXS-3600-32S(config-router)#aggregate-address 172.0.0.0/8 summary-only
DXS-3600-32S(config-router)#
```

## 7-4 bgp router-id

This command is used to configure a fixed router ID for the local Border Gateway Protocol (BGP) routing process. Use the no form of this command to remove the fixed router ID from the running configuration file and restore the default router ID selection.

```
bgp router-id IP-ADDRESS
no bgp router-id
```

### Parameters

<i>IP-ADDRESS</i>	Configures the router ID in IPv4 address format as the identifier of the local router running BGP.
-------------------	--

### Default

The local router ID is selected by the following rules when this command is disabled:

If a loopback interface is configured, the router ID is set to the IP address of the loopback. If multiple loopback interfaces are configured, the loopback with the highest IP address is used.

If no loopback interface is configured, the router ID is set to the highest IP address on a physical interface.

### Command Mode

Router Configuration.

### Command Default Level

Level: 8. (EI Mode Only Command)

### Usage Guideline

The **bgp router-id** command is used to configure a fixed router ID for a local BGP routing process. The address of a loopback interface is preferred to an IP address on a physical interface because the loopback interface is more effective than a fixed interface as an identifier because there is no physical link to go down.

You must specify a unique router ID within the network. This command will reset all active BGP peering sessions. It is recommended to configure a loopback interface, since the physical interface link may be up/down/removed for some reason.

You can verify your settings by entering the **show ip bgp parameters** command.

### Example

This example shows how to change the router ID to 192.168.1.1

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 65100
DXS-3600-32S(config-router)#bgp router-id 192.168.1.1
DXS-3600-32S(config-router)#
```

## 7-5 bgp aggregate-next-hop-check

This command is used to enable the checking of next hop of the BGP aggregated routes. Only the routes with the same next hop attribute can be aggregated if the BGP aggregate next hop check is enabled. Using the no form of this command is to disable the bgp aggregate-next-hop-check.

```
bgp aggregate-next-hop-check
no bgp aggregate-next-hop-check
```

### Parameters

None.

### Default

The default option is disabled.

### Command Mode

Router Configuration.

<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	This command is used to enable the checking of next hop of the BGP aggregated routes. Only the routes with the same next hop attribute can be aggregated if the BGP aggregate next hop check is enabled. Using the no form of this command is to disable the bgp aggregate-next-hop-check.

You can verify your settings by entering the **show ip bgp parameters** command.

**Example** This example shows how to configure the BGP aggregate-next-hop-checking state.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 65534
DXS-3600-32S(config-router)#bgp aggregate-next-hop-check
DXS-3600-32S(config-router)#
```

---

## 7-6 bgp always-compare-med

This command is used to enable the comparison of the Multi Exit Discriminator (MED) for paths from neighbors in different autonomous systems. Use the no form of this command to disallow the comparison.

```
bgp always-compare-med
no bgp always-compare-med
```

<b>Parameters</b>	None.
<b>Default</b>	The default option is disabled.
<b>Command Mode</b>	Router Configuration.
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	The MED, as stated in RFC 1771, is an optional non-transitive attribute that is a four octet non-negative integer. The value of this attribute may be used by the BGP best path selection process to discriminate among multiple exit points to a neighboring autonomous system.

The MED is one of the parameters that are considered when selecting the best path among many alternative paths. The path with a lower MED is preferred over a path with a higher MED. During the best-path selection process, MED comparison is done only among paths from the same autonomous system. The **bgp always-compare-med** command is used to change this behavior by enforcing MED comparison between all paths, regardless of the autonomous system from which the paths are received.

The **bgp deterministic-med** command can be configured to enforce deterministic comparison of the MED value between all paths received from within the same autonomous system.

You can verify your settings by entering **show ip bgp parameters** command.

**Example** This example shows how to configure the switch to compare the MED from alternative paths, regardless of the autonomous system from which the paths are received.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 65534
DXS-3600-32S(config-router)#bgp always-compare-med
DXS-3600-32S(config-router)#
```

## 7-7 bgp bestpath as-path ignore

This command is used to not consider the as-path factor in selection of the best path. Use the no form of this command to restore default behavior and configure BGP to consider the AS-path during route selection.

```
bgp bestpath as-path ignore
no bgp bestpath as-path ignore
```

<b>Parameters</b>	None.
<b>Default</b>	AS path is considered when the best path selects.
<b>Command Mode</b>	Router Configuration.
<b>Command Default Level</b>	Level: 8. (EI Mode Only Command)
<b>Usage Guideline</b>	<p>The following are the best path selection rules.</p> <ul style="list-style-type: none"> <li>• If the next hop associated with the route is unreachable, then the route is dropped.</li> <li>• Then route with the largest weight is selected.</li> <li>• If weight cannot determine, then the largest LOCAL-PREF is used to determine the preferred route.</li> <li>• If still cannot determine the preferred route, then the route with the shortest AS-PATH list is preferred.</li> <li>• If still cannot determine the preferred route, then lowest origin type is preferred.</li> <li>• If still cannot determine the preferred route, then the lowest MED is preferred.</li> <li>• If still cannot determine the preferred route, eBGP is preferred over iBGP paths.</li> <li>• Prefer the path with the lowest IGP metric to the BGP next hop.</li> <li>• Determine if multiple paths require installation in the routing table for BGP Multipath.</li> <li>• When both paths are external, prefer the path that was received first (the oldest one).</li> <li>• Prefer the route that comes from the BGP router with the lowest router ID.</li> <li>• If the originator or router ID is the same for multiple paths, prefer the path with the minimum cluster list length.</li> <li>• Prefer the path that comes from the lowest neighbor address.</li> </ul>

You can use the commands, **bgp bestpath as-path ignore**, **bgp bestpath compare-router-id** or **bgp default local-preference** to customize the path selection process.

You can verify your settings by entering **show ip bgp parameters** command.

**Example** This example shows how to configure the switch to ignore the AS-PATH for the best path for the autonomous system 65534.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 65534
DXS-3600-32S(config-router)#bgp bestpath as-path ignore
DXS-3600-32S(config-router)#
```

## 7-8 bgp bestpath compare-confed-aspash

This command is used to configure a BGP routing process to compare the confederation AS path length of the routes received. To return the BGP routing process to the default operation, use the no form of this command.

```
bgp bestpath compare-confed-aspash
no bgp bestpath compare-confed-aspash
```

<b>Parameters</b>	None.
<b>Default</b>	By default, this option is disabled.
<b>Command Mode</b>	Router Configuration.
<b>Command Default Level</b>	Level: 8. (EI Mode Only Command)

**Usage Guideline** If enabled, the BGP process will compare the confederation AS path length of the routes received. The shorter the confederation AS path length, the better the route is.

You can verify your settings by entering **show ip bgp parameters** command.

**Example** This example shows how to enable the BGP process to compare the AS path that contains some confederation AS numbers.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 65534
DXS-3600-32S(config-router)#bgp bestpath compare-confed-aspath
DXS-3600-32S(config-router)#
```

## 7-9 bgp bestpath compare-routerid

This command is used to compare the router ID for identical eBGP paths. Use the no command to revert to disable this function.

```
bgp bestpath compare-routerid
no bgp bestpath compare-routerid
```

**Parameters** None.

**Default** BGP receives routes with identical eBGP paths from eBGP peers and selects the first route received as the best path.

**Command Mode** Router Configuration.

**Command Default Level** Level: 8. (EI Mode Only Command)

**Usage Guideline** When comparing similar routes from peers the BGP router does not consider router ID of the routes. By default, it selects the first received route. Use this command to include router ID in the selection process; similar routes are compared and the route with lowest router ID is selected. The router-id is the highest IP address on the router, with preference given to loopback addresses. Router ID can be manually set by using the **bgp router-id** command.

You can verify your settings by entering **show ip bgp parameters** command.

**Example** This example shows how to configure to compare the router ID for identical eBGP paths for the autonomous system 65534.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 65534
DXS-3600-32S(config-router)#bgp bestpath compare-routerid
DXS-3600-32S(config-router)#
```

## 7-10 bgp bestpath med confed

This command is used to configure a BGP routing process to compare the Multi Exit Discriminator (MED) between paths learned from confederation peers. To disable MED comparison of paths received from confederation peers, use the no form of this command.

```
bgp bestpath med confed
no bgp bestpath med confed
```

**Parameters** None.

**Default** By default, this option is disabled.

**Command Mode** Router Configuration.

<b>Command Default Level</b>	Level: 8. (EI Mode Only Command)
<b>Usage Guideline</b>	If enabled, the BGP process will compare the MED for the routes that are received from confederation peers. For routes that have an external AS in the path, the comparison does not occur.  You can verify your settings by entering <b>show ip bgp parameters</b> command.
<b>Example</b>	This example shows how the BGP routing process is configured to compare MED values for paths learned from confederation peers.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 65534
DXS-3600-32S(config-router)#bgp bestpath med confed
DXS-3600-32S(config-router)#
```

## 7-11 bgp bestpath med missing-as-worst

This command is used to configure the BGP routing process to assign a value of infinity to routes that are missing the Multi Exit Discriminator (MED) attribute (making the path, without an MED value, the least desirable path). To return the router to the default behavior (assigning a value of 0 to the missing MED), causing this path, as the best path, to be chosen, use the no form of this command.

```
bgp bestpath med missing-as-worst
no bgp bestpath med missing-as-worst
```

<b>Parameters</b>	None.
<b>Default</b>	By default, this option is disabled.
<b>Command Mode</b>	Router Configuration Mode.
<b>Command Default Level</b>	Level: 8. (EI Mode Only Command)
<b>Usage Guideline</b>	If enabled, the BGP process will assign a value of infinity to routes that are missing the Multi Exit Discriminator (MED) attribute. If disabled, the BGP process will assign a value of zero to routes that are missing the Multi Exit Discriminator (MED) attribute, causing this route to be chosen as the best path.

You can verify your settings by entering **show ip bgp parameters** command.

<b>Example</b>	This example shows how to enable the BGP router process to consider a route with a missing MED attribute as having a value of infinity, making this path the least desirable path.
----------------	--

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 100
DXS-3600-32S(config-router)#bgp bestpath med missing-as-worst
DXS-3600-32S(config-router)#
```

## 7-12 bgp client-to-client reflection

This command is used to enable the local BGP router to be a route reflector. To disable client-to-client route reflection, use the no form of this command.

```
bgp client-to-client reflection
no bgp client-to-client reflection
```

<b>Parameters</b>	None.
<b>Default</b>	By default, this option is enabled.
<b>Command Mode</b>	Router Configuration Mode.

**Command Default Level** Level: 8. (EI Mode Only Command)

**Usage Guideline** By default, the clients of a route reflector are not required to be fully meshed and the routes from a client are reflected to other clients. However, if the clients are fully meshed, route reflection is not required. In this case, use the **no bgp client-to-client reflection** command to disable client-to-client reflection.

Use the **show ip bgp reflection** command to verify your settings.

**Example** This example shows how to enable the route reflector function of the local router.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 100
DXS-3600-32S(config-router)#bgp client-to-client reflection
DXS-3600-32S(config-router)#
```

## 7-13 bgp cluster-id

This command is used to configure the cluster ID of the route reflector. To remove the cluster ID, use the no form of this command.

```
bgp cluster-id CLUSTER-ID
no bgp cluster-id
```

### Parameters

<i>CLUSTER-ID</i>	Specifies the cluster ID, in the IPv4 address format, for the route reflector.
-------------------	--

**Default** By default, this value is the local router's ID.

**Command Mode** Router Configuration Mode.

**Command Default Level** Level: 8. (EI Mode Only Command)

**Usage Guideline** When a single route reflector is deployed in a cluster and the cluster ID of the route reflector is 0.0.0.0, the cluster is identified by the router ID of the route reflector. Otherwise, the cluster is identified by the cluster ID.

This command is used to assign a cluster ID to a route reflector. Multiple route reflectors are deployed in a cluster to increase redundancy and to avoid a single point of failure. When multiple route reflectors are configured in a cluster, they must be configured with the same cluster ID. This allows all route reflectors, in the cluster, to recognize updates from the peers in the same cluster and reduces the number of updates that needs to be stored in BGP routing tables.

This command is only required for the reflector and not for the client.

Use the **show ip bgp reflection** command to verify your settings.

**Example** In the following example, the local router is one of the route reflectors serving the cluster. It is configured with a cluster ID to identify the cluster.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 100
DXS-3600-32S(config-router)#neighbor 172.18.0.16 route-reflector-client
DXS-3600-32S(config-router)#bgp cluster-id 10.0.0.2
DXS-3600-32S(config-router)#
```



## 7-14 bgp confederation identifier

This command is used to specify the BGP confederation identifier. Use the no form of this command to remove the confederation identifier.

```
bgp confederation identifier AS-NUMBER
no bgp confederation identifier
```

### Parameters

<i>AS-NUMBER</i>	Specifies the Autonomous System number, used to specify the BGP confederation. This value must be between 1 and 4294967295. The AS TRANS value is 23456.
------------------	--

<b>Default</b>	None.
<b>Command Mode</b>	Router Configuration Mode.
<b>Command Default Level</b>	Level: 8. (EI Mode Only Command)
<b>Usage Guideline</b>	<p>A confederation can be used to reduce the internal BGP (iBGP) mesh by dividing a large single AS into multiple sub-ASs. External peers interact with the confederation as if it is a single AS.</p> <p>Each sub-AS is fully meshed within itself and it has connections to other sub-ASs within the confederation. The next-hop, Multi Exit Discriminator (MED), and local preference information is preserved throughout the confederation, allowing users to retain a single Interior Gateway Protocol (IGP) for all the autonomous systems.</p> <p>Use the <b>show ip bgp confederation</b> command to verify your settings.</p>

**Example** This example shows how to create a confederation in which the AS number is 20.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 100
DXS-3600-32S(config-router)#bgp confederation identifier 20
DXS-3600-32S(config-router)#
```

## 7-15 bgp confederation peers

This command is used to add BGP confederation peers. Use the no form of this command to delete the confederation peers.

```
bgp confederation peers ASPATH-LIST
no bgp confederation peers ASPATH-LIST
```

### Parameters

<i>ASPATH-LIST</i>	Specifies one or multiple AS number partitions, separated by a comma. This value must be between 1 and 4294967295, however, for the AS TRANS, this value must be 23456. This parameter specifies Autonomous System numbers for BGP peers that will belong to the confederation.
--------------------	---

<b>Default</b>	None.
<b>Command Mode</b>	Router Configuration Mode.
<b>Command Default Level</b>	Level: 8. (EI Mode Only Command)

**Usage Guideline**

The command is used to configure multiple adjacent Autonomous Systems in a confederation. The Autonomous Systems, specified in this command, are visible internally to the confederation. Each Autonomous System is fully meshed within itself or configures a route reflector.

Use the **no bgp confederation peers** command to delete all the or part of the AS numbers, configured earlier.

Use the **show ip bgp confederation** command to verify your settings.

**Example**

In the following example, Autonomous Systems 21, 22, 23, 24, and 25 are configured to belong to a single confederation using the identifier 10.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 100
DXS-3600-32S(config-router)#bgp confederation identifier 10
DXS-3600-32S(config-router)#bgp confederation peers 21,22,23,24,25
DXS-3600-32S(config-router)#
```

**Example**

This example shows how to delete part of the AS numbers, configured earlier.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 100
DXS-3600-32S(config-router)#no bgp confederation peers 21,22
DXS-3600-32S(config-router)#
```

**7-16 bgp dampening**

This command is used to enable BGP route dampening or to change the BGP route dampening parameters. To disable BGP dampening, use the no form of this command.

```
bgp dampening [[HALF-LIFE REUSE SUPPRESS MAX-SUPPRESS-TIME UN-REACHABILITY-HALF-TIME] |  
[route-map MAP-NAME]]  
no bgp dampening [route-map]
```

**Parameters**

<i>HALF-LIFE</i>	Specifies the time, in minutes, after which the penalty of the reachable routes will be down, by half.
<i>REUSE</i>	If the penalty for a flapping route decreases enough to fall below this value, the route is unsuppressed.
<i>SUPPRESS</i>	A route is suppressed when its penalty exceeds this limit.
<i>MAX-SUPPRESS-TIME</i>	Specifies the maximum time, in minutes, that a route can be suppressed.
<i>UN-REACHABILITY-HALF-LIFE</i>	Specifies the time, in minutes, after which the penalty of the unreachable route will be down, by half.
<i>MAP-NAME</i>	Specifies the route map name for configuring the dampening running configuration. The maximum length is 16 characters.

**Default**

BGP dampening is disabled by default. The following values are used when this command is enabled, without configuring any optional arguments:

Half-life: 15 minutes.

Reuse: 750.

Suppress: 2000.

Max-suppress-time: 60 minutes.

Un-reachability-half-life: 15 minutes.

**Command Mode**

Router Configuration Mode.

**Command Default Level**

Level: 8. (EI Mode Only Command)

**Usage Guideline**

The purpose of this command is to eliminate the dampening of routes and thus to avoid unstable networks caused by flapping routes.

The following describes the way it is achieved. When a route flaps (from up to down), it will add a penalty value, of 1000, to the frame. Since the penalty is smaller than the suppress value, BGP will function normally. It will send a withdraw message (an update message) to the neighbors. The penalty of the route will decrease as time elapses.

Here we assume that if it passes 7.5 minutes, then the penalty of the route is  $1000 - 500 * 7.5 / 15 = 750$ . If another flap occurs (the route changes from down to up) then the penalty of the route will be 1750, which is larger than the suppress value, and the route will be dampened. BGP will not send an update message for this status change.

When the penalty of the route decreases and becomes smaller than the re-use value (800), the route will not be dampened and the update message will be sent again.

Lastly, the 'max-suppress-time' is the longest time the route may be suppressed. So, it decides the maximum penalty a route may suffer, regardless of the number of times that the prefix is dampened. Here is the formula:

$$\text{Maximum - Penalty} = \text{Reuse - Value} * 2^{\text{Max-sup press-time} / \text{Half-life}}$$

You can verify your settings by entering the **show ip bgp dampening parameters** command.

**Note:** If the dampening ability is enabled and there are one or more dampened routes, the dampened routes will be released to function in the normal state immediately after we disabled the dampening function.

**Example**

This example shows how to enable BGP dampening, set the half-life value to 20 minutes, the reuse value to 100, the suppress value to 6000, the maximum suppress time to 120 minutes, and the un-reachability-half-life value to 20 minutes.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 100
DXS-3600-32S(config-router)#bgp dampening 20 100 6000 120 20
DXS-3600-32S(config-router)#
```

**Example**

This example shows how to apply BGP damping to prefixes, filtered by the route-map called 'mymap1'.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip prefix-list pp1 permit 100.2.0.0/16
DXS-3600-32S(config)#route-map mymap1
DXS-3600-32S(config-route-map)#match ip address prefix-list pp1
DXS-3600-32S(config-route-map)#exit
DXS-3600-32S(config)#router bgp 100
DXS-3600-32S(config-router)#bgp dampening route-map mymap1
DXS-3600-32S(config-router)#
```

**7-17 bgp default ipv4-unicast**

This command is used to enable the IPv4 unicast address family as the default address family for BGP peer session establishment. The **no** form of this command disables the default IPv4 unicast address family for BGP peer session establishment.

```
bgp default ipv4-unicast
no bgp default ipv4-unicast
```

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Router Configuration.
<b>Command Default Level</b>	Level: 8. (EI Mode Only Command)
<b>Usage Guideline</b>	This command is used to enable the automatic establish BGP peer connection and exchange of IPv4 unicast address family prefixes. If the <b>no bgp default ipv4-unicast</b> command is executed, the neighbor activate address family configuration command must be executed in each IPv4 address family session before prefix exchange will occur. The <b>no bgp default ipv4-unicast</b> command is often executed in PE routers when exchanging VPN IPv4 routes. You can verify your settings by entering the <b>show ip bgp parameters</b> command.

**Example** This example shows how to disable the default IPv4 unicast address family for BGP peer session establishment.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)# router bgp 10
DXS-3600-32S(config-router)# no bgp default ipv4-unicast
DXS-3600-32S(config-router)# exit
DXS-3600-32S(config)#
```

## 7-18 bgp default local-preference

This command is used to change the default local preference value. To return the local preference value to the default setting.

```
bgp default local-preference NUMBER
no bgp default local-preference
```

### Parameters

<i>NUMBER</i>	Specifies the range of the local reference. This value must be between 0 and 4294967295.
---------------	--

<b>Default</b>	By default, this option is disabled. BGP sets the default local preference value to 100.
<b>Command Mode</b>	Router Configuration Mode.
<b>Command Default Level</b>	Level: 8. (EI Mode Only Command)
<b>Usage Guideline</b>	The local preference attribute is a discretionary attribute that is used to apply the degree of preference to a route during the BGP best path selection process. This attribute is exchanged only between iBGP peers and is used to determine the local policy. The route with the highest local preference is preferred.  You can verify your settings by entering the <b>show ip bgp parameters</b> command.

**Example** This example shows how to configure the default value of the local preference to 200 for the autonomous system 65534.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 65534
DXS-3600-32S(config-router)#bgp default local-preference 200
DXS-3600-32S(config-router)#
```

## 7-19 bgp deterministic-med

This command is used to include the Multi Exit Discriminator (MED) value between all paths received from within the same autonomous system in the process of the best route selection. Use the no command to prevent BGP from considering the MED attribute in comparing paths.

```
bgp deterministic-med
no bgp deterministic-med
```

<b>Parameters</b>	None.
<b>Default</b>	By default, this option is disabled.
<b>Command Mode</b>	Router Configuration Mode.
<b>Command Default Level</b>	Level: 8. (EI Mode Only Command)
<b>Usage Guideline</b>	<p>This command is used to enable the comparison of the Multi Exit Discriminator (MED) for paths from neighbors in different autonomous systems. After this command is configured, all paths for the same prefix, that are received from different neighbors, which are in the same autonomous system, will be grouped together and sorted by the ascending MED value (received-only paths are ignored and not grouped or sorted).</p> <p>The best path selection algorithm will then pick the best paths using the existing rules. The comparison is made on a peer neighbor autonomous system basis and then the global basis. The grouping and sorting of paths occurs immediately after this command was entered. For the correct results, all routers in the local autonomous system must have this command enabled (or disabled).</p> <p>This command can also be configured to enforce a deterministic comparison of the MED values between all paths received from within the same autonomous system.</p> <p>You can verify your settings by entering the <b>show ip bgp parameters</b> command.</p>

**Example** This example shows how to configure to switches to enable the compare MED value for autonomous system 65534,

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 65534
DXS-3600-32S(config-router)#bgp deterministic-med
DXS-3600-32S(config-router)#
```

## 7-20 bgp enforce-first-as

This command is used to enforce the first AS for eBGP routes. To disable this feature, use the no form of this command.

```
bgp enforce-first-as
no bgp enforce-first-as
```

<b>Parameters</b>	None.
<b>Default</b>	By default, this option is disabled.
<b>Command Mode</b>	Router Configuration Mode.
<b>Command Default Level</b>	Level: 8. (EI Mode Only Command)
<b>Usage Guideline</b>	<p>This command specifies that any updates received from an external neighbor, that do not have neighbor's configured in an Autonomous System at the beginning of the AS-PATH attribute in the received update, must be denied. Enabling this feature adds to the security of the BGP network by not allowing traffic from unauthorized systems.</p> <p>You can verify your settings by entering the <b>show ip bgp parameters</b> command.</p>

**Example**

This example shows how to enable the security of the BGP network for the autonomous system 65534. All incoming updates from eBGP peers are examined to ensure that the first AS number in the AS-PATH attribute is the local AS number of the transmitting peer.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 65534
DXS-3600-32S(config-router)#bgp enforce-first-as
DXS-3600-32S(config-router)#
```

**7-21 bgp fast-external-fallover**

This command is used to configure the Border Gateway Protocol (BGP) routing process to immediately reset external BGP peering sessions if the link used to reach these peers goes down. To disable the BGP fast external fallover option, use the no form of this command.

```
bgp fast-external-fallover
no bgp fast-external-fallover
```

**Parameters**

None.

**Default**

By default, this option is enabled.

**Command Mode**

Router Configuration Mode.

**Command Default Level**

Level: 8. (**EI Mode Only Command**)

**Usage Guideline**

This command is used to disable or enable the fast external fallover for BGP peering sessions with directly connected external peers. The session will immediately reset if a link goes down. Only directly connected peering sessions are supported.

If the BGP fast external fallover is disabled, the BGP routing process will wait until the default hold timer expires (3 keepalives) to reset the peering session.

You can verify your settings by entering the **show ip bgp parameters** command.

**Example**

In the following example, the BGP fast external fallover feature is disabled. If the link through which this session is carried flaps, then the connection will not reset.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 65534
DXS-3600-32S(config-router)#no bgp fast-external-fallover
DXS-3600-32S(config-router)#
```

**7-22 clear ip bgp**

This command is used to reset Border Gateway Protocol (BGP) connections using a hard or soft reconfiguration.

```
clear ip bgp {all | AS-NUMBER | IP-ADDRESS} [soft [{in [prefix-filter] | out}]]
```

**Parameters**

<b>all</b>	(Optional) Specifies the reset of all sessions except those in the VRF address family.
<b>AS-NUMBER</b>	Specifies that sessions, with BGP peers, in the specified autonomous system the will be reset. The range for 2-byte numbers is from 1 to 65535. The range for 4-byte numbers is from 1 to 4294967295.
<b>IP-ADDRESS</b>	Specifies that only the identified BGP neighbor will reset. The value for this argument is an IPv4 address.
<b>in</b>	(Optional) Specifies to initiate an inbound reconfiguration. If neither the in nor the out keywords are specified, both inbound and outbound sessions will reset.

<b>prefix-filter</b>	(Optional) Specifies to clear the existing outbound route filter (ORF) prefix list to trigger a new route refresh or soft reconfiguration, which updates the ORF prefix list.
<b>out</b>	(Optional) Specifies to initiate inbound or outbound reconfiguration. If neither the in nor the out keywords are specified, both inbound and outbound sessions will reset.
<b>soft</b>	(Optional) Specifies to initiate a soft reset. Does not tear down the session.

<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	<p>This command can be used to initiate a hard reset or soft reconfiguration of BGP neighbor sessions.</p> <p>If a hard reset is applied to the inbound session, the inbound session will be torn down and the local inbound routing table and the remote outbound routing table will be cleared.</p> <p>If a soft reset is applied to the inbound session, the session will not be rebuilt but the local inbound routing table will be cleared and needs to be rebuilt.</p> <p>If a soft reconfiguration inbound is enabled, then the routing table can be rebuilt based on the stored route update information. If a soft reconfiguration inbound is disabled, then the local router will send a route refresh request to the neighbor to ask for the route refresh.</p> <p>When the inbound session undergoes a soft reset with the prefix filter option, and the capability of the prefix-list is enabled, in the sending direction, then the local BGP will send a 'clear the routing table' request, and notify the remote neighbor for the prefix filter.</p> <p>This is a way to notify the neighbor of the prefix filter whenever a change is made to the prefix filter.</p>

**Example** In the following example, a soft reconfiguration is initiated for the inbound session with the neighbor 10.100.0.1, and the outbound session is unaffected.

```
DXS-3600-32S#clear ip bgp 10.100.0.1 soft in
DXS-3600-32S#
```

**Example** In the following example, the route refresh capability is enabled on BGP neighbor routers. The existing outbound route filter (ORF) prefix list from the peer 172.16.10.2 is cleared, The new route refresh, which updates the ORF prefix list, is triggered.

```
DXS-3600-32S#clear ip bgp 172.16.10.2 soft in prefix-filter
DXS-3600-32S#
```

**Example** In the following example, a hard reset is initiated for sessions with all routers in the autonomous system numbered 35700.

```
DXS-3600-32S#clear ip bgp 35700
DXS-3600-32S#
```

## 7-23 clear ip bgp vrf

This command is used to reset BGP connections using hard or soft reset for IPv4 VRF address family sessions.

```
clear ip bgp vrf VRF-NAME {all | IP-ADDRESS | AS-NUMBER} [soft [(in [prefix-filter] | out)]]
```

**Parameters**

<b>vrf</b> <i>VRF-NAME</i>	Specifies the VRF name.
<b>all</b>	Specifies to reset all BGP sessions in the IPv4 VRF address family.
<i>IP-ADDRESS</i>	Specifies to only reset the BGP neighbor with the IP address in the VRF address family.
<i>AS-NUMBER</i>	Specifies to only reset the BGP neighbor with the AS number in the VRF address family.
<b>soft</b>	(Optional) Specifies a soft reset. The session is not torn down.
<b>in</b>	(Optional) Specifies an inbound reset. If neither the <b>in</b> nor <b>out</b> parameter is specified, both the inbound and outbound sessions are reset.
<b>prefix-filter</b>	(Optional) Clears the existing outbound route filter (ORF) prefix list to trigger a new route refresh or soft reconfiguration, which updates the ORF prefix list.
<b>out</b>	(Optional) Specifies an outbound reset. If neither the <b>in</b> nor <b>out</b> parameters is specified, both inbound and outbound sessions are reset.

**Default** None.

**Command Mode** Privileged Mode.

**Command Default Level** Level: 8. (EI Mode Only Command)

**Usage Guideline** This command can be used to initiate a hard reset or soft reset of BGP neighbor sessions.

If a hard reset is applied to the inbound session, the inbound session will be torn down and the local inbound routing table and the remote outbound routing table will be cleared.

If a soft reset is applied to the inbound session, the session will not be rebuilt but the local inbound routing table will be cleared and needs to be rebuilt.

If a soft reset inbound is enabled, then the routing table can be rebuilt based on the stored route updates information. If a soft reset inbound is disabled, then the local router will send the route refresh request to the neighbor to ask for the route refresh.

When the inbound session is soft reset with the prefix filter option, and the capability of prefix-list is enabled in the send direction, then the local BGP will send 'clear the routing table', and notify the remote neighbor for the prefix filter.

This command can only take effect for the sessions in VRF address family.

**Example**

In the following example, a soft reset is initiated for the inbound session for all neighbors those have been created in the view of vrf and the outbound session is unaffected.

```
DXS-3600-32S#clear ip bgp vrf VPN-A all soft in
DXS-3600-32S#
```

**7-24 clear ip bgp vpnv4**

This command is used to reset BGP connections using a soft reset for IPv4 VPN address family sessions.

```
clear ip bgp vpnv4 unicast {all | IP-ADDRESS } [soft [{in [prefix-filter] | out}]]
```

**Parameters**

<b>all</b>	Specifies to reset all BGP sessions in VPN address family.
<i>IP-ADDRESS</i>	Specifies to only reset the BGP neighbor with the IP address.



<b>soft</b>	Specifies a soft reset. The session is not torn down.
<b>in</b>	(Optional) Specifies an inbound reset. If neither the <b>in</b> nor <b>out</b> parameter is specified, both inbound and outbound sessions are reset.
<b>prefix-filter</b>	(Optional) Clears the existing outbound route filter (ORF) prefix list to trigger a new route refresh or soft reconfiguration, which updates the ORF prefix list.
<b>out</b>	(Optional) Specifies an outbound reset. If neither the <b>in</b> nor <b>out</b> parameter is specified, both inbound and outbound sessions are reset.

<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	This command can only be used to initiate a soft reset of BGP neighbor sessions for VPNv4 address family.

If a soft reset is applied to the inbound session, the session will not be rebuilt but the local inbound routing table will be cleared and needs to be rebuilt.

If a soft reset inbound is enabled, then the routing table can be rebuilt based on the stored route updates information. If a soft reset inbound is disabled, then the local router will send the route refresh request to the neighbor to ask for the route refresh.

When the inbound session is soft reset with the prefix filter option, and the capability of prefix-list is enabled in the send direction, then the local BGP will send 'clear the routing table', and notify the remote neighbor for the prefix filter.

<b>Example</b>	In the following example, a soft reconfiguration for VPNv4 address family is initiated for the inbound session for all neighbors which have been created outside VRF address family, and the outbound session is unaffected.
----------------	--

```
DXS-3600-32S#clear ip bgp vpnv4 unicast all soft in
DXS-3600-32S#
```

## 7-25 clear ip bgp dampening

This command is used to clear BGP route dampening information for the IPv4 unicast address family and to restore suppressed routes.

```
clear ip bgp dampening [{NETWORK-ADDRESS | IP-ADDRESS}]
```

### Parameters

<i>NETWORK-ADDRESS</i>	(Optional) Specifies the IPv4 address of the network or neighbor to clear dampening information.
<i>IP-ADDRESS</i>	(Optional) Specifies the IPv4 address.

<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	This command is used to clear stored route dampening information for the IPv4 unicast address family. If no keywords or arguments are entered, the route dampening information for the entire routing table of the IPv4 unicast address family will be cleared.

**Example** This example shows how to clear the route dampening information of 192.168.10.0/24 and restores suppressed routes.

```
DXS-3600-32S#clear ip bgp dampening 192.168.10.0/24
DXS-3600-32S#
```

## 7-26 clear ip bgp dampening vrf

This command is used to clear BGP route dampening information of VRF instance and to restore suppressed routes.

```
clear ip bgp dampening vrf VRF-NAME [{NETWORK-ADDRESS | IP-ADDRESS}]
```

### Parameters

<b>vrf</b> <i>VRF-NAME</i>	(Optional) Specifies a VRF name. The length of <i>VRF-NAME</i> is 12 characters.
<i>NETWORK-ADDRESS</i>	(Optional) Specifies to only clear dampening information of the route matching the network address.
<i>IP-ADDRESS</i>	(Optional) Specifies to only clear dampening information of the route matching the IP address.

**Default** None.

**Command Mode** Privileged Mode.

**Command Default Level** Level: 8. (EI Mode Only Command)

**Usage Guideline** This command is used to clear stored route dampening information for the specified VRF. If no keyword is specified, the dampening information of all routes in the VRF instance will be cleared.

**Example** The following example clears route dampening information of 192.168.10.0/24 and restores suppressed routes in VRF VPN-A.

```
DXS-3600-32S# clear ip bgp dampening vrf VPN-A 192.168.10.0/24
DXS-3600-32S#
```

## 7-27 clear ip bgp external

This command is used to reset external Border Gateway Protocol (eBGP) peering sessions using the hard or soft reconfiguration.

```
clear ip bgp external [soft [{in [prefix-filter] | out}]]
```

### Parameters

<b>in</b>	(Optional) Specifies to initiate an inbound reconfiguration. If neither the in nor the out keywords are specified, both inbound and outbound sessions will reset.
<b>prefix-filter</b>	(Optional) Specifies to clear the existing outbound route filter (ORF) prefix list to trigger a new route refresh or soft reconfiguration, which updates the ORF prefix list.
<b>out</b>	(Optional) Specifies to initiate an inbound or outbound reconfiguration. If neither the in nor the out keywords are specified, both inbound and outbound sessions will reset.
<b>soft</b>	(Optional) Specifies to initiate a soft reset. Does not tear down the session.

**Default** None.

**Command Mode** Privileged Mode.

<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	<p>This command can be used to initiate a hard reset or soft reconfiguration of eBGP neighbor sessions.</p> <p>If a hard reset is applied to the inbound session, the inbound session will be torn down and the local inbound routing table and the remote outbound routing table will be cleared.</p> <p>If a soft reset is applied to the inbound session, the session will not be rebuilt but the local inbound routing table will be cleared and needs to be rebuilt.</p> <p>If a soft reconfiguration inbound is enabled, then the routing table can be rebuilt based on the stored route updates information. If a soft reconfiguration inbound is disabled, then the local router will send the route refresh request to the neighbor to ask for the route refresh.</p> <p>When the inbound session undergoes a soft reset with the prefix filter option, and the 'capability_orf_prefix_list' parameter is enabled in the sending direction, then the local BGP will send a 'clear the routing table' message, and notify the remote neighbor for the prefix filter.</p> <p>This is a way to notify the neighbor of the prefix filter whenever a change is made to the prefix filter.</p>

**Example** The following example, a soft reconfiguration is configured for all inbound eBGP peering sessions.

```
DXS-3600-32S#clear ip bgp external soft in
DXS-3600-32S#
```

**Example** This example shows how to send a prefix filter to a neighbor and let the neighbor re-advertisement BGP routes, based on the new prefix filter. The neighbor capability of the prefix-list in the sending direction needs be configured, and that the local filter list in the inbound direction for the peer needs be set.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 100
DXS-3600-32S(config-router)#neighbor 172.16.10.1 remote-as 200
DXS-3600-32S(config-router)#neighbor 172.16.10.1 capability orf prefix-list send
DXS-3600-32S(config-router)#neighbor 172.16.10.1 filter-list myacl in
DXS-3600-32S(config-router)#end
DXS-3600-32S#clear ip bgp external soft in prefix-filter
DXS-3600-32S#
```

## 7-28 clear ip bgp flap-statistics

This command is used to clear the BGP route dampening flap statistics.

```
clear ip bgp flap-statistics [{IP-ADDRESS | NETWORK-ADDRESS}]
```

### Parameters

<i>IP-ADDRESS</i>	Specifies an IPv4 address to clear the dampening flap statistics.
<i>NETWORK-ADDRESS</i>	Specifies an IPv4 network to clear the dampening flap statistics.

<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )

**Usage Guideline** This command is used to clear the accumulated penalties for routes that have been received on a router which has BGP dampening enabled. If no arguments or keywords are specified, the flap statistics are cleared for all routes.

**Example** This example shows how to clear the route dampening flap statistics of network 192.168.1.0/24.

```
DXS-3600-32S#clear ip bgp flap-statistics 192.168.1.0/24
DXS-3600-32S#
```

## 7-29 clear ip bgp flap-statistics vrf

This command is used to clear BGP route dampening flap statistics of IPv4 VRF address family sessions.

**clear ip bgp flap-statistics vrf** *VRF-NAME* [{*IP-ADDRESS* | *NETWORK-ADDRESS*}]

### Parameters

<b>vrf</b> <i>VRF-NAME</i>	Specifies the VRF name.
<i>IP-ADDRESS</i>	(Optional) Specifies to only clear dampening flap statistics of the route matching the IP address.
<i>NETWORK-ADDRESS</i>	(Optional) Specifies to only clear dampening flap statistics of the route matching the network address.
<i>N/A</i>	Specifies to clear dampening flap statistics of all routes.

**Default** None.

**Command Mode** Privileged Mode.

**Command Default Level** Level: 8. (EI Mode Only Command)

**Usage Guideline** This command is used to clear the accumulated penalties for routes that have been received on a router which has BGP dampening enabled of IPv4 VRF address family sessions. If no keyword is specified, flap statistics of all routes in IPv4 VRF address family will be cleared.

**Example** This example shows how to clear the route dampening flap statistics of network 192.168.1.0/24 which in IPv4 VRF address family.

```
DXS-3600-32S#clear ip bgp flap-statistics vrf VPN-A 192.168.1.0/24
DXS-3600-32S#
```

## 7-30 clear ip bgp peer-group

This command is used to reset Border Gateway Protocol (BGP) connections using hard or soft reconfiguration for all the members of the BGP peer group.

**clear ip bgp peer-group** [{*vrf VRF-NAME* | *vpn4*}] *PEER-GROUP-NAME* [**soft** [{*in* [*prefix-filter*] | *out*]}]

### Parameters

<b>vrf</b> <i>VRF-NAME</i>	(Optional) Specifies a VRF name. The length of <i>VRF-NAME</i> is 12 characters.
<b>vpn4</b>	(Optional) Specifies to reset the sessions of the VPNv4 address family.
<i>PEER-GROUP-NAME</i>	Specifies the peer group name. The maximum length is 16 characters.
<b>soft</b>	(Optional) Specifies to initiate a soft reset. This function does not tear down the session. If the soft keyword is not specified, all the sessions of the members of the peer group will reset.

<b>in</b>	(Optional) Specifies to initiate a soft reset for inbound routing information.
<b>prefix-filter</b>	(Optional) Specifies to clear the existing outbound route filter (ORF) prefix list to trigger a new route refresh or soft reconfiguration, which updates the ORF prefix list.
<b>out</b>	(Optional) Specifies to initiate a soft reset for outbound routing information.

<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	This command is used to initiate a hard reset or a soft reset for a set of connections. A hard reset tears down and rebuilds all the sessions for the members of the specified peer group and clears and rebuilds the local routing table. A soft reset only clears and rebuilds the local routing table.

To the soft reset, if neighbor soft-reconfiguration inbound is configured, the routing table can be rebuilt based on the stored route updates information, and if it doesn't, the local router will send the route refresh message to the neighbors to ask for the routes.

When the inbound session is soft reset with the prefix-filter option, and the neighbor capability orf prefix-list in the send direction is configured, the local BGP will send "clear the routing table", and notify the remote neighbor for the prefix filter.

When using the **clear ip bgp peer-group PEER-GROUP-NAME** command without the soft parameter, the BGP connection will be torn down, so the following log message will be generated.

[BGP(2):] BGP connection is normally closed (Peer:<ipaddress>)

Where the <ipaddress> is the address of the peer. After a while, the connection will be rebuilt, and the following log message will be generated.

[BGP(1):] BGP connection is successfully established Peer:<ipaddress>

Where the <ipaddress> is the address of the peer.

This is a way to notify the neighbor of the prefix filter whenever a change is made to the prefix filter.

**Example** In the following example, all members of the BGP peer group named 'INTERNAL' will reset.

```
DXS-3600-32S#clear ip bgp peer-group INTERNAL
DXS-3600-32S#
```

**Example** In the following example, a soft reconfiguration is initiated for both the inbound and outbound session with members of the peer group INTERNAL.

```
DXS-3600-32S#clear ip bgp peer-group INTERNAL soft
DXS-3600-32S#
```

**Example** When using the parameter soft with either in or out, the soft reconfiguration is only initiated for the inbound or outbound session.

Assume that the neighbor capability of the 'prefix-list' in the send direction is configured, and that the local filter list in the inbound direction for the peer group is changed, using this command with parameters soft in prefix-filter to notify all the neighbors in the peer group.

```
DXS-3600-32S#clear ip bgp peer-group INTERNAL soft in prefix-filter
DXS-3600-32S#
```

## 7-31 exit-address-family

This command is used to exit from the address family configuration mode and enter the router configuration mode.

### exit-address-family

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Address Family Configuration (IPv4 Unicast, VPNv4 and VRF).
<b>Command Default Level</b>	Level: 8. (EI Mode Only Command)
<b>Usage Guideline</b>	None.

**Example** The following example show how to exit from the VPNv4 address family mode and enter the router configuration mode.

```
DXS-3600-32S(config-router)# address-family vpnv4
DXS-3600-32S(config-router-af)# neighbor 172.18.1.1 activate
DXS-3600-32S(config-router-af)# exit-address-family
DXS-3600-32S(config-router)#
```

## 7-32 ip as-path access-list

This command is used to define a BGP Autonomous System (AS) path access list or add an AS path access list entry to an existing AS path access list. Use the no form of this command to delete the access list or an entry of the AS path access list.

```
ip as-path access-list ACCESS-LIST-NAME [{permit | deny} REGEXP]
no ip as-path access-list ACCESS-LIST-NAME [{permit | deny} REGEXP]
```

### Parameters

<i>ACCESS-LIST-NAME</i>	Specifies the name of the access list. The maximum length is 16 characters.
<b>permit</b>	Specifies to permit access to the matching conditions.
<b>deny</b>	Specifies to deny access to the matching conditions.
<i>REGEXP</i>	Specifies a regular expression to match the BGP AS paths. The maximum length is 80 characters.

<b>Default</b>	None.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 8. (EI Mode Only Command)
<b>Usage Guideline</b>	Use this command to configure an Autonomous System path access list. An Autonomous System path access list can be applied to inbound, outbound or both routes exchanged in a BGP peer session. If the regular expression matches the specified string represented the AS path of the route, the permit or deny condition applies. Multiple entries can be applied to a list name.

Use the **show ip as-path access-list** command to verify your settings.

**Example** This example shows how to define an AS path access list named 'mylist', to deny routes with only the AS number 65535.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip as-path access-list mylist deny ^65535$
DXS-3600-32S(config)#
```

**Example** This example shows how to delete an entry in an AS path access list, earlier configured.

```
DXS-3600-32S#configure terminal
DXS-3600-32S (config)#no ip as-path access-list mylist deny ^65535$
DXS-3600-32S (config)#
```

**Example** After that, the AS path access list, called 'mylist', has no entry, but it still exists.

The following example show how to delete an AS path access list, no matter whether it has entries or not.

```
DXS-3600-32S#configure terminal
DXS-3600-32S (config)#no ip as-path access-list mylist
DXS-3600-32S (config)#
```

## 7-33 ip community-list

This command is used to create a community list or add a community list entry to an existing community list. Use the no form of this command to delete the community list or one of its entries.

### Standard Community Lists:

```
ip community-list standard COMMUNITY-LIST-NAME [{permit | deny} COMMUNITY]
no ip community-list standard COMMUNITY-LIST-NAME [{permit | deny} COMMUNITY]
```

### Expanded Community Lists:

```
ip community-list expanded COMMUNITY-LIST-NAME [{permit | deny} REGEXP]
no ip community-list expanded COMMUNITY-LIST-NAME [{permit | deny} REGEXP]
```

### Parameters

<i>COMMUNITY-LIST-NAME</i>	Specifies the community list name. It can accept up to 16 characters. The syntax is general string that does not allow space.
<b>permit</b>	Specifies the community to accept.
<b>deny</b>	Specifies the community to reject.
<i>COMMUNITY</i>	Specifies the community value, which is a 32-bit integer. It can be a user-specified number represented by AA:NN, where AA (AS number) is the upper part of the word and NN (community number, user-specified) is the lower part of the word. It can also be one of the following reserved community values: <ul style="list-style-type: none"> <li><b>internet</b> - Specifies that routes are advertised to all peers (internal and external).</li> <li><b>local-AS</b> - Specifies that routes not to be advertised to external BGP peers.</li> <li><b>no-advertise</b> - Specifies that routes not to be advertised to other BGP peers.</li> <li><b>no-export</b> - Specifies that routes not to be advertised outside of the Autonomous System boundary.</li> </ul>
<i>REGEXP</i>	Specifies to configures a regular expression that is used to specify a pattern to match against an input string. Regular expressions can be used only with expanded community lists. The maximum length is 80 characters.

**Default** The BGP community exchange is disabled by default. It is enabled on a per-neighbor basis with the neighbor send-community command.

The Internet community is applied to all routes or prefixes by default, until any other community value is configured with this command or the set community command.

**Command Mode** Global Configuration Mode.

**Command Default Level** Level: 8. (EI Mode Only Command)

**Usage Guideline**

Use the community-lists to specify BGP community attributes. The community attribute is used for implementing policy routing. It is an optional, transitive attribute and facilitates transfer of local policies through different autonomous systems. It includes community values that are 32 bits long. All names of the standard community list and expanded community list must not be the same.

This command can be applied multiple times. BGP community attributes exchanged between BGP peers are controlled by the neighbor send-community command.

If the permit rules exist, in a community list, routes with community that does not match any rule in the list will be denied. If there are no rules or only deny rules to be configured in the community list, all routes will be denied.

Use the **show ip community-list** command to verify your settings.

**Example**

This example shows how to define a standard community list named 'mycom' with an entry.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip community-list standard mycom deny no-export 20:30
DXS-3600-32S(config)#
```

**Example**

This example shows how to delete an entry in a community list, earlier configured.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#no ip community-list standard mycom deny no-export 20:30
DXS-3600-32S(config)#
```

**Example**

After that, the community list 'mycom' will have no entry, but it still exists.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#no ip community-list standard mycom
DXS-3600-32S(config)#
```

**Example**

This example shows how to create an expanded community list named 'myexpcom' with an entry.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip community-list expanded myexpcom permit _20[0-9]
DXS-3600-32S(config)#
```

**7-34 ip extcommunity-list**

This command is used to create an extended community list or add an extended community entry to an existing extended community list for VPN route filtering. Use the **no** form of this command to delete the extended community list or remove one of its entries.

**Standard IP Extended Community Lists:**

```
ip extcommunity-list standard EXTCOMMUNITY-LIST-NAME [{permit | deny} EXTCOMMUNITY]
no ip extcommunity-list standard EXTCOMMUNITY-LIST-NAME [{permit | deny} EXTCOMMUNITY]
```

**Expanded IP Extended Community Lists:**

```
ip extcommunity-list expanded EXTCOMMUNITY-LIST-NAME [{permit | deny} REGEXP]
no ip extcommunity-list expanded EXTCOMMUNITY-LIST-NAME [{permit | deny} REGEXP]
```

**Parameters**

<i>EXTCOMMUNITY-LIST-NAME</i>	Specifies the extended community list-name. It can accept up to 16 characters. The syntax is general string that does not allow space.
<b>permit</b>	(Optional) Specifies the extended community to accept.
<b>deny</b>	(Optional) Specifies the extended community to reject.



<b>EXTCOMMUNITY</b>	(Optional) Consists of a set of an <b>rt VALUE</b> or a <b>soo VALUE</b> . It can accept 12 <b>VALUES</b> in total for one entry. There are two different types for the <b>rt</b> values or <b>soo</b> values: <ul style="list-style-type: none"> <li>• <b>IP address:number</b>: The IP address should be a global IP address that is assigned to the user and the number is assigned from a numbering space that is administered by the user. The number can be 1-65535.</li> <li>• <b>AS number:number</b>: The AS Number should be a public AS Number (Both 2-bytes AS number and 4-bytes AS number works) that is assigned to the user and the number is assigned from a numbering space that is administered by the user. The number can be 1-4294967295 for 2-bytes AS number and 1-65535 for 4-bytes AS number.</li> </ul>
<b>REGEXP</b>	(Optional) Configures a regular expression that is used to specify a pattern to match against an input string. Regular expressions can be used only with expanded community lists. The maximum length is 80 characters.

<b>Default</b>	BGP extended community exchange is disabled by default. It is enabled on a per-neighbor basis with the <b>neighbor send-community</b> command.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	<p>The extended community attribute is used for implementing policy routing. It is an optional, transitive attribute and facilitates transfer of local policies through different autonomous systems. All names of the standard extcommunity list and expanded extcommunity list must not be the same.</p> <p>This command can be applied multiple times. BGP extended community attributes exchanged between BGP peers are controlled by the <b>neighbor send-community</b> command.</p> <p>If permit rules exist in an extended community list, routes with extended community that does not match any rule in the list will be denied. If there are no rules or only deny rules to be configured in the extended community list, all routes will be denied.</p> <p>Use the <b>show ip extcommunity-list</b> command to verify your settings.</p>

**Example** The following example defines a standard extended community list named *myecom* with an entry.

```
DXS-3600-32S(config)# ip extcommunity-list standard myecom permit rt 1:1 soo 1.1.1.1:1
DXS-3600-32S(config)#
```

**Example** The following example show how to delete an entry in an extended community list early configured. After that, the community list *myecom* has no entry, but it still exists.

```
DXS-3600-32S(config)#no ip extcommunity-list standard myecom permit rt 1:1 soo 1.1.1.1:1
DXS-3600-32S(config)#
```

**Example** The following example show how to delete an extended community list no matter whether it has entries or not.

```
DXS-3600-32S(config)# no ip extcommunity-list standard myecom
DXS-3600-32S(config)#
```

**Example** The following example creates an expanded extended community list named *myexpcom* with an entry.

```
DXS-3600-32S(config)# ip extcommunity-list expanded myexpcom permit _20[0-9]
DXS-3600-32S(config)#
```

## 7-35 neighbor activate

This command is used to enable the exchange of information with a Border Gateway Protocol (BGP) neighbor. Use the no form of this command to disable the exchange of information with a BGP neighbor.

```
neighbor {IP-ADDRESS | PEER-GROUP-NAME} activate
no neighbor {IP-ADDRESS | PEER-GROUP-NAME} activate
```

### Parameters

<i>IP-ADDRESS</i>	Specifies the IP address of the BGP peer.
<i>PEER-GROUP-NAME</i>	Specifies the name of a Border Gateway Protocol (BGP) peer group. The maximum length is 16 characters.

<b>Default</b>	The exchange of addresses with BGP neighbors is enabled for the IPv4 unicast address family and is disabled for the VPNv4 address family if the default IPv4 unicast is enabled.
<b>Command Mode</b>	Router Configuration Mode. Address Family Configuration Mode (IPv4 Unicast, VPNv4 and VRF).
<b>Command Default Level</b>	Level: 8. (EI Mode Only Command)
<b>Usage Guideline</b>	<p>If you specify a BGP peer group by using the <i>PEER-GROUP-NAME</i> argument, all the members of the peer group will inherit the characteristic configured with this command. It is not allowed to disable an active peer group.</p> <p>When using the no form of this command, the exchange of addresses with a BGP neighbor is disabled for the IPv4 address family, and the connection will be torn down, so the following log message will be generated:</p> <pre>[BGP(2):] BGP connection is normally closed (Peer:&lt;ipaddress&gt;)</pre> <p>where the &lt;ipaddress&gt; is the address of the peer.</p> <p>Use the <b>show ip bgp neighbors</b> or <b>show ip bgp peer-group</b> command to verify your settings.</p>

**Example** This example shows how to disable address exchange for neighbor 10.4.4.4

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 100
DXS-3600-32S(config-router)#neighbor 10.4.4.4 remote-as 65101
DXS-3600-32S(config-router)#no neighbor 10.4.4.4 activate
DXS-3600-32S(config-router)#
```

## 7-36 neighbor advertisement-interval

This command is used to set the minimum interval between sending Border Gateway Protocol (BGP) routing updates. Use the no command to return to the default configuration.

```
neighbor {IP-ADDRESS | PEER-GROUP-NAME} advertisement-interval SECONDS
no neighbor {IP-ADDRESS | PEER-GROUP-NAME} advertisement-interval
```

### Parameters

<i>IP-ADDRESS</i>	Specifies the IP address of the BGP peer.
<i>PEER-GROUP-NAME</i>	Specifies the name of a Border Gateway Protocol (BGP) peer group. The maximum length is 16 characters.
<i>SECONDS</i>	Specifies the interval, in seconds, between the sending of UPDATE messages. The range is from 0 to 600. If this value is set to zero, the update or withdrawn message will be sent immediately.

<b>Default</b>	By default, it is 30 seconds for external peers and 5 seconds for internal peers.
<b>Command Mode</b>	Router Configuration Mode. Address Family Configuration Mode (VRF).
<b>Command Default Level</b>	Level: 8. (EI Mode Only Command)
<b>Usage Guideline</b>	If you specify a BGP peer group, by using the <i>PEER-GROUP-NAME</i> argument, all the members of the peer group will inherit the characteristic configured with this command.  Use the <b>show ip bgp neighbors</b> or <b>show ip bgp peer-group</b> command to verify your settings.
<b>Example</b>	This example shows how to set the minimum time interval between sending BGP routing updates to 15 seconds.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 100
DXS-3600-32S(config-router)#neighbor 10.4.4.4 remote-as 65101
DXS-3600-32S(config-router)#neighbor 10.4.4.4 advertisement-interval 15
DXS-3600-32S(config-router)#
```

## 7-37 neighbor allowas-in

This command is used to enable routers to allow its own AS appearing in the received BGP update packets. To disable the duplicate AS number, use the no form of this command.

```
neighbor {IP-ADDRESS | PEER-GROUP-NAME} allowas-in [NUMBER]
no neighbor {IP-ADDRESS | PEER-GROUP-NAME} allowas-in
```

### Parameters

<i>IP-ADDRESS</i>	Specifies the IP address of the BGP peer.
<i>PEER-GROUP-NAME</i>	Specifies the name of a Border Gateway Protocol (BGP) peer group. The maximum length is 16 characters.
<i>NUMBER</i>	(Optional) Specifies the maximum number of local AS to allow appearing in the AS-path attribute of the update packets. The value is from 1 to 10. If no number is supplied, the default value of 3 times is used.

<b>Default</b>	By default, this option is disabled.
<b>Command Mode</b>	Router Configuration Mode. Address Family Configuration Mode (IPv4 Unicast, VPNv4 and VRF).
<b>Command Default Level</b>	Level: 8. (EI Mode Only Command)
<b>Usage Guideline</b>	The BGP router will do AS path loop checks for the received BGP update packets. If the BGP router's own AS appears in the AS path list, it is identified as a loop and the packets will be discarded. If the allowas-in setting is enabled, the BGP router's own AS is allowed in the AS path list.  Use the <b>show ip bgp neighbors</b> or <b>show ip bgp peer-group</b> command to verify your settings.

**Example** This example shows how to set the number of times of the local router's own AS to allow appearing in the update packets received from the neighbor 100.16.5.4 to 5.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 100
DXS-3600-32S(config-router)#neighbor 100.16.5.4 remote-as 65101
DXS-3600-32S(config-router)#neighbor 100.16.5.4 allowas-in 5
DXS-3600-32S(config-router)#
```

**Example** This example shows how to set the 'allowas-in' value to 3 without the *NUMBER* parameter.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 100
DXS-3600-32S(config-router)#neighbor 100.16.5.4 remote-as 65101
DXS-3600-32S(config-router)#neighbor 100.16.5.4 allowas-in
DXS-3600-32S(config-router)#
```

## 7-38 neighbor as-override

This command is used to enable to override the AS number of a site with the provider's AS number on a PE router. Use the **no** form of the command to disable this function.

```
neighbor {IP-ADDRESS | PEER-GROUP-NAME} as-override
no neighbor {IP-ADDRESS | PEER-GROUP-NAME} as-override
```

### Parameters

<i>IP-ADDRESS</i>	Specifies the address of the peer.
<i>PEER-GROUP-NAME</i>	Specifies the name of the peer group,

**Default** Disabled.

**Command Mode** Address Family Configuration (VRF).

**Command Default Level** Level: 8. (**EI Mode Only Command**)

**Usage Guideline** This command is used to prevent routing loops between routers within a VPN.

In the VPN, the most typical application lies in that the two CE ends have the same AS number. Normally, these two CE routers can't receive the other from the other party, because the BGP protocol will not receive the route information with the same AS number in AS path attribute as the AS of BGP instance itself. After the above command is configured on the PE router, you can let the PE replace the AS number of the CE to AS number of PE self, so that the CE from the other end can receive the route information. Only set this function for the EBGp peer.

Use the **show ip bgp neighbors** or **show ip bgp peer-group** command to verify your settings.

**Example** This example shows how to enable AS override flag of BGP peer 3.3.3.3 in VRF *vpn1*.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)# router bgp 10
DXS-3600-32S(config-router)# address-family ipv4 vrf vpn1
DXS-3600-32S(config-router-af)# neighbor 3.3.3.3 remote-as 20
DXS-3600-32S(config-router-af)# neighbor 3.3.3.3 as-override
```

## 7-39 neighbor capability orf prefix-list

This command is used to advertise outbound router filter (ORF) capabilities to a peer or a peer group. Use the **no** form of this command to disable ORF capabilities.

```
neighbor {IP-ADDRESS | PEER-GROUP-NAME} capability orf prefix-list {receive | send | both}
no neighbor {IP-ADDRESS | PEER-GROUP-NAME} capability orf prefix-list {receive | send | both}
```

## Parameters

<b>IP-ADDRESS</b>	Specifies the IP address of the BGP peer.
<b>PEER-GROUP-NAME</b>	Specifies the name of a Border Gateway Protocol (BGP) peer group. The maximum length is 16 characters.
<b>receive</b>	Specifies to enable the ORF capability in the receive mode.
<b>send</b>	Specifies to enable the ORF capability in the send mode.
<b>both</b>	Specifies to enable the ORF capabilities in both the receive and send modes.

<b>Default</b>	No ORF capabilities are advertised to a peer router.
<b>Command Mode</b>	Router Configuration Mode. Address Family Configuration Mode (IPv4 Unicast, VPNv4 and VRF).
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	<p>The BGP Outbound Route Filter (ORF) capability allows one BGP router to install its configured inbound prefix list filter on to the remote BGP router. This is used for reducing the amount of unwanted routing updates from the remote peer.</p> <p>When using this command, a BGP connection will be torn down, so the following log message will be generated.</p> <p>[BGP(2):] BGP connection is normally closed (Peer:&lt;ipaddress&gt;)</p> <p>Where the &lt;ipaddress&gt; is the address of the peer. After a while, the connection will be rebuilt, and the following log message will be generated.</p> <p>[BGP(1):] BGP connection is successfully established Peer:&lt;ipaddress&gt;</p> <p>Where the &lt;ipaddress&gt; is the address of the peer.</p> <p>Use the <b>show ip bgp neighbors</b> or <b>show ip bgp peer-group</b> command to verify your settings.</p>

**Example** The following example shows how to configure the router to advertise ORF.

Assume there are two routers, R1 (10.90.90.90) and R2 (10.1.1.1). R2 has two BGP routes, 172.18.1.0/24 and 172.19.1.0/24. R1 only want to receive 172.18.0.0/16, and then it can notify to R2 its willingness though ORF.

On router R1, configure an **ip prefix-list** named 'myorf' first.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip prefix-list myorf permit 172.18.0.0/16 le 32
DXS-3600-32S(config)#
```

**Example** Then, set the routing policy to R2, and advertise the ORF to R2.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 100
DXS-3600-32S(config-router)#neighbor 10.1.1.1 remote-as 1
DXS-3600-32S(config-router)#neighbor 10.1.1.1 prefix-list myorf in
DXS-3600-32S(config-router)#neighbor 10.1.1.1 capability orf prefix-list send
DXS-3600-32S(config-router)#
```

**Example** On router R2, advertise its ORF capability in receive direction to R1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 101
DXS-3600-32S(config-router)#neighbor 10.90.90.90 remote-as 10
DXS-3600-32S(config-router)#neighbor 10.90.90.90 capability orf prefix-list receive
DXS-3600-32S(config-router)#
```

## 7-40 neighbor default-originate

This command is used to allow a BGP speaker (the local router) to send the default route 0.0.0.0 to a neighbor for use as a default route. To send no route as a default, use the no form of this command.

```
neighbor {IP-ADDRESS | PEER-GROUP-NAME} default-originate [route-map MAP-NAME]
no neighbor {IP-ADDRESS | PEER-GROUP-NAME} default-originate
```

### Parameters

<i>IP-ADDRESS</i>	Specifies the IP address of the BGP peer.
<i>PEER-GROUP-NAME</i>	Specifies the name of a Border Gateway Protocol (BGP) peer group. The maximum length is 16 characters.
<i>MAP-NAME</i>	(Optional) Specifies the name of the route map. The length is up to 16 characters. The route map allows route 0.0.0.0 to be injected conditionally.

<b>Default</b>	No default route is sent to the neighbor.
<b>Command Mode</b>	Router Configuration Mode. Address Family Configuration Mode (IPv4 Unicast and VRF).
<b>Command Default Level</b>	Level: 8. (EI Mode Only Command)
<b>Usage Guideline</b>	This command allows a BGP speaker (the local router) to send the default route 0.0.0.0/0 to a specified neighbor to use as its default route. If route map is specified, the default route will be injected if the route map contains a match IP address statement.  Use the <b>show ip bgp neighbors</b> or <b>show ip bgp peer-group</b> command to verify your settings.

**Example** This example shows how to advertisement the BGP default route to the neighbor 172.16.2.3 unconditionally.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 10
DXS-3600-32S(config-router)#neighbor 172.16.2.3 remote-as 20
DXS-3600-32S(config-router)#neighbor 172.16.2.3 default-originate
DXS-3600-32S(config-router)#
```

**Example** This example shows how to send an advertisement BGP default route to neighbor 172.16.22.32 and set the weight to 2000. Create a route-map name, called 'mymap' and set the entry.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#route-map mymap permit 1
DXS-3600-32S(config-route-map)#set weight 2000
DXS-3600-32S(config-route-map)#
```

**Example** This example shows how to configure BGP neighbor to use the route map, called 'mymap', as the default originate filter.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 1
DXS-3600-32S(config-router)#neighbor 172.16.22.32 remote-as 2
DXS-3600-32S(config-router)#neighbor 172.16.22.32 default-originate route-map mymap
DXS-3600-32S(config-router)#
```

## 7-41 neighbor description

This command is used to associate a description with a neighbor or a peer group. Use the no form of this command to remove the description.

**neighbor** {*IP-ADDRESS* | *PEER-GROUP-NAME*} **description** *DESC*  
**no neighbor** {*IP-ADDRESS* | *PEER-GROUP-NAME*} **description**

### Parameters

<i>IP-ADDRESS</i>	Specifies the IP address of the BGP peer.
<i>PEER-GROUP-NAME</i>	Specifies the name of a Border Gateway Protocol (BGP) peer group. The maximum length is 16 characters.
<i>DESC</i>	Specifies a descriptive string for the neighbor. The maximum length is 80 characters. The syntax is general string that allows space.

**Default** There is no description.

**Command Mode** Router Configuration Mode.  
Address Family Configuration Mode (VRF).

**Command Default Level** Level: 8. (EI Mode Only Command)

**Usage Guideline** If you specify a BGP peer group by using the *PEER-GROUP-NAME* argument, all the members of the peer group will inherit the characteristic (description) configured with this command.

Use the **show ip bgp neighbors** or **show ip bgp peer-group** command to verify your settings.

**Example** This example shows how to configure a description for the neighbor 172.16.10.10.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 65100
DXS-3600-32S(config-router)#neighbor 172.16.10.10 remote-as 65101
DXS-3600-32S(config-router)#neighbor 172.16.10.10 description ABC in Taiwan
DXS-3600-32S(config-router)#
```

## 7-42 neighbor ebgp-multihop

This command is used to set the TTL value of BGP connections to external peers or peer-groups that are not directly connected. Use the no form of this command to return to the default.

**neighbor** {*IP-ADDRESS* | *PEER-GROUP-NAME*} **ebgp-multihop** [*NUMBER*]  
**no neighbor** {*IP-ADDRESS* | *PEER-GROUP-NAME*} **ebgp-multihop**

### Parameters

<i>IP-ADDRESS</i>	Specifies the IP address of the BGP peer.
<i>PEER-GROUP-NAME</i>	Specifies the name of a Border Gateway Protocol (BGP) peer group. The maximum length is 16 characters.
<i>NUMBER</i>	(Optional) Specifies the TTL value, range from 1 to 255. If it is not specified, the value is 255.

**Default** By default, the hop value for EBGp neighbor is 1.

**Command Mode** Router Configuration Mode.  
Address Family Configuration Mode (VRF).

**Command Default Level** Level: 8. (EI Mode Only Command)

**Usage Guideline** If you specify a BGP peer group by using the *PEER-GROUP-NAME* argument, all the members of the peer group will inherit the characteristic configured with this command

Use the **show ip bgp neighbors** or **show ip bgp peer-group** command to verify your settings.

**Example** This example shows how to set the value of the *ebgp-multihop* in order to connect to the neighbor 172.16.10.10, which resides on a network that is not directly connected.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 100
DXS-3600-32S(config-router)#neighbor 172.16.10.10 remote-as 65101
DXS-3600-32S(config-router)#neighbor 172.16.10.10 ebgp-multihop 5
DXS-3600-32S(config-router)#
```

**Example** This example shows how to set the *ebgp-multihop* value to 255, without the *NUMBER* parameter.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 100
DXS-3600-32S(config-router)#neighbor 172.16.10.10 remote-as 65101
DXS-3600-32S(config-router)#neighbor 172.16.10.10 ebgp-multihop
DXS-3600-32S(config-router)#
```

## 7-43 neighbor filter-list

This command is used to set up a BGP filter. Use the *no* command to disable this function.

```
neighbor {IP-ADDRESS | PEER-GROUP-NAME} filter-list ACCESS-LIST-NAME {in | out}
no neighbor {IP-ADDRESS | PEER-GROUP-NAME} filter-list {in | out}
```

### Parameters

<i>IP-ADDRESS</i>	Specifies the IP address of the BGP peer.
<i>PEER-GROUP-NAME</i>	Specifies the name of a Border Gateway Protocol (BGP) peer group. The maximum length is 16 characters.
<i>ACCESS-LIST-NAME</i>	Specifies the name of an autonomous system path access list. You define this access list with the <b>ip as-path access-list</b> command.
<b>in</b>	Specifies the filter list that is applied to incoming advertisements from that neighbor.
<b>out</b>	Specifies the filter list that is applied to outgoing advertisements to that neighbor.

**Default** No filter is used.

**Command Mode** Router Configuration Mode.  
Address Family Configuration Mode (IPv4 Unicast, VPNv4 and VRF).

**Command Default Level** Level: 8. (EI Mode Only Command)

**Usage Guideline** This command specifies an access list filter on updates based on the BGP autonomous system paths. Each filter is an AS path access list based on regular expressions.

If the filter list doesn't exist, it will permit all. If the filter list does exist but has no filter entry, it means deny any.

Each neighbor can only have one inbound and one outbound access list.

Use the **show ip bgp neighbors** or **show ip bgp peer-group** command to verify your settings.



**Example** This example shows how to configure the BGP neighbor 172.16.1.1 not to sent advertisements about any path through the adjacent autonomous system 123. Firstly, create an **ip as-path access-list** named 'myacl'.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip as-path access-list myacl deny _123_
DXS-3600-32S(config)#ip as-path access-list myacl deny ^123$
DXS-3600-32S(config)#ip as-path access-list myacl permit .*
DXS-3600-32S(config)#
```

**Example** Then, set the routing policy to neighbor 172.16.1.1

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 65100
DXS-3600-32S(config-router)#neighbor 192.168.6.6 remote-as 123
DXS-3600-32S(config-router)#neighbor 172.16.1.1 remote-as 65200
DXS-3600-32S(config-router)#neighbor 172.16.1.1 filter-list myacl out
DXS-3600-32S(config-router)#
```

## 7-44 neighbor maximum-prefix

This command is used to control how many prefixes can be received from a neighbor. Use the no form of this command to return to the default value.

**neighbor** {*IP-ADDRESS* | *PEER-GROUP-NAME*} **maximum-prefix** *MAXIMUM* [*THRESHOLD*] [**warning-only**]  
**no neighbor** {*IP-ADDRESS* | *PEER-GROUP-NAME*} **maximum-prefix**

### Parameters

<i>IP-ADDRESS</i>	Specifies the IP address of the BGP peer.
<i>PEER-GROUP-NAME</i>	Specifies the name of a Border Gateway Protocol (BGP) peer group. The maximum length is 16 characters.
<i>MAXIMUM</i>	Specifies the maximum number of prefixes allowed from the specified neighbor. The number of prefixes that can be configured is limited only by the available system resources on a router.
<i>THRESHOLD</i>	(Optional) Integer specifying at what the percentage of the maximum prefix limit the router starts to generate a warning message. The range is from 1 to 100. The default is 75.
<b>warning-only</b>	(optional) Allows the router to generate a sys-log message when the maximum-prefix limit is exceeded, instead of terminating the peering session.

**Default** The default maximum number of prefix is 16000.  
 Peering sessions are disabled when the maximum number of prefixes is exceeded.  
*THRESHOLD*: 75 percent.

**Command Mode** Router Configuration Mode.  
 Address Family Configuration Mode (IPv4 Unicast, VPNv4 and VRF).

**Command Default Level** Level: 8. (**EI Mode Only Command**)

**Usage Guideline** When the number of received prefixes exceeds the maximum number configured, BGP disables the peering session (by default). You can use the **clear ip bgp** command to re-establish the session. If the warning-only keyword is configured, BGP sends only a log message and continues to peer with the sender.

Use the **show ip bgp neighbors** or **show ip bgp peer-group** command to verify your settings.

**Example** In the following example, the maximum prefixes that will be received from the 192.168.1.1 neighbor are set to 10000.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 65100
DXS-3600-32S(config-router)#neighbor 192.168.1.1 remote-as 30000
DXS-3600-32S(config-router)#neighbor 192.168.1.1 maximum-prefix 10000
DXS-3600-32S(config-router)#
```

**Example** This example shows how to set the maximum prefixes to 10000, and set the local router to generate a log message instead of terminate the session when the maximum-prefix limit is exceeded.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 65100
DXS-3600-32S(config-router)#neighbor 192.168.1.1 remote-as 30000
DXS-3600-32S(config-router)#neighbor 192.168.1.1 maximum-prefix 10000 warning-only
DXS-3600-32S(config-router)#
```

## 7-45 neighbor next-hop-self

This command is used to configure the router as the next hop for a BGP-speaking peer or a peer group. To disable this feature, use the no form of this command.

```
neighbor {IP-ADDRESS | PEER-GROUP-NAME} next-hop-self
no neighbor {IP-ADDRESS | PEER-GROUP-NAME} next-hop-self
```

### Parameters

<i>IP-ADDRESS</i>	Specifies the IP address of the BGP peer.
<i>PEER-GROUP-NAME</i>	Specifies the name of a Border Gateway Protocol (BGP) peer group. The maximum length is 16 characters.

**Default** This command is disabled by default.

**Command Mode** Router Configuration Mode.  
Address Family Configuration Mode (IPv4 Unicast, VPNv4 and VRF).

**Command Default Level** Level: 8. (EI Mode Only Command)

**Usage Guideline** This command is useful in unmeshed networks (like Frame Relay or X.25) where BGP neighbors may not have direct access to all other neighbors on the same IP subnet.

If a neighbor belongs to a peer group, you can only configure the next-hop-self attribute from the peer group.

Use the **show ip bgp neighbors** or **show ip bgp peer-group** command to verify your settings.

**Example** This example shows how to force all updates destined for 10.108.1.1 to advertise this router as the next hop.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 65100
DXS-3600-32S(config-router)#neighbor 10.108.1.1 remote-as 30000
DXS-3600-32S(config-router)#neighbor 10.108.1.1 next-hop-self
DXS-3600-32S(config-router)#
```

## 7-46 neighbor password

This command is used to enable Message Digest 5 (MD5) authentication and set the password on a TCP connection between two BGP peers. To disable this function, use the no form of this command.

```
neighbor {IP-ADDRESS | PEER-GROUP-NAME} password PASSWORD
no neighbor {IP-ADDRESS | PEER-GROUP-NAME} password
```

### Parameters

<i>IP-ADDRESS</i>	Specifies the IP address of the BGP peer.
<i>PEER-GROUP-NAME</i>	Specifies the name of a Border Gateway Protocol (BGP) peer group. The maximum length is 16 characters.
<i>PASSWORD</i>	Specifies a case-sensitive password of up to 25 characters. Set the MD5 authentication password when the TCP connection between BGP neighbors is established.

**Default** Disabled.

**Command Mode** Router Configuration Mode.  
Address Family Configuration Mode (VRF).

**Command Default Level** Level: 8. (EI Mode Only Command)

**Usage Guideline** This command is used to configure the password for a BGP neighbor or BGP peer group. The password setting will cause TCP connections between the peers to restart with MD5 authentication. The same password need be configured between peers, otherwise the TCP connection will fail. A password can use special characters, such as '~!@#%&^&()\*-\_=+|\}{["';:/><.,?'. The maximum length of the password is 25 characters.

When using this command, BGP connection will be torn down, so the following log message will be generated.

```
[BGP(2):] BGP connection is normally closed (Peer:<ipaddress>)
```

Where the <ipaddress> is the address of the peer. After a while, the connection will be rebuilt if both the BGP speakers are configured the same password, and the following log message will be generated.

```
[BGP(1):] BGP connection is successfully established Peer:<ipaddress>
```

Where the <ipaddress> is the address of the peer.

Use the **show ip bgp neighbors** or **show ip bgp peer-group** command to verify your settings.

**Example** This example shows how to set the password of the BGP neighbor 10.2.2.2 to "abc".

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 40000
DXS-3600-32S(config-router)#neighbor 10.2.2.2 remote-as 30000
DXS-3600-32S(config-router)#neighbor 10.2.2.2 password abc
DXS-3600-32S(config-router)#
```

## 7-47 neighbor peer-group (add group member)

This command is used to add a neighbor in a peer group. Use the no command to remove a neighbor in a peer group.

```
neighbor IP-ADDRESS peer-group PEER-GROUP-NAME
no neighbor IP-ADDRESS peer-group PEER-GROUP-NAME
```

### Parameters

<i>IP-ADDRESS</i>	Specifies the IP address of the BGP peer.
-------------------	---

<i>PEER-GROUP-NAME</i>	Specifies the name of a Border Gateway Protocol (BGP) peer group. The maximum length is 16 characters.
<b>Default</b>	None.
<b>Command Mode</b>	Router Configuration Mode. Address Family Configuration Mode (IPv4 Unicast, VPNv4 and VRF).
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	<p>The neighbor at the specified IP address inherits all the configuration of the peer group. The members of a peer group must all be internal or external. If all the members of the BGP peer group are external, they are allowed to have different AS numbers.</p> <p>There are two kinds of peer groups. For one kind, the remote AS is not set. Members must be created with <b>remote-as</b> parameter before adding to the peer group. After a neighbor is added to the peer group, there is no influence to its remote AS if we then configure the peer group's remote AS. For the other kind, the peer group has been set a remote AS number. A neighbor can be added to the peer group with no remote AS. In this situation, it inherits the peer group's remote AS automatically, and its remote AS changes with the changing of peer group's remote AS.</p> <p>If a BGP peer belongs to a peer group, some attributes or actions can only be configured from the peer group. The following is a list of them:</p> <ul style="list-style-type: none"> <li>capability-of-prefix-list</li> <li>next-hop-self</li> <li>route-reflector-client</li> <li>send-community</li> <li>soft-reconfiguration-inbound</li> <li>remove-private-as</li> <li>allowas-in</li> <li>holdtime</li> <li>keepalive</li> <li>unsuppress-map</li> <li>filter-list for out direction</li> <li>route-map for out direction</li> <li>prefix-list for out direction</li> <li>as-override</li> <li>soo</li> </ul> <p>On the contrary, some attributes or actions are allowed to be configured from both the peer group and the member. If they are configured from the member, the setting will overwrite the setting configured from the peer group.</p> <p>Other attributes that can be set from an individual peer are as follows:</p> <ul style="list-style-type: none"> <li>description,</li> <li>filter-list for in direction,</li> <li>route-map for in direction,</li> <li>prefix-list for in direction,</li> <li>ebgp-multihop,</li> <li>shutdown,</li> <li>activate,</li> <li>weight.</li> <li>default-originate.</li> <li>update-source.</li> </ul>

As for the above attributes, setting the attribute of a peer group will automatically affect the setting for individual peers in the peer group.

If a BGP neighbor has already been the established state before using this command, BGP connection will be torn down, so the following log message will be generated.

[BGP(2):] BGP connection is normally closed (Peer:<ipaddress>)

Where the <ipaddress> is the address of the peer. After a while, the connection will be rebuilt, and the following log message will be generated.

[BGP(1):] BGP connection is successfully established Peer:<ipaddress>

Where the <ipaddress> is the address of the peer.

When delete a peer from the peer group, the peer will be deactivated if it was created with remote-as parameter.

Use the **show ip bgp peer-group** command to verify your settings.

### Example

This example shows how to add an existing peer 172.16.1.1 to a peer group named 'G1'.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 40000
DXS-3600-32S(config-router)#neighbor G1 peer-group
DXS-3600-32S(config-router)#neighbor 172.16.1.1 remote-as 30000
DXS-3600-32S(config-router)#neighbor 172.16.1.1 peer-group G1
DXS-3600-32S(config-router)#
```

### Example

This example shows how to add a new peer 172.16.1.2 to the peer group 'G2', in which case the peer group must be configured the remote-as first.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 40000
DXS-3600-32S(config-router)#neighbor G2 peer-group
DXS-3600-32S(config-router)#neighbor G2 remote-as 30000
DXS-3600-32S(config-router)#neighbor 172.16.1.2 peer-group G2
DXS-3600-32S(config-router)#
```

## 7-48 neighbor peer-group (create group)

This command is used to create a peer group. Use the no form of this command to delete a peer group.

```
neighbor PEER-GROUP-NAME peer-group
no neighbor PEER-GROUP-NAME peer-group
```

### Parameters

<i>PEER-GROUP-NAME</i>	Specifies the name of a Border Gateway Protocol (BGP) peer group. The maximum length is 16 characters.
------------------------	--

### Default

No default peer group.

### Command Mode

Router Configuration Mode.  
Address Family Configuration Mode (VRF).

### Command Default Level

Level: 8. (EI Mode Only Command)

### Usage Guideline

Use this command to gather a set of neighbors for simplifying configuration. The remote AS must specified by using the neighbor *PEER-GROUP-NAME remote-as AS-NUMBER* command.

Use the **show ip bgp peer-group** command to verify your settings.

**Example** This example shows how to create a peer group named 'MAIN-GROUP'.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 40000
DXS-3600-32S(config-router)#neighbor MAIN-GROUP peer-group
DXS-3600-32S(config-router)#
```

## 7-49 neighbor prefix-list

This command is used to set a routing policy to a specified peer or a peer group based on the prefix list. To remove a prefix list, use the no form of this command.

```
neighbor {IP-ADDRESS | PEER-GROUP-NAME} prefix-list PREFIX-LIST-NAME {in | out}
no neighbor {IP-ADDRESS | PEER-GROUP-NAME} prefix-list {in | out}
```

### Parameters

<i>IP-ADDRESS</i>	Specifies the IP address of the BGP peer.
<i>PEER-GROUP-NAME</i>	Specifies the name of a Border Gateway Protocol (BGP) peer group. The maximum length is 16 characters.
<i>PREFIX-LIST-NAME</i>	Specifies the name of a prefix list. The length is up to 16 characters.
<b>in</b>	Specifies the filter list that is applied to incoming advertisements from that neighbor.
<b>out</b>	Specifies the filter list that is applied to outgoing advertisements to that neighbor.

<b>Default</b>	All external and advertised address prefixes are distributed to BGP neighbor.
<b>Command Mode</b>	Router Configuration Mode. Address Family Configuration Mode (IPv4 Unicast, VPNv4 and VRF).
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	The command is used to configure the filter related setting for a BGP neighbor or a peer group based on the prefix list.  If the prefix list doesn't exist or the prefix list does exist but has no filter entry defined, it will permit all.  Use the <b>show ip bgp neighbors</b> or <b>show ip bgp peer-group</b> command to verify your settings.

**Example** This example shows how to configure the BGP neighbor 172.18.1.1 to apply the prefix list named myprefix to incoming advertisements:

Firstly, create an **ip prefix-list** named 'myprefix'.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip prefix-list myprefix permit 172.20.0.0/16 le 32
DXS-3600-32S(config)#
```

**Example** Then, set the routing policy to neighbor 172.18.1.1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 40000
DXS-3600-32S(config-router)#neighbor 172.18.1.1 remote-as 65200
DXS-3600-32S(config-router)#neighbor 172.18.1.1 prefix-list myprefix in
DXS-3600-32S(config-router)#
```

## 7-50 neighbor remote-as

This command is used to create a BGP neighbor with its remote AS or configure the remote AS of a peer group. Use the no form of this command to delete a neighbor or a peer group.

```
neighbor {IP-ADDRESS | PEER-GROUP-NAME} remote-as AS-NUMBER
no neighbor {IP-ADDRESS | PEER-GROUP-NAME} remote-as
```

### Parameters

<i>IP-ADDRESS</i>	Specifies the IP address of the BGP peer.
<i>PEER-GROUP-NAME</i>	Specifies the name of a Border Gateway Protocol (BGP) peer group. The maximum length is 16 characters.
<i>AS-NUMBER</i>	Specifies the number of autonomous system to which the neighbor belongs. Range for 2-byte numbers is 1 to 65535. Range for 4-byte numbers is 1 to 4294967295.

<b>Default</b>	There are no BGP neighbor peers.
<b>Command Mode</b>	Router Configuration Mode. Address Family Configuration Mode (VRF).
<b>Command Default Level</b>	Level: 8. (EI Mode Only Command)
<b>Usage Guideline</b>	If you specify a BGP peer group, all the members of the peer group will inherit the characteristic configured with this command. When using the no form of this command with PEER-GROUP parameter, all the members that are generated with no indicated AS number will be deleted.  Use the <b>show ip bgp neighbors</b> or <b>show ip bgp peer-group</b> command to verify your settings.

**Example** This example shows how to create a neighbor 10.10.10.2 with remote AS 10.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 40000
DXS-3600-32S(config-router)#neighbor 10.10.10.2 remote-as 10
DXS-3600-32S(config-router)#
```

## 7-51 neighbor remove-private-as

This command is used to remove private autonomous system numbers from the autonomous system path attribute in the updates sent to the specified neighbor or the members of the specified peer group. To disable this function, use the no form of this command.

```
neighbor {IP-ADDRESS | PEER-GROUP-NAME} remove-private-as
no neighbor {IP-ADDRESS | PEER-GROUP-NAME} remove-private-as
```

### Parameters

<i>IP-ADDRESS</i>	Specifies the IP address of the BGP peer.
<i>PEER-GROUP-NAME</i>	Specifies the name of a Border Gateway Protocol (BGP) peer group. The maximum length is 16 characters.

<b>Default</b>	By default, this option is disabled.
<b>Command Mode</b>	Router Configuration Mode. Address Family Configuration Mode (IPv4 Unicast and VRF).
<b>Command Default Level</b>	Level: 8. (EI Mode Only Command)

**Usage Guideline**

This command is available for external BGP (eBGP) neighbors only.

When an update is passed to the external neighbor, if the autonomous system path includes private autonomous system numbers, the software will drop the private autonomous system numbers except the following conditions:

If the autonomous system path includes both private and public autonomous system numbers, the software considers this to be a configuration error and does not remove the private autonomous system numbers.

If the autonomous system path contains the autonomous system number of the eBGP neighbor, the private autonomous system numbers will not be removed.

If this command is used with confederation, it will work as long as the private autonomous system numbers follow the confederation portion of the autonomous path. The private autonomous system values are 64512 to 65535.

Use the **show ip bgp neighbors** or **show ip bgp peer-group** command to verify your settings.

**Example**

This example shows how to remove the private autonomous system number from the updates sent to 172.16.1.1. The AS path attribute of the updates advertised by 10.10.10.10 through autonomous system 100 will just contain "10" (as seen by autonomous system 20).

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 10
DXS-3600-32S(config-router)#neighbor 10.10.10.10 remote-as 65530
DXS-3600-32S(config-router)#neighbor 172.16.1.1 remote-as 20
DXS-3600-32S(config-router)#neighbor 172.16.1.1 remove-private-as
DXS-3600-32S(config-router)#
```

**7-52 neighbor route-map**

This command is used to apply a route map to incoming or outgoing routes. Use the no command to remove the route map.

```
neighbor {IP-ADDRESS | PEER-GROUP-NAME} route-map MAP-NAME {in | out}
no neighbor {IP-ADDRESS | PEER-GROUP-NAME} route-map {in | out}
```

**Parameters**

<b>IP-ADDRESS</b>	Specifies the IP address of the BGP peer.
<b>PEER-GROUP-NAME</b>	Specifies the name of a Border Gateway Protocol (BGP) peer group. The maximum length is 16 characters.
<b>MAP-NAME</b>	Specifies the name of the route map. The length is up to 16 characters.
<b>in</b>	Applies the route-map to the incoming routes.
<b>out</b>	Applies the route-map to the outgoing routes.

**Default**

None.

**Command Mode**

Router Configuration Mode.  
Address Family Configuration Mode (IPv4 Unicast, VPNv4 and VRF).

**Command Default Level**

Level: 8. (EI Mode Only Command)



**Usage Guideline** The command is used to configure the route map related setting for a BGP neighbor or a peer group.

If a route map is configured relating to a BGP neighbor but the route map doesn't exist, it means deny any. If the route map exists but has no filter entry defined, it will permit all.

Use the **show ip bgp neighbors** or **show ip bgp peer-group** command to verify your settings.

**Example** This example shows how to apply a route map named internal-map to a BGP outgoing updates to 172.16.1.1:

Firstly, create a **route-map** named 'internal-map'.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#route-map internal-map
DXS-3600-32S(config-route-map)#set local-preference 100
DXS-3600-32S(config-route-map)#
```

**Example** Then, set the routing policy to neighbor 172.16.1.1

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 10
DXS-3600-32S(config-router)#neighbor 172.16.1.1 remote-as 10
DXS-3600-32S(config-router)#neighbor 172.16.1.1 route-map internal-map out
DXS-3600-32S(config-router)#
```

## 7-53 neighbor route-reflector-client

This command is used to configure the local BGP as a route reflector and specify a neighbor or a peer group as its client. Use the no form of this command to remove the client.

**neighbor {IP-ADDRESS | PEER-GROUP-NAME} route-reflector-client**  
**no neighbor {IP-ADDRESS | PEER-GROUP-NAME} route-reflector-client**

### Parameters

<i>IP-ADDRESS</i>	Specifies the IP address of the BGP peer.
<i>PEER-GROUP-NAME</i>	Specifies the name of a Border Gateway Protocol (BGP) peer group. The maximum length is 16 characters.

**Default** No route reflector client set.

**Command Mode** Router Configuration Mode.  
Address Family Configuration Mode (IPv4 Unicast and VPNv4).

**Command Default Level** Level: 8. (EI Mode Only Command)

## Usage Guideline

When the route reflector client is defined and the router reflection is enabled by the command **bgp client-to-client reflection**, the BGP router will act as the route reflector. The reflector and its clients form a cluster. In a cluster, all the members must be an iBGP connection with the reflector and vice versa. The reflector is the representative of the cluster. For the reflector, the iBGP connection is established by the **neighbor remote-as** command and the corresponding neighbor must be specified as the client by this command. For the client, the iBGP connection is established by the **neighbor remote-as** command.

When the router is in reflection mode, the router will exchange information with client neighbors in the reflection way and with the remaining neighbors in the ordinary way. When the router is in non-reflection mode, the router will exchange information with all the neighbors in the non-reflection way.

An AS can have multiple clusters, and a cluster can have more than one reflector for redundancy purposes.

Use the **show ip bgp reflection** command to verify your settings.

## Example

This example shows how to add a neighbor as the route reflector client.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 5
DXS-3600-32S(config-router)#neighbor 10.10.10.2 remote-as 5
DXS-3600-32S(config-router)#neighbor 10.10.10.2 route-reflector-client
DXS-3600-32S(config-router)#
```

## 7-54 neighbor send-community

This command is used to specify that community attribute should be sent to a BGP neighbor or all the members of a peer group. Use the no form of this command to remove the entry.

```
neighbor {IP-ADDRESS | PEER-GROUP-NAME} send-community [standard]
no neighbor {IP-ADDRESS | PEER-GROUP-NAME} send-community [standard]
```

### Parameters

<i>IP-ADDRESS</i>	Specifies the IP address of the BGP peer.
<i>PEER-GROUP-NAME</i>	Specifies the name of a Border Gateway Protocol (BGP) peer group. The maximum length is 16 characters.
<b>standard</b>	(Optional) Specifies that only standard communities will be sent.

### Default

None.

### Command Mode

Router Configuration Mode.  
Address Family Configuration Mode (IPv4 Unicast and VRF).

### Command Default Level

Level: 8. (EI Mode Only Command)

### Usage Guideline

If you specify a BGP peer group by using the *PEER-GROUP-NAME*, all the members of the peer group will inherit the characteristic configured with this command.

Only the standard communities will be sent if no optional parameter is specified.

Use the **show ip bgp neighbors** or **show ip bgp peer-group** command to verify your settings.

**Example** This example shows how to set the send-community with standard.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 65100
DXS-3600-32S(config-router)#neighbor 10.4.4.4 remote-as 65200
DXS-3600-32S(config-router)#neighbor 10.4.4.4 send-community standard
DXS-3600-32S(config-router)#
```

## 7-55 neighbor send-community (VPNv4)

This command used to specify whether the community attribute should be sent to a BGP neighbor or all the members of a peer group. Use the **no** form of this command to remove the entry.

```
neighbor {IP-ADDRESS | PEER-GROUP-NAME} send-community [{both | standard | extended}]
no neighbor {IP-ADDRESS | PEER-GROUP-NAME} send-community [{both | standard | extended}]
```

### Parameters

<i>IP-ADDRESS</i>	Specifies the IP address of the BGP peer.
<i>PEER-GROUP-NAME</i>	Specifies the name of the BGP peer group. The maximum length is 16 characters.
<b>both</b>	(Optional) Specifies that both standard and extended communities will be sent.
<b>standard</b>	(Optional) Specifies that only standard communities will be sent.
<b>extended</b>	(Optional) Specifies that only extended communities will be sent.

**Default** None.

**Command Mode** Address Family Configuration (VPNv4).

**Command Default Level** Level: 8. (EI Mode Only Command)

**Usage Guideline** If you specify a BGP peer group by using the *PEER-GROUP-NAME*, all the members of the peer group will inherit the characteristic configured with this command.

Only the **standard** communities will be sent if no optional parameter is specified.

Use the **show ip bgp neighbors** or **show ip bgp peer-group** command to verify your settings.

**Example** The following example sets the send-community with extended in address family VPNv4.

```
DXS-3600-32S(config)# router bgp 65100
DXS-3600-32S(config-router)# neighbor 10.4.4.4 remote-as 65200
DXS-3600-32S(config-router)# address-family vpnv4
DXS-3600-32S(config-router-af)#neighbor 10.4.4.4 send-community extended
DXS-3600-32S(config-router-af)#
```

## 7-56 neighbor shutdown

This command is used to disable a neighbor or a peer group. Use the **no** form of this command to re-enable a neighbor or a peer group.

```
neighbor {IP-ADDRESS | PEER-GROUP-NAME} shutdown
no neighbor {IP-ADDRESS | PEER-GROUP-NAME} shutdown
```

**Parameters**

<i>IP-ADDRESS</i>	Specifies the IP address of the BGP peer.
<i>PEER-GROUP-NAME</i>	Specifies the name of a Border Gateway Protocol (BGP) peer group. The maximum length is 16 characters.

<b>Default</b>	The peers or peer groups do not shut down.
<b>Command Mode</b>	Router Configuration Mode. Address Family Configuration Mode (VRF).
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	<p>You can use this command to terminate any active session for the specified neighbor or peer group. After this command is executed, all the routing information associated with the neighbor or peer group are cleared, but the configured information still exist. In the case of a peer group, a large number of peering sessions could be terminated suddenly.</p> <p>Use the <b>show ip bgp neighbors</b> or <b>show ip bgp peer-group</b> command to verify your settings.</p>

**Example** This example shows how to disable any active session for the neighbor 172.16.10.10.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 65100
DXS-3600-32S(config-router)#neighbor 172.16.10.10 shutdown
DXS-3600-32S(config-router)#
```

**7-57 neighbor soft-reconfiguration inbound**

This command is used to start storing the route updates received from the specified neighbor or peer group. To not store received updates, use the no form of this command.

**neighbor {IP-ADDRESS | PEER-GROUP-NAME} soft-reconfiguration inbound**  
**no neighbor {IP-ADDRESS | PEER-GROUP-NAME} soft-reconfiguration inbound**

**Parameters**

<i>IP-ADDRESS</i>	Specifies the IP address of the BGP peer.
<i>PEER-GROUP-NAME</i>	Specifies the name of a Border Gateway Protocol (BGP) peer group. The maximum length is 16 characters.

<b>Default</b>	Disabled.
<b>Command Mode</b>	Router Configuration Mode. Address Family Configuration Mode (IPv4 Unicast and VRF).
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	<p>If the setting is enabled, the route updates received from the specified neighbor or peer group will be stored. In this case, the routing table can be rebuilt based on the stored route updates after the soft reset for inbound sessions. Otherwise, both BGP peers must support the soft route refresh capability, which is advertised in the OPEN message sent when the peers establish a TCP session, and in order to rebuild the routing table, the local router need to send the ROUTE REFRESH message to the neighbor to ask for the route information.</p> <p>Use the <b>show ip bgp neighbors</b> or <b>show ip bgp peer-group</b> command to verify your settings.</p>

**Example** This example shows how to enable the inbound soft reconfiguration for the neighbor 172.16.10.1. All the updates received from this neighbor will be stored unmodified, regardless of the inbound policy.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 65100
DXS-3600-32S(config-router)#neighbor 172.16.10.1 remote-as 65200
DXS-3600-32S(config-router)#neighbor 172.16.10.1 soft-reconfiguration inbound
DXS-3600-32S(config-router)#
```

## 7-58 neighbor soo

This command is used to configure the Site of Origin (SoO) value of a peer or a peer group. Use the **no** form of this command to remove the Site of Origin value configured.

```
neighbor {IP-ADDRESS | PEER-GROUP-NAME} soo SOO-VALUE
no neighbor {IP-ADDRESS | PEER-GROUP-NAME} soo
```

### Parameters

<i>IP-ADDRESS</i>	Specifies the IP address of the peer.
<i>PEER-GROUP-NAME</i>	Specifies the name of the peer group.
<i>SOO-VALUE</i>	<p>The Site of Origin attribute will be encoded as a Route Origin Extended Community. There are two different types for this attribute:</p> <ul style="list-style-type: none"> <li>• <b>IP address:number:</b> The IP address should be a global IP address that is assigned to the user and the number is assigned from a numbering space that is administered by the user. The number can be 1-65535.</li> <li>• <b>AS number:number:</b> The AS Number should be a public AS Number (Both 2-bytes AS number and 4-bytes AS number works) that is assigned to the user and the number is assigned from a numbering space that is administered by the user. The number can be 1-4294967295 for 2-bytes AS number and 1-65535 for 4-bytes AS number.</li> </ul>

**Default** No Site of Origin attribute configured by default.

**Command Mode** Address Family Configuration (VRF).

**Command Default Level** Level: 8. (EI Mode Only Command)

**Usage Guideline** Use this command to set the SoO value for a BGP neighbor or a peer group. The SoO extended community is BGP extended communities attribute that is used to identify routes that have originated from a site so that the re-advertisement of that prefix back to the source site can be prevented. The SoO extended community uniquely identifies the site from which a router has learned a route. BGP can use the SoO value associated with a route to prevent routing loops.

Use the **show ip bgp neighbors** or **show ip bgp peer-group** command to verify your settings.

**Example** This example shows how to set the Site-of-Origin value of BGP peer 3.3.3.3 in VRF *vpn1*.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)# router bgp 10
DXS-3600-32S(config-router)# address-family ipv4 vrf vpn1
DXS-3600-32S(config-router-af)# neighbor 3.3.3.3 remote-as 20
DXS-3600-32S(config-router-af)# neighbor 3.3.3.3 soo 10:100
DXS-3600-32S(config-router-af)# exit- address-family
```

## 7-59 neighbor timers

This command is used to set the timers for a specific BGP peer or a peer group. Use the no form of this command to return to the default value of the global setting.

```
neighbor {IP-ADDRESS | PEER-GROUP-NAME} timers KEEP-ALIVE HOLD-TIME
no neighbor {IP-ADDRESS | PEER-GROUP-NAME} timers
```

### Parameters

<i>IP-ADDRESS</i>	Specifies the IP address of the BGP peer.
<i>PEER-GROUP-NAME</i>	Specifies the name of a Border Gateway Protocol (BGP) peer group. The maximum length is 16 characters.
<i>KEEP-ALIVE</i>	Specifies the frequency (in seconds) with which the software sends keepalive messages to its peer. The default is 60 seconds. The range is from 0 to 65535.
<i>HOLD-TIME</i>	Specifies the interval (in seconds) after not receiving a keepalive message that the software declares a peer dead. The default is 180 seconds. The range is from 0 to 65535.

<b>Default</b>	<i>KEEPALIVE</i> : 60 seconds <i>HOLDTIME</i> : 180 seconds
<b>Command Mode</b>	Router Configuration Mode. Address Family Configuration Mode (VRF).
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	<p><i>KEEP-ALIVE</i> specifies the interval at which a keepalive message is sent to its peers. The system will declare a peer as dead if not receiving a keepalive message until the hold time.</p> <p>If the <b>holdtime</b> is zero, the hold time will never expire. If the <b>keepalive</b> is set to zero, the keepalive message will never be sent out</p> <p>It is recommended that the <b>holdtime</b> value is three times than the <b>keepalive</b> timer.</p> <p>The timers configured for a specific neighbor or peer group override the timers configured for all BGP neighbors using the <b>timers bgp</b> command.</p> <p>Use the <b>show ip bgp neighbors</b> or <b>show ip bgp peer-group</b> command to verify your settings.</p>
<b>Example</b>	This example shows how to configure the <i>KEEP-ALIVE</i> timer to 120 seconds and <i>HOLDTIME</i> timer to 360 seconds for the neighbor 172.16.10.10

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 10
DXS-3600-32S(config-router)#neighbor 172.16.10.10 remote-as 65300
DXS-3600-32S(config-router)#neighbor 172.16.10.10 timers 120 360
DXS-3600-32S(config-router)#
```

## 7-60 neighbor unsuppress-map

This command is used to selectively advertise routes previously suppressed by the aggregate-address command. Use the no form of this command to remove the route map.

```
neighbor {IP-ADDRESS | PEER-GROUP-NAME} unsuppress-map MAP-NAME
no neighbor {IP-ADDRESS | PEER-GROUP-NAME} unsuppress-map
```

**Parameters**

<i>IP-ADDRESS</i>	Specifies the IP address of the BGP peer.
<i>PEER-GROUP-NAME</i>	Specifies the name of a Border Gateway Protocol (BGP) peer group. The maximum length is 16 characters.
<i>MAP-NAME</i>	Specifies the name of the route map. The length is up to 16 characters.

<b>Default</b>	No routes are unsuppressed.
<b>Command Mode</b>	Router Configuration Mode. Address Family Configuration Mode (IPv4 Unicast, VPNv4 and VRF).
<b>Command Default Level</b>	Level: 8. (EI Mode Only Command)
<b>Usage Guideline</b>	When a route map is applied by this command, the suppressed route which matches the permit rule will be unsuppressed.  If a route map is configured relating to a BGP neighbor but the route map doesn't exist, it means deny any. If the route map exists but has no filter entry defined, it will permit all.  Use the <b>show ip bgp neighbors</b> or <b>show ip bgp peer-group</b> command to verify your settings.

**Example** This example shows the routes specified by a route map named internal-map being unsuppressed for neighbor 172.16.10.10

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 100
DXS-3600-32S(config-router)#neighbor 172.16.10.10 unsuppress-map internal-map
DXS-3600-32S(config-router)#
```

**7-61 neighbor update-source**

This command is used to allow BGP sessions to use any operational interface for TCP connections. Use the no form of this command to restore the interface assignment to the closest interface.

**neighbor {IP-ADDRESS | PEER-GROUP-NAME} update-source INTERFACE-TYPE INTERFACE-NUMBER**  
**no neighbor {IP-ADDRESS | PEER-GROUP-NAME} update-source**

**Parameters**

<i>IP-ADDRESS</i>	Specifies the IP address of the BGP peer.
<i>PEER-GROUP-NAME</i>	Specifies the name of a Border Gateway Protocol (BGP) peer group. The maximum length is 16 characters.
<i>INTERFACE-TYPE</i>	Specifies the type of the interface. The supporting types include VLAN interface and loopback interface.
<i>INTERFACE-NUMBER</i>	Specifies the number of the interface. The interface number's range is from 1 to 8 for loopback interface and from 1 to 4094 for VLAN interface.

<b>Default</b>	By default, this option is disabled.
<b>Command Mode</b>	Router Configuration Mode. Address Family Configuration Mode (VRF).
<b>Command Default Level</b>	Level: 8. (EI Mode Only Command)

**Usage Guideline** Use this command in conjunction with any specified interface on the router. After this command configured success, BGP neighbor's session will be rebuilt.

Use the **show ip bgp neighbors** or **show ip bgp peer-group** command to verify your settings.

**Example** This example shows how to set the update-source interface of neighbor 172.16.10.10 to VLAN interface 3.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 100
DXS-3600-32S(config-router)#neighbor 172.16.10.10 update-source vlan 3
DXS-3600-32S(config-router)#
```

## 7-62 neighbor weight

This command is used to specify the weight to be associated with a specific neighbor. To remove a weight assignment, use the no form of this command.

**neighbor** {*IP-ADDRESS* | *PEER-GROUP-NAME*} **weight** *NUMBER*  
**no neighbor** {*IP-ADDRESS* | *PEER-GROUP-NAME*} **weight**

### Parameters

<i>IP-ADDRESS</i>	Specifies the IP address of the BGP peer.
<i>PEER-GROUP-NAME</i>	Specifies the name of a Border Gateway Protocol (BGP) peer group. The maximum length is 16 characters.
<i>NUMBER</i>	Specifies the weight to assign. Acceptable values are from 0 to 65535.

**Default** Routes learned from another BGP peer have a default weight of 0 and routes sourced by the local router have a default weight of 32768.

**Command Mode** Router Configuration Mode.  
Address Family Configuration Mode (VRF).

**Command Default Level** Level: 8. (EI Mode Only Command)

**Usage Guideline** The weight specified by this command determine the weight to be associated the routes learned from the specified neighbor.

Use the **show ip bgp neighbors** or **show ip bgp peer-group** command to verify your settings.

**Example** This example shows how to set the weight of the neighbor 10.4.4.4 to 10000.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 100
DXS-3600-32S(config-router)#neighbor 10.4.4.4 remote-as 65200
DXS-3600-32S(config-router)#neighbor 10.4.4.4 weight 10000
DXS-3600-32S(config-router)#
```

## 7-63 network (BGP)

This command is used to configure the networks to be advertised by the Border Gateway Protocol (BGP) process. To remove an entry from the routing table, use the no form of this command.

**network** *NETWORK-ADDRESS* [**route-map** *MAP-NAME*]  
**no network** *NETWORK-ADDRESS* [**route-map**]



## Parameters

<i>NETWORK-ADDRESS</i>	Specifies the network address and the sub-network mask that BGP will advertise. For example, the format of NETWORK-ADDRESS can be 10.9.18.2/8
<b>route-map</b> <i>MAP-NAME</i>	(Optional) Specifies the name of a configured route map. The route map should be examined to filter the networks to be advertised. If not specified, all networks are advertised.

<b>Default</b>	None.
<b>Command Mode</b>	Router Configuration Mode. Address Family Configuration Mode (IPv4 Unicast and VRF).
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	<p>BGP networks can be learned from connected routes, from dynamic routing, and from static route sources.</p> <p>Use this command to specify a network as local to this autonomous system and adds it to the BGP routing table. For exterior protocols the network command controls which networks are advertised. Interior protocols use the network command to determine where to send updates.</p> <p>The BGP will advertise a network entry if the router has the route information for this entry if synchronize state is enabled.</p> <p>You can verify your settings by entering the <b>show ip bgp network</b> command in the Privileged Mode.</p>

**Example** This example shows how to set up network 10.108.0.0 to be included in the BGP updates.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 100
DXS-3600-32S(config-router)#network 10.108.0.0/16
DXS-3600-32S(config-router)#
```

**Example** This example shows how to set up network 133.10.25.0/24 to be included in the BGP updates and use route-map mymap1 to set the weight of routes to 2000.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#route-map mymap1 permit 1
DXS-3600-32S(config-route-map)#set weight 2000
DXS-3600-32S(config-route-map)#exit
DXS-3600-32S(config)#router bgp 100
DXS-3600-32S(config-router)#network 133.10.25.0/24 route-map mymap1
DXS-3600-32S(config-router)#
```

## 7-64 redistribute

This command is used to redistribute routing information from other routing protocols to BGP. Use the no form of this command to disable this function.

```
redistribute {local | static | rip | ospf {all | internal | external | type_1 | type_2 | inter+e1 | inter+e2}} [metric NUMBER | route-map MAP-NAME]
no redistribute {local | static | rip | ospf} [metric | route-map]
```

## Parameters

<b>local</b>	Specifies to redistribute local routes to BGP.
<b>static</b>	Specifies to redistribute static routes to BGP.
<b>rip</b>	Specifies to redistribute RIP routes to BGP.

---

<b>ospf</b>	Specifies to redistribute OSPF routes to BGP. <b>all</b> - Specifies to redistribute both OSPF AS-internal and OSPF AS-external routes to BGP. <b>internal</b> - Specifies to redistribute only the OSPF AS-internal routes. <b>external</b> - Specifies to redistribute only the OSPF AS-external routes, including type-1 and type-2 routes. <b>type_1</b> - Specifies to redistribute only the OSPF AS-external type-1 routes. <b>type_2</b> - Specifies to redistribute only the OSPF AS-external type-2 routes. <b>inter+e1</b> - Specifies to redistribute only the OSPF AS-external type-1 and OSPF AS-internal routes. <b>inter+e2</b> - Specifies to redistribute only the OSPF AS-external type-2 and OSPF AS-internal routes.
<i>NUMBER</i>	(Optional) Specifies the BGP metric value for the redistributed routes. Enter the metric value used here. This value must be between 0 and 4294967295.
<i>MAP-NAME</i>	(Optional) Specifies a route map which will be used as the criteria to determine whether to redistribute specific routes. Enter the route map name used here. This name can be up to 16 characters long.

---

<b>Default</b>	By default, this option is disabled.
<b>Command Mode</b>	Router Configuration Mode. Address Family Configuration Mode (IPv4 Unicast and VRF).
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	When a switch supports multiple routing protocols, the coordination between these protocols becomes an important task. This command is used for redistribute prefixes from other routing protocols to BGP.

You can verify your settings by entering **show ip bgp** parameters command.

**Example** This example shows how to redistribute RIP route to BGP and use the optional parameters to modify the routes.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 100
DXS-3600-32S(config-router)#redistribute rip metric 2000 route-map my-map
DXS-3600-32S(config-router)#
```

## 7-65 route-preference

This command is used to set the BGP route preference. Use the no form of this command to restore the default value of the BGP route preference.

```
route-preference {ibgp | ebgp} value
no route-preference
```

### Parameters

---

<i>value</i>	Specifies the preference of the BGP route. The value range is 1-999.
--------------	--

---

<b>Default</b>	The default route-preference for EBGp is 70 and IBGP is 130.
<b>Command Mode</b>	Router Configuration Mode. Address Family Configuration Mode (VRF).
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )

**Usage Guideline**

This command is to set the route-preference for BGP route. BGP route contains two types one is IBGP and the other is EBGP. When two or more route protocols have learned one same route, the route-preference will be used to decide which one should be added into IP route table. Of course, for one route the smaller the route-preference, the better the route is.

Users can verify the settings by entering the **show ip route-preference** command in Privileged mode.

**Example**

This example shows how to configure the iBGP route-preference for autonomous system 200.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 200
DXS-3600-32S(config-router)#route-preference ibgp 15
DXS-3600-32S(config-router)#
```

**7-66 router bgp**

This command is used to enable (configure) the BGP routing process. Use the no form of this command to remove a BGP routing process.

```
router bgp AS-NUMBER
no router bgp AS-NUMBER
```

**Parameters**

<i>AS-NUMBER</i>	Specifies the number of an autonomous system that identifies the router to other BGP routers. The range for 2-byte numbers is 1 to 65535. The range for 4-byte numbers is 1 to 4294967295.
------------------	--

**Default**

No BGP routing process is enabled by default.

**Command Mode**

Global Configuration Mode.

**Command Default Level**

Level: 8. (**EI Mode Only Command**)

**Usage Guideline**

Each public autonomous system that directly connects to the Internet is assigned a unique number that identifies both the BGP routing process and the autonomous system (a number from 1 to 64511). Private autonomous system numbers are in the range from 64512 to 65534 (65535 is reserved for special use).

The AS Number size is defined as 2 bytes in RFC1771 and RFC4271.

But the AS Number can be expanded to 4 bytes to support much AS number.[RFC4893] To support 4-byte AS number, the AS number range is supported from 1 to 4294967295.

Private autonomous system numbers can be used for internal routing domains but must be translated for traffic that is routed out to the Internet. BGP should not be configured to advertise private autonomous system numbers to external networks.

Use this command to enter router configuration mode for the specified routing process.

**Example**

This example shows how to configure a BGP process for autonomous system 200.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 200
DXS-3600-32S(config-router)#
```

## 7-67 show ip as-path access-list

This command is used to display configured AS-path access-lists.

```
show ip as-path access-list [ACCESS-LIST-NAME]
```

### Parameters

<b>ACCESS-LIST-NAME</b>	(Optional) Specifies the access list to be displayed. The length is up to 16 characters.
-------------------------	--

<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 3. (EI Mode Only Command)
<b>Usage Guideline</b>	This command can be used without any arguments or keywords. If no arguments are specified, this command will display all AS-path access-lists. However, when the AS-path access-list name is specified when entering the <b>show ip as-path access-list</b> command. This option can be useful for filtering the output of this command and verifying a single named AS-path access-list.

**Example** This example shows how to display the content of IP AS-path access-list.

```
DXS-3600-32S#show ip as-path access-list
```

```

BGP AS Path Access List: a1
  permit      ^300$
  deny        ^200$

  Total Filter Entries: 2

BGP AS Path Access List: a2
  permit      3*0$
  deny        20

  Total Filter Entries: 2

BGP AS Path Access List: a3
  permit      1

  Total Filter Entries: 1

Total AS Path Access List Number: 3

DXS-3600-32S#
```

Display Parameters	Description
<b>BGP AS Path Access List</b>	Indicates the name of the BGP AS path access list.
<b>permit</b>	Indicates that the packets will be accepted if there AS-PATH attribute match the regular expression specified.
<b>deny</b>	Indicates that the packets will be rejected if there AS-PATH attribute match the regular expression specified.
<b>Total Filter Entries</b>	Indicates the total number of entries of a specifically AS path access list.
<b>Total AS Path Access List Number</b>	Indicates the total number of the AS path access lists.

## 7-68 show ip bgp

This command is used to display entries in the Border Gateway Protocol (BGP) routing table.

```
show ip bgp [{IP-ADDRESS | NETWORK-ADDRESS [longer-prefixes]]
```

### Parameters

<i>IP-ADDRESS</i>	(Optional) Specifies the IP address entered to filter the output to display only a particular host or network in the BGP routing table.
<i>NETWORK-ADDRESS</i>	(Optional) Specifies the network address and the sub-network mask. For example, 120.25.0.0/16
<b>longer-prefixes</b>	(Optional) Displays the specified route and all more specific routes.

<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 3. (EI Mode Only Command)
<b>Usage Guideline</b>	The <b>show ip bgp</b> command is used to display the contents of the BGP routing table. When one bgp route's as path information filed carried more than 160 characters, this command will not show the totally information, and the command of <b>show ip bgp NETWORK-ADDRESS</b> can show the full information of this route especially the as path.

**Example** This example shows how to show the BGP routing table.

```
DXS-3600-32S#show ip bgp

BGP Local Router ID is 10.90.90.10
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal
Origin codes: i - IGP, e - EGP, ? - incomplete

IP Address/Netmask      Gateway          Metric          LocPrf   Weight   Path
*> 10.0.0.0/8           0.0.0.0         1               32768    ?

DXS-3600-32S#
```

**Example** This example shows how to show the BGP routing which network address is 172.18.0.0/16 and includes longer prefixes.

```
DXS-3600-32S#show ip bgp 172.18.0.0/16 longer-prefixes

BGP Local Router ID is 10.90.90.10
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal
Origin codes: i - IGP, e - EGP, ? - incomplete

IP Address/Netmask      Gateway          Metric          LocPrf   Weight   Path
*> 172.18.0.0/16       10.90.1.1       1               32768    100 200 ?
*> 172.18.2.0/16       10.90.1.1       1               32768    100 200 ?
*> 172.18.3.0/16       10.90.1.1       1               32768    100 200 ?

DXS-3600-32S#
```

**Example**

When one route's AS-path field is more than 160 characters, using this command, can only show 160 characters of the AS-path field.

```
DXS-3600-32S#show ip bgp

BGP Local Router ID is 10.90.90.10
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal
Origin codes: i - IGP, e - EGP, ? - incomplete

IP Address/Netmask      Gateway      Metric      LocPrf  Weight  Path

*> 66.1.1.0/16          65.1.1.2    1           32768   (400)100 200 300 500 501 502
503 504 505 506 507 508 509 510 511 512 513 514 515 516 517 518 519 520 521 522 523 524 525 526
527 528 529 530 531 532 533 534 535 536 53 1000 i
*> 63.1.5.0/16         65.1.1.2    1           32768   (400)100 200 300 500 501 502
503 504 505 506 507 508 509 510 511 512 513 514 515 516 517 518 519 520 521 522 523 524 525 526
527 528 529 530 531 532 533 534 535 536 53 1000 i
*> 72.18.3.0/16        65.1.1.2    1           32768   (400)100 200 300 500 501 502
503 504 505 506 507 508 509 510 511 512 513 514 515 516 517 518 519 520 521 522 523 524 525 526
527 528 529 530 531 532 533 534 535 536 53 1000 i

DXS-3600-32S#
```

**Example**

If you show some of these routes, using the **show ip bgp NETWORK-ADDRESS** command, you will get the total information of these route.

```
DXS-3600-32S#show ip bgp 66.1.1.0/24

BGP routing table entry for 66.1.1.0/24
Paths:(1 available, best #1, table: Default_IP_Routing_Table.)
Advertised to non peer-group peer: 76.1.1.10
Advertised to peer-groups:group1,group2

As path is: (400) 100 200 300 500 501 502 503 504 505 506 507 508 509 510 511 512 513 514 515 516
517 518 519 520 521 522 523 524 525 526 527 528 529 530 531 532 533 534 535 536 53 1000 600 601
602 603 604 605 606 607 609 750 751 752 757 758 759 780 1005 1007 2000 2008 1010 2010 953 959

Next hop is:65.1.1.2 (metric 1) from 65.1.1.102 (177.221.0.3)
Origin IGP, Imetric 1, localpref 4294967295, weight 30000, confed-external, best

DXS-3600-32S#
```

**Display Parameters****Description****BGP Local Router ID**

This is the router identifier of the local BGP router.

**Status codes**

Status of the table entry displayed at the beginning of each line. It can be one or more of the following values:

- s** - The table entry is suppressed.
- d** - The table entry is damped.
- h** - The table entry is damped and has been withdrawn by the neighbor.
- \*** - The table entry is valid.
- >** - The table entry is the best entry to use for that network.
- i** - The table entry was learned via an internal BGP (iBGP) session.

**Origin codes**

Origin of the table entry displayed at the end of each line. It can be one of the following values:

- i** - Entry originated from an Interior Gateway Protocol (IGP) and was advertised with a network router configuration command.
- e** - Entry originated from an Exterior Gateway Protocol (EGP).
- ?** - Origin of the path is not clear. Usually, this is a router that is redistributed into BGP from an IGP.

**IP Address/Netmask**

IP prefix with its mask length of the entry.

**Gateway**

IP address of the next router that is used when forwarding a packet to the destination network. An entry of 0.0.0.0 indicates that the router has some non-BGP routes to this network.

Display Parameters	Description
<b>Metric</b>	If shown, this is the value of the inter-autonomous system metric. This field is frequently not used.
<b>LocPrf</b>	Local preference value as set with the set local-preference route-map configuration command. The default value is 100.
<b>Weight</b>	Weight of the route as set via autonomous system filters.
<b>Path</b>	Autonomous system paths to the destination network.

## 7-69 show ip bgp all

This command is used to display entries in the BGP routing table of IPv4 VPN address family and VRF related routing information.

```
show ip bgp all [{IP-ADDRESS | NETWORK-ADDRESS [longer-prefixes] | label}]
```

### Parameters

<i>IP-ADDRESS</i>	(Optional) Specifies the IP address entered to filter the output to display only a particular host or network in the BGP routing table.
<i>NETWORK-ADDRESS</i>	(Optional) Specifies to display the routes matching the network address.
<b>longer-prefixes</b>	(Optional) Displays the specified route and all more specific routes.
<b>label</b>	(Optional) Specifies to display the BGP private labels of the routes, which are assigned from MPLS.

<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 3. (EI Mode Only Command)
<b>Usage Guideline</b>	This command is used for show route information in IPv4 VPN address family and routes in all VRFs.

**Example** The following example shows the BGP routing table in the IPv4 VPN address family.

```
DXS-3600-32S# show ip bgp all

BGP Local Router ID is 30.1.1.2
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal
Origin codes: i - IGP, e - EGP, ? - incomplete

IP Address/Netmask      Gateway      Metric      LocPrf  Weight  Path

Route Distinguisher: 1:1 (default for vrf VPN-A)
*>i 88.1.1.0/24 30.1.1.5      0          100      0        10  i
Route Distinguisher: 1:1 (VPN route(s))
*>i 88.1.1.0/24 30.1.1.5      0          100      0        10  i
Route Distinguisher: 2:2 (default for vrf VPN-B)
*>i 77.1.1.0/24 30.1.1.5      0          100      0        11  i
Route Distinguisher: 2:2 (VPN route(s))
*>i 77.1.1.0/24 30.1.1.5      0          100      0        11  i

DXS-3600-32S#
```

**Example**

The following example displays the BGP private labels of all routes.

```
DXS-3600-32S#show ip bgp all label

BGP Local Router ID is 30.1.1.2
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal
Origin codes: i - IGP, e - EGP, ? - incomplete

   Network                From          In Label/Out Label
Route Distinguisher: 1:1 (default for VRF VPN-A)
*> 11.0.0.0/16           Self Peer      1000/no
*> 11.0.1.0/24           Self Peer      1000/no
*> 88.1.1.0/24           30.1.1.5      no/1000
Route Distinguisher: 1:1 (VPN route(s))
*> 88.1.1.0/24           30.1.1.5      no/1000

DXS-3600-32S#
```

**Example**

The following examplely display route 56.1.0.0/16 and its more specific routes.

```
DXS-3600-32S#show ip bgp all 56.1.0.0/16 longer-prefixes

BGP Local Router ID is 11.11.11.11
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal
Origin codes: i - IGP, e - EGP, ? - incomplete

IP Address/Netmask      Gateway        Metric         LocPrf  Weight  Path
Route Distinguisher: 1:100 (default for VRF 100)
*> 56.1.0.0/16          50.1.1.10     0              0       10    i
*i                      33.33.33.33   0              100     0      20    i
*> 56.1.1.0/24          50.1.1.10     0              0       10    i
*i                      33.33.33.33   0              100     0      20    i
*> 56.1.2.0/24          50.1.1.10     0              0       10    i
*i                      33.33.33.33   0              100     0      20    i
*> 56.1.3.0/24          50.1.1.10     0              0       10    i
*i                      33.33.33.33   0              100     0      20    i
Route Distinguisher: 1:100 (VPN route(s))
*>i 56.1.0.0/16          33.33.33.33   0              100     0      20    i
*>i 56.1.1.0/24          33.33.33.33   0              100     0      20    i
*>i 56.1.2.0/24          33.33.33.33   0              100     0      20    i
*>i 56.1.3.0/24          33.33.33.33   0              100     0      20    i
Route Distinguisher: 1:106 (default for VRF 106)
*> 56.1.1.0/24          0.0.0.0       0              32768   ?

DXS-3600-32S#
```

**Display Parameters****Description****BGP Local Router ID**

The router identifier of the local BGP router.

**Status codes**

Status of the table entry displayed at the beginning of each line. It can be one or more of the following values:

- s—The table entry is suppressed.
- d—The table entry is damped.
- h—The table entry is damped and has been withdrawn by the neighbor.
- \*—The table entry is valid.
- >—The table entry is the best entry to use for that network.
- i—The table entry was learned via an internal BGP (iBGP) session.

**Origin codes**

Origin of the table entry displayed at the end of each line. It can be one of the following values:

- i—Entry originated from an Interior Gateway Protocol (IGP) and was advertised with a **network router configuration** command.
- e—Entry originated from an Exterior Gateway Protocol (EGP).
- ?—Origin of the path is not clear. Usually, this is a router that is redistributed into BGP from an IGP.



Display Parameters	Description
<b>IP Address/Netmask</b>	IP prefix with its mask length of the entry.
<b>Gateway</b>	IP address of the next router that is used when forwarding a packet to the destination network. An entry of 0.0.0.0 indicates that the router has some non-BGP routes to this network.
<b>Metric</b>	If shown, this is the value of the inter-autonomous system metric. This field is frequently not used.
<b>LocPrf</b>	Local preference value as set with the <b>set local-preference route-map configuration</b> command. The default value is 100.
<b>Weight</b>	Weight of the route as set via autonomous system filters.
<b>Route Distinguisher default for vrf</b>	Specify the route distinguisher of the following routes. Specify the VRF which The route distinguisher is default for.
<b>VPN route(s)</b>	Specify that the following routes are learned from PEs.
<b>Path</b>	Autonomous system paths to the destination network.
<b>From</b>	Specify the origin of this prefix.
<b>In label</b>	Specify the label which would be assigned to other routes that origin from other PE.
<b>Out label</b>	Specify the label which get form other PE neighbor.
<b>Self Peer</b>	Specify that the route is originated from local.
<b>no</b>	Specify this prefix does not have label of this direction.

## 7-70 show ip bgp rd

This command is used to display entries in the BGP routing table in the IPv4 VPN address family with the specified Route Distinguisher.

```
show ip bgp rd ASN:NN [{IP-ADDRESS | NETWORK-ADDRESS [longer-prefixes] | label}]
```

### Parameters

<i>ASN:NN</i>	Specifies the Route Distinguisher.
<i>IP-ADDRESS</i>	(Optional) Specifies the IP address entered to filter the output to display only a particular host or network in the BGP routing table.
<i>NETWORK-ADDRESS</i>	(Optional) Specifies to display the route matching the network address.
<b>longer-prefixes</b>	(Optional) Displays the specified route and all more specific routes.
<b>label</b>	(Optional) Specifies to display the BGP private labels of the routes, which are assigned from MPLS.

<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 3. (EI Mode Only Command)
<b>Usage Guideline</b>	This command is used to display BGP route information in the VPNv4 address family and VRF address family based on Route Distinguisher.

**Example**

The following example shows the BGP routing table in the VRF address family based on the Route Distinguisher.

```
DXS-3600-32S#show ip bgp rd 1:1

BGP Local Router ID is 30.1.1.2
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal
Origin codes: i - IGP, e - EGP, ? - incomplete

IP Address/Netmask      Gateway      Metric      LocPrf  Weight  Path

Route Distinguisher: 1:1 (default for vrf VPN-A)
*>i 88.1.1.0/24        30.1.1.5    0           100     0       10 i

DXS-3600-32S#
```

**Example**

The following example displays the BGP private labels of a specified RD.

```
DXS-3600-32S#show ip bgp rd 1:1 label

BGP Local Router ID is 11.11.11.11
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal
Origin codes: i - IGP, e - EGP, ? - incomplete

Network      From      In Label/Out Label

Route Distinguisher: 1:1 (default for VRF my)
*> 88.1.2.0/24    100.1.1.2  no/1000
*> 88.1.5.0/24    100.1.1.2  no/1000
*> 89.1.1.0/24    10.1.1.3   no/16
*> 89.1.2.0/24    10.1.1.3   no/17
*> 99.1.1.0/24    Self Peer  1000/no
Route Distinguisher: 1:1 (VPN route(s))
*> 89.1.1.0/24    10.1.1.3   no/16
*> 89.1.2.0/24    10.1.1.3   no/17

DXS-3600-32S#
```

**Example**

The following example displays route 56.1.0.0/16 and its more specific routes with RD 1:100.

```
DXS-3600-32S#show ip bgp rd 1:100 56.1.0.0/16 longer-prefixes

BGP Local Router ID is 11.11.11.11
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal
Origin codes: i - IGP, e - EGP, ? - incomplete

IP Address/Netmask      Gateway      Metric      LocPrf  Weight  Path

Route Distinguisher: 1:100 (default for VRF 100)
*> 56.1.0.0/16        50.1.1.10   0           0       10 i
*i                    33.33.33.33  0           100     0       20 i
*> 56.1.1.0/24        50.1.1.10   0           0       10 i
*i                    33.33.33.33  0           100     0       20 i
*> 56.1.2.0/24        50.1.1.10   0           0       10 i
*i                    33.33.33.33  0           100     0       20 i
*> 56.1.3.0/24        50.1.1.10   0           0       10 i
*i                    33.33.33.33  0           100     0       20 i
Route Distinguisher: 1:100 (VPN route(s))
*>i 56.1.0.0/16        33.33.33.33  0           100     0       20 i
*>i 56.1.1.0/24        33.33.33.33  0           100     0       20 i
*>i 56.1.2.0/24        33.33.33.33  0           100     0       20 i
*>i 56.1.3.0/24        33.33.33.33  0           100     0       20 i

DXS-3600-32S#
```

Display Parameters	Description
<b>BGP Local Router ID</b>	The router identifier of the local BGP router.
<b>Status codes</b>	Status of the table entry displayed at the beginning of each line. It can be one or more of the following values: s—The table entry is suppressed. d—The table entry is damped. h—The table entry is damped and has been withdrawn by the neighbor. *—The table entry is valid. >—The table entry is the best entry to use for that network. i—The table entry was learned via an internal BGP (iBGP) session.
<b>Origin codes</b>	Origin of the table entry displayed at the end of each line. It can be one of the following values: i—Entry originated from an Interior Gateway Protocol (IGP) and was advertised with a <b>network router configuration</b> command. e—Entry originated from an Exterior Gateway Protocol (EGP). ?—Origin of the path is not clear. Usually, this is a router that is redistributed into BGP from an IGP.
<b>IP Address/Netmask</b>	IP prefix with its mask length of the entry.
<b>Gateway</b>	IP address of the next router that is used when forwarding a packet to the destination network. An entry of 0.0.0.0 indicates that the router has some non-BGP routes to this network.
<b>Metric</b>	If shown, this is the value of the inter-autonomous system metric. This field is frequently not used.
<b>LocPrf</b>	Local preference value as set with the <b>set local-preference route-map</b> configuration command. The default value is 100.
<b>Weight</b>	Weight of the route as set via autonomous system filters.
<b>Route Distinguisher</b>	Specify the route distinguisher of the following routes.
<b>default for vrf</b>	Specify the VRF which The route distinguisher is default for.
<b>VPN route(s)</b>	Specify that the following routes are learned from PEs.
<b>Path</b>	Autonomous system paths to the destination network.
<b>From</b>	Specify the origin of this prefix.
<b>In label</b>	Specify the label which would be assigned to other routes that origin from other PE.
<b>Out label</b>	Specify the label which get form other PE neighbor.
<b>Self Peer</b>	Specify that the route is originated from local.
<b>no</b>	Specify this prefix does not have label of this direction.

## 7-71 show ip bgp vrf

This command is used to display entries in the BGP routing table in VRF address family.

```
show ip bgp vrf VRF-NAME [{IP-ADDRESS | NETWORK-ADDRESS [longer-prefixes] | label}]
```

### Parameters

<b>vrf VRF-NAME</b>	(Optional) Specifies the VRF name.
<b>IP-ADDRESS</b>	(Optional) Specifies the IP address entered to filter the output to display only a particular host or network in the BGP routing table.
<b>NETWORK-ADDRESS</b>	(Optional) Specifies to display the route matching the network address.
<b>longer-prefixes</b>	(Optional) Displays the specified route and all more specific routes.
<b>label</b>	(Optional) Specifies to display the BGP private labels of the routes, which are assigned from MPLS.

<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 3. (EI Mode Only Command)
<b>Usage Guideline</b>	This command is used to display the BGP routing information inVRF address family.

**Example** The following example shows the BGP routing table of the IPv4 VRF address family.

```
DXS-3600-32S#show ip bgp vrf VPN-A

BGP Local Router ID is 30.1.1.2
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal
Origin codes: i - IGP, e - EGP, ? - incomplete

IP Address/Netmask      Gateway      Metric      LocPrf  Weight  Path

Route Distinguisher: 1:1 (default for vrf VPN-A)
*>i 88.1.1.0/24        30.1.1.5    0           100     0       10 i

DXS-3600-32S#
```

**Example** The following example displays the BGP private labels of routes of a specified VRF.

```
DXS-3600-32S#show ip bgp vrf VPN-B label

BGP Local Router ID is 11.11.11.11
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal
Origin codes: i - IGP, e - EGP, ? - incomplete

Network      From      In Label/Out Label

Route Distinguisher: 1:1 (default for VRF VPN-B)
*> 11.0.0.0/16      Self Peer      1000/no
*> 89.1.1.0/24      10.1.1.3      no/16
*> 99.1.1.0/24      Self Peer      1000/no

DXS-3600-32S#
```

**Example** The following example displays route 56.1.0.0/16 and its more specific routes in VRF 100.

```
DXS-3600-32S#show ip bgp vrf 100 56.1.0.0/16 longer-prefixes

BGP Local Router ID is 11.11.11.11
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal
Origin codes: i - IGP, e - EGP, ? - incomplete

IP Address/Netmask      Gateway      Metric      LocPrf  Weight  Path

Route Distinguisher: 1:100 (default for VRF 100)
*> 56.1.0.0/16        50.1.1.10    0           0       0       10 i
*i                    33.33.33.33  0           100     0       20 i
*> 56.1.1.0/24        50.1.1.10    0           0       0       10 i
*i                    33.33.33.33  0           100     0       20 i
*> 56.1.2.0/24        50.1.1.10    0           0       0       10 i
*i                    33.33.33.33  0           100     0       20 i
*> 56.1.3.0/24        50.1.1.10    0           0       0       10 i
*i                    33.33.33.33  0           100     0       20 i

DXS-3600-32S#
```

Display Parameters	Description
<b>BGP Local Router ID</b>	The router identifier of the local BGP router.

Display Parameters	Description
<b>Status codes</b>	Status of the table entry displayed at the beginning of each line. It can be one or more of the following values: s—The table entry is suppressed. d—The table entry is damped. h—The table entry is damped and has been withdrawn by the neighbor. *—The table entry is valid. >—The table entry is the best entry to use for that network. i—The table entry was learned via an internal BGP (iBGP) session.
<b>Origin codes</b>	Origin of the table entry displayed at the end of each line. It can be one of the following values: i—Entry originated from an Interior Gateway Protocol (IGP) and was advertised with a <b>network router configuration</b> command. e—Entry originated from an Exterior Gateway Protocol (EGP). ?—Origin of the path is not clear. Usually, this is a router that is redistributed into BGP from an IGP.
<b>IP Address/Netmask</b>	IP prefix with its mask length of the entry.
<b>Gateway</b>	IP address of the next router that is used when forwarding a packet to the destination network. An entry of 0.0.0.0 indicates that the router has some non-BGP routes to this network.
<b>Metric</b>	If shown, this is the value of the inter-autonomous system metric. This field is frequently not used.
<b>LocPrf</b>	Local preference value as set with the set local-preference route-map configuration command. The default value is 100.
<b>Weight</b>	Weight of the route as set via autonomous system filters.
<b>Path</b>	Autonomous system paths to the destination network.
<b>Route Distinguisher</b>	Specify the route distinguisher of the following routes.
<b>From</b>	Specify the origin of this prefix.
<b>In label</b>	Specify the label which would be assigned to other routes that origin from other PE.
<b>Out label</b>	Specify the label which get form other PE neighbor.
<b>Self Peer</b>	Specify that the route is originated from local.
<b>no</b>	Specify this prefix does not have label of this direction.
<b>default for vrf</b>	Specify the VRF which The route distinguisher is default for.
<b>VPN route(s)</b>	Specify that the following routes are learned from PEs.

## 7-72 show ip bgp aggregate

This command is used to display the aggregate entry in the BGP (Border Gateway Protocol) database.

```
show ip bgp aggregate [vrf VRF-NAME] [NETWORK-ADDRESS]
```

### Parameters

<b>vrf VRF-NAME</b>	(Optional) Specifies the VRF name. The length of the <i>VRF-NAME</i> is 12 characters.
<b>NETWORK-ADDRESS</b>	(Optional) Specifies the network address and the sub-network mask, for example: 120.25.0.0/16

<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 3. (EI Mode Only Command)
<b>Usage Guideline</b>	This command is used to display aggregate entries created.

**Example** This example shows the output from the **show ip bgp aggregate** command, in privileged mode.

```
DXS-3600-32S#show ip bgp aggregate
Network Address      Options
-----
100.0.0.0/8         -
200.0.0.0/10       summary-only

Total Aggregate Address Number: 2

DXS-3600-32S#show ip bgp aggregate vrf VPN-A
Network Address      VRF-Name      Options
-----
5.5.5.0/24          VPN-A         -
100.0.0.0/8         VPN-A         summary-only

Total Aggregate Address Number: 2

DXS-3600-32S#
```

Display Parameters	Description
<b>Network Address</b>	IP prefix with its mask length of the entry.
<b>VRF-Name</b>	Specifies the VRF name of the aggregate routes.
<b>Options</b>	May be 'as-set' or 'summary-only'.
<b>Total Aggregate Address Number</b>	The aggregate network number.

## 7-73 show ip bgp cidr-only

This command is used to display routes with classless inter-domain routing (CIDR).

```
show ip bgp cidr-only [{all | rd ASN:NN | vrf VRF-NAME}]
```

### Parameters

<b>all</b>	(Optional) Specifies to display routes of all VPN and VRFs.
<b>rd ASN:NN</b>	(Optional) Specifies to display routes with the specified Route Distinguisher. The ASN:NN can be <b>IP address:number</b> or <b>AS number:number</b> .
<b>vrf VRF-NAME</b>	(Optional) Specifies the VRF name. The length of the <i>VRF-NAME</i> is 12 characters.

<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 3. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	This command is used to display BGP routes with classless inter-domain routing (CIDR).

**Example**

This example shows the output from the **show ip bgp cidr-only** command, in privileged mode.

```
DXS-3600-32S#show ip bgp cidr-only

BGP Local Router ID is 10.0.40.1
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal
Origin codes: i - IGP, e - EGP, ? - incomplete

IP Address/Netmask      Gateway           Metric           LocPrf   Weight   Path
*> 10.10.10.0/23        172.16.10.1      0                300      10 i
*> 10.10.20.0/23        172.16.10.1      0                300      10 i
*> 10.20.10.0/22        172.16.10.1      0                300      10 i
*dh 30.10.1.1/23        172.3.3.2        100              50       200     20 i

DXS-3600-32S#
```

**Example**

The following example displays the CIDR routes in VRF 100:

```
DXS-3600-32S#show ip bgp cidr-only vrf 100

BGP Local Router ID is 11.11.11.11
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal
Origin codes: i - IGP, e - EGP, ? - incomplete

IP Address/Netmask      Gateway           Metric           LocPrf   Weight   Path

Route Distinguisher: 1:100 (default for VRF 100)
*> 50.1.1.0/24          0.0.0.0          0                32768    ?
*> 56.1.0.0/16          50.1.1.10        0                0         10      i
*i 33.33.33.33          0                100              0         20      i
*> 56.1.1.0/24          50.1.1.10        0                0         10      i
*i 33.33.33.33          0                100              0         20      i
*> 56.1.2.0/24          50.1.1.10        0                0         10      i
*i 33.33.33.33          0                100              0         20      i
*> 56.1.3.0/24          50.1.1.10        0                0         10      i
*i 33.33.33.33          0                100              0         20      i

DXS-3600-32S#
```

**Display Parameters****Description****BGP Local Router ID**

The router identifier of the local BGP router.

**Status codes**

Status of the table entry displayed at the beginning of each line. It can be one or more of the following values:

- s** - The table entry is suppressed.
- d** - The table entry is damped.
- h** - The table entry is damped and has been withdrawn by the neighbor.
- \*** - The table entry is valid.
- >** - The table entry is the best entry to use for that network.
- i** - The table entry was learned via an internal BGP (iBGP) session.

**Origin codes**

Origin of the table entry displayed at the end of each line. It can be one of the following values:

- i** - Entry originated from an Interior Gateway Protocol (IGP) and was advertised with a network router configuration command.
- e** - Entry originated from an Exterior Gateway Protocol (EGP).
- ?** - Origin of the path is not clear. Usually, this is a router that is redistributed into BGP from an IGP.

**IP Address/Netmask**

IP prefix with its mask length of the entry.

**Gateway**

IP address of the next router that is used when forwarding a packet to the destination network. An entry of 0.0.0.0 indicates that the router has some non-BGP routes to this network.

Display Parameters	Description
<b>Metric</b>	If shown, this is the value of the inter-autonomous system metric. This field is frequently not used.
<b>LocPrf</b>	Local preference value as set with the set local-preference route-map configuration command. The default value is 100.
<b>Weight</b>	Weight of the route as set via autonomous system filters.
<b>Path</b>	Autonomous system paths to the destination network.

## 7-74 show ip bgp community

This command is used to display routes which are matching the community.

```
show ip bgp community [{all | rd ASN:NN | vrf VRF-NAME}] COMMUNITY [exact-match]
```

### Parameters

<b>all</b>	(Optional) Specifies to display routes of all VPN and VRFs.
<b>rd ASN:NN</b>	(Optional) Specifies to display routes with the specified Route Distinguisher. The ASN:NN can be <b>IP address:number</b> or <b>AS number:number</b> .
<b>vrf VRF-NAME</b>	(Optional) Specifies the VRF name. The length of the VRF-NAME is 12 characters.
<b>COMMUNITY</b>	Specifies a community, in the form of <b>&lt;as-number&gt; : &lt;udn-number&gt;</b> or any of the following predefined values: <b>internet</b> , <b>no-export</b> , <b>local-as</b> , <b>no-advertise</b> . A community string can be formed by multiple communities, separated by a comma. For example, a community string is 200:1024, 300:1025, 400:1026.
<b>exact-match</b>	(Optional) If specified, communities need to match exactly. If not specified, then there are two cases: <ol style="list-style-type: none"> <li>1. If internet is contained in the community list, then all routes will match.</li> <li>2. If not, then the community needs to be a subset of route's community to match.</li> </ol>

<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 3. (EI Mode Only Command)
<b>Usage Guideline</b>	Use this command to display the routes which match the community specified.  When using this command with the 'exact-match' parameter, only the routes of which the community attribute exactly matches will be displayed.

**Example** This example shows the output from the **show ip bgp community** command in, privileged mode.

```
DXS-3600-32S#show ip bgp community local-as

BGP Local Router ID is 10.90.90.90
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal
Origin codes: i - IGP, e - EGP, ? - incomplete

IP Address/Netmask      Gateway          Metric          LocPrf   Weight   Path
*>10.10.10.0/24        172.16.10.1     0               300      10       i
*>10.10.20.0/24        172.16.10.1     0               300      10       i
*>10.20.10.0/24        172.16.10.1     0               300      10       i

DXS-3600-32S#
```



**Example**

The following example displays routes with the community 50:2 in VRF 100:

```
DXS-3600-32S#show ip bgp community vrf 100 50:2

BGP Local Router ID is 11.11.11.11
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal
Origin codes: i - IGP, e - EGP, ? - incomplete

IP Address/Netmask      Gateway      Metric      LocPrf      Weight      Path

Route Distinguisher: 1:100 (default for VRF 100)
*> 56.1.1.0/24          50.1.1.10   0           0           10          i
*> 56.1.2.0/24          50.1.1.10   0           0           10          i
*> 56.1.3.0/24          50.1.1.10   0           0           10          i

DXS-3600-32S#
```

Display Parameters	Description
<b>BGP Local Router ID</b>	The router identifier of the local BGP router.
<b>Status codes</b>	Status of the table entry displayed at the beginning of each line. It can be one or more of the following values: <b>s</b> - The table entry is suppressed. <b>d</b> - The table entry is damped. <b>h</b> - The table entry is damped and has been withdrawn by the neighbor. <b>*</b> - The table entry is valid. <b>&gt;</b> - The table entry is the best entry to use for that network. <b>i</b> - The table entry was learned via an internal BGP (iBGP) session.
<b>Origin codes</b>	Origin of the table entry displayed at the end of each line. It can be one of the following values: <b>i</b> - Entry originated from an Interior Gateway Protocol (IGP) and was advertised with a network router configuration command. <b>e</b> - Entry originated from an Exterior Gateway Protocol (EGP). <b>?</b> - Origin of the path is not clear. Usually, this is a router that is redistributed into BGP from an IGP.
<b>IP Address/Netmask</b>	IP prefix with its mask length of the entry.
<b>Gateway</b>	IP address of the next router that is used when forwarding a packet to the destination network. An entry of 0.0.0.0 indicates that the router has some non-BGP routes to this network.
<b>Metric</b>	If shown, this is the value of the inter-autonomous system metric. This field is frequently not used.
<b>LocPrf</b>	Local preference value as set with the set local-preference route-map configuration command. The default value is 100.
<b>Weight</b>	Weight of the route as set via autonomous system filters.
<b>Path</b>	Autonomous system paths to the destination network.

**7-75 show ip bgp community-list**

This command is used to display routes that are permitted by the Border Gateway Protocol (BGP) community list.

```
show ip bgp community-list [{all | rd ASN:NN | vrf VRF-NAME}] COMMUNITY-LIST-NAME [exact-match]
```

**Parameters**

<b>all</b>	(Optional) Specifies to display routes of all VPN and VRFs.
<b>rd ASN:NN</b>	(Optional) Specifies to display routes with the specified Route Distinguisher. The ASN:NN can be <b>IP address:number</b> or <b>AS number:number</b> .

<b>vrf VRF-NAME</b>	(Optional) Specifies the VRF name. The length of the <i>VRF-NAME</i> is 12 characters.
<b>COMMUNITY-LIST-NAME</b>	Specifies the community list name. The maximum length is 16 characters.
<b>exact-match</b>	(Optional) Displays only routes that have an exact match.

<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 3. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	This command requires you to specify an argument when used. The exact-match keyword is optional.

**Example** This example shows the output of the **show ip bgp community-list** command.

```
DXS-3600-32S#show ip bgp community-list MarketingComm
```

```
BGP Local Router ID is 10.90.90.90
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal
Origin codes: i - IGP, e - EGP, ? - incomplete

IP Address/Netmask      Gateway          Metric          LocPrf   Weight   Path
* 110.3.0.0/16         10.0.22.1       0               100     0        1800 1239 ?
* 110.6.0.0/16         10.0.22.1       0               100     0        1800 690 ?
* 110.7.0.0/16         10.0.22.1       0               100     0        1800 701 ?
```

```
DXS-3600-32S#
```

**Example** The following example displays routes which match the community list called *mycom* in VRF 100

```
DXS-3600-32S#show ip bgp community-list vrf 100 mycom
```

```
BGP Local Router ID is 11.11.11.11
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal
Origin codes: i - IGP, e - EGP, ? - incomplete
```

```
IP Address/Netmask      Gateway          Metric          LocPrf   Weight   Path

Route Distinguisher: 1:100 (default for VRF 100)
*> 56.1.1.0/24         50.1.1.10       0               0        10        i
*> 56.1.2.0/24         50.1.1.10       0               0        10        i
*> 56.1.3.0/24         50.1.1.10       0               0        10        i
```

```
DXS-3600-32S#
```

Display Parameters	Description
<b>BGP Local Router ID</b>	The router identifier of the local BGP router.
<b>Status codes</b>	Status of the table entry displayed at the beginning of each line. It can be one or more of the following values: <b>s</b> - The table entry is suppressed. <b>d</b> - The table entry is damped. <b>h</b> - The table entry is damped and has been withdrawn by the neighbor. <b>*</b> - The table entry is valid. <b>&gt;</b> - The table entry is the best entry to use for that network. <b>i</b> - The table entry was learned via an internal BGP (iBGP) session.
<b>Origin codes</b>	Origin of the table entry displayed at the end of each line. It can be one of the following values: <b>i</b> - Entry originated from an Interior Gateway Protocol (IGP) and was advertised with a network router configuration command. <b>e</b> - Entry originated from an Exterior Gateway Protocol (EGP). <b>?</b> - Origin of the path is not clear. Usually, this is a router that is redistributed into BGP from an IGP.
<b>IP Address/Netmask</b>	IP prefix with its mask length of the entry.

Display Parameters	Description
<b>Gateway</b>	IP address of the next router that is used when forwarding a packet to the destination network. An entry of 0.0.0.0 indicates that the router has some non-BGP routes to this network.
<b>Metric</b>	If shown, this is the value of the inter-autonomous system metric. This field is frequently not used.
<b>LocPrf</b>	Local preference value as set with the <b>set local-preference route-map</b> configuration command. The default value is 100.
<b>Weight</b>	Weight of the route as set via autonomous system filters.
<b>Path</b>	Autonomous system paths to the destination network.

## 7-76 show ip bgp confederation

This command is used to display the confederation configuration of BGP.

```
show ip bgp confederation
```

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 3. (EI Mode Only Command)
<b>Usage Guideline</b>	Use this command to display the detail of the confederation configured.

**Example** This example shows how to show the current settings of confederation.

```
DXS-3600-32S#show ip bgp confederation
BGP AS Number           : 200
Confederation Identifier : 10
Confederation Peer      : 201, 202
Neighbor List:
  IP Address           Remote AS Number
  -----
  10.1.1.1             200
  172.18.1.1          201
  192.168.1.1         202
DXS-3600-32S#
```

Display Parameters	Description
<b>BGP AS Number</b>	Indicates the AS number of the local BGP.
<b>Confederation Identifier</b>	Indicates the confederation Identifier of the local BGP.
<b>Confederation Peer</b>	Indicates the sub-AS numbers in the same confederation.
<b>Neighbor List</b>	List all the neighbors in the local BGP router.
<b>IP Address</b>	Indicates the IP address of the neighbors.
<b>Remote AS Number</b>	AS number of the neighbor.

## 7-77 show ip bgp dampening dampened-paths

This command is used to display routes that were dampened by BGP.

```
show ip bgp dampening dampened-paths [vrf VRF-NAME]
```

## Parameters

---

<b>vrf VRF-NAME</b>	(Optional) Specifies the VRF name. The length of the <i>VRF-NAME</i> is 12 characters.
---------------------	--

---

<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 3. (EI Mode Only Command)
<b>Usage Guideline</b>	Use this command to show dampened entries in the BGP routing table.

**Example** This example shows how to display the dampened routes, using the **show ip bgp dampening dampened- paths** command, in privileged mode.

```
DXS-3600-32S#show ip bgp dampening dampened-paths

BGP Local Router ID is 172.29.232.182
Status codes: s suppressed, d damped, h history, * valid, > best, i -internal
Origin codes: i - IGP, e - EGP, ? - incomplete

   Network          From             Reuse           Path
*d 10.0.0.0/8      172.16.232.177  00:18:4        100 ?
*d 10.2.0.0/16    172.16.232.177  00:28:5        100 ?

DXS-3600-32S#
```

**Example** This example shows how to display the dampened routes using the **show ip bgp dampening dampened- paths vrf** command in privileged mode.

```
DXS-3600-32S#show ip bgp dampening dampened-paths vrf VPA-A

BGP Local Router ID is 172.29.232.182
Status codes: s suppressed, d damped, h history, * valid, > best, i -internal
Origin codes: i - IGP, e - EGP, ? - incomplete

   Network          From             Reuse           Path
*d 10.0.0.0/8      172.16.232.177  00:18:4        100 ?
*d 10.2.0.0/16    172.16.232.177  00:28:5        100 ?

DXS-3600-32S#
```

Display Parameters	Description
<b>BGP Local Router ID</b>	The router identifier of the local BGP router.
<b>Status codes</b>	Status of the table entry displayed at the beginning of each line. It can be one or more of the following values: <b>s</b> - The table entry is suppressed. <b>d</b> - The table entry is damped. <b>h</b> - The table entry is damped and has been withdrawn by the neighbor. <b>*</b> - The table entry is valid. <b>&gt;</b> - The table entry is the best entry to use for that network. <b>i</b> - The table entry was learned via an internal BGP (iBGP) session.
<b>Origin codes</b>	Origin of the table entry displayed at the end of each line. It can be one of the following values: <b>i</b> - Entry originated from an Interior Gateway Protocol (IGP) and was advertised with a network router configuration command. <b>e</b> - Entry originated from an Exterior Gateway Protocol (EGP). <b>?</b> - Origin of the path is not clear. Usually, this is a router that is redistributed into BGP from an IGP.
<b>Network</b>	IP prefix with its mask length of the entry.
<b>From</b>	The peer's router-id of BGP.
<b>Reuse</b>	The time that should expire before BGP will re-use this route.
<b>Path</b>	Autonomous system paths to the destination network.

## 7-78 show ip bgp dampening parameters

This command is used to display the BGP dampening configuration.

```
show ip bgp dampening parameters [vrf VRF-NAME]
```

### Parameters

<b>vrf VRF-NAME</b>	(Optional) Specifies the VRF name. The length of the <i>VRF-NAME</i> is 12 characters.
---------------------	--

<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 3. (EI Mode Only Command)
<b>Usage Guideline</b>	Use this command to display the dampening parameters of BGP.

**Example** This example shows how to display the dampening configuration information by using the **show ip bgp dampening parameters** command, in privileged mode.

```
DXS-3600-32S#show ip bgp dampening parameters
```

```
BGP Dampening Parameter for IPv4 Unicast
-----
BGP Dampening State           : Disabled

BGP Dampening Route Map      :
Half-life Time               : 15 mins
Reuse Value                   : 750
Suppress Value               : 2000
MAX Suppress Time            : 60 mins
Unreachable route's Half-life : 15 mins
```

```
DXS-3600-32S#
```

**Example** The following example is to show the dampening configuration information by using the **show ip bgp dampening parameters vrf** command in privileged mode.

```
DXS-3600-32S#show ip bgp dampening parameters vrf VPN-A
```

```
BGP Dampening for vrf           : VPN-A
-----
BGP Dampening State           : Disabled

BGP Dampening Route Map      :
Half-life Time               : 15 mins
Reuse Value                   : 750
Suppress Value               : 2000
MAX Suppress Time            : 60 mins
Unreachable route's Half-life : 15 mins
```

```
DXS-3600-32S#
```

Display Parameters	Description
<b>BGP Dampening State</b>	Specifies the BGP dampening function's state.
<b>BGP Dampening Route Map</b>	The route map here is to set the dampening.
<b>Half-Life Time</b>	Specifies the time (in minute) after which the penalty of the reachable routes will be down, by half. The default setting is 15 minutes.
<b>Reuse Value</b>	If the penalty for a flapping route decreases enough to fall below this value, the route is unsuppressed. The default setting is 750

Display Parameters	Description
<b>Suppress Value</b>	A route is suppressed when its penalty exceeds this limit. The default setting is 2000.
<b>MAX Suppress Time</b>	Maximum time (in minutes) a route can be suppressed. The default setting is 45 minutes.
<b>Unreachable route's Half-life</b>	Specifies the time (in minute) after which the penalty of the unreachable routes will be down, by half. The default setting is 15 minutes.

## 7-79 show ip bgp dampening flap-statistics

This command is used to display BGP flap statistics.

```
show ip bgp dampening flap-statistics [vrf VRF-NAME]
```

### Parameters

<b>vrf VRF-NAME</b>	(Optional) Specifies the VRF name. The length of the <i>VRF-NAME</i> is 12 characters.
---------------------	--

<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 3. (EI Mode Only Command)
<b>Usage Guideline</b>	Use this command to show flap entries in the BGP routing table.

**Example** This example shows how to display the flap entries in the BGP routing table.

```
DXS-3600-32S#show ip bgp dampening flap-statistics
```

```
BGP Local Router ID is 10.90.90.10
Status codes: s suppressed, d damped, h history, * valid, > best, i -internal
Origin codes: i - IGP, e - EGP, ? - incomplete
```

Network	From	Flaps	Duration	Reuse	Path
*d 10.0.0.0/8	172.29.232.177	4	00:13:31	00:18:10	100i
*d 10.2.0.0/16	172.29.232.177	4	00:02:45	00:28:20	100i

```
DXS-3600-32S#
```

**Example** To display the flap entries in the BGP routing table, use the **show ip bgp dampening flap-statistics vrf** command in privileged mode.

```
DXS-3600-32S#show ip bgp dampening flap-statistics vrf VPN-A
```

```
BGP Local Router ID is 10.90.90.10
Status codes: s suppressed, d damped, h history, * valid, > best, i -internal
Origin codes: i - IGP, e - EGP, ? - incomplete
```

Network	From	Flaps	Duration	Reuse	Path
*d 10.0.0.0/8	172.29.232.177	4	00:13:31	00:18:10	100i
*d 10.2.0.0/16	172.29.232.177	4	00:02:45	00:28:20	100i

```
DXS-3600-32S#
```

Display Parameters	Description
<b>BGP Local Router ID</b>	The router identifier of the local BGP router.

Display Parameters	Description
<b>Status codes</b>	Status of the table entry displayed at the beginning of each line. It can be one or more of the following values: <b>s</b> - The table entry is suppressed. <b>d</b> - The table entry is damped. <b>h</b> - The table entry is damped and has been withdrawn by the neighbor. <b>*</b> - The table entry is valid. <b>&gt;</b> - The table entry is the best entry to use for that network. <b>i</b> - The table entry was learned via an internal BGP (iBGP) session.
<b>Origin codes</b>	Origin of the table entry displayed at the end of each line. It can be one of the following values: <b>i</b> - Entry originated from an Interior Gateway Protocol (IGP) and was advertised with a network router configuration command. <b>e</b> - Entry originated from an Exterior Gateway Protocol (EGP). <b>?</b> - Origin of the path is not clear. Usually, this is a router that is redistributed into BGP from an IGP.
<b>Network</b>	IP prefix with its mask length of the entry dampened.
<b>From</b>	The IP address of the peer advertised this route.
<b>Reuse</b>	Time after which the route will be made available. Format is HH:MM:SS.
<b>Path</b>	Autonomous system paths of route that is being dampened.
<b>Flaps</b>	Number of times that the route has flapped.
<b>Duration</b>	Time since the router noticed the first flap. Format is HH:MM:SS.

## 7-80 show ip bgp filter-list

This command is used to display routes that conform to a specified filter list.

```
show ip bgp filter-list [{all | rd ASN:NN | vrf VRF-NAME}] ACCESS-LIST-NAME
```

### Parameters

<b>all</b>	(Optional) Specifies to display routes of all VPN and VRFs.
<b>rd ASN:NN</b>	(Optional) Specifies to display routes with the specified Route Distinguisher. The ASN:NN can be <b>IP address:number</b> or <b>AS number:number</b> .
<b>vrf VRF-NAME</b>	(Optional) Specifies the VRF name. The length of the <i>VRF-NAME</i> is 12 characters.
<b>ACCESS-LIST-NAME</b>	Specifies the AS path access list name and only the routes match the AS path access list are displayed. The maximum length is 16 characters.

<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 3. (EI Mode Only Command)
<b>Usage Guideline</b>	Use this command to display routs which are match the filter list specified.

**Example** This example shows how to display the BGP route filter by content of access-list, as-ACL\_HQ.

```
DXS-3600-32S#show ip bgp filter-list as-ACL_HQ

BGP Local Router ID is 10.90.90.90
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal
Origin codes: i - IGP, e - EGP, ? - incomplete

IP Address/Netmask      Gateway           Metric           LocPrf   Weight   Path
* 172.16.0.0/24         172.16.72.30    0                109      108      ?
* 172.16.1.0/24         172.16.72.30    0                109      108      ?
* 172.16.11.0/24        172.16.72.30    0                109      108      ?
* 172.16.14.0/24        172.16.72.30    0                109      108      ?
* 172.16.15.0/24        172.16.72.30    0                109      108      ?
* 172.16.16.0/24        172.16.72.30    0                109      108      ?

DXS-3600-32S#
```

**Example** The following example displays routes that match the filter list *aspath1* in VRF 100:

```
DXS-3600-32S#show ip bgp filter-list vrf 100 aspath1

BGP Local Router ID is 11.11.11.11
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal
Origin codes: i - IGP, e - EGP, ? - incomplete

IP Address/Netmask      Gateway           Metric           LocPrf   Weight   Path
Route Distinguisher: 1:100 (default for VRF 100)
* i 56.1.0.0/16         33.33.33.33     0                100      0        20 i
* i 56.1.1.0/24         33.33.33.33     0                100      0        20 i
* i 56.1.2.0/24         33.33.33.33     0                100      0        20 i
* i 56.1.3.0/24         33.33.33.33     0                100      0        20 i

DXS-3600-32S#
```

Display Parameters	Description
<b>BGP Local Router ID</b>	The router identifier of the local BGP router.
<b>Status codes</b>	Status of the table entry displayed at the beginning of each line. It can be one or more of the following values: <b>s</b> - The table entry is suppressed. <b>d</b> - The table entry is damped. <b>h</b> - The table entry is damped and has been withdrawn by the neighbor. <b>*</b> - The table entry is valid. <b>&gt;</b> - The table entry is the best entry to use for that network. <b>i</b> - The table entry was learned via an internal BGP (iBGP) session.
<b>Origin codes</b>	Origin of the table entry displayed at the end of each line. It can be one of the following values: <b>i</b> - Entry originated from an Interior Gateway Protocol (IGP) and was advertised with a network router configuration command. <b>e</b> - Entry originated from an Exterior Gateway Protocol (EGP). <b>?</b> - Origin of the path is not clear. Usually, this is a router that is redistributed into BGP from an IGP.
<b>IP Address/Netmask</b>	IP prefix with its mask length of the entry.
<b>Gateway</b>	IP address of the next router that is used when forwarding a packet to the destination network. An entry of 0.0.0.0 indicates that the router has some non-BGP routes to this network..
<b>Metric</b>	If shown, this is the value of the inter-autonomous system metric. This field is frequently not used.



Display Parameters	Description
LocPrf	Local preference value as set with the set local-preference route-map configuration command. The default value is 100.
Weight	Weight of the route as set via autonomous system filters.
Path	Autonomous system paths to the destination network.

## 7-81 show ip bgp inconsistent-as

This command is used to display the routes which have the same prefix and different AS path origins.

```
show ip bgp inconsistent-as [{all | rd ASN:NN | vrf VRF-NAME}]
```

### Parameters

all	(Optional) Specifies to display routes of all VPN and VRFs.
rd ASN:NN	(Optional) Specifies to display routes with the specified Route Distinguisher. The ASN:NN can be <b>IP address:number</b> or <b>AS number:number</b> .
vrf VRF-NAME	(Optional) Specifies the VRF name. The length of the VRF-NAME is 12 characters.

<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 3. (EI Mode Only Command)
<b>Usage Guideline</b>	This command displays the routes which have inconsistent-as originating autonomous systems.

**Example** This example shows the output from the **show ip bgp inconsistent-as** command, in privileged mode.

```
DXS-3600-32S#show ip bgp inconsistent-as
```

```
BGP Local Router ID is 10.90.90.10
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal
Origin codes: i - IGP, e - EGP, ? - incomplete
```

IP	Address/Netmask	Gateway	Metric	LocPrf	Weight	Path
*	40.58.0.0/16	103.1.10.1	0		0	200 i
*>i		20.1.1.1	0	100	0	i
*	40.59.0.0/16	103.1.10.1	0		0	200 i
*>i		20.1.1.1	0	100	0	i
*	40.60.0.0/16	103.1.10.1	0		0	200 i
*>i		20.1.1.1	0	100	0	i

```
DXS-3600-32S#
```

**Example**

The following example displays routes with a different origin AS number in VRF 100:

```
DXS-3600-32S#show ip bgp inconsistent-as vrf 100

BGP Local Router ID is 11.11.11.11
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal
Origin codes: i - IGP, e - EGP, ? - incomplete

IP Address/Netmask      Gateway          Metric          LocPrf   Weight   Path

Route Distinguisher: 1:100 (default for VRF 100)
*> 56.1.0.0/16          50.1.1.10       0                0         10    i
*i                      33.33.33.33     0                100        0     20    i
*> 56.1.1.0/24          50.1.1.10       0                0         10    i
*i                      33.33.33.33     0                100        0     20    i
*> 56.1.2.0/24          50.1.1.10       0                0         10    i
*i                      33.33.33.33     0                100        0     20    i
*> 56.1.3.0/24          50.1.1.10       0                0         10    i
*i                      33.33.33.33     0                100        0     20    i

DXS-3600-32S#
```

Display Parameters	Description
<b>BGP Local Router ID</b>	The router identifier of the local BGP router.
<b>Status codes</b>	Status of the table entry displayed at the beginning of each line. It can be one or more of the following values: <ul style="list-style-type: none"> <li><b>s</b> - The table entry is suppressed.</li> <li><b>d</b> - The table entry is damped.</li> <li><b>h</b> - The table entry is damped and has been withdrawn by the neighbor.</li> <li><b>*</b> - The table entry is valid.</li> <li><b>&gt;</b> - The table entry is the best entry to use for that network.</li> <li><b>i</b> - The table entry was learned via an internal BGP (iBGP) session.</li> </ul>
<b>Origin codes</b>	Origin of the table entry displayed at the end of each line. It can be one of the following values: <ul style="list-style-type: none"> <li><b>i</b> - Entry originated from an Interior Gateway Protocol (IGP) and was advertised with a network router configuration command.</li> <li><b>e</b> - Entry originated from an Exterior Gateway Protocol (EGP).</li> <li><b>?</b> - Origin of the path is not clear. Usually, this is a router that is redistributed into BGP from an IGP.</li> </ul>
<b>IP Address/Netmask</b>	IP prefix with its mask length of the entry.
<b>Gateway</b>	IP address of the next router that is used when forwarding a packet to the destination network. An entry of 0.0.0.0 indicates that the router has some non-BGP routes to this network.
<b>Metric</b>	If shown, this is the value of the inter-autonomous system metric. This field is frequently not used.
<b>LocPrf</b>	Local preference value as set with the set local-preference route-map configuration command. The default value is 100.
<b>Weight</b>	Weight of the route as set via autonomous system filters.
<b>Path</b>	Autonomous system paths to the destination network.

**7-82 show ip bgp neighbors**

This command is used to display information of the BGP neighbors.

```
show ip bgp neighbors [[vrf VRF-NAME] [IP-ADDRESS [{advertised-routes | received prefix-filter |
received-routes| routes | statistics}]] | all]
```

**Parameters**

<b>vrf</b> <i>VRF-NAME</i>	(Optional) Specifies the VRF name. The length of the <i>VRF-NAME</i> is 12 characters.
<i>IP-ADDRESS</i>	(Optional) Specifies the IP address of a neighbor. If this argument is omitted, all neighbors are displayed.
<b>advertised-routes</b>	(Optional) Displays the routes advertised to a BGP neighbor.
<b>received prefix-filter</b>	(Optional) Displays the prefix-list received from the specified neighbor.
<b>received-routes</b>	(Optional) Displays the received routes from neighbor. To display all the received routes from the neighbor, configure the BGP soft reconfigure first.
<b>routes</b>	(Optional) Displays all accepted routes learned from neighbors.
<b>statistics</b>	(Optional) Displays the statistical information of BGP speaker.
<b>all</b>	(Optional) Displays information of all BGP neighbors

<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 3. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	Use this command to display the information of the neighbor. The information may be the dynamic parameters configured to the neighbor, routes received from or sent to the neighbor, ORF filter received from the neighbor and the statistics information about the neighbor.

**Example** This example shows how to display all the neighbors.

```

DXS-3600-32S#show ip bgp neighbors
BGP neighbor: 10.1.1.1 (Internal Peer)
-----
Session State                : Enabled
Remote AS                    : 1
Remote Router ID             : 0.0.0.0
BGP State                    : Connect
Hold Time                    : 180 Seconds
Keepalive Interval          : 60 Seconds
Advertisement Interval       : 5 Seconds
EBGP Multihop                : 255
Weight                       : 0

Address Family IPv4 Unicast
IPv4 Unicast                 : None
Next Hop Self                : Disabled
Remove Private As           : Disabled
AllowAS In                   : Disabled
Soft Reconfiguration Inbound : Disabled
Send Community               : None
Default Originate            : Disabled
Outbound Route Filter (ORF) type (64) Prefix list:
    Send Mode                 : Disabled
    Receive Mode               : Disabled
Prefix Max Count             : 12000
Prefix Warning Threshold     : 75
Prefix Warning Only          : Disabled

Address Family VPNv4 Unicast
VPNv4 Unicast                : None
Next Hop Self                : Disabled
AllowAS In                   : Disabled
Send Community               : None
Outbound Route Filter (ORF) type (64) Prefix list:
    Send Mode                 : Disabled
    Receive Mode               : Disabled
Prefix Max Count             : 12000
Prefix Warning Threshold     : 75
Prefix Warning Only          : Disabled

```

**Example**

This example shows how to display all the neighbors.

```

(Continued)
BGP neighbor: 10.5.5.5 (External Peer), vrf VPN-A
-----
Session State                : Enabled
Remote AS                    : 2
Remote Router ID             : 0.0.0.0
BGP State                    : Idle
Hold Time                    : 180 Seconds
Keepalive Interval           : 60 Seconds
Advertisement Interval        : 30 Seconds
EBGP Multihop                : 1
Weight                       : 0

Address Family IPv4 Unicast
IPv4 Unicast                  : None
AS Override                   : Disabled
Next Hop Self                 : Disabled
Remove Private As            : Disabled
AllowAS In                   : Disabled
Soft Reconfiguration Inbound : Disabled
Send Community                : None
Default Originate             : Disabled
Outbound Route Filter (ORF) type (64) Prefix list:
    Send Mode                 : Disabled
    Receive Mode              : Disabled
Prefix Max Count              : 12000
Prefix Warning Threshold      : 75
Prefix Warning Only           : Disabled

Total neighbor number : 2

DXS-3600-32S#

```

Display Parameters	Description
<b>BGP neighbor</b>	IP address of the BGP neighbor.
<b>Internal Peer</b>	Indicates that the neighbor is internal.
<b>External Peer</b>	Indicates that the neighbor is external.
<b>Session State</b>	Indicates whether the neighbor is shut down or not.
<b>Remote AS</b>	AS number of the neighbor.
<b>Remote Router ID</b>	The router identifier of the local BGP router.
<b>BGP State</b>	The Finite State Machine (FSM) of the neighbor. The value may be <b>Idle</b> , <b>Connect</b> , <b>Active</b> , <b>Opensent</b> , <b>Openconfirm</b> and <b>Established</b> .
<b>UP for</b>	Indicates how long the Established state last. This field only display in the Established state.
<b>Hold Time</b>	Indicates the maximum number of seconds that may elapse between the receipts of successive KEEPALIVE and/or UPDATE messages with the neighbor.
<b>Keepalive Interval</b>	Indicates the number of seconds between sending KEEPALIVE message with the neighbor.
<b>Advertisement Interval</b>	Indicates the minimum interval between sending Border Gateway Protocol (BGP) routing updates.
<b>EBGP Multihop</b>	Indicates the TTL of the BGP packet sent to the neighbor.
<b>Weight</b>	Indicates the weight that will be associated to the routes learned from the neighbor.
<b>Update Source</b>	Interface used for TCP connection with the neighbor.
<b>loopback</b>	Indicates that the update source interface is a loopback interface, followed by its number.
<b>vlan</b>	Indicates that the update source interface is a VLAN interface, followed by its VLAN ID.

Display Parameters	Description
<b>Next Hop Self</b>	Indicates whether the local BGP enable the router as the next hop for the neighbor.
<b>Description</b>	Show the description configured to describe the neighbor.
<b>Password</b>	Show the password set on the TCP connection to the neighbor.
<b>Peer</b>	Group Indicates which peer group the neighbor belongs to.
<b>Address Family IPv4 Unicast</b>	Indicates that the configuration below is only for IPv4 unicast address family.
<b>IPv4 Unicast</b>	Indicates whether the local BGP enable the exchange of information with a Border Gateway Protocol (BGP) neighbor in IPv4 unicast address family.
<b>None</b>	(IPv4 Unicast) Indicates that the local BGP does not exchange IPv4 unicast information with the neighbor.
<b>Advertised (IPv4 Unicast)</b>	Indicates that the local BGP advertise its IPv4 unicast information to the neighbor.
<b>Received (IPv4 Unicast)</b>	Indicates that the local BGP receive the IPv4 unicast information from the neighbor.
<b>Address Family VPNv4 Unicast</b>	Indicates that the configuration below is only for VPNv4 unicast address family.
<b>VPNv4 Unicast</b>	Indicates whether the local BGP enable the exchange of information with a Border Gateway Protocol (BGP) neighbor in VPNv4 unicast address family.
<b>None (VPNv4 Unicast)</b>	Indicates that the local BGP does not exchange VPNv4 unicast information with the neighbor.
<b>Advertised (VPNv4 Unicast)</b>	Indicates that the local BGP advertise its VPNv4 unicast information to the neighbor.
<b>Received (VPNv4 Unicast)</b>	Indicates that the local BGP receive the VPNv4 unicast information from the neighbor.
<b>AS Override</b>	Indicates whether the local BGP override the AS number of the peer with its own AS number in the routes received from the peer.
<b>Site-of-Origin</b>	Indicates the Site-of-Origin value configured to the neighbor.
<b>Next Hop Self</b>	Indicates whether the local BGP enable the router as the next hop for the neighbor.
<b>Remove Private As</b>	Indicates whether the configuration of removing the private AS from the AS path attribute in the updates sent to the neighbor is enabled or not.
<b>AllowAS In</b>	Indicates whether the local BGP allow its own AS number appearing in the received BGP update packets from the neighbor.
<b>Num (AllowAS in)</b>	Indicates how many times that the local BGP allow its own AS number appearing in the received BGP update packets. This field is only display when the AllowAS In is enabled.
<b>Soft Reconfiguration Inbound</b>	Indicates whether the local BGP store the route updates received from neighbor.
<b>Send Community</b>	Indicates whether the local BGP send its community attributes to the neighbor.
<b>None (send community)</b>	The local BGP doesn't send any community attributes to the neighbor.
<b>Standard (send community)</b>	The local BGP send standard community attributes to the neighbor.
<b>Extended (send community)</b>	The local BGP send extended community attributes to the neighbor.
<b>Both Standard and Extended</b>	The local BGP send both standard and extended community attributes to the neighbor.
<b>Default Originate</b>	Indicates whether the local BGP send the default route to the neighbor.
<b>Route Map (Default Originate)</b>	Indicates a route-map name which control in which condition the local BGP send the default route to the neighbor.
<b>Incoming Update Prefix List</b>	Indicates an IP prefix list name which the route updates received from the neighbor must be applied.
<b>Outgoing Update Prefix List</b>	Indicates an IP prefix list name which the route updates sent to the neighbor must be applied.
<b>Incoming Update Filter List</b>	Indicates an AS path access list name which the route updates received from the neighbor must be applied.
<b>Outgoing Update Filter List</b>	Indicates an AS path access list name which the route updates sent to the neighbor must be applied.

Display Parameters	Description
<b>Route Map for Incoming Routes</b>	Indicates a route map name which the route updates received from the neighbor must be applied.
<b>Route Map for Outgoing Routes</b>	Indicates a route map name which the route updates sent to the neighbor must be applied.
<b>Unsuppressed Route Map</b>	Indicates a route map name which the routes previously suppressed by the aggregate-address command must be applied.
<b>Outbound Route Filter (ORF) type (64) Prefix list</b>	Indicates the state of the ORF prefix list.
<b>Send Mode</b>	Indicates whether the local BGP send ORF prefix list to the neighbor.
<b>Receive Mode</b>	Indicates whether the local BGP receive ORF prefix list from the neighbor.
<b>IP Prefix List (ORF)</b>	Name of the IP prefix list received from the neighbor. The name is made up by the IP address by the dotted decimal notation dot Address Family Identifier (AFI) dot Subsequent Address Family Identifier (SAFI).
<b>entries (ORF)</b>	Number of entries of the prefix list.
<b>Seq (ORF)</b>	Sequence number of the entry.
<b>permit (ORF)</b>	Indicates that routes matched the IP prefix behind will be advertised to the neighbor.
<b>deny (ORF)</b>	Indicates that routes matched the IP prefix behind will not be advertised to the neighbor.
<b>le (ORF)</b>	Less than or equal. Indicates the length of the mask.
<b>ge (ORF)</b>	Greater than or equal. Indicates the length of the mask.
<b>Prefix Max Count</b>	Show the maximum number of prefixes the local BGP can accept.
<b>Prefix Warning Threshold</b>	Indicates in which percentage of the maximum prefixes the local BGP begin to log warning message.
<b>Prefix Warning Only</b>	Indicates whether the local BGP terminate the session of the neighbor after the total BGP routes reach the maximum prefixes.
<b>Total neighbor number</b>	Indicates the total number of neighbors in the local BGP router.
<b>Example</b>	This example shows how to display routes advertised for only the 172.16.232.178 neighbor.

```

DXS-3600-32S#show ip bgp neighbors 172.16.232.178 advertised-routes

BGP Local Router ID is 10.90.90.90
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal
Origin codes: i - IGP, e - EGP, ? - incomplete

IP Address/Netmask      Gateway           Metric           LocPrf   Weight   Path
*>i 10.0.0.0/24         172.16.232.179  0                100      0        ?
*> 10.20.2.0/24        172.1.1.2       0                32768    0        i

DXS-3600-32S#

```

Display Parameters	Description
<b>BGP Local Router ID</b>	The router identifier of the local BGP router.
<b>Status codes</b>	Status of the table entry displayed at the beginning of each line. It can be one or more of the following values: <b>s</b> - The table entry is suppressed. <b>d</b> - The table entry is damped. <b>h</b> - The table entry is damped and has been withdrawn by the neighbor. <b>*</b> - The table entry is valid. <b>&gt;</b> - The table entry is the best entry to use for that network. <b>i</b> - The table entry was learned via an internal BGP (iBGP) session.

Display Parameters	Description
<b>Origin codes</b>	Origin of the table entry displayed at the end of each line. It can be one of the following values: <ul style="list-style-type: none"> <li><b>i</b> - Entry originated from an Interior Gateway Protocol (IGP) and was advertised with a network router configuration command.</li> <li><b>e</b> - Entry originated from an Exterior Gateway Protocol (EGP).</li> <li><b>?</b> - Origin of the path is not clear. Usually, this is a router that is redistributed into BGP from an IGP.</li> </ul>
<b>IP Address/Netmask</b>	IP prefix with its mask length of the entry.
<b>Gateway</b>	IP address of the next router that is used when forwarding a packet to the destination network. An entry of 0.0.0.0 indicates that the router has some non-BGP routes to this network.
<b>Metric</b>	If shown, this is the value of the inter-autonomous system metric. This field is frequently not used.
<b>LocPrf</b>	Local preference value as set with the set local-preference route-map configuration command. The default value is 100.
<b>Weight</b>	Weight of the route as set via autonomous system filters.
<b>Path</b>	Autonomous system paths to the destination network.
<b>Example</b>	This example shows how to display the IP prefix-filter received from the neighbor 10.1.1.1 by ORF.

```
DXS-3600-32S#show ip bgp neighbors 10.1.1.1 received prefix-filter

ip prefix-list 10.1.1.1.1: 2 entries
  seq 5 permit 8.8.8.0/24 le 32
  seq 10 permit 9.9.9.0/24 le 32

DXS-3600-32S#
```

Display Parameters	Description
<b>IP Prefix List</b>	Name of the IP prefix list received from the neighbor. The name is made up by the IP address by the dotted decimal notation dot Address Family Identifier (AFI) dot Subsequent Address Family Identifier (SAFI).
<b>entries</b>	Number of entries of the prefix list.
<b>Seq</b>	Sequence number of the entry.
<b>permit</b>	Indicates that routes matched the IP prefix behind will be advertised to the neighbor.
<b>deny</b>	Indicates that routes matched the IP prefix behind will not be advertised to the neighbor.
<b>le</b>	Less than or equal. Indicates the length of the mask.
<b>ge</b>	Greater than or equal. Indicates the length of the mask.
<b>Example</b>	This example shows how to display all the unprocessed routes received only from the 10.1.1.2 neighbor. These routes are contained in the Adj-RIB-In associated with the neighbor 10.1.1.2.

```
DXS-3600-32S#show ip bgp neighbors 10.1.1.2 received-routes

BGP Local Router ID is 10.90.90.90
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal
Origin codes: i - IGP, e - EGP, ? - incomplete

IP Address/Netmask      Gateway      Metric      LocPrf      Weight      Path
*>172.18.0.0/24         10.1.1.2    0           0           10          i
*>172.18.1.0/24         10.1.1.2    0           0           10          i
*>172.18.2.0/24         10.1.1.2    0           0           10          i

DXS-3600-32S#
```

Display Parameters	Description
<b>BGP Local Router ID</b>	The router identifier of the local BGP router.
<b>Status codes</b>	Status of the table entry displayed at the beginning of each line. It can be one or more of the following values: <b>s</b> - The table entry is suppressed. <b>d</b> - The table entry is damped. <b>h</b> - The table entry is damped and has been withdrawn by the neighbor. <b>*</b> - The table entry is valid. <b>&gt;</b> - The table entry is the best entry to use for that network. <b>i</b> - The table entry was learned via an internal BGP (iBGP) session.
<b>Origin codes</b>	Origin of the table entry displayed at the end of each line. It can be one of the following values: <b>i</b> - Entry originated from an Interior Gateway Protocol (IGP) and was advertised with a network router configuration command. <b>e</b> - Entry originated from an Exterior Gateway Protocol (EGP). <b>?</b> - Origin of the path is not clear. Usually, this is a router that is redistributed into BGP from an IGP.
<b>IP Address/Netmask</b>	IP prefix with its mask length of the entry.
<b>Gateway</b>	IP address of the next router that is used when forwarding a packet to the destination network. An entry of 0.0.0.0 indicates that the router has some non-BGP routes to this network.
<b>Metric</b>	If shown, this is the value of the inter-autonomous system metric. This field is frequently not used.
<b>LocPrf</b>	Local preference value as set with the set local-preference route-map configuration command. The default value is 100.
<b>Weight</b>	Weight of the route as set via autonomous system filters.
<b>Path</b>	Autonomous system paths to the destination network.
<b>Example</b>	This example shows how to display all the accepted routes learned only from the 10.1.1.2 neighbor. These routes are contained in the Loc-RIB. This example bases on the example above, and we configure the local policy to only allow the IP prefix 172.18.1.0/24 in.

```
DXS-3600-32S#show ip bgp neighbors 10.1.1.2 route
```

```
BGP Local Router ID is 10.90.90.90
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal
Origin codes: i - IGP, e - EGP, ? - incomplete
```

IP Address/Netmask	Gateway	Metric	LocPrf	Weight	Path
*> 172.18.1.0/24	10.1.1.2	0	0	10	i

```
DXS-3600-32S#
```

Display Parameters	Description
<b>BGP Local Router ID</b>	The router identifier of the local BGP router.
<b>Status codes</b>	Status of the table entry displayed at the beginning of each line. It can be one or more of the following values: <b>s</b> - The table entry is suppressed. <b>d</b> - The table entry is damped. <b>h</b> - The table entry is damped and has been withdrawn by the neighbor. <b>*</b> - The table entry is valid. <b>&gt;</b> - The table entry is the best entry to use for that network. <b>i</b> - The table entry was learned via an internal BGP (iBGP) session.



Display Parameters	Description
<b>Origin codes</b>	Origin of the table entry displayed at the end of each line. It can be one of the following values: <ul style="list-style-type: none"> <li><b>i</b> - Entry originated from an Interior Gateway Protocol (IGP) and was advertised with a network router configuration command.</li> <li><b>e</b> - Entry originated from an Exterior Gateway Protocol (EGP).</li> <li><b>?</b> - Origin of the path is not clear. Usually, this is a router that is redistributed into BGP from an IGP.</li> </ul>
<b>IP Address/Netmask</b>	IP prefix with its mask length of the entry.
<b>Gateway</b>	IP address of the next router that is used when forwarding a packet to the destination network. An entry of 0.0.0.0 indicates that the router has some non-BGP routes to this network.
<b>Metric</b>	If shown, this is the value of the inter-autonomous system metric. This field is frequently not used.
<b>LocPrf</b>	Local preference value as set with the set local-preference route-map configuration command. The default value is 100.
<b>Weight</b>	Weight of the route as set via autonomous system filters.
<b>Path</b>	Autonomous system paths to the destination network.

**Example** This example shows how to display the statistical information between 10.1.1.2 and 10.10.0.2.

```
DXS-3600-32S#show ip bgp neighbors 10.1.1.2 statistics
```

```
BGP neighbor: 10.1.1.2 (External Peer)
```

```
-----
Accepted Prefixes      : 3
Last read              : 00:00:47

Send Statistics
  Opens                : 1
  Notifications       : 0
  Updates              : 1
  Keepalives          : 26
  Route Refresh       : 0
  Total               : 28

Receive Statistics
  Opens                : 1
  Notifications       : 0
  Updates              : 1
  Keepalives          : 25
  Route Refresh       : 0
  Total               : 27

Connections Established : 1
Connections Dropped    : 0
Local Host             : 10.10.0.2
Local Port             : 1024
Remote Host            : 10.1.1.2
Remote Port            : 179
Due Time for Next Start Timer : 5 seconds
Due Time for Next Connect Timer : 0 seconds
```

```
DXS-3600-32S#
```

Display Parameters	Description
<b>BGP neighbor</b>	IP address of the BGP neighbor.
<b>Internal Peer</b>	Indicates that the neighbor is internal.
<b>External Peer</b>	Indicates that the neighbor is external.

Display Parameters	Description
Accepted Prefixes	Number of routes accepted by the local BGP. These routes are contained in the Local RIB.
Last read	Time that BGP last received a message from this neighbor. Format is HH:MM:SS.
Send Statistics	The statistics information of the outgoing packets.
Opens (send)	Number of OPEN packets sent to the neighbor.
Notifications (send)	Number of NOTIFICATIONS packets sent to the neighbor.
Updates (send)	Number of UPDATES packets sent to the neighbor.
Keepalives (send)	Number of KEEPALIVES packets sent to the neighbor.
Route Refresh (send)	Number of ROUTEREFRESH packets sent to the neighbor.
Total (send)	Total packets sent to the neighbor.
Receive Statistics	The statistics information of the incoming packets.
Opens (receive)	Number of OPEN packets received from the neighbor.
Notifications (receive)	Number of NOTIFICATIONS packets received from the neighbor.
Updates (receive)	Number of UPDATES packets received from the neighbor.
Keepalives (receive)	Number of KEEPALIVES packets received from the neighbor.
Route Refresh (receive)	Number of ROUTEREFRESH packets received from the neighbor.
Total (receive)	Total packets received from the neighbor.
Connections Established	Number of times that the local BGP establish the TCP connection with the neighbor.
Connections Dropped	Number of times that the TCP connection been dropped.
Local Host	IP address of the local BGP.
Local Port	TCP port of the local BGP.
Remote Host	IP address of the neighbor.
Remote Port	TCP port of the neighbor.
Due Time for Next Start Timer	BGP peer auto re-start timer value next time. Seconds.
Due Time for Next Connect Timer	BGP peer re-connect timer value next time when peer session connect fail. Seconds.

## 7-83 show ip bgp network

This command is used to display networks created by Border Gateway Protocol network command.

```
show ip bgp network [vrf VRF-NAME] [NETWORK-ADDRESS]
```

### Parameters

<b>vrf VRF-NAME</b>	(Optional) Specifies the VRF name. The length of the <i>VRF-NAME</i> is 12 characters.
<b>NETWORK-ADDRESS</b>	Specifies the IP network address. If a specific network address is not specified, all IP addresses will be displayed.

<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 3. (EI Mode Only Command)
<b>Usage Guideline</b>	This command displays the networks advertised by BGP.

**Example** This example shows the output from the **show ip bgp network** command in, privileged mode.

```
DXS-3600-32S#show ip bgp network
```

```
Network Address      Route Map
-----
20.0.0.0/24         -

Total Network Number: 1

DXS-3600-32S#
```

Display Parameters	Description
Network Address	BGP prefix created by command of <b>network &lt;network-address&gt;</b> .
Route Map	Specify the route-map of this network to apply.
Total Network Number	The number of BGP network.

## 7-84 show ip bgp redistribute

This command is used to display the route redistribution configuration of BGP.

```
show ip bgp redistribute [vrf VRF-NAME]
```

### Parameters

<b>vrf VRF-NAME</b>	(Optional) Specifies the name of the VRF to display the route redistribution configuration in the IPv4 VRF address family.
---------------------	--

<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 3. (EI Mode Only Command)
<b>Usage Guideline</b>	Use this command to check the route redistribution configuration about BGP.

**Example** This example shows how to display the redistribution configuration of BGP:

```
DXS-3600-32S#show ip bgp redistribute
```

```
Route Redistribution Settings

Source   Destination   Type   Metric   RouteMapName
Protocol Protocol
-----
LOCAL    BGP           All    0        N/A

Total Entries : 1

DXS-3600-32S#
```

**Example**

This example shows how to display the redistribution configuration of BGP of the IP VRF address family:

```
DXS-3600-32S#show ip bgp redistribute vrf VPN-A

Route Redistribution Settings

Source      Destination  Type      Metric      RouteMapName
Protocol    Protocol
-----    -
Redistribute For VRF VPN-A

LOCAL      BGP          All       0           N/A

Total Entries : 1

DXS-3600-32S#
```

Display Parameters	Description
<b>Route Redistribution Settings</b>	Information of redistribute between bgp and some other protocols.
<b>Source Protocol</b>	The source protocol of the redistribute operation.
<b>Destination Protocol</b>	The destination protocol of the redistribute operation. Of course, it always is BGP.
<b>Type</b>	Specify which part of route to be redistributed to bgp.
<b>Metric</b>	Specify the BGP metric value for the redistributed routes.
<b>RouteMapName</b>	Specifies a route map which will be used as the criteria to determine whether to redistribute specific routes.
<b>Total Entries</b>	The numbers of protocols which have do redistribute operation between bgp and the protocol itself.
<b>vrf</b>	Indicates the name of the VRF if the redistribute has been done within a VRF.

**7-85 show ip bgp reflection**

This command is used to display the route reflection configuration of BGP.

```
show ip bgp reflection
```

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 3. (EI Mode Only Command)
<b>Usage Guideline</b>	Use this command to display what you have already configured to the local BGP about the route reflection.

**Example** This example shows how to display the reflection configuration of BGP.

```
DXS-3600-32S#show ip bgp reflection

Client to Client Reflection State : Disabled
Cluster ID: 0.0.0.0
Route Reflector Client:
    peer group: inter (172.18.10.1)
        172.18.10.3
        172.18.10.4
        172.18.10.5

DXS-3600-32S#
```

Display Parameters	Description
<b>Client to Client Reflection State</b>	Indicates the state of the route client to client reflection.
<b>Cluster ID</b>	Indicates the cluster ID of the local route reflection.
<b>Route Reflector Client</b>	Clients of the local route reflector, including peer group clients list and the individual clients list by IP addresses below.
<b>peer group</b>	Indicates the name of the peer group with the peer group members in the parentheses separated by comma.

## 7-86 show ip bgp route-map

This command is used to display networks which match route-map of Border Gateway Protocol.

```
show ip bgp route-map [{all | rd ASN:NN | vrf VRF-NAME}] MAP-NAME
```

### Parameters

<b>all</b>	(Optional) Specifies to display routes of all VPN and VRFs.
<b>rd ASN:NN</b>	(Optional) Specifies to display routes with the specified Route Distinguisher. The ASN:NN can be <b>IP address:number</b> or <b>AS number:number</b> .
<b>vrf VRF-NAME</b>	(Optional) Specifies the VRF name. The length of the <i>VRF-NAME</i> is 12 characters.
<b>MAP-NAME</b>	Specifies the name of a route map. The maximum length is 16 characters.

<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 3. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	This command displays the networks according to the specified route-map.

**Example** This example shows the output from the **show ip bgp route-map** command, in privileged mode.

```
DXS-3600-32S#show ip bgp route-map my

BGP Local Router ID is 10.90.90.90
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal
Origin codes: i - IGP, e - EGP, ? - incomplete

IP Address/Netmask      Gateway      Metric      LocPrf      Weight      Path
*> 10.0.0.0/8           0.0.0.0     0           100         32768       i

DXS-3600-32S#
```

**Example**

The following example displays routes that match the route-map *map1* in VRF 100.

```
DXS-3600-32S#show ip bgp route-map vrf 100 map1

BGP Local Router ID is 11.11.11.11
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal
Origin codes: i - IGP, e - EGP, ? - incomplete

IP Address/Netmask      Gateway      Metric      LocPrf  Weight  Path

Route Distinguisher: 1:100 (default for VRF 100)
*> 56.1.1.0/24         50.1.1.10   0           0       10      i
*> 56.1.2.0/24         50.1.1.10   0           0       10      i
*> 56.1.3.0/24         50.1.1.10   0           0       10      i

DXS-3600-32S#
```

Display Parameters	Description
<b>BGP Local Router ID</b>	The router identifier of the local BGP router.
<b>Status codes</b>	Status of the table entry displayed at the beginning of each line. It can be one or more of the following values: <b>s</b> - The table entry is suppressed. <b>d</b> - The table entry is damped. <b>h</b> - The table entry is damped and has been withdrawn by the neighbor. <b>*</b> - The table entry is valid. <b>&gt;</b> - The table entry is the best entry to use for that network. <b>i</b> - The table entry was learned via an internal BGP (iBGP) session.
<b>Origin codes</b>	Origin of the table entry displayed at the end of each line. It can be one of the following values: <b>i</b> - Entry originated from an Interior Gateway Protocol (IGP) and was advertised with a network router configuration command. <b>e</b> - Entry originated from an Exterior Gateway Protocol (EGP). <b>?</b> - Origin of the path is not clear. Usually, this is a router that is redistributed into BGP from an IGP.
<b>IP Address/Netmask</b>	IP prefix with its mask length of the entry.
<b>Gateway</b>	IP address of the next router that is used when forwarding a packet to the destination network. An entry of 0.0.0.0 indicates that the router has some non-BGP routes to this network.
<b>Metric</b>	If shown, this is the value of the inter-autonomous system metric. This field is frequently not used.
<b>LocPrf</b>	Local preference value as set with the set local-preference route-map configuration command. The default value is 100.
<b>Weight</b>	Weight of the route as set via autonomous system filters.
<b>Path</b>	Autonomous system paths to the destination network.

**7-87 show ip bgp parameters**

This command is used to display parameters of the Border Gateway Protocol.

```
show ip bgp parameters
```

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 3. (EI Mode Only Command)

**Usage Guideline** This command displays the parameters of BGP.

**Example** This example shows the output from the **show ip bgp parameters** command, in privileged mode.

```
DXS-3600-32S#show ip bgp parameters

BGP Global State           : Enabled
Version                   : 4
BGP Router Identifier      : 9.9.9.9
Synchronization          : Disabled
Enforce First AS          : Disabled
Local AS Number           : 65000
Hold Time                 : 180 Seconds
Keepalive Interval        : 60 Seconds
Always Compare MED        : Disabled
Deterministics MED        : Disabled
Med Confed                : Disabled
Default Local Preference  : 100
AS Path Ignore            : Disabled
Compare Router ID         : Disabled
MED Missing as Worst     : Disabled
Compare Confederation Path : Disabled
Fast External Fallover    : Enabled
Aggregate Next Hop Check  : Disabled
Default IPv4 Unicast      : Enabled

DXS-3600-32S#
```

Display Parameters	Description
<b>BGP Global State</b>	BGP global state, In this version, BGP always is enabled.
<b>Version</b>	BGP protocol version.
<b>BGP Router Identifier</b>	BGP process's router ID.
<b>Synchronization</b>	BGP synchronization state.
<b>Enforce First AS</b>	When the setting is enabled, any updates received from an external neighbor, that does not have the neighbor's configured Autonomous System (AS) at the beginning of the AS_PATH in the received update, will be denied.
<b>Local AS Number</b>	The local AS number.
<b>Hold Time</b>	The system will declare a peer as dead if a keepalive message is received that is more than the hold time.
<b>Keepalive Interval</b>	Frequency that a BGP send keepalive message to peer.
<b>Always Compare MED</b>	Enable or disable the comparison of the Multi Exit Discriminator (MED) for paths from the neighbors in different Autonomous Systems.
<b>Deterministics MED</b>	Enable or disable to enforce the deterministic comparison of the Multi Exit Discriminator (MED) for paths received from the neighbors within the same Autonomous System.
<b>Med Confed</b>	If enabled, the BGP process will compare the MED for the routes that are received from confederation peers.
<b>Default Local Preference</b>	Specifies the default local preference value. The default value is 100.
<b>AS Path Ignore</b>	If enabled, the BGP process will ignore the AS path in the path selection process. By default this value is disabled.
<b>Compare Router ID</b>	If enabled, the BGP process will include the router ID in the path selection process. Similar routes are compared and the route with the lowest router ID is selected. By default this value is disabled.
<b>MED Missing as Worst</b>	If enabled, the BGP process will assign a value of infinity to routes that are missing the Multi Exit Discriminator (MED) attribute.
<b>Compare Confederation Path</b>	If enabled, the BGP process will compare the confederation AS path length of the routes received. The shorter the confederation AS path length, the better the route is.

Display Parameters	Description
<b>Fast External Fallover</b>	If enable, Border Gateway Protocol (BGP) routing process will immediately reset its external BGP peer sessions if the link used to reach these peers goes down.
<b>Aggregate Next Hop Check</b>	Only the routes with the same next hop attribute can be aggregated if the BGP aggregate next hop check is enabled.

## 7-88 show ip bgp peer-group

This command is used to display information of the BGP peer group.

```
show ip bgp peer-group [{[vrf VRF-NAME] [PEER-GROUP-NAME] | all}]
```

### Parameters

<b>vrf VRF-NAME</b>	(Optional) Specifies the VRF name. The length of the <i>VRF-NAME</i> is 12 characters.
<b>PEER-GROUP-NAME</b>	Specifies the name of a Border Gateway Protocol (BGP) peer group. The maximum length is 16 characters.
<b>all</b>	(Optional) Displays information of all BGP peer groups.

<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 3. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	Use this command to display the contents of the BGP peer group.

**Example** This example shows how to display the information of the peer group named 'mygroup'.

```
DXS-3600-32S#show ip bgp peer-group mygroup

BGP Peer Group : mygroup
-----
Description                :
Session State              : Enabled
Remote AS                  : Not Set
Advertisement Interval     : 30 seconds
Keepalive Interval        : 60ds
Holdtime Interval         : 180 seconds
EBGP Multihop              : 1
Weight                     : 0

Address Family IPv4 Unicast
Members                    : None
Route Reflector Client     : Disabled
Send Community             : None
Remove Private As         : Disabled
Next Hop Self              : Disabled
AllowAS In                 : Disabled
Soft Reconfiguration Inbound : Disabled
Default Originate         : Disabled
Outbound Route Filter (ORF) type (64) Prefix list:
    Send Mode              : Disabled
    Receive Mode           : Disabled
Prefix Max Count          : 16000
Prefix Warning Threshold  : 75
Prefix Warning Only       : Disabled

DXS-3600-32S#
```



Display Parameters	Description
<b>BGP Peer Group</b>	Name of the peer group.
<b>Description</b>	Show the description configured to describe the peer group
<b>Session State</b>	Indicates whether the peer group is shut down or not.
<b>Remote AS</b>	Remote AS number of the peer group.
<b>Not Set (remote AS)</b>	Indicates that this peer group doesn't assign any AS number.
<b>Advertisement Interval</b>	Indicates the minimum interval between sending Border Gateway Protocol (BGP) routing updates.
<b>Keepalive Interval</b>	Indicates the number of seconds between sending KEEPALIVE message with the members of this peer group.
<b>Hold Time</b>	Indicates the maximum number of seconds that may elapse between the receipts of successive KEEPALIVE and/or UPDATE messages with the members of this peer group.
<b>EBGP Multihop</b>	Indicates the TTL of the BGP packet sent to the members of this peer group.
<b>Weight</b>	Indicates the weight that will be associated to the routes learned from the members of this peer group.
<b>Update Source</b>	Interface used for TCP connection with the neighbor.
<b>loopback</b>	Indicates that the update source interface is a loopback interface, followed by its number.
<b>vlan</b>	Indicates that the update source interface is a VLAN interface, followed by VLAN ID.
<b>Password</b>	Show the password set on the TCP connection to the members of this peer group.
<b>Address Family IPv4 Unicast</b>	Indicates that the configuration below is only for IPv4 unicast address family.
<b>Address Family VPNv4 Unicast</b>	Indicates that the configuration below is only for VPNv4 unicast address family.
<b>Members</b>	Members of this peer group, separated by comma.
<b>AS Override</b>	Indicates whether the local BGP override the AS number of the peer with its own AS number in the routes received from the members of the peer group.
<b>Site-of-Origin</b>	Indicates the Site-of-Origin value configured to the members of the peer group.
<b>Next Hop Self</b>	Indicates whether the local BGP enable the router as the next hop for the members of this peer group.
<b>Route Reflector Client</b>	Indicates whether this peer group is a route reflector client of the local BGP.
<b>Send Community</b>	Indicates whether the local BGP send its community attributes to the members of this group.
<b>Standard (send community)</b>	The local BGP send standard community attributes to the neighbor.
<b>Extended (send community)</b>	The local BGP send extended community attributes to the neighbor.
<b>None (send community)</b>	The local BGP doesn't send any community attributes to the neighbor.
<b>Remove Private As</b>	Indicates whether the configuration of removing the private AS from the AS path attribute in the updates sent to the members of this peer group is enabled or not.
<b>AllowAS In</b>	Indicates whether the local BGP allow its own AS number appearing in the received BGP update packets form the members of this peer group.
<b>Num (AllowAS in)</b>	Indicates how many times that the local BGP allow its own AS number appearing in the received BGP update packets from the members of this peer group. This field is only display when the <b>AllowAS In</b> is enabled.
<b>Soft Reconfiguration Inbound</b>	Indicates whether the local BGP store the route updates received from members of this peer group.
<b>Unsuppressed Route Map</b>	Indicates a route map name which the routes previously suppressed by the <b>aggregate-address</b> command must be applied.
<b>Default Originate</b>	Indicates whether the local BGP send the default route to the members of this peer group.

Display Parameters	Description
<b>Incoming Update Prefix List</b>	Indicates an IP prefix list name which the route updates received from the members of this peer group must be applied.
<b>Outgoing Update Prefix List</b>	Indicates an IP prefix list name which the route updates sent to the members of this peer group must be applied.
<b>Incoming Update Filter List</b>	Indicates an AS path access list name which the route updates received from the members of this peer group must be applied.
<b>Outgoing Update Filter List</b>	Indicates an AS path access list name which the route updates sent to the members of this peer group must be applied.
<b>Route Map for Incoming Routes</b>	Indicates a route map name which the route updates received from the members of this peer group must be applied.
<b>Route Map for Outgoing Routes</b>	Indicates a route map name which the route updates sent to the members of this peer group must be applied.
<b>Outbound Route Filter (ORF) type (64) Prefix list</b>	Indicates the state of the ORF prefix list.
<b>Send Mode</b>	Indicates whether the local BGP send ORF prefix list to the members of this peer group.
<b>Receive Mode</b>	Indicates whether the local BGP receive ORF prefix list from the members of this peer group.
<b>Password</b>	Show the password set on the TCP connection to the members of this peer group.
<b>Prefix Max Count</b>	Show the maximum number of prefixes the local BGP can accept.
<b>Prefix Warning Threshold</b>	Indicates in which percentage of the maximum prefixes the local BGP begin to log warning message.
<b>Prefix Warning Only</b>	Indicates whether the local BGP terminate the session of the members of this peer group after the total BGP routes reach the maximum prefixes.
<b>Total peer-group number</b>	Indicates the total number of peer groups in the local BGP router.

## 7-89 show ip bgp quote-regexp

This command is used to display routes which matching the regular expression.

```
show ip bgp quote-regexp [{all | rd ASN:NN | vrf VRF-NAME}] REGEXP
```

### Parameters

<b>all</b>	(Optional) Specifies to display routes of all VPN and VRFs.
<b>rd ASN:NN</b>	(Optional) Specifies to display routes with the specified Route Distinguisher. The ASN:NN can be <b>IP address:number</b> or <b>AS number:number</b> .
<b>vrf VRF-NAME</b>	(Optional) Specifies the VRF name. The length of the <i>VRF-NAME</i> is 12 characters.
<b>REGEXP</b>	Displays routes matching the AS path regular expression. The maximum length is 80 characters.

<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 3. (EI Mode Only Command)
<b>Usage Guideline</b>	This command displays the routes which matching the AS path regular expression.

**Example**

This example shows the output from the **show ip bgp quote-regexp** command, in privileged mode.

```
DXS-3600-32S#show ip bgp quote-regexp "100"

BGP Local Router ID is 10.90.90.10
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal
Origin codes: i - IGP, e - EGP, ? - incomplete

  IP Address/Netmask    Gateway          Metric LocPrf   Weight  Path
s 172.16.0.0/24         172.16.72.30    0      100     108    ?
s 172.16.0.0/24         172.16.72.30    0      100     108    ?
* 172.16.1.0/24         172.16.72.30    0      100     108    ?
* 172.16.11.0/24        172.16.72.30    0      100     108    ?
* 172.16.14.0/24        172.16.72.30    0      100     108    ?
* 172.16.15.0/24        172.16.72.30    0      100     108    ?
* 172.16.16.0/24        172.16.72.30    0      100     108    ?

DXS-3600-32S#
```

**Example**

The following example displays routes which contains the AS number 20 in VRF 100.

```
DXS-3600-32S#show ip bgp quote-regexp vrf 100 "20"

BGP Local Router ID is 11.11.11.11
Status codes: s suppressed, d damped, h history, * valid, > best, i - internal
Origin codes: i - IGP, e - EGP, ? - incomplete

IP Address/Netmask    Gateway          Metric   LocPrf   Weight  Path

Route Distinguisher: 1:100 (default for VRF 100)
*i 56.1.0.0/16         33.33.33.33     0        100      0       20 i
*i 56.1.1.0/24         33.33.33.33     0        100      0       20 i
*i 56.1.2.0/24         33.33.33.33     0        100      0       20 i
*i 56.1.3.0/24         33.33.33.33     0        100      0       20 i

DXS-3600-32S#
```

**Display Parameters****Description****BGP Local Router ID**

The router identifier of the local BGP router.

**Status codes**

Status of the table entry displayed at the beginning of each line. It can be one or more of the following values:

- s** - The table entry is suppressed.
- d** - The table entry is damped.
- h** - The table entry is damped and has been withdrawn by the neighbor.
- \*** - The table entry is valid.
- >** - The table entry is the best entry to use for that network.
- i** - The table entry was learned via an internal BGP (iBGP) session.

**Origin codes**

Origin of the table entry displayed at the end of each line. It can be one of the following values:

- i** - Entry originated from an Interior Gateway Protocol (IGP) and was advertised with a network router configuration command.
- e** - Entry originated from an Exterior Gateway Protocol (EGP).
- ?** - Origin of the path is not clear. Usually, this is a router that is redistributed into BGP from an IGP.

**IP Address/Netmask**

IP prefix with its mask length of the entry.

**Gateway**

IP address of the next router that is used when forwarding a packet to the destination network. An entry of 0.0.0.0 indicates that the router has some non-BGP routes to this network.

Display Parameters	Description
<b>Metric</b>	If shown, this is the value of the inter-autonomous system metric. This field is frequently not used.
<b>LocPrf</b>	Local preference value as set with the set local-preference route-map configuration command. The default value is 100.
<b>Weight</b>	Weight of the route as set via autonomous system filters.
<b>Path</b>	Autonomous system paths to the destination network.

## 7-90 show ip bgp summary

This command is used to display the state of all BGP neighbors connection, also includes route id, dampening state, local AS number and so on.

```
show ip bgp summary [{vrf VRF-NAME | vpnv4}]
```

### Parameters

<b>vrf VRF-NAME</b>	(Optional) Specifies the VRF name. The length of the VRF-NAME is 12 characters.
<b>vpnv4</b>	(Optional) Displays the summary information of the VPNv4 address family.

<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 3. (EI Mode Only Command)
<b>Usage Guideline</b>	This command is used to display the state of all BGP neighbors connection, also includes route id, dampening state, local AS number and so on.

**Example** This example shows how to display the BGP summary information.

```
DXS-3600-32S#show ip bgp summary
```

```
BGP Router Identifier      : 192.168.69.0
Local AS Number           : 100
BGP AS Path Entries       : 0
BGP Community Entries     : 0
```

Neighbor	Ver	AS	MsgRcvd	MsgSent	Up/Down	State/PfxRcd
10.1.1.1	4	1	0	0	never	Active
10.4.4.4	4	65101	0	0	never	Idle
10.90.90.90	4	10	0	0	never	Active
10.90.90.100	4	100	10	8	00:03:18	10
100.16.5.4	4	65101	0	0	never	Active

```
Total Number of Neighbors: 5
```

```
DXS-3600-32S#
```

Display Parameters	Description
<b>BGP Router Identifier</b>	The router identifier of the local BGP router.
<b>Local AS Number</b>	The Autonomous System number of local BGP.
<b>BGP AS Path Entries</b>	AS path access-list number.
<b>BGP Community Entries</b>	The entries of BGP community, including standard community and expand community.
<b>Neighbor</b>	BGP neighbor which is created by command of <b>neighbor &lt;IP-ADDRESS&gt; remote-as &lt;AS-NUMBER&gt;</b> .

Display Parameters	Description
<b>Ver</b>	BGP protocol version. And now, value is 4.
<b>AS</b>	The peer's Autonomous system number.
<b>MsgRcvd</b>	The number of message which receives form this neighbor.
<b>MsgSent</b>	The number of message which be sent to this neighbor.
<b>Up/Down</b>	The length of time that the BGP session has been in the Established state, or the current status if not in the Established state.
<b>State/PfxRcd</b>	The current state of the BGP session, or the number of prefixes that have been received from a neighbor or peer group. When the maximum number (as set by the <b>neighbor maximum-prefix</b> command) is reached, the string "PfxRcd" appears in the entry, the neighbor is shut down, and the connection is set to Idle. An (Admin) entry with Idle status indicates that the connection has been shut down using the <b>neighbor shutdown</b> command.

## 7-91 show ip community-list

This command is used to display configured community lists.

```
show ip community-list [COMMUNITY-LIST-NAME]
```

### Parameters

<b>COMMUNITY-LIST-NAME</b>	Specifies the community list name. The maximum length is 16 characters.
----------------------------	---

<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 3. (EI Mode Only Command)
<b>Usage Guideline</b>	This command can be used without any arguments or keywords. If no arguments are specified, this command will display all community lists. However, the community list name can be specified when entering the <b>show ip community-list</b> command. This option can be useful for filtering the output of this command and verifying a single named community list.

**Example**

This example shows that the output is similar to the output that will be displayed when the **show ip community-list** command is entered in the config mode.

```
DXS-3600-32S#show ip community-list
```

```
Community List Name: c1
```

```
-----
Type : Standard
  permit : 20:30 no-advertise local-as
  deny   : no-export
```

```
Total Filter Entries: 2
```

```
Community List Name: c2
```

```
-----
Type : Expanded
  permit : .*300.*$
  deny   : 500
```

```
Total Filter Entries: 2
```

```
Community List Name: c3
```

```
-----
Type : Expanded
  permit : 20:30
```

```
Total Filter Entries: 1
```

```
Total Community-List Count:3
```

```
DXS-3600-32S#
```

Display Parameters	Description
<b>Community List Name</b>	Name of this community list.
<b>Type</b>	Type of this community list.
<b>Standard</b>	Indicates that this entry is an standard community list with the well-known community value internet local-AS no-advertise and no-export, or with the standard AA:NN format.
<b>Expanded</b>	Indicates that this entry is an expanded community list with a regular expression.
<b>permit</b>	Routes with community attributes match the entry will be accepted.
<b>deny</b>	Routes with community attributes match the entry will be rejected.
<b>Total Filter Entries</b>	Total number of entries of a specifically community list.
<b>Total Community-List Count</b>	Total numbers of the community list.

**7-92 show ip extcommunity-list**

This command is used to display extened community lists configurations.

```
show ip extcommunity-list [EXTCOMMUNITY-LIST-NAME]
```

**Parameters**


---

<i>EXTCOMMUNITY-LIST-NAME</i>	(Optional) Specifies to only display one extended community list.
-------------------------------	---

---

<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.

**Command Default Level** Level: 3. (EI Mode Only Command)

**Usage Guideline** If no keyword is specified, this command will display all extcommunity lists. The extcommunity list name can be specified and it is useful for filtering the output of this command and verifying a single named extended community list.

**Example** The following example displays the configuration of extended community-lists.

```
DXS-3600-32S#show ip extcommunity-list
```

```
Extended Community List Name: e1
```

```
-----
```

```
  Type : Expanded
```

```
    permit : _23
```

```
  Total Filter Entries: 1
```

```
Extended Community List Name: s1
```

```
-----
```

```
  Type : Standard
```

```
    permit :RT 1:1
```

```
SoO 1.1.1.1:1
```

```
    permit :SoO 2:3 3.2.1.1:10
```

```
  Total Filter Entries: 2
```

```
Total Extended Community-list Count:2
```

```
DXS-3600-32S#
```

Display Parameters	Description
<b>Extended Community List Name</b>	Name of this extcommunity list.
<b>Type</b>	Type of this community list.
<b>Standard</b>	Indicates that this entry is a standard extcommunity list with rt or soo value.
<b>Expanded</b>	Indicates that this entry is an expanded extcommunity list with a regular expression.
<b>permit</b>	Routes with extcommunity attributes match the entry will be accepted.
<b>deny</b>	Routes with extcommunity attributes match the entry will be rejected.
<b>Total Filter Entries</b>	Total number of entries of a specifically extcommunity list.
<b>Total Extended Community-list Count</b>	Total numbers of the extcommunity lists.

## 7-93 synchronization

This command is used to enable the synchronization between BGP and your Interior Gateway Protocol (IGP) system. To enable the router to advertise a network route without waiting for the IGP, use the no form of this command.

**synchronization**

**no synchronization**

<b>Parameters</b>	None.
<b>Default</b>	This command is disabled by default.
<b>Command Mode</b>	Router Configuration Mode.
<b>Command Default Level</b>	Level: 8. (EI Mode Only Command)

**Usage Guideline**

Usually, a BGP speaker does not advertise a route to an external neighbor unless that route is local or exists in the IGP. By default, synchronization between BGP and the IGP is turned off to allow the switch to advertise a network route without waiting for route validation from the IGP. This feature allows routers and access servers within an autonomous system to have the route before BGP makes it available to other autonomous systems. Use the synchronization command if routers in the autonomous system do not speak BGP.

You can verify your settings by entering the **show ip bgp** parameters command.

**Example**

This example shows how to enable synchronization in AS 65121.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 65121
DXS-3600-32S(config-router)#synchronization
DXS-3600-32S(config-router)#
```

**7-94 timers bgp**

This command is used to adjust the BGP network timers. Use the no form of this command to restore to the default value.

```
timers bgp KEEP-ALIVE HOLD-TIME
no timers bgp
```

**Parameters**

<i>KEEP-ALIVE</i>	Specifies the frequency, in seconds, with which the software sends KEEPALIVE messages to its BGP peer. The range is from 0 to 65535.
<i>HOLD-TIME</i>	Specifies the interval, in seconds, after not receiving a KEEPALIVE message that the software declares a BGP peer dead. The range is from 0 to 65535.

**Default**

*KEEP-ALIVE*: 60 seconds  
*HOLD-TIME*: 180 seconds

**Command Mode**

Router Configuration Mode.

**Command Default Level**

Level: 8. (EI Mode Only Command)

**Usage Guideline**

The suggested default value for the *KEEPALIVE* is 1/3 of the *HOLDTIME*. The timers configured for a specific neighbor or peer group (by the command **neighbor timers**) override the timers configured for all BGP neighbors using the **timers bgp** command.

When the minimum acceptable *HOLD-TIME* is configured on a BGP router, a remote BGP peer session is established only if the remote peer is advertising a *HOLD-TIME* that is equal to, or greater than, the minimum acceptable *HOLD-TIME* interval. If the minimum acceptable *HOLD-TIME* interval is greater than the configured *HOLD-TIME*, the next time the remote session tries to establish, it will fail and the local router will send a notification stating "unacceptable hold time."

You can verify your settings by entering the **show ip bgp** parameters command.

**Example**

This example shows how to change the KEEPALIVE timer to 50 seconds and the HOLD-TIME timer to 150 seconds.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router bgp 65100
DXS-3600-32S(config-router)#timers bgp 50 150
DXS-3600-32S(config-router)#
```



## 7-95 debug ip bgp

This command is used to turn on the BGP debug function. Use the no form of this command to turn off the BGP debug function.

```
debug ip bgp
no debug ip bgp
```

<b>Parameters</b>	None.
<b>Default</b>	By default the BGP debug function is turned off.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 15. (EI Mode Only Command)
<b>Usage Guideline</b>	Use this command to turn on the BGP debug function while the global debug function has been turned on before.

**Example** This example shows how to turn on the BGP debug function.

```
DXS-3600-32S#debug ip bgp
DXS-3600-32S#
```

## 7-96 debug ip bgp fsm-event

This command is used to turn on the BGP FSM event debug switch. Use the no form of this command to turn off the BGP FSM event debug switch.

```
debug ip bgp fsm-event
no debug ip bgp fsm-event
```

<b>Parameters</b>	None.
<b>Default</b>	By default the BGP FSM event debug switch is turned off.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 15. (EI Mode Only Command)
<b>Usage Guideline</b>	Use this command to turn on BGP FSM event debug switch. When BGP FSM event happens, debug information will be print if BGP debug function is turned on.  Use the command <b>debug ip bgp</b> to turn on BGP debug function.

**Example** This example shows how to turn on BGP FSM event debug switch.

```
DXS-3600-32S#debug ip bgp fsm-event
DXS-3600-32S#

10.1.1.1-Outgoing [FSM] State Change: Idle(1)->Connect(2)
10.1.1.1-Outgoing [FSM] Hold-Timer Expiry.
```

## 7-97 debug ip bgp packet

This command is used to turn on BGP packet debug switch. Use the no form of this command to turn off BGP packet debug switch.

```
debug ip bgp packet {receive | send}
no debug ip bgp packet {receive | send}
```

**Parameters**

<b>receive</b>	Specifies to turn on BGP received packet debug switch.
<b>send</b>	Specifies to turn on BGP sent packet debug switch.

**Default** By default BGP packet debug switch is turned off.

**Command Mode** Privileged Mode.

**Command Default Level** Level: 15. (EI Mode Only Command)

**Usage Guideline** Use this command to turn on BGP packet debug switch. When BGP protocol packets are received or transmitted, debug information will be print if BGP debug function is turned on.

Use the command **debug ip bgp** to turn on BGP debug function.

**Example** This example shows how to turn on BGP received packet debug switch.

```
DXS-3600-32S#debug ip bgp packet receive
DXS-3600-32S#

BGP:Peer:<10.1.1.10> RCV OPEN, version:<4>,remote-as:<40>, HoldTime:<180>,RID:<16.0.0.1>
BGP:Peer:<10.1.1.10> RCV KEEPALIVE.
BGP:Peer:<10.1.1.10> RCV UPDATE, withdraw: <21.0.0.0/8>,<22.0.0.0/8>,<23.0.0.0/8>, <24.0.0.0/8>,<25.0.0.0/8>...
BGP:Peer:<10.1.1.10> RCV UPDATE,attr:<Origin:i,As-path:10,Next-hop:10.1.1.10,Med:5>, NLRI:<21.0.0.0/8>,<22.0.0.0/8>
BGP:Peer:<10.1.1.10> RCV NOTIFICATION,Code:<OPEN Message Error.>,SubCode:<Bad Peer AS.>
BGP:Peer:<10.1.1.10> RCV REFRESH,afi:<1>,safi:<1>
BGP:Peer:<10.1.1.10> RCV Capability Action:Set,Code: GRST ,Length:2
```

**7-98 debug ip bgp route-map**

This command is used to turn on BGP route map debug switch. Use the no form of this command to turn off BGP route map debug switch.

```
debug ip bgp route-map
no debug ip bgp route-map
```

**Parameters** None.

**Default** By default BGP route map debug switch is turned off.

**Command Mode** Privileged Mode.

**Command Default Level** Level: 15. (EI Mode Only Command)

**Usage Guideline** Use this command to turn on BGP route map debug switch. When route map is matching BGP route information, debug information will be print if BGP debug function is turned on.

Use the command **debug ip bgp** to turn on BGP debug function.

**Example** This example shows how to turn on BGP route map debug switch.

```
DXS-3600-32S#debug ip bgp route-map
DXS-3600-32S#

Route-Map:<rmap-1>, Apply Suppressed Route, Neighbor <100.1.1.4, AFI/SAFI 1/1>,
Prefix:<67.1.1.0/24> <Permit>
Route-Map:<rmap-2>, Apply Received route, Neighbor <100.1.1.2, AFI/SAFI 1/1>,Prefix: <88.1.1.0/24> <Deny>
```

## 7-99 debug ip bgp prefix-list

This command is used to turn on BGP IP prefix list debug switch. Use the no form of this command to turn off BGP IP prefix list debug switch.

```
debug ip bgp prefix-list
no debug ip bgp prefix-list
```

<b>Parameters</b>	None.
<b>Default</b>	By default BGP IP prefix list debug switch is turned off.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 15. (EI Mode Only Command)
<b>Usage Guideline</b>	Use this command to turn on BGP IP prefix list debug switch. When IP prefix list is matching BGP information, debug information will be print if BGP debug function is turned on.  Use the command <b>debug ip bgp</b> to turn on BGP debug function.

**Example** This example shows how to turn on BGP IP prefix list debug switch.

```
DXS-3600-32S#debug ip bgp prefix-list
DXS-3600-32S#
```

## 7-100 debug ip bgp show global

This command is used to show internal detailed information about BGP.

```
debug ip bgp show global [{vrf VRF-NAME | vpv4}]
```

### Parameters

<b>vrf VRF-NAME</b>	(Optional) Specifies the VRF name. The length of the <i>VRF-NAME</i> is 12 characters.
<b>vpv4</b>	Displays the global parameters in the address family of VPNv4

<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 15. (EI Mode Only Command)
<b>Usage Guideline</b>	Use this command to check internal status and detailed information of BGP.

**Example**

This example shows how to display detailed internal information about BGP.

```
DXS-3600-32S#debug ip bgp show global
```

```
Following is the information for global debugging:
```

```
-----
```

```
AS Number                : 65100
Router ID                 : 0.0.0.0
Cluster ID                : 0.0.0.0
Confed ID                 : 0
Confederation peers      :
Fast External Fallover   : Enabled
Dampening Ability        : Disabled
Client to Client Ability : Enabled
Cluster Peers            : 1.1.1.1

Aggregate Next_Hop_Check : Disabled
Default Local Preference : 100
Default Holdtime         : 150
Default Keepalive        : 50
Scan Time                : 60
```

```
BGP Active Flags:
```

```
BGP Active AF-Flags   :
BGP_AF_CFLAG_NETWORK_SYNC
Note: The address family is IPv4
```

```
BGP Active Redist-Flags:
IPI_ROUTE_CONNECT
Note: The address family is IPv4
```

```
DXS-3600-32S#
```

**7-101 debug ip bgp show neighbors**

This command is used to show internal detailed information about BGP neighbors.

```
debug ip bgp show neighbors [{vrf VRF-NAME | vpnv4}]
```

**Parameters**

<b>vrf VRF-NAME</b>	(Optional) Specifies the VRF name. The length of the <i>VRF-NAME</i> is 12 characters.
<b>vpnv4</b>	Displays the neighbor parameters in the address family of VPNv4

<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 15. (EI Mode Only Command)
<b>Usage Guideline</b>	Use this command to check internal status and detailed information of BGP neighbors.

**Example**

This example shows how to display internal detailed information about BGP neighbors.

```

DXS-3600-32S#debug ip bgp show neighbors

BGP neighbor: 10.10.10.2 (Internal Peer)
-----
Session State                : Enabled
Session Activity             : Enabled
Peer Group                   : NULL
Remote AS                    : 1
Local AS                     : 10
Remote Router ID             : 192.168.252.252
BGP State                    : Established ( UP for 00:24:25)
Hold Time (Configured)      : 180 Seconds
Hold Time(Current Used)     : 180 Seconds
Keepalive Interval (Configured) : 60 Seconds
Keepalive Interval(Current Used) : 60 Seconds
Advertisement Interval(Configured) : 5 Seconds
Advertisement Interval(Current Used) : 5 Seconds
AS Origination Interval (Configured) : 0 Seconds
AS Origination Interval (Current Used) : 15 Seconds
Connect Retry Interval (Configured) : 0 Seconds
Connect Retry Interval (Current Used) : 0 Seconds
EBGP Multihop : 255
Weight                       : 100
Next Hop Self                 : Disabled
Remove Private AS            : Disabled
Allows In                    : Disabled
Address Family IPv4 Unicast
IPv4 Unicast                  : Advertised and Received
Soft Reconfiguration Inbound : Enabled
Community Sent to this Neighbor : Both Standard and Extended
Default Originate            : Enabled
Incoming Update Prefix List  : prelist1
Incoming Update Filter List  : ASlist1
Route Map for Outgoing Routes : routemap1
Unsuppress Route Map         : us_routmpl
Outbound Route Filter (ORF) type (64) Prefix list:
  Send Mode      : Enabled
  Receive Mode   : Disabled
IP Route Prefix List orf_prelist1 : 1 entries
seq 5 permit 30.0.0.0/8
Pass Word          : (null)
Prefix Count       : 1560
Send Prefix Count  : 860
Prefix Max Count   : 12000
Prefix warning threshold : 75
Prefix Max Warning : Disabled

DXS-3600-32S#

```

**7-102 debug ip bgp show peer-group**

This command is used to show internal detailed information about the BGP peer group.

```
debug ip bgp show peer-group [{vrf VRF-NAME | vpnv4}]
```

**Parameters**

<b>vrf VRF-NAME</b>	(Optional) Specifies the VRF name. The length of the <i>VRF-NAME</i> is 12 characters.
<b>vpnv4</b>	Displays the peer group parameters in the address family of VPNv4

<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 15. (EI Mode Only Command)
<b>Usage Guideline</b>	Use this command to check internal status and detailed information of the BGP peer group.
<b>Example</b>	This example shows how to display internal detail information about BGP peer group.

```

DXS-3600-32S#debug ip bgp show peer-group

BGP Peer Group :local1
-----
Session State                : Enabled
Session Activity            : Enabled
Members                     : 10.2.2.1, 10.2.2.2
Remote AS                   : 1
Holdtime Interval           : 180 Seconds
Keepalive Interval          : 60 Seconds
Advertisement Interval       : 5 Seconds
AS Origination Interval     : 0 Seconds
Connect Retry Interval      : 0 Seconds
EBGP Multihop               : 1
Weight                      : 100
Next Hop Self                : Disabled
Remove Private AS           : Disabled
Allowas In                  : Disabled
Route Reflector Client      : Enabled
Soft Reconfiguration Inbound : Enabled
Community Sent to this Neighbor : Both Standard and Extended
Default Originate           : Enabled
Incoming Update Prefix List  : prelist1
Incoming Update Filter List  : ASlist1
Route Map for Outgoing Routes : 1
Unsuppress Map               : 2
Capability ORF Prefix List   : None
Pass Word                   :
Prefix Max Count             : 16000
Prefix Warning Threshold     : 75
Prefix Max Warning           : Disabled

DXS-3600-32S#

```

### 7-103 debug ip bgp show network

This command is used to show internal detailed information about the BGP network.

```
debug ip bgp show network [vrf VRF-NAME]
```

#### Parameters

<b>vrf VRF-NAME</b>	(Optional) Specifies the VRF name. The length of the <i>VRF-NAME</i> is 12 characters.
---------------------	--

<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 15. (EI Mode Only Command)
<b>Usage Guideline</b>	Use this command to check internal status and detailed information of the BGP network.

**Example** This example shows how to display internal detailed information about the BGP network.

```
DXS-3600-32S#debug ip bgp show network

Network          Route Map
-----          -
192.168.0.0/16   NULL
172.16.0.0/16   map1

Total Entries :2

DXS-3600-32S#
```

## 7-104 debug ip bgp show aggregate

This command is used to show internal detailed information about the BGP route aggregation.

```
debug ip bgp show aggregate [vrf VRF-NAME]
```

### Parameters

<b>vrf VRF-NAME</b>	(Optional) Specifies the VRF name. The length of the <i>VRF-NAME</i> is 12 characters.
---------------------	--

<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 15. (EI Mode Only Command)
<b>Usage Guideline</b>	Use this command to check internal status and detailed information of the BGP route aggregation.

**Example** This example shows how to display internal detailed information about the BGP route aggregation.

```
DXS-3600-32S#debug ip bgp show aggregate

Network          Summary Only   AS Set         Suppress Count
-----          -
192.168.0.0/16   YES           NO             0
172.16.0.0/16   NO            NO             2

Total Entries :2

DXS-3600-32S#
```

## 7-105 debug ip bgp show damp

This command is used to show internal detailed information about BGP route damping.

```
debug ip bgp show damp [vrf VRF-NAME]
```

### Parameters

<b>vrf VRF-NAME</b>	(Optional) Specifies the VRF name. The length of the <i>VRF-NAME</i> is 12 characters.
---------------------	--

<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.

**Command Default Level** Level: 15. (EI Mode Only Command)

**Usage Guideline** Use this command to check internal status and detailed information of BGP route damping.

**Example** This example shows how to display internal detail information about BGP route damping.

```
DXS-3600-32S#debug ip bgp show damp

Route Map                : NULL
Reach Half Life Time is  : 900 seconds
Reuse Value              : 750
Suppress Value           : 2000
MAX Suppress Time        : 3600 seconds
Unreach Half Life Time is : 900 seconds
Reuse Index Size         : 1024
Reuse List Size          : 256
Reuse Offset              : 19

Current dampened routes:
Damp Hinfo: 484d9be8
  index ptr event      penalty  binfo      rn
  f5 484d9be8  1      1392  484d9ad8  484d9a90
  f5 484d9b98  1      1392  484d9a00  484d99b8
  f5 484d8080  1      1392  484d9928  484d98e0
  f5 484d7fe8  1      1392  484d9808  484d9738
Damp Reuse List Info:
reuse_index index  ptr penalty  flap  start_time  t_updated  suppress_time evt
Damp reuse Hinfo: 484d9be8
  245    1 484d9be8  5010      6      428      448 437  1
  245    2 484d9b98  5010      6      428      448 437  1
  245    3 484d8080  5010      6      428      448 437  1
  245    4 484d7fe8  5010      6      428      448 437  1

show BGP Damp no reuse list info: 0
index ptr penalty flap  start_time  t_updated  suppress_time evt

BGP Damp Decay List Info:
decay array size is 90.
Index  value
-----
 1      1
 2    0.969663
 3    0.940247
 4    0.911722
 5    0.884064
 6    0.857244
 7    0.831238

<Output continues...>
```

## 7-106 debug ip bgp show interface

This command is used to show internal detailed information about the BGP interface.

```
debug ip bgp show interface
```

**Parameters** None.

**Default** None.

**Command Mode** Privileged Mode.

**Command Default Level** Level: 15. (EI Mode Only Command)



**Usage Guideline** Use this command to check internal status and detailed information of the BGP interface.

**Example** This example shows how to display internal detailed information about the BGP interface.

```
DXS-3600-32S#debug ip bgp show interface
```

Interface Information:

Name	Index	Network	Flags	Status	VRF
vlan1	0001	0.0.0.0/0	5	Down	None
vlan104	0004	104.1.1.9/16	5	Up	None
vlan105	0005	105.1.1.9/16	5	Up	None
vlan106	0006	106.1.1.9/16	5	Up	None
loopback1	0523	9.9.9.9/32	d	Up	None

```
DXS-3600-32S#
```

## 7-107 debug ip bgp show timer

This command is used to show internal detailed information about the BGP timer.

```
debug ip bgp show timer
```

**Parameters** None.

**Default** None.

**Command Mode** Privileged Mode.

**Command Default Level** Level: 15. (EI Mode Only Command)

**Usage Guideline** Use this command to check internal status and detailed information of the BGP timer.

**Example** This example shows how to display internal detailed information about the BGP timer.

```
DXS-3600-32S#debug ip bgp show timer
```

BGP timer Link:

Node	Time	Func
08B108D0	1	00675AF4
08B1AC70	16	0065F4F4
08B1ACA8	17	0065F5CC
08B37DCC	29	0065F4F4
08B37E04	30	0065F5CC
032821BC	35	00662840
08B1AC54	135	0065F40C
08B37DB0	148	0065F40C

```
DXS-3600-32S#
```

## 7-108 debug ip bgp show redistribution

This command is used to show internal detailed information about BGP route redistribution.

```
debug ip bgp show redistribution [vrf VRF-NAME]
```

**Parameters**


---

<b>vrf</b> <i>VRF-NAME</i>	(Optional) Specifies the VRF name. The length of the <i>VRF-NAME</i> is 12 characters.
----------------------------	--

---

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 15. (EI Mode Only Command)
<b>Usage Guideline</b>	Use this command to check internal status and detailed information of BGP route redistribution.

**Example** This example shows how to display internal detailed information about BGP route redistribution.

```
DXS-3600-32S#debug ip bgp show redistribution
```

```
Redistributed routes summary:
Network          Type      Next_hop
-----
10.0.0.0/8       LOCAL     0.0.0.0
21.0.0.0/24      RIP       10.2.2.2
21.0.1.0/24      RIP       10.2.2.2
21.0.2.0/24      RIP       10.2.2.2
21.0.3.0/24      RIP       10.2.2.2
21.0.4.0/24      RIP       10.2.2.2
```

```
Total Entries: 6
```

```
Redist list information:
No redist list exist!
```

```
DXS-3600-32S#
```

**7-109 debug ip bgp show as-path-access-list**

This command is used to show internal detailed information about the BGP path access list.

```
debug ip bgp show as-path-access-list
```

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 15. (EI Mode Only Command)
<b>Usage Guideline</b>	This command is used to show internal detailed information about the BGP path access list.

**Example** This example shows how to display internal detailed information about the BGP path access list.

```
DXS-3600-32S#debug ip bgp show as-path-access-list
```

```
BGP AS Path Access List 1
deny (_64 [6-9] [0-9] [0-9]_|_65 [0-9] [0-9] [0-9]_)
permit 33
```

```
DXS-3600-32S#
```

## 7-110 debug ip bgp show community-list

This command is used to show internal detailed information about the BGP community list.

**debug ip bgp show community-list**

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 15. <b>(EI Mode Only Command)</b>
<b>Usage Guideline</b>	This command is used to show internal detailed information about the BGP community list.

**Example** This example shows how to display internal detailed information about the BGP community list.

```
DXS-3600-32S#debug ip bgp show community-list
```

```
Community list:list1 standard
  permit 5000:100
```

```
DXS-3600-32S#
```

---

# Compound Authentication Commands

## 8-1 network-access guest-vlan

This command is used to specify an active VLAN as a guest VLAN for network-access authentication module. Use the no form of this command to return to the default setting.

```
network-access guest-vlan VLAN-ID
no network-access guest-vlan
```

### Parameters

<i>VLAN-ID</i>	Specifies an active VLAN as a guest VLAN. The range is 1 to 4094.
----------------	---

<b>Default</b>	No guest VLAN is configured.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	<p>You can configure a guest VLAN on one of these switch ports:</p> <ul style="list-style-type: none"> <li>• A static-access port that belongs to a non-private VLAN.</li> <li>• When configure authentication VLAN under host-base mode to a port, it cannot be a guest VLAN port.</li> <li>• A guest VLAN port cannot be a IGMP multicast VLAN port.</li> </ul> <p>For each network-access port on the switch, you can configure a guest VLAN to provide limited services to un-authenticated clients.</p>

**Example** This example shows how to specify VLAN 5 as a guest VLAN.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#network-access guest-vlan 5
DXS-3600-32S(config-if)#
```

## 8-2 show network-access guest-vlan

This command is used to display the guest VLAN configuration.

```
show network-access guest-vlan
```

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 3
<b>Usage Guideline</b>	This command is used to display the guest VLAN configuration.

**Example** This example shows the output from the **show network-access guest-vlan** in EXEC command.

```
DXS-3600-32S#show network-access guest-vlan

VID          : 1
Member Ports: 1/0/4

VID          : 3
Member Ports: 1/0/1, 1/0/8

Total Entries: 2
DXS-3600-32S#
```

Display Parameters	Description
VID	The guest VLAN VID.
Member Ports	The guest VLAN member ports.

### 8-3 network-access authentication-mode

This command is used to configure the authentication mode for the network-access authentication module. Use the no form of this command to return to the default setting.

```
network-access authentication-mode {port-based | host-based}
no network-access authentication-mode
```

#### Parameters

<b>port-based</b>	Specifies that if one of the attached hosts passes the authentication, all hosts on the same port will be granted access to the network. If the user fails to authenticate, this port will keep trying the next authentication
<b>host-based</b>	Specifies that every user can be authenticated individually.

<b>Default</b>	Authentication mode is host-based.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	Use the <b>show network-access auth-configure</b> command to show the interface configuration for network-access authentication mode.

**Example** This example shows how to configure interface 1 to port-based mode.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#network-access authentication-mode port-based
DXS-3600-32S(config-if)#
```

### 8-4 show network-access auth-configure

This command is used to display the authentication configuration settings.

```
show network-access auth-configure [interface <interface-id>]
```

#### Parameters

<b>interface &lt;interface-id&gt;</b>	Displays the configured information settings for the specified interface.
---------------------------------------	---

<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 3
<b>Usage Guideline</b>	Use the <b>show network-access auth-configure</b> command to display the authentication mode.

**Example** This example shows the output from the **show network-access auth-configure** privileged EXEC command.

```
DXS-3600-32S#show network-access auth-configure

Interface  Auth Mode
-----
TenGigabitEthernet1/0/1    Port-based
TenGigabitEthernet1/0/2    Host-based
TenGigabitEthernet1/0/3    Host-based
TenGigabitEthernet1/0/4    Host-based
TenGigabitEthernet1/0/5    Host-based
TenGigabitEthernet1/0/6    Host-based
TenGigabitEthernet1/0/7    Host-based
TenGigabitEthernet1/0/8    Host-based
TenGigabitEthernet1/0/9    Host-based
TenGigabitEthernet1/0/10   Host-based
TenGigabitEthernet1/0/11   Host-based
TenGigabitEthernet1/0/12   Host-based
TenGigabitEthernet1/0/13   Host-based
TenGigabitEthernet1/0/14   Host-based
TenGigabitEthernet1/0/15   Host-based
TenGigabitEthernet1/0/16   Host-based
TenGigabitEthernet1/0/17   Host-based
TenGigabitEthernet1/0/18   Host-based
TenGigabitEthernet1/0/19   Host-based
TenGigabitEthernet1/0/20   Host-based
TenGigabitEthernet1/0/21   Host-based
TenGigabitEthernet1/0/22   Host-based
TenGigabitEthernet1/0/23   Host-based
TenGigabitEthernet1/0/24   Host-based
DXS-3600-32S#
DXS-3600-32S#show network-access auth-configure interface tenGigabitEthernet 1/0/1

Interface  Auth Mode
-----
TenGigabitEthernet1/0/1    Port-based
DXS-3600-32S#
```

Display Parameters	Description
<b>Port</b>	The interface number.
<b>Auth Mode</b>	The authentication mode. Includes <b>Port-based</b> and <b>Host-based</b> .

# Configuration Commands

## 9-1 show running-config

This command is used to show the configuration information of the current device's system running.

**show running-config**

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	This command is used to display the complete configuration information of the current device's system running.

**Example** This example shows how the configuration information of the current device's configuration system running. The field descriptions are self-explanatory.

```
DXS-3600-32S#show running-config
Building configuration...
```

```
Current configuration : 108272 bytes
```

```
#-----
#                               DXS-3600-32S TenGigabit Ethernet Switch
#                               Configuration
#
#                               Firmware: Build 1.10.023
#                               Copyright(C) 2012 D-Link Corporation. All rights reserved.
#-----
```

```
# DEVICE
configure terminal
logging-server enable device
end
```

```
# PRIVMGMT
configure terminal
```

<The Output is Truncated>

## 9-2 show bootup-config

This command is used to view the boot-up configuration of the device, stored in the Non-volatile Random Access Memory (NVRAM).

**show bootup-config**

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	This command is used to display the boot-up configuration of the device, stored in the NVRAM. The boot-up configuration can be changed by <b>boot config</b> command in global configuration mode.

**Example**

This example shows the boot-up configuration information stored in the NVRAM. The field descriptions are self-explanatory.

```
DXS-3600-32S#show bootup-config
```

```
#-----
#
#           DXS-3600-32S TenGigabit Ethernet Switch
#           Configuration
#
#           Firmware: Build 1.10.023
#           Copyright(C) 2012 D-Link Corporation. All rights reserved.
#-----

# DEVICE
configure terminal
logging-server enable device
end

# PRIVMGMT
configure terminal
# COMMAND LEVEL START
# COMMAND LEVEL END

<The Output is Truncated>
```

**9-3 execute flash:**

This command is used to execute the configuration of device, stored in the NVRAM, by using the increment method.

**execute flash:** *FILENAME*

**Parameters**

<i>FILENAME</i>	Specifies the name of the configuration file, stored in the NVRAM.
-----------------	--

**Default**

None.

**Command Mode**

Privileged Mode.

**Command Default Level**

Level: 15

**Usage Guideline**

The command is used to execute the configuration by using the increment method. This means that the new configuration will merge with the current configuration. The existing configuration will not be cleared before applying of the new configuration.

To verify the executed result, use the **show running-config** command.

**Note:** The configuration file name and contents can be specified. Once edited, users send the configuration file to the FLASH of the network device in TFTP. The contents of the configuration file will simulate the input completely. Hence, it is necessary to edit the contents of the configuration file by the sequence that CLI commands are configured. Furthermore, for some interactive commands, it is necessary to write corresponding response information in the batch file, guaranteeing that the commands can be executed normally.



**Example**

This example shows how to execute the configuration file, called 'vlan.cfg', stored in the NVRAM. The field descriptions are self-explanatory.

```
DXS-3600-32S#execute flash: vlan.cfg
Executing script file vlan.cfg .....
Executing done
DXS-3600-32S#
```

**9-4 configure replace**

This command is used to replace the current running configuration with the indicated configuration file.

```
configure replace {{tftp: //location/filename | ftp: //username:password@location:tcpport/filename} [vrf
VRFNAME] | flash: FILENAME | default} [force]
```

**Parameters**

<b>tftp:</b>	Specifies that the configuration file is received from the TFTP server.
//location/filename	Specifies the URL of configuration file on TFTP server. For example, '//192.168.0.1/config.cfg'.
<b>ftp:</b>	Specifies that the configuration file is received from the FTP server.
//username:password@location:tcpport/filename	Specifies the URL of configuration file on FTP server. For example, '//user:123@192.168.0.1:80/config.cfg',
<b>vrf VRFNAME</b>	Specifies to use VPN routing and forwarding. The VRF name can be up to 12 characters long.
<b>flash:</b>	Specifies that the configuration file is received from the NVRAM of the device.
FILENAME	Specifies the name of the configuration file, stored in the NVRAM. For example, 'config.cfg'.
<b>default</b>	Specifies to reset the current running configuration, on the device, to its original state.
<b>force</b>	(Optional) Specifies to execute the command immediately and need not to confirm again.

**Default**

None.

**Command Mode**

Privileged Mode.

**Command Default Level**

Level: 15

**Usage Guideline**

This command is used to execute the indicated configuration file to replace the current running configuration. The current existing configuration will be cleared before applying the indicated configuration.

You can verify your configuration, use the **show running-config** command.

**Note:** The command will replace the current running configuration with the contents of specified configuration file. So the specified configuration file is assumed to be a complete configuration, not a partial configuration.

**Example**

This example shows how to download the 'config.cfg' file from the TFTP server and replace the current running configuration with it.

```
DXS-3600-32S#configure replace tftp: //10.0.0.66/config.cfg
```

```
This will apply all necessary additions and deletions
to replace the current running configuration with the
contents of the specified configuration file, which is
assumed to be a complete configuration, not a partial
configuration. [y/n]: y
```

```
Accessing tftp://10.0.0.66/config.cfg...
Transmission start...
Transmission finished, file length 45422 bytes.
Executing script file config.cfg .....
Executing done
```

```
DXS-3600-32S#
```

**Example**

This example shows how to download the 'config.cfg' file from the FTP server and replace the current running configuration with it. Execute the command immediately and not to confirm again.

```
DXS-3600-32S#configure replace ftp: //user:123@10.0.0.66:80/config.cfg force
```

```
Accessing ftp: //10.0.0.66/config.cfg...
Transmission start...
Transmission finished, file length 45422 bytes.
Executing script file config.cfg .....
Executing done
```

```
DXS-3600-32S#
```

**Example**

This example shows how to replace the current running configuration with the specified configuration file, called 'config.cfg', stored in the NVRAM of the device. Execute the command immediately and not to confirm again.

```
DXS-3600-32S#configure replace flash: config.cfg force
```

```
Executing script file config.cfg .....
Executing done
```

```
DXS-3600-32S#
```

**Example**

This example shows how to reset current running configuration on device to original state. Execute the command immediately and not to confirm again.

```
DXS-3600-32S#configure replace default force
```

```
Changing current running configuration to default setting .....
Changing done
```

```
DXS-3600-32S#
```

**Example**

This example show how to download the *config.cfg* from a TFTP server using VPN and replace the current running configuration with it.

```
DXS-3600-32S#configure replace tftp: //10.0.0.66/config.cfg vrf VPN1
```

```
This will apply all necessary additions and deletions
to replace the current running configuration with the
contents of the specified configuration file, which is
assumed to be a complete configuration, not a partial
configuration. [y/n]: y
```

```
Accessing tftp://10.0.0.66/config.cfg...
Transmission start...
Transmission finished, file length 45422 bytes.
Executing script file config.cfg .....
Executing done
```

```
DXS-3600-32S#
```

**9-5 boot config flash**

This command is used to specify the filename of the configuration file, stored in the NVRAM, from which the system configures itself during initialization (boot-up).

**boot config flash** *FILENAME*

**Parameters**

<i>FILENAME</i>	Specifies the name of the configuration file, stored in the NVRAM. For example, 'config.cfg'.
-----------------	---

**Default**

The default startup configuration file is 'config.cfg'.

**Command Mode**

Global Configuration Mode.

**Command Default Level**

Level: 15

**Usage Guideline**

The command is used to specify the boot-up configuration file. The default boot-up configuration file is called 'config.cfg'. If the boot-up configuration file is deleted, the system will choose a valid configuration file and set it as the boot-up configuration file. If there is no valid configuration file, the device will be configured to default state when boot-up next time.

To verify your configuration, use **show boot** in privileged mode.

**Example**

This example shows how to configure the configuration file, called 'config.cfg', as the boot-up configuration file, from which the system configures itself during initialization.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#boot config flash config.cfg
DXS-3600-32S(config)#
```

**9-6 copy running-config**

This command is used to save the current running configuration to the NVRAM. This command is also used to save and set the current running configuration as the boot-up configuration file or upload the current running configuration to the TFTP server or FTP server.

**copy running-config** {**bootup-config** | **flash:** [*FILENAME*] | {**tftp:** [*//location/filename*] | **ftp:** [*//username:password@location:tcpport/filename*]} [**vrf** *VRFFNAME*]}

## Parameters

<b>bootup-config</b>	Specifies to save the current running configuration and set it as the boot-up configuration file. If the boot-up configuration file exists, the boot-up configuration file will be replaced by current running configuration file or else the current configuration file will be saved as 'config.cfg' and be configured to the boot-up configuration file.
<b>flash:</b>	Specifies that the current running configuration file will be saved to the NVRAM of the device.
<i>FILENAME</i>	Specifies the saved configuration file name. For example, 'config.cfg'.
<b>tftp:</b>	Specifies that the current running configuration file will be uploaded to the TFTP server.
<i>//location/filename</i>	Specifies the upload configuration file URL on the TFTP server. For example, '//192.168.0.1/config.cfg'.
<b>ftp:</b>	Specifies that the current running configuration file will be uploaded to the FTP server.
<i>//username:password@location:tcpport/filename</i>	Specifies the upload configuration file URL on the FTP server. For example, '//user:123@192.168.0.1:80/config.cfg'.
<b>vrf VRFNAME</b>	Specifies to use VPN routing and forwarding. The VRF name can be up to 12 characters long.

## Default

None.

## Command Mode

Privileged Mode.

## Command Default Level

Level: 15

## Usage Guideline

The command can be used for:

- Saving the current running configuration and setting it as the boot-up configuration file. If the boot-up configuration file exists, the boot-up configuration file will be replaced by the current running configuration file or else the current configuration file will be saved as 'config.cfg' and be configured to the boot-up configuration file.
- Saving the current running configuration to the NVRAM of device.
- Uploading the current running configuration to the TFTP server.
- Upload current running configuration to the RCP server.
- Uploading the current running configuration to the FTP server.

## Example

This example shows how to save the current running configuration and set it as the boot-up configuration file.

```
DXS-3600-32S#copy running-config bootup-config
Destination filename bootup-config? [y/n]: y
Saving all configurations to NV-RAM..... Done.
DXS-3600-32S#
```

## Example

This example shows how to save the current running configuration as 'config.cfg' to the NVRAM of device.

```
DXS-3600-32S#copy running-config flash: config.cfg
Destination filename [config.cfg]? y
Saving all configurations to NV-RAM..... Done.
DXS-3600-32S#
```

**Example** This example shows how to upload the current running configuration as 'config.cfg' to the TFTP server.

```
DXS-3600-32S#copy running-config tftp:
Address of remote host []? 10.0.0.66
Destination filename []? config.cfg
Accessing tftp://10.0.0.66/config.cfg...
Transmission start...
Transmission finished, file length 45421 bytes.
DXS-3600-32S#
```

**Example** This example shows how to upload the current running configuration as 'config.cfg' to the FTP server.

```
DXS-3600-32S#copy running-config ftp: //user:123@10.0.0.66:80/config.cfg
Address of remote host [10.0.0.66]?
Destination username [user]?
Destination password [123]?
TCP port number of remote host [80]?
Destination filename [config.cfg]?
Accessing ftp: //10.0.0.66/config.cfg...
Transmission start...
Transmission finished, file length 45421 bytes.
DXS-3600-32S#
```

**Example** This example show hoe to upload the current running configuration as *config.cfg* to the TFTP server using VPN.

```
DXS-3600-32S#copy running-config tftp: vrf VPN1
Address of remote host []? 10.0.0.66
Destination filename []? config.cfg
Accessing tftp://10.0.0.66/config.cfg...
Transmission start...
Transmission finished, file length 45421 bytes.
DXS-3600-32S#
```

## 9-7 copy bootup-config

This command is used to execute the boot-up configuration immediately, save the boot-up configuration to the NVRAM, or to upload the boot-up configuration to a TFTP server or FTP server.

```
copy bootup-config {running-config | flash: [FILENAME] | { tftp: [//location/filename] | ftp: [//username:password@location:tcpport/filename]} [vrf VRFNAME]}
```

### Parameters

<b>running-config</b>	Specifies that the boot-up configuration will be executed immediately by using the increment method. The boot-up configuration will merge with the current configuration. The existing configuration will not be cleared before applying of the boot-up configuration.
<b>flash:</b>	Specifies that the startup configuration file will be saved to the NVRAM of the device.
<i>FILENAME</i>	Specifies the saved configuration file name. For example, 'config.cfg'.
<b>tftp:</b>	Specifies that the startup configuration file will be uploaded to the TFTP server.
<i>//location/filename</i>	Specifies the upload configuration file URL on the TFTP server. For example, '//192.168.0.1/config.cfg'.

<b>ftp:</b>	Specifies that the startup configuration file will be uploaded to the FTP server.
// <i>username:password@location:tcpport/filename</i>	Specifies the upload configuration file URL on the FTP server. For example, '//user:123@192.168.0.1:80/config.cfg'.
<b>vrf VRFNAME</b>	Specifies to use VPN routing and forwarding. The VRF name can be up to 12 characters long.

<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	<p>The command can be used for:</p> <ul style="list-style-type: none"> <li>• Saving the current running configuration and setting it as the boot-up configuration file. If the boot-up configuration file exists, the boot-up configuration file will be replaced by the current running configuration file or else the current configuration file will be saved as 'config.cfg' and be configured to the boot-up configuration file.</li> <li>• Saving the current running configuration to the NVRAM of device.</li> <li>• Uploading the current running configuration to the TFTP server.</li> <li>• Upload the boot-up configuration to the RCP server.</li> <li>• Uploading the current running configuration to the FTP server.</li> </ul>

**Example** This example shows how to execute the boot-up configuration immediately by using the increment method.

```
DXS-3600-32S#copy bootup-config running-config
Destination filename running-config? [y/n]: y

Executing boot-up configuration .....
Executing done

DXS-3600-32S#
```

**Example** This example shows how to save the boot-up configuration, as 'config.cfg', to the NVRAM of the device.

```
DXS-3600-32S#copy bootup-config flash: config.cfg
Destination filename [config.cfg]? y
Please wait, programming flash..... Done.

DXS-3600-32S#
```

**Example** This example shows how to upload the boot-up configuration, as 'config.cfg', to the TFTP server.

```
DXS-3600-32S#copy bootup-config tftp:
Address of remote host []? 10.0.0.66
Destination filename []? config.cfg
Accessing tftp://10.0.0.66/config.cfg...
Transmission start...
Transmission finished, file length 45421 bytes.

DXS-3600-32S#
```

**Example** This example shows how to upload the boot-up configuration, as 'config.cfg', to the FTP server.

```
DXS-3600-32S#copy bootup-config ftp: //user:123@10.0.0.66:80/config.cfg

Address of remote host [10.0.0.66]?
Destination username [user]?
Destination password [123]?
TCP port number of remote host [80]?
Destination filename [config.cfg]?
Accessing ftp://10.0.0.66/config.cfg...
Transmission start...
Transmission finished, file length 45421 bytes.

DXS-3600-32S#
```

**Example** This example shows how to upload the boot-up configuration as *config.cfg* to the TFTP server using VPN.

```
DXS-3600-32S#copy bootup-config tftp: vrf VPN1

Address of remote host []? 10.0.0.66
Destination filename []? config.cfg
Accessing tftp://10.0.0.66/config.cfg...
Transmission start...
Transmission finished, file length 45421 bytes.

DXS-3600-32S#
```

## 9-8 copy

This command is used to download the configuration file from the TFTP server or FTP server and execute it or save it as the boot-up configuration file. This command is also used to execute the configuration stored in the NVRAM of the device or set it to be the boot-up configuration file.

**copy** {flash: [FILENAME] | {tftp: [//location/filename] | ftp: [//username:password@location:tcpport/filename]} [vrf VRFNAME]} {bootup-config | running-config}

### Parameters

<b>flash:</b>	Specifies the configuration file is saved in the NVRAM of the device.
<i>FILENAME</i>	Specifies the configuration file name. For example, 'config.cfg'.
<b>tftp:</b>	Specifies that the configuration file is from the TFTP server.
<i>//location/filename</i>	Specifies the URL of the configuration file on the TFTP server. For example, '//192.168.0.1/config.cfg'.
<b>ftp:</b>	Specifies that the configuration file is received from the FTP server.
<i>//username:password@location:tcpport/filename</i>	Specifies the URL of the configuration file on the FTP server. For example, '//user:123@192.168.0.1:80/config.cfg'.
<b>vrf VRFNAME</b>	Specifies to use VPN routing and forwarding. The VRF name can be up to 12 characters long.
<b>bootup-config</b>	Specifies to save the specified configuration and set it as the boot-up configuration file. If the boot-up configuration file exists, the boot-up configuration file will be replaced by the specified configuration file or else the specified configuration file will be saved as 'config.cfg' and be configured to be the boot-up configuration file.

<b>running-config</b>	Specifies that the specified configuration will be executed immediately by using the increment method. The specified configuration will merge with the current configuration. The existing configuration will not be cleared before applying of the specified configuration.
-----------------------	--

<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	<p>The command can be used for:</p> <ul style="list-style-type: none"> <li>• Executing the configuration file, stored in the NVRAM, immediately by using the increment method. The specified configuration will merge with the current configuration.</li> <li>• Setting the configuration file, stored in the NVRAM, to be the boot-up configuration file.</li> <li>• Downloading the configuration file from the TFTP server or FTP server and executing the downloaded configuration file immediately by using the increment method. The downloaded configuration will merge with the current configuration.</li> <li>• Downloading the configuration file from the TFTP server or FTP server and saving the downloaded configuration file, then setting it to be the boot-up configuration file. If the startup configuration file exists, the boot-up configuration file will be replaced by the downloaded configuration file or else the downloaded configuration file will be saved as 'config.cfg' and be set to be the boot-up configuration file.</li> </ul>

To download a configuration file then save it to the NVRAM of the device, use this command in the privileged mode:

```
copy {tftp: [//location/filename] | ftp: [//username:password@location:tcpport/filename]} [vrf VRFNAME] flash: [FILENAME]
```

To specify a configuration file in the NVRAM and upload it or save it to the NVRAM of the device, use this command in the privileged mode:

```
copy flash: [FILENAME] {flash: [FILENAME] | {tftp: [//location/filename] | ftp: [//username:password@location:tcpport/filename]} [vrf VRFNAME]}
```

**Note:** The two commands described above are common. These commands can also be used for operating with firmware.

<b>Example</b>	This example shows how to configure the 'config.cfg' file in the NVRAM to be the boot-up configuration file.
----------------	--

```
DXS-3600-32S#copy flash: config.cfg bootup-config
```

```
Source filename [config.cfg]? y
Destination filename bootup-config? [y/n]: y
```

```
DXS-3600-32S#
```

<b>Example</b>	This example shows how to execute the 'config.cfg' file in the NVRAM immediately by using the increment method.
----------------	---

```
DXS-3600-32S#copy flash: config.cfg running-config
```

```
Source filename [config.cfg]? y
Destination filename running-config? [y/n]: y
```

```
Executing script file y .....
Executing done
```

```
DXS-3600-32S#
```



**Example**

This example shows how to download the 'config.cfg' file from the TFTP server then save it and configure it to be the boot-up configuration file.

```
DXS-3600-32S#copy tftp: //10.0.0.66/config.cfg bootup-config
```

```
Address of remote host [10.0.0.66]?
Source filename [config.cfg]?
Destination filename bootup-config? [y/n]: y

Accessing tftp://10.0.0.66/config.cfg...
Transmission start...
Transmission finished, file length 45421 bytes.
Please wait, programming flash..... Done.
```

```
DXS-3600-32S#
```

**Example**

This example shows how to download the 'config.cfg' file from the TFTP server then execute it immediately by using the increment method.

```
DXS-3600-32S#copy tftp: running-config
```

```
Address of remote host []? 10.0.0.66
Source filename []? config.cfg
Destination filename running-config? [y/n]: y

Accessing tftp://10.0.0.66/config.cfg...
Transmission start...
Transmission finished, file length 45421 bytes.
Executing script file config.cfg .....
Executing done
```

```
DXS-3600-32S#
```

**Example**

This example shows how to download the 'config.cfg' file from the FTP server then save it and configure it to be the boot-up configuration file.

```
DXS-3600-32S#copy ftp: //user:123@10.0.0.66:80/config.cfg bootup-config
```

```
Address of remote host [10.0.0.66]?
Source username [user]?
Source password [123]?
TCP port number of remote host [80]?
Source filename [config.cfg]?
Destination filename bootup-config? [y/n]: y

Accessing ftp://10.0.0.66/config.cfg...
Transmission start...
Transmission finished, file length 45421 bytes.
Please wait, programming flash..... Done.
```

```
DXS-3600-32S#
```

**Example**

This example shows how to download the 'config.cfg' file from the FTP server then execute it immediately by using the increment method.

```
DXS-3600-32S#copy ftp: //user:123@10.0.0.66:80/config.cfg running-config
```

```
Address of remote host [10.0.0.66]?
Source username [user]?
Source password [123]?
TCP port number of remote host [80]?
Source filename [config.cfg]?
Destination filename startup-config? [y/n]: y
```

```
Accessing ftp://10.0.0.66/config.cfg...
Transmission start...
Transmission finished, file length 45421 bytes.
Executing script file config.cfg .....
Executing done
```

```
DXS-3600-32S#
```

**Example**

This example show how to download the *config.cfg* file from the TFTP server, using VPN, then save it and configure it to be the boot-up configuration file.

```
DXS-3600-32S#copy tftp: //10.0.0.66/config.cfg vrf VPN1 bootup-config
```

```
Address of remote host [10.0.0.66]?
Source filename [config.cfg]?
Destination filename bootup-config? [y/n]: y
```

```
Accessing tftp://10.0.0.66/config.cfg...
Transmission start...
Transmission finished, file length 45421 bytes.
Please wait, programming flash..... Done.
```

```
DXS-3600-32S#
```

# Counter Commands

## 10-1 clear counters

This command is used to clear counters for a specific port interface or all port interfaces.

```
clear counters [INTERFACE-ID]
```

### Parameters

---

<i>INTERFACE-ID</i>	(Optional) Specifies the interface ID. If no interface is specified, all counters on applicable interfaces (physical ports) will be cleared.
---------------------	--

---

<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	For now, only physical port counters are provided.

**Example** This example shows how to clear counters of all interfaces.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#clear counters
DXS-3600-32S(config)#
```

## 10-2 show interfaces counters

This command is used to display the interfaces' counters.

```
show interfaces [INTERFACE-ID] counters
```

### Parameters

---

<i>INTERFACE-ID</i>	(Optional) Specifies the interface ID. If no interface is specified, all counters on applicable interfaces (physical ports) will be display.
---------------------	--

---

<b>Default</b>	None.
<b>Command Mode</b>	EXEC Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	If no interface is specified, the system will display all existing interfaces.

**Example**

This example shows how to display counters of all interfaces.

```
DXS-3600-32S#show interfaces counters

Interface : 1/0/1
Input Rate : 0 bytes/sec, 0 packets/sec
Output Rate : 0 bytes/sec, 0 packets/sec
InOctets : 0
InUcastPkts : 0
InMulticastPkts : 0
InBroadcastPkts : 0
OutOctets : 0
OutUcastPkts : 0
OutMulticastPkts : 0
OutBroadcastPkts : 0
Undersize packets : 0
Oversize packets : 0
Collisions : 0
Fragments : 0
Jabbers : 0
CRC Alignment Errors : 0
AlignmentErrors : 0
FCSErrors : 0
Dropped Packet Events (Due to lack of resources) : 0
Packets Received Of Length (In Octets) :
  64: 0, 65-127: 0, 128-255: 0,
  256-511: 0, 512-1023: 0, 1024-1518: 0
CTRL+C ESC q Quit SPACE n Next Page ENTER Next Entry a All
```

---

**10-3 show utilization**

This command is used to display the interface utilization.

**show utilization ports**

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	EXEC Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	When specified to display ports utilization, the system will display all existed interfaces.

**Example**

This example shows how to display port utilization.

DXS-3600-32S#show utilization ports

Port	TX/sec	RX/sec	Util
1/0/1	0	0	0
1/0/2	0	0	0
1/0/3	0	0	0
1/0/4	0	0	0
1/0/5	0	0	0
1/0/6	0	0	0
1/0/7	0	0	0
1/0/8	0	0	0
1/0/9	0	0	0
1/0/10	0	0	0
1/0/11	0	0	0
1/0/12	0	0	0
1/0/13	0	0	0
1/0/14	0	0	0
1/0/15	0	0	0
1/0/16	0	0	0
1/0/17	0	0	0
1/0/18	0	0	0
1/0/19	0	0	0
1/0/20	0	0	0
1/0/21	0	0	0
1/0/22	0	0	0
1/0/23	0	0	0

CTRL+C ESC q Quit SPACE n Next Page ENTER Next Entry a All

# CPU Commands

## 11-1 show cpu

This command is used to show the CPU utilization information.

**show cpu**

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	Use this command to show the system CPU utilization information in 5sec, 1 min and 5 min.

**Example** This example shows how to show the CPU utilization information.

```
DXS-3600-32S#show cpu
```

```
CPU Utilization
```

```
-----  
Five seconds - 34 %           One minute - 35 %           Five minutes - 35 %
```

```
DXS-3600-32S#
```

# Debug Commands

## 12-1 debug enable

This command is used to set the debug state as enabled. Users can use **no debug** command to disable the debug state.

```
debug enable
no debug
```

<b>Parameters</b>	None.
<b>Default</b>	The default debug state is enabled.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	Enabling the debug state, allows for debug message output. Disabling the debug state, does not allow debug message output.

**Example** This example shows how to enable the debug state.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#debug enable
DXS-3600-32S(config)#
```

**Example** This example shows how to disable the debug state.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#no debug
DXS-3600-32S(config)#
```

## 12-2 error-reboot enable

This command is used to set the switch to be rebooted when a fatal error occurs. Use the **no error-reboot** command to set the switch not to be rebooted when a fatal error occurs.

```
error-reboot enable
no error-reboot
```

<b>Parameters</b>	None.
<b>Default</b>	The default state of error-reboot is enabled.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	Enabling the error-reboot state, will force the switch to reboot when a fatal error occurs. Disabling the error-reboot state, will not force the switch to reboot when a fatal error occurs.

**Example** This example shows how to enable the state of the error-reboot option.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#error-reboot enable
DXS-3600-32S(config)#
```

**Example** This example shows how to disable the state of the error-reboot option.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#no error-reboot
DXS-3600-32S(config)#
```

## 12-3 copy error-log

This command is used to copy error log information to a location filename through TFTP.

```
copy error-log tftp [//location/filename]
```

### Parameters

<b>tftp</b>	Specifies to upload the error log through a TFTP server.
<i>location</i>	Specifies the location of the TFTP server.
<i>filename</i>	Specifies the location filename of the upload error log.

<b>Default</b>	None.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	The user can use the <b>copy error-log</b> command to copy the error log information through TFTP to a location file.

**Example** This example shows how to copy error log information through a TFTP to a file name 'err-log.txt' at 10.0.0.90

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#copy error-log tftp //10.0.0.90/error-log.txt
DXS-3600-32S(config)#
```

## 12-4 copy debug buffer

This command is used to copy debug buffer information to a location filename through a TFTP.

```
copy debug buffer tftp [//location/filename]
```

### Parameters

<b>tftp</b>	Specifies to upload the debug buffer information through a TFTP server.
<i>location</i>	Specifies the location of the TFTP server.
<i>filename</i>	Specifies the location filename of the debug buffer information.

<b>Default</b>	None.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	The user can use the <b>copy debug buffer</b> command to copy the debug buffer information through TFTP to a location file.

**Example** This example shows how to copy debug buffer information through TFTP to a file name "debug.txt" to 10.0.0.90

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#copy debug buffer tftp //10.0.0.90/debug.txt
DXS-3600-32S(config)#
```



## 12-5 debug output

This command is used to set a specified module's debug message output to the debug buffer or local console.

```
debug output {module <MODULE_LIST> | all} {buffer | console | terminal}
```

### Parameters

<b>module</b>	Specifies the module to output debug messages.
<i>MODULE_LIST</i>	Specifies the module list.
<b>all</b>	Specifies all the modules to output debug messages.
<b>buffer</b>	Specifies the module's debug message output to debug buffer.
<b>console</b>	Specifies the module's debug message output to local console.
<b>terminal</b>	Specifies the module's debug message output to the current session.

<b>Default</b>	The default debug output is buffer.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	Use the command to set a specified module's debug message output to debug to the buffer or local console. If the user uses the command in a Telnet session, the error message will also output to the local console.

**Example** This example shows how to configure all modules to debug message outputs to the debug buffer.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#debug output all buffer
DXS-3600-32S(config)#
```

## 12-6 show error-log

This command is used to show error log information.

```
show error-log
```

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	EXEC Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	The user can use the <b>show error-log</b> command to display the current error log.

**Example**

This example shows how to show error log information.

```
DXS-3600-32S#show error-log

# debug log: 1
# firmware version: 1.10.011
# level: CPU exception
# clock: 8337400 ms
# time : 2000-01-19 03:19:42
===== SOFTWARE FATAL ERROR =====
Invalid mutex handle : 806D6480

Current TASK : bcmARL.0
----- TASK STACKTRACE -----
->802ACE98
->8018C814
->8028FF44
->8028352C
->801D703C
->8013B8A4
->802AE754
->802A5E0C
->802A5D6C

*****
# debug log: 2
# level: fatal

<The Output continues>
```

**12-7 clear error-log**

This command is used to clear error log information.

**clear error-log**

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	The user can use the <b>clear error-log</b> command to clear the error log information.

**Example**

This example shows how to clear the error log information.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#clear error-log
DXS-3600-32S(config)#
```

**12-8 show error-reboot**

This command is used to show the state of the error-reboot option.

**show error-reboot**

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	EXEC Mode.
<b>Command Default Level</b>	Level: 15

**Usage Guideline** This command is used to show the state of the error-reboot option.

**Example** This example shows how to show the state of the error-reboot option.

```
DXS-3600-32S#show error-reboot
```

```
Error Reboot: Disabled
DXS-3600-32S#
```

## 12-9 clear debug buffer

This command is used to clear the debug buffer.

**clear debug buffer**

**Parameters** None.

**Default** None.

**Command Mode** Global Configuration Mode.

**Command Default Level** Level: 15

**Usage Guideline** This command is used to clear the debug buffer.

**Example** This example shows how to clear the debug buffer.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#clear debug buffer
DXS-3600-32S(config)#
```

## 12-10 show debug buffer

This command is used to show the information of the debug buffer.

**show debug buffer [utilization]**

### Parameters

<b>utilization</b>	Specifies to show the utilization of the debug buffer.
--------------------	--

**Default** None.

**Command Mode** EXEC Mode.

**Command Default Level** Level: 15

**Usage Guideline** This command is used to show the information of the debug buffer. If no parameter is specified, all debug information in the buffer will be displayed.

**Example** This example shows how to show the information of the debug buffer.

```
DXS-3600-32S#show debug buffer
```

```
Debug buffer is empty.
DXS-3600-32S#
```

**Example** This example shows how to show the utilization of the debug buffer.

```
DXS-3600-32S#show debug buffer utilization

Allocate from      : System memory pool
Total size        : 2.0 MB
Utilization rate   : 1%

DXS-3600-32S#
```

---

## 12-11 show debug status

This command is used to show the debug buffer's status of the modules.

**show debug status**

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	EXEC Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	The command can show the debug buffer's status of the modules.

**Example** This example shows how to show the debug buffer's information.

```
DXS-3600-32S#show debug status

Debug Global State : Disabled

MSTP                : Disabled
OSPFV2              : Disabled
BGP                 : Disabled
VRRP                : Disabled

DXS-3600-32S#
```

---

## 12-12 show tech-support

This command is used to show technical support information.

**show tech-support**

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	EXEC Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	The command can show the technical support information. The technical support information is used to collect the switch's information and feedback for the engineers. Engineers can then know what happened on the switch, according to the information. If no parameter is specified, information of all modules will be displayed.

**Example**

This example shows how to show the technical support information of IP multicast.

```
DXS-3600-32S#show tech-support

#-----#
#                DXS-3600-32S TenGigabit Ethernet Switch
#                Technical Support Information
#
#                Firmware: Build 1.10.023
#                Copyright(C) 2012 D-Link Corporation. All rights reserved.
#-----#

*****      Basic System Information      *****

[SYS 2000-2-12 01:30:40]

Boot Time           : 11 Feb 2000 23:54:52
RTC Time            : 2000/02/12 01:30:40
Boot PROM Version   : Build 1.10.007
Firmware Version    : Build 1.10.023
Hardware Version    :
Serial number       : D1234567890
MAC Address         : 00-01-02-03-04-00
MAC Address Number  : 65535

*****      System Log      *****

*****      Running Configuration      *****

*****      Layer One Information      *****

<The Output is Truncated>
```

**12-13 copy tech-support**

This command is used to copy technical support information to a location filename through TFTP.

```
copy tech-support tftp //location/filename
```

**Parameters**

<b>tftp</b>	Specifies to upload the technical support information through a TFTP server.
<i>location</i>	Specifies the location of the TFTP server.
<i>filename</i>	Specifies the location filename of the upload technical support information.

**Default** None.

**Command Mode** Global Configuration Mode.

**Command Default Level** Level: 15

**Usage Guideline** The user can use the **copy tech-support** command to copy the technical support information through TFTP to a location file.

**Example**

This example shows how to copy technical support information through TFTP to a file named 'tech-info.txt' at 10.0.0.90

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#copy tech-support tftp //10.0.0.90/tech_info.txt
DXS-3600-32S(config)#
```

## 12-14 debug show module\_version

This command is used to show the module version of the modules.

```
debug show module_version [module <MODULE_LIST>]
```

### Parameters

<b>module</b>	Specifies the module which version will be displayed.
<b>MODULE_LIST</b>	Specifies the module list.

<b>Default</b>	None.
<b>Command Mode</b>	EXEC Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	The command can show the module version of the modules.

**Example** This example shows how to show the module version.

```
DXS-3600-32S#debug show module_version

FS: 1.00.0010
CNT: 1.00.0003
MIRROR: 1.00.0001
VLAN: 1.00
GVRP: 1.00
QINQ: 1.00
PROTOCOL_VLAN: 1.00
IP_SUBNET_VLAN: 1.00
MAC_BASED_VLAN: 1.00
LLDP: 1.00.0005
IGMP_Snooping: 1.00.0001
DOT1X: 2.00.0001
PORTSEC: 2.00.0001
MBAC: 1.13.0001
DHCP_CLIENT: 1.00.0001
DHCP_RELAY: 1.00.0001
DHCP_SERVER: 1.00.0001
STORM_CTRL: 1.02.0001
TRAFFIC_SEG: 1.00.0001
CONFIG: 1.00.0008
CPU_MONITOR: 1.00.0003
SNTP: 1.00.0001
TACACS: 1.00.0001
CTRL+C ESC q Quit SPACE n Next Page ENTER Next Entry a All
```

# DHCP Relay Commands

## 13-1 service dhcp

This command is used to enable the DHCP relay feature. The no form of this command can disable the DHCP relay feature.

```
service dhcp
no service dhcp
```

<b>Parameters</b>	None.
<b>Default</b>	By default, this option is disabled.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	The DHCP relay can forward the DHCP requests to other servers and the returned DHCP response packets to the DHCP client, serving as the relay for DHCP packets.

**Example** This example shows how to enable the DHCP relay option.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#service dhcp
DXS-3600-32S(config)#
```

## 13-2 ip helper-address

This command is used to add an IP address of the DHCP server. The no form of this command deletes an IP address of the DHCP server.

```
ip helper-address ip-address
no ip helper-address ip-address
```

### Parameters

<i>ip-address</i>	Specifies the IP address of the DHCP server.
-------------------	--

<b>Default</b>	None.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	This command can configure more than one DHCP server address in the interface modes. One DHCP request, received on this interface, will be sent to these servers.

**Example** This example shows how to set the server address to 61.154.26.49

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface vlan 100
DXS-3600-32S(config-if)#ip helper-address 61.154.26.49
DXS-3600-32S(config-if)#
```

## 13-3 ip dhcp relay information option82

This command is used to enable the DHCP relay information Option 82 function. The no form of this command is used to disable the DHCP relay information Option 82 function.

```
ip dhcp relay information option82
no ip dhcp relay information option82
```

<b>Parameters</b>	None.
<b>Default</b>	By default, this option is disabled.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	When DHCP Option 82 is enabled, the DHCP packet received from the client will be inserted with an Option 82 field before being relayed to the server. The DHCP Option 82 contains 2 sub-options which are circuit ID sub-option and remote ID sub-option.
<b>Example</b>	This example shows how to enable the <b>ip dhcp relay information option82</b> function.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip dhcp relay information option82
DXS-3600-32S(config)#
```

### 13-4 ip dhcp relay option60

This command is used to enable the DHCP relay Option 60 function. The no form of this command is used to disable the DHCP relay Option 60 function.

```
ip dhcp relay option60
no ip dhcp relay option60
```

<b>Parameters</b>	None.
<b>Default</b>	By default, this option is disabled.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	When Option 60 is enabled, if the packet contains Option 60, it will be based on the Option 60 field to determine the relay server. You can verify your settings by entering the <b>show ip dhcp relay option60</b> command.

**Example** This example shows how to enable the DHCP relay Option 60 function.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip dhcp relay option60
DXS-3600-32S(config)#
```

### 13-5 ip dhcp relay option60 identifier

This command is used to add a DHCP server IP address for a specific Option 60. The no form of this command deletes the DHCP server IP address for that Option 60.

```
ip dhcp relay option60 identifier desc 255 relay ip-address [exact-match | partial-match]
no ip dhcp relay option60 identifier desc 255
```

#### Parameters

<i>desc 255</i>	Specifies the specified string.
<i>ip-address</i>	Specifies the IP address of the DHCP server.
<b>exact-match</b>	Specifies that the DHCP client string needs to exactly match the specified string.
<b>partial-match</b>	Specifies that the DHCP client string only needs to partially match the specified string.



<b>Default</b>	None.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	<p>This command configures the Option 60 relay rules. Note that different strings can be specified with the same relay server and the same strings can be specified with multiple relay servers.</p> <p>A string map to a DHCP server has two modes: (1) One is exact-match and the (2) other is partial-match. The exact-match is that the DHCP client string needs exactly match the specified string. The partial-match is that the DHCP client string only needs partially match the specified string.</p> <p>You can verify your settings by entering the <b>show ip dhcp relay option60</b> command.</p>

**Example** This example shows how to add an Option 60 string "MSFT 5.0" relay entry to 10.90.90.1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip dhcp relay option60 identifier "MSFT 5.0" relay 10.90.90.1
DXS-3600-32S(config)#
```

### 13-6 ip dhcp relay option60 default

This command is used to add default relay servers, used by the DHCP relay Option 60. The no form of this command deletes the Option 60 default relay server.

```
ip dhcp relay option60 default relay ip-address
no ip dhcp relay option60 default
```

#### Parameters

<i>ip-address</i>	Specifies the IP address of the DHCP server.
-------------------	--

<b>Default</b>	None.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	<p>When there is no matching server found for the packet, based on the Option 60 string, for the relay servers to use, it will be determined by the default relay server setting.</p> <p>You can verify your settings by entering the <b>show ip dhcp relay option60</b> command.</p>

**Example** This example shows how to add the default relay servers to use by the DHCP relay Option 60.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip dhcp relay option60 default relay 10.90.90.90
DXS-3600-32S(config)#
```

### 13-7 show ip dhcp relay option60

This command is used to show the entries of the DHCP relay Option 60.

---

**show ip dhcp relay option60 [identifier desc 255 | default]**

### Parameters

<i>desc 255</i>	Specifies the specified string.
<b>default</b>	Specifies the default relay server configuration.

<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 2
<b>Usage Guideline</b>	This command is used to show the entries of the DHCP relay Option 60.

**Example** This example shows how to show the result of the **show ip dhcp relay option60** command.

```
DXS-3600-32S#show ip dhcp relay option60

Default Servers:
  10.90.90.90

Matching Rules:

String          Match Type          IP Address
-----          -
MSFT 5.0        Exact Match          10.90.90.90

Total Entries : 1

DXS-3600-32S#
```

---

## 13-8 ip dhcp relay option61

This command is used to enable the DHCP relay Option 61 function. The no form of this command is used to disable the DHCP relay Option 61 function.

**ip dhcp relay option61**  
**no ip dhcp relay option61**

<b>Parameters</b>	None.
<b>Default</b>	By default, this option is disabled.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	When the Option 61 is enabled, if the packet contains Option 61, it will be based on the Option 60 field to determine the relay server.
	You can verify your settings by entering the <b>show ip dhcp relay option61</b> command.

**Example** This example shows how to enable the **ip dhcp relay option61** function.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip dhcp relay option61
DXS-3600-32S(config)#
```

## 13-9 ip dhcp relay option61 identifier

This command is used to add a DHCP server IP address for a specific Option 61. The no form of this command deletes the DHCP server IP address for that Option 61.

```
ip dhcp relay option61 identifier {string desc 255 | mac-address macaddr} {relay ip-address | drop}
no ip dhcp relay option61 identifier [string desc 255 | mac-address macaddr]
```

### Parameters

<i>desc 255</i>	Specifies the client's client-ID which is specified by the user.
<i>macaddr</i>	Specifies the client's client-ID which is the hardware address of the client.
<i>ip-address</i>	Specifies to relay the packet to a specific IP address.
<b>drop</b>	Specifies to drop the packet.

<b>Default</b>	None.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	<p>This command adds a rule to determine the relay server based on Option 61. The matching rule can be based on either a MAC address or a user-specified string. Only one relay server can be specified for each MAC-address or string.</p> <p>You can verify your settings by entering the <b>show ip dhcp relay option61</b> command.</p>

**Example** This example shows how to add an Option 60 relay entry to 10.90.90.1 with a MAC address of '00-11-22-33-44-55'.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip dhcp relay option61 identifier mac-address 00-11-22-33-44-55 relay
10.90.90.1
DXS-3600-32S(config)#
```

## 13-10 ip dhcp relay option61 default

This command is used to add default relay servers, used by the DHCP relay Option 61. The no form of this command deletes an Option 61 default relay server.

```
ip dhcp relay option61 default relay ip-address
no ip dhcp relay option61 default relay
```

### Parameters

<i>ip-address</i>	Specifies the IP address of the DHCP server.
-------------------	--

<b>Default</b>	None.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	<p>When there is no matching server found for the packet based on Option 61, the relay servers to use will be determined by the default relay server setting.</p> <p>You can verify your settings by entering the <b>show ip dhcp relay option61</b> command.</p>

**Example** This example shows how to add default relay servers to be used by the DHCP relay Option 61.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip dhcp relay option61 default relay 10.90.90.90
DXS-3600-32S(config)#
```

---

## 13-11 show ip dhcp relay option61

This command is used to show the entries of the DHCP relay Option 61.

**show ip dhcp relay option61**

**Parameters** None.  
**Default** None.  
**Command Mode** Privileged Mode.  
**Command Default Level** Level: 2  
**Usage Guideline** This command is used to show the entries of the DHCP relay Option 61.

**Example** This example shows the result of the **show ip dhcp relay option61** command.

```
DXS-3600-32S#show ip dhcp relay option61

Default Relay Rule:10.90.90.90

Matching Rules:

Client-ID                Type                Relay Rule
-----                -
00-11-22-33-44-55       MAC Address         10.90.90.1

Total Entries : 1

DXS-3600-32S#
```

# DHCP Server Commands

## 14-1 bootfile

This command is used to define the startup mapping file name of the DHCP client in the DHCP address pool configuration mode. The no form of this command can be used to remove the definition.

```
bootfile file-name
no bootfile
```

### Parameters

---

<i>file-name</i>	Specifies the startup file name.
------------------	----------------------------------

---

<b>Default</b>	No startup file name is defined, by default.
<b>Command Mode</b>	DHCP Address Pool Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	Some DHCP clients need to download the operating system and the configuration file during the startup. The DHCP server should provide the mapping file name required for the startup, so that DHCP clients can download the file from the corresponding server (such as TFTP). The servers are defined by the <b>next-server</b> command.

**Example** This example shows how to define the 'device.conf' file as the startup file name.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip dhcp pool pool1
DXS-3600-32S(dhcp-config)#bootfile device.conf
DXS-3600-32S(dhcp-config)#
```

## 14-2 clear ip dhcp binding

This command is used to clear the DHCP binding table.

```
clear ip dhcp binding [vrf vrf-name] [* | ip-address]
```

### Parameters

---

<i>vrf vrf-name</i>	(Optional) Specifies to clear virtual routing and forwarding (VRF) information from the DHCP database.
*	Specifies to delete all DHCP bindings.
<i>ip-address</i>	Specifies to delete the binding of the specified IP addresses.

---

<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 2

**Usage Guideline**

This command can only clear the automatic DHCP binding, but the manual DHCP binding can be deleted by the **no ip dhcp pool** command.

Note the following behavior for the **clear ip dhcp binding** command:

- If you do not specify the VRF name option and an IP address is specified, it is assumed that the IP address is an address in the global address space and will look among all the nonvirtual VRF pools for the specified binding.
- If you do not specify the VRF name option and the \* option is specified, it is assumed that all automatic or on-demand bindings in all VRF and non-VRF pools are to be deleted.
- If you specify both the VRF name option and the \* option, all automatic or on-demand bindings in the specified pool only will be cleared.
- If you specify the VRF name option and an IP address, the specified binding will be deleted from the specified pool.

**Example**

The example below clears the DHCP binding with the IP address 192.168.12.100.

```
DXS-3600-32S#clear ip dhcp binding 192.168.12.100
DXS-3600-32S#
```

**Example**

The following example shows how to delete all bindings from all pools:

```
DXS-3600-32S#clear ip dhcp binding *
DXS-3600-32S#
```

**Example**

The following example shows how to delete VRF *vrf1* from the DHCP database:

```
DXS-3600-32S#clear ip dhcp binding vrf vrf1 10.13.2.99
DXS-3600-32S#
```

**14-3 clear ip dhcp conflict**

This command is used to clear the DHCP address conflict record.

```
clear ip dhcp conflict [vrf vrf-name] [* | ip-address]
```

**Parameters**

<i>vrf vrf-name</i>	(Optional) Specifies to clear DHCP virtual routing and forwarding (VRF) conflicts.
*	Specifies to delete all DHCP address conflict records.
<i>ip-address</i>	Specifies to delete the conflict record of the specified IP addresses.

**Default**

None.

**Command Mode**

Privileged Mode.

**Command Default Level**

Level: 2

**Usage Guideline**

The DHCP server uses the ping session to detect the address conflict, while the DHCP client uses the address resolution protocol (ARP) to detect the address conflict. The **clear ip dhcp conflict** command can be used to delete the history conflict record.

Note the following behavior for the **clear ip dhcp conflict** command:

- If you do not specify the VRF name option and an IP address is specified, it is assumed that the IP address is an address in the global address space and will look among all the nonvirtual VRF DHCP pools for the specified conflict.
- If you do not specify the VRF name option and the \* option is specified, it is assumed that all automatic or on-demand conflicts in all VRF and non-VRF pools are to be deleted.
- If you specify both the VRF name option and the \* option, all automatic or on-demand conflicts in the specified pool only will be cleared.
- If you specify the VRF name option and an IP address, the specified conflict will be deleted from the specified pool.

**Example**

This example shows how to clear all address conflict records.

```
DXS-3600-32S#clear ip dhcp conflict *
DXS-3600-32S#
```

**14-4 default-router**

This command is used to define the default gateway of the DHCP client in the DHCP address pool configuration mode. The no form of this command can be used to delete the definition of the default gateway.

```
default-router ip-address [ip-address2 [ip-address3]]
no default-router
```

**Parameters**

<i>ip-address</i>	Specifies to define the IP address of the equipment. It is required to configure one IP address at least.
<i>ip-address2 ip-address3</i>	(Optional) Up to 3 gateways can be configured.

**Default**

No gateway is defined by default.

**Command Mode**

DHCP Address Pool Configuration Mode.

**Command Default Level**

Level: 8

**Usage Guideline**

In general, the DHCP client should get the information of the default gateway from the DHCP server. The DHCP server should specify one gateway address for the client at least, and this address should be of the same network segment as the address assigned to the client.

**Example**

This example shows how to define 192.168.12.1 as the default gateway.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip dhcp pool pool1
DXS-3600-32S(dhcp-config)#default-router 192.168.12.1
DXS-3600-32S(dhcp-config)#
```

**14-5 dns-server**

This command is used to define the DNS server of the DHCP client in the DHCP address pool configuration mode. The no form of this command can be used to delete the definition of the DNS server.

```
dns-server ip-address [ip-address2 [ip-address3]]
```

**no dns-server****Parameters**

<i>ip-address</i>	Specifies to define the IP address of the DNS server. At least one IP address should be configured.
<i>ip-address2 ip-address3</i>	(Optional) Up to 3 DNS servers can be configured.

<b>Default</b>	No DNS server is defined by default.
<b>Command Mode</b>	DHCP Address Pool Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	Define the DNS server for the DHCP client.

**Example** This example shows how to specify the DNS server 192.168.12.3 for the DHCP client.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip dhcp pool pool1
DXS-3600-32S(dhcp-config)#dns-server 192.168.12.3
DXS-3600-32S(dhcp-config)#
```

**14-6 domain-name**

This command is used to define the suffix domain name of the DHCP client in the DHCP address pool configuration mode. The no form of this command can be used to delete the suffix domain name.

**domain-name** *domain-name*  
**no domain-name**

**Parameters**

<i>domain-name</i>	Specifies to define the suffix domain name string of the DHCP client.
--------------------	---

<b>Default</b>	No suffix domain name by default.
<b>Command Mode</b>	DHCP Address Pool Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	After the DHCP client obtains a specified suffix domain name, it can access a host with the same suffix domain name by the host name directly.

**Example** This example shows how to define the suffix domain name 'domain.com' for the DHCP client.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip dhcp pool pool1
DXS-3600-32S(dhcp-config)#domain-name domain.com
DXS-3600-32S(dhcp-config)#
```

**14-7 hardware-address**

This command is used to define the hardware address of the DHCP client in the DHCP address pool configuration mode. The no form of this command can be used to delete the definition of the hardware address.

**hardware-address** *hardware-address type*  
**no hardware-address**



**Parameters**


---

<i>hardware-address</i>	Specifies to define the MAC address of the DHCP client.
<i>type</i>	Specifies the hardware platform protocol of the DHCP client. Use the string definition or digits definition.  String option: <ul style="list-style-type: none"> <li>Ethernet</li> <li>ieee802</li> </ul> Digits option: <ul style="list-style-type: none"> <li>1 (10M Ethernet)</li> <li>6 (IEEE 802)</li> </ul>

---

<b>Default</b>	No hardware address is defined by default. If there is no option when the hardware address is defined, it is the Ethernet by default.
<b>Command Mode</b>	DHCP Address Pool Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	This command can be used only when the DHCP is defined by manual binding.

**Example** This example shows how to define the MAC address 00d0.f838.bf3d with the type ethernet.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip dhcp pool pool1
DXS-3600-32S(dhcp-config)#hardware-address 00d0.f838.bf3d
DXS-3600-32S(dhcp-config)#
```

**14-8 host**

This command is used to define the IP address and network mask of the DHCP client host in the DHCP address pool configuration mode. The no form of this command can be used to delete the definition of the IP address and network mask for the DHCP client.

```
host ip-address [netmask]
no host
```

**Parameters**


---

<i>ip-address</i>	Specifies to the IP address of the DHCP client.
<i>netmask</i>	Specifies to define the network mask of DHCP client.

---

<b>Default</b>	No IP address or network mask of the host is defined.
<b>Command Mode</b>	DHCP Address Pool Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	If the network mask is not defined definitely, the DHCP server will use the natural network mask of this IP address: 255.0.0.0 for class A IP address, 255.255.0 for class B IP address, and 255.255.255.0 for class C IP address.  This command can be used only when the DHCP is defined by manual binding.

**Example** This example shows how to set the client IP address as 192.168.12.91 and the network mask as 255.255.255.240.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip dhcp pool pool1
DXS-3600-32S(dhcp-config)#host 192.168.12.91 255.255.255.240
DXS-3600-32S(dhcp-config)#
```

## 14-9 ip dhcp excluded-address

This command is used to define some IP addresses and make the DHCP server not assign them to the DHCP client in the global configuration mode. The no form of this command can be used to cancel this definition.

```
ip dhcp excluded-address [vrf vrf-name] low-ip-address [high-ip-address]
no ip dhcp excluded-address [vrf vrf-name] low-ip-address [high-ip-address]
```

### Parameters

<i>vrf vrf-name</i>	(Optional) Excludes IP addresses from a virtual routing and forwarding (VRF) space.
<i>low-ip-address</i>	Specifies to exclude the IP address, or exclude the start IP address within the range of the IP address.
<i>high-ip-address</i>	Specifies to exclude the end IP address within the range of the IP address.

<b>Default</b>	No excluded address is defined.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	If the excluded IP address is not configured, the DHCP server attempts to assign all IP addresses in the DHCP address pool. This command can reserve some IP addresses for specific hosts to prevent these addresses are assigned to the DHCP client, and define the excluded IP address accurately to reduce the conflict detecting time when the DHCP server assigns the address.

**Example** In the configuration example below, the DHCP server will not attempt to assign the IP addresses within 192.168.12.100~150.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip dhcp excluded-address vrf vrf1 192.168.12.100 192.168.12.150
DXS-3600-32S(config)#
```

## 14-10 ip dhcp ping packet

This command is used to configure the times of pinging the IP address when the DHCP server detects address conflict in the global configuration mode. The no form of this command is used to restore it to the default configuration.

```
ip dhcp ping packet [number]
no ip dhcp ping packet
```

### Parameters

<i>number</i>	(Optional) Specifies the number of packets in the range of 0 to 10, where 0 indicates disabling the ping operation. The Ping operation sends two packets by default.
---------------	--

<b>Default</b>	The Ping operation sends two packets by default.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	When the DHCP server attempts to assign the IP address from the DHCP address pool, use the ping operation to check whether this address is occupied by other hosts. Record it if the address is occupied, otherwise, assign it to the DHCP client. The Ping operation will send up to 10 packets, two packets by default.

**Example** This example shows how to set the number of the packets, sent by the ping operation as 3.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip dhcp ping packet 3
DXS-3600-32S(config)#
```

## 14-11 ip dhcp ping timeout

This command is used to configure the timeout that the DHCP server waits for response when it uses the ping operation to detect the address conflict in the global configuration mode. The no form of this command can be used to restore it to the default configuration.

```
ip dhcp ping timeout milli-seconds
no ip dhcp ping timeout
```

### Parameters

<i>milli-seconds</i>	Specifies the time that the DHCP server waits for ping response in the range 10 to 2000 milliseconds.
----------------------	---

<b>Default</b>	The default timeout is 100 milliseconds.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	This command defines the time that the DHCP server waits for a ping response packet.

**Example** In the configuration example below, the waiting time of the ping response packet is 600ms.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip dhcp ping timeout 600
DXS-3600-32S(config)#
```

## 14-12 ip dhcp pool

This command is used to define a name of the DHCP address pool and enter into the DHCP address pool configuration mode in the global configuration mode. The no form of this command can be used to delete the DHCP address pool.

```
ip dhcp pool pool-name
no ip dhcp pool pool-name
```

### Parameters

<i>pool-name</i>	Specifies a string of characters and positive integers, for instance, mypool or 1.
------------------	--

<b>Default</b>	No DHCP address pool is defined by default.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	Execute the command to enter into the DHCP address pool configuration mode, in this configuration mode, configure the IP address range, the DNS server and the default gateway.

**Example** This example shows how to define a DHCP address pool with the name 'mypool0'.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip dhcp pool mypool0
DXS-3600-32S(dhcp-config)#
```

## 14-13 lease

This command is used to define the lease time of the IP address that the DHCP server assigns to the client in the DHCP address pool configuration mode. The no form of this command can be used to restore it to the default configuration.

**lease** {*days* [*hours*] [*minutes*] | **infinite**}  
**no lease**

### Parameters

<i>days</i>	Specifies the lease time in days.
<i>hours</i>	(Optional) Specifies the lease time in hours. It is necessary to define the days before defining the hours.
<i>minutes</i>	(Optional) Specifies the lease time in minutes. It is necessary to define the days and hours before defining the minutes.
<b>infinite</b>	Specifies an infinite lease time used.

<b>Default</b>	The lease is 1 days, by default.
<b>Command Mode</b>	DHCP Address Pool Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	When the lease is getting near to expire, the DHCP client will send the request of renewal of lease. In general, the DHCP server will allow the renewal of lease of the original IP address.

**Example** This example shows how to set the DHCP lease to 1 hour.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip dhcp pool pool1
DXS-3600-32S(dhcp-config)#lease 0 1
DXS-3600-32S(dhcp-config)#
```

**Example** This example shows how to set the DHCP lease to 1 minute.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip dhcp pool pool1
DXS-3600-32S(dhcp-config)#lease 0 0 1
DXS-3600-32S(dhcp-config)#
```

## 14-14 netbios-name-server

This command is used to configure the WINS name server of the Microsoft DHCP client NETBIOS in the DHCP address pool configuration mode. The no form of this command can be used to delete the WINS server.

**netbios-name-server** *ip-address* [*ip-address2* [*ip-address3*]]  
**no netbios-name-server**

**Parameters**

<i>ip-address</i>	Specifies the IP address of the WINS server. It is required to configure one IP address at least.
<i>ip-address2 ip-address3</i>	(Optional) Specifies the IP addresses of WINS servers. Up to 3 WINS servers can be configured.

<b>Default</b>	No WINS server is defined, by default.
<b>Command Mode</b>	DHCP Address Pool Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	When more than one WINS server is defined, the former has higher priority. The DHCP client will select the next WINS server only when its communication with the former WINS server fails.

**Example** This example shows how to specify the WINS server 192.168.12.3 for the DHCP client.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip dhcp pool pool1
DXS-3600-32S(dhcp-config)#netbios-name-server 192.168.12.3
DXS-3600-32S(dhcp-config)#
```

**14-15 netbios-node-type**

This command is used to define the node type of the master NetBIOS of the Microsoft DHCP client in the DHCP address configuration mode. The no form of this command can be used to delete the configuration of the NetBIOS node type.

**netbios-node-type** *type*  
**no netbios-node-type**

**Parameters**

<i>type</i>	Specifies the type of node in two modes: Digit in hexadecimal form in the range of 0 to FF.  Only the following numerals are available: <b>1:</b> b-node. <b>2:</b> p-node. <b>4:</b> m-node. <b>8:</b> h-node.  String: <b>b-node:</b> broadcast node <b>p-node:</b> peer-to-peer node <b>m-node:</b> mixed node <b>h-node:</b> hybrid node
-------------	--

<b>Default</b>	No type of the NetBIOS node is defined, by default.
<b>Command Mode</b>	DHCP Address Pool Configuration Mode.
<b>Command Default Level</b>	Level: 8

**Usage Guideline**

There are 4 types of the NetBIOS nodes of the Microsoft DHCP client:

- 1) Broadcast, which carries out the NetBIOS name resolution by the broadcast method,
- 2) Peer-to-peer, which directly requests the WINS server to carry out the NetBIOS name resolution,
- 3) Mixed, which requests the name resolution by the broadcast method firstly, and then carry out the name resolution by the WINS server connection,
- 4) Hybrid, which requests the WINS server to carry out the NetBIOS name resolution firstly, and it will carry out the NetBIOS name resolution by the broadcast method if the response is not received.

By default, the node type for Microsoft operating system is broadcast or hybrid. If the WINS server is not configured, broadcast node is used. Otherwise, hybrid node is used. It is recommended to set the type of the NetBIOS node as Hybrid.

**Example**

This example shows how to set the NetBIOS node of Microsoft DHCP client as Hybrid.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip dhcp pool pool1
DXS-3600-32S(dhcp-config)#netbios-node-type h-node
DXS-3600-32S(dhcp-config)#
```

**14-16 network**

This command is used to define the network number and network mask of the DHCP address pool in the DHCP address pool configuration mode. The no form of this command can be used to delete the definition.

```
network net-number net-mask
no network
```

**Parameters**

<i>net-number</i>	Specifies the network number of the DHCP address pool
<i>net-mask</i>	Specifies the network mask of the DHCP address pool. If the network mask is not defined, the natural network mask will be used by default.

**Default**

No network number or network mask is defined by default.

**Command Mode**

DHCP Address Pool Configuration Mode.

**Command Default Level**

Level: 8

**Usage Guideline**

This command defines the subnet and subnet mask of a DHCP address pool, and provides the DHCP server with an address space which can be assigned to the clients. Unless excluded addresses are configured, all the addresses of the DHCP address pool can be assigned to the clients. The DHCP server assigns the addresses in the address pool orderly. If the DHCP server found an IP address is in the DHCP binding table or in the network segment, it checks the next until it assigns an effective IP address.

The **show ip dhcp binding** command can be used to view the address assignment, and the **show ip dhcp conflict** command can be used to view the address conflict detection configuration.

**Example**

This example shows how to define the network number of the DHCP address pool as 192.168.12.0, and the network mask as 255.255.255.240.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip dhcp pool pool1
DXS-3600-32S(dhcp-config)#network 192.168.12.0 255.255.255.240
DXS-3600-32S(dhcp-config)#
```

## 14-17 next-server

This command is used to define the startup server that the DHCP client accesses during startup in the DHCP address configuration mode. The no form of this command can be used to delete the definition of the startup server list.

```
next-server ip-address
no next-server
```

### Parameters

<i>ip-address</i>	Specifies to define the IP address of the startup server, which is usually the TFTP server. It is required to configure one IP address at least.
-------------------	--

<b>Default</b>	None.
<b>Command Mode</b>	DHCP Address Pool Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	Define the next server for the DHCP client.

**Example** This example shows how to specify the startup server 192.168.12.4 for the DHCP client.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip dhcp pool pool1
DXS-3600-32S(dhcp-config)#next-server 192.168.12.4
DXS-3600-32S(dhcp-config)#
```

## 14-18 service dhcp

This command is used to enable the DHCP service (include DHCP server and DHCP relay) on the device in the global configuration mode. The no form of this command can be used to disable the DHCP service.

```
service dhcp
no service dhcp
```

<b>Parameters</b>	None.
<b>Default</b>	By default, this option is disabled.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	The DHCP server can assign the IP addresses to the clients automatically, and provide them with the network configuration information such as DNS server and default gateway. The DHCP relay can forward the DHCP requests to other servers, and the returned DHCP responses to the DHCP client, serving as the relay for DHCP packets.

**Example** This example shows how to enable the DHCP server and the DHCP relay feature.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#service dhcp
DXS-3600-32S(config)#
```

## 14-19 show ip dhcp excluded-address

This command is used to display the groups of IP addresses which are excluded from the legal assigned IP address.

**show ip dhcp excluded-address [vrf vrf-name]**

### Parameters

<b>vrf vrf-name</b>	(Optional) Specifies the name of a VRF instance.
---------------------	--

<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 2
<b>Usage Guideline</b>	This command is used to display the groups of IP addresses which are excluded from the legal assigned IP address.

**Example** This example shows how to display the group of IP addresses that are excluded from the legal assigned IP address.

```
DXS-3600-32S#show ip dhcp excluded-address
```

```

Index  Begin Address  End Address
-----
1      192.168.0.1    192.168.0.100
2      10.10.10.10    10.10.10.10

```

```
Total Entries : 2
```

```
DXS-3600-32S#
```

Display Parameters	Description
<b>Index</b>	List the index numbers.
<b>Begin Address</b>	Lists the beginning addresses.
<b>End Address</b>	Lists the ending addresses.
<b>VRF</b>	VRFs configured on the DHCP server.

## 14-20 show ip dhcp binding

This command is used to show the binding condition of the DHCP address.

**show ip dhcp binding [vrf vrf-name] [ip-address]**

### Parameters

<b>vrf vrf-name</b>	(Optional) Specifies the name of a VRF instance.
<b>ip-address</b>	(Optional) Specifies to only show the binding condition of the specified IP addresses.

<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 2
<b>Usage Guideline</b>	If the IP address is not defined, show the binding condition of all addresses. If the IP address is defined, show the binding condition of this IP address.



**Example** This example shows how to the result of the **show ip dhcp binding** command.

```
DXS-3600-32S#show ip dhcp binding
IP Address      Hardware Address  Lifetime  Type
-----
192.168.12.91  00-D0-F8-38-BF-3D  Infinite  Manual

Total Entries: 1
DXS-3600-32S#
```

Display Parameters	Description
<b>IP Address</b>	The IP address to be assigned to the DHCP client.
<b>Hardware Address</b>	The hardware address of the DHCP client.
<b>Lifetime</b>	The expiration date of the lease. The Infinite indicates it is not limited by the time.
<b>Type</b>	The type of the address binding. The Automatic indicates an IP address is assigned automatically, and the Manual indicates an IP address is assigned by manual.
<b>VRF</b>	VRFs configured on the DHCP server.

## 14-21 show ip dhcp conflict

This command is used to show the conflict history record of DHCP server.

```
show ip dhcp conflict [vrf vrf-name]
```

### Parameters

<b>vrf vrf-name</b>	(Optional) Specifies the name of a VRF instance.
---------------------	--

<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 2
<b>Usage Guideline</b>	This command can show the conflict address list and excluded address list detected by the DHCP server.

**Example** This example shows the output result of the **show ip dhcp conflict** command.

```
DXS-3600-32S#show ip dhcp conflict
IP Address      Detection Method  Detection Time
-----
192.168.12.1    Ping              2011/12/16 17:06:59

Total Entries: 0
DXS-3600-32S#
```

Display Parameters	Description
<b>IP Address</b>	The IP addresses which cannot be assigned to the DHCP client.
<b>Detection Method</b>	The conflict detection method.
<b>Detection Time</b>	The conflict detection time.
<b>VRF</b>	VRFs configured on the DHCP server.

## 14-22 show ip dhcp pool

This command is used to display information about the Dynamic Host Configuration Protocol (DHCP) address pools.

```
show ip dhcp pool [pool-name]
```

### Parameters

<i>pool-name</i>	Specifies a string of characters and positive integers, for instance, <i>mypool</i> or 1.
------------------	---

<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 2
<b>Usage Guideline</b>	This command can display the information of the DHCP pool.

**Example** This example shows how to display the pool called *engineering*:

```
DXS-3600-32S#show ip dhcp pool engineering

Pool Name           : engineering
VRF Name            : vrf1
Network Address     : 10.10.10.0/24
Domain Name         : domain.com
DNS Server          : 10.10.10.1
NetBIOS Name Server : 10.10.10.1
NetBIOS Node Type   : broadcast
Default Router      : 10.10.10.1
Pool Lease          : 10 days, 0 hours, 0 minutes
Boot File           : boot.cfg
Next Server         : 10.10.10.2

DXS-3600-32S#
```

Display Parameters	Description
<b>Pool Name</b>	The name of the pool.
<b>VRF Name</b>	The VRF name to which the pool is associated.
<b>Network Address</b>	The network address configured by command network.
<b>Domain Name</b>	The suffix domain name string of the DHCP client.
<b>DNS Server</b>	DNS server of the DHCP client
<b>NetBIOS Name Server</b>	NetBIOS Windows Internet Naming Service (WINS) name servers that are available to Microsoft Dynamic Host Configuration Protocol (DHCP) clients,
<b>NetBIOS Node Type</b>	Node type of the master NetBIOS of the Microsoft DHCP client.
<b>Default Router</b>	Default router list for a Dynamic Host Configuration Protocol (DHCP) client.
<b>Pool Lease</b>	The lease time of the IP address that the DHCP server assigns to the client.
<b>Boot File</b>	The startup mapping file name of the DHCP client.
<b>Next Server</b>	The startup server that the DHCP client accesses during startup.

## 14-23 show ip dhcp server

This command is used to display the status of the DHCP server.

```
show ip dhcp server
```

<b>Parameters</b>	None.
-------------------	-------

<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 2
<b>Usage Guideline</b>	This command displays the status of the DHCP server.

**Example** This example is used to display the DHCP server status:

```
DXS-3600-32S#show ip dhcp server
```

```
DHCP Service : Disabled
Ping Packets : 2
Ping Timeout : 500 ms
```

```
DXS-3600-32S#
```

Display Parameters	Description
DHCP Service	The status of DHCP service.
Ping Packets	Number of packets the ping operation will send.
Ping Timeout	The timeout that the DHCP server waits for response.

## 14-24 vrf

This command is used to associate the on-demand address pool with a VPN routing and forwarding instance (VRF) name. To remove the VRF name, use the **no** form of this command.

```
vrf vrf-name
no vrf vrf-name
```

### Parameters

<b>vrf vrf-name</b>	Specifies the name of the VRF to which the address pool is associated.
---------------------	--

<b>Default</b>	None.
<b>Command Mode</b>	DHCP Address Pool Configuration Mode.
<b>Command Default Level</b>	Level: 2
<b>Usage Guideline</b>	Associating a pool with a VRF allows overlapping addresses with other pools that are not on the same VRF. Only one pool can be associated with each VRF.

**Example** This example associates the on-demand address pool with a VRF named pool1:

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)# ip dhcp pool pool1
DXS-3600-32S(dhcp-config)# vrf pool1
```

# Distance Vector Multicast Routing Protocol (DVMRP) Commands

## 15-1 ip dvmrp

This command is used to enable the Distance Vector Multicast Routing Protocol (DVMRP) on an interface. To disable DVMRP on the interface, use the **no** form of this command.

```
ip dvmrp
no ip dvmrp
```

<b>Parameters</b>	None.
<b>Default</b>	By default, this option is disabled.
<b>Command Mode</b>	Interface Configuration Mode
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	This command enables DVMRP on the specified interface.  If you want to use DVMRP to forward multicast packets, use the <b>ip multicast-routing</b> command to enable the multicast global state.  To verify your configuration, use the <b>show ip dvmrp interface</b> command.

**Example** This example shows how to enable DVMRP on interface VLAN 1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface vlan 1
DXS-3600-32S(config-if)#ip dvmrp
DXS-3600-32S(config-if)#
```

**Example** This example shows how to disable DVMRP on interface VLAN 1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface vlan 1
DXS-3600-32S(config-if)#no ip dvmrp
DXS-3600-32S(config-if)#
```

## 15-2 ip dvmrp metric

This command is used to configure the metric value on the current interface. To restore the default value, use **no** form of this command.

```
ip dvmrp metric METRIC
no ip dvmrp metric
```

### Parameters

---

<i>METRIC</i>	Specifies the metric value of the interface. The range is 1 to 31.
---------------	--

---

<b>Default</b>	The default value is 1.
<b>Command Mode</b>	Interface Configuration Mode
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )

**Usage Guideline**

For each source network reported, a route metric is associated with the route being reported. The metric is the sum of the interface metrics between the router originating the report and the source network. For the purposes of DVMRP, the Infinity metric is defined to be 32. This limits the breadth across the whole DVMRP network and is necessary to place an upper bound on the convergence time of the protocol.

To verify your configuration, use the **show ip dvmrp interface** command.

**Example**

This example shows how to configure the DVMRP metric of VLAN 1 to 30.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface vlan 1
XS-3600-32S(config-if)#ip dvmrp metric 30
DXS-3600-32S(config-if)#
```

**Example**

This example shows how to configure the DVMRP metric of VLAN 2 back to default.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface vlan 2
XS-3600-32S(config-if)#no ip dvmrp metric
DXS-3600-32S(config-if)#
```

**15-3 show ip dvmrp interface**

This command is used to display DVMRP interface information.

```
show ip dvmrp interface [IFNAME]
```

**Parameters**

<i>IFNAME</i>	Specifies the interface name.
---------------	-------------------------------

**Default**

None.

**Command Mode**

Privileged EXEC Mode.

**Command Default Level**

Level: 3. (EI Mode Only Command)

**Usage Guideline**

This command is used to display basic DVMRP interface information. If no interface name is specified, the command will list all interfaces' info.

**Example**

This example shows how to show all DVMRP interfaces information.

```
DXS-3600-32S#show ip dvmrp interface

Interface      IP Address      Metric  Generation ID  State
-----
vlan1          10.90.90.90     1       1368947491     Enabled
vlan2          90.1.1.1        1        0              Disabled

DXS-3600-32S#
```

**Example**

This example shows how to show information of interface 'vlan1'.

```
DXS-3600-32S#show ip dvmrp interface vlan1

Interface      IP Address      Metric  Generation ID  State
-----
vlan1          10.90.90.90     1       1368947491     Enabled

DXS-3600-32S#
```

Display Parameters	Description
<b>Interface</b>	Specifies the interface name.
<b>IP Address</b>	The IP address of the interface.
<b>Generation ID</b>	Specifies the generation ID of this interface. This value is dynamically generated by the switch, and it is used for the neighbor to detect that whether the switch has restarted or not
<b>Metric</b>	The metric value of the interface, which is configured by command "ip dvmrp metric".
<b>State</b>	Specifies the DVMRP interface state, which is configured by command "ip dvmrp"

## 15-4 show ip dvmrp neighbor

This command is used to display DVMRP neighbor information.

```
show ip dvmrp neighbor [IFNAME]
```

### Parameters

<i>IFNAME</i>	Specifies an interface name.
---------------	------------------------------

<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 3. (EI Mode Only Command)
<b>Usage Guideline</b>	This command is used to display DVMRP neighbor information. If no interface name is specified, this command will display DVMRP neighbor information on all interfaces.

**Example** This example shows how to show all DVMRP neighbor information.

```
DXS-3600-32S#show ip dvmrp neighbor
```

```
Interface      Neighbor Address  Generation ID  Expire Time
-----
vlan1          10.48.74.123     1368354259    00:00:32
vlan2          172.18.1.2       1368355860    00:00:05
```

```
Total Entries : 2
```

```
DXS-3600-32S#
```

**Example** This example shows how to show neighbor information of interface 'vlan1'.

```
DXS-3600-32S#show ip dvmrp neighbor vlan1
```

```
Interface      Neighbor Address  Generation ID  Expire Time
-----
vlan1          10.90.90.2       1368355860    00:00:31
```

```
Total Entries: 1
```

```
DXS-3600-32S#
```

Display Parameters	Description
<b>Interface</b>	Specify the interface name.
<b>Neighbor Address</b>	Specify the neighbor's address of the specified interface.

Display Parameters	Description
Generation ID	Specify the generation ID of the neighbor. This value is dynamically generated by the neighbor switch, and it is used for the local switch to detect that whether the neighbor has restarted or not
Expire Time	After this time, the neighbor will be aged out if no new probe message received from the neighbor.

## 15-5 show ip dvmrp route

This command is used to display the DVMRP route info.

```
show ip dvmrp route [IPADDRESS MASK]
```

### Parameters

<i>IPADDRESS</i>	Specifies IP address. Together with the parameter MASK, specify displaying the route info for the specified network.
<i>MASK</i>	Specifies the mask of the IP address.

<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 3. (EI Mode Only Command)
<b>Usage Guideline</b>	This command is used to display route information learned by DVMRP. If no parameter added, this command will display all the route information on the switch.

**Example** This example shows how to display all the route information learned by DVMRP.

```
DXS-3600-32S#show ip dvmrp route
```

```
DVMRP Routing Table
```

Source Address/Netmask	Upstream Neighbor	Metric	Learned	Interface	Expire
2.0.0.0/8	10.90.90.90	2	Dynamic	vlan1	00:01:22
10.0.0.0/8	10.90.90.2	1	Local	vlan1	-

```
Total Entries: 2
```

```
DXS-3600-32S#
```

**Example** This example shows how to display routing information of 10.3.3.3 and mask 255.0.0.0

```
DXS-3600-32S#show ip dvmrp route 10.3.3.3 255.0.0.0
```

```
DVMRP Routing Table
```

Source Address/Netmask	Upstream Neighbor	Metric	Learned	Interface	Expire
10.0.0.0/8	10.90.90.2	1	Local	vlan1	-

```
Total Entries: 1
```

```
DXS-3600-32S#
```





# D-Link License Management System Commands

## 16-1 install dlms activation\_code

This command is used to install an activation code on the switch.

```
install dlms activation_code AC_STR
```

### Parameters

<i>AC_STR</i>	Specifies an activation code. The length should be 25 string characters.
---------------	--

<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	This command is used to install an activation code. The activation code is a set of codes which activates/ unlocks function on the appliance.

**Example** This example shows how to install an activation code on the switch. The field descriptions are self-explanatory. The following example shows how to install a legal activation code.

```
DXS-3600-32S#install dlms activation_code xBc7vNWsSpchuQkGZsTfPwcfa
```

```
Success.
```

```
Please reboot the device to active the license.
```

```
DXS-3600-32S#
```

**Example** This example shows how to input an illegal activation code.

```
DXS-3600-32S#install dlms activation_code xBc7vNWsSpchuQkGZsTfPwAcB
```

```
Illegal activation code.
```

```
DXS-3600-32S#
```

## 16-2 show dlms license

This command is used to display the license information on the switch.

```
show dlms license
```

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 3
<b>Usage Guideline</b>	This command will display the license information on the switch, including the default license.

**Example**

This example shows how to display the license information. The field descriptions are self-explanatory. The following example shows how to display the license information on the switch.

```
DXS-3600-32S#show dlms license
```

```
Device Default License : SI
```

License Model	Activation Code	Time Remaining
-----	-----	-----
DXS-3600-32S-SE-LIC	xBc7vNWsSpchuQkGZsTfPwAcb	33 weeks
DXS-3600-32S-SE-LIC	xBc7vNWsSpchuQkGZsTfPwAcc*	
DXS-3600-32S-SE-LIC	xBc7vNWsSpchuQkGZsTfPwAcd*	
-----	-----	-----
DXS-3600-32S-SE-LIC	xBc8xTWsQpchxTkGZsTfPwBtt	No Limited
-----	-----	-----
		* expired

```
DXS-3600-32S#
```

# Domain Name System (DNS) Commands

## 17-1 ip domain-lookup

This command is used to enable the domain name look up for the switch itself's application. For example, to ping a domain name on the switch. Use the **no** form of this command to disable this function.

```
ip domain-lookup
no ip domain-lookup
```

<b>Parameters</b>	None.
<b>Default</b>	By default, this option is disabled.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	This command enables the domain name resolution function.

**Example** This example shows how to enable the DNS domain name resolution function.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip domain-lookup
DXS-3600-32S(config)#
```

## 17-2 ip name-server

This command is used to configure the IP address of the domain name server. Use the **no** form of this command to delete the configured domain name server.

```
ip name-server [vrf <string 1-12>] ip-address
no ip name-server [vrf <string 1-12>] [ip-address]
```

### Parameters

<b>vrf &lt;string 1-12&gt;</b>	Specifies the VRF that the IP reside in. If no VRF name specified, the global instance will be used.
<b>ip-address</b>	Specifies the IP address of the domain name server.

<b>Default</b>	None.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	Add the IP address of the DNS server. Once this command is executed, the equipment will add a DNS server. When the device cannot obtain the domain name from a DNS server, it will attempt to send the DNS request to subsequent servers until it receives a response. Up to 2 DNS servers are supported. You can delete a DNS server with the ip-address option or all the DNS servers.

**Example** This example shows how to set the domain name server 192.168.5.134

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip name-server 192.168.5.134
DXS-3600-32S(config)#
```

## 17-3 ip host

This command is used to configure the mapping of the host name and the IP address by manual. Use the no form of the command to remove the host list.

```
ip host [vrf <string 1-12>] host-name ip-address
no ip host [vrf <string 1-12>] host-name ip-address
```

### Parameters

<i>vrf</i> <string 1-12>	Specifies the VRF that the host reside in. If no VRF name specified, the global instance will be used.
<i>host-name</i>	Specifies the host name of the equipment.
<i>ip-address</i>	Specifies the IP address of the equipment.

<b>Default</b>	None.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	To delete the host list, use the <b>no ip host host-name ip-address</b> command.

**Example** This example shows how to configure the mapping of the host name 'www.abc.com' and the IP address 192.168.5.243.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip host www.abc.com 192.168.5.243
DXS-3600-32S(config)#
```

## 17-4 clear host

This command is used to clear the dynamically learned host name in the privileged user mode.

```
clear host [vrf <string 1-12>] [host-name]
```

### Parameters

<i>vrf</i> <string 1-12>	Specifies the VRF that the host reside in. If no VRF name specified, the global instance will be used.
<i>host-name</i>	Specifies to delete the dynamically learned host.

<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 2
<b>Usage Guideline</b>	Execute this command to delete the host name records learned by the DNS dynamically.

**Example** This example shows how to delete the dynamically learned mapping records from the host name-IP address buffer table.

```
DXS-3600-32S#clear host www.abc.com
DXS-3600-32S#
```

## 17-5 show hosts

This command is used to display the DNS configuration.

**show hosts [vrf <string 1-12>]**

### Parameters

<b>vrf &lt;string 1-12&gt;</b>	Specifies the VRF that the host reside in. If no VRF name specified, the global instance will be used.
--------------------------------	--

<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 2
<b>Usage Guideline</b>	Show the DNS related configuration information.

**Example** This example shows how to show the DNS related configuration information.

```
DXS-3600-32S#show hosts

Name servers are: 192.168.5.134

Static Host Name Table

Host Name                               IP Address
-----
www.abc.com                             192.168.5.243

Total Static Entries: 1

Dynamic Host Name Table

Host Name                               IP Address      TTL
-----
www.yes.com                             10.0.0.88      1334 minutes

Total Dynamic Entries: 1

DXS-3600-32S#
```

## 17-6 ip dns server

This command is used to control if the switch can use the domain name for other dns clients which are connected to it. If the DNS server state is enabled, when it receives a DNS query, it will according to its DNS cache table or query an upper DNS server to respond to the client. Us the **no** form of this command to disable this function.

**ip dns server**  
**no ip dns server**

<b>Parameters</b>	None.
<b>Default</b>	By default, this option is disabled.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	This command enables the domain name server function.

**Example** This example shows how to enable the DNS domain name server function.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip dns server
DXS-3600-32S(config)#
```

# DoS Attack Prevention Commands

## 18-1 defense

This command is used to defend DoS attacks. Use the no form of the command to disable the defense attack

```
defense [land | blat | null-scan | xmascan | tcp-synfin | port-less-1024 | ping-death | tiny-frag] enable
no defense [land | blat | null-scan | xmascan | tcp-synfin | port-less-1024 | ping-death | tiny-frag] enable
```

### Parameters

<b>land</b>	Enable the defense land attack function.
<b>blat</b>	Enable the defense blat attack function.
<b>null-scan</b>	Enable the defense null scan attack function.
<b>xmascan</b>	Enable the defense xmas scan attack function.
<b>tcp-synfin</b>	Enable the defense tcp with synfin attack function.
<b>port-less-1024</b>	Enable the defense source port less 1024 attack function.
<b>ping-death</b>	Enable the defense ping of death attack function.
<b>tiny-frag</b>	Enable the defense tcp tiny fragment attack function.

**Default** Defense land, blat, null-scan, xmascan, tcp-synfin, port-less-1024, ping-death, tiny-frag disabled.

**Command Mode** Global Configuration Mode.

**Command Default Level** Level: 15.

**Usage Guideline** Defense DoS attack types are listed as bellow:

#### Land attack

A Land attack is a DoS attack that consists of sending a special poison spoofed packet to a computer, causing it to lock up. A Land attack involves IP packets where the source and destination address are set to address the same device. The reason a Land attack works is because it causes the machine to reply to itself continuously.

**Detect method** - Check whether the source address is equal to destination address of a received IP packet.

#### Blat attack

A DoS attack in which the TCP/IP stack is flooded with SYN packets that have spoofed source port number that match the destination port number causes the machine to lock up.

**Detect method** - Check whether the source port is equal to destination port of a received TCP packet.

#### Null Scan

Hackers use the TCP NULL scan to identify listening TCP ports. This scan also uses a series of strangely configured TCP packets, which contain no flags. Again, this type of scan can get through some firewalls and boundary routers that filter on incoming TCP packets with standard flag settings. If the target device's TCP port is closed, the target device sends a TCP RST packet in reply. If the target device's TCP port is open, the target discards the TCP NULL scan, sending no reply.

**Detect method** - Check whether a received TCP packet contains a sequence number of 0 and no flags.

**Xmas Scan**

Hackers use the TCP Xmas scan to identify listening TCP ports. This scan uses a series of strangely configured TCP packets, which contain the Urgent (URG), Push (PSH), and FIN flags. Again, this type of scan can get through some firewalls and boundary routers that filter on incoming TCP packets with standard flag settings. If the target device's TCP port is closed, the target device sends a TCP RST packet in reply. If the target device's TCP port is open, the target discards the TCP Xmas scan, sending no reply.

**Detect method** - Check whether a received TCP packet contains URG, Push and FIN flags.

**SYNFIN**

To use this type of scan, an attacker first sends a Transmission Control Protocol (TCP) packet that have the Finish (FIN) and Synchronize (SYN) flags set. An open port will respond with Acknowledge (ACK) and SYN TCP packets, but a closed port will return the ACK and Reset (RST) flags set.

**Detect method** - Check whether a received TCP packet contains FIN and SYN flags.

**SYN with source port < 1024**

SYN packet with source port less than 1024; the Internet default services use L4 port between 1 and 1023. If the source port of a TCP packet with SYN flag is less than 1024, the packet should be abnormal.

**Detect method** - Check whether the packets source ports are less than 1024 packets.

**Ping of Death**

A ping of death is a type of attack on a computer that involves sending a malformed or otherwise malicious ping to a computer. A ping is normally 64 bytes in size; many computers cannot handle a ping larger than the maximum IP packet size, which is 65,535 bytes. Sending a ping of this size can crash the target computer. Traditionally, this bug has been relatively easy to exploit. Generally, sending a 65536 byte ping packet is illegal according to networking protocol, but a packet of such a size can be sent if it is fragmented; when the target computer reassembles the packet, a buffer overflow can occur, which often cause a system crash.

**Detect method** - Detect whether received packets are fragmented ICMP packets.

**TCP Tiny fragment attack**

Use the IP fragmentation to create extremely small fragments and force the TCP header information into a separate packet fragment to pass through the check function of the router and issue an attack.

**Detect method** - Check whether the packets are TCP tiny fragment packets.

**Example**

This example shows how to enable defense for all attack types.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#defense enable
```

```
Success
```

```
DXS-3600-32S(config)#
```

**Example**

This example shows how to enable defense land attack.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#defense land enable
```

```
Success
```

```
DXS-3600-32S(config)#
```

**Example** This example shows how to disable the defense land attack.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#no defense land enable

Success

DXS-3600-32S(config)#
```

## 18-2 show defense

This command is used to display attack defense information.

### show-defense

<b>Parameters</b>	None.
<b>Default</b>	All information is displayed
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 3
<b>Usage Guideline</b>	This command is used to display attack defense information.

**Example** This example shows how to display attack defense information.

```
DXS-3600-32S#show defense

Function Version: 1.01
Defense Type           State      Action
-----
Land Attack            Disabled   Drop
Blat Attack            Disabled   Drop
TCP Null Scan          Disabled   Drop
TCP Xmas Scan          Disabled   Drop
TCP SYNFIN             Disabled   Drop
TCP SYN SrcPort Less 1024 Disabled   Drop
Ping of Death Attack   Disabled   Drop
TCP Tiny Fragment Attack Disabled   Drop

DXS-3600-32S#
```

Display Parameters	Description
<b>Defense Type</b>	Defense DoS attack types list.
<b>State</b>	Defense enabled or disabled.
<b>Action</b>	How the switches deal with an attack detected.



# Enhanced Transmission Selection (ETS) Commands

## 19-1 ets willing

This command is used to enable the Enhanced Transmission Selection (ETS) willing mode for the Data Center Bridging eXchange Protocol (DCBX) on a specified interface. Use the **no** form of this command to disable willing mode.

```
ets willing
no ets willing
```

<b>Parameters</b>	None.
<b>Default</b>	Disabled.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 15.
<b>Usage Guideline</b>	<p>The command is available for physical port configuration. Use this command to enable the willing mode for ETS configuration when running DCBX, which indicates that the interface is willing to accept configurations from a remote switch.</p> <p>The Data Center Bridging eXchange Protocol (DCBX) is used by DCB devices to exchange configuration information with directly connected peers. The protocol may also be used for misconfiguration detection and for the configuration of the peer.</p> <p>The Willing mode indicates that the local port has been administratively configured to accept a configuration from the remote device. You need enable the Switch to transmit LLDP DCBX ETS-Configuration TLVs to advertise the ETS settings and negotiated with the peer to take the ETS willing (on) into effect.</p> <p>You can use the <b>mls qos scheduler ets interface mode</b> command to configure the scheduling mode to ETS and use the <b>ets-queue bandwidth interface mode</b> command to assign bandwidth for every traffic classes.</p>

**Example** This example shows how to enable the ETS willing feature on interface tenGigabitEthernet 1/0/1.

```
DXS-3600-32S#configure terminal
DXS-3600-16S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)# ets willing
DXS-3600-32S(config-if)#
```

## 19-2 ets recommend

This command is used to configure the ETS Recommendation feature on a specified interface. This setting will be translated to a DCBX ETS-Recommendation TLV. The TLV is encoded into each LLDP message and may be transmitted by a system in order to indicate a recommendation on how ETS should be configured. Use the **no** form of this command to revert to default setting.

```
ets recommend {bandwidth WEIGHT0 WEIGHT1 WEIGHT2 WEIGHT3 WEIGHT4 WEIGHT5 WEIGHT6
WEIGHT7 | cos-map COS-QUEUE COS-VALUE [, | -]}
no ets recommend [bandwidth | cos-map]
```

### Parameters

<b>bandwidth</b> <i>WEIGHT0-7</i>	Specifies the recommended bandwidth for Traffic Classes 0 to 7. It is required to specify 8 values for Traffic Classes 0 to 7 respectively. The sum of the bandwidth assigned to a given port is required at all times to be equal to 100. An operation that attempts to change the bandwidth will be rejected. The valid range is 0 to 100 (in percentage). The value of zero stands for strict priority mode.
-----------------------------------	---

---

<b>cos-map</b> <i>COS-QUEUE</i> <i>COS-VALUE</i> [,   -]	Specifies the recommended Priority Assignment Table. <i>COS-QUEUE</i> : Specifies the queue ID (Traffic Class) for the specified priority. The value is from 0 to N. The N is the number of traffic classes supported per port. <i>COS-VALUE</i> : Specifies the priority to be mapped. The value is from 0 to 7. You can specify multiple priorities queued into the specified traffic class.
---	--

---

<b>Default</b>	The recommended bandwidth is 4, 7, 11, 14, 18, 21, 25 (in percentage) for Traffic Classes 0 to 6 respectively. 0 for Traffic Class 7 means the recommended transmission selection algorithm is “strict priority”. The default priority (CoS) to Traffic Class mapping is: <ul style="list-style-type: none"> <li>• 0 -&gt; 1</li> <li>• 1 -&gt; 0</li> <li>• 2 -&gt; 2</li> <li>• 3 -&gt; 3</li> <li>• 4 -&gt; 4</li> <li>• 5 -&gt; 5</li> <li>• 6 -&gt; 6</li> <li>• 7 -&gt; 7</li> </ul>
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 15.
<b>Usage Guideline</b>	This command is available for physical port configuration. Use this command to specify the recommended bandwidth (in percent) for each Traffic Class. The value of zero means using “strict priority” for the corresponding Traffic Class. You need to enable the Switch to transmit LLDP DCBX ETS-Recommendation TLVs to advertise the ETS recommendation.  If the command <b>no ets recommend</b> is issued without any keywords, all ETS recommendation settings (bandwidth and priority assignments) will be reverted to their default values.

**Example** This example shows how to configure the recommended transmission selection algorithm for Traffic Class 0 to 4 as ETS (Enhanced Transmission Selection) and the allocated bandwidth is 10%, 10%, 20%, 20%, 40% respectively. For Traffic Classes 5 to 7 the recommended transmission selection algorithm is strict priority.

```
DXS-3600-32S#configure terminal
DXS-3600-16S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)# ets recommend bandwidth 10 10 20 20 40 0 0 0
DXS-3600-32S(config-if)#
```

**Example** This example shows how to configure the recommended Priority Assignment Table, to assign priority 1-2 to Traffic Class 2 at interface 1/0/1.

```
DXS-3600-32S#configure terminal
DXS-3600-16S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)# ets recommend cos-map 2 1-2
DXS-3600-32S(config-if)#
```

---

## 19-3 show ets interface

This command is used to display the ETS information of a given interface or all interfaces.

**show ets interface** [*INTERFACE-ID* [, | -]] [**recommend**]

### Parameters

---

<i>INTERFACE-ID</i>	(Optional) Specifies that valid interfaces are physical interface.
,	(Optional) Specifies a series of interfaces, or separate a range of interfaces from a previous range. No space before and after the comma.

---

-	(Optional) Specifies a range of interfaces. No space before and after the hyphen.
<b>recommend</b>	(Optional) Specifies to display the ETS recommendation information of a given interface or all interfaces.

**Default** None.

**Command Mode** EXEC Mode.

**Command Default Level** Level: 3.

**Usage Guideline** This command displays the ETS settings and status on the specified interface(s). If you do not specify an interface, the **show ets interface** command will display the ETS information for all available interfaces. You can use the keyword **recommend** to display recommendation information for the specified interfaces.

**Example** This example shows how to display the ETS information on interface 1/0/1.

```
DXS-3600-32S#show ets interface tenGigabitEthernet 1/0/1
```

```
Interface Id:      TenGigabitEthernet 1/0/1
ETS Willing:      off
Max Traffic Classes: 8
```

Admin Traffic Class Setting:

```
CoSMapped CoSs    Scheduler  Bandwidth
Queue ID          (Priorities)  Type      Percentage
```

```
-----
00,1,2,3,4,5,6,7  ETS      30
1                  ETS      70
2                  Strict   0
3                  Strict   0
4                  Strict   0
5                  Strict   0
6                  Strict   0
7                  Strict   0
```

Operational Traffic Class Setting:

```
CoS  Mapped CoSs    Scheduler  Bandwidth
Queue ID  (Priorities )  Type      Percentage
```

```
-----
00,1,2,3,4,5,6,7  ETS      30
1                  ETS      70
2                  Strict   0
3                  Strict   0
4                  Strict   0
5                  Strict   0
6                  Strict   0
7                  Strict   0
```

!---Output truncated.

```
DXS-3600-32S#
```

Display Parameters	Description
<b>Max Traffic Classes</b>	The maximum number of Traffic Classes that the switch can support.
<b>CoS Queue ID</b>	The index of traffic class.

**Example**

This example shows how to display recommendation information for interface 1/1/1.

```
DXS-3600-32S#show ets interface gigabitEthernet 1/1/1 recommend
```

```
Interface Id: gigabitEthernet 1/1/1
```

```
Recommended TC Setting:
```

CoS Mapped CoSs	Scheduler	Bandwidth
Queue ID (Priorities)	Type	Percentage
0	ETS	30
1	ETS	70
2	Strict	0
3	Strict	0
4	Strict	0
5	Strict	0
6	Strict	0
7	Strict	0

```
DXS-3600-32S#
```

# File System Commands

## 20-1 dir

This command is used to show the files in the current directory.

**dir** *directory*

### Parameters

---

<i>directory</i>	(Optional) Specifies the path of the directory to show, defaulted to the contents in the current directory.
------------------	---

---

<b>Default</b>	By default, only the information under the current path is shown.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 2
<b>Usage Guideline</b>	Enter the specified directory to show the information of all the files in that directory. If no parameter is specified, the information of the files in the current directory is shown by default.

**Example** This example shows how to show the information of all files in the current directory.

```
DXS-3600-32S#dir
Directory of flash:

 1 -rw- 107389  2000/02/11 21:53:18 config.cfg
 2 -rw- 107455  2000/02/12 01:53:01 y
 3 -rw- 5081096 2000/02/12 01:54:02 runtime.had
 4 d-- 0       2000/02/13 00:04:13 system
126002 KB total (120731 KB free)

DXS-3600-32S#
```

## 20-2 ls

This command is used to show the files in the current directory.

**ls** *directory*

### Parameters

---

<i>directory</i>	(Optional) Specifies the path of the directory to show, defaulted to the contents in the current directory.
------------------	---

---

<b>Default</b>	By default, only the information under the current path is shown.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 2
<b>Usage Guideline</b>	Enter the specified directory to show the information of all the files in that directory. If no parameter is specified, the information of the files in the current directory is shown by default.

**Example**

This example shows how to show the information of all files in the current directory.

```
DXS-3600-32S#ls
Directory of flash:

 1 -rw- 107389   2000/02/11 21:53:18 config.cfg
 2 -rw- 107455   2000/02/12 01:53:01 y
 3 -rw- 5081096 2000/02/12 01:54:02 runtime.had
 4 d-- 0        2000/02/13 00:04:13 system
126002 KB total (120731 KB free)

DXS-3600-32S#
```

**20-3 cp**

This command is used to copy a file to the specified file or directory.

```
cp dest {destine_file | directory} sour source_file
cp sour source_file dest {destine_file | directory}
```

**Parameters**

<i>directory</i>	Specifies the destination file or directory.
<i>destine_file</i>	Specifies the destination file.
<i>source_file</i>	Specifies the name of the file to copy (including the path).

**Default**

None.

**Command Mode**

Privileged EXEC Mode.

**Command Default Level**

Level: 2

**Usage Guideline**

Copy the specified file to a new file or a directory. If the file already exists, the system will prompt whether to overwrite to cancel the operation.

**Example**

This example shows how to copy the runtime.had in the directory 'tmp' with name runtime.had.

```
DXS-3600-32S#cp sour runtime.had dest tmp/runtime.had
DXS-3600-32S#
```

**20-4 cd**

This command is used to enter the specified directory.

```
cd directory
```

**Parameters**

<i>directory</i>	(Optional) Specifies the path of the directory.
------------------	---

**Default**

None.

**Command Mode**

Privileged EXEC Mode.

**Command Default Level**

Level: 2

**Usage Guideline** Change the parameter to the directory you want to enter. Use the “..” to represent the up-level directory and the “.” to represent the current-level directory. Others can be determined according to the current location. This command supports relative directories and absolute directories. After entering the specified directory, you can verify it by using the ls command described above.

**Example** This example shows how to enter the ‘tmp’ sub-directory of the current directory.

```
DXS-3600-32S#cd tmp
DXS-3600-32S#
```

## 20-5 rename

This command is used to rename a specific file.

```
rename old_filename new_filename
```

### Parameters

<i>old_filename</i>	Specifies the old file name.
<i>new_filename</i>	Specifies the new file name.

**Default** None.

**Command Mode** Privileged EXEC Mode.

**Command Default Level** Level: 3

**Usage Guideline** Rename the specified file to a new file name.

**Example** This example shows how to rename the runtime.had to the name of tmp.had in current directory.

```
DXS-3600-32S#rename runtime.had tmp.had
DXS-3600-32S#
```

## 20-6 mkdir

This command is used to create a directory.

```
mkdir directory
```

### Parameters

<i>directory</i>	Specifies the name of the directory to be created.
------------------	--

**Default** None.

**Command Mode** Privileged EXEC Mode.

**Command Default Level** Level: 3

**Usage Guideline** Simply enter the name of directory you want to create (including the path). If the path contains any directory that does not exist, the creation will fail.

**Example** This example shows how to create the tmp directory at the current directory.

```
DXS-3600-32S#mkdir tmp
DXS-3600-32S#
```

## 20-7 rmdir

This command is used to delete an empty directory.

```
rmdir directory
```

### Parameters

<i>directory</i>	Specifies the name of directory to be deleted, which must be empty.
------------------	---

<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 3
<b>Usage Guideline</b>	The directory to be deleted must be empty. Since this command supports abbreviations, you can also use the rm command to delete empty directories

**Example** This example shows how to delete the tmp directory in current directory and the directory does not contain any files.

```
DXS-3600-32S#rmdir tmp
Removed dir tmp
DXS-3600-32S#
```

## 20-8 rm

This command is used to delete the specified file.

```
rm filename
```

### Parameters

<i>filename</i>	Specifies the name of file to be deleted (including the path).
-----------------	--

<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 3
<b>Usage Guideline</b>	This command does not support the wildcard and the deletion across file systems and across partitions. In additions, if a hard connection or symbol connection is deleted, the contents of the file are not affected. If the file is boot up image or backup image the operation of this command will be fail.  This command is the same as the <b>del</b> command.

**Example** This example shows how to delete the tmp.txt file.

```
DXS-3600-32S#rm tmp.txt
DXS-3600-32S#
```

## 20-9 del

This command is used to delete the specified file.

```
del filename
```



**Parameters**


---

<i>filename</i>	Specifies the name of file to be deleted (including the path).
-----------------	--

---

<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 3
<b>Usage Guideline</b>	This command does not support the wildcard and the deletion across file systems and across partitions. In additions, if a hard connection or symbol connection is deleted, the contents of the file are not affected. If the file is boot up image or backup image, the operation will be fail.

**Example** This example shows how to delete the tmp.txt file.

```
DXS-3600-32S#del tmp.txt
DXS-3600-32S#
```

**20-10 makefs**

This command is used to format the device that the file system is to be loaded or the device that is to be managed by the file system.

```
makefs dev devname fs fsname
makefs fs fsname dev devname
```

**Parameters**


---

<i>devname</i>	Specifies the name of the device to be formatted (including the path).
<i>fsname</i>	Specifies the name of the file system to be used on the device.

---

<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 3
<b>Usage Guideline</b>	This command is usually used in the following two cases: <ul style="list-style-type: none"> <li>A. The device has never used in this file system. In order to normally use the file system on the device, you need to format the device the first time you use it.</li> <li>B. After system has been used for a period of time, if you want to delete all the files on the device, you can use this command to clear all data on the device.</li> </ul>

**Example** The FAT is the file system to be used, and the sd0 is the device to be managed by the file system.

```
DXS-3600-32S#makefs dev sd0: fs fat
DXS-3600-32S#
```

**20-11 pwd**

This command is used to show the working path.

```
pwd
```

<b>Parameters</b>	None.
<b>Default</b>	None.

**Command Mode** Privileged EXEC Mode.  
**Command Default Level** Level: 3  
**Usage Guideline** This command shows the current working path.

**Example** This example shows how to show the current working path.

```
DXS-3600-32S#pwd  
flash:  
DXS-3600-32S#
```

# Filter Database (FDB) Commands

## 21-1 mac-address-table aging-time

This command is used to set the length of time that a dynamic entry remains in the MAC address table. Use the no form of the command to set the time to default.

```
mac-address-table aging-time SECONDS
no mac-address-table aging-time
```

### Parameters

<i>SECONDS</i>	Specifies the aging time in seconds. The valid range is 0 or 10 to 1000000 seconds. 0 means that the aging function is disabled.
----------------	--

<b>Default</b>	The default is 300 seconds.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	Set the aging-time to 0 to disable the MAC address table aging out function.

**Example** This example shows how to set the aging time to 200 seconds.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#mac-address-table aging-time 200
DXS-3600-32S(config)#
```

## 21-2 clear mac-address-table

This command is used to delete a specific dynamic, filtering or static MAC address, all dynamic or static MAC addresses on a particular interface, all dynamic, filtering or static MAC addresses on a particular VLAN or all dynamic, filtering or static MAC addresses from the MAC address table.

```
clear mac-address-table dynamic [address MAC-ADDR | interface INTERFACE-ID | vlan VLAN-ID]
clear mac-address-table filtering [address MAC-ADDR | vlan VLAN-ID]
clear mac-address-table static [address MAC-ADDR | interface INTERFACE-ID | vlan VLAN-ID]
```

### Parameters

<b>dynamic</b>	Deletes the specified dynamic MAC address.
<b>filtering</b>	Deletes the specified filtering MAC address.
<b>static</b>	Deletes the specified static MAC address.
<b>address MAC-ADDR</b>	Specifies the MAC address.
<b>interface INTERFACE-ID</b>	Specifies the interface that the MAC address will be deleted from. The specified interface can be a physical port or a port-channel
<b>vlan VLAN-ID</b>	Specifies the VLAN ID. The valid values are from 1 to 4094.

<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	The <b>clear mac address-table</b> command only clears dynamic, filtering or static MAC address entries.

**Example** This example shows how to remove all dynamic MAC address from the MAC address table.

```
DXS-3600-32S#clear mac address-table dynamic
DXS-3600-32S#
```

**Example** This example shows how to remove the MAC address "00:08:00:70:00:07" from the dynamic MAC address table.

```
DXS-3600-32S#clear mac address-table dynamic address 00:08:00:70:00:07
DXS-3600-32S#
```

**Example** This example shows how to remove the MAC address learned on Port 2 from the dynamic MAC address table.

```
DXS-3600-32S#clear mac address-table dynamic interface tenGigabitEthernet 1/0/2
DXS-3600-32S#
```

**Example** This example shows how to remove the MAC address learned in VLAN 10 from the dynamic MAC address table.

```
DXS-3600-32S#clear mac address-table dynamic vlan 10
DXS-3600-32S#
```

**Example** This example shows how to remove the MAC address learned on Port 2 and in VLAN 10 from the dynamic MAC address table.

```
DXS-3600-32S#clear mac address-table dynamic interface tenGigabitEthernet 1/0/2 vlan 10
DXS-3600-32S#
```

**Example** This example shows how to remove the MAC address "00:09:00:70:00:07" from the static MAC address table.

```
DXS-3600-32S#clear mac address-table static address 00:09:00:70:00:07
DXS-3600-32S#
```

**Example** This example shows how to remove the MAC address "00:10:00:70:00:07" from the filtering MAC address table.

```
DXS-3600-32S#clear mac address-table filtering address 00:10:00:70:00:07
DXS-3600-32S#
```

### 21-3 mac-address-table static

This command is used to add a static address to the MAC address table. Use the no form of the command to remove a static MAC address entry from the table.

```
mac-address-table static MAC-ADD vlan VLAN-ID interface INTERFACE-ID
no mac-address-table static MAC-ADD vlan VLAN-ID [interface INTERFACE-ID]
```

#### Parameters

<b>MAC-ADDR</b>	Specifies the destination MAC address (unicast or multicast) to add to the address table. Packets with this destination address that are received by the specified VLAN are forwarded to the specified interface. The acceptable formats are 00-01-80-40-30-20, 00:01:80:40:30:20, 000180403020, and 0001.8040.3020.
<b>vlan</b> VLAN-ID	Specifies the VLAN that the packet with the specified MAC address will be received by. The range is 1 to 4094.
<b>interface</b> INTERFACE-ID	Specifies the interface that the received packet will be forwarded to.

<b>Default</b>	None.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	<p>An error message “The specified interface does not exist.” will appear if the specified interface does not exist.</p> <p>An error message “The specified VLAN does not exist.” will be displayed if the specified VLAN does not exist.</p> <p>For a unicast MAC address entry, only one interface can be specified. For a multicast MAC address entry, multiple interfaces can be specified.</p> <p>To delete a unicast MAC address entry, there is no need to specify the interface ID. To delete a multicast MAC address entry, if an interface-ID is specified, only this interface will be removed. Otherwise, the entire multicast MAC entry will be removed.</p> <p>An error message “The specified entry does not exist.” will be displayed if the user tries to remove an entry that does not exist.</p>

**Example** This example shows how to add the static address 00:00:22:0A:12:F4 to the MAC address table. The user also specifies that when any packet received on VLAN 4 that has a destination MAC address of “00:00:22:0A:12:F4” will be forwarded to tenGigabitEthernet 1/0/1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#mac-address-table static 00:00:22:0A:12:F4 vlan 4 interface
tenGigabitEthernet 1/0/1
DXS-3600-32S(config)#
```

**Example** This example shows how to add the static address 01:00:22:0A:12:F4 to the MAC address table. The user also specifies that when any packet received on VLAN 2 that has a destination MAC address of “01:00:22:0A:12:F4” will be forwarded to Ethernet interface 2 and 3.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#mac-address-table static 01:00:22:0A:12:F4 vlan 4 interface
tenGigabitEthernet 1/0/2
DXS-3600-32S(config)#mac-address-table static 01:00:22:0A:12:F4 vlan 4 interface
tenGigabitEthernet 1/0/3
DXS-3600-32S(config)#
```

## 21-4 mac-address-table filtering

This command is used to add a filtering address to the MAC address table. Use the no form of the command to remove a filtering MAC address entry from the table.

**mac-address-table filtering** *MAC-ADD* **vlan** *VLAN-ID*  
**no mac-address-table filtering** *MAC-ADD* **vlan** *VLAN-ID*

### Parameters

<i>MAC-ADDR</i>	Specifies the unicast source or destination MAC address to add to the address table. Packets which source or destination address is the address received by the specified VLAN will be dropped. The acceptable formats are 00-01-80-40-30-20, 00:01:80:40:30:20, 000180403020, and 0001.8040.3020.
<b>vlan</b> <i>VLAN-ID</i>	Specifies the VLAN that the packet with the specified MAC address will be received by. The range is 1 to 4094.

<b>Default</b>	None.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	<p>Only a unicast MAC address can be specified for the entry.</p> <p>An error message “The specified VLAN does not exist.” will be displayed if the specified VLAN does not exist.</p> <p>An error message “The specified entry does not exist.” will be displayed if the user tries to remove an entry that does not exist.</p>
<b>Example</b>	This example shows how to add the filtering address 00:00:00:0A:12:EE to the MAC address table. The user also specifies that when any packet received on VLAN 4 that has a destination MAC address of “00:00:00:0A:12:EE” will be dropped.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#mac-address-table filtering 00:00:00:0A:12:EE vlan 4
DXS-3600-32S(config)#
```

## 21-5 mac-address-table notification

This command is used to enable and configure the MAC address notification function. Use the no form of the command to disable the function or set the optional configuration to default.

**mac-address-table notification [interval SECONDS | history-size VALUE]**  
**no mac-address-table notification [interval | history-size]**

### Parameters

<b>interval SECONDS</b>	Specifies the interval of sending the MAC address trap message, the default is 1 second.
<b>history-size VALUE</b>	Specifies the maximum number of the entries in the MAC address notification table, The range is 0 to 500; the default is 50 entries.

<b>Default</b>	MAC address notification is disabled, the interval is 1 second, and history-size is 50 entries.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	Whenever the switch learns or removes a MAC address, an SNMP notification can be generated and sent to the SNMP server. The MAC notification history table stores the MAC address learned or delete for each hardware port for which the trap is enabled.

**Example** This example shows how to enable MAC address notification, and set interval to 10 seconds, history-size to 500 entries.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#mac-address-table notification
DXS-3600-32S(config)#mac-address-table notification interval 10
DXS-3600-32S(config)#mac-address-table notification history-size 500
DXS-3600-32S(config)#
```

## 21-6 snmp trap mac-notification

This command is used to enable the MAC address notification function on interface. Use the no form of the command to disable the function.

```
snmp trap mac-notification {added | removed}
no snmp trap mac-notification {added | removed}
```

### Parameters

<b>added</b>	Specifies to enable the MAC notification trap when a MAC address is added on the interface.
<b>removed</b>	Specifies to enable the MAC notification trap when a MAC address is removed from the interface.

<b>Default</b>	By default, this option is disabled.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	Used to configure the switch's MAC address table notification on interface.
<b>Example</b>	This example shows how to enable MAC address notification on Ethernet interface 2.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/2
DXS-3600-32S(config-if)#snmp trap mac-notification added removed
DXS-3600-32S(config-if)#
```

## 21-7 show mac-address-table aging-time

This command is used to display the aging time.

```
show mac-address-table aging-time
```

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	EXEC Mode.
<b>Command Default Level</b>	Level: 1
<b>Usage Guideline</b>	None.

**Example** This example shows how to display the aging time.

```
DXS-3600-32S#show mac-address-table aging-time

Aging Time : 200 seconds.

DXS-3600-32S#
```

## 21-8 show mac-address-table notification

This command is used to display the MAC address notification configuration.

```
show mac-address-table notification [interface INTERFACE-ID | history]
```

## Parameters

<b>interface</b> <i>INTERFACE-ID</i>	(Optional) Specifies to show MAC address notification configuration on the interface.
<b>history</b>	(Optional) Specifies to show the MAC address notification history.

<b>Default</b>	None.
<b>Command Mode</b>	EXEC Mode.
<b>Command Default Level</b>	Level: 1
<b>Usage Guideline</b>	None.

**Example** This example shows how to display the MAC address notification configuration and status.

```
DXS-3600-32S#show mac-address-table notification interface
```

Interface	Added Trap	Removed Trap
tenGigabitEthernet 1/0/1	Disabled	Disabled
tenGigabitEthernet 1/0/2	Disabled	Disabled
tenGigabitEthernet 1/0/3	Disabled	Disabled
tenGigabitEthernet 1/0/4	Disabled	Disabled
tenGigabitEthernet 1/0/5	Disabled	Disabled
tenGigabitEthernet 1/0/6	Disabled	Disabled
tenGigabitEthernet 1/0/7	Disabled	Disabled
tenGigabitEthernet 1/0/8	Disabled	Disabled
tenGigabitEthernet 1/0/9	Disabled	Disabled
tenGigabitEthernet 1/0/10	Disabled	Disabled
tenGigabitEthernet 1/0/11	Disabled	Disabled
tenGigabitEthernet 1/0/12	Disabled	Disabled
tenGigabitEthernet 1/0/13	Disabled	Disabled
tenGigabitEthernet 1/0/14	Disabled	Disabled
tenGigabitEthernet 1/0/15	Disabled	Disabled
tenGigabitEthernet 1/0/16	Disabled	Disabled
tenGigabitEthernet 1/0/17	Disabled	Disabled
tenGigabitEthernet 1/0/18	Disabled	Disabled
tenGigabitEthernet 1/0/19	Disabled	Disabled
tenGigabitEthernet 1/0/20	Disabled	Disabled
tenGigabitEthernet 1/0/21	Disabled	Disabled
tenGigabitEthernet 1/0/22	Disabled	Disabled
tenGigabitEthernet 1/0/23	Disabled	Disabled
tenGigabitEthernet 1/0/24	Disabled	Disabled

```
DXS-3600-32S#show mac-address-table notification history
```

```
History Index: 0
MAC Changed Message:
Operation:ADD Vlan: 1 MAC Addr: 00f8.d012.3456 tenGigabitEthernet 1/0/3
```

```
DXS-3600-32S#
```

## 21-9 show mac-address-table

This command is used to display a specific MAC address entry or the MAC address entries for a specific interface or VLAN.

```
show mac-address-table count
show mac-address-table [dynamic | static] [address MAC-ADDR | interface INTERFACE-ID | vlan VLAN-ID]
show mac-address-table filtering [address MAC-ADDR | vlan VLAN-ID]
```



**Parameters**

<b>dynamic</b>	(Optional) Displays dynamic MAC address entries only.
<b>static</b>	(Optional) Displays user creates static MAC address entries and L3 interface MAC address entries only.
<b>filtering</b>	(Optional) Displays user creates filtering MAC address entries only.
<b>address</b> <i>MAC-ADDR</i>	(Optional) Specifies the 48-bit MAC address.
<b>interface</b> <i>INTERFACE-ID</i>	(Optional) Displays information for a specific interface.
<b>vlan</b> <i>VLAN-ID</i>	(Optional) Specifies the VLAN ID. The valid values are from 1 to 4094.
<b>count</b>	Displays statistic information of MAC address table.

<b>Default</b>	None.
<b>Command Mode</b>	EXEC Mode.
<b>Command Default Level</b>	Level: 1
<b>Usage Guideline</b>	None.

**Example** This example shows how to display all the MAC address table entries.

```
DXS-3600-32S#show mac-address-table
```

```

VLAN  MAC Address      Type      Interface      Protocol
----  -
1      00-00-00-EE-00-01  Dynamic   tenGigabitEthernet 1/0/8         -
1      00-00-CD-FE-00-05  Static    tenGigabitEthernet 1/0/1         -
1      00-03-40-11-22-33  Dynamic   tenGigabitEthernet 1/0/2         -
1      00-03-40-11-22-EA  Static    tenGigabitEthernet 1/0/2         WAC
1      00-0D-A2-02-FE-07  Static    tenGigabitEthernet 1/0/6         802.1X
1      00-0D-A2-02-FE-7A  Static    tenGigabitEthernet 1/0/6         802.1X
1      5C-02-4B-28-C4-82  Self      CPU             -
1      5C-D9-98-C9-C0-0F  Static    tenGigabitEthernet 1/0/1         JWAC
1      5C-D9-98-C9-C0-93  Static    tenGigabitEthernet 1/0/1         -
3      00-02-4B-28-C4-82  Static    tenGigabitEthernet 1/0/6         -
3      00-02-4B-28-C4-CD  Static    tenGigabitEthernet 1/0/6         Port Security
6      00-01-00-02-00-10  Drop      -               -
6      00-01-00-02-00-2E  Drop      tenGigabitEthernet 1/0/13        MAC-based Access Control
100    00-00-CD-EF-00-04  Static    tenGigabitEthernet 1/0/4         -
100    00-00-CD-EF-00-BD  Static    tenGigabitEthernet 1/0/4         MAC-based Access Control
1024   00-21-91-53-D6-5C  Static    tenGigabitEthernet 1/0/10        -
1024   00-21-91-53-D6-8E  Static    tenGigabitEthernet 1/0/10        Compound Authentication
1      01-00-00-00-DD-DD  Static    tenGigabitEthernet 1/0/1-1/0/7,1/0/19

Total Entries: 18

DXS-3600-32S#

```

**Example** This example shows how to display all the MAC address table entries for the MAC address "00-02-4b-28-c4-82".

```
DXS-3600-32S#show mac-address-table address 00:02:4B:28:C4:82
```

```

VLAN  MAC Address      Type      Interface      Protocol
----  -
3      00-02-4B-28-C4-82  Static    tenGigabitEthernet 1/0/6         -

Total Entries: 1

DXS-3600-32S#

```

**Example** This example shows how to display all the static MAC address table entries.

```
DXS-3600-32S#show mac-address-table static
```

VLAN	MAC Address	Type	Interface	Protocol
1	00-00-CD-FE-00-05	Static	tenGigabitEthernet 1/0/1	-
1	5C-02-4B-28-C4-82	Self	CPU	-
1	5C-D9-98-C9-C0-93	Static	tenGigabitEthernet 1/0/1	-
3	00-02-4B-28-C4-82	Static	tenGigabitEthernet 1/0/6	-
100	00-00-CD-EF-00-04	Static	tenGigabitEthernet 1/0/4	-
1024	0-21-91-53-D6-5C	Static	tenGigabitEthernet 1/0/10	-
1	01-00-00-00-DD-DD	Static	tenGigabitEthernet 1/0/1-1/0/7,1/0/19	-

```
Total Entries: 7
```

```
DXS-3600-32S#
```

**Example** This example shows how to display all the filter MAC address table entries.

```
DXS-3600-32S#show mac-address-table filtering
```

VLAN	MAC Address	Type	Interface	Protocol
1	00-00-00-0A-12-EE	Drop	-	-

```
Total Entries: 1
```

```
DXS-3600-32S#
```

**Example** This example shows how to display all the MAC address table entries for VLAN 1.

```
DXS-3600-32S#show mac-address-table vlan 1
```

VLAN	MAC Address	Type	Interface	Protocol
1	00-00-00-EE-00-01	Dynamic	tenGigabitEthernet 1/0/8	-
1	00-00-CD-FE-00-05	Static	tenGigabitEthernet 1/0/1	-
1	00-03-40-11-22-33	Dynamic	tenGigabitEthernet 1/0/2	-
1	00-0D-A2-02-FE-07	Static	tenGigabitEthernet 1/0/6	802.1X
1	5C-02-4B-28-C4-82	Self	CPU	-
1	5C-D9-98-C9-C0-93	Static	tenGigabitEthernet 1/0/1	-
1	01-00-00-00-DD-DD	Static	tenGigabitEthernet 1/0/1-1/0/7,1/0/19	-

```
Total Entries: 7
```

```
DXS-3600-32S#
```

**Example** This example shows the statistic information of MAC address table.

```
DXS-3600-32S#show mac-address-table count
```

```
Dynamic Address Count      : 2
Static Address Count       : 7
Filter Address Count       : 1
Total MAC Addresses        : 18
Total MAC Addresses Space Available: 131070
```

```
DXS-3600-32S#
```

# GARP VLAN Registration Protocol (GVRP) Commands

## 22-1 clear gvrp statistics interface

This command is used to clear the statistics for a GVRP port.

```
clear gvrp statistics [interface INTERFACE-ID [, | -]]
```

### Parameters

<i>INTERFACE-ID</i>	(Optional) Specifies the interface to clear. If no interface is specified the statistics on all interfaces will be cleared.
,	(Optional) Specifies a series of interfaces, or separate a range of interfaces from a previous range.
-	(Optional) Specifies a range of interfaces.

<b>Default</b>	None.
<b>Command Mode</b>	Privilege EXEC Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	This command clears the GVRP counters. If the <i>INTERFACE-ID</i> is not specified, then all GVRP counters will be cleared.

**Example** This example shows how to clear statistics on all interfaces.

```
DXS-3600-32S#clear gvrp statistics
DXS-3600-32S#
```

## 22-2 gvrp (Global)

This command is used to enable the GVRP function globally, and use the no gvrp command to disable the GVRP function globally.

```
gvrp
no gvrp
```

<b>Parameters</b>	None.
<b>Default</b>	By default, this option is disabled.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	The user should enable the global GVRP state and individual port's GVRP state and start GVRP on the port. Once the GVRP is enabled globally, the GVRP PDU will be captured to CPU to process. Otherwise, the GVRP will be forwarded in the port-based VLAN of the reception port.

**Example** This example shows how to enable the GVRP protocol global state.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#gvrp
DXS-3600-32S(config)#
```

## 22-3 gvrp (Interface)

This command is used to enable the GVRP function on a port, and use the no gvrp command to disable the GVRP function on a port.

**gvrp**  
**no gvrp**

<b>Parameters</b>	None.
<b>Default</b>	By default, this option is disabled.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	You can use the GVRP interface configuration command to enable/disable the GVRP protocol state.

This command can be configured on physical ports or link aggregation groups. The GVRP function cannot be enabled when the interface is operating in access mode or Dot1Q-tunnel mode, meaning that the GVRP function can only be enabled when the port is operating in trunk or hybrid mode.

**Example** This example shows how to enable the GVRP function on Ethernet port 1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#gvrp
DXS-3600-32S(config-if)#
```

## 22-4 gvrp advertise (Interface)

This command is used to specify that a VLAN should be advertised by the GVRP protocol. Use the `no gvrp advertise interface` configuration command to disable this function.

**gvrp advertise** {all | VLAN-ID [,|-]}  
**no gvrp advertise** { all | VLAN-ID [,|-]}

### Parameters

<i>VLAN-ID</i> [, -]	Specifies a VLAN. The range is 1 to 4094. You can specify a single VLAN-ID, a range of VLANs separated by a hyphen, or a series of VLANs separated by comma.
all	Specifies all VLANs.

<b>Default</b>	All VLANs are able to be advertised.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	This command can be configured on physical ports or link aggregation groups.  You can use the <code>gvrp advertise</code> interface configuration command to enable the specified VLANs' GVRP advertise function on the specified interface. If a VLAN is not in the interface's advertise-able VLAN set, the interface will never advertise the VLAN through GVRP message. If all is specified, all VLANs are advertise-able on this interface.  This command setting only takes effect when GVRP is enabled.

**Example** This example shows how to enable the advertise function of VLAN 1-1000 on interface Ethernet port 1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#gvrp advertise 1-1000
DXS-3600-32S(config-if)#
```

## 22-5 gvrp dynamic-vlan-creation

This command is used to enable dynamic VLAN creation, and use the no command to disable the dynamic VLAN creation function.

```
gvrp dynamic-vlan-creation
no gvrp dynamic-vlan-creation
```

<b>Parameters</b>	None.
<b>Default</b>	By default, this option is disabled.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	When dynamic VLAN creation is enabled, if a port has learned a new VLAN membership and the VLAN does not exist, the VLAN will be created automatically. Otherwise, the newly learned VLAN will not be created.

**Example** This example shows how to enable dynamic VLAN creation with the GVRP protocol.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#gvrp
DXS-3600-32S(config)#gvrp dynamic-vlan-creation
DXS-3600-32S(config)#
```

## 22-6 forbidden vlan

This command is used to specify a port as being a forbidden member of the specified VLAN. Use the no forbidden vlan command to remove the port as a forbidden member of the specified VLAN.

```
forbidden vlan VLAN-ID [,|-]
no forbidden vlan [VLAN-ID [,|-]]
```

### Parameters

<i>VLAN-ID</i>	Specifies the VLAN ID used. The range is 2 to 4094. You can specify a single VLAN-ID, a range of VLANs separated by a hyphen, or a series of VLANs separated by comma. If no VLAN ID specified for the no command, all forbidden VLANs will be removed.
----------------	---

<b>Default</b>	None.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	<p>This command can be configured on physical ports or link aggregation groups.</p> <p>As a forbidden port of a VLAN, a port is forbidden from becoming a member port of the VLAN.</p> <p>If the port is the VLAN member, setting a VLAN as its forbidden VLAN will lead to the port is removed from the VLAN. The VLAN specified by the command does not need to exist.</p> <p>For the no command, if no VLAN is specified, then all forbidden VLANs will be removed. If a VLAN is the port's allowed VLAN, removing the forbidden VLAN will lead to the port re-added into the VLAN automatically.</p>

**Example** This example shows how to set Ethernet port 1 as a forbidden port of VLAN 1000.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#forbidden vlan 1000
DXS-3600-32S(config-if)#
```

## 22-7 gvrp timer

This command is used to set the GVRP timer value on a port.

```
gvrp timer [join TIMER-VALUE | leave TIMER-VALUE | leave-all TIMER-VALUE]
```

### Parameters

<b>join</b>	Specifies to set the timer for joining a group. The unit is in centiseconds.
<b>leave</b>	Specifies to set the timer for leaving a group. The unit is in centiseconds.
<b>leave-all</b>	Specifies to set the timer for leaving all groups. The unit is in centiseconds.
<i>TIMER-VALUE</i>	Specifies the timer value used here. This value must be between 1 and 65535. The timer value in centiseconds.

**Default** Join: 20  
Leave: 60  
Leave-all: 1000

**Command Mode** Interface Configuration Mode.

**Command Default Level** Level: 12

**Usage Guideline** The value of these parameters must comply with the following rules:

1. LEAVE\_TIMER >= 3 \* JOIN\_TIMER
2. LEAVE\_ALL\_TIMER > LEAVE\_TIMER

**Example** This example shows how to set the leave-all timer to 500 centiseconds on Ethernet port 3.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#gvrp timer leave-all 500
DXS-3600-32S(config-if)#
```

## 22-8 show gvrp

This command is used to display the GVRP settings.

```
show gvrp [interface [INTERFACE-ID [,|-]]]
```

### Parameters

<b>interface</b>	Displays the GVRP settings of the interface.
<i>INTERFACE-ID</i>	(Optional) Specifies the interface to display.
,	(Optional) Specifies a series of interfaces, or separate a range of interfaces from a previous range.
-	(Optional) Specifies a range of interfaces.

**Default** None.

**Command Mode** EXEC Mode.  
**Command Default Level** Level: 3  
**Usage Guideline** This command only displays GVRP related configurations.

**Example** This example shows how to display the GVRP configuration for all interfaces.

```
DXS-3600-32S#show gvrp
```

```
Global GVRP State      : Enabled
Dynamic VLAN Creation  : Enabled
```

```
DXS-3600-32S#
```

**Example** This example shows how to display the GVRP configuration on Ethernet ports 1-2.

```
DXS-3600-32S#show gvrp interface tenGigabitEthernet 1/0/1-1/0/2
```

```
TGi1
GVRP Status      : Disabled
Join Time        : 20 centiseconds
Leave Time        : 60 centiseconds
Leave-All Time    : 500 centiseconds
Advertise VLAN   : 1-4094
```

```
TGi2
GVRP Status      : Disabled
Join Time        : 20 centiseconds
Leave Time        : 60 centiseconds
Leave-All Time    : 1000 centiseconds
Advertise VLAN   : 1-4094
```

```
DXS-3600-32S#
```

## 22-9 show gvrp statistics

This command is used to display the statistics for a GVRP port.

```
show gvrp statistics [interface INTERFACE-ID [, | -]]
```

### Parameters

<i>INTERFACE-ID</i>	(Optional) Specifies the interface to display. If no interface is specified, the statistics on all interfaces will be shown.
,	(Optional) Specifies a series of interfaces, or separate a range of interfaces from a previous range.
-	(Optional) Specifies a range of interfaces.

**Default** None.  
**Command Mode** EXEC Mode.  
**Command Default Level** Level: 3  
**Usage Guideline** This command only displays the ports which have the GVRP state enabled.

**Example**

This example shows how to display statistics for GVRP ports 1-2.

```
DXS-3600-32S#show gvrp statistics interface tenGigabitEthernet 1/0/1-1/0/2
```

Interface	JoinEmpty	JoinIn	LeaveEmpty	LeaveIn	LeaveAll	Empty
TGi1/0/1	RX 0	0	0	0	0	0
	TX 0	0	0	0	0	0
TGi1/0/2	RX 0	0	0	0	0	0
	TX 0	0	0	0	0	0

```
DXS-3600-32S#
```



# Internet Group Management Protocol (IGMP) Commands

## 23-1 clear ip igmp group

This command is used to clear dynamic group member information obtained from the response messages in the IGMP buffer.

```
clear ip igmp group [group-address | interface ifname]
```

### Parameters

<i>group-address</i>	Specifies the address of the multicast group. This is a multicast IP address in four-part dotted-decimal notation.
<i>ifname</i>	Specifies the interface name.

**Default** None.

**Command Mode** Global Configuration Mode.

**Command Default Level** Level: 8. (EI Mode Only Command)

**Usage Guideline** The IGMP buffer includes a list that contains the dynamic multicast groups that the hosts in the direct subnet join. If the device joins a group, this group will be included in this list. To delete all the dynamic group entries from the IGMP buffer, use the **clear ip igmp group** command without parameters.

**Example** This example shows how to clear all entries from the IGMP cache.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#clear ip igmp group
DXS-3600-32S(config)#
```

**Example** This example shows how to clear entries for the multicast group 224.0.255.1 from the IGMP cache.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#clear ip igmp group 224.0.255.1
DXS-3600-32S(config)#
```

**Example** This example shows how to clear the IGMP-group cache entries from a specific interface of the IGMP-group cache.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#clear ip igmp group interface vlan2
DXS-3600-32S(config)#
```

## 23-2 ip igmp static-group

This command is used to directly add an interface to a group. You can use this command to add an interface to a group. Use the **no** form of this command to remove the setting.

```
ip igmp static-group group-address
no ip igmp static-group group-address
```

### Parameters

<i>group-address</i>	Specifies the address of the multicast group. This is a multicast IP address in four-part dotted-decimal notation.
----------------------	--

<b>Default</b>	The switch is not added to the multicast group manually.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	This command directly adds an interface to a multicast group. You can use this command to add an interface to a group.  Use command <b>show ip igmp groups static</b> command, to verify your setting.

**Example** This example shows how to add a host group member manually.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface vlan 1
DXS-3600-32S(config-if)#ip igmp static-group 233.3.3.3
DXS-3600-32S(config-if)#
```

### 23-3 ip igmp last-member-query-interval

This command is used to configure the interval at which the switch sends IGMP group-specific or group-source-specific (with IGMP Version 3) query messages, use the **ip igmp last-member-query-interval** command in interface configuration mode. To set this interval to the default value, use the **no** form of this command.

```
ip igmp last-member-query-interval seconds
no ip igmp last-member-query-interval
```

#### Parameters

<b>seconds</b>	Specifies the interval sending the group query message in the range 1 to 25, in seconds.
----------------	--

<b>Default</b>	1 second.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	When a device receives an IGMP Version 2 (IGMPv2) or IGMP Version 3 (IGMPv3) message indicating that a host wants to leave a group, source, or channel, it sends last-member-query-count(equal to robustness-variable) group, group-specific, or source-specific IGMP query messages at intervals set by the ip igmp last-member-query-interval command. If no response is received after this period, the device stops forwarding for the group, source, or channel.  Use command <b>show ip igmp interface</b> command to verify your setting.

**Example** This example shows how to set the interval of sending the IGMP group-specific or group-source-specific query message to 20 seconds on interface VLAN 1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface vlan 1
DXS-3600-32S(config-if)#ip igmp last-member-query-interval 20
DXS-3600-32S(config-if)#
```

### 23-4 ip igmp query-interval

This command is used to configure the query interval of an ordinary member. Use the **no** form to set the query interval of ordinary member to the default value.

```
ip igmp query-interval seconds
```

**no ip igmp query-interval****Parameters**

<i>seconds</i>	Specifies the query interval of ordinary member, in second. The range is 1 to 31744 seconds.
----------------	--

**Default** 125 seconds.

**Command Mode** Interface Configuration Mode.

**Command Default Level** Level: 8. (EI Mode Only Command)

**Usage Guideline** The time to query an ordinary member can be changed by configuring the query interval of the ordinary member.

Use the **show ip igmp interface** command to verify your setting.

**Example** This example shows how to configure the query interval of ordinary member to 120 seconds on the interface VLAN 1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface vlan 1
DXS-3600-32S(config-if)#ip igmp query-interval 120
DXS-3600-32S(config-if)#
```

**23-5 ip igmp query-max-response-time**

This command is used to configure the maximum response interval. Use the **no** form of this command to set the maximum response interval to the default value.

**ip igmp query-max-response-time** *seconds*  
**no ip igmp query-max-response-time**

**Parameters**

<i>seconds</i>	Specifies the maximum response interval, in second. The range is 1 to 25 seconds.
----------------	---

**Default** 10 seconds.

**Command Mode** Interface Configuration Mode.

**Command Default Level** Level: 8. (EI Mode Only Command)

**Usage Guideline** This command controls the interval for the respondent to respond the query message before the device deletes the group information.

Use the **show ip igmp interface** command to verify your setting.

**Example** This example shows how to configure the maximum response interval to 20 seconds on the interface VLAN 1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface vlan 1
DXS-3600-32S(config-if)#ip igmp query-max-response-time 20
DXS-3600-32S(config-if)#
```

**23-6 ip igmp robustness-variable**

This command is used to change the value of the robustness variable. Use the **no** form of this command to restore it to the default value.

**ip igmp robustness-variable** *number*  
**no ip igmp robustness-variable**

### Parameters

<i>number</i>	Specifies the value of robustness variable, ranging 1 to 7.
---------------	---

**Default** The default value is 2.

**Command Mode** Interface Configuration Mode.

**Command Default Level** Level: 8. (EI Mode Only Command)

**Usage Guideline** The Robustness Variable allows tuning for the expected packet loss on a network. If a network is expected to be lossy, the Robustness Variable may be increased. IGMP is robust to (Robustness Variable - 1) packet losses.

Use the **show ip igmp interface** command to verify your setting.

**Example** This example shows how to set the value of robustness variable to 3 on the interface VLAN 1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface vlan 1
DXS-3600-32S(config-if)#ip igmp robustness-variable 3
DXS-3600-32S(config-if)#
```

## 23-7 ip igmp version

This command is used to set the version number of IGMP to be used on the interface. Use the **no** form of this command to restore it to the default value.

**ip igmp version** {1 | 2 | 3}  
**no ip igmp version**

### Parameters

{1   2   3}	Specifies three version numbers, ranging 1 to 3.
-------------	--

**Default** The default value is 3.

**Command Mode** Interface Configuration Mode.

**Command Default Level** Level: 8. (EI Mode Only Command)

**Usage Guideline** Use this command to globally configure the IGMP version. We recommend that all devices on the subnet support the same IGMP version.

Use the **show ip igmp interface** command to verify your setting.

**Example** This example shows how to set the version number to 2 on the interface VLAN 1:

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface vlan 1
DXS-3600-32S(config-if)#ip igmp version 2
DXS-3600-32S(config-if)#
```

## 23-8 ip igmp check-subscriber-source-network

This command is used to configure the flag that determines whether or not to check the subscriber's source IP when an IGMP report or leave message is received. Use the **no** form of this command to disable the check.

```
ip igmp check-subscriber-source-network
no ip igmp check-subscriber-source-network
```

<b>Parameters</b>	None.
<b>Default</b>	The switch will check the subscriber source network.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 8. (EI Mode Only Command)
<b>Usage Guideline</b>	<p>When the <b>ip igmp check-subscriber-source-network</b> command is enabled on an interface, any IGMP report or leave messages received by the interface will be checked to determine whether its source IP is in the same network as the interface. If it's not in the same network for a received report or leave message, the message won't be processed by the IGMP protocol. If the check is disabled, the IGMP report or leave message with any source IP will be processed by the IGMP protocol.</p> <p>Use the <b>show ip igmp interface</b> command to verify your setting.</p>

**Example** This example shows how to disable the subscriber source network check on the interface VLAN 1:

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface vlan 1
DXS-3600-32S(config-if)#no ip igmp check-subscriber-source-network
DXS-3600-32S(config-if)#
```

## 23-9 show ip igmp interface

This command is used to show the information on the interface.

```
show ip igmp interface [ifname]
```

### Parameters

<i>ifname</i>	Specifies the interface name.
---------------	-------------------------------

<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 3. (EI Mode Only Command)
<b>Usage Guideline</b>	This command displays the IGMP configurations and some dynamic information on the switch or on a specified IP interface.

**Example**

This example shows the information of all the interfaces.

```
DXS-3600-32S#show ip igmp interface

Interface vlan1
Internet Address is 10.90.90.90/8
IGMP is disabled on interface
Current IGMP router version is 2
IGMP query interval is 120 seconds
IGMP querier timeout is 0 seconds
IGMP max query response time is 20 seconds
Robustness variable is 3
Last member query interval is 20 seconds
IGMP check subscriber source network state is disabled
IGMP snooping is globally disabled
IGMP snooping is disabled on this interface
IGMP snooping fast-leave is disabled on this interface
IGMP snooping querier is disabled on this interface

Total Entries: 1

DXS-3600-32S#
```

Display Parameters	Description
<b>Internet address is</b>	Internet address of the interface and subnet mask being applied to the interface, as specified with the <code>ip address</code> command.
<b>IGMP is disabled on interface</b>	Indicates whether IGMP is active on the interface. The IGMP state will be automatically enabled when any multicast routing protocol (PIM or DVMRP) turns active, and be disabled if no any multicast routing protocol is active on the interface.
<b>Current IGMP router version is</b>	The IGMP running version on the interface, as specified with the <code>ip igmp version</code> command.
<b>IGMP query interval is</b>	Interval of the IGMP query message, as specified with the <code>ip igmp query-interval</code> command.
<b>IGMP querier timeout is</b>	The querier role expiring time. If this timer is running, there's other IGMP querier on this LAN.
<b>IGMP max query response time is</b>	Indicates the maximum allowed time before the host sending a responding report, as specified with the <code>ip igmp query-max-response-time</code> command.
<b>Robustness variable is</b>	Indicates the robustness value, as specified with the <code>ip igmp robustness-variable</code> command.
<b>Last member query interval is</b>	Indicates the interval of the switch sending last member query, as specified with the <code>ip igmp last-member-query-interval</code> command.
<b>IGMP check subscriber source network state is</b>	Indicates IGMP will check whether the source IP of the received report/leave is in the same subnet with the receiving interface, as specified with the <code>ip igmp check-subscriber-source-network</code> command.
<b>IGMP snooping is globally</b>	Indicates the IGMP snooping global state, as specified with the <code>ip igmp snooping</code> command.
<b>IGMP snooping is</b>	Indicates the IGMP snooping interface state, as specified with the <code>ip igmp snooping vlan</code> command.
<b>IGMP snooping fast-leave is</b>	Indicates the IGMP snooping fast-leave state, as specified with the <code>ip igmp snooping fast-leave</code> command.
<b>IGMP snooping querier is</b>	Indicates the IGMP snooping querier state is disabled, as specified with the <code>ip igmp snooping querier</code> command.

**23-10 show ip igmp groups**

This command is used to show the groups directly connected to the device and the group information learnt from IGMP.

```
show ip igmp groups [group group-address | interface ifname] [{detail | static}]
```

## Parameters

<i>group-address</i>	Specifies the address of the multicast group. This is a multicast IP address in four-part dotted-decimal notation.
<i>ifname</i>	Specifies the interface name.
<b>static</b>	Shows the static group information, as specified with the ip igmp static-group command.
<b>detail</b>	Shows the detailed information.

**Default** None.

**Command Mode** Privileged EXEC Mode.

**Command Default Level** Level: 3. (EI Mode Only Command)

**Usage Guideline** Use this command without any parameters to show group address, interface type, and information about all the multicast groups directly connected to the interface. Information about a specific group is displayed if a group address is added to the command.

**Example** This example shows information about all the groups.

```
DXS-3600-32S#show ip igmp groups
```

```
Interface      Multicast Group  Uptime          Group timer     Last Reporter
-----
vlan1          228.0.0.1        00:00:17        00:04:18        10.1.4.25
vlan1          228.0.0.2        00:00:16        00:04:19        10.1.4.25
vlan1          228.0.0.3        00:00:16        00:04:19        10.1.4.25
vlan1          228.0.0.4        00:00:15        00:04:15        10.1.4.25
vlan1          228.0.0.5        00:00:15        00:04:15        10.1.4.25
vlan1          228.0.0.6        00:00:14        00:04:16        10.1.4.25
vlan1          228.0.0.7        00:00:14        00:04:16        10.1.4.25
vlan1          228.0.0.8        00:00:13        00:04:17        10.1.4.25
vlan1          228.0.0.9        00:00:13        00:04:17        10.1.4.25
vlan1          228.0.0.10       00:00:12        00:04:18        10.1.4.25
vlan1          239.255.255.250 00:00:05        00:04:15        10.0.0.24
```

```
Total Entries: 11
```

```
DXS-3600-32S#
```

**Example**

This example shows detailed group information on a specific interface:.

```
DXS-3600-32S#show ip igmp groups interface vlan1 detail
```

**IGMP Group Detail Information**

```
Interface      : vlan1
Multicast Group : 224.1.1.1
Last Reporter  : 10.0.31.1
IP Querier     : SELF
Up Time        : 00:00:19
Group Timer    : 00:00:00
Group Mode     : Include
V1 Host Timer  : 0
V2 Host Timer  : 0
```

**Source List Table:**

Source list	Timer(sec)
162.1.18.1	260
162.1.18.2	260
162.1.18.3	260
162.1.18.4	260

Total Source Entries: 4

```
Interface      : vlan1
Multicast Group : 228.0.0.2
Last Reporter  : 10.1.4.25
IP Querier     : SELF
Up Time        : 00:02:46
Group Timer    : 00:03:34
Group Mode     : Exclude
V1 Host Timer  : 0
V2 Host Timer  : 214 seconds
```

**Source List Table:**

NULL

Total Entries: 2

```
DXS-3600-32S#
```



**Example** This example shows detailed information of a specific group.

```
DXS-3600-32S#show ip igmp groups group 224.1.1.1 detail
```

#### IGMP Group Detail Information

```
Interface      : vlan1
Multicast Group : 224.1.1.1
Last Reporter  : 10.0.31.1
IP Querier     : SELF
Up Time        : 00:00:19
Group Timer    : 00:00:00
Group Mode     : Include
V1 Host Timer  : 0
V2 Host Timer  : 0
```

#### Source List Table:

Source list	Timer(sec)
162.1.18.1	260
162.1.18.2	260
162.1.18.3	260
162.1.18.4	260

Total Source Entries: 4

Total Entries: 1

```
DXS-3600-32S#
```

**Example** This example shows the static group information.

```
DXS-3600-32S#show ip igmp groups static
```

```
Interface      Multicast Group
-----
vlan1          233.3.3.3
```

Total Entries: 1

```
DXS-3600-32S#
```

Display Parameters	Description
<b>Last Reporter</b>	Specify the IP address of the host who sent the last IGMP report to this group.
<b>IP Querier</b>	Specify the querier's IP address on this LAN. SELF indicates this switch itself is the querier.
<b>Up time</b>	Time of the multicast group being learned.
<b>Group timer</b>	Time of the multicast group will be expired if no any more refresh.
<b>V1 Host Timer</b>	In seconds. The non-zero V1 Host Timer means the switch is running in Group Compatibility mode of IGMPv1 for the group. The IGMPv1 Host Present timer is set to Older Version Host Present Timeout seconds whenever an IGMPv1 Membership Report is received.
<b>V2 Host Timer</b>	In seconds. The non-zero V2 Host Timer means the switch is running in Group Compatibility mode of IGMPv2 for the group. The IGMPv2 Host Present timer is set to Older Version Host Present Timeout seconds whenever an IGMPv2 Membership Report is received.
<b>Source List Table</b>	Specify the source addresses' info of the multicast group in IGMPV3 reports.

# IGMP Snooping Commands

## 24-1 ip igmp snooping

This command is used to enable the IGMP Snooping state. Use the **no** form of this command to disable the IGMP Snooping state.

```
ip igmp snooping
no ip igmp snooping
```

<b>Parameters</b>	None.
<b>Default</b>	Disabled on global switch and each VLAN interface.
<b>Command Mode</b>	Global Configuration Mode and Interface Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	In the global configuration mode, you can enable or disable the IGMP Snooping global state, and in the interface configuration mode, you can enable or disable the IGMP Snooping interface state. For a VLAN to operate with IGMP Snooping, both the global state and per interface state must be enabled.

You can verify your configuration through command **show ip igmp snooping**.

**Example** This example shows how to enable the IGMP Snooping global state.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip igmp snooping
DXS-3600-32S(config)#
```

**Example** This example shows how to disable the IGMP Snooping state on interface VLAN 1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#vlan 1
DXS-3600-32S(config-vlan)#no ip igmp snooping
DXS-3600-32S(config-vlan)#
```

## 24-2 ip igmp snooping fast-leave

This command is used to enable IGMP Snooping fast leave function. Use the **no** form of this command to disable this function.

```
ip igmp snooping fast-leave
no ip igmp snooping fast-leave
```

<b>Parameters</b>	None.
<b>Default</b>	By default, this option is disabled.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	IGMP Snooping fast-leave processing allows removing a member interface from the membership entry without sending out IGMP group-specific queries, so that make the leaving more quickly. Upon receiving a group-specific IGMPv2 leave message or IGMPv3 TO_INCLUDE(NULL), if the host is the last member of group on the interface, IGMP Snooping immediately removes the interface from the membership table entry for that multicast group.

To verify your configuration, use **show ip igmp snooping**.

**Example** This example shows how to enable the IGMP Snooping fast leave function.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#vlan 1
DXS-3600-32S(config-vlan)#ip igmp snooping fast-leave
DXS-3600-32S(config-vlan)#
```

**Example** This example shows how to disable IGMP Snooping fast leave.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#vlan 1
DXS-3600-32S(config-vlan)#no ip igmp snooping fast-leave
DXS-3600-32S(config-vlan)#
```

## 24-3 ip igmp snooping mrouter

This command is used to configure the specified interface(s) as the multicast router interface(s) or as forbidden to be multicast router interface(s) on the switch. Use the **no** form of this command to remove the interface(s) from multicast router interface(s) or forbidden multicast router ports.

```
ip igmp snooping mrouter [forbidden] {interface INTERFACE-TYPE INTERFACE-ID [, | -] | port-channel
GROUP-ID}
no ip igmp snooping mrouter [forbidden] {interface INTERFACE-TYPE INTERFACE-ID [, | -] | port-channel
GROUP-ID}
```

### Parameters

<b>forbidden</b>	Specifies an interface that cannot be multicast router interface.
<i>INTERFACE-TYPE</i>	Specifies the interface type. Possible valid value is tenGigabitEthernet.
<i>INTERFACE-ID</i>	Specifies the port number.
,	Specifies a series of ports, or separate a range of ports from a previous range. No space before and after the comma.
-	Specifies a range of ports. No space before and after the hyphen.
<i>GROUP-ID</i>	Specifies the port-channel number.

**Default** None.

**Command Mode** Interface Configuration Mode.

**Command Default Level** Level: 8

**Usage Guideline** This command specifies the interfaces to be static multicast router interfaces or to be forbidden router interfaces.

To verify your configuration, use **show ip igmp snooping mrouter**.

**Example** This example shows how to configure interface 1 to be static multicast router interface on VLAN 1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#vlan 1
DXS-3600-32S(config-vlan)#ip igmp snooping mrouter interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-vlan)#
```

**Example** This example shows how to configure port-channel 5 as the static multicast router interface on VLAN 1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#vlan 1
DXS-3600-32S(config-vlan)#ip igmp snooping mrouter port-channel 5
DXS-3600-32S(config-vlan)#
```

**Example** This example shows how to delete port-channel 1 from the static multicast router interface in VLAN 1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#vlan 1
DXS-3600-32S(config-vlan)#no ip igmp snooping mrouter port-channel 1
DXS-3600-32S(config-vlan)#
```

**Example** This example shows how to configure port-channel 1 as forbidden multicast router interface in VLAN 1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#vlan 1
DXS-3600-32S(config-vlan)#ip igmp snooping mrouter forbidden port-channel 1
DXS-3600-32S(config-vlan)#
```

## 24-4 ip igmp snooping dyn-mr-aging-time

This command is used to configure the aging out time for dynamic multicast router interface. To restore the default value, use the **no** form of this command.

```
ip igmp snooping dyn-mr-aging-time SECONDS
no ip igmp snooping dyn-mr-aging-time
```

### Parameters

<i>SECONDS</i>	Specifies the aging out time for dynamic router port, in second. The range is 10 to 65535.
----------------	--

**Default** 300 seconds.

**Command Mode** Global Configuration Mode.

**Command Default Level** Level: 8

**Usage Guideline** When you enable IGMP Snooping, the switch will consider an interface connected to a multicast router when receiving multicast packets which are PIM control messages, DVMRP control messages or IGMP query messages with non-zero source IP on that interface. This command is used to configure the aging out time of these dynamically learned router interfaces.

To verify your configuration, use command **show ip igmp snooping**.

**Example** This example shows how to configure the aging out time of those dynamically learned router interface to 100 seconds.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip igmp snooping dyn-mr-aging-time 100
DXS-3600-32S(config)#
```

**Example** This example shows how to restore the default value of dynamic router interface aging out time.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#no ip igmp snooping dyn-mr-aging-time
DXS-3600-32S(config)#
```

## 24-5 ip igmp snooping querier

This command is used to enable the IGMP Snooping querier state. To disable the querier state, use the **no** form of this command.

**ip igmp snooping querier**  
**no ip igmp snooping querier**

<b>Parameters</b>	None.
<b>Default</b>	By default, this option is disabled.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	This command is used to enable the IGMP Snooping querier state. Note that if IGMP is enabled, IGMP Snooping querier will be automatically disabled on the interface.  To verify your configuration, you can use <b>show ip igmp snooping querier</b> .

**Example** This example shows how to enable IGMP Snooping querier state on VLAN 1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#vlan 1
DXS-3600-32S(config-vlan)#ip igmp snooping querier
DXS-3600-32S(config-vlan)#
```

**Example** This example shows how to disable IGMP Snooping querier state on VLAN 1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#vlan 1
DXS-3600-32S(config-vlan)#no ip igmp snooping querier
DXS-3600-32S(config-vlan)#
```

## 24-6 ip igmp snooping static-group

This command is used to directly add an interface list or a port-group to a multicast group. Use the **no** form of this command to remove the setting.

**ip igmp snooping static-group** *GROUP-ADDRESS* {**interface** *INTERFACE-TYPE* *INTERFACE-ID* [, | -] | **group-channel** *GROUP-ID*}

**no ip igmp snooping static-group** *GROUP-ADDRESS* {**interface** *INTERFACE-TYPE* *INTERFACE-ID* [, | -] | **group-channel** *GROUP-ID*}

### Parameters

<i>GROUP-ADDRESS</i>	Specifies the address of the multicast group. This is a multicast IP address in four-part dotted-decimal notation.
<i>INTERFACE-TYPE</i>	Specifies the interface type. The only possible valid value is tenGigabitEthernet.
<i>INTERFACE-ID</i>	Specifies the port number.
,	Specifies a series of ports, or separate a range of ports from a previous range. No space before and after the comma.
-	Specifies a range of ports. No space before and after the hyphen.
<i>GROUP-ID</i>	Specifies the port-channel number.

<b>Default</b>	No any static group is configured.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 8

**Usage Guideline**

This command allows users to create an IGMP Snooping static group and add static members to this group. A member interface configured in a static group will be processed as the IGMP Snooping ever receiving IGMP group subscribing message on it. Any traffic destined to the static group in the VLAN will be forwarded to all dynamic learned and static configured member ports. Only one difference from dynamic group member, a static group member won't be aged out, and it can only be manually removed.

To verify you configuration, use command **show ip igmp snooping static-group**.

**Example**

This example shows how to configure interface 2-4 to be static member interfaces for group 235.0.0.0 in VLAN 1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#vlan 1
DXS-3600-32S(config-vlan)#ip igmp snooping static-group 235.0.0.0 interface tenGigabitEthernet
1/0/2-1/0/4
DXS-3600-32S(config-vlan)#
```

**Example**

This example shows how to delete interface 2 from group 235.0.0.0 in VLAN 1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#vlan 1
DXS-3600-32S(config-vlan)#no ip igmp snooping static-group 235.0.0.0 interface
tenGigabitEthernet 1/0/2
DXS-3600-32S(config-vlan)#
```

**24-7 ip igmp snooping max-response-time**

This command is used to configure the max response time in IGMP Snooping. To restore the default value, use the **no** form of this command.

```
ip igmp snooping max-response-time SECONDS
no ip igmp snooping max-response-time
```

**Parameters**

<i>SECONDS</i>	Specifies the maximum time in seconds of waiting for reports from members. The range is 1 to 25 seconds.
----------------	--

**Default**

10 seconds.

**Command Mode**

Interface Configuration Mode.

**Command Default Level**

Level: 8

**Usage Guideline**

The max response time is used to calculate the Max Resp Code inserted into the periodic general queries. By varying the time, an administrator may tune the burstiness of IGMP messages on the network; larger values make the traffic less bursty, as host responses are spread out over a larger interval. The number of seconds represented by the max response time must be less than the Query Interval.

To verify your configuration, you can use **show ip igmp snooping**.

**Example**

This example shows how to configure IGMP Snooping querier max response time to be 11 seconds on VLAN 1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#vlan 1
DXS-3600-32S(config-vlan)#ip igmp snooping max-response-time 11
DXS-3600-32S(config-vlan)#
```

**Example** This example shows how to restore the default value of IGMP Snooping max response time on VLAN 1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#vlan 1
DXS-3600-32S(config-vlan)#no ip igmp snooping max-response-time
DXS-3600-32S(config-vlan)#
```

## 24-8 ip igmp snooping query-interval

This command is used to configure the interval between general queries sent by IGMP Snooping querier. To restore the default value, use the **no** form of this command.

```
ip igmp snooping query-interval SECONDS
no ip igmp snooping query-interval
```

### Parameters

<i>SECONDS</i>	Specifies the amount of time in seconds between general query transmissions. The range is 1 to 31744 seconds.
----------------	---

**Default** 125 seconds.

**Command Mode** Interface Configuration Mode.

**Command Default Level** Level: 8

**Usage Guideline** The query interval is the interval between General Queries sent by the Querier. By varying the query interval, an administrator may tune the number of IGMP messages on the network; larger values cause IGMP Queries to be sent less often.

To verify your configuration, you can use **show ip igmp snooping**.

**Example** This example shows how to configure the IGMP Snooping query interval to be 60 seconds on VLAN 1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#vlan 1
DXS-3600-32S(config-vlan)#ip igmp snooping query-interval 60
DXS-3600-32S(config-vlan)#
```

**Example** This example shows how to restore the default value of IGMP Snooping query interval on VLAN 1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#vlan 1
DXS-3600-32S(config-vlan)#no ip igmp snooping query-interval
DXS-3600-32S(config-vlan)#
```

## 24-9 ip igmp snooping version

This command is used to configure the IGMP version in IGMP Snooping. To restore the default version, use the **no** form of this command.

```
ip igmp snooping version {1 | 2 | 3}
no ip igmp snooping version
```

### Parameters

{1   2   3}	Specifies the three version numbers, ranging 1 to 3.
-------------	--

<b>Default</b>	By default, this value is 3.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	IGMP Snooping can be configured to one of the three versions: v1, v2 and v3. When it is configured to v1, it means the IGMP Snooping will run in v1 compatibility mode. When it is configured to v2, it means the IGMP Snooping will run in v2 compatibility mode. Version 3 is just the IGMP Snooping running version.

In spite of the version configured on the switch, IGMP Snooping will process IGMPv1/v2/v3 report/leave packet as defined in RFC 3376 (IGMPv3). The difference behaves in different version is the IGMP general query transmitting and the querier electing when the querier state is enabled.

**General Query Transmit:**

- When configured to version 1, IGMP Snooping will only send IGMPv1 general query packet.
- When configured to version 2, IGMP Snooping will only send IGMPv2 general query packet.
- When configured to version 3, IGMP Snooping will only send IGMPv3 general query packet.

**Querier Elect:**

- When configured to version 1, IGMP Snooping will always act as querier, and will not initiate a new Querier electing no matter what the IGMP query packet it received.
- When configured to version 2 or version 3, IGMP Snooping will initiate a new querier electing if any IGMP v2 or v3 query packet is received. When receiving an IGMP v1 Query packet, IGMP Snooping won't initiate a new querier electing.

To verify your configuration, you can use **show ip igmp snooping**.

<b>Example</b>	This example shows how to configure the IGMP Snooping version to be 2 on VLAN 1.
----------------	--

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#vlan 1
DXS-3600-32S(config-vlan)#ip igmp snooping version 2
DXS-3600-32S(config-vlan)#
```

<b>Example</b>	This example shows how to restore the default version on VLAN 1.
----------------	--

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#vlan 1
DXS-3600-32S(config-vlan)#no ip igmp snooping version
DXS-3600-32S(config-vlan)#
```

## 24-10 clear ip igmp snooping statistics

This command is used to clear IGMP Snooping statistics counter on the switch.

**clear ip igmp snooping statistics**

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 8



**Usage Guideline** This command is used to clear IGMP Snooping statistics counter.

**Example** This example shows how to clear the IGMP Snooping statistics counter.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#clear ip igmp snooping statistics
DXS-3600-32S(config)#
```

## 24-11 show ip igmp snooping

This command is used to display the IGMP Snooping related configurations.

**show ip igmp snooping [vlan VLAN-ID]**

### Parameters

<i>VLAN-ID</i>	Specifies the VLAN ID. Display information on the specified VLAN. The range is 1 to 4094.
----------------	---

**Default** None.

**Command Mode** Privileged EXEC Mode.

**Command Default Level** Level: 3

**Usage Guideline** This command is used to display IGMP Snooping related configurations. If no parameter is specified, this command will display IGMP Snooping configurations on all VLANs.

**Example** This example shows how to display the IGMP Snooping configurations on all VLANs.

```
DXS-3600-32S#show ip igmp snooping

IGMP Snooping Global State      : Enabled
Dynamic Mrouter Aging Time     : 300 seconds

VLAN #1 Configuration
IGMP Snooping State            : Disabled
Fast Leave                     : Disabled
Querier State                  : Disabled
Version                        : V3
Query Interval                 : 125 seconds
Max Response Time              : 10 seconds

Total Entries: 1

DXS-3600-32S#
```

**Example** This example shows how to display the IGMP Snooping configurations on VLAN 1.

```
DXS-3600-32S#show ip igmp snooping vlan 1

IGMP Snooping State            : Disabled
Fast Leave                     : Disabled
Querier State                  : Disabled
Version                        : V3
Query Interval                 : 125 seconds
Max Response Time              : 10 seconds

DXS-3600-32S#
```

Display Parameters	Description
<b>IGMP Snooping Global State</b>	Specify IGMP Snooping global state. Use the <b>ip igmp snooping</b> command, in the global configuration mode, to configure this state.
<b>Dynamic Mrouter Aging Time</b>	Specify IGMP Snooping dynamically learned multicast router interface aging out time, as specified with command <b>ip igmp snooping dyn-mr-aging-time</b> .
<b>IGMP Snooping State</b>	Specify IGMP Snooping VLAN state, as specified with the <b>ip igmp snooping</b> command in interface configuration mode.
<b>Fast Leave</b>	Specify IGMP Snooping fast-leave state, as specified with the <b>ip igmp snooping fast-leave</b> command.
<b>Querier State</b>	Specify IGMP Snooping querier state, as specified with the <b>ip igmp snooping querier</b> command.
<b>Version</b>	Specify the IGMP Snooping version.
<b>Query Interval</b>	Specify the IGMP Snooping query interval which is configured by command <b>ip igmp snooping query-interval</b> .
<b>Max Response Time</b>	Indicates the max response time which is configured by command <b>ip igmp snooping max-response-time</b> .

## 24-12 show ip igmp snooping querier

This command is used to display IGMP Snooping querier electing information.

```
show ip igmp snooping querier [vlan VLAN-ID]
```

### Parameters

<i>VLAN-ID</i>	Specifies the VLAN ID. Display the specified VLAN information.
----------------	--

<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 3
<b>Usage Guideline</b>	Use this command to check the IGMP Snooping querier electing information. If no parameter is added, this command will display querier information on all VLANs.

**Example** This example shows how to display querier information for all VLANs.

```
DXS-3600-32S#show ip igmp snooping querier

VLAN #1
Querier Role       : Non-Querier
Querier IP         : 0.0.0.0
Querier Expiry Time : -

DXS-3600-32S#
```

**Example** This example shows how to display querier information for VLAN 1.

```
DXS-3600-32S#show ip igmp snooping querier vlan 1

VLAN #1
Querier Role       : Non-Querier
Querier IP         : 0.0.0.0
Querier Expiry Time : -

DXS-3600-32S#
```

Display Parameters	Description
Querier Role	The querier role of the querier electing. It can be Querier or Non-Querier. Querier means the local switch is selected as IGMP querier on the VLAN, and Non-Querier means the local switch is not selected as IGMP querier.
Querier IP	The querier's IP address on this VLAN.
Querier Expiry Time	The elected querier expiring time. "-" means the local switch is querier, and it won't be expired.

## 24-13 show ip igmp snooping groups

This command is used to display IGMP Snooping dynamic group information.

```
show ip igmp snooping groups [GROUP-ADDRESS | vlan VLAN-ID]
```

### Parameters

<i>GROUP-ADDRESS</i>	Specifies the group IP address you want to display. If no group address specified, all IGMP group information will be displayed.
<i>VLAN-ID</i>	Specifies the VLAN ID. Display the specified VLAN information.

<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 3
<b>Usage Guideline</b>	This command is used to display IGMP Snooping dynamically learned group information.

**Example** This example shows how to display the IGMP Snooping group information of all VLANs.

```
DXS-3600-32S#show ip igmp snooping groups
IGMP Snooping Connected Group Membership:
VLAN ID  Group address  Source address  FM  Exp(sec)  Interface
-----  -
1        232.0.0.1      192.168.1.11   IN  258       1/0/21
          232.0.0.1      192.168.1.11   EX  244       1/0/11
1        232.0.0.1      192.168.1.12   IN  258       1/0/21
          232.0.0.1      192.168.1.12   EX  244       1/0/11
1        232.0.0.1      *              EX  244       -
Total entries: 3
DXS-3600-32S#
```

**Example** This example shows IGMP Snooping group information on VLAN 1.

```
DXS-3600-32S#show ip igmp snooping groups vlan 1

IGMP Snooping Connected Group Membership:

VLAN ID  Group address      Source address      FM  Exp(sec)  Interface
-----  -
1         232.0.0.1           192.168.1.11      IN  257       1/0/21
1         232.0.0.1           192.168.1.12      IN  257       1/0/21

Total entries: 2

DXS-3600-32S#
```

**Example** This example shows IGMP Snooping group information for specific group 230.1.1.1.

```
DXS-3600-32S#show ip igmp snooping groups 230.1.1.1

IGMP Snooping Connected Group Membership:

VLAN ID  Group address      Source address      FM  Exp(sec)  Interface
-----  -
1         230.1.1.1          14.1.1.11         EX  258       1/0/1

Total entries: 1

DXS-3600-32S#
```

Display Parameters	Description
<b>VLAN ID</b>	Displays the VLAN ID.
<b>Group address</b>	Displays the Group IP address.
<b>FM</b>	Group filter mode. "EX" means exclude and "IN" means include.
<b>Source address</b>	Displays the Source IP address.
<b>Exp</b>	The expiring time of this group.
-	This group is auto created by protocol.
<b>Interface</b>	The physic interface or port-channel which learned this group.

## 24-14 show ip igmp snooping static-group

This command is used to display the statically configured IGMP groups.

```
show ip igmp snooping static-group [GROUP-ADDRESS | vlan VLAN-ID]
```

### Parameters

<i>GROUP-ADDRESS</i>	Specifies the group IP address you want to display. If no group address specified, all static IGMP group information will be displayed.
<i>VLAN-ID</i>	Specifies the VLAN ID. Display the specified VLAN information.

<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 3
<b>Usage Guideline</b>	This command is used to display IGMP snooping static group information. If no parameter is specified, this command will display IGMP snooping static group information on all VLANs.

**Example** This example shows how to display the IGMP snooping static group information of all VLANs.

```
DXS-3600-32S#show ip igmp snooping static-group
```

```
VLAN ID      Group address  Interface
-----
1            235.0.0.0     1/0/3-1/0/4
2            234.1.1.1     1/0/4
```

```
Total Entries : 2
```

```
DXS-3600-32S#
```

**Example** This example shows how to display the IGMP snooping static group information on VLAN 1.

```
DXS-3600-32S#show ip igmp snooping static-group vlan 1
```

```
VLAN ID  Group Address  Interface
-----
1        235.0.0.0     1/0/3-1/0/4
```

```
Total Entries: 1
```

```
DXS-3600-32S#
```

**Example** This example shows how to display the IGMP snooping static group information for specific group 235.0.0.0

```
DXS-3600-32S#show ip igmp snooping static-group 235.0.0.0
```

```
VLAN ID  Group Address  Interface
-----
1        235.0.0.0     1/0/3-1/0/4
```

```
Total Entries: 1
```

```
DXS-3600-32S#
```

### Display Parameters

### Description

<b>Group address</b>	Specify the group address.
<b>Port</b>	The member interfaces configured in the static group.

## 24-15 show ip igmp snooping mrouter

This command is used to display IGMP Snooping multicast router interface information.

```
show ip igmp snooping mrouter [vlan VLAN-ID]
```

### Parameters

<b>VLAN-ID</b>	Specifies the VLAN ID. Display the specified VLAN information.
----------------	--

**Default** None.

**Command Mode** Privileged EXEC Mode.

**Command Default Level** Level: 3

**Usage Guideline** This command is used to display IGMP Snooping multicast router interface information. If no parameter is specified, this command will display IGMP Snooping multicast router interface information on all VLANs.

**Example** This example shows how to display the IGMP Snooping multicast router interface information of all VLANs.

```
DXS-3600-32S#show ip igmp snooping mrouter
```

```
VLAN ID  Interface
-----
1        1/0/1 (static)
2        1/0/4 (static)
         1/0/9 (dynamic)
DXS-3600-32S#
```

**Example** This example shows how to display the IGMP Snooping multicast router interface information on VLAN 1.

```
DXS-3600-32S#show ip igmp snooping mrouter vlan 1
```

```
VLAN ID  Interface
-----
1        1/0/1 (static)
DXS-3600-32S#
```

Display Parameters	Description
<b>static</b>	Static mrouter interface information, which is configured by command <b>ip igmp snooping vlan mrouter</b> .
<b>forbidden</b>	Forbidden mrouter interface information, which is configured by command <b>ip igmp snooping vlan mrouter forbidden</b> .
<b>dynamic</b>	Dynamically learned mrouter interface information.

## 24-16 show ip igmp snooping forwarding-table

This command is used to display IGMP Snooping forwarding information.

```
show ip igmp snooping forwarding-table [vlan VLAN-ID]
```

### Parameters

<i>VLAN-ID</i>	Specifies the VLAN ID. Display the information on the specified VLAN. The range is 1 to 4094.
----------------	---

**Default** None.

**Command Mode** Privileged EXEC Mode.

**Command Default Level** Level: 3

**Usage Guideline** This command is used to display IGMP Snooping forwarding information. If no parameter is specified, this command will display IGMP Snooping forwarding information on all VLANs.

**Example** This example shows how to display all IGMP Snooping forwarding information on the switch.

```
DXS-3600-32S#show ip igmp snooping forwarding-table
```

```
(Group, Source)                Forwarding Interface
-----
VLAN #1
(225.0.0.3, 10.71.57.1)        1/0/3-1/0/10
(225.0.0.4, 10.71.57.1)        1/0/3, 1/0/8
(225.0.0.5, 10.71.57.1)        1/0/1, 1/0/7

VLAN #3
(226.0.0.1, 3.3.2.1)          1/0/3-1/0/10

Total Entries : 4

DXS-3600-32S#
```

**Example** This example shows how to display IGMP Snooping forwarding information on VLAN 1.

```
DXS-3600-32S#show ip igmp snooping forwarding-table vlan 1
```

```
(Group, Source)                Forwarding Interface
-----
(225.0.0.3, 10.71.57.1)        1/0/3-1/0/10
(225.0.0.4, 10.71.57.1)        1/0/3, 1/0/8
(225.0.0.5, 10.71.57.1)        1/0/1, 1/0/7

Total Entries : 3

DXS-3600-32S#
```

Display Parameters	Description
<b>Group</b>	Group IP address of the multicast stream.
<b>Source</b>	Source IP of the multicast stream.
<b>Forwarding Interface</b>	Forwarding outgoing interface of the multicast stream.

## 24-17 show ip igmp snooping statistics

This command is used to display IGMP Snooping statistics counter information.

```
show ip igmp snooping statistics [vlan VLAN-ID]
```

### Parameters

<i>VLAN-ID</i>	Specifies the VLAN ID. Display the specified VLAN information.
----------------	--

<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 3
<b>Usage Guideline</b>	This command is used to display IGMP Snooping statistics counter information. If no parameter is specified, this command will display IGMP Snooping statistics counter information on all VLANs.

**Example**

This example shows how to display IGMP Snooping statistics counter information on the whole switch, and it will only display the IGMP Snooping enabled VLAN interface.

```
DXS-3600-32S#show ip igmp snooping statistics

VLAN #1
-----
Group Number      : 2

Receive Statistics
  IGMP Query v1/v2/v3      : 0/29/76
  IGMP Report v1/v2/v3     : 0/65/0
  IGMP Leave                : 6

Transmit Statistics
  IGMP Query v1/v2/v3      : 0/38/76
  IGMP Report v1/v2/v3     : 0/0/0
  IGMP Leave                : 0

VLAN #2
-----
Group Number      : 1

Receive Statistics
  IGMP Query v1/v2/v3      : 0/0/2
  IGMP Report v1/v2/v3     : 0/0/6
  IGMP Leave                : 2

Transmit Statistics
  IGMP Query v1/v2/v3      : 0/0/6
  IGMP Report v1/v2/v3     : 0/0/0
  IGMP Leave                : 0

DXS-3600-32S#
```

**Example**

This example shows how to display IGMP Snooping statistics counter information on VLAN 1.

```
DXS-3600-32S#show ip igmp snooping statistics vlan 1

VLAN #1
-----
Group Number      : 1

Receive Statistics
  IGMP Query v1/v2/v3      : 0/29/76
  IGMP Report v1/v2/v3     : 0/65/0
  IGMP Leave                : 6

Transmit Statistics
  IGMP Query v1/v2/v3      : 0/38/76
  IGMP Report v1/v2/v3     : 0/0/0
  IGMP Leave                : 0

DXS-3600-32S#
```



# Interface Commands

## 25-1 interface out-band

This command is used to select the out-band interface, and enter the interface configuration mode.

```
interface out-band <int>
```

### Parameters

---

<i>int</i>	Specifies the out-band interface number.
------------	--

---

<b>Default</b>	None.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	Users can verify the settings by entering the <b>show interface out-band</b> command.

**Example** This example shows how to set the IP address 10.1.1.1/8 for out-band interface 1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface out-band 1
DXS-3600-32S(config-if)#ip address 10.1.1.1 255.0.0.0
DXS-3600-32S(config-if)#
```

## 25-2 interface loopback

This command is used to create a loopback interface and enter the interface configuration mode. Use the **no** form of this command to delete a loopback interface

```
interface loopback <int>
no interface loopback <int>
```

### Parameters

---

<i>int</i>	Specifies the loopback interface number.
------------	--

---

<b>Default</b>	None.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	Users can verify the settings by entering the <b>show interface loopback</b> command.

**Example** This example shows how to create a loopback interface 2 and configure IP 10.1.1.1/8 to it.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface loopback 2
DXS-3600-32S(config-if)# ip address 10.1.1.1 255.0.0.0
DXS-3600-32S(config-if)#
```

## 25-3 shutdown

This command is used to disable an interface. Use no command to enable an interface.

```
shutdown
```

**no shutdown**

<b>Parameters</b>	None.
<b>Default</b>	By default, the interface is enabled.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	This command is used to disable or enable an interface.  Users can verify the settings by entering the <b>show interface out-band</b> command.

**Example** This example shows how to shutdown the out-band interface 1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface out-band 1
DXS-3600-32S(config-if)#shutdown
DXS-3600-32S(config-if)#
```

**25-4 show interface out-band**

This command is used to display the out band interface.

**show interface out-band <int>**

**Parameters**

<i>int</i>	Specifies the out-band interface number.
------------	--

<b>Default</b>	None.
<b>Command Mode</b>	EXEC Mode.
<b>Command Default Level</b>	Level: 3
<b>Usage Guideline</b>	Use this command to display the out-band interface.

**Example** This example shows how to display the out-band interface 1.

```
DXS-3600-32S#show interface out-band 1

Interface           : out-band1
Interface Admin State : Enabled
IPv4 Address        : 10.1.1.1/8
Gateway             : 0.0.0.0
Link Status         : Link Down

DXS-3600-32S#
```

**25-5 show interface loopback**

This command is used to display all the IP interfaces.

**show interface loopback <int>**

**Parameters**

<i>int</i>	Specifies the loopback interface number.
------------	--

<b>Default</b>	None.
<b>Command Mode</b>	EXEC Mode.
<b>Command Default Level</b>	Level: 3
<b>Usage Guideline</b>	Use this command to display the loopback interface.

**Example** This example shows how to display the loopback interface.

```
DXS-3600-32S#show interface loopback 2

Interface           : loopback2
Interface Admin State : Enabled
IPv4 Address        : 10.1.1.1/8

DXS-3600-32S#
```

# IP Access List Commands

## 26-1 ip standard access-list

This command is used to enter the access list configuration mode and define a standard IP access list. Use the no form of this command to remove a standard IP access list.

```
ip standard access-list ACCESS-LIST-NAME
no ip standard access-list ACCESS-LIST-NAME
```

### Parameters

---

<i>ACCESS-LIST-NAME</i>	Specifies the name of the IP access-list to be configured. It can accept up to 16 characters. The syntax is general string that does not allow space.
-------------------------	---

---

<b>Default</b>	None.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	Standard IP access list is used by routing protocol.  Users can verify the settings by entering the <b>show ip standard access-list</b> command.

**Example** This example shows how to create a standard IP access list and enter the standard IP access list configuration mode.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip standard access-list IPS
DXS-3600-32S(config-ip-acl)#
```

## 26-2 deny

This command is used to set the deny rules of standard IP access list. Use the no form of this command to remove the deny rules.

```
deny NETWORK-ADDRESS
no deny NETWORK-ADDRESS
```

### Parameters

---

<i>NETWORK-ADDRESS</i>	Specifies a specific network address.
------------------------	---------------------------------------

---

<b>Default</b>	None.
<b>Command Mode</b>	Access List Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	One or multiple deny rules can be added to the list.  There is an implicit deny at the end of the statement, if you only want to deny some specified route, please add another statement which is permit 0.0.0.0 0 at the end of the ip access list, in that way there will be no negative effects on the function of access list.  Users can verify the settings by entering the <b>show ip standard access-list</b> command.

**Example** This example shows how to configure deny rules for a standard IP access list.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip access-list standard IPS
DXS-3600-32S(config-std-nacl)#deny 121.2.0.0/8
DXS-3600-32S(config-std-nacl)#deny 126.1.2.2/8
DXS-3600-32S(config-std-nacl)#
```

## 26-3 permit

This command is used to set the permit rules of standard IP access list. Use the no form of this command to remove the permit rules.

```
permit NETWORK-ADDRESS
no permit NETWORK-ADDRESS
```

### Parameters

<i>NETWORK-ADDRESS</i>	Specifies a specific network address.
------------------------	---------------------------------------

<b>Default</b>	None.
<b>Command Mode</b>	Access List Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	One or multiple permit rules can be added to the list.  Users can verify the settings by entering the <b>show ip standard access-list</b> command.

**Example** This example shows how to configure permit rules for a standard IP access list.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip access-list standard IPS
DXS-3600-32S(config-std-nacl)#permit 120.2.0.0/8
DXS-3600-32S(config-std-nacl)#permit 125.1.2.2/8
DXS-3600-32S(config-std-nacl)#
```

## 26-4 show ip standard access-list

This command is used to display the access-list configuration.

```
show ip standard access-list [ACCESS-LIST-NAME]
```

### Parameters

<i>ACCESS-LIST-NAME</i>	(Optional) Displays information about one specified standard IP access list.
-------------------------	--

<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 3
<b>Usage Guideline</b>	If no parameter is specified, then information about all standard IP access lists will be displayed.

**Example**

This example shows the content of standard IP access list 'IPS'.

```
DXS-3600-32S#show ip standard access-list IPS
```

```
IP Standard Access List:  IPS
Total Entries Number   :   2
    Permit 120.2.0.0/16
    Deny 125.1.2.2/20
```

```
Total Access List Number :    1
```

```
DXS-3600-32S#
```

Display Parameters	Description
<b>IP Standard Access List</b>	The name of standard IP access list. It is specified with the command <b>ip standard access-list</b> .
<b>Total Entries Number</b>	The total number of rules in this standard IP access list.
<b>Permit/Deny</b>	Rules of the standard IP access list. They are specified with the command <b>permit</b> and <b>deny</b> .
<b>Total Access List Number</b>	The total number of all standard IP access lists.

# IP Address Commands

## 27-1 ip address

This command is used to set the primary or secondary IP address for an interface. Use no command to remove the IP address.

```
ip address ip-address net-mask [secondary]
no ip address ip-address net-mask [secondary]
```

### Parameters

<i>ip-address</i>	Specifies the 32-bit IP address, with 8 bits in one group in decimal format.
<i>net-mask</i>	Specifies the 32-bit network mask, with same format to <b>ip-address</b> .
<b>secondary</b>	(Optional) Specifies the secondary IP address to be configured.

<b>Default</b>	No IP address is configured for the interface.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	<p>This command set a primary or secondary IP address for an interface. An interface can have one primary IP address and multiple secondary IP addresses. The primary IP address must set first, if there is no primary IP address, the secondary IP address can't set successful for an interface. Also, to remove the primary IP address needs remove all the secondary IP address first.</p> <p>Currently, this command is valid for the VLAN interface and the out-band interface. But, only the VLAN interface supports secondary IP address.</p> <p>The no form of this command remove an IP address or disable IP processing for an interface.</p> <p>Users can verify the settings by entering the <b>show ip interface</b> command.</p>

**Example** This example shows how to set the primary IP address 10.1.1.1/8 for interface VLAN 100.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface vlan 100
DXS-3600-32S(config-if)#ip address 10.1.1.1 255.0.0.0
DXS-3600-32S(config-if)#
```

## 27-2 ip address dhcp

This command is used to make the interface obtain the IP address information by the DHCP in the interface configuration mode. The no form of this command can be used to cancel this configuration.

```
ip address dhcp
no ip address dhcp
```

<b>Parameters</b>	None.
<b>Default</b>	The interface doesn't obtain the IP address by the DHCP by default.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	Configure the interface to obtain IP address from DHCP instead of manual setting.

**Example** This example shows how to make the interface of VLAN 1 obtain an IP address automatically.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface vlan 1
DXS-3600-32S(config-if)#ip address dhcp
DXS-3600-32S(config-if)#
```

### 27-3 ip directed-broadcast

This command is used to enable forwarding of IP directed broadcasts on an interface where the broadcast becomes a physical broadcast. Use no command to disable forwarding of IP directed broadcasts on an interface.

**ip directed-broadcast**  
**no ip directed-broadcast**

**Parameters** None.

**Default** By default, this option is disabled.

**Command Mode** Interface Configuration Mode.

**Command Default Level** Level: 8. (**EI Mode Only Command**)

**Usage Guideline** This command enables the forwarding of IP directed broadcast on an interface where the broadcast becomes a physical broadcast.

The no form of this command disables the forwarding of IP directed broadcast on an interface.

Users can verify the settings by entering the **show ip interface** command.

**Example** This example shows how to enable the IP directed broadcast on interface VLAN 100.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface vlan 100
DXS-3600-32S(config-if)#ip directed-broadcast
DXS-3600-32S(config-if)#
```

### 27-4 ip default-gateway

This command is used to set a default gateway address for the out-band interface. Use no command to remove the default gateway address.

**ip default-gateway** *ip-address*  
**no ip default-gateway** *ip-address*

#### Parameters

<i>ip-address</i>	Specifies the IP address of the default gateway.
-------------------	--

**Default** There is no default gateway defined for out-band interface.

**Command Mode** Interface Configuration Mode.

**Command Default Level** Level: 8



**Usage Guideline**

This command set or remove the default gateway address for the out-band interface. This command is only valid for out-band IP interface.

Users can verify the settings by entering the **show interface out-band** and **show ip interface** command.

**Example**

This example shows how to set the default gateway to 10.1.1.1

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface out-band 1
DXS-3600-32S(config-if)#ip default-gateway 10.1.1.1
DXS-3600-32S(config-if)#
```

**27-5 show ip interface**

This command is used to display all the IP interfaces.

**show ip interface** [*interface-name*]

**Parameters**

<i>interface-name</i>	(Optional) Specifies the IP interface's name. Use the interface type combined with the interface number as the interface's name.
-----------------------	--

**Default**

None.

**Command Mode**

Privileged Mode.

**Command Default Level**

Level: 3

**Usage Guideline**

Use this command to display all the IP interfaces.

**Example**

This example shows how to display the IP interface called 'vlan2'.

```
DXS-3600-32S#show ip interface vlan2

IP Interface           : vlan2
VLAN Name              : VLAN0002
Interface Admin State  : Enabled
IP Directed Broadcast  : Disabled
IP MTU                 : 1500

DXS-3600-32S#
```

# IP Prefix List Commands

## 28-1 ip prefix-list

This command is used to create an IP prefix list or add a rule for an IP prefix list. Use the no form of this command to remove an IP prefix list or remove a rule for an IP prefix list.

```
ip prefix-list PREFIX-LIST-NAME [[seq SEQ-NUMBER] {deny | permit} NETWORK-ADDRESS [ge MINIMUM-
PREFIX-LENGTH] [le MAXIMUM-PREFIX-LENGTH]]
no ip prefix-list PREFIX-LIST-NAME [[seq SEQ-NUMBER] {deny | permit} NETWORK-ADDRESS [ge
MINIMUM-PREFIX-LENGTH] [le MAXIMUM-PREFIX-LENGTH]]
```

### Parameters

<i>PREFIX-LIST-NAME</i>	Specifies the name of the IP prefix list. It can accept up to 16 characters. The syntax is general string that does not allow space.
<b>seq</b> <i>SEQ-NUMBER</i>	(Optional) Specifies the sequence number of the rule entry. The range is 1 to 65535.
<b>deny</b>	(Optional) Specifies the rule to deny the access when matched.
<b>permit</b>	(Optional) Specifies the rule to permit the access when matched.
<i>NETWORK-ADDRESS</i>	(Optional) Specifies the network address to match.
<b>ge</b> <i>MINIMUM-PREFIX-LENGTH</i>	(Optional) Specifies the minimum prefix length used to match the network address. The range is 1 to 32.
<b>le</b> <i>MAXIMUM-PREFIX-LENGTH</i>	(Optional) Specifies the maximum prefix length used to match the network address. The range is 1 to 32.

**Default** None.

**Command Mode** Global Configuration Mode.

**Command Default Level** Level: 8

**Usage Guideline** The **ip prefix-list** command is used to create or configure an IP prefix list.

An IP prefix list can have multiple rule entries; each is represented by a sequence number. The rule with the lower sequence number will be evaluated first. If the sequence number is not specified for the defined rule entry, the sequence number will be automatically given. The automatically given sequence number will be a multiple of 5. Therefore, if the defined rule is the first rule in the prefix list, the automatically given sequence number will be 5. If the defined rule is not the first rule in the prefix list, the sequence number will be the number that is a multiple of 5 and larger than the largest sequence number of an existing rule in the prefix list.

A prefix list consists of an IP address and a bit mask. The bit mask is entered as a number from 1 to 32. An implicit denial is applied to traffic that does not match any prefix list entry. The IP route prefix list rule entry is defined to either permit or deny specific routes. Prefix lists are configured to match an exact prefix length or a prefix range.

The prefix list is processed using an exact match when neither the **ge** nor **le** is specified. If only the **ge** is specified, the range of the mask length used to match the network address is from the minimum prefix length to a full 32-bit length. If only the **le** is specified, the range of the mask length is from prefix length of network to the maximum prefix length. If both the **ge** and **le** is specified, the range of the mask length falls between the minimum prefix length and the maximum prefix length. There is a restriction about the minimum prefix length and the maximum prefix length:

```
prefix length of network < the minimum prefix length < the maximum prefix length <=
32
```

For example:

If the specified network address is 10.1.2.3/16 and none of **ge** and **le** is specified, only the route 10.1.0.0/16 will match the rule. The route 10.1.2.0/24 will not. If the network address is 10.1.0.0/16 and **ge** 24 is specified, the route 10.1.0.0/16 will not match the rule. The route 10.1.2.0/24 and the route 10.1.2.3/32 will match the rule.

You can verify your settings by entering the **show ip prefix-list** command.

### Example

This example shows how to create and configure the IP prefix-list named "my\_pref" to permit routes from the 10.0.0.0/8 network while set the maximum prefix length to 24.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip prefix-list my_pref permit 10.0.0.0/8 le 24
DXS-3600-32S(config)#
```

### Example

This example shows how to create and configure the IP prefix-list named " my\_pref" to deny routes from the 12.0.0.0/12 network while set minimum prefix length to 20 and maximum prefix length to 24.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip prefix-list my_pref deny 12.0.0.0/12 ge 20 le 24
DXS-3600-32S(config)#
```

## 28-2 ip prefix-list description

This command is used to add the text description to a prefix list. Use the no form of this command to delete the description.

```
ip prefix-list PREFIX-LIST-NAME description DESC
no ip prefix-list PREFIX-LIST-NAME description
```

### Parameters

<i>PREFIX-LIST-NAME</i>	Specifies the name of the IP prefix list. It can accept up to 16 characters. The syntax is general string that does not allow space.
<i>DESC</i>	Specifies the text description. It supports maximum 80 characters.

### Default

None.

### Command Mode

Global Configuration Mode.

### Command Default Level

Level: 8

### Usage Guideline

Use the **ip prefix-list** description command to add or delete the text description of an IP prefix list.

You can verify your settings by entering the **show ip prefix-list** command.

### Example

This example shows how to set the description of one IP prefix list.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip prefix-list my_pref description allow routes from peer A
DXS-3600-32S(config)#
```

## 28-3 clear ip prefix-list counter

This command is used to reset the hit counter of the IP prefix list.

---

```
clear ip prefix-list counter {PREFIX-LIST-NAME [NETWORK-ADDRESS] | all}
```

### Parameters

<i>PREFIX-LIST-NAME</i>	Specifies the name of the IP prefix list. It can accept up to 16 characters. The syntax is general string that does not allow space.
<i>NETWORK-ADDRESS</i>	(Optional) Specifies the network entry of IP prefix list.
<b>all</b>	Clear the hit count of all IP prefix lists

<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	The hit count is the value that indicates the times of an prefix list entry is matched.

**Example** This example shows how to clear the counter of all the IP prefix-lists.

```
DXS-3600-32S#clear ip prefix-list counter all
DXS-3600-32S#
```

---

## 28-4 show ip prefix-list

This command is used to show the information about IP prefix list.

```
show ip prefix-list [PREFIX-LIST-NAME]
```

### Parameters

<i>PREFIX-LIST-NAME</i>	(Optional) Displays information of the specified IP prefix list.
-------------------------	--

<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 3
<b>Usage Guideline</b>	If no parameter is specified, that all IP prefix lists' information will be displayed.

**Example** This example shows the information of IP prefix list "my\_pref":

```
DXS-3600-32S#show ip prefix-list my_pref

IP Prefix List: my_pref
Description: allow routes from peer A
Total Rule Number:2
    Sequence 5 Permit 10.0.0.0/8 le 24
    Sequence 10 Deny 12.0.0.0/12 le 24 ge 20

DXS-3600-32S#
```

Display Parameters	Description
IP Prefix List	The name of IP prefix list. It is specified with the command ip prefix-list.
Total Rule number	Rules number of the IP prefix list.
Total IP Prefix Number	Total number of all IP prefix lists.

---



# IP Multicast (IPMC) Commands

## 29-1 ip mroute

This command is used to create static routes for multicast. Use the **no** form of this command to delete the static routes.

```
ip mroute SOURCE-ADDRESS MASK {RPF-ADDRESS | null}
no ip mroute {SOURCE-ADDRESS MASK | all}
```

### Parameters

<i>SOURCE-ADDRESS</i>	Specifies the IP address of the static route.
<i>MASK</i>	Specifies the network mask of the static route.
<i>RPF-ADDRESS</i>	Specifies the RPF neighbor address.
<b>null</b>	Specifies that if null is defined for the source network, the RPF check will always fail for multicast traffic sent from this source network.
<b>all</b>	Specifies that all the IP multicast static routes will be deleted.

<b>Default</b>	No any IP multicast static route exists.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	This command is used to create an IP multicast static route entry used by PIM to do RPF check. When an IP multicast packet is received, the source IP address of the packet will be used to do the RPF check. If the source IP address of the received IP multicast packet matches the source network in a multicast static route, then it will be allowed only when it comes from the RPF interface, and it will be RPF check failed if it comes from other interfaces. If the source IP address of the received IP multicast packet does not match any multicast static route source network, dynamic unicast route will be used by PIM for RPF check.

To verify you configuration, use command **show ip mroute static** or **show ip rpf**.

<b>Example</b>	This example shows how to create a static route for network 139.1.1.1 255.255.0.0 for which the RPF neighbor address is 192.168.1.1.
----------------	--

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip mroute 139.1.1.1 255.255.0.0 192.168.1.1
DXS-3600-32S(config)#
```

<b>Example</b>	This example shows how to configure the RPF checking if source network 10.1.1.1/16 always fails.
----------------	--

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip mroute 10.1.1.1 255.255.0.0 null
DXS-3600-32S(config)#
```

<b>Example</b>	This example shows how to delete a multicast static route for source network 10.1.1.1 255.255.0.0.
----------------	--

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#no ip mroute 10.1.1.1 255.255.0.0
DXS-3600-32S(config)#
```

<b>Example</b>	This example shows how to delete all multicast static routes.
----------------	---

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#no ip mroute all
DXS-3600-32S(config)#
```

## 29-2 ip multicast-routing

This command is used to enable global IP multicast routing. The **no** form of the command disables global IP multicast routing.

**ip multicast-routing**  
**no ip multicast-routing**

<b>Parameters</b>	None.
<b>Default</b>	By default, this option is disabled.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	When IP multicast routing is disabled, the system will stop routing of multicast packets even though the multicast routing protocol is enabled. If you want to use IP multicast routing for forwarding, you need use the <b>ip multicast-routing</b> command to enable global IP multicast routing state. When this command and any multicast routing protocol are both enabled, IGMP will automatically be enabled on the interface, and then the multicast routing forwarding can take effect.  To verify you configuration, use the command <b>show ip multicast-routing</b> .

**Example** This example shows how to enable global IP multicast routing.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip multicast-routing
DXS-3600-32S(config)#
```

**Example** This example shows how to disable global IP multicast routing.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#no ip multicast-routing
DXS-3600-32S(config)#
```

## 29-3 show ip mroute

This command is used to display IP multicast routing information.

**show ip mroute** [{{*GROUP-ADDRESS* [*SOURCE-ADDRESS*] | **dense** | **sparse** | **dvmrp** | **summary**} | **static**}]

### Parameters

<i>GROUP-ADDRESS</i>	Specifies the multicast group IP address.
<i>SOURCE-ADDRESS</i>	Specifies the multicast source IP address.
<b>dense</b>	Displays PIM-DM multicast routing table.
<b>sparse</b>	Displays PIM-SM multicast routing table.
<b>dvmrp</b>	Displays DVMRP multicast routing table.
<b>summary</b>	Displays a one-line, abbreviated summary of each entry in the IP multicast routing table.
<b>static</b>	Displays the multicast static routes

<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 3. ( <b>EI Mode Only Command</b> )

**Usage Guideline**

This command is used to display the multicast routing entries learned on the switch or the multicast static routes created on the switch. You can specify the parameter to display the information that you concerning. If no parameter is specified, all IP multicast routing entries learned on the switch will be displayed.

**Example**

This example shows how to display multicast route brief information.

```
DXS-3600-32S#show ip mroute summary

IP Multicast Routing Table: 2 entries
Flags: D - Dense, S - Sparse, V - DVMRP
Timers: Uptime/Expires

(10.10.1.52, 224.0.1.3), vlan1, 00:01:32/00:03:20, Flags: D
(20.1.1.1, 228.10.2.1), vlan10, 00:05:10/00:03:11, Flags: S

DXS-3600-32S#
```

**Example**

This example shows how to display all IP multicast routing information on the system.

```
DXS-3600-32S#show ip mroute

IP Multicast Routing Table
Flags: D - Dense, S - Sparse, V - DVMRP, s - SSM Group, F - Register flag
      P - Pruned, R - (S, G) RPT-bit set, T - SPT-bit set
Outgoing interface flags: W - Assert winner
Timers: Uptime/Expires

(10.71.57.210, 235.0.0.4), 00:02:53/00:00:37, flags: ST
  Incoming interface: vlan1, RPF Neighbor 1.2.0.1
  Outgoing interface List:
  vlan3, Forwarding 00:00:04/00:04:20

(20.2.2.10, 239.0.0.5), 00:02:53/00:00:37, flags: VP
  Incoming interface: vlan20, RPF Neighbor 2.3.0.1
  Outgoing interface List: NULL

(30.9.7.4, 237.0.0.6), 00:02:53/00:00:37, flags: D
  Incoming interface: vlan30, RPF Neighbor 6.2.3.2
  Outgoing interface List:
  vlan5, Forwarding 00:01:21/00:02:39

Total Entries: 3

DXS-3600-32S#
```

**Example**

This example shows how to display IP multicast routing information learned by PIM sparse mode.

```
DXS-3600-32S#show ip mroute sparse

(10.1.57.1, 235.0.0.0), 00:00:04/00:03:26, flags: ST
  Incoming interface: vlan1, RPF Neighbor NULL
  Outgoing interface list:
  vlan4, Forwarding 00:00:04/00:04:20

Total Entries: 1

DXS-3600-32S#
```



**Example** This example shows how to display IP multicast routing information for group source part (239.0.0.5, 20.2.2.10).

```
DXS-3600-32S#show ip mroute 239.0.0.5 20.2.2.10
(20.2.2.10, 239.0.0.5), 00:02:53/00:00:37, flags: VP
  Incoming interface: vlan20, RPF Neighbor 2.3.0.1
  Outgoing interface List: NULL

Total Entries: 1

DXS-3600-32S#
```

**Example** This example shows how to display the multicast static routes created on the system.

```
DXS-3600-32S#show ip mroute static
Mroute: 10.0.0.0/8, RPF neighbor: 11.1.1.1
Mroute: 11.0.0.0/8, RPF neighbor: NULL

Total Entries : 2

DXS-3600-32S#
```

Display Parameters	Description
<b>D – Dense</b>	The entry is operating in PIM-DM mode.
<b>S – Sparse</b>	The entry is operating in PIM-SM mode.
<b>s – SSM Group</b>	The entry is a member of an SSM group.
<b>V – DVMRP</b>	The entry is operating in DVMRP mode.
<b>F – Register Flag</b>	Status of whether the software is registering for a multicast source.
<b>P – Pruned</b>	Route has been pruned. This information indicates that this switch has no outgoing for this group.
<b>R – (S, G) RPT-bit set</b>	Specify this switch is the RPT upstream for this group, and this group is forwarding in SPT. The downstream switch has sent (S, G) prune message to this switch.
<b>T – SPT-bit set</b>	Status of whether the packets have been received on the shortest-path tree.
<b>W – Assert winner</b>	Specify this outgoing is in assert state, and it is a assert winner.
<b>(172.18.16.1, 235.0.0.0)</b>	The source address and group address for this entry.
<b>Uptime/Expire</b>	The uptime and expire time for this entry.
<b>RPF neighbor</b>	The RPF neighbor address for the specified network address, as specified by command “ <b>ip mroute</b> ”.

## 29-4 show ip rpf

This command is used to show the RPF information for the specified source address.

```
show ip rpf SOURCE-ADDRESS
```

### Parameters

<b>SOURCE-ADDRESS</b>	Specifies the source IP address.
-----------------------	----------------------------------

<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 3. (EI Mode Only Command)

**Usage Guideline**

This command is used to display the RPF information of the specified source address. The static multicast routing information, which created by command **ip mroute**, prefer than RPF information learnt by unicast routing protocol.

**Example**

This example shows how to display RPF information of 10.0.0.1

```
DXS-3600-32S#show ip rpf 10.0.0.1

Source IP:10.0.0.1
RPF interface: vlan1
RPF type: unicast
metric: 1

DXS-3600-32S#
```

**Example**

This example shows how to display RPF information of 20.0.0.1

```
DXS-3600-32S#show ip rpf 20.0.0.1

Source IP:20.0.0.1
RPF interface: vlan3
RPF type: unicast
metric: 4

DXS-3600-32S#
```

**Example**

This example shows how to display RPF information for 30.0.0.1

```
DXS-3600-32S#show ip rpf 30.0.0.1

Source IP:30.0.0.1
RPF interface: vlan2
RPF type: unicast
metric: 2

DXS-3600-32S#
```

**Example**

This example shows how to display RPF information of 172.18.61.8

```
DXS-3600-32S#show ip rpf 172.18.61.8

Source IP:172.18.61.8
RPF address: 192.18.16.1
RPF type: Static

DXS-3600-32S#
```

**Display Parameters****Description**

<b>Source IP</b>	Indicate the source IP address.
<b>RPF interface</b>	Indicate the RPF interface name for the specified source address.
<b>Type</b>	Specify the way the switch gets the RPF information. It can be unicast routing protocol or static configured.
<b>Metric</b>	The metric to achieve to the source network from the local switch.
<b>RPF address</b>	Specify RPF neighbor address, created by command "ip mroute".

**29-5 show ip multicast interface**

This command is used to display the basic multicast information of an interface.

```
show ip multicast interface [IFNAME]
```

**Parameters**


---

<i>IFNAME</i>	Specifies the interface name.
---------------	-------------------------------

---

**Default** None.

**Command Mode** Privileged EXEC Mode.

**Command Default Level** Level: 3. (**EI Mode Only Command**)

**Usage Guideline** This command is used to display the basic multicast interface information, if no parameter is specified, this command will display information for all interfaces.

**Example** This example shows how to display all multicast interface information on the whole system.

```
DXS-3600-32S#show ip multicast interface
```

```
Interface Name  IP Address      Multicast Routing
-----
vlan1          10.90.90.90/8  PIM-SM
vlan2          1.0.90.3/8     DVMRP
vlan3          2.4.2.2/8      PIM-DM
vlan4          3.4.4.3/8      N/A
```

```
Total Entries: 4
```

```
DXS-3600-32S#
```

**Example** This example shows how to display multicast interface information on interface 'vlan1'.

```
DXS-3600-32S#show ip multicast interface vlan1
```

```
Interface Name  IP Address      Multicast Routing
-----
vlan1          1.0.90.3/8     DVMRP
```

```
Total Entries: 1
```

```
DXS-3600-32S#
```

**Display Parameters****Description**


---

<b>Interface Name</b>	Name of the interface.
-----------------------	------------------------

<b>IP Address</b>	IP address of the interface
-------------------	-----------------------------

<b>Multicast Routing</b>	The multicast routing protocol running on the interface. N/A means no any multicast routing protocol is active on the interface.
--------------------------	--

---

**29-6 show ip multicast-routing**

This command is used to display IP multicast routing global state.

```
show ip multicast-routing
```

**Parameters** None.

**Default** None.

**Command Mode** Privileged EXEC Mode.

**Command Default Level** Level: 3. (**EI Mode Only Command**)

**Usage Guideline** This command is used to display the IP multicast routing global state.

**Example**

This example shows how to display IP multicast routing information.

```
DXS-3600-32S#show ip multicast-routing
IP multicast routing state: Disabled
DXS-3600-32S#
```

---

Display Parameters	Description
IP multicast routing state	This state can be modified by command "ip multicast-routing".

---

# LINE Commands

## 30-1 line

This command is used to enter the specified LINE mode. The no form of this command is used to restore the default configuration.

```
line {console | telnet | ssh}
no line {console | telnet | ssh}
```

### Parameters

<b>console</b>	Specifies the console port.
<b>telnet</b>	Specifies the Telnet terminal line.
<b>ssh</b>	Specifies the SSH terminal line.

<b>Default</b>	None.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	Access to the specified LINE mode.

**Example** This example shows how to enter the LINE mode from LINE CONSOLE.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#line console
DXS-3600-32S(config-line)#
```

## 30-2 exec-timeout

This command is used to configure the connection timeout to this equipment in the LINE, use the exec-timeout command. Once the connection timeout in the LINE is cancelled by the no exec-timeout command, the connection will never be timeout.

```
exec-timeout minutes [seconds]
no exec-timeout
```

### Parameters

<b>minutes</b>	Specifies the minutes of specified timeout. This value must be between 0 and 1439.
<b>seconds</b>	(Optional) Specifies the seconds of specified timeout.

<b>Default</b>	The default timeout is 10min.
<b>Command Mode</b>	Line Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	If there is no input/output information for this connection within specified time, this connection will be interrupted, and this LINE will be restored to the free status.

**Example** This example shows how to specify the connection timeout is 5'30".

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#line console
DXS-3600-32S(config-line)#exec-timeout 5 30
DXS-3600-32S(config-line)#
```

### 30-3 speed

This command is used to set the speed at which the terminal transmits packets, execute the **speed** *speed* command in the line configuration mode. To restore the speed to its default value, run the no speed command.

```
speed speed
no speed
```

#### Parameters

<i>speed</i>	Specifies the transmission rate (bps) on the terminal. For serial ports, the optional rates are 9600, 19200, 38400, and 115200 bps. The default rate is 115200 bps.
--------------	---

<b>Default</b>	The default rate is 115200.
<b>Command Mode</b>	Line Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	This command sets the speed at which the terminal transmits packets. It is only applicable for serial ports.

**Example** This example shows how to configure the rate of the serial port to 115200 bps.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#line console
DXS-3600-32S(config-line)#speed 115200
DXS-3600-32S(config-line)#
```

### 30-4 show line

This command is used to show the configuration of a line.

```
show line {console | telnet | ssh}
```

#### Parameters

<b>console</b>	Displays the configuration of a console line.
<b>telnet</b>	Displays the configuration of a telnet line.
<b>ssh</b>	Displays the configuration of a telnet line.

<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	This command shows the configuration information of a line.

**Example** This example shows the configuration of console port.

```
DXS-3600-32S#show line console

Type:      console
Speed:     115200
Timeout:   0 hour 10 min 0 sec

DXS-3600-32S#
```

# Link Aggregation Commands

## 31-1 aggregateport load-balance

This command is used to specify the load-balance algorithm. Use the no command to return it to the default setting.

```
aggregateport load-balance {dst-mac | src-mac | src-dst-mac | dst-ip | src-ip | src-dst-ip}
no aggregateport load-balance
```

### Parameters

<b>dst-mac</b>	Specifies that the switch should examine the MAC destination address.
<b>src-mac</b>	Specifies that the switch should examine the MAC source address.
<b>src-dst-mac</b>	Specifies that the switch should examine the MAC source and destination address.
<b>dst-ip</b>	Specifies that the switch should examine the IP destination address.
<b>src-ip</b>	Specifies that the switch should examine the IP source address.
<b>src-dst-ip</b>	Specifies that the switch should examine the IP source and destination address.

<b>Default</b>	Traffic is distributed according to the destination and source MAC addresses of the packets.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	None.

**Example** This example shows how to configure global load balance.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#aggregateport load-balance src-mac
DXS-3600-32S(config)#
```

## 31-2 lacp port-priority

This command is used to set the LACP port priority. Use the no form of this command to return to the default value.

```
lacp port-priority port-priority
no lacp port-priority
```

### Parameters

<i>port-priority</i>	Specifies the port priority, in the range of 0-65535.
----------------------	---

<b>Default</b>	By default, the port priority is 32768.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	The LACP port-priority interface configuration command determines which ports are bundled.

In port-priority comparisons, a numerically lower value has a higher priority. If two or more ports have the same LACP port priority (for example, they are configured with the default setting of 32768), lower port number has higher priority.

**Example** This example shows how to configure port priority of Ethernet interface 1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#lACP port-priority 4096
DXS-3600-32S(config-if)#
```

### 31-3 lACP system-priority

This command is used to set the LACP system priority. The no form of it restores it to the default.

```
lACP system-priority system-priority
no lACP system-priority
```

#### Parameters

<i>system-priority</i>	Specifies the LACP system priority, in the range of 0-65535.
------------------------	--

<b>Default</b>	By default, the system priority is 32768.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	The LACP system priority consists of the Layer 2 management MAC address and its priority value, where the MAC address is fixed but the priority value is configurable. If two priorities are equal, then the smaller the MAC address is, the higher the priority is. All LACP groups on the switch share the system priority. Changing the system priority may influence the whole aggregation groups on the switch.

**Example** This example shows how to configure system priority.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#lACP system-priority 4096
DXS-3600-32S(config)#
```

### 31-4 lACP timeout

This command is used to configure the LACP timeout mode. Use the no form of this command to return to the default value.

```
lACP timeout {short | long}
no lACP timeout
```

#### Parameters

<b>short</b>	Specifies that there will be 3 seconds before the LACP invalidating received LACPDU information and there will be 1 second between LACP PDU periodic transmissions when using Short Timeouts.
<b>long</b>	Specifies that there will be 90 seconds before the LACP invalidating received LACPDU information and there will be 30 seconds between LACP PDU periodic transmissions when using Long Timeouts

<b>Default</b>	By default, the LACP timeout mode is short.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 15



**Usage Guideline**               None.

**Example**                        This example shows how to configure the port LACP timeout to long mode on Ethernet interface 1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#lACP timeout long
DXS-3600-32S(config-if)#
```

## 31-5 port-group

This command is used to assign a physical interface to be a member port of an aggregate port. Use the no form of the command to remove the membership from the aggregate port.

**port-group** *port-group-number* [**static**]  
**no port-group**

### Parameters

<i>port-group-number</i>	Specifies the interface number of the aggregate port.
<b>static</b>	Specifies the aggregate port is static trunk. If not specify, the aggregate port is LACP.

**Default**                        By default, the physical port does not belong to any aggregate port.

**Command Mode**               Interface Configuration Mode.

**Command Default Level**      Level: 15

**Usage Guideline**             When adding a port or port list to the aggregate port, that does not exist, a new aggregate port will be created automatically.

When the first port is added to the aggregate port, the specified type (static TRUNK or LACP) will be decided for this aggregate port. Other ports added to this aggregate port afterwards, with a different type, are not allowed.

**Example**                        This example shows how to specify the Ethernet interface 1 as members of aggregate port 3.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#port-group 3
DXS-3600-32S(config-if)#
```

## 31-6 port-group mode

This command is used to configure the aggregation mode on the interface. Use the no form of the command to restores it to the default mode.

**port-group mode** {**active** | **passive**}  
**no port-group mode**

### Parameters

<b>active</b>	Specifies to place a port into an active negotiating state, in which the port initiates negotiations with remote ports by sending LACP packets.
<b>passive</b>	Specifies to place a port into a passive negotiating state, in which the port responds to LACP packets it receives, but does not initiate LACP negotiation.

<b>Default</b>	By default, the aggregation mode is passive on the interface.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	None.

**Example** This example shows how to configure Ethernet interface 1-2 to active mode.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface range tenGigabitEthernet 1/0/1-1/0/2
DXS-3600-32S(config-if-range)#port-group mode active
DXS-3600-32S(config-if-range)#
```

## 31-7 show aggregateport

This command is used to display the aggregate port configurations.

```
show aggregateport {aggregate-port-number summary | load-balance}
```

### Parameters

<i>aggregate-port-number</i>	Specifies the number of the aggregate port.
<b>summary</b>	Displays information of the designated aggregate port.
<b>load-balance</b>	Displays the global load balance.

<b>Default</b>	None.
<b>Command Mode</b>	EXEC Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	None.

**Example** This example shows information of aggregate port 1.

```
DXS-3600-32S#show aggregateport 1 summary

AggregatePort MaxPorts  SwitchPort Mode  Ports
-----
Ag1           12         ACCESS      1-4

DXS-3600-32S#
```

**Example** This example shows the algorithm of aggregate port 1.

```
DXS-3600-32S#show aggregateport load-balance

Link Aggregation Algorithm : src-mac

DXS-3600-32S#
```

## 31-8 show lacp summary

This command is used to show the LACP aggregation information.

```
show lacp summary
```

<b>Parameters</b>	None.
-------------------	-------

<b>Default</b>	None.
<b>Command Mode</b>	EXEC Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	None.

**Example** This example shows how to display LACP summary.

```
DXS-3600-32S#show lacp summary
```

```
Flags:S - Port is perform slow timeout   F - Port is perform fast timeout.
A - Port is in active mode.   P - Port is in passive mode
System priority: 4096
Aggregate port 3:
Working mode: Dynamic
Local information:
```

Port	Flags	State	LACP port Priority	Oper Key	Port Number	Port State
1	SA	bndl	4096	0x3	0x1	0x3f
2	SA	bndl	4096	0x3	0x2	0x3f
3	SA	bndl	4096	0x3	0x3	0x3f
4	SA	sup	4096	0x3	0x4	0x37
5	FP	down	0	0x0	0x0	0x0

```
Partner information:
```

Port	Flags	LACP port Priority	Dev ID	Oper Key	Port Number	Port State	System Priority
1	SA	61440	00-d0-f8-00-00-02	0x3	0x1	0x3f	32768
2	SA	61440	00-d0-f8-00-00-02	0x3	0x2	0x3f	32768
3	SA	61440	00-d0-f8-00-00-02	0x3	0x3	0x3f	32768
4	SA	61440	00-d0-f8-00-00-02	0x1	0x4	0x37	32768
5	FP	0	00-00-00-00-00-00	0x0	0x0	0x0	0x0

```
DXS-3600-32S#
```

Display Parameters	Description
<b>System priority</b>	Show the LACP system priority
<b>Working mode</b>	Show the aggregator port working mode: <b>Static:</b> Manual Trunk <b>Dynamic:</b> LACP
<b>Local information</b>	Show the local LACP information.
<b>Port</b>	Show the system port ID.
<b>Flags</b>	Show the port state flag: <b>S</b> indicates that the LACP port is working in the slow timeout mode. <b>A</b> indicates that the port is in the active mode.
<b>State</b>	Show the port aggregation information: <b>bndl</b> - indicates that the port is aggregated; <b>down</b> - represents the disconnection port state; <b>sup</b> - indicates that the port is not aggregated.
<b>LACP Port Priority</b>	Show the LACP port priority.
<b>Oper Key</b>	Runtime operational key that is being used by this port. LACP automatically generates this value as a hexadecimal number.
<b>Port Number</b>	Show the port number.

<b>Display Parameters</b>	<b>Description</b>
<b>Port State</b>	State variables for the port, encoded as individual bits within a single octet with these meanings: <ul style="list-style-type: none"><li>• <b>bit0:</b> LACP_Activity</li><li>• <b>bit1:</b> LACP_Timeout</li><li>• <b>bit2:</b> Aggregation</li><li>• <b>bit3:</b> Synchronization</li><li>• <b>bit4:</b> Collecting</li><li>• <b>bit5:</b> Distributing</li><li>• <b>bit6:</b> Defaulted</li><li>• <b>bit7:</b> Expired</li></ul>
<b>Partner information</b>	Partly show the LACP Partner information of the peer port.
<b>Dev ID</b>	Partly show the system MAC information of the peer device.

---

# Link Layer Discovery Protocol (LLDP) Commands

## 32-1 lldp run

This command is used to enable the Link Layer Discovery Protocol (LLDP) globally. Use the no form of this command to return to the default settings.

```
lldp run
no lldp run
```

<b>Parameters</b>	None.
<b>Default</b>	LLDP global state is disabled.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	<p>This is a global control for the LLDP function. When this function is enabled, the switch can start to transmit LLDP packets and receive and process the LLDP packets.</p> <p>The specific function of each physical interface will depend on the LLDP setting of each physical interface.</p> <p>For the advertisement of LLDP packets, the switch announces the information to its neighbor through physical interfaces. For the receiving of LLDP packets, the switch will learn the information from the LLDP packets advertised from the neighbor in the neighbor table.</p>

**Example** This example shows how to enable the LLDP global setting.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#lldp run
DXS-3600-32S(config)#
```

**Example** This example shows how to disable the LLDP global setting.

```
DXS-3600-32S#configure terminal
XS-3600-32S(config)#no lldp run
DXS-3600-32S(config)#
```

## 32-2 lldp forward

This command is used to enable the Link Layer Discovery Protocol (LLDP) forward state. Use the no form of this command to return to the default settings.

```
lldp forward
no lldp forward
```

<b>Parameters</b>	None.
<b>Default</b>	LLDP forward state is disabled.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	This is a global control for the LLDP forward. When LLDP is disabled and LLDP forward is enabled, the received LLDPDU packet will be forwarded.

**Example** This example shows how to enable the LLDP global forward state.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#lldp forward
DXS-3600-32S(config)#
```

**Example** This example shows how to disable the LLDP global forward state.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#no lldp forward
DXS-3600-32S(config)#
```

### 32-3 lldp message-tx-interval

This command is used to set the LLDPDU transmission interval on the switch. Use the no form of this command to return to the default settings.

```
lldp message-tx-interval seconds
no lldp message-tx-interval
```

#### Parameters

<i>seconds</i>	Specifies the interval between consecutive transmissions of LLDP advertisements on each physical interface. The range is from 5 second to 32768 second.
----------------	---

<b>Default</b>	30 seconds.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	This interval controls how often active ports retransmit advertisements to their neighbors.

**Example** This example shows how to set the LLDP message TX interval to 50 seconds.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#lldp message-tx-interval 50
DXS-3600-32S(config)#
```

**Example** This example shows how to set the LLDP message TX interval to default value.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#no lldp message-tx-interval
DXS-3600-32S(config)#
```

### 32-4 lldp message-tx-hold-multiplier

This command is used to set the message hold multiplier on the switch. Use the no form of this command to return to the default settings.

```
lldp message-tx-hold-multiplier value
no message-tx-hold-multiplier
```

#### Parameters

<i>value</i>	Specifies a multiplier on the <b>msgTxInterval</b> , that used to compute the time to live value of an LLDPDU. Valid values are from 2 to 10.
--------------	---

<b>Default</b>	The default value is 4.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 12

**Usage Guideline** This parameter is a multiplier on the **msgTxInterval** that used to compute the TTL value of **txTTL** in an LLDPDU. The TTL will be carried in the LLDPDU packet.

The lifetime will be the minimum of 65535 and (message\_tx\_interval \* message\_tx\_hold\_multiplier). At the partner switch, when the TTL for a given advertisement expires, the advertised data is deleted from the neighbor switch's MIB.

**Example** This example shows how to set the LLDP **message-tx-hold-multiplier** to 3.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#lldp message-tx-hold-multiplier 3
DXS-3600-32S(config)#
```

**Example** This example shows how to set the LLDP **message-tx-hold-multiplier** to the default value.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#no lldp message-tx-hold-multiplier
DXS-3600-32S(config)#
```

## 32-5 lldp tx-delay

This command is used to set the minimum time (delay-interval), any LLDP port will delay advertising successive LLDP advertisements due to a change in LLDP MIB content. The **tx-delay** defines the minimum interval between sending of LLDP messages due to constantly change of MIB content. Use the no form of this command to return to the default settings.

**lldp tx-delay** *seconds*  
**no lldp tx-delay**

### Parameters

<i>seconds</i>	Specifies a delay for sending successive LLDPDU on an interface. Valid values are from 1 to 8192 seconds.
----------------	---

<b>Default</b>	2 seconds.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	The LLDP message TX interval (transmit interval) must be greater than or equal to 4 times the TX delay interval).

**Example** This example shows how to set the TX delay interval to 8 seconds.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#lldp tx-delay 8
DXS-3600-32S(config)#
```

**Example** This example shows how to configure the TX delay interval to default value.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#no lldp tx-delay
DXS-3600-32S(config)#
```

## 32-6 lldp reinit-delay

This command is used to set the minimum time of the re-initialization delay interval on the switch. Use the no form of this command to return to the default settings.

**lldp reinit-delay** *seconds*  
**no lldp reinit-delay**

### Parameters

<i>seconds</i>	Specifies a delay for LLDP initialization on an interface. Valid values are from 1 to 10 seconds.
----------------	---

<b>Default</b>	2 seconds.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	A re-enabled LLDP physical interface will wait for reinit-delay after last disable command before reinitializing.

**Example** This example shows how to set the re-init delay interval to 5 seconds.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#lldp reinit-delay 5
DXS-3600-32S(config)#
```

**Example** This example shows how to set the re-init delay interval to default value.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#no lldp reinit-delay
DXS-3600-32S(config)#
```

## 32-7 lldp notification-interval

This command is used to set the the timer of the notification interval for sending notifications to configured SNMP trap receiver(s). Use the no form of this command to return to the default settings.

**lldp notification-interval** *seconds*  
**no lldp notification-interval**

### Parameters

<i>seconds</i>	Specifies the timer of the notification interval for sending notifications to configured SNMP trap receiver(s). Valid values are from 5 to 3600 seconds.
----------------	--

<b>Default</b>	5 seconds.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	Globally change the interval between successive LLDP change notifications generated by the switch.

**Example** This example shows how to set the notification interval to 10 seconds.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#lldp notification-interval 10
DXS-3600-32S(config)#
```

**Example** This example shows how to set the notification interval to default value.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#no lldp notification-interval
DXS-3600-32S(config)#
```



## 32-8 lldp notification

This command is used to enable the SNMP trap notification of LLDP data changes detected on advertisements received from neighbor devices on each physical interfaces. Use the no form of this command to return to the default settings.

**lldp notification**  
**no lldp notification**

<b>Parameters</b>	None.
<b>Default</b>	LLDP state of each physical interface is disabled.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	Enable or disable each physical interface for sending change notifications to configured SNMP trap receiver(s) if an LLDP data change is detected in an advertisement received on the physical interface from an LLDP neighbor. The definition of change includes new available information, information timeout, and information updates. The changed type includes any data update, insertion, or removal.

**Example** This example shows how to set the SNMP notification state to enable for a range of interfaces from interfaces 1-5.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface range tenGigabitEthernet 1/0/1-1/0/5
DXS-3600-32S(config-if-range)#lldp notification
DXS-3600-32S(config-if-range)#
```

**Example** This example shows how to set the SNMP notification state to default value for a range interface from interfaces 1-5.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface range tenGigabitEthernet 1/0/1-1/0/5
DXS-3600-32S(config-if-range)#no lldp notification
DXS-3600-32S(config-if-range)#
```

## 32-9 lldp management-address

This command is used to enable the physical interface that is specified for advertising indicated management address instance. Use the no form of this command to return to the default settings.

**lldp management-address {ipv4 ip-address}**  
**no lldp management-address {ipv4 ip-address}**

### Parameters

<b>ipv4 ip-address</b>	Specifies the IPv4 address.
------------------------	-----------------------------

<b>Default</b>	The LLDP management address entry of each physical interface is disabled.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 12

<b>Usage Guideline</b>	This command specifies whether the system's IP address needs to be advertised from the specified port.  For Layer 3 devices, each managed address can individually be specified. The management addresses that are added in the list will be advertised in the LLDP from the specified interface, associated with each management address. The interface for that management address will be also advertised in the if-index form.
------------------------	--

**Example** This example shows how to enable ports 1 to 2 for setting the management address entry (IPv4).

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface range tenGigabitEthernet 1/0/1-1/0/2
DXS-3600-32S(config-if-range)#lldp management-address ipv4 10.1.1.1
DXS-3600-32S(config-if-range)#
```

**Example** This example shows how to delete the management address entry (IPv4) from ports 1 to 2.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface range tenGigabitEthernet 1/0/1-1/0/2
DXS-3600-32S(config-if-range)#no lldp management-address ipv4 10.1.1.1
DXS-3600-32S(config-if-range)#
```

## 32-10 lldp transmit

This command is used to enable the LLDP advertise (transmit) capability. Use the no form of this command to return to the default settings.

**lldp transmit**  
**no lldp transmit**

<b>Parameters</b>	None.
<b>Default</b>	LLDP is enabled on all supported interfaces.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	None.

**Example** This example shows how to enable the transmit state.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#lldp transmit
DXS-3600-32S(config-if)#
```

**Example** This example shows how to disable the transmit state.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#no lldp transmit
DXS-3600-32S(config-if)#
```

## 32-11 lldp receive

This command is used to enable the LLDP receive capability. Use the no form of this command to return to the default settings.

**lldp receive**  
**no lldp receive**

<b>Parameters</b>	None.
<b>Default</b>	LLDP is enabled on all supported interfaces.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	None.

**Example** This example shows how to enable the receive state.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#lldp receive
DXS-3600-32S(config-if)#
```

**Example** This example shows how to disable the receive state.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#no lldp receive
DXS-3600-32S(config-if)#
```

## 32-12 lldp tlv-select

This command is used to specify which optional **type-length-value** settings (TLVs) in the 802.1AB basic management set will be transmitted and encapsulated in the LLDPDUs and sent to neighbor devices. To disable transmit the TLVs, use the no form of this command.

**lldp tlv-select [port-description | system-capabilities | system-description | system-name | mac-phy-cfg]**  
**no lldp tlv-select [port-description | system-capabilities | system-description | system-name | mac-phy-cfg]**

### Parameters

<b>port-description</b>	Specifies the Port Description TLV to send or receive. The Port Description TLV allows network management to advertise the IEEE 802 LAN station's port description.
<b>system-capabilities</b>	Specifies the System Capabilities TLV to send or receive. The System Capabilities field shall contain a bit-map of the capabilities that define the primary function(s) of the system.
<b>system-description</b>	Specifies the System Description TLV to send or receive. The System Description should include the full name and version identification of the system's hardware type, software operating system, and networking software.
<b>system-name</b>	Specifies the System Name TLV to send or receive. The System Name should be the system's fully qualified domain name.

<b>Default</b>	No 802.1AB basic management TLV is selected.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	This command specifies the optional TLVs advertisement settings. If the optional TLVs advertisement state enabled, they will be encapsulated in LLDPDU and sent to other devices.

**Example** This example shows how to enable System Name TLV advertisement.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#lldp tlv-select system-name
DXS-3600-32S(config-if)#
```

**Example** This example shows how to disable System Name TLV advertisement.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#no lldp tlv-select system-name
DXS-3600-32S(config-if)#
```

### 32-13 lldp dot1-tlv-select

This command is used to specify which optional **type-length-value** settings (TLVs) in the IEEE 802.1 Organizationally Specific TLV set will be transmitted and encapsulated in the LLDPDUs and sent to neighbor devices. To disable transmit the TLVs, use the no form of this command.

```
lldp dot1-tlv-select {port-vlan_id | port-and-protocol-vlan-id interface INTERFACE-ID [, | -] | vlan-name
interface INTERFACE-ID [, | -] | protocol-identify {EAPOL | lacp | gvrp | stp}}
no lldp dot1-tlv-select {port-vlan_id | port-and-protocol-vlan-id interface INTERFACE-ID [, | -] | vlan-name
interface INTERFACE-ID [, | -] | protocol-identify {EAPOL | lacp | gvrp | stp}}
```

#### Parameters

<b>port-vlan-id</b>	Specifies the Port VLAN ID TLV to send or receive. The Port VLAN ID TLV is an optional fixed length TLV that allows a VLAN bridge port to advertise the port's VLAN identifier (PVID) that will be associated with untagged or priority tagged frames.
<b>port-and-protocol-vlan-id</b>	Specifies the Port And Protocol VLAN ID TLV to send and receive. The Port and Protocol VLAN ID TLV is an optional TLV that allows a bridge port to advertise a port and protocol VLAN ID.
<b>vlan-name</b>	Specifies the VLAN Name TLV to send or receive. The VLAN Name TLV is an optional TLV that allows an IEEE 802.1Q-compatible IEEE 802 LAN station to advertise the assigned name of any VLAN with which it is configured.
<b>protocol-identify</b>	Specifies the Protocol Identity TLV to send or receive. The Protocol Identity TLV is an optional TLV that allows an IEEE 802 LAN station to advertise particular protocols that are accessible through the port. This TLV optional data type indicates whether the corresponding Local System's Protocol Identity instance will be transmitted on the port. The Protocol Identity TLV provides a way for stations to advertise protocols that are important to the operation of the network. Such as Spanning Tree Protocol, the Link Aggregation Control Protocol, and numerous vendor proprietary variations are responsible for maintaining the topology and connectivity of the network. If EAPOL, GVRP, STP (including MSTP), and LACP protocol identity is enabled on this port and it is enabled to be advertised, then this protocol identity will be advertised.
<b>interface <i>INTERFACE-ID</i></b>	Specifies the valid VLAN interface.
<b>,</b>	(Optional) Specifies a series of physical interfaces. No space before and after the comma.
<b>-</b>	(Optional) Specifies a range of physical interfaces. No space before and after the hyphen.

**Default** No IEEE 802.1 Organizationally specific TLV is selected.

**Command Mode** Interface Configuration Mode.

**Command Default Level** Level: 12

**Usage Guideline**

If the optional TLVs advertisement state enabled, they will be encapsulated in LLDPDU and sent to other devices.

The Protocol Identity TLV optional data type indicates whether the corresponding Local System's Protocol Identity instance will be transmitted on the port. The Protocol Identity TLV provides a way for stations to advertise protocols that are important to the operation of the network. Such as Spanning Tree Protocol, the Link Aggregation Control Protocol, and numerous vendor proprietary variations are responsible for maintaining the topology and connectivity of the network. If EAPOL, GVRP, STP (including MSTP), and LACP protocol identity is enabled on this port and it is enabled to be advertised, then this protocol identity will be advertised.

**Example**

This example shows how to enable **port-vlan-id** TLV advertisement.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#lldp dot1-tlv-select port-vlan-id
DXS-3600-32S(config-if)#
```

**Example**

This example shows how to disables **port-vlan-id** TLV advertisement.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#no lldp dot1-tlv-select port-vlan-id
DXS-3600-32S(config-if)#
```

**Example**

This example shows how to enable **port-and-protocol-vlan-id** TLV advertisement from VLAN 1-3.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#lldp dot1-tlv-select port-and-protocol-vlan-id interface 1-3
DXS-3600-32S(config-if)#
```

**Example**

This example shows how to disable **port-and-protocol-vlan-id** TLV advertisement from VLAN 1-3.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#no lldp dot1-tlv-select port-and-protocol-vlan-id interface 1-3
DXS-3600-32S(config-if)#
```

**Example**

This example shows how to enable **vlan-name** TLV advertisement from VLAN 1-3.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#lldp dot1-tlv-select vlan-name interface 1-3
DXS-3600-32S(config-if)#
```

**Example**

This example shows how to disable **vlan-name** TLV advertisement from VLAN 1-3.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#no lldp dot1-tlv-select vlan-name interface 1-3
DXS-3600-32S(config-if)#
```

**Example**

This example shows how to enable LACP Protocol Identity TLV advertisement.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#lldp dot1-tlv-select protocol-identify lacp
DXS-3600-32S(config-if)#
```

**Example** This example shows how to disable LACP Protocol Identity TLV advertisement.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#no lldp dot1-tlv-select protocol-identify lacp
DXS-3600-32S(config-if)#
```

## 32-14 lldp dot3-tlv-select

This command is used to specify which optional **type-length-value** setting (TLVs), in the IEEE 802.3 Organizationally Specific TLV set, will be transmitted and encapsulated in the LLDPDUs and sent to neighbor devices. To disable transmit the TLVs, use the no form of this command.

```
lldp dot3-tlv-select {mac-phy-config-status | link-aggregation | power-via-mdi | max-frame-size}
no lldp dot3-tlv-select {mac-phy-config-status | link-aggregation | power-via-mdi | max-frame-size}
```

### Parameters

<b>mac-phy-config-status</b>	Specifies the MAC/PHY Configuration/Status TLV to send or receive. The MAC/PHY Configuration/Status TLV is an optional TLV that identifies: <ul style="list-style-type: none"> <li>a) The duplex and bit-rate capability of the sending IEEE 802.3 LAN node that is connected to the physical medium.</li> <li>b) The current duplex and bit-rate settings of the sending IEEE 802.3 LAN node.</li> <li>c) Whether these settings are the result of auto-negotiation during link initiation or of manual set overrideaction.</li> </ul>
<b>link-aggregation</b>	Specifies the Link Aggregation TLV to send or receive. The Link Aggregation TLV indicates whether the link is capable of being aggregated, whether the link is currently in an aggregation, and if in an aggregation, the port identification of the aggregation.
<b>power-via-mdi</b>	Specifies the Power via MDI TLV to send or receive. Three IEEE 802.3 PMD implementations (10BASE-T, 100BASE-TX, and 1000BASE-T) allow power to be supplied over the link for connected non-powered systems. The Power Via MDI TLV allows network management to advertise and discover the MDI power support capabilities of the sending IEEE 802.3 LAN station.
<b>max-frame-size</b>	Specifies the Maximum Frame Size TLV to send or receive. The Maximum Frame Size TLV indicates the maximum frame size capability of the implemented MAC and PHY.

**Default** No IEEE 802.3 Organizationally Specific TLV is selected.

**Command Mode** Interface Configuration Mode.

**Command Default Level** Level: 12

**Usage Guideline** This command specifies the optional IEEE 802.3 Organizationally Specific TLVs advertisement settings. If the optional TLVs advertisement state enabled, they will be encapsulated in LLDPDU and sent to other devices

**Example** This example shows how to enable MAC/PHY Configuration/Status TLV advertisement.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#lldp dot3-tlv-select mac-phy-config-status
DXS-3600-32S(config-if)#
```

**Example** This example shows how to disable MAC/PHY Configuration/Status TLV advertisement.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#no lldp dot3-tlv-select mac-phy-config-status
DXS-3600-32S(config-if)#
```

### 32-15 show lldp

This command is used to display the switch's general LLDP configuration status.

**show lldp**

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	User EXEC Mode.
<b>Command Default Level</b>	Level: 3
<b>Usage Guideline</b>	Used to show LLDP system global configurations.

**Example** This example shows how to display the LLDP system global configuration status.

```
DXS-3600-32S#show lldp

LLDP System Information
  Chassis ID Subtype      : MAC Address
  Chassis ID              : 00-01-02-03-04-00
  System Name             :
  System Description      : TenGigabit Ethernet Switch
  System Capabilities     : Repeater, Bridge

LLDP Configurations
  LLDP Status             : Disabled
  LLDP Forward Status     : Disabled
  Message TX Interval     : 30
  Message TX Hold Multiplier: 4
  ReInit Delay            : 2
  TX Delay                : 2
  Notification Interval   : 5

DXS-3600-32S#
```

### 32-16 show lldp management-address

This command is used to display the LLDP management address information.

**show lldp management-address [ipv4 ip-address]**

#### Parameters

<b>ipv4 ip-address</b>	Specifies the IPv4 address used.
------------------------	----------------------------------

<b>Default</b>	None.
<b>Command Mode</b>	User EXEC Mode.
<b>Command Default Level</b>	Level: 3
<b>Usage Guideline</b>	This command is used to display the LLDP management address information.

**Example**

This example shows the output from the **show lldp management-address ipv4** command. To display a specific management address information.

```
DXS-3600-32S#show lldp management-address ipv4 192.168.254.10
```

```
The following is sample Address 1
```

```
-----
Subtype           : IPV4
Address           : 192.168.254.10
IF Type          : IfIndex
OID              : 1.3.6.1.4.1.171.10.127.1
Advertising Ports : 1/0/1-1/0/5
```

```
DXS-3600-32S#
```

**Example**

This example shows how to display all management address information.

```
DXS-3600-32S#show lldp management-address
```

```
Address 1 :
```

```
-----
Subtype           : IPv4
Address           : 192.168.254.10
IF Type          : IfIndex
OID              : 1.3.6.1.4.1.171.10.127.1
Advertising Ports :
```

```
Total Entries : 1
```

```
DXS-3600-32S#
```

**32-17 show lldp interface**

This command is used to display the LLDP of each physical interface configuration for advertisement options.

```
show lldp interface interface-id [, | -]
```

**Parameters**

<b>interface</b> <i>interface-id</i>	Specifies the valid physical interface.
,	(Optional) Specifies a series of physical interfaces. No space before and after the comma.
-	(Optional) Specifies a range of physical interfaces. No space before and after the hyphen.

**Default**

None.

**Command Mode**

User EXEC Mode.

**Command Default Level**

Level: 3

**Usage Guideline**

This command displays the LLDP of each physical interface configuration for advertisement options.



**Example**

This example shows the output from the **show lldp interface** command. To display a specific physical interface configuration.

```
DXS-3600-32S#show lldp interface tenGigabitEthernet 1/0/1

Interface ID           : 1/0/1
-----
Admin Status           : TX_and_RX
Notification Status    : Disabled
Advertised TLVs Option :
  Port Description      : Disabled
  System Name          : Disabled
  System Description    : Disabled
  System Capabilities   : Disabled
  Enabled Management Address
    (None)
  Port VLAN ID         : Disabled
  Enabled Port_and_Protocol_VLAN_ID
    (None)
  Enabled VLAN Name    :
    (None)
  Enabled Protocol_Identity
    (None)
  MAC/PHY Configuration/Status : Disabled
  Link Aggregation     : Disabled
  Maximum Frame Size   : Disabled

DXS-3600-32S#
```

**32-18 show lldp local interface**

This command is used to display the LLDP of each physical interface information currently available for populating outbound LLDP advertisements.

**show lldp local interface** *interface-id* [, | -] {**brief** | **normal** | **detail**}

**Parameters**

<b>interface</b> <i>interface-id</i>	Specifies the valid physical interface.
,	(Optional) Specifies a series of interfaces, or separate a range of interfaces from a previous range. No space before and after the comma.
-	(Optional) Specifies a range of interfaces. No space before and after the hyphen.
<b>brief</b>	Displays the information in brief mode.
<b>normal</b>	Displays the information in normal mode. This is the default display mode.
<b>detailed</b>	Displays the information in detailed mode.

**Default**

None.

**Command Mode**

User EXEC Mode.

**Command Default Level**

Level: 3

**Usage Guideline**

This command displays the LLDP of each physical interface information currently available for populating outbound LLDP advertisements.

**Example**

This example shows how to display outbound LLDP advertisements for an interface in detailed mode.

```

DXS-3600-32S#show lldp local interface tenGigabitEthernet 1/0/1 detail

Interface ID : 1/0/1
-----
Port ID Subtype           : MAC Address
Port ID                   : 00-01-02-03-05-00
Port Description          : D-Link DXS-3600-32S R1.10.023 P
                          port 1 on Unit 1
Port PVID                 : 1
Management Address Count : 1
  Subtype                 : IPv4
  Address                  : 0.0.0.0
  IF Type                  : IfIndex
  OID                     : 1.3.6.1.4.1.171.10.127.1

PPVID Entries Count      : 0
  (None)
VLAN Name Entries Count  : 1
  Entry 1 :
    VLAN ID               : 1
    VLAN Name              : default

Protocol Identity Entries Count : 0
  (None)
MAC/PHY Configuration/Status :
  Auto-Negotiation Support   : Supported
  Auto-Negotiation Enabled   : Not Enabled
  Auto-Negotiation Advertised Capability : 8000(hex)
  Auto-Negotiation Operational MAU Type : 0000(hex)

Link Aggregation         :
  Aggregation Capability     : Aggregated
  Aggregation Status         : Not Currently in Aggregation
  Aggregation Port ID       : 0

Maximum Frame Size       : 1536

DXS-3600-32S#

```

**Example**

This example shows how to display outbound LLDP advertisements for the interface in normal mode.

```

DXS-3600-32S#show lldp local interface tenGigabitEthernet 1/0/1 normal

Interface ID : 1/0/1
-----
Port ID Subtype           : MAC Address
Port ID                   : 00-01-02-03-05-00
Port Description          : D-Link DXS-3600-32S R1.10.023 P
                          port 1 on Unit 1
Port PVID                 : 1
Management Address Count : 1
PPVID Entries Count      : 0
VLAN Name Entries Count  : 1
Protocol Identity Entries Count : 0
MAC/PHY Configuration/Status : (See Detail)
Link Aggregation         : (See Detail)
Maximum Frame Size       : 1536

DXS-3600-32S#

```

**Example**

This example shows how to display outbound LLDP advertisements for an interface in brief mode.

```
DXS-3600-32S#show lldp local interface tenGigabitEthernet 1/0/1 brief
Interface ID : 1/0/1
-----
Port ID Subtype                : MAC Address
Port ID                        : 00-01-02-03-05-00
Port Description                : D-Link DXS-3600-32S R1.10.023 P
                                ort 1 on Unit 1
DXS-3600-32S#
```

**32-19 show lldp remote interface**

This command is used to display the each physical interface information currently learned from the neighbor.

```
show lldp remote interface interface-id [, | -] {brief | normal | detail}
```

**Parameters**

<b>interface</b> <i>interface-id</i>	Specifies the valid physical interface.
,	(Optional) Specifies a series of interfaces, or separate a range of interfaces from a previous range. No space before and after the comma.
-	(Optional) Specifies a range of interfaces. No space before and after the hyphen.
<b>brief</b>	Displays the information in brief mode.
<b>normal</b>	Displays the information in normal mode. This is the default display mode.
<b>detailed</b>	Displays the information in detailed mode.

**Default** None.

**Command Mode** User EXEC Mode.

**Command Default Level** Level: 3

**Usage Guideline** This command display the information learned from the neighbor parameters.

**Example**

This example shows how to display outbound LLDP advertisements for an interface in detailed mode.

```
DXS-3600-32S#show lldp remote interface tenGigabitEthernet 1/0/1 detail

Remote Entities Count : 1

Interface ID : 1/0/1
-----
Port ID Subtype           : MAC Address
Port ID                   : 00-02-03-04-05-06
Port Description          : D-Link DXS-3600-32S R1.10.023 P
                           port 1 on Unit 1
Port PVID                 : 1
Management Address Count : 1
    Subtype               : IPv4
    Address                : 0.0.0.0
    IF Type                : IfIndex
    OID                    : 1.3.6.1.4.1.171.10.127.1

PPVID Entries Count      : 0
    (None)
VLAN Name Entries Count  : 1
    Entry 1 :
        VLAN ID          : 1
        VLAN Name        : default

Protocol Identity Entries Count : 0
    (None)
MAC/PHY Configuration/Status :
    Auto-Negotiation Support      : Supported
    Auto-Negotiation Enabled      : Not Enabled
    Auto-Negotiation Advertised Capability : 8000(hex)
    Auto-Negotiation Operational MAU Type : 0000(hex)

Link Aggregation         :
    Aggregation Capability       : Aggregated
    Aggregation Status          : Not Currently in Aggregation
    Aggregation Port ID        : 0

Maximum Frame Size       : 1536

DXS-3600-32S#
```

**Example**

This example shows how to display outbound LLDP advertisements for an interface in normal mode.

```
DXS-3600-32S#show lldp remote interface tenGigabitEthernet 1/0/1 normal

Remote Entities Count : 1

Interface ID : 1/0/1
-----
Port ID Subtype           : MAC Address
Port ID                   : 00-02-03-04-05-06
Port Description          : D-Link DXS-3600-32S R1.10.023 P
                           port 1 on Unit 1
Port PVID                 : 1
Management Address Count : 1
PPVID Entries Count      : 0
VLAN Name Entries Count  : 1
Protocol Identity Entries Count : 0
MAC/PHY Configuration/Status : (See Detail)
Link Aggregation         : (See Detail)
Maximum Frame Size       : 1536

DXS-3600-32S#
```

**Example** This example shows how to display outbound LLDP advertisements for an interface in brief mode.

```
DXS-3600-32S#show lldp remote interface tenGigabitEthernet 1/0/1 brief

Remote Entities Count : 1

Interface ID : 1/0/1
-----
Port ID Subtype           : MAC Address
Port ID                   : 00-02-03-04-05-06
Port Description          : D-Link DXS-3600-32S R1.10.023 P
                          ort 1 on Unit 1

DXS-3600-32S#
```

### 32-20 show lldp statistic

This command is used to display the system global LLDP statistics information.

#### show lldp statistic

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	User EXEC Mode.
<b>Command Default Level</b>	Level: 3
<b>Usage Guideline</b>	The global LLDP statistics displays an overview of neighbor detection activity on the switch.

**Example** This example shows how to display global statistics information.

```
DXS-3600-32S#show lldp statistic

Last Change Time       : 6094
Number of Table Insert : 1
Number of Table Delete : 0
Number of Table Drop   : 0
Number of Table Ageout : 0

DXS-3600-32S#
```

### 32-21 show lldp statistic interface

This command is used to display each physical interface LLDP statistics information.

#### show lldp statistic interface *interface-id* [, | -]

#### Parameters

<b>interface</b> <i>interface-id</i>	Specifies the valid physical interface.
,	(Optional) Specifies a series of interfaces, or separate a range of interfaces from a previous range. No space before and after the comma.
-	(Optional) Specifies a range of interfaces. No space before and after the hyphen.

<b>Default</b>	None.
<b>Command Mode</b>	User EXEC Mode.

**Command Default Level**      Level: 3

**Usage Guideline**            The each physical interface LLDP statistics command displays each physical interface LLDP statistics

**Example**                      This example shows how to display statistics information of an interface.

```
DXS-3600-32S#show lldp statistic interface tenGigabitEthernet 1/0/1
```

```
Interface ID : 1/0/1
```

```
-----  
LLDPStatsTXPortFramesTotal            : 27  
LLDPStatsRXPortFramesDiscardedTotal  : 0  
LLDPStatsRXPortFramesErrors           : 0  
LLDPStatsRXPortFramesTotal            : 27  
LLDPStatsRXPortTLVsDiscardedTotal    : 0  
LLDPStatsRXPortTLVsUnrecognizedTotal  : 0  
LLDPStatsRXPortAgeoutsTotal           : 0
```

```
DXS-3600-32S#
```

# LLDP-DCBX Commands

## 33-1 lldp-dcbx run

This command is used to enable the Data Center Bridging eXchange Protocol (DCBX) on each physical interface. Use the **no** form of this command to return to the default settings.

```
lldp-dcbx run
no lldp-dcbx run
```

<b>Parameters</b>	None.
<b>Default</b>	Enabled.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 12.
<b>Usage Guideline</b>	This is the control for the LLDP DCBX function on each physical interface for exchanging LLDP DCBX TLVs.

**Example** This example shows how to enable the LLDP DCBX setting.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)# lldp-dcbx run
```

**Example** This example shows how to disable the LLDP DCBX setting.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)# no lldp-dcbx run
```

## 33-2 lldp-dcbx tlv-select

This command is used to specify which optional type-length-value settings (TLVs) in the LLDP DCBX management set will be transmitted and encapsulated in the LLDPDUs and sent to neighbor devices. To disable transmit the TLVs, use the **no** form of this command.

```
lldp-dcbx tlv-select [ets-configuration | ets-recommendation | pfc-configuration]
no lldp-dcbx tlv-select [ets-configuration | ets-recommendation | pfc-configuration]
```

### Parameters

<b>ets-configuration</b>	Specifies the ETS Configuration TLV to send or receive. This TLV allows network management to advertise the allocation of bandwidth to traffic classes of user's configuration.
<b>ets-recommendation</b>	Specifies the ETS Recommendation TLV to send or receive. This TLV allows network management to advertise the allocation of bandwidth to traffic classes of user's recommendation.
<b>pfc-configuration</b>	Specifies the Priority-based Flow Control Configuration TLV to send or receive. This TLV allows network management to advertise the PFC configuration.

<b>Default</b>	No LLDP DCBX management TLV is selected.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 12.
<b>Usage Guideline</b>	This command specifies the optional TLVs advertisement settings. If the optional TLVs advertisement state enabled, they will be encapsulated in LLDPDU and sent to other devices.

**Example** This example shows how to enable the ETS Configuration TLV advertisement.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)# lldp-dcbx tlv_select ets-configuration
```

**Example** This example shows how to disable the ETS Configuration TLV advertisement.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)# no lldp-dcbx tlv_select ets-configuration
```

### 33-3 show lldp-dcbx interface

This command is used to display the LLDP DCBX of each physical interface configuration for advertisement options.

```
show lldp-dcbx interface INTERFACE-ID
```

#### Parameters

<b>interface</b> <i>INTERFACE-ID</i>	Specifies the valid interfaces that are physical interfaces.
--------------------------------------	--

**Default** None.

**Command Mode** Privileged EXEC Mode.

**Command Default Level** Level: 3.

**Usage Guideline** This command displays the LLDP DCBX of each physical interface configuration for advertisement options.

**Example** This example shows how to display a specific physical interface configuration.

```
DXS-3600-32S#show lldp-dcbx interface tenGigabitEthernet 1/0/1

Port ID : 1/0/1
DCBX State : Enabled
LLDP-DCBX ETS Configuration TLV : Enabled
LLDP-DCBX ETS Recommendation TLV : Enabled
LLDP-DCBX Priority-based Flow Control Configuration TLV : Enabled

DXS-3600-32S#
```

### 33-4 show lldp-dcbx local interface

This command is used to display the each physical interface's information currently available for populating outbound LLDP DCBX advertisements.

```
show lldp-dcbx local interface INTERFACE-ID
```

#### Parameters

<b>interface</b> <i>INTERFACE-ID</i>	Specifies the valid interfaces that are physical interfaces.
--------------------------------------	--

**Default** None.

**Command Mode** Privileged EXEC Mode.

**Command Default Level** Level: 3.



**Usage Guideline**

This command displays each physical interface's information currently available for populating outbound LLDP DCBX advertisements.

**Example**

This example shows how to display a specific physical interface's local information.

```
DXS-3600-32S#show lldp-dcbx local interface tenGigabitEthernet 1/0/1
```

```
Port ID : 1/0/1
ETS Basic Configuration
  Credit Based Shaper Support : Disabled
  Traffic Classes Supported : 8
  Willing : Disabled

ETS Configuration Priority Assignment
priority0 : 0
priority1 : 4
priority2 : 0
priority3 : 0
priority4 : 5
priority5 : 0
priority6 : 2
priority7 : 0

ETS Configuration Traffic Class Bandwidth
TC0 : 0
TC1 : 50
TC2 : 0
TC3 : 0
TC4 : 50
TC5 : 0
TC6 : 0
TC7 : 0

ETS Configuration Traffic Selection Algorithm
TC0 : tsaVendorSpecific
TC1 : tsaVendorSpecific
TC2 : tsaVendorSpecific
TC3 : tsaVendorSpecific
TC4 : tsaVendorSpecific
TC5 : tsaVendorSpecific
TC6 : tsaVendorSpecific
TC7 : tsaVendorSpecific

ETS Recommendation Traffic Class Bandwidth
TC0 : 0
TC1 : 50
TC2 : 0
TC3 : 0
TC4 : 50
TC5 : 0
TC6 : 0
TC7 : 0

ETS Recommendation Traffic Selection Algorithm
TC0 : tsaVendorSpecific
TC1 : tsaVendorSpecific
TC2 : tsaVendorSpecific
TC3 : tsaVendorSpecific
TC4 : tsaVendorSpecific
TC5 : tsaVendorSpecific
TC6 : tsaVendorSpecific
TC7 : tsaVendorSpecific
```

```
PFC Basic Configuration
Willing : Enabled
MBC : Enabled
PFC capability : Enabled
```

```
PFC Enable
priority0 : Disabled
priority1 : Enabled
priority2 : Disabled
priority3 : Enabled
priority4 : Disabled
priority5 : Enabled
priority6 : Disabled
priority7 : Enabled
```

```
DXS-3600-32S#
```

### 33-5 show lldp-dcbx remote interface

This command is used to display the physical interface's information currently learned from the neighbor.

```
show lldp-dcbx remote interface INTERFACE-ID
```

#### Parameters

<b>interface</b> <i>INTERFACE-ID</i>	Specifies the valid interfaces that are physical interfaces.
--------------------------------------	--

<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 3.
<b>Usage Guideline</b>	This command display the information learned from the neighbor parameters.

**Example** This example shows how to display a specific physical interface's remote information.

```
DXS-3600-32S#show lldp-dcbx remote interface tenGigabitEthernet 1/0/1
```

```
Port ID : 1/0/1
Entity 1
Chassis ID Subtype : MAC Address
Chassis ID : 00-01-02-03-04-00
Port ID Subtype : Net address
Port ID : 172.18.10.11
```

```
ETS Basic Configuration
Credit Based Shaper Support : Enabled
Traffic Classes Supported : Enabled
Willing : Disabled
```

```
ETS Configuration Priority Assignment
```

```
priority0 : 0
priority1 : 4
priority2 : 0
priority3 : 0
priority4 : 5
priority5 : 0
priority6 : 2
priority7 : 0
```

## ETS Configuration Traffic Class Bandwidth

```
TC0 : 0
TC1 : 50
TC2 : 0
TC3 : 0
TC4 : 50
TC5 : 0
TC6 : 0
TC7 : 0
```

## ETS Configuration Traffic Selection Algorithm

```
TC0 : tsaVendorSpecific
TC1 : tsaVendorSpecific
TC2 : tsaVendorSpecific
TC3 : tsaVendorSpecific
TC4 : tsaVendorSpecific
TC5 : tsaVendorSpecific
TC6 : tsaVendorSpecific
TC7 : tsaVendorSpecific
```

## ETS Recommendation Traffic Class Bandwidth

```
TC0 : 0
TC1 : 50
TC2 : 0
TC3 : 0
TC4 : 50
TC5 : 0
TC6 : 0
TC7 : 0
```

## ETS Recommendation Traffic Selection Algorithm

```
TC0 : tsaVendorSpecific
TC1 : tsaVendorSpecific
TC2 : tsaVendorSpecific
TC3 : tsaVendorSpecific
TC4 : tsaVendorSpecific
TC5 : tsaVendorSpecific
TC6 : tsaVendorSpecific
TC7 : tsaVendorSpecific
```

## PFC Basic Configuration

```
Willing : Enabled
MBC : Enabled
PFC capability : Enabled
```

## PFC Enable

```
priority0 : Disabled
priority1 : Enabled
priority2 : Disabled
priority3 : Enabled
priority4 : Disabled
priority5 : Enabled
priority6 : Disabled
priority7 : Enabled
```

# LLDP-MED Commands

## 34-1 lldp-med fast-start-repeat-count

This command is used to set the fast start repeat count on the switch. Use the no form of this command to return to the default settings.

```
lldp-med fast-start-repeat-count value
no lldp-med fast-start-repeat-count
```

### Parameters

<i>value</i>	Specifies the repeat count range from 1 to 10.
--------------	--

<b>Default</b>	4 times.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	This command is used to configure the fast start repeat count. When an LLDP-MED Capabilities TLV is detected for an MSAP identifier not associated with an existing LLDP remote system MIB, then the application layer shall start fast start mechanism and shall set the 'medFastStart' timer to 'medFastStartRepeatCount' times 1.

**Example** This example shows how to set LLDP MED fast start repeat count.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#lldp-med fast-start-repeat-count 10
DXS-3600-32S(config)#
```

## 34-2 lldp-med notification-topo-change

This command is used to enable the LLDP MED topology change notification. To disable LLDP MED topology change notification, use the no form of this command.

```
lldp-med notification-topo-change
no lldp-med notification-topo-change
```

<b>Parameters</b>	None.
<b>Default</b>	Notification topology state is disabled.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	Enable or disable each port for sending topology change notification to configured SNMP trap receiver(s) if an endpoint device is removed or moved to another port.

**Example** This example shows how to set LLDP MED topology change notification.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#lldp-med notification-topo-change
DXS-3600-32S(config-if)#
```

## 34-3 lldp-med tlv-select

This command is used to specify which optional LLDP-MED TLV will be transmitted and encapsulated in the LLDPDUs and sent to neighbor devices. To disable transmit the TLVs, use the no form of this command.

**lldp-med tlv-select** {inventory-management | location | network-policy | power-management | capabilities}  
**no lldp-med tlv-select** {inventory-management | location | network-policy | power-management | capabilities}

## Parameters

<b>inventory-management</b>	This TLV type indicates that the LLDP agent should transmit 'LLDP-MED inventory TLV'.
<b>location</b>	This TLV type indicates that the LLDP agent should transmit 'LLDP-MED location policy TLV'.
<b>network-policy</b>	This TLV type indicates that the LLDP agent should transmit 'LLDP-MED network policy TLV'.
<b>power-management</b>	This TLV type indicates that the LLDP agent should transmit 'LLDP-MED extended Power via MDI TLV' if local device is PSE device or PD device.
<b>capabilities</b>	This TLV type indicates that the LLDP agent should transmit 'LLDP-MED capabilities TLV'. If user wants to transmit LLDP-MED PDU, this TLV type should be enabled. Otherwise, the interface cannot transmit LLDP-MED PDU

**Default** No LLDP-MED TLV is selected.

**Command Mode** Interface Configuration Mode.

**Command Default Level** Level: 12

**Usage Guideline** This command is used to enable or disable transmit LLDP-MED TLVs. Setting non-supported capability shall have no functional effect and will result in an inconsistent value error returned to the management application. It's effectively disables LLDP-MED on a per-port basis by disabling transmission of capabilities TLV. In this case the remote table's objects in the LLDP-MED MIB corresponding to the respective port will not be populated.

**Example** This example shows how to set LLDP MED inventory TLVs.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#lldp-med tlv-select inventory-management
DXS-3600-32S(config-if)#
```

**Example** This example shows how to enable LLDP-MED to transmit LLDP-MEDPDU.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#lldp-med tlv-select capabilities
DXS-3600-32S(config-if)#
```

## 34-4 show lldp-med

This command is used to display the switch's global LLDP-MED configuration status.

**show lldp-med**

**Parameters** None.

**Default** None.

**Command Mode** User EXEC Mode.

**Command Default Level** Level: 3

**Usage Guideline** This command displays the switch's general LLDP-MED configuration status.

**Example** This example shows how to display the LLDP-MED system global configuration status.

```
DXS-3600-32S#show lldp-med

LLDP-MED System Information:
  Device Class           : Network Connectivity Device
  Hardware Revision      :
  Firmware Revision     : 1.10.007
  Software Revision      : 1.10.023
  Serial Number         : D1234567890
  Manufacturer Name     : D-Link
  Model Name            : DXS-3600-32S TenGigabit Ethernet
  Asset ID              :

LLDP-MED Configuration:
  Fast Start Repeat Count : 10

LLDP-MED Log State:Disabled

DXS-3600-32S#
```

### 34-5 show lldp-med interface

This command is used to display the LLDP-MED per port configuration for advertisement options.

```
show lldp-med interface interface-id [, | -]
```

#### Parameters

<b>interface</b> <i>interface-id</i>	Specifies the valid physical interface.
,	(Optional) Specifies a series of physical interfaces. No space before and after the comma.
-	(Optional) Specifies a range of physical interfaces. No space before and after the hyphen.

**Default** None.

**Command Mode** User EXEC Mode.

**Command Default Level** Level: 3

**Usage Guideline** This command displays the LLDP-MED each interface configuration for advertisement options.

**Example** This example shows how to display a specific physical interface configuration.

```
DXS-3600-32S#show lldp-med interface tenGigabitEthernet 1/0/1

Interface ID           : 1/0/1
-----
Topology Change Notification Status :Enabled
LLDP-MED Capabilities TLV           :Enabled
LLDP-MED Inventory TLV              :Enabled
DXS-3600-32S#
```

### 34-6 show lldp-med local

This command is used to display the each physical interface information currently available for populating outbound LLDP-MED advertisements.

**show lldp-med local interface** *interface-id* [, | -] [**capabilities** | **network\_policy** | **location** | **extended\_power**]

### Parameters

<b>interface</b> <i>interface-id</i>	Specifies the valid physical interface.
,	(Optional) Specifies a series of physical interfaces. No space before and after the comma.
-	(Optional) Specifies a range of physical interfaces. No space before and after the hyphen.
<b>capabilities</b>	Displays the LLDP-MED capabilities.
<b>network_policy</b>	Displays the network policy.
<b>location</b>	Displays the location information.
<b>extended_power</b>	Displays the power information.

**Default** None.

**Command Mode** User EXEC Mode.

**Command Default Level** Level: 3

**Usage Guideline** This command displays the each physical interface information currently available for populating outbound LLDP-MED advertisements.

**Example** This example shows how to displays the each physical interface information currently available for populating outbound LLDP-MED advertisements.

```
DXS-3600-32S#show lldp-med local interface tenGigabitEthernet 1/0/1

Interface ID           : 1/0/1
-----
LLDP-MED Capabilities Support:
  Capabilities           :Support
  Network Policy         :Not Support
  Location Identification :Not Support
  Extended Power Via MDI PSE :Not Support
  Extended Power Via MDI PD :Not Support
  Inventory              :Support
DXS-3600-32S#
```

## 34-7 show lldp-med remote

This command is used to display each physical interface's information, currently learned from the neighbor.

**show lldp-med remote interface** *interface-id* [, | -] [**capabilities** | **network\_policy** | **location** | **extended\_power**]

### Parameters

<b>interface</b> <i>interface-id</i>	Specifies the valid physical interface.
,	(Optional) Specifies a series of physical interfaces. No space before and after the comma.
-	(Optional) Specifies a range of physical interfaces. No space before and after the hyphen.
<b>capabilities</b>	Displays the LLDP-MED capabilities.
<b>network_policy</b>	Displays the network policy.
<b>location</b>	Displays the location information.
<b>extended_power</b>	Displays the power information.

<b>Default</b>	None.
<b>Command Mode</b>	User EXEC Mode.
<b>Command Default Level</b>	Level: 3
<b>Usage Guideline</b>	Used to display the LLDP-MED information learned from the neighbor.

**Example** This example shows how to display the LLDP-MED information learned from the neighbor.

```
DXS-3600-32S#show lldp-med remote interface tenGigabitEthernet 1/0/1

Interface ID : 1/0/1
-----
Remote Entities Count : 0
    (None)
DXS-3600-32S#
```



# Memory Commands

## 35-1 show memory

This command is used to display the current memory usage information.

**show memory**

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	Use this command to view the current system memory state and usage information, including the memory information about DRAM and FLASH.

**Example** This example shows the current memory usage information.

```
DXS-3600-32S#show memory
```

```
DRAM Utilization :
```

```
  Total DRAM      : 524288    KB  
  Used DRAM       : 309220    KB  
  Utilization     : 58 %
```

```
Flash Memory Utilization :
```

```
  Total Flash     : 126002    KB  
  Used Flash      : 5271      KB  
  Utilization     : 4 %
```

```
DXS-3600-32S#
```

# Mirror Commands

## 36-1 monitor session

This command is used to monitor a session, create a mirror session, and to specify the destination port or source port. The no form of the command is used to delete the whole session or delete the source port, destination port, acl mirror separately.

```
monitor session session_number {source interface {port-group GROUP-ID | INTERFACE-ID [,|-]} [{both | rx | tx}] |  
destination interface {port-group GROUP-ID | INTERFACE-ID [,|-]} [acl name}]
```

```
no monitor session session_number [{source interface {port-group GROUP-ID | INTERFACE-ID [,|-]} [,-]  
[{both | rx | tx}] |  
destination interface {port-group GROUP-ID | INTERFACE-ID [,|-]} [acl name}]
```

### Parameters

<i>session_number</i>	Specifies the mirror session number.
<b>source</b>	Specifies the source port interface.
<b>interface</b> <i>INTERFACE-ID</i>	Specifies the physical interface ID used.
<b>port-group</b> <i>GROUP-ID</i>	Specifies the port group ID.
,	(Optional) Specifies a series of physical interfaces. No space before and after the comma.
-	(Optional) Specifies a range of physical interfaces. No space before and after the hyphen.
<b>both</b>	Specifies to monitor the inbound and outbound frames simultaneously.
<b>rx</b>	Specifies to monitor only the inbound frames.
<b>tx</b>	Specifies to monitor only the outbound frames.
<b>destination</b>	Specifies the destination port, it can be one physical or a trunk member interface.
<b>interface</b> <i>interface-id</i>	Specifies the physical interface ID used.
<b>acl</b>	Specifies the flow-based mirror. Only the ingress mirror is supported.
<i>name</i>	Specifies the ACL name for the monitor session. If the ACL does not exist, then the flow-based mirror cannot be set.

**Default** No monitoring session.

**Command Mode** Global Configuration Mode.

**Command Default Level** Level: 12

**Usage Guideline** The command can be used to mirror all the packets received or sent at a port to another port for analysis. The valid interfaces for this command are physical port or trunk member port.

The user can configure one or multiple mirror session, the mirror function does not affect the normal operation of the switch. You can configure a mirror session on disabled ports. However, the mirror does not work unless you enable the source and destination ports.

A port can not be configured as the source port and the destination port at the same time, the source and destination port can reside in the same VLAN or different VLANs. For each mirror session, source interface can be many ports, but destination interface can be a physical port or logical port.

Number of mirror ports are 4 MTPs, MTPs port can be same or different. For a mirrored packet, do no VLAN membership check, MTP port need not be member of all VLANs. An MTP port can be a logical port, if for trunk.

If the source ports overlapped with the destination trunk member ports while configure mirror session, the switch can be configured successfully and that the mirror cannot be worked well.

The flow-based mirror also can be supported, but only is ingress mirror. It will not affect mirror function and can be worked well simultaneously.

You will remove the whole session if you do not specify the source port or the destination port.

Use **show monitor** to display mirror session configurations.

## Example

This example shows how to create mirror sessions:

**Session 1:** The source ports are 1-3, destination port is 9, RX and TX traffic are mirrored, the name of the ACL mirror is 'mac\_based\_mirr'.

**Session 2:** The source port is 5, destination port is 21 and it is a member of trunk group 1, only RX traffic are mirrored.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#monitor session 1 source interface tenGigabitEthernet 1/0/1-1/0/3
DXS-3600-32S(config)#monitor session 1 destination interface tenGigabitEthernet 1/0/9 acl
mac_based_mirr
DXS-3600-32S(config)#monitor session 2 destination interface tenGigabitEthernet 1/0/21
DXS-3600-32S(config)#monitor session 2 source interface tenGigabitEthernet 1/0/5 rx
DXS-3600-32S(config)#
```

## Example

This example shows how to remove mirror sessions:

**Session 1:** Remove RX mode of mirrored traffic for the source port 3.

**Session 2:** Remove the whole mirror session 2.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#no monitor session 1 source interface tenGigabitEthernet 1/0/3 rx
DXS-3600-32S(config)#no monitor session 2
DXS-3600-32S(config)#
```

## 36-2 no monitor session all

This command is used to delete all the monitor sessions directly.

**no monitor session all**

<b>Parameters</b>	None.
<b>Default</b>	All the monitor sessions are removed.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	The command can be used to remove all the mirror sessions, and include bonded <b>flow_based</b> mirrors.

## Example

This example shows how to remove all the mirror sessions.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#no monitor session all
DXS-3600-32S(config)#
```

### 36-3 show monitor

This command is used to display monitor sessions.

```
show monitor [session session_number]
```

#### Parameters

<i>session_number</i>	Specifies the mirror session number to display.
-----------------------	---

<b>Default</b>	All the monitor sessions are displayed.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 3
<b>Usage Guideline</b>	The command can be used to display mirror sessions. All monitor sessions are displayed if you do not specify the session number.

**Example** This example shows how to display all the mirror sessions.

```
DXS-3600-32S#show monitor
```

```

sess-num: 1

src-intf:

TenGigabitEthernet1/0/1      frame-type  Both
TenGigabitEthernet1/0/2      frame-type  Both
TenGigabitEthernet1/0/3      frame-type  Both

dest-intf:

TenGigabitEthernet1/0/9

acl-name: mac_based_mirr

sess-num: 2

src-intf:

TenGigabitEthernet1/0/5      frame-type  RX

dest-intf:

TenGigabitEthernet1/0/21 / port-group 1

acl-name:

```

```
DXS-3600-32S#
```

Display Parameters	Description
<b>sess-num</b>	Mirror session number, the range is from 1 to 4.
<b>src-intf</b>	The source port list of mirror session.
<b>frame-type</b>	The mode of mirrored traffic, such as RX, TX and both.
<b>dest-intf</b>	The destination port of mirror session. If it is a trunk member, the trunk group id will be also displayed.
<b>acl-name</b>	The ACL name of flow_based mirror.



# Multicast Filter Mode Commands

## 37-1 multicast filtering-mode

This command is used to configure multicast packets filtering mode for VLANs. To restore the default configuration, use **no** form of this command.

```
multicast filtering-mode {forward-all | forward-unregistered | filter-unregistered}
no multicast filtering-mode
```

### Parameters

<b>forward-all</b>	Specifies to flood all multicast packets based on the VLAN domain.
<b>forward-unregistered</b>	Specifies to forward the registered multicast packets based on the forwarding table, and flood all un-registered multicast packets based on the VLAN domain.
<b>filter-unregistered</b>	Specifies to forward the registered packets based on the forwarding table, and filter all un-registered multicast packets.

<b>Default</b>	The default selection is <b>forward-unregistered</b> .
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	<p>When a multicast packet arrives, the switch will look up forwarding table for this packet. If the lookup failed, the destination group is an unregistered group.</p> <p>A forwarding entry lookup failed multicast packet is called unregistered packet, which will be forwarded according to the multicast filter mode setting on the VLAN, which might be VLAN flooding or dropping.</p> <p>To verify your configuration, use the command <b>show multicast filtering-mode</b>.</p>

**Example** This example shows how to configure the filter mode for VLAN 1 to filter-unregistered mode.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#vlan 1
DXS-3600-32S(config-vlan)#multicast filtering-mode filter-unregistered
DXS-3600-32S(config-vlan)#
```

**Example** This example shows how to set the filter mode for VLAN 2 back to default.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#vlan 1
DXS-3600-32S(config-vlan)#no multicast filtering-mode
DXS-3600-32S(config-vlan)#
```

## 37-2 show multicast filtering-mode

This command is used to display multicast information for VLANs.

```
show multicast filtering-mode [vlan <VLAN-ID>]
```

### Parameters

<b>VLAN-ID</b>	Specifies the VLAN ID to be displayed.
----------------	--

**Default** None.

<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 3
<b>Usage Guideline</b>	This command is used to display information about the multicast filter mode configuration.

**Example** This example shows how to display multicast filter mode information for all VLANs.

```
DXS-3600-32S#show multicast filtering-mode
```

VLAN ID/VLAN Name	Multicast Filter Mode
1 /default	forward-unregistered
2 /VLAN002	forward-all
3 /VLAN003	filter-unregistered

```
DXS-3600-32S#
```

**Example** This example shows how to display multicast filter information for VLAN 1.

```
DXS-3600-32S#show multicast filtering-mode vlan 1
```

VLAN ID/VLAN Name	Multicast Filter Mode
1 /default	forward-unregistered

```
DXS-3600-32S#
```

# Multiprotocol Label Switching (MPLS) Commands

## 38-1 mpls ip (global configuration)

This command is used to enable the MPLS forward globally. Use **no mpls ip** command in global configuration mode to disable MPLS forward globally.

```
mpls ip
no mpls ip
```

<b>Parameters</b>	None.
<b>Default</b>	Disabled.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 3.
<b>Usage Guideline</b>	This command enables MPLS function in the global level.

**Example** This example shows how to enable MPLS globally.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)# mpls ip
DXS-3600-32S(config)#
```

## 38-2 snmp-server enable traps mpls lsp

This command is used to enable MPLS LSP trap state. Use the **no** form of this command to disable MPLS LSP trap state.

```
snmp-server enable traps mpls lsp
no snmp-server enable traps mpls lsp
```

<b>Parameters</b>	None.
<b>Default</b>	Disabled.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 3.
<b>Usage Guideline</b>	This command used to configure the MPLS LSP trap state. If the state is enabled, a trap is sent out when a LSP's operation status changes to up or down.

**Example** This example shows how to enable MPLS LSP trap state.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#snmp-server enable traps mpls lsp
DXS-3600-32S(config)#
```

## 38-3 mpls ip (interface configuration)

This command is used to enable the MPLS forward on this interface. Use the **no mpls ip** command in interface configuration mode to disable the MPLS forward on this interface.

```
mpls ip
no mpls ip
```

<b>Parameters</b>	None.
<b>Default</b>	Disabled.
<b>Command Mode</b>	Interface Configuration Mode.



**Command Default Level** Level: 12.

**Usage Guideline** This command only can be applied on Layer 3 VLAN interface. Use the **mpls ip** command in the interface configuration mode to enable the MPLS forward on this interface. For forwarding MPLS labeled packets through an interface, MPLS should be enabled globally and enabled on the interface.

**Example** This example shows how to enable MPLS on interface VLAN 1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface vlan 1
DXS-3600-32S(config-if)#mpls ip
DXS-3600-32S(config-if)#
```

## 38-4 mpls static ftn

This command is used to add a static FTN entry. Use **no mpls static ftn** command to remove the previous configured static FTN.

```
mpls static ftn NETWORK-PREFIX/PREFIX-LENGTH out-label LABEL-VALUE nexthop IP-ADDRESS
no mpls static ftn {NETWORK-PREFIX/PREFIX-LENGTH | all}
```

### Parameters

<i>NETWORK-PREFIX/ PREFIX-LENGTH</i>	Specifies the FEC of the static FTN.
<b>out-label</b> LABEL-VALUE	Specifies the out label of this FEC.
<b>nexthop</b> IP-ADDRESS	Specifies the next-hop IP address of this FEC.

**Default** No static FTN.

**Command Mode** Global Configuration Mode.

**Command Default Level** Level: 3.

**Usage Guideline** Use this command to add a static FTN entry. At ingress LER (Label Edge Router), the incoming IP packets that are classified to the FEC (Forwarding Equivalence Class) will be pushed the MPLS label and forwarded to next hop according the FTN (FEC-to-NHLFE).

**Example** This example shows how to configure a static FTN that push label 100 for prefix FEC 172.18.10.0/24.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#mpls static ftn 172.18.10.0/24 out-label 100 nexthop 110.1.1.2
DXS-3600-32S(config)#
```

## 38-5 mpls static l2vc-ftn

This command is used to configure one static VC FTN item. Use the **no** form of this command to delete the configured FTN item.

```
mpls static l2vc-ftn VC-ID IP-ADDRESS out-label LABEL-VALUE
no mpls static l2vc-ftn VC-ID IP-ADDRESS
```

### Parameters

<i>VC-ID</i>	Specifies the PW (pseudo-wire) service instance ID. The range is 1-4294967295.
<i>IP-ADDRESS</i>	Specifies the peer LSR ID.

---

<b>out-label</b> LABEL-VALUE	Specifies the outgoing VC label.
------------------------------	----------------------------------

---

<b>Default</b>	No static VC FTN.
----------------	-------------------

<b>Command Mode</b>	Global Configuration Mode.
---------------------	----------------------------

<b>Command Default Level</b>	Level: 3.
------------------------------	-----------

<b>Usage Guideline</b>	This command is used to create one FTN for the VC instance. Once the packets are received from the associated AC, the VC label will be pushed according the configured value. The tunnel label will be picked from the LSP that reaches the peer PE.
------------------------	--

<b>Example</b>	This example shows how to configure one static VC FTN item.
----------------	---

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)# mpls static l2vc-ftn 2 10.1.1.1 out-label 100
DXS-3600-32S(config)#
```

---

## 38-6 mpls static ilm

This command is used to add a static ILM entry. Use **no mpls static ilm** command to remove the previous configured ILM.

For IP prefix FEC:

**mpls static ilm in-label** LABEL-VALUE **forward-action** {**swap-label** LABEL-VALUE | **pop**} **nexthop** IP-ADDRESS **fec** NETWORK-PREFIX/PREFIX-LENGTH

For VC FEC:

**mpls static ilm in-label** LABEL-VALUE **forward-action** **pop-l2vc-destport** INTERFACE-ID **fec** VC-ID IP-ADDRESS

**no mpls static ilm** {**in-label** LABEL-VALUE | **all**}

### Parameters

<b>in-label</b> LABEL-VALUE	Specifies the incoming label value of the ILM.
<b>forward-action</b>	Specify the forward behavior of this ILM entry. <b>swap-label:</b> Swap the top label in the label stack and forward the MPLS packets to next-hop <b>pop:</b> Pop the top label in the label stack and forward the MPLS packets to next-hop <b>pop-l2vc-destport:</b> Pop all labels and forward the packets to outgoing interface
<b>swap-label</b> LABEL-VALUE	Specifies the swap-label forward behavior. It specifies the swapped outgoing label value.
<b>nexthop</b> IP-ADDRESS	Specifies the next-hop IP address of this FEC.
<b>fec</b> NETWORK-PREFIX/PREFIX-LENGTH	Specifies the IP prefix FEC that is associated with the ILM.
<b>pop-l2vc-destport</b> INTERFACE-ID	Specifies to pop all labels and forward the packets to the specified outgoing interface. The interface can be an Ethernet port or a VLAN interface.
<b>fec</b> VC-ID IP-ADDRESS	Specifies the VC ID and peer LSR ID. The range of VC ID is 1-4294967295.

---

<b>Default</b>	No static ILM.
----------------	----------------

<b>Command Mode</b>	Global Configuration Mode.
---------------------	----------------------------

<b>Command Default Level</b>	Level: 3.
------------------------------	-----------

**Usage Guideline** Use this command to add a static ILM entry. At LSR (Label Switching Router), the incoming MPLS packets that are matched the incoming label will be processed according configured ILM action. The label operation is either swapping the incoming top label to configured outgoing label or popping the top label. And then forward the packets to next-hop.

**Example** This example shows how to configure a static ILM that swaps label from 100 to 200 for prefix FEC 172.18.10.0/24 at transit LSR.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)# mpls static ilm in-label 100 forward-action swap-label 200 nexthop
120.1.1.3 fec 172.18.10.0/24
DXS-3600-32S(config)#
```

**Example** This example shows how to configure a static ILM that pop label from 100 for prefix FEC 172.18.10.0/24 at egress LER.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)# mpls static ilm in-label 100 forward-action pop nexthop 120.1.1.3 fec
172.18.10.0/24
DXS-3600-32S(config)#
```

**Example** This example shows how to configure a static ILM for VC 11 peer 210.1.1.1. The terminated packets will be forwarded to port 1/0/5.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)# mpls static ilm in-label 200 forward-action pop-l2vc-destport 1/0/5 vc 11
210.1.1.1
DXS-3600-32S(config)#
```

## 38-7 mpls label protocol ldp (global configuration)

This command is used to enable LDP globally. Use **no mpls label protocol** in global configuration mode to disable LDP globally.

**mpls label protocol ldp**  
**no mpls label protocol**

<b>Parameters</b>	None.
<b>Default</b>	Disabled.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 3.
<b>Usage Guideline</b>	This command is used to enable the LDP function globally and enter LDP configuration mode. LDP is running when MPLS is globally enabled too.

**Example** This example shows how to enable LDP globally.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)# mpls label protocol ldp
DXS-3600-32S(config-mpls-router)#
```

## 38-8 snmp-server enable traps mpls ldp

This command is used to enable the LDP trap state. Use the **no** form of this command to disable LDP trap state.

**snmp-server enable traps mpls ldp**  
**no snmp-server enable traps mpls ldp**

<b>Parameters</b>	None.
<b>Default</b>	Disabled.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 12.
<b>Usage Guideline</b>	This command used to configure the LDP trap state.

**Example** This example shows how to enable the LDP trap state.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)# snmp-server enable traps mpls ldp
DXS-3600-32S(config)#
```

### 38-9 mpls label protocol ldp (interface configuration)

This command is used to enable LDP on this interface. Use the **no mpls label protocol** command in interface configuration mode to disable LDP on this interface.

**mpls label protocol ldp**  
**no mpls label protocol**

<b>Parameters</b>	None.
<b>Default</b>	Disabled.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 15.
<b>Usage Guideline</b>	This command only can be applied on a Layer 3 VLAN interface. Use the <b>mpls label protocol ldp</b> command in the interface configuration mode to enable LDP on this interface.
	LDP is running on an interface only when: <ul style="list-style-type: none"> <li>• MPLS and LDP are globally enabled.</li> <li>• MPLS and LDP are enabled on this interface.</li> </ul>

**Example** This example shows how to enable LDP on interface VLAN 10.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)# interface vlan 10
DXS-3600-32S(config-if)# mpls label protocol ldp
DXS-3600-32S(config-if)#
```

### 38-10 mpls ldp hello-holdtime

This command is used to configure the LDP link hello hold-time for the interface. Use the **no** form of this command to restore the default value.

**mpls ldp hello-holdtime SECONDS**  
**no mpls ldp hello-holdtime**

#### Parameters

<b>SECONDS</b>	Specifies the link hello hold-time in seconds. The range is 5-65535 seconds.
----------------	--

<b>Default</b>	15 seconds.
<b>Command Mode</b>	Interface Configuration Mode.

<b>Command Default Level</b>	Level: 15.
<b>Usage Guideline</b>	This command only can be applied on a Layer 3 VLAN interface. LDP sends link hello message periodically to discovery its directly connected neighbors. LDP maintains a hold timer for each discovered neighbor. If the timer expires without receipt of hello from the neighbor, LDP concludes that the neighbor has failed.
<b>Example</b>	This example shows how to configure the hello hold time of the VLAN 10 interface to 30 seconds.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)# interface vlan 10
DXS-3600-32S(config-if)# mpls ldp hello-holdtime 30
DXS-3600-32S(config-if)#
```

### 38-11 mpls ldp hello-interval

This command is used to configure the LDP link hello interval time for the interface. Use the **no** form of this command to restore the default value.

```
mpls ldp hello- interval SECONDS
no mpls ldp hello- interval
```

#### Parameters

<i>SECONDS</i>	Specifies the link hello interval time in seconds. The range is 1-65535 seconds.
----------------	--

<b>Default</b>	5 seconds.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 15.
<b>Usage Guideline</b>	This command only can be applied on a Layer 3 VLAN interface. Use the <b>mpls ldp hello-interval</b> command to configure the LDP link hello interval time for the interface. LDP sends link hello message according the hello interval period. The hello interval time on the interface shall less than its hello <b>hold-time</b> . It is recommend to set the hello interval time less than one third of the hello <b>hold-time</b> .

<b>Example</b>	This example shows how to configure the hello interval time of the VLAN 10 interface to 10 seconds.
----------------	---

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)# interface vlan 10
DXS-3600-32S(config-if)# mpls ldp hello-interval 10
DXS-3600-32S(config-if)#
```

### 38-12 mpls ldp targeted-hello-accept

This command is used to set the targeted hello message acceptable on this interface. Use the **no** form of this command to deny the targeted hello message acceptable.

```
mpls ldp targeted-hello-accept
no mpls ldp targeted-hello-accept
```

<b>Parameters</b>	None.
<b>Default</b>	Enabled.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 15.

**Usage Guideline** This command only can be applied on a Layer 3 VLAN interface. If the targeted hello message is acceptable, the interface will respond to received targeted hello messages. Otherwise, if the received targeted hello is not coming from the local configured targeted peer, the targeted hello message will be ignored.

**Example** This example shows how to configure the VLAN 10 interface to accept the targeted hello message.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)# interface vlan 10
DXS-3600-32S(config-if)# mpls ldp targeted-hello-accept
DXS-3600-32S(config-if)#
```

### 38-13 mpls ldp targeted-peer

This command is used to create a LDP targeted peer. Use the **no** form of this command to remove the previous configured LDP targeted peer.

```
mpls ldp targeted-peer IP-ADDRESS
no mpls ldp targeted-peer IP-ADDRESS
```

#### Parameters

<i>IP-ADDRESS</i>	Specifies the LSR ID of the targeted peer.
-------------------	--

**Default** No targeted peer.

**Command Mode** Global Configuration Mode.

**Command Default Level** Level: 3.

**Usage Guideline** This command is used to create a targeted peer and enter the MPLS targeted peer configuration mode. The targeted peer specifies a potential indirectly connected neighbor. The extended discovery will be used to discover the targeted peer.

**Example** This example shows how to create a targeted peer 110.10.10.1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)# mpls ldp targeted-peer 110.10.10.1
DXS-3600-32S(config-mpls-targeted-peer)#
```

### 38-14 targeted-hello

This command is used to set the hold-time or interval for the extended peer hello message. Use the **no** form of this command to restore the default value.

```
targeted-hello {holdtime <seconds 15-65535> | interval <seconds 5-65535>}
no targeted-hello {holdtime | interval}
```

#### Parameters

<b>holdtime</b> <seconds 15-65535>	Specifies the hold-time of the hello message for the extended mechanism. This value must be between 15 and 65535 seconds.
<b>interval</b> <seconds 5-65535>	Specifies the interval of the hello message for the extended mechanism. This value must be between 5 and 65535 seconds.

**Default** By default, the hold-time of the hello message for the extended mechanism is 45 seconds, and the interval of the hello message is 15 seconds, which is one third of the hold-time.

<b>Command Mode</b>	MPLS Targeted Peer Configuration Mode.
<b>Command Default Level</b>	Level: 15.
<b>Usage Guideline</b>	It is necessary to ensure that the hold-time of the target hello is larger than the interval value. Otherwise, LDP can not work normally according to the requirement.
<b>Example</b>	This example shows how to configure the LDP extended discovery hello hold time to 90 seconds for targeted peer 110.10.10.1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)# mpls ldp targeted-peer 110.10.10.1
DXS-3600-32S(config-mpls-targeted-peer)# target-hello holdtime 90
DXS-3600-32S(config-mpls-targeted-peer)#
```

### 38-15 ldp router-id

This command is used to set the LSR ID of the LDP. Use **no ldp router-id** command to restore the LSR ID to default value.

```
ldp router-id IP-ADDRESS
no ldp router-id
```

#### Parameters

<i>IP-ADDRESS</i>	Specifies the IPv4 address that will be used as LSR ID. The IPv4 address must be an IP address of an existing interface.
-------------------	--

<b>Default</b>	<p>The LSR ID will be selected according the following rules:</p> <ol style="list-style-type: none"> <li>1 If a loopback interface is configured, the LSR ID is set to the IP address of the loopback interface. If multiple loopback interfaces are configured, the loopback with the highest IP address will be used.</li> <li>2 If no loopback interface is configured, the LSR ID is set to the highest IP address of the link-up interfaces.</li> <li>3 If no interface is link-up, the LSR ID is set to the highest IP address of the interfaces.</li> </ol> <p><b>Note:</b> If LDP is running, LSR ID will not be auto-changed.</p>
----------------	--

<b>Command Mode</b>	MPLS Router Configuration Mode.
<b>Command Default Level</b>	Level: 15.
<b>Usage Guideline</b>	The LSR ID is used to identify the LSR in the MPLS network. It is recommended to set the LSR ID to the IP address of a loopback interface. The value of the LSR ID should be globally unique. By default, the LSR ID is used as the transport-address. It is necessary to ensure that the LSR ID is route reachable for other LSRs. <b>Note:</b> If LDP is running, configuring the LSR ID will lead to an LDP restart.

<b>Example</b>	This example shows how to configure the LDP LSR ID to 110.10.10.30.
----------------	---

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)# mpls label protocol ldp
DXS-3600-32S(config-mpls-router)# ldp router-id 110.10.10.30
DXS-3600-32S(config-mpls-router)#
```

### 38-16 transport-address

This command is used to set the global transport address. Use the **no** form of this command to restore the default value.

```
transport-address {interface | IP-ADDRESS}
no transport-address
```

**Parameters**

<b>interface</b>	Specifies to use the IP address of the corresponding interface as the transmission address for the session on each interface.
<i>IP-ADDRESS</i>	Specifies that all sessions should use this specified IP address as the transmission address uniformly.

**Default** Use the LSR ID as the transport-address.

**Command Mode** MPLS Router Configuration Mode.

**Command Default Level** Level: 15.

**Usage Guideline** This command is used to configure the LDP transport address. The transport address is used to establish LDP TCP connection. By default, the LSR ID is used as the transport address by all interfaces.

If you configure the transport address to "interface", the IP address of each interface is used as the transport address. If you configure the transport address to a specified IP address, this address is used as transport address by all interfaces.

**Note:** If LDP is running, configuring the transport address will lead to LDP sessions restarting.

**Note:** If LDP is running, link-down or deleting the interface which IP address is used as the transport address will lead to the LDP session down. It is suggested to use the loopback interface as the transport address.

**Example** This example shows how to configure the transport address to 192.168.0.1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)# mpls label protocol ldp
DXS-3600-32S(config-mpls-router)# transport-address 192.168.0.1
DXS-3600-32S(config-mpls-router)#
```

**38-17 backoff maximum**

This command is used to configure the maximum back-off delay time. Use the **no** form of this command to restore the default value.

**backoff maximum** *SECONDS*  
**no backoff maximum**

**Parameters**

<i>SECONDS</i>	Specifies the maximum back-off delay time. The range is 120-65535 seconds
----------------	---

**Default** 600 seconds.

**Command Mode** MPLS Router Configuration Mode.

**Command Default Level** Level: 15.



**Usage Guideline**

The LDP back-off mechanism prevents two incompatibly configured LSRs from engaging in an endless sequence of session setup failures. If a session setup attempt fails due to an incompatibility, the active LSR delays its next attempt (that is, backs off), and then retries the session establishment.

The delay begins at 15 seconds, and it is increased exponentially with each successive failure until the maximum back-off delay is reached. The maximum [back off] delay is configurable, with the minimum amount being 120 seconds. The default value is 600 seconds.

If a session cannot be established and the trap/log state is enabled, LDP will send a trap/log to SNMP server to notify the session establishment failure.

**Example**

This example shows how to configure the maximum back-off delay time to 1000 seconds.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)# mpls label protocol ldp
DXS-3600-32S(config-mpls-router)# backoff maximum 1000
```

**38-18 keepalive-holdtime**

This command is used to configure the keep-alive hold-time for LDP sessions. Use the **no** form of this command to restore the default value.

```
keepalive-holdtime SECONDS
no keepalive-holdtime
```

**Parameters**

<i>SECONDS</i>	Specifies the keep-alive hold-time in seconds. The range is 15-65535 seconds.
----------------	---

**Default**

40 seconds.

**Command Mode**

MPLS Router Configuration Mode.

**Command Default Level**

Level: 15.

**Usage Guideline**

This command is used to configure the LDP session keep-alive hold-time. LDP maintains a keep-alive hold timer for each peer session. If the keep-alive hold timer expires without receipt of an LDP PDU from the peer, LDP concludes that the peer has failed and terminates the LDP session.

Each LSR sends keep-alive messages at regular intervals to its LDP peers to keep the sessions active. The keep-alive interval is one third of the keep-alive hold-time.

**Note:** If LDP is running, configuring keep-alive hold-time will lead to LDP sessions restart.

**Example**

This example shows how to configure the keep-alive hold-time to 60 seconds.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)# mpls label protocol ldp
DXS-3600-32S(config-mpls-router)# keepalive-holdtime 60
```

**38-19 label-retention-mode**

This command is used to set the label retention mode. Use the **no** form of this command to restore the default value.

```
label-retention-mode {liberal | conservative}
```

no label-retention-mode

## Parameters

<b>liberal</b>	Specifies to use the liberal label retention mode.
<b>conservative</b>	Specifies to use the conservative label retention mode.

<b>Default</b>	Liberal Label Retention Mode.
<b>Command Mode</b>	MPLS Router Configuration Mode.
<b>Command Default Level</b>	Level: 15.
<b>Usage Guideline</b>	<p>This command is used configure LDP label retention mode. If the label distribution method is Downstream-Unsolicited and the label retention mode is conservative, once the LSR received label bindings from LSRs which are not its next hop for that FEC, it discards such bindings.</p> <p>If the label retention mode is liberal, it maintains such bindings. It helps to speed up the setup of LSP in case there is a change in the next hop.</p> <p><b>Note:</b> If LDP is running, configuring label retention mode will lead to LDP sessions restart.</p>

**Example** This example shows how to configure the label retention mode to conservative.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)# mpls label protocol ldp
DXS-3600-32S(config-mpls-router)#label-retention-mode conservative
```

## 38-20 Isp-control-mode

This command is used to set the LDP control mode. Use the **no** form of this command to restore the default value.

```
mpls ldp lsp-control-mode {independent | ordered}
no mpls ldp lsp-control-mode
```

## Parameters

<b>independent</b>	Specifies to use the independent control mode.
<b>ordered</b>	Specifies to use the ordered control mode.

<b>Default</b>	Independent Control Mode.
<b>Command Mode</b>	MPLS Router Configuration Mode.
<b>Command Default Level</b>	Level: 15.
<b>Usage Guideline</b>	<p>This command is used to configure the LSP control mode. In Independent LSP Control, each LSR independently binds a label to a FEC and distributes the binding to its label distribution peers.</p> <p>In Ordered LSP Control, an LSR only binds a label to a FEC if it is the egress LSR for that FEC, or if it has already received a label binding for that FEC from its next hop for that FEC.</p> <p><b>Note:</b> If LDP is running, configuring the control mode will lead to LDP sessions restart.</p>

**Example** This example shows how to configure the LSP control mode to ordered.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)# mpls label protocol ldp
DXS-3600-32S(config-mpls-router)#mpls ldp lsp-control-mode ordered
```

## 38-21 mpls ldp distribution-mode

This command is used to set the label distribution mode for the interface. Use the **no** form of this command to restore the default value.

```
mpls ldp distribution-mode {dod | du}
no mpls ldp distribution-mode
```

### Parameters

<b>dod</b>	Specifies to use the downstream on-demand distribution mode.
<b>du</b>	Specifies to use the downstream unsolicited mode.

**Default** Downstream Unsolicited Distribution Mode.

**Command Mode** Interface Configuration Mode.

**Command Default Level** Level: 12.

**Usage Guideline** This command only can be applied on Layer 3 VLAN interface. This command is used to configure the label distribution method. If the label distribution method is Downstream-on-Demand, the downstream LSR advertises a label mapping when an upstream connection makes an explicit request.

If the method is Downstream-Unsolicited, it allows a LSR distributes label bindings to LSRs that have not explicitly requested them.

**Note:** If LDP is running, configuring label distribution method will lead to LDP sessions restart.

**Example** This example shows how to configure the label distribution mode to Downstream Unsolicited for VLAN 10 interface.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface vlan 10
DXS-3600-32S(config-if)# mpls ldp distribution-mode du
```

## 38-22 loop-detection

This command is used to enable loop detection. Use the **no** form of this command to disable loop detection.

```
loop-detection
no loop-detection
```

**Parameters** None.

**Default** Disabled.

**Command Mode** MPLS Router Configuration Mode.

**Command Default Level** Level: 15.

**Usage Guideline**

This command is used to configure LDP loop detection. The LDP loop detection mechanism makes use of the Path Vector and Hop Count TLVs carried by the label request and label mapping messages to detect looping LSPs.

**Note:** If LDP is running, configuring loop detection will lead to LDP sessions restart.

**Example**

This example shows how to enable LDP loop detection.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)# mpls label protocol ldp
DXS-3600-32S(config-mpls-router)#loop-detection
```

**38-23 max-hop-count**

This command is used to configure the maximum hop count allowed for loop detection. Use the **no** form of this command to restore the default value.

```
max-hop-count VALUE
no max-hop-count
```

**Parameters**

<i>VALUE</i>	Specifies the maximum hop count allowed for loop detection. The range is 1-255.
--------------	---

**Default**

The default value is 254.

**Command Mode**

MPLS Router Configuration Mode.

**Command Default Level**

Level: 15.

**Usage Guideline**

The hop count value is valid with the loop detection configured. If the hop count value in the label mapping message or the label request message of LDP is greater than the configured value, it is deemed that a loop occurs.

**Example**

This example shows how to configure the maximum hop count to 30.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)# mpls label protocol ldp
DXS-3600-32S(config-mpls-router)#max-hop-count 30
```

**38-24 max-path-vector**

This command is used to configure the maximum path vector value allowed for loop detection. Use the **no** form of this command to restore the default value.

```
mpls ldp max-path-vector VALUE
no mpls ldp max-path-vector
```

**Parameters**

<i>VALUE</i>	Specifies the maximum path vector value. The range is 1-255.
--------------	--

**Default**

The default value is 254.

**Command Mode**

MPLS Router Configuration Mode.

**Command Default Level**

Level: 15.

**Usage Guideline** The path vector value is valid with the loop detection of the LDP instance enabled. If the LDR ID number that is in the path vector list of the label mapping message or the label request message of LDP is greater than the configured value, it is deemed that a loop occurs.

**Example** This example shows how to configure the maximum path vector to 30.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)# mpls label protocol ldp
DXS-3600-32S(config-mpls-router)# mpls ldp max-path-vector 30
```

---

## 38-25 explicit-null

This command is used to advertise an Explicit Null label in situations where it would normally advertise an Implicit Null label. Use the **no** form of this command to restore the default value.

**explicit-null**  
**no explicit-null**

**Parameters** None.

**Default** Egress LSR advertise Implicit NULL label.

**Command Mode** MPLS Router Configuration Mode.

**Command Default Level** Level: 15.

**Usage Guideline** This command is used to configure LDP Penultimate Hop Popping (PHP) behavior. If the LSR is set to egress and the advertise label is an Implicit Null label, the upstream will do Penultimate Hop Popping.

If the label distributed to Penultimate Hop is set to the Explicit NULL label, the Penultimate Hop won't pop it.

**Example** This example shows how to configure the egress LSR advertise Explicit NULL label.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)# mpls label protocol ldp
DXS-3600-32S(config-mpls-router)#explicit-null
```

---

## 38-26 md5 authentication

This command is used to enable the LDP authentication. Use the **no** form of this command to restore the default value.

**md5 authentication**  
**no md5 authentication**

**Parameters** None.

**Default** By default, a peer has no password.

**Command Mode** MPLS Router Configuration Mode.

**Command Default Level** Level: 15.

**Usage Guideline**

Use this command to enable LDP authentication. If the LDP MD5 authentication is enabled, the LSR will apply the MD5 algorithm to compute the MD5 digest for the TCP segment that will be sent to the peer. This computation makes use of the peer password as well as the TCP segment. When the LSR receives a TCP segment with an MD5 digest, it validates the segment by calculating the MD5 digest (using its own record of the password) and compares the computed digest with the received digest. If the comparison fails, the segment is dropped without any response to the sender. The LSR ignores LDP Hellos from any LSR for which a password has not been configured.

**Note:** Configuring MD5 authentication will cause the LDP to restart.

**Example**

This example shows how to enable LDP MD5 authentication.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)# mpls label protocol ldp
DXS-3600-32S(config-mpls-router)#md5 authentication
```

**38-27 neighbor password**

This command is used to configure the LDP peer password. Use the **no** form of this command to restore the default value.

```
neighbor IP-ADDRESS password PASSWORD
no neighbor IP-ADDRESS password
```

**Parameters**

<i>IP-ADDRESS</i>	Specifies the peer IP address. The IP address will be the peer's LSR ID.
<b>password</b> <i>PASSWORD</i>	Specifies the password. The maximum length of the password is 32 characters. The password cannot have spaces or quotation mark characters

**Default**

By default, a peer has no password.

**Command Mode**

MPLS Router Configuration Mode.

**Command Default Level**

Level: 15.

**Usage Guideline**

Use this command to configure a LDP peer password. If the LDP MD5 authentication is enabled, the switch only establish session with these peers whose password is configured at both local and remote. The password configured on local must be same as targeted peer.

**Note:** If the session of the peer is established, configuring the peer password will lead to the session restart.

**Example**

This example shows how to enable MD5 authentication and configure the peer 10.90.90.12 password to "abcd".

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)# mpls label protocol ldp
DXS-3600-32S(config-mpls-router)#md5 authentication
DXS-3600-32S(config-mpls-router)#neighbor 10.90.90.12 password abcd
```

**38-28 show mpls**

This command is used to display the MPLS global configuration.

```
show mpls
```

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	EXEC Mode.
<b>Command Default Level</b>	Level: 3.
<b>Usage Guideline</b>	This command is used to display the MPLS global configuration.

**Example** This example shows how to display the MPLS global configuration.

```
DXS-3600-32S#show mpls
MPLS Status      : Enabled
LSP Trap Status: Disabled
DXS-3600-32S#
```

### 38-29 show mpls interface

This command is used to display MPLS enabled interfaces.

**show mpls interface** [*INTERFACE-ID*]

#### Parameters

<i>INTERFACE-ID</i>	(Optional) Specifies the interface that will displayed. If no interface is specified, all MPLS enabled interfaces' information will be displayed.
---------------------	---

<b>Default</b>	None.
<b>Command Mode</b>	EXEC Mode.
<b>Command Default Level</b>	Level: 3.
<b>Usage Guideline</b>	This command is used to display MPLS enabled interfaces.

**Example** This example shows how to display MPLS enabled interfaces.

```
DXS-3600-32S#show mpls interface
Interface  IP Address      Status
-----  -
VLAN 10   10.90.90.1/24   Up
VLAN 20   172.18.1.1/24   Down
Total Entries: 2
DXS-3600-32S#
```

### 38-30 show mpls forwarding-table

This command is used to display the MPLS label forwarding path information.

**show mpls forwarding-table** [*NETWORK-PREFIX/PREFIX-LENGTH*] [{*ftn* | *ilm*}] [*detail*]

#### Parameters

<i>NETWORK-PREFIX/ PREFIX-LENGTH</i>	(Optional) Specifies the IP prefix for FEC. If not specified, display all FECs.
--	---

<b>ftn</b>	Specifies to only display FTN entries.
<b>ilm</b>	Specifies to only display ILM entries.
<b>detail</b>	Specifies to display detailed MPLS label forwarding path information.

<b>Default</b>	None.
<b>Command Mode</b>	EXEC Mode.
<b>Command Default Level</b>	Level: 3.
<b>Usage Guideline</b>	This command is used to display the MPLS label forwarding path information.

**Example** This example shows how to display all MPLS label forwarding path information.

```
DXS-3600-32S#show mpls forwarding-table
```

LSP	FEC	In Label	Out Label	Out Interface	Next Hop
1	201.1.1.0/24	20	30	VLAN 10	172.18.1.1
2	201.2.1.0/24	60	40	VLAN 20	192.1.1.2
3	172.1.1.1/32	50	-	VLAN 10	172.18.1.1
4	192.1.1.0/24	-	70	VLAN 10	172.18.1.1
5	VC11/192.1.1.1	-	100/70	VLAN 10	172.18.1.1
6	VC11/192.1.1.1	200	-	-	-

```
Total Entries: 6
```

```
DXS-3600-32S#
```

**Example** This example shows how to display detailed MPLS label forwarding path information.

```
DXS-3600-32S#show mpls forwarding-table detail
```

```
LSP: 1
Type: Transit           Status: Up
FEC: 201.1.1.0/24      Owner: Static
In Label: 20           Out Label: Swap 30
Next Hop: 172.18.1.1   Out Interface: VLAN 10

LSP: 2
Type: Transit           Status: Up
FEC: 201.2.1.0/24      Owner: LDP
In Label: 60           Out Label: Swap 40
Next Hop: 192.1.1.2    Out Interface: VLAN 20

LSP: 3
Type: Egress            Status: Up
FEC: 172.1.1.1/32      Owner: LDP
In Label: 50           Out Label: Pop
Next Hop: 172.18.1.1   Out Interface: VLAN 10

LSP: 4
Type: Ingress           Status: Up
FEC: 192.1.1.0/24      Owner: LDP
In Label: -            Out Label: Push 70
Next Hop: 172.18.1.1   Out Interface: VLAN 10

LSP: 5
Type: Ingress           Status: Up
FEC: VC11/192.1.1.1    Owner: LDP
In Label: -            Out Label: Push 100/70
Next Hop: 172.18.1.1   Out Interface: VLAN 10
```



```

LSP: 6
Type: Egress           Status: Up
FEC: VC11/192.1.1.1   Owner: LDP
In Label: 200         Out Label: Pop

Total Entries: 6

DXS-3600-32S#

```

**Example** This example shows how to display FTN information.

```

DXS-3600-32S#show mpls forwarding-table ftn

FEC                Out Label  Next Hop  Out Interface
-----
201.10.10.0/24     500        172.10.1.1  VLAN 10
202.1.1.0/24       600        172.10.1.1  VLAN 10
VC11/192.1.1.1     100/70     172.18.1.1  VLAN 10

Total Entries: 3

DXS-3600-32S#

```

**Example** This example shows how to display ILM information.

```

DXS-3600-32S#show mpls forwarding-table ilm

FEC                In Label  Out Label  Out Interface  Next Hop
-----
201.1.1.0/24       20        30         VLAN 10        172.18.1.1
172.1.1.1/32       50        -          VLAN 10        172.18.1.1
VC11/192.1.1.1     200       -          -              -

Total Entries: 3

DXS-3600-32S#

```

### 38-31 show mpls ldp parameter

This command is used to display LDP global information.

**show mpls ldp parameter**

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	EXEC mode.
<b>Command Default Level</b>	Level: 3.
<b>Usage Guideline</b>	This command is used to display LDP global information.

**Example**

This example shows how to display LDP global information.

```
DXS-3600-32S#show mpls ldp parameter
LSR ID           : 172.18.1.1:0
LDP Version      : 1.0
LDP State        : Enabled
TCP Port         : 646
UDP Port         : 646
Max PDU Length   : 1500
Max Backoff      : 600 Seconds
Transport Address : 172.18.1.1
Keep Alive Time  : 40 Seconds
LSP Control Mode : Independent
Label Retention  : Liberal
Loop Detection   : Enabled
Path Vector Limit : 255
Hop Count Limit  : 255
Authentication   : Enabled
PHP              : Implicit null
Trap Status      : Enabled
DXS-3600-32S#
```

**38-32 show mpls ldp interface**

This command is used to display LDP interface information.

```
show mpls ldp interface [INTERFACE-ID]
```

**Parameters**

<i>INTERFACE-ID</i>	(Optional) Specifies the interface that will be displayed. If no interface is specified, display all interfaces' information.
---------------------	---

<b>Default</b>	None.
<b>Command Mode</b>	EXEC Mode.
<b>Command Default Level</b>	Level: 3.
<b>Usage Guideline</b>	This command is used to display LDP interface information.

**Example**

This example shows how to display LDP interface information.

```
DXS-3600-32S#show mpls ldp interface

Interface: if1
-----
Admin State           : Enabled
Oper State            : Disabled
Targeted Hello Accept : Acceptable
Hello Interval        : 5 (Sec)
Hello Hold Time       : 15 (Sec)
Distribution Method    : DoD

Interface: if2
-----
Admin State           : Enabled
Oper State            : Disabled
Targeted Hello Accept : Acceptable
Hello Interval        : 5 (Sec)
Hello Hold Time       : 15 (Sec)
Distribution Method    : DoD

Total Entries: 2

DXS-3600-32S#
```

**38-33 show mpls ldp targeted-peer**

This command is used to display previously configured targeted peer information.

```
show mpls ldp targeted-peer [IP-ADDRESS]
```

**Parameters**

<i>IP-ADDRESS</i>	(Optional) Specifies the targeted peer's IP address that will display. If not specified, all targeted peer information will be displayed.
-------------------	---

**Default**

None.

**Command Mode**

EXEC Mode.

**Command Default Level**

Level: 3.

**Usage Guideline**

This command is used to display previously configured targeted peer information.

**Example**

This example shows how to display previously configured targeted peer information.

```
DXS-3600-32S#show mpls ldp targeted-peer

Targeted Peer  Hello Interval  Hold Time
-----
192.10.1.1     15 (Sec)        45 (Sec)
192.10.1.2     15 (Sec)        45 (Sec)

Total Entries: 2

DXS-3600-32S#
```

**38-34 show mpls ldp discovery**

This command is used to display LDP peer information.

**show mpls ldp discovery**

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	EXEC Mode.
<b>Command Default Level</b>	Level: 3.
<b>Usage Guideline</b>	This command is used to display LDP peer information.

**Example** This example shows how to display LDP peer information.

```
DXS-3600-32S#show mpls ldp discovery

Local LDP Identifier: 10.1.1.1:0
Discovery Sources:
  Interfaces:
    VLAN 10 (ldp): xmit/recv
      LDP Id: 172.23.0.77:0
    VLAN 20 (ldp): xmit/recv
      LDP Id: 192.18.0.15:0
  Targeted Hellos:
    10.1.1.1 -> 10.133.0.33 (ldp): active, xmit/recv
      LDP Id: 10.133.0.33:0
    10.1.1.1 -> 172.18.30.2 (ldp): passive, xmit/recv
      LDP Id: 172.18.30.2:0

Total entries: 4

DXS-3600-32S#
```

**38-35 show mpls ldp neighbor**

This command is used to display LDP neighbor information.

**show mpls ldp neighbor [IP-ADDRESS]**

**Parameters**

<i>IP-ADDRESS</i>	Specifies the IP address used as the peer LSR ID. If not specified, display all neighbors.
-------------------	--

<b>Default</b>	None.
<b>Command Mode</b>	EXEC Mode.
<b>Command Default Level</b>	Level: 3.
<b>Usage Guideline</b>	This command is used to display LDP neighbor information.

**Example**

This example shows how to display LDP neighbor information.

```
DXS-3600-32S#show mpls ldp neighbor
```

```
Peer : 202.11.1.1:0
```

```
-----
Protocol Version      : 1.0
Transport address     : 202.11.1.1
Keep Alive Time      : 40 (sec)
Distribution Method   : DU
Loop Detect           : Disabled
Path vector limit     : 0
Max PDU Length       : 1500
```

```
Peer : 192.1.1.1:0
```

```
-----
Protocol Version      : 1.0
Transport address     : 192.1.1.1
Keep Alive Time      : 40 (sec)
Distribution Method   : DU
Loop Detect           : Disabled
Path vector limit     : 1500
Max PDU Length       : 0
```

```
Peer : 202.20.1.1:0
```

```
-----
Protocol Version      : 1.0
Transport address     : 202.20.1.1
Keep Alive Time      : 40 (sec)
Distribution Method   : DU
Loop Detect           : Disabled
Path vector limit     : 0
Max PDU Length       : 1500
```

```
Total Entries : 3
```

```
DXS-3600-32S#
```

**38-36 show mpls ldp session**

This command is used to display LDP session information.

```
show mpls ldp session [peer IP-ADDRESS] [{detail | statistic}]
```

**Parameters**

<b>peer</b> <i>IP-ADDRESS</i>	Specifies the IP address used as the peer LSR ID. If not specified, display all sessions.
<b>detail</b>	Specifies to display detailed information.
<b>statistic</b>	Specified to session statistics.

**Default**

None.

**Command Mode**

EXEC Mode.

**Command Default Level**

Level: 3.

**Usage Guideline**

This command is used to display LDP session information.

**Example**

This example shows how to display all LDP session information.

```
DXS-3600-32S#show mpls ldp session
```

Peer	Status	Role	Keep Alive	Distribution Mode
10.1.1.2:0	OPERATIONAL	Active	40 (Sec)	DU
20.1.1.2:0	OPERATIONAL	Passive	40 (Sec)	DU

```
Total Entries : 2
```

```
DXS-3600-32S#
```

**Example**

This example shows how to display LDP session detailed information for peer 10.1.1.2.

```
DXS-3600-32S#show mpls ldp session peer 10.1.1.2 detail
```

```
Peer           : 10.1.1.2:0
Status         : OPERATIONAL
Role           : Active
Keep Alive(Sec) : 40
Remain Time(Sec) : 20
Create Time    : 2009-12-1 14:10:30
Distribution Method: DU
Loop Detection : Enabled
Path Vector Limit : 255
Max PDU Length : 1500
Address List   : 10.1.1.2
                172.18.1.1
```

```
Total Entries: 1
```

```
DXS-3600-32S#
```

**Example**

This example shows how to display LDP session statistics for peer 10.1.1.2.

```
DXS-3600-32S#show mpls ldp session peer 10.1.1.2 statistic
```

```
Peer 10.1.1.2
```

```
-----
Notification Message : TX 10/RX 2
Initialization Message : TX 2/RX 2
Keep Alive Message : TX 100/RX 100
Address Message : TX 1/RX 1
Address Withdraw Message : TX 0/RX 0
Label Mapping Message : TX 2/RX 1
Label Request Message : TX 2/RX 1
Label Withdraw Message : TX 0/RX 0
Label Release Message : TX 0/RX 0
Label Abort Message : TX 0/RX 0
```

```
Total Entries: 1
```

```
DXS-3600-32S#
```

**38-37 show mpls ldp bindings**

This command is used to display all LDP label binding information.

```
show mpls ldp bindings
```

**Parameters**

None.

<b>Default</b>	None.
<b>Command Mode</b>	EXEC Mode.
<b>Command Default Level</b>	Level: 3.
<b>Usage Guideline</b>	This command is used to display all LDP label binding information.

**Example** This example shows how to display all LDP label binding information.

```
DXS-3600-32S#show mpls ldp bindings

FEC: 130.1.1.0/24      State      : Established
  In label   : 70      Upstream   : 30.1.1.3
  Out label  : 80      Downstream : 120.1.1.1

FEC: 172.18.1.0/24    State      : Established
  In label   : 20      Upstream   : 10.1.1.2
  Out label  : 30      Downstream : 192.1.1.1

FEC: 172.18.2.0/24    State      : Established
  In label   : 50      Upstream   : 20.1.1.3
  Out label  : 60      Downstream : 120.1.1.1

Total Entries : 2

DXS-3600-32S#
```

### 38-38 show mpls ldp statistic

This command is used to display LDP global statistic information.

**show mpls ldp statistic**

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	EXEC Mode.
<b>Command Default Level</b>	Level: 3.
<b>Usage Guideline</b>	This command is used to display LDP global statistic information.

**Example** This example shows how to display LDP global statistic information.

```
DXS-3600-32S#show mpls ldp statistic

SessionAttempts          : 0
SessionRejectedNoHelloErrors : 0
SessionRejectedAdErrors  : 0
SessionRejectedMaxPduErrors : 0
SessionRejectedLRErrors  : 0
BadLdpIdentifierErrors   : 0
BadPduLengthErrors       : 0
BadMessageLengthErrors   : 0
BadTlvLengthErrors       : 0
MalformedTlvValueErrors  : 0
KeepAliveTimerExpErrors  : 0
ShutdownReceivedNotifications : 0
ShutdownSentNotifications  : 0

DXS-3600-32S#
```

### 38-39 show mpls ldp neighbor password

This command is used to display the LDP neighbor password.

```
show mpls ldp neighbor password
```

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	EXEC Mode.
<b>Command Default Level</b>	Level: 3.
<b>Usage Guideline</b>	This command is used to display the LDP neighbor password.

**Example** This example shows how to display the LDP neighbor password.

```
DXS-3600-32S#show mpls ldp neighbor password
```

```
Neighbor      Password
-----      -
202.11.1.1    123456
192.1.1.1     abcd
```

```
Total Entries : 2
```

```
DXS-3600-32S#
```

### 38-40 ping lsp

This command is used to check the connectivity of the LSP for a specified FEC.

```
ping lsp NETWORK-PREFIX/PREFIX-LENGTH [times VALUE | timeout SECONDS]
```

#### Parameters

<i>NETWORK-PREFIX/ PREFIX-LENGTH</i>	Specifies the IPv4 prefix FEC which the LSP connectivity will check.
<b>times</b> VALUE	Specifies the number of times to resend the same packet. The value range is 1-255 and the default value of <b>times</b> is 4.
<b>timeout</b> SECONDS	Specifies the timeout interval in seconds for an MPLS request packet. The value range is 1-99 seconds and the default value is 2 seconds.

<b>Default</b>	None.
<b>Command Mode</b>	EXEC Mode.
<b>Command Default Level</b>	Level: 3.
<b>Usage Guideline</b>	<p>This command is used to check the connectivity of the LSP for a specified FEC. The FEC can be an IP prefix. If there is no LSP for the specified FEC, the “<i>Destination unreachable</i>” message will be displayed. Otherwise, MPLS echo request messages will be sent out to along with the LSP of the specified FEC.</p> <p>If the egress LSR receives the request message, it will reply to the request message sender with an MPLS echo reply message. If the sender cannot receive replies before the timeout, the “<i>Request time out</i>” message will be displayed.</p>



**Example** This example shows how to check the connectivity of the LSP for network 192.1.1.0/24.

```
DXS-3600-32S#ping lsp 192.1.1.0/24
Ping 192.1.1.0/24
Reply from 192.1.1.1, time<10ms
Reply from 192.1.1.1, time<10ms
Reply from 192.1.1.1, time<10ms
Reply from 192.1.1.1, time<10ms
Ping Statistics for 192.1.1.0/24
Packets: Sent =4, Received =4, Lost =0
DXS-3600-32S#
```

**Example** This example shows how to check the connectivity of the LSP for network 110.1.1.0/24.

```
DXS-3600-32S#ping lsp 110.1.1.0/24
ping 110.1.1.0/24
Request time out
Request time out
Request time out
Request time out
Ping Statistics for 110.1.1.0/24
Packets: Sent =4, Received =0, Lost =4
DXS-3600-32S#
```

## 38-41 traceroute lsp

This command is used to initiate hop-by-hop fault localization as well as path tracing for LSP of a specified FEC.

**traceroute lsp** *NETWORK-PREFIX/PREFIX-LENGTH* [**timeout** *SECONDS*]

### Parameters

<i>NETWORK-PREFIX/PREFIX-LENGTH</i>	Specifies the IPv4 prefix FEC used to check LSP connectivity.
<b>timeout</b> <i>SECONDS</i>	Specifies the timeout interval in seconds for an MPLS request packet. The value range is 1-99 seconds and the default value is 2 seconds.

**Default** None.

**Command Mode** EXEC Mode.

**Command Default Level** Level: 3.

**Usage Guideline** This command is used for hop-by-hop fault localization as well as path tracing LSP of a specified FEC. The FEC can be an IP prefix.

If there is no LSP for the specified FEC, the “*Destination unreachable*” message will be displayed. Otherwise, MPLS echo request messages will be sent out to along the LSP of the specified FEC. The TTL in the outmost label of the MPLS echo requests is set successively to 1, 2, 3, and so on. It forces the echo request, expired at each successive LSR, along the LSP. The LSR returns an MPLS echo reply.

If the sender cannot receive reply before timeout, the traceroute will stop.

**Example** This example shows how to trace route the LSP for network 192.1.1.0/24.

```
DXS-3600-32S#traceroute lsp 192.1.1.0/24

Tracing route to 192.1.1.0/24

1 Reply from 170.1.1, time<10ms
2 Reply from 200.1.2.3, time=20ms
3 Reply from 210.1.1.4, time=30ms
4 Reply from 192.1.1.1, time=40ms

Trace complete.

DXS-3600-32S#
```

**Example** This example shows how to trace route the LSP for network 110.1.1.0/24.

```
DXS-3600-32S#traceroute lsp 110.1.1.0/24

Tracing route to 110.1.1.0/24

1 Reply from 170.1.1, time<10ms
2 Request time out

Trace complete.

DXS-3600-32S#
```

## 38-42 Lsp trigger

This command is used to configure an LSP trigger filter rule. Use the **no** form of this command to remove the rule.

```
lsp trigger [SN] {permit | deny} {ip NETWORK-PREFIX/PREFIX-LENGTH | any}
no lsp trigger [SN [- | ,]]
```

### Parameters

<b>SN</b>	(Optional) Specifies the sequence number of the LSP trigger filter rule. When creating a new rule and the SN option is not specified, the SN value will begin from 10 and will then be incremented by 10. When removing a rule and the SN option is not specified, all rules will be removed. The SN range is 1-10000.
<b>permit</b>	Specifies to permit LDP establishing LSP for the following IP prefix FEC.
<b>deny</b>	Specifies not to permit LDP establishing LSP for the following IP prefix FEC.
<b>ip NETWORK-PREFIX/ PREFIX-LENGTH</b>	Specifies the IP prefix FEC for the rule.
<b>any</b>	Specifies that the rule will be applied to any IP prefix FEC.

**Default** No LSP trigger filter rule.

**Command Mode** MPLS Router Configuration Mode.

**Command Default Level** Level: 15.

**Usage Guideline** This command is used to configure an LSP trigger filter rule. The LSP trigger filter rules are IP access list rules that it is used to control the IP routes that can be used to trigger the establishment of an LSP. For example, if there are two routes for 172.18.1.0/24 and 172.18.2.0/24 and if the LSP trigger filter permits 172.18.1.0/24 and denies 172.18.2.0/24, then the switch can only establish an LSP for 172.18.1.0/24.

**Example**

This example shows how to create an LSP trigger filter rule that permits the establishment LSP for 192.1.1.0/24 and do not permit the establishment LSP for other routes.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)# mpls label protocol ldp
DXS-3600-32S(config-mpls-router)#lsp trigger 10 permit ip 192.1.1.0/24
DXS-3600-32S(config-mpls-router)#lsp trigger 20 deny any
DXS-3600-32S(config-mpls-router)#
```

**Example**

This example shows how to clear all LSP trigger filter rules.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)# mpls label protocol ldp
DXS-3600-32S(config-mpls-router)#no lsp trigger
DXS-3600-32S(config-mpls-router)#
```

**38-43 show lsp trigger**

This command is used to display LSP trigger filter rule(s).

```
show lsp trigger [SM]
```

**Parameters**

SN	(Optional) Specifies the sequence number of the LSP trigger filter rule that will be displayed. If not specified, all rules will be displayed.
----	--

**Default**

None.

**Command Mode**

EXEC Mode.

**Command Default Level**

Level: 3.

**Usage Guideline**

Use this command to display LSP trigger filter rule(s).

**Example**

This example shows how to display all LSP trigger filter rules.

```
DXS-3600-32S#show lsp trigger

SN      Prefix FEC      Action
-----  -
10      192.1.1.0/24   Permit
20      Any             Deny

Total Entries : 2

DXS-3600-32S#
```

**38-44 mpls qos policy**

This command is used to enter the MPLS QoS configuration mode. If the policy doesn't exist, a new policy will be created. Use the **no mpls qos policy** command to remove the policy.

```
mpls qos policy <NAME>
no mpls qos policy [all | <NAME>]
```

**Parameters**

NAME	Specifies the MPLS QoS policy name. The maximum name length is 32.
------	--

---

<b>all</b>	Specifies to remove all MPLS QoS policies.
------------	--

---

<b>Default</b>	No MPLS QoS policy.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 8.
<b>Usage Guideline</b>	Use this command to enter the MPLS QoS configuration mode. If the policy doesn't exist, a new policy will be created. The MPLS QoS policy can be applied to MPLS FECs.

**Example** This example shows how to create an MPLS QoS policy with the name of *policy1*.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#mpls qos policy policy1
DXS-3600-32S(config-mpls-qos)#
```

### 38-45 trust-exp

This command is used to configure to trust the incoming label's topmost EXP as priority. Use the **no trust-exp** command to disable the trust.

```
trust-exp
no trust-exp
```

<b>Parameters</b>	None.
<b>Default</b>	Disabled.
<b>Command Mode</b>	MPLS QoS Configuration Mode.
<b>Command Default Level</b>	Level: 15.
<b>Usage Guideline</b>	Use this command, in the MPLS QoS configuration mode, to configure to trust the incoming label's topmost EXP as priority. If the EXP is set to trust, the matched packets are scheduled according to the EXP to priority map the MPLS QoS policy. Otherwise, the packets are scheduled according to the 802.1p priority.

**Example** This example shows how to enable EXP trust.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#mpls qos policy policy1
DXS-3600-32S(config-mpls-qos)#trust-exp
DXS-3600-32S(config-mpls-qos)#
```

### 38-46 class-map

This command is used to configure class mapping of the policy. Use the **no class-map** command to remove the setting.

```
class-map {inbound exp <VALUELIST 0-7> priority <VALUE 0-7> | outbound [priority <VALUELIST 0-7>] exp
  <VALUE 0-7>}
no class-map {inbound | outbound}
```

#### Parameters

---

<b>exp</b> <VALUELIST 0-7>	Specifies the EXP or EXP range.
<b>priority</b> <VALUE 0-7>	Specifies the priority of the inbound EXP mapped.
<b>priority</b> <VALUELIST 0-7>	(Optional) Specifies the priorities that will be mapped to the outbound EXP. If not specifies, then all priorities will be mapped.
<b>exp</b> <VALUE 0-7>	Specifies the outbound EXP.

---

**Default** Inbound mapping:  
**EXP** 0 1 2 3 4 5 6 7  
**priority** 2 0 1 3 4 5 6 7

Outbound mapping: No setting.

**Command Mode** MPLS QoS Configuration Mode.


**Command Default Level** Level: 15.

## Usage Guideline

Use the **class-map inbound** command to set the mapping from EXP to have priority for incoming packets. The inbound mapping takes effect only when **trust-exp** is enabled. If inbound mapping exists, it will be replaced by the last configuration.

Use the **class-map outbound** command set the mapping from priority to EXP for outgoing packets. If outbound mapping exists, it will be replaced by the last configuration.

The follows figure shows the MPLS packet forwarding flow in the device.

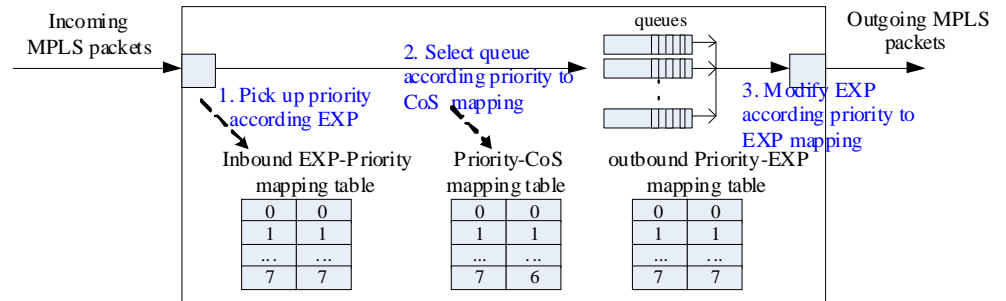

Once MPLS packets is received, if there is an inbound EXP to priority mapping entry for the FEC, the device will assign priority according to the inbound EXP. Otherwise, the priority is assigned according to 802.1p.

The device then selects a CoS queue according to the priority set in the CoS mapping rule. When the device transmits packets from the outgoing interface, if there is outbound EXP mapping, the EXP will always set the rule according to the mapping rule. If the incoming packets have an MPLS label, the EXP will not be modified. If the incoming packets don't have MPLS packets, the EXP will be set to zero.

The follows table show the outbound EXP mapping summary:

Incoming packet type	Outbound EXP mapping setting	Outbound EXP
MPLS packets	No setting	Same as incoming EXP
No MPLS packets	No setting	0
Any	Mapping doesn't care about priority	Set to specified EXP for all matched packets
Any	Mapping specify priority to EXP	Set to specified EXP only for priority matched packets.

If there is an outbound setting that maps a priority to an EXP and another setting that maps all priorities to other EXPs, the setting that maps the specified priority has higher priority. For example:

- 1 Class-map outbound priority 1 EXP 6.
- 2 Class-map outbound EXP 3.

Apply the QoS policy to FEC 10.1.1.0/24. Then if the outgoing MPLS packets for the FEC have priority 1, the EXP will be set to 6. The EXP of other packets for the FEC will be set to 3.

Use the **no class-map inbound** command to remove all inbound class-map settings. Use the **no class-map outbound** command to remove all outbound class-map settings.

**Example**

This example shows how to set the class-map for MPLS QoS policy 1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#mpls qos policy policy1
DXS-3600-32S(config-mpls-qos)#class-map inbound exp 0 priority 0
DXS-3600-32S(config-mpls-qos)#class-map inbound exp 1 priority 1
DXS-3600-32S(config-mpls-qos)#class-map inbound exp 2 priority 2
DXS-3600-32S(config-mpls-qos)#class-map inbound exp 3 priority 3
DXS-3600-32S(config-mpls-qos)#class-map inbound exp 4 priority 4
DXS-3600-32S(config-mpls-qos)#class-map inbound exp 5 priority 5
DXS-3600-32S(config-mpls-qos)#class-map inbound exp 6-7 priority 6
DXS-3600-32S(config-mpls-qos)#class-map outbound priority 1 exp 6
DXS-3600-32S(config-mpls-qos)#class-map outbound exp 3
DXS-3600-32S(config-mpls-qos)#
```

**38-47 match**

This command is used to apply the policy to FECs. Use the **no match** command to remove the setting.

```
match [ip NETWORK-PREFIX/PREFIX-LENGTH]
no match [ip NETWORK-PREFIX/PREFIX-LENGTH]
```

**Parameters**

<b>ip</b> NETWORK-PREFIX/ PREFIX-LENGTH	Specifies the IP prefix FEC. If not specified, the <b>no</b> form of this command will remove all binding FECs for the policy.
--	--

**Default**

None.

**Command Mode**

MPLS QoS Configuration Mode.

**Command Default Level**

Level: 15.

**Usage Guideline**

Use the **match** command to apply a MPLS QoS policy to FECs. The QoS policy will be applied to all MPLS packets of the FEC. A FEC only can be bound to one policy.

**Example**

This example shows how to apply MPLS QoS policy 1 to FEC 172.18.1.0/24.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#mpls qos policy policy1
DXS-3600-32S(config-mpls-qos)#match ip 172.18.1.0/24
DXS-3600-32S(config-mpls-qos)#
```

**38-48 show mpls qos**

This command is used to display MPLS QoS settings.

```
show mpls qos [{policy [<NAME>] | ip NETWORK-PREFIX/PREFIX-LENGTH}]
```

**Parameters**

<b>policy</b> NAME	Specifies the MPLS QoS policy name.
<b>ip</b> NETWORK-PREFIX/ PREFIX-LENGTH	Specifies the IP prefix FEC whose QoS policy will be displayed
	If no parameters are specified, all policy settings will be displayed.

**Default**

None.

**Command Mode**

EXEC Mode.

**Command Default Level**      Level: 3.

**Usage Guideline**            Use the **show mpls qos policy** command to display the MPLS QoS policy settings.

**Example**                      This example shows how to display all MPLS QoS settings.

```
DXS-3600-32S#show mpls qos

MPLS QoS Policy: policy1, Trust EXP
  Inbound Mapping
    EXP      :0, 1, 2, 3, 4, 5, 6, 7
    Priority:0, 1, 2, 3, 4, 5, 6, 6
  Outbound Mapping
    Priority:0, 1, 2, 3, 4, 5, 6, 7
    EXP      :3, 6, 3, 3, 3, 3, 3, 3
  Binding FECs:
    172.18.1.0/24, 110.1.1.0/24

Total Entries: 1

DXS-3600-32S#
```

**Example**                      This example shows how to displays the MPLS QoS setting for FEC 172.18.1.0/24.

```
DXS-3600-32S#show mpls qos ip 172.18.1.0/24

FEC 172.18.1.0/24 binding MPLS QoS policy: policy1

DXS-3600-32S#
```



# Network Connectivity Test Commands

## 39-1 ping

This command is used to test the connectivity of a network.

```
ping [vrf <string 1-12>] {[ip] ip-address | host-name} [ntimes times] [timeout seconds] [source source]
```

### Parameters

<b>vrf</b> <string 1-12>	Specifies the VRF name for the ping test. If the VRF is not specified, it works in the global routing forward space. Currently, the VRF doesn't influence the IPv6.
<b>ip-address</b>	Specifies the destination IPv4 address.
<b>host-name</b>	Specifies the destination's host name.
<b>times</b>	Specifies the number of packets to be sent.
<b>seconds</b>	Specifies the time out value.
<b>source</b>	Specifies the source IPv4 address.

<b>Default</b>	By default the times is infinity, the timeout is 1 second.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 1
<b>Usage Guideline</b>	This command tests the connectivity of a network.

**Example** This example shows how to tests the connectivity of a network.

```
DXS-3600-32S#ping ip 192.168.69.66
Reply from 192.168.69.66, time<10ms
Reply from 192.168.69.66, time<10ms
Reply from 192.168.69.66, time<10ms
Reply from 192.168.69.66, time<10ms

Ping Statistics for 192.168.69.66
Packets: Sent =4, Received =4, Lost =0

DXS-3600-32S#
```

## 39-2 traceroute

This command is used to trace the routed path between the switch and a destination end station.

```
traceroute [vrf <string 1-12>] {[ip] ip-address | host-name} [probe number] [timeout seconds] [ttl maximum]
```

### Parameters

<b>vrf</b> <string 1-12>	Specifies the VRF name for the trace route test. If the VRF is not specified, it works in the global routing forward space. Currently, the VRF doesn't influence the IPv6.
<b>ip-address</b>	Specifies the IPv4 address of the destination end station.
<b>host-name</b>	Specifies the host name of the destination end station.
<b>number</b>	Specifies the number of probe packets for each TTL.
<b>seconds</b>	Specifies the timeout period while waiting for a response from the remote device.
<b>maximum</b>	Specifies the maximum number of routers that a trace route packet can cross, while seeking the network path between two devices.

<b>Default</b>	The default probe number is 1, timeout is 5 seconds and maximum TTL is 30.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 1
<b>Usage Guideline</b>	This command is used to trace the routed path between the switch and a destination end station.

**Example** This example shows how to trace the routed path between the switch and a destination end station.

```
DXS-3600-32S#traceroute 30.1.1.1
```

```
<10 ms 20.1.1.1  
<10 ms 30.1.1.1
```

```
Trace complete.
```

```
DXS-3600-32S
```

# Open Shortest Path First (OSPF) Version 2 Commands

## 40-1 area

This command is used to create an OSPF area. To remove an area, use the no form of this command.

```
area area-id
no area area-id
```

### Parameters

<i>area-id</i>	Specifies the ID of the area. The ID should be specified as an IP address.
----------------	--

<b>Default</b>	The backbone area (0.0.0.0) is created by default.
<b>Command Mode</b>	Router Configuration Mode.
<b>Command Default Level</b>	Level: 8. (EI Mode Only Command)
<b>Usage Guideline</b>	<p>The area created by this command is a normal area. Users can not create an existed area.</p> <p>Use the no form of this command to remove a specified OSPF area and its configuration, including the removal of the area-based configuration commands, such as <b>area default-cost</b>, <b>area nssa</b>. Users can not remove the backbone area. There is a limitation about number of OSPF areas and it depends on project.</p> <p>Users can verify the settings by entering the <b>show ip ospf</b> or <b>show ip ospf area</b> command.</p>

**Example** This example shows how to create an OSPF area with area ID 0.0.0.1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router ospf
DXS-3600-32S(config-router)#area 0.0.0.1
DXS-3600-32S(config-router)#
```

**Example** This example shows how to remove the area 0.0.0.1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router ospf
DXS-3600-32S(config-router)#no area 0.0.0.1
DXS-3600-32S(config-router)#
```

## 40-2 area default-cost

This command is used to specify the cost associated with the default summary route that will be automatically injected to the stub area and no-so-stubby area (NSSA). Use the no command to restore to the default setting.

```
area area-id default-cost cost
no area area-id default-cost
```

### Parameters

<i>area-id</i>	Specifies the ID of the area. The ID should be specified as an IP address.
<i>cost</i>	Specifies the cost for the default summary route used for a stub or NSSA area. The range of value is 0~65535.

**Default** The default value is 1.

<b>Command Mode</b>	Router Configuration Mode.
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	Use this command on the area border router (ABR) that is attached to stub area or NSSA area to specify the cost associated with the default summary route generated by the ABR into the area. One area must be created before set its default cost.  This command can only take effect on the stub area or NSSA area.  Users can verify the settings by entering the <b>show ip ospf</b> or <b>show ip ospf area</b> command.

**Example** This example shows how to assign a default cost of 20 to stub area 0.0.0.1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router ospf
DXS-3600-32S(config-router)#area 0.0.0.1 stub
DXS-3600-32S(config-router)#area 0.0.0.1 default-cost 20
DXS-3600-32S(config-router)#
```

### 40-3 area nssa

This command is used to assign an area as a NSSA area. Use the no command to remove the NSSA related settings associated with the area.

```
area area-id nssa [no-summary] [translate]
no area area-id nssa [no-summary] [translate]
```

#### Parameters

<i>area-id</i>	Specifies the ID for the NSSA area. The ID should be specified as an IP address.
<b>no-summary</b>	(Optional) Specifies to prohibit summary routes advertised into the NSSA area. This function only take effect when the router is an ABR.
<b>translate</b>	(Optional) Specifies if leak type 7 LSA into other areas.

<b>Default</b>	By default no NSSA area is defined. By default <b>no-summary</b> is not specified. By default <b>translate</b> is not specified.
<b>Command Mode</b>	Router Configuration Mode.
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	The command <b>no area area-id nssa</b> removes all NSSA related settings associated with the area and the area becomes a normal area. Otherwise, use no command with keyword <b>no-summary</b> or <b>translate</b> , the area remains as a NSSA area and the specified parameter is unset.  A NSSA allows external routes to be advertised to the area in type 7 LSA. These routes then could be leaked into other areas if translate option is used. Although, the external routes from other areas still do not enter the NSSA.

Use the **area nssa** command to simplify administration if you are connecting a central site using OSPF to a remote site that is using a different routing protocol. You can extend OSPF to cover the remote connection by defining the area between the central router and the remote router as a NSSA.

For ASBR NSSA re-distribute, external routes will only be redistributed to NSSA area when redistribution is configured for the associated OSPF process. The external routes from other area within the same AS will not be injected to the NSSA area.

If there are multiple default routes generated into the NSSA area, the following priority will be followed: intra-route > inter-route > external route.

Users can verify the settings by entering the **show ip ospf** or **show ip ospf area** command.

### Example

This example shows how to assign OSPF area 0.0.0.2 to be a NSSA area and leak type 7 LSA into other areas.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router ospf
DXS-3600-32S(config-router)#area 0.0.0.1 nssa no-summary
DXS-3600-32S(config-router)#area 0.0.0.2 nssa translate
DXS-3600-32S(config-router)#
```

## 40-4 area range

This command is used to summarize OSPF routes at an area border router (ABR). Use the no command to remove the defined summarization of routes.

**area** *area-id range ip-address net-mask* [{**advertise** | **not-advertise**}]  
**no area** *area-id range ip-address net-mask*

### Parameters

<i>area-id</i>	Specifies the area from which the routes will be summarized. The ID should be specified as an IP address.
<i>ip-address</i>	Specifies the IP address. With net-mask to inform the network segment whose routes are to be aggregated.
<i>net-mask</i>	Specifies the IP address mask.
<b>advertise</b>	(Optional) Specifies the area range will be advertised.
<b>not-advertise</b>	(Optional) Specifies the area range will not be advertised.

### Default

By default no area range is configured for one area.  
 By default **advertise** is specified.

### Command Mode

Router Configuration Mode.

### Command Default Level

Level: 8. (**EI Mode Only Command**)

### Usage Guideline

Users can use this command on the area border router to summarize the intra-area routes. This command can be used to specify the summarized route for area 0 or for non-zero area.

Multiple area range commands can be configured. Thus, OSPF can summarize addresses for multiple sets of address ranges.

Users can verify the settings by entering the **show ip ospf** command.

**Example** This example shows how to set one area range 192.168.0.0/255.255.0.0 in area 0.0.0.1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router ospf
DXS-3600-32S(config-router)#area 0.0.0.1
DXS-3600-32S(config-router)#area 0.0.0.1 range 192.168.0.0 255.255.0.0
DXS-3600-32S(config-router)#
```

## 40-5 area stub

This command is used to assign an area as a stub area. Use the no command to remove the stub related settings associated with the area.

```
area area-id stub [no-summary]
no area area-id stub [no-summary]
```

### Parameters

<i>area-id</i>	Specifies the ID for the stub area. The ID should be specified as an IP address.
<b>no-summary</b>	(Optional) Specifies to prohibit summary routes advertised into the stub area .this will make the stub area becomes a totally stub area.

**Default** By default no stub area is configured.  
By default **no-summary** is not specified.

**Command Mode** Router Configuration Mode.

**Command Default Level** Level: 8. (**EI Mode Only Command**)

**Usage Guideline** The command **no area *area-id* stub** removes all stub related settings associated with the area and the area becomes a normal area. Otherwise, use no command with keyword **no-summary**, the area remains as a stub area and the specified parameter is unset.

Use the **no-summary** keyword to specify the area as a totally stubby area when the routers in the area do not requires to know the inter-area routes except type 3 default route.

Users can verify the settings by entering the show ip ospf or show ip ospf area command.

**Example** This example shows how to assign OSPF area 0.0.0.2 to be a stub area and prohibit summary routes advertised into this area.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router ospf
DXS-3600-32S(config-router)#area 0.0.0.2 stub
DXS-3600-32S(config-router)#area 0.0.0.2 stub no-summary
DXS-3600-32S(config-router)#
```

## 40-6 area virtual-link

This command is used to configure a link for a non-backbone area that is physically separated from the backbone area. Use the no command to remove a virtual link.

```
area area-id virtual-link router-id [authentication [{message-digest | null}] [dead-interval seconds] [hello-interval seconds] [authentication-key password] | [message-digest-key key-id md5 key]]
no area area-id virtual-link router-id
```

## Parameters

<i>area-id</i>	Specifies the identifier of the area to establish the virtual link.
<i>router-id</i>	Specifies the Router ID of the virtual link neighbor.
<b>authentication</b>	(Optional) Specifies authentication type. If the authentication type is not specified for the virtual-link, the simple password authentication type for the area will be used.
<b>message-digest</b>	(Optional) Specifies that MD5 authentication is used for the virtual link.
<b>null</b>	(Optional) Specifies that no authentication is used.
<b>hello-interval</b> <i>seconds</i>	(Optional) Specifies the interval in seconds that the router sends the hello packet on the virtual link. The valid setting is 1-65535.
<b>dead-interval</b> <i>seconds</i>	(Optional) Specifies the interval in seconds that a neighbor is regarded as off-line if no hello packets are received within that time. The valid setting is 1-65535.
<b>authentication-key</b> <i>password</i>	(Optional) Specifies up to 8 bytes long password used for simple password authentication.
<b>message-digest-key</b> <i>key-id md5 key</i>	(Optional) Specifies up to 16 bytes long digest key for MD5 authentication. The range of <i>key-id</i> is 1-255.

<b>Default</b>	By default no virtual-link is configured. Default <b>authentication</b> type is null. Default <b>hello-interval</b> is 10 seconds. Default <b>dead-interval</b> is 60 seconds.
<b>Command Mode</b>	Router Configuration Mode.
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	<p>In the OSPF routing domain, all areas must be connected with the backbone area. If an area disconnects from the backbone area, it requires establish a virtual link to connect the backbone area. Otherwise, the network communication will become abnormal.</p> <p>The virtual link requires a connection between two ABR. The area that belongs to both ABR is called the transition area. A stub Area or NSSA area cannot act as a transition area.</p> <p>The virtual link is a point to point link. The router will send the OSPF message to the neighbor router via unicast IP packet. The simple text authentication type and MD5 authentication type are mutually exclusive. The Dead interval must be larger than and multiple as Hello interval.</p> <p>Users can verify the settings by entering the <b>show ip ospf</b> or <b>show ip ospf virtual-link</b> command.</p>

<b>Example</b>	This example shows how to configure a virtual link with neighbor 3.3.3.3 and set the authentication type to simple password with password "yourpass".
----------------	---

```

DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router ospf
DXS-3600-32S(config-router)#area 0.0.0.1
DXS-3600-32S(config-router)#area 0.0.0.1 virtual-link 3.3.3.3 dead-interval 10 hello-interval 5
DXS-3600-32S(config-router)#area 0.0.0.1 virtual-link 3.3.3.3 authentication authentication-key
yourpass
DXS-3600-32S(config-router)#

```

<b>Example</b>	This example shows how to set this virtual link's authentication type to MD5.
----------------	---

```

DXS-3600-32S(config-router)#area 0.0.0.1 virtual-link 4.4.4.4 authentication message-digest
message-digest-key 1 md5 1234567812345678
DXS-3600-32S(config-router)#

```

## 40-7 clear ip ospf process

This command is used to restart the OSPF process.

```
clear ip ospf process [vrf vrf-name]
```

### Parameters

<b>vrf vrf-name</b>	(Optional) Specifies to restart OSPF VRF instance.
---------------------	--

<b>Default</b>	None.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 8. (EI Mode Only Command)
<b>Usage Guideline</b>	Use this command to restart the OSPF protocol. If the OSPF is disabled before this command executed, nothing will be done.

**Example** This example shows how to restart OSPF.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#clear ip ospf process
DXS-3600-32S(config)#
```

**Example** This example shows how to restart the OSPF instance in VRF VPN-A:

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#clear ip ospf process vrf VPN-A
DXS-3600-32S(config)#
```

## 40-8 default-information originate

This command is used to generate a default external route (AS external LSA) into the OSPF routing domain. Use no command to disable the generation of AS external LSA default route.

```
default-information originate [always] [metric metric-value]
no default-information originate [always] [metric metric-value]
```

### Parameters

<b>always</b>	(Optional) Always generate the default route regardless of existence of a local default route.
<b>metric metric-value</b>	(Optional) Specifies the cost associated the generated default route. The value range is 1 to 65535.

<b>Default</b>	By default, this function is disabled. The default value of metric is 1.
<b>Command Mode</b>	Router Configuration Mode.
<b>Command Default Level</b>	Level: 8. (EI Mode Only Command)
<b>Usage Guideline</b>	When the <b>default-information originate</b> command is used to import an AS external default route (network 0.0.0.0/0) into an OSPF routing domain, the router will automatically becomes an ASBR.

If **always** is specified, the default route is generated all the time. If **always** is not specified, the default route will only be generated when the default route exists locally.

Users can verify the settings by entering the **show ip ospf** command.



**Example** This example shows how to enable the default-information originate function and set the metric to 10.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router ospf
DXS-3600-32S(config-router)#default-information originate metric 10
DXS-3600-32S(config-router)#default-information originate always
DXS-3600-32S(config-router)#
```

## 40-9 default-metric

This command is used to set the default metric value of OSPF redistributed routes. Use the no command to restore to the default value.

```
default-metric metric
no default-metric
```

### Parameters

<i>metric</i>	Specifies the default metric value of OSPF redistributed routes. The value range is 1 to 16777214.
---------------	--

<b>Default</b>	The default metric value of OSPF redistributed routes is 20.
<b>Command Mode</b>	Router Configuration Mode.
<b>Command Default Level</b>	Level: 8. (EI Mode Only Command)
<b>Usage Guideline</b>	<p>The <b>default-metric</b> command is used in conjunction with the <b>redistribute</b> command to cause the OSPF to use the default metric value for the redistributed routes that have no metric specified.</p> <p>Precedence of setting to determine the metric are: set metric in route map &gt; metric in redistributed command &gt; default-metric setting.</p> <p>Users can verify the settings by entering the <b>show ip ospf</b> command.</p>

**Example** This example shows how to set the default metric value of OSPF redistributed routes to 10.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router ospf
DXS-3600-32S(config-router)#default-metric 10
DXS-3600-32S(config-router)#
```

## 40-10 route-preference ospf

This command is used to set the management route preference of different types of OSPF routes. Use the no command to restore to the default value.

```
route-preference ospf {intra-area value | inter-area value | external-1 value | external-2 value}
no route-preference ospf
```

### Parameters

<b>intra-area <i>value</i></b>	(Optional) Specifies the route preference for all routes within an area. The value range is 1 to 999.
<b>inter-area <i>value</i></b>	(Optional) Specifies the route preference for all routes from one area to another area. The value range is 1 to 999.

<b>external-1</b> <i>value</i>	(Optional) Specifies the route preference for type-1 routes from other routing domains. The value range is 1 to 999.
<b>external-2</b> <i>value</i>	(Optional) Specifies the route preference for type-2 routes from other routing domains. The value range is 1 to 999.

<b>Default</b>	The default values are: <b>intra-area:</b> 80. <b>inter-area:</b> 90 <b>external-1:</b> 110 <b>external-2:</b> 115
<b>Command Mode</b>	Router Configuration Mode.
<b>Command Default Level</b>	Level: 8. (EI Mode Only Command)
<b>Usage Guideline</b>	Use this command to set the route preference of different types of OSPF routes. A route preference is a rating of the trustworthiness of a routing information source, such as an individual router or a group of routers. In general, the higher the value, the lower the trust rating is.  Please note that changing route preference of routes may cause routing loop.  Users can verify the settings by entering the <b>show ip route-preference</b> command.

**Example** This example shows how to change route preference of OSPF routes.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router ospf
DXS-3600-32S(config-router)#route-preference ospf intra-area 50
DXS-3600-32S(config-router)#
```

## 40-11 distribute-list in

This command is used to configure LSA filtering. Use the no command to restore to the default value.

```
distribute-list list-name in [ipif_name]
no distribute-list list-name in [ipif_name]
```

### Parameters

<i>list-name</i>	Specifies to use one access list.
<i>ipif_name</i>	(Optional) Specifies the name of the interface. If not specified, the configuration will apply to all interfaces.

<b>Default</b>	By default no distribute list in is configured.
<b>Command Mode</b>	Router Configuration Mode.
<b>Command Default Level</b>	Level: 8. (EI Mode Only Command)
<b>Usage Guideline</b>	This configuration filters OSPF routes, and those matching the filtering conditions will be or not be inserted into routing table with the access list permitting or denying clause. It does not affect the link status database or the routing table of the neighbors. It only affects the routing entries calculated by the local OSPF.  In the case, if there are one ECMP route, and one next hop of the ECMP route math the denying clause of access list, the route also should not be inserted into routing table with other next hops, namely the ECMP route is filtered from the routing table.  Users can verify the settings by entering the <b>show ip ospf interface</b> command.

**Example** This example shows how to set the distribute list in on the System interface.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router ospf
DXS-3600-32S(config-router)#distribute-list 3 in System
DXS-3600-32S(config-router)#
```

## 40-12 ip ospf authentication

This command is used to configure the authentication type for an OSPF interface. Use the no command to restore to default value.

```
ip ospf authentication [{message-digest | null}]
no ip ospf authentication
```

### Parameters

<b>message-digest</b>	(Optional) Specifies to use the MD5 authentication.
<b>null</b>	(Optional) Specifies that no authentication is used.

**Default** By default no authentication is configured.

**Command Mode** Interface Configuration Mode.

**Command Default Level** Level: 8. (EI Mode Only Command)

**Usage Guideline** The authentication type can be simple password authentication or MD5 authentication.

Use **no ip ospf authentication** or **ip ospf authentication null** command to remove the authentication.

Users can verify the settings by entering the **show ip ospf interface** command.

**Example** This example shows how to set the System interface (VLAN 1) authentication type to simple password.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface vlan 1
DXS-3600-32S(config-if)#ip ospf authentication
DXS-3600-32S(config-if)#ip ospf authentication-key yourpass
DXS-3600-32S(config-if)#
```

**Example** This example shows how to set the System interface (VLAN 1) authentication type to MD5.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface vlan 1
DXS-3600-32S(config-if)#ip ospf authentication message-digest
DXS-3600-32S(config-if)#ip ospf message-digest-key 10 md5 yourpass
DXS-3600-32S(config-if)#
```

**Example** This example shows how to remove the authentication on System interface (VLAN 1).

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface vlan 1
DXS-3600-32S(config-if)#ip ospf authentication null
DXS-3600-32S(config-if)#
```

**Example** This example shows how to remove the authentication on System interface (VLAN 1).

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface vlan 1
DXS-3600-32S(config-if)#no ip ospf authentication
DXS-3600-32S(config-if)#
```

## 40-13 ip ospf authentication-key

This command is used to configure the plain text authentication key for an OSPF interface. Use the no command to delete the plain text authentication key.

```
ip ospf authentication-key password
no ip ospf authentication-key
```

### Parameters

<i>password</i>	Specifies up to 8 bytes for the plain text authentication key. The syntax is general string that does not allow space.
-----------------	--

**Default** By default no key is configured.

**Command Mode** Interface Configuration Mode.

**Command Default Level** Level: 8. (EI Mode Only Command)

**Usage Guideline** This command creates a password (key) that is inserted into the OSPF header when the router originates routing protocol packets. Assign a separate password to each network for different interfaces. Routers on the same network must use the same password to be able to exchange OSPF routing data.

Use the **ip ospf authentication** command to enable authentication. Configure the routers in the same routing domain with the same password.

Users can verify the settings by entering the **show ip ospf interface** command.

**Example** This example shows how to set the System interface (VLAN 1) authentication type to simple password.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface vlan 1
DXS-3600-32S(config-if)#ip ospf authentication
DXS-3600-32S(config-if)#ip ospf authentication-key yourpass
DXS-3600-32S(config-if)#
```

## 40-14 ip ospf cost

This command is used to configure the cost of sending a packet on an OSPF interface. Use the no command to restore to the default value.

```
ip ospf cost cost
no ip ospf cost
```

### Parameters

<i>cost</i>	Specifies the OSPF interface cost. The value range is 1 to 65535.
-------------	---

<b>Default</b>	The default value is 1
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	<p>The interface cost reflects the overhead for sending the packet across the interface. This cost is advertised as the link cost in the router link advertisement. The cost is inversely proportional to the speed of an interface. The cost can be either manually assigned or be automatically determined.</p> <p>Users can verify the settings by entering the <b>show ip ospf interface</b> command.</p>
<b>Example</b>	This example shows how to set System interface's OSPF interface cost to 2,

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface vlan 1
DXS-3600-32S(config-if)#ip ospf cost 2
DXS-3600-32S(config-if)#
```

## 40-15 ip ospf dead-interval

This command is used to configure the interval during which at least one hello packet from a neighbor must be received before it is declared dead. Use the no command to restore it to the default value.

```
ip ospf dead-interval seconds
no ip ospf dead-interval
```

### Parameters

<i>seconds</i>	Specifies the interval in seconds. The value range is 1 to 65535.
----------------	---

<b>Default</b>	The default interval is 40 seconds.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	<p>The dead-interval is the amount of time that the router waits to receive an OSPF hello packet from the neighbor before declaring the neighbor down. This value is advertised in the router's hello packets. It must be the same for all routers on a specific network.</p> <p>Please note that the dead-interval can not be less than the hello-interval and must be multiple times as hello-interval.</p> <p>Users can verify the settings by entering the <b>show ip ospf interface</b> command.</p>

**Example** This example shows how to set the dead-interval of System interface (VLAN 1) to 60 seconds.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface vlan 1
DXS-3600-32S(config-if)#ip ospf dead-interval 60
DXS-3600-32S(config-if)#
```

## 40-16 ip ospf hello-interval

This command is used to configure the interval between hello packets. Use the no command to restore it to the default value.

```
ip ospf hello-interval seconds
no ip ospf hello-interval
```

### Parameters

<i>seconds</i>	Specifies the interval in seconds. The value range is 1 to 65535.
----------------	---

**Default** The default interval is 10 seconds.

**Command Mode** Interface Configuration Mode.

**Command Default Level** Level: 8. (**EI Mode Only Command**)

**Usage Guideline** The hello-interval is advertised in the hello packets.

Configure the same hello-interval for all routers on a specific network. A shorter hello interval ensures faster detection of topological changes but generates more routing traffic and might cause routing instability.

Please note that the dead-interval can not be less than the hello-interval and must be multiple times as hello-interval.

Users can verify the settings by entering the **show ip ospf interface** command.

**Example** This example shows how to set the hello-interval of System interface (VLAN 1) to 60 seconds.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface vlan 1
DXS-3600-32S(config-if)#ip ospf hello-interval 50
DXS-3600-32S(config-if)#
```

## 40-17 ip ospf message-digest-key

This command is used to configure the MD5 digest key for OSPF interface. Use the no command to delete the MD5 key.

```
ip ospf message-digest-key key-id md5 key
no ip ospf message-digest-key
```

### Parameters

<i>key-id</i>	Specifies a value for MD5 key identifier. The value range is 1 to 255.
<i>key</i>	Specifies up to 16 characters for the OSPF MD5 message digest key. The syntax is general string that does not allow space.

**Default** By default no MD5 key is configured.

**Command Mode** Interface Configuration Mode.

**Command Default Level** Level: 8. (**EI Mode Only Command**)

**Usage Guideline**

The authentication for OSPF messages can be either operated in password mode or MD5 digest mode. This command defines the message digest key used by the MD5 digest mode.

In MD5 digest mode, the OSPF message sender will compute a message digest based on the message digest key for the TX message. The message digest and the key ID will be encoded in the packet. The receiver of the packet will verify the digest in the message against the digest computed based on the locally defined message digest key corresponding to the same key ID.

The same key ID on the neighboring router should be defined with the same key string.

All the neighboring routers on the same interface must use the same key to exchange the OSPF packet with each other. Normally, all neighboring routers on the interface use the same key

Users can verify the settings by entering the **show ip ospf interface** command.

**Example**

This example shows how to set the System interface (VLAN 1) authentication type to MD5.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface vlan 1
DXS-3600-32S(config-if)#ip ospf authentication message-digest
DXS-3600-32S(config-if)#ip ospf message-digest-key 10 md5 yourpass
DXS-3600-32S(config-if)#
```

**40-18 ip ospf priority**

This command is used to configure the router priority that is used to determine the designated router for the network. Use the no command to restore it to the default value.

```
ip ospf priority priority
no ip ospf priority
```

**Parameters**

<i>priority</i>	Specifies the priority of the router on the interface. The value range is 0 to 255.
-----------------	---

**Default**

The default priority is 1.

**Command Mode**

Interface Configuration Mode.

**Command Default Level**

Level: 8. (EI Mode Only Command)

**Usage Guideline**

The OSPF router will determine a designated router for the multi-access network. This command sets the priority used to determine the OSPF Designated Router (DR) for a network. If two routers attempt to become the DR, the router with the higher router priority will be elected the DR. If the routers have the same priority, the router with the higher router ID takes precedence.

Only routers with nonzero router priority values are eligible to become the designated or backup designated router.

Users can verify the settings by entering the **show ip ospf interface** command.

**Example** This example shows how to set the priority of the System interface (VLAN 1) to 50.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface vlan 1
DXS-3600-32S(config-if)#ip ospf priority 50
DXS-3600-32S(config-if)#
```

## 40-19 network area

This command is used to enable OSPF routing with a specified Area ID on interfaces with IP addresses that match or belong to the specified network address. Use the no command to remove the configuration.

```
network ipaddr netmask area area-id
no network ipaddr netmask area area-id
```

### Parameters

<i>ipaddr</i>	Specifies the IP address of the interface.
<i>netmask</i>	Specifies the IP netmask of the interface.
<i>area-id</i>	Specifies the identifier of the area to be associated with the OSPF address range.

<b>Default</b>	All interfaces belong to backbone area. The OSPF is disabled on each interface.
<b>Command Mode</b>	Router Configuration Mode.
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	OSPF routing can be enabled per IPv4 subnet basis. Each subnet can belong to one particular OSPF area.  Use no form of this command to remove the subnet from one particular OSPF area to backbone area and the administrative state of the interface becomes disabled. When the area range are configured, and the area range network contain the subnet, the subnet should be moved into the area of the range. And user can't change the area of the network, and when the ospf status of the subnet is enable, user can't configure the status of subnet to disable, except remove the area range configuration.  Users can verify the settings by entering the <b>show ip ospf</b> or <b>show ip ospf interface</b> command.

**Example** This example shows how to enable OSPF interface (10.1.1.1/8) and set it to area 0.0.0.1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router ospf
DXS-3600-32S(config-router)#network 10.1.1.1 255.0.0.0 area 0.0.0.1
DXS-3600-32S(config-router)#
```

## 40-20 passive-interface

This command is used to configure the specified OSPF interface as passive interface. Use the no command to restore to the default value.

```
passive-interface {default | interface ipif_name}
no passive-interface {default | interface ipif_name}
```



## Parameters

<b>default</b>	Specifies all the interfaces as passive interfaces.
<b>interface</b> <i>ipif_name</i>	Specifies the interface with this name as passive interface.

<b>Default</b>	By default, no interface is configured as passive interface.
<b>Command Mode</b>	Router Configuration Mode.
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	If an interface is passive, the OSPF protocol packets are neither sent nor received through the specified interface.  Users can verify the settings by entering the <b>show ip ospf interface</b> command.

**Example** This example shows how to set all the interfaces to be passive.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router ospf
DXS-3600-32S(config-router)#passive-interface default
DXS-3600-32S(config-router)#
```

**Example** This example shows how to set the System interface to be passive.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router ospf
DXS-3600-32S(config-router)#passive-interface interface System
DXS-3600-32S(config-router)#
```

## 40-21 redistribute

This command is used to redistribute external routing information into the OSPF routing domain. Use no command to disable redistribution.

**redistribute** {connected | static | rip | bgp} [**metric** *metric* | **metric-type** {1 | 2} | **route-map** *map-name*]  
**no redistribute** {connected | static | rip | bgp} [**metric** *metric* | **metric-type** {1 | 2} | **route-map** *map-name*]

## Parameters

<b>connected</b>	Specifies to redistribute connected routes to OSPF.
<b>static</b>	Specifies to redistribute static routes to OSPF.
<b>rip</b>	Specifies to redistribute rip routes to OSPF.
<b>bgp</b>	Specifies to redistribute bgp routes to OSPF.
<b>metric</b> <i>metric</i>	(Optional) Specifies the metric for the redistributed routes. The value range is 0-16777214. If it is not specified or specified as 0, the redistributed routes will be associated with the metric as specified with the command <b>default-metric</b> .
<b>metric-type</b> {1   2}	(Optional) Allows the selection of one of two methods for calculating the metric value. <ol style="list-style-type: none"> <li>1 - Calculates the metric (for other routing protocols to OSPF) by adding the destination's interface cost to the metric entered in the Metric field.</li> <li>2 - Uses the metric entered in the Metric field without change. If the metric type is not specified, it will be type 2.</li> </ol>
<b>route-map</b> <i>map-name</i>	(Optional) Specifies a route map which will be used as the criteria to determine whether to redistribute specific routes. This map-name can be up to 16 characters long.

<b>Default</b>	By default route redistribution is disabled. By default <b>metric-type</b> is 2. By default no route map is used.
<b>Command Mode</b>	Router Configuration Mode.
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	External Routes can be redistributed to normal area as type 5 external routes, and redistributed to NSSA stub area as type 7 external routes by ASBR.  The external route type can be type 1 or type 2. If the redistributed external route is of type 1, the metric represents the internal metric. If the redistributed external route is of type 2, the metric represents the external metric. An internal metric will consider the cost of the route from itself to the redistributing router plus the advertised cost to reach the destination. An external metric only considers the advertised metric to reach the destination.  By default, connected and static route will not be re-distributed either. Use the redistribute or the default-information router configuration commands make the router becomes an ASBR. If a metric is not specified, metric will be the value set by default metric command. If no value specified by default metric, routes redistributed from other protocols will get 20 as the metric value with the following exception. BGP will get 1 as the metric value.  Note that if the redistricted route is a default route, then the metric is determined by default-information originate command.  Users can verify the settings by entering the <b>show ip ospf</b> command.

**Example** This example shows how to enable redistribution of RIP routes into the OSPF routing domain and set the metric to 5.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router ospf
DXS-3600-32S(config-router)#redistribute rip metric 5 metric-type 1
DXS-3600-32S(config-router)#
```

## 40-22 router ospf

This command is used to enable OSPF and enter the router configuration mode. Use the no form of this command to disable OSPF.

```
router ospf [vrf vrf-name]
no router ospf [vrf vrf-name]
```

### Parameters

<b>vrf vrf-name</b>	(Optional) Specifies to restart OSPF VRF instance.
---------------------	--

<b>Default</b>	By default OSPF is disabled and no OSPF VRF instance is created.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )

**Usage Guideline**

Use this command to enter router configuration mode to configure parameters needed by OSPF. If **vrf** is not specified, the global OSPF instance will be enabled. If **vrf** is specified, a new OSPF VRF instance will be created and enter router configuration mode and in such condition, all settings are applied to the OSPF VRF instance. Using the **no** form of this command without **vrf** specified, the OSPF will be disabled. Using the **no** form of this command with **vrf** specified, the OSPF VRF instance will be destroyed and all configurations of this instance will be removed.

Users can verify the settings by entering the **show ip ospf** command.

**Example**

This example shows how to enter the router configuration mode and enable OSPF.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router ospf
DXS-3600-32S(config-router)#
```

**Example**

This example shows how to disable OSPF.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#no router ospf
DXS-3600-32S(config)#
```

**Example**

This example show how to create a new OSPF instance in VRF VPN-A and enter router configuration mode:

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)# router ospf vrf VPN-A
DXS-3600-32S(config-router)#
```

**40-23 router-id**

This command is used to configure the router ID. Use the no command to restore to the default value.

```
router-id router-id
no router-id
```

**Parameters**

<i>router-id</i>	Specifies the router ID in IPv4 address format.
------------------	---

**Default**

The *router-id* is automatically chosen based on the highest IP address present on the router.

**Command Mode**

Router Configuration Mode.

**Command Default Level**

Level: 8. (EI Mode Only Command)

**Usage Guideline**

Router ID is a 32-bit number assigned to each router running the OSPF protocol. This number uniquely identifies the router within an Autonomous System. You must configure each router with a unique router-id.

Users can verify the settings by entering the **show ip ospf** command.

**Example**

This example shows how to set the router-id to 1.1.1.1

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router ospf
DXS-3600-32S(config-router)#router-id 1.1.1.1
DXS-3600-32S(config-router)#
```

**Example**

This example shows how to restore the router-id to auto-select.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router ospf
DXS-3600-32S(config-router)#no router-id
DXS-3600-32S(config-router)#
```

---

**40-24 show ip ospf**

This command is used to Use this command to show general information about OSPF.

```
show ip ospf [vrf vrf-name]
```

**Parameters**

---

<b>vrf</b> <i>vrf-name</i>	(Optional) Specifies to show brief information about the OSPF VRF instance.
----------------------------	---

---

**Default** None.

**Command Mode** Privileged EXEC Mode.

**Command Default Level** Level: 3. (**EI Mode Only Command**)

**Usage Guideline** Display general OSPF protocol information. It provides system-wise statistics and per area statistics for OSPF.

**Example**

This example shows how to check OSPF settings.

```

DXS-3600-32S#show ip ospf

OSPF Router ID : 10.90.90.90
State          : Disabled

Default Information Originate:
State : Enabled
Always : On
Metric : 10

OSPF Interface Settings

Interface      IP Address      Area ID      State      Link      Metric
-----
System        10.1.1.1/24    0.0.0.0     Enabled   Link Up    1

OSPF Area Settings

Area ID      Type      Stub Import Summary LSA Stub Default Cost Translate
-----
0.0.0.0     Normal   None
0.0.0.1     NSSA    Disabled      1          Disabled
0.0.0.2     Stub    Disabled      1          None

Virtual Interface Configuration

Transit      Virtual      Hello      Dead      Authentication Link
Area ID      Neighbor Router Interval Interval
-----
4.4.4.4      1.1.1.1     10         60         MD5           Up

OSPF Area Aggregation Settings

Area ID      Aggregated      LSDB      Advertise
Network Address Type
-----
0.0.0.1     192.168.0.0/16 NSSA-Ext Enabled

OSPF Redistribution Settings

Source      Destination      Type      Metric      RouteMapName
Protocol Protocol
-----
RIP         OSPF              Type-1    5

DXS-3600-32S#

```

**Display Parameters****Description**

<b>Interface</b>	Name of the interface.
<b>IP Address</b>	IP address of the source used to send out OSPF packet to neighbor.
<b>State</b>	The administrative state of this interface, it is enabled by the command <b>network area</b> .
<b>Area ID</b>	The area this interface belongs to. It is specified with the command <b>network area</b> .
<b>Link Status</b>	The lower layer link status of the interface.
<b>Metric</b>	OSPF interface cost. It is specified with the command <b>ip ospf cost</b> .
<b>Area ID</b>	Identifier of area. ID 0.0.0.0 is backbone area.
<b>Type</b>	Type of area. It could be normal, stub or NSSA.

Display Parameters	Description
<b>Stub Import Summary LSA</b>	Whether to prohibit summary routes advertised into the area. It is only for stub or NSSA area. It is specified with the command <b>area stub</b> or <b>area nssa</b> .
<b>Stub Default Cost</b>	The cost for the default summary route used for a stub or NSSA area. It is specified with the command <b>area default-cost</b> .
<b>Translate</b>	Whether on NSSA area leak the type-7 LSA outside to other areas. It is only for NSSA area and specified with the command <b>area nssa</b> .
<b>Transit Area ID</b>	The non-backbone area the two endpoints of virtual link have in common.
<b>Virtual Neighbor Router</b>	Router ID of the other endpoint of the virtual link.
<b>Hello Interval</b>	The interval between hello packets. It is specified with the command <b>area virtual-link</b> .
<b>Dead Interval</b>	The interval during which at least one hello packet from a virtual neighbor must be received before it is declared dead. It is specified with the command <b>area virtual-link</b> .
<b>Authentication</b>	The authentication type used by the virtual link. It is specified with the command <b>area virtual-link</b> .
<b>Link Status</b>	When the other endpoint is reachable according to routing table, the virtual link is link up. Or it is link down.
<b>Area ID</b>	The area from which the routes will be summarized. It is specified with the command <b>area range</b> .
<b>Aggregated Network Address</b>	The network segment whose routes are to be aggregated. It is specified with the command <b>area range</b> .
<b>LSDB Type</b>	If the area is normal, it is used for summary LSA. If the area is NSSA, it is used for type-7 LSA.
<b>Advertise</b>	If the area range will be advertised. It is specified with the command <b>area range</b> .
<b>Source Protocol</b>	The source route domain of redistribution. It is specified with the <b>redistribute</b> command.
<b>Destination Protocols</b>	The destination route domain of redistribution.
<b>Type</b>	The methods for calculating the metric value. It is specified with the <b>redistribute</b> command. <b>Type-1</b> calculates the metric (for other routing protocols to OSPF) by adding the destination's interface cost to the metric entered in the Metric field. <b>Type-2</b> uses the metric entered in the Metric field without change.
<b>Metric</b>	Metric of routes redistributed into OSPF domain. It is specified with the <b>redistribute</b> command.
<b>RouteMapName</b>	Route map name used to filter routes redistributed into OSPF domain. It is specified with the <b>redistribute</b> command.

**Example**

This example show how to check the OSPF settings in the VRF VPN-A.

```

DXS-3600-32S#show ip ospf vrf VPN-A

OSPF On VRF : VPN-A
Router ID : 100.1.1.1 (Auto selected)
State      : Enabled

Default Information Originate:
State      : Disabled
Always     : Off
Metric     : 1

OSPF Interface Settings

Interface      IP Address      Area ID      State      Link      Metric
-----
ip100         100.1.1.1/24    0.0.0.0      Disabled   Link Up    1

OSPF Area Settings

Area ID      Type      Stub Import Summary LSA Stub Default Cost Translate
-----
0.0.0.0      Normal   None
None
None

Virtual Interface Configuration

Transit      Virtual      Hello      Dead      Authentication Link
Area ID      Neighbor Router Interval Interval          Status
-----

OSPF Area Aggregation Settings

Area ID      Aggregated      LSDB      Advertise
Network Address Type

OSPF Redistribution Settings

Source      Destination      Type      Metric      RouteMapName
Protocol Protocol

DXS-3600-32S#

```

**40-25 show ip ospf area**

This command is used to show general information about OSPF areas.

```
show ip ospf area [area-id] [vrf vrf-name]
```

**Parameters**

<b>vrf vrf-name</b>	(Optional) Specifies to show area information about the OSPF VRF instance.
<b>area-id</b>	(Optional) Displays detailed information about the specified area.

<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 3. (EI Mode Only Command)

**Usage Guideline**

This command is used to show OSPF areas information. When the area ID is specified, the detail information about this area will be displayed.

**Example**

This example shows how to check OSPF area settings.

```
DXS-3600-32S#show ip ospf area

OSPF Area Settings

Area ID          Type    Stub Import Summary LSA Stub Default Cost Translate
-----
0.0.0.0          Normal None                               None           None
0.0.0.1          NSSA   Disabled                          1              Disabled
0.0.0.2          Stub   Disabled                          1              None

DXS-3600-32S#
```

**Display Parameters****Description**

<b>Area ID</b>	Identifier of area. ID 0.0.0.0 is backbone area.
<b>Type</b>	Type of area. It could be normal, stub or NSSA.
<b>Stub Import Summary LSA</b>	Whether to prohibit summary routes advertised into the area. It is only for stub or NSSA area. It is specified with the command <b>area stub</b> or <b>area nssa</b> .
<b>Stub Default Cost</b>	The cost for the default summary route used for a stub or NSSA area. It is specified with the command <b>area default-cost</b> .
<b>Translate</b>	Whether on NSSA area leak the type-7 LSA outside to other areas. It is only for NSSA area and specified with the command <b>area nssa</b> .

**Example**

This example shows how to check OSPF areas 0.0.0.0 detail information.

```
DXS-3600-32S#show ip ospf area 0.0.0.0

Area ID: 0.0.0.0                Area Type: Normal
SPF algorithm runs for area 0.0.0.0: 0 time
Number of LSA in this area: 0    Checksum Sum: 0x0
Number of ABR in this area: 0    Number of ASBR in this area: 0

DXS-3600-32S#
```

**Display Parameters****Description**

<b>Area ID</b>	Identifier of area. ID 0.0.0.0 is backbone area.
<b>Area Type</b>	Type of area. It could be normal, stub or NSSA. It is specified with the command <b>area</b> , <b>area stub</b> and <b>area nssa</b> .
<b>SPF algorithm runs for area</b>	The times of SPF calculation in this area.
<b>Number of LSA in this area</b>	The count of LSAs in this area.
<b>Checksum Sum</b>	The sum of checksum for all LSAs in this area.
<b>Number of ABR in this area</b>	The count of area border router in this area.
<b>Number of ASBR in this area</b>	The count of AS boundary router in this area.

**Example**

This example show how to check the OSPF areas settings in the VRF VPN-A:

```
DXS-3600-32S#show ip ospf area vrf VPN-A

OSPF Area Settings (VRF : VPN-A)

Area ID          Type    Stub Import Summary LSA Stub Default Cost Translate
-----
0.0.0.0          Normal None                               None           None

DXS-3600-32S#
```



## 40-26 show ip ospf database

This command is used to display a database summary for OSPF information.

```
show ip ospf [vrf vrf-name] [area-id] database [{asbr-summary | external | network | router | summary | nssa-external | stub}] [{adv-device router-id | self-originate}]
```

### Parameters

<b>vrf</b> <i>vrf-name</i>	(Optional) Specifies to show LSA information about the OSPF VRF instance.
<b>area-id</b>	(Optional) Specifies the area ID.
<b>asbr-summary</b>	(Optional) Specifies to only show ASBR summary LSA information.
<b>external</b>	(Optional) Specifies to only show AS external LSA information.
<b>network</b>	(Optional) Specifies to only show Network LSA information.
<b>router</b>	(Optional) Specifies to only show Router LSA information.
<b>summary</b>	(Optional) Specifies to only show Summary LSA information.
<b>nssa-external</b>	(Optional) Specifies to only show NSSA type-7 LSA information.
<b>stub</b>	(Optional) Specifies to only show all LSA information in stub and NSSA area.
<b>adv-device</b> <i>router-id</i>	(Optional) Specifies to display the LSA information generated by the specified advertising device.
<b>self-originate</b>	(Optional) Specifies to display the LSA information generated by the device itself.

<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 3. (EI Mode Only Command)
<b>Usage Guideline</b>	In following cases, the detailed information of LSAs will be displayed: <ol style="list-style-type: none"> <li>1. LSA type is specified as <b>asbr-summary</b>, <b>external</b>, <b>network</b>, <b>router</b>, <b>summary</b>, <b>nssa-external</b> or <b>stub</b>.</li> <li>2. Area ID is specified.</li> <li>3. Self-originate is specified.</li> <li>4. Adv-device is specified.</li> </ol>

**Example** This example shows brief information about all LSAs.

```
DXS-3600-32S#show ip ospf database
```

Area ID	LSDB Type	Advertising Router ID	Link State ID	Cost	Sequence Number
0.0.0.0	RTRLink	1.1.1.1	1.1.1.1/0	*	0x8000000E
0.0.0.0	RTRLink	2.2.2.2	2.2.2.2/0	*	0x80000013
0.0.0.0	NETLink	2.2.2.2	10.1.1.2/24	*	0x8000000C
0.0.0.2	RTRLink	1.1.1.1	1.1.1.1/0	*	0x80000002
0.0.0.2	Summary	1.1.1.1	0.0.0.0/0	1	0x80000002
0.0.0.2	Summary	1.1.1.1	10.1.1.0/24	1	0x80000002
0.0.0.2	Summary	1.1.1.1	30.1.1.0/24	2	0x80000001

```
DXS-3600-32S#
```

**Example** This example shows detailed information of LSAs in area 0.0.0.0.

```
DXS-3600-32S#show ip ospf 0.0.0.0 database

Area ID: 0.0.0.0                LS Type: Router Link
Link State ID: 1.1.1.1/0        Advertising Router: 1.1.1.1
Link State Age: 1462
Checksum: 0x68BA                LS Sequence Number: 0x8000000E

Area ID: 0.0.0.0                LS Type: Router Link
Link State ID: 2.2.2.2/0        Advertising Router: 2.2.2.2
Link State Age: 1468
Checksum: 0x531                 LS Sequence Number: 0x80000013

Area ID: 0.0.0.0                LS Type: Network Link
Link State ID: 10.1.1.2/24      Advertising Router: 2.2.2.2
Link State Age: 1468
Checksum: 0xF735                LS Sequence Number: 0x8000000C

DXS-3600-32S#
```

**Example** This example shows detailed information of all Router LSAs in area 0.0.0.0.

```
DXS-3600-32S#show ip ospf 0.0.0.0 database router

Area ID: 0.0.0.0                LS Type: Router Link
Link State ID: 1.1.1.1/0        Advertising Router: 1.1.1.1
Link State Age: 120
Checksum: 0x66BB                LS Sequence Number: 0x8000000F

Area ID: 0.0.0.0                LS Type: Router Link
Link State ID: 2.2.2.2/0        Advertising Router: 2.2.2.2
Link State Age: 126
Checksum: 0x332                 LS Sequence Number: 0x80000014

DXS-3600-32S#
```

**Example** This example shows detailed information of all LSAs originated by self.

```
DXS-3600-32S#show ip ospf database self-originate

Area ID: 0.0.0.0                LS Type: Router Link
Link State ID: 1.1.1.1/0        Advertising Router: 1.1.1.1
Link State Age: 175
Checksum: 0x66BB                LS Sequence Number: 0x8000000F

DXS-3600-32S#
```

Display Parameters	Description
Area ID	The area this LSA belongs to.
LSDB Type	The LSA type.
Advertising Router ID	The ID of the router originates this LSA.
Link State ID	The link state ID of this LSA.
Cost	The cost used by route calculating.
Sequence Number	The sequence number of the LSA.
LS Type	The LSA type.
Advertising Router	The ID of the router originates this LSA.
Link State Age	The age of the LSA.
Checksum	The checksum of the LSA.
LS Sequence Number	The sequence number of the LSA.

## 40-27 show ip ospf interface

This command is used to display interface information for OSPF.

```
show ip ospf interface [ipif_name] [vrf vrf-name]
```

### Parameters

<i>ipif_name</i>	(Optional) Specifies the interface name to display the OSPF information.
<i>vrf vrf-name</i>	(Optional) Specifies to show interface information about the OSPF VRF instance.

<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 3. (EI Mode Only Command)
<b>Usage Guideline</b>	Use this command to check OSPF interface settings.

**Example** This example shows information of all OSPF interfaces.

```
DXS-3600-32S#show ip ospf interface

Interface Name: vlan1                IP Address: 0.0.0.0/0 (Link Down)
Network Medium Type: Broadcast       Metric: 2
Area ID: 0.0.0.0                    Administrative State: Disabled
Priority: 50                          DR State: Down
DR Address: None                     Backup DR Address: None
Hello Interval: 10                   Dead Interval: 60
Transmit Delay: 1                    Retransmit Time: 5
Authentication: MD5                  MD5 Key ID for Authentication: 10
Passive Mode: Enabled

DXS-3600-32S#
```

**Example** This example shows information of System interfaces.

```
DXS-3600-32S#show ip ospf interface System

Interface Name: System                IP Address: 10.1.1.1/24 (Link Up)
Network Medium Type: BROADCAST       Metric: 1
Area ID: 0.0.0.0                    Administrative State: Enabled
Priority: 1                           DR State: BDR
DR Address: 10.1.1.2                 Backup DR Address: 10.1.1.1
Hello Interval: 10                   Dead Interval: 40
Transmit Delay: 1                    Retransmit Time: 5
Authentication: None
Passive Mode: Disabled

DXS-3600-32S#
```

Display Parameters	Description
<b>Interface Name</b>	Name of the interface.
<b>IP Address</b>	IP address of the source used to send out OSPF packet to neighbor.
<b>Network Medium Type</b>	The type of OSPF network.
<b>Metric</b>	OSPF interface cost. It is specified with the command <b>ip ospf cost</b> .
<b>Area ID</b>	The area this interface belongs to. It is specified with the command <b>network area</b> .
<b>Administrative State</b>	The administrative state of this interface. It is specified with the command <b>network area</b> .

Display Parameters	Description
<b>DR State</b>	Interface state machine. It may be DR, BDR, OTHER, WAIT or DOWN.
<b>DR Address</b>	The IP address of the Designated Router.
<b>Backup DR Address</b>	The IP address of the Backup Designated Router.
<b>Hello Interval</b>	The interval between hello packets. It is specified with the command <b>ip ospf hello-interval</b> .
<b>Dead Interval</b>	The interval during which at least one hello packet from a neighbor must be received before it is declared dead. It is specified with the command <b>ip ospf dead-interval</b> .
<b>Transmit Delay</b>	The estimated number of seconds it takes to transmit a Link State Update Packet over this interface. It is not configurable and always is 1.
<b>Retransmit Time</b>	The number of seconds between LSA retransmissions, for adjacencies belonging to this interface. It is not configurable and always is 5.
<b>Authentication</b>	The authentication type used on this interface. It is specified with the command <b>ip ospf authentication</b> .
<b>Passive Mode</b>	The status of passive. It is specified with the command <b>passive-interface</b> .
<b>Distribute List In</b>	The inbound filter used on this interface. It is specified with the command <b>distribute-list in</b> .

## 40-28 show ip ospf neighbor

This command is used to display information on OSPF neighbors.

```
show ip ospf neighbor [{detail | ipaddr}] [vrf vrf-name]
```

### Parameters

<i>ipaddr</i>	(Optional) Specifies the IP address of neighbor.
<b>detail</b>	(Optional) Specifies to display detailed information of neighbors.
<i>vrf vrf-name</i>	(Optional) Specifies to show neighbor information about the OSPF VRF instance.

<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 3. (EI Mode Only Command)
<b>Usage Guideline</b>	Use this command to display information on OSPF neighbors. If the <b>detail</b> or <i>ipaddr</i> is specified, detailed information of neighbors will be displayed.

**Example** This example shows brief information about all OSPF neighbors.

```
DXS-3600-32S#show ip ospf neighbor
```

```
IP Address of   Router ID of   Neighbor Neighbor
Neighbor       Neighbor     Priority State
-----
10.1.1.2       2.2.2.2      1          Full
```

```
DXS-3600-32S#
```

**Example** This example shows detailed information about neighbor with IP 10.1.1.2.

```
DXS-3600-32S#show ip ospf neighbor 2.2.2.2

Neighbor ID: 2.2.2.2                IP Address: 10.1.1.2
Neighbor Options: 2                 Neighbor Priority: 1
Neighbor State: Full                State Changes: 6 times

DXS-3600-32S#
```

Display Parameters	Description
IP Address of Neighbor	Interface address of the neighbor router.
Router ID of Neighbor	Router ID of the neighbor router.
Neighbor Priority	Priority of the neighbor router.
Neighbor State	State machine of adjacency.
Neighbor Options	Option in the Hello packet sent by neighbor router.
State Changes	The times that neighbor state has changed.

## 40-29 show ip ospf virtual-link

This command is used to show information about OSPF virtual links.

```
show ip ospf virtual-link [area-id neighbor-id] [vrf vrf-name]
```

### Parameters

<i>area-id</i>	(Optional) Specifies the area ID which the virtual link belongs to.
<i>neighbor-id</i>	(Optional) Specifies the router ID of peer of virtual link.
<i>vrf vrf-name</i>	(Optional) Specifies to show virtual link information about the OSPF VRF instance.

<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 3. (EI Mode Only Command)
<b>Usage Guideline</b>	Use this command to show virtual link information. If area-id and neighbor-id is specified, only the virtual link with the same area ID and neighbor ID will be displayed.

**Example** This example shows information about virtual link.

```
DXS-3600-32S#show ip ospf virtual-link

Virtual Interface Configuration

Transit      Virtual      Hello      Dead      Authentication  Link
Area ID      Neighbor Router Interval Interval          Status
-----
4.4.4.4      1.1.1.1     10         60        MD5              Up
4.4.4.4      6.6.6.6     10         250       Simple           Down

DXS-3600-32S#
```

Display Parameters	Description
Transit Area ID	The non-backbone area the two endpoints of virtual link have in common.
Virtual Neighbor Router	Router ID of the other endpoint of the virtual link.

Display Parameters	Description
<b>Hello Interval</b>	The interval between hello packets. It is specified with the command <b>area virtual-link</b> .
<b>Dead Interval</b>	The interval during which at least one hello packet from a virtual neighbor must be received before it is declared dead. It is specified with the command <b>area virtual-link</b> .
<b>Authentication</b>	The authentication type used by the virtual link. It is specified with the command <b>area virtual-link</b> .
<b>Link Status</b>	When the other endpoint is reachable according to routing table, the virtual link is link up. Or it is link down.

## 40-30 show ip ospf virtual-neighbor

This command is used to display information on OSPF neighbors built on virtual links.

```
show ip ospf virtual-neighbor [area-id neighbor-id] [vrf vrf-name]
```

### Parameters

<i>area-id</i>	(Optional) Specifies the area ID which the virtual neighbor belongs to.
<i>neighbor-id</i>	(Optional) Specifies the router ID of virtual neighbor.
<b>vrf vrf-name</b>	(Optional) Specifies to show virtual neighbor information about the OSPF VRF instance.

<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 3. (EI Mode Only Command)
<b>Usage Guideline</b>	Use this command to display information of OSPF neighbors on virtual links. If the <i>area-id</i> and <i>neighbor-id</i> is specified, only the virtual neighbor with the same area ID and neighbor ID will be displayed. If no parameter is specified, brief information about all OSPF virtual neighbors will be displayed.

**Example** This example shows how to display information about a virtual neighbor.

```
DXS-3600-32S#show ip ospf virtual-neighbor
```

```
Transit      Router ID of      IP Address of      Virtual Neighbor
Area ID      Virtual Neighbor  Virtual Neighbor   State
-----
1.1.1.1      2.2.2.2           100.1.1.1         Full
```

```
DXS-3600-32S#
```

Display Parameters	Description
<b>Transit Area ID</b>	The non-backbone area between the two endpoints of a virtual neighbor in common.
<b>Router ID of Virtual Neighbor Router</b>	Router ID of the other endpoint of the virtual neighbor.
<b>IP Address of Virtual Neighbor</b>	IP address of the other endpoint of the virtual neighbor.
<b>Virtual Neighbor State</b>	State machine of adjacency.

## 40-31 debug ip ospf

This command is used to turn on OSPF debug function. Use the no form of this command to turn off OSPF debug function.

```
debug ip ospf
no debug ip ospf
```

<b>Parameters</b>	None.
<b>Default</b>	By default OSPF debug function is turned off.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 15. (EI Mode Only Command)
<b>Usage Guideline</b>	Use this command to turn on or turn off OSPF debug function while the global debug function has been turned on before.

**Example** This example shows how to turn on the OSPF debug function.

```
DXS-3600-32S#debug ip ospf
DXS-3600-32S#
```

## 40-32 debug ip ospf neighbor

This command is used to turn on the OSPF neighbor state debug switch. Use the no form of the command to turn off the OSPF neighbor state debug switch.

```
debug ip ospf neighbor
no debug ip ospf neighbor
```

<b>Parameters</b>	None.
<b>Default</b>	By default, the OSPF neighbor state debug switch is turned off.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 15. (EI Mode Only Command)
<b>Usage Guideline</b>	Use this command to turn on or turn off OSPF neighbor state debug switch. When neighbor state changes or some events happen to change neighbor state, debug information will print if OSPF debug function is turned on.

Use the command **debug ip ospf** to turn on the OSPF debug function.

**Example** This example shows how to turn on the OSPF neighbor state debug switch.

```
DXS-3600-32S#debug ip ospf neighbor
DXS-3600-32S#

NBR 2.2.2.2 state change from LOADING to FULL tic 100
NBR 3.3.3.3 state change from FULL to DOWN tic 100
```

## 40-33 debug ip ospf interface

This command is used to turn on the OSPF interface state debug switch. Use the no form of the command to turn off the OSPF interface state debug switch.

```
debug ip ospf interface
no debug ip ospf interface
```

<b>Parameters</b>	None.
-------------------	-------

<b>Default</b>	By default, the OSPF interface state debug switch is turned off.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 15. (EI Mode Only Command)
<b>Usage Guideline</b>	Use this command to turn on or turn off OSPF interface state debug switch. When OSPF interface state changes or some events happen to change interface state, debug information will print. When DR selection happens, debug information will also print if OSPF debug function is turned on.  Use the command <b>debug ip ospf</b> to turn on the OSPF debug function.

**Example** This example shows how to turn on the OSPF interface state debug switch.

```
DXS-3600-32S#debug ip ospf interface
DXS-3600-32S#

intf 10.1.1.1 up tic 10
intf 100.1.1.1 down tic 20
OSPF: Select DR: 2.2.2.2
OSPF: Select BDR: 1.1.1.1
```

#### 40-34 debug ip ospf lsa-originating

This command is used to turn on the OSPF LSA originating debug switch. Use the no form of the command to turn off the OSPF LSA originating debug switch.

```
debug ip ospf lsa-originating
no debug ip ospf lsa-originating
```

<b>Parameters</b>	None.
<b>Default</b>	By default, the OSPF LSA originating debug switch is turned off.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 15. (EI Mode Only Command)
<b>Usage Guideline</b>	Use this command to turn on or turn off OSPF LSA originating debug switch. When LSA is originated, debug information will be print if OSPF debug function is turned on.  Use the command <b>debug ip ospf</b> to turn on the OSPF debug function.

**Example** This example shows how to turn on the OSPF LSA originating debug switch.

```
DXS-3600-32S#debug ip ospf lsa-originating
DXS-3600-32S#

Build Router LSA id 100.1.1.2 for area 0.0.0.0 seq 80000001 tic 10
```

#### 40-35 debug ip ospf lsa-flooding

This command is used to turn on the OSPF LSA flooding debug switch. Use the no form of the command to turn off the OSPF LSA flooding debug switch.

```
debug ip ospf lsa-flooding
no debug ip ospf lsa-flooding
```

<b>Parameters</b>	None.
-------------------	-------



<b>Default</b>	By default, the OSPF LSA flooding debug switch is turned off.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 15. <b>(EI Mode Only Command)</b>
<b>Usage Guideline</b>	Use this command to turn on or turn off OSPF LSA flooding debug switch. When LSA is received, added into local database or flooded to neighboring router, the debug information will be print if OSPF debug function is turned on.  Use the command <b>debug ip ospf</b> to turn on the OSPF debug function.

**Example** This example shows how to turn on the OSPF LSA flooding debug switch.

```
DXS-3600-32S#debug ip ospf lsa-flooding
DXS-3600-32S#
```

```
Received LSA type 1 id 2.2.2.2 from nbr 2.2.2.2 in area 0.0.0.0 seq 80000001 csum fe3a tic 15
Flood LSAs in area 0.0.0.0 tic 15
```

### 40-36 debug ip ospf packet-receiving

This command is used to turn on the OSPF packet receiving debug switch. Use the no form of the command to turn off the OSPF packet receiving debug switch.

```
debug ip ospf packet-receiving
no debug ip ospf packet-receiving
```

<b>Parameters</b>	None.
<b>Default</b>	By default, the OSPF packet receiving debug switch is turned off.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 15. <b>(EI Mode Only Command)</b>
<b>Usage Guideline</b>	Use this command to turn on or turn off OSPF packet receiving debug switch. When one OSPF protocol packet is received, the debug information will be print if OSPF debug function is turned on.  Use the command <b>debug ip ospf</b> to turn on the OSPF debug function.

**Example** This example shows how to turn on the OSPF packet receiving debug switch.

```
DXS-3600-32S#debug ip ospf packet-receiving
DXS-3600-32S#
```

```
Received a Hello packet from addr 10.1.1.2 at interface System tic 100
Received a Hello packet from addr 100.1.1.2 at interface ip100 tic 102
```

### 40-37 debug ip ospf packet-transmitting

This command is used to turn on the OSPF packet transmitting debug switch. Use the no form of the command to turn off the OSPF packet transmitting debug switch.

```
debug ip ospf packet-transmitting
no debug ip ospf packet-transmitting
```

<b>Parameters</b>	None.
<b>Default</b>	By default, the OSPF packet transmitting debug switch is turned off.
<b>Command Mode</b>	Privileged EXEC Mode.

<b>Command Default Level</b>	Level: 15. (EI Mode Only Command)
<b>Usage Guideline</b>	Use this command to turn on or turn off OSPF packet transmitting debug switch. When one OSPF protocol packet is sent out, the debug information will be print if OSPF debug function is turned on.  Use the command <b>debug ip ospf</b> to turn on the OSPF debug function.

**Example** This example shows how to turn on the OSPF packet transmitting debug switch.

```
DXS-3600-32S#debug ip ospf packet-transmitting
DXS-3600-32S#

Send out a Hello on interface 10.1.1.1 dst 255.0.0.5 tic 200
Send out a Hello on interface 100.1.1.1 dst 255.0.0.5 tic 220
```

## 40-38 debug ip ospf spf

This command is used to turn on the OSPF SPF calculation debug switch. Use the no form of the command to turn off the OSPF SPF calculation debug switch.

```
debug ip ospf spf
no debug ip ospf spf
```

<b>Parameters</b>	None.
<b>Default</b>	By default, the OSPF SPF calculation switch is turned off.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 15. (EI Mode Only Command)
<b>Usage Guideline</b>	Use this command to turn on or turn off OSPF SPF calculation debug switch. When one SFP calculation is processing, the debug information will be print if OSPF debug function is turned on.  Use the command <b>debug ip ospf</b> to turn on the OSPF debug function.

**Example** This example shows how to turn on the OSPF SPF calculation debug switch.

```
DXS-3600-32S#debug ip ospf spf
DXS-3600-32S#

Running SPF-intra for area 0.0.0.0 tic 300
SPF-intra calculation completed tic 310
```

## 40-39 debug ip ospf timer

This command is used to turn on the OSPF timer debug switch. Use the no form of the command to turn off the OSPF timer debug switch.

```
debug ip ospf timer
no debug ip ospf timer
```

<b>Parameters</b>	None.
<b>Default</b>	By default, the OSPF timer switch is turned off.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 15. (EI Mode Only Command)

**Usage Guideline** Use this command to turn on or turn off OSPF timer debug switch. When the event related to OSPF timer happens, the debug information will be print if OSPF debug function is turned on.

Use the command **debug ip ospf** to turn on the OSPF debug function.

**Example** This example shows how to turn on the OSPF timer debug switch.

```
DXS-3600-32S#debug ip ospf timer
DXS-3600-32S#

Start Hello timer at interface 10.90.90.90 tic 20
Wait timer expired at interface 10.90.90.90 tic 100
```

## 40-40 debug ip ospf virtual-link

This command is used to turn on the OSPF virtual link debug switch. Use the no form of the command to turn off the OSPF virtual link debug switch.

**debug ip ospf virtual-link**  
**no debug ip ospf virtual-link**

**Parameters** None.

**Default** By default, the OSPF virtual link switch is turned off.

**Command Mode** Privileged EXEC Mode.

**Command Default Level** Level: 15. (EI Mode Only Command)

**Usage Guideline** Use this command to turn on or turn off OSPF virtual link debug switch. When the event related to OSPF virtual link happens, the debug information will be print.

Use the command **debug ip ospf** to turn on the OSPF debug function.

**Example** This example shows how to turn on the OSPF virtual link debug switch.

```
DXS-3600-32S#debug ip ospf virtual-link
DXS-3600-32S#

Virtual link up transit area 1.1.1.1 vnbr 3.3.3.3 tic 260
```

## 40-41 debug ip ospf route

This command is used to turn on the OSPF route debug switch. Use the no form of the command to turn off the OSPF route debug switch.

**debug ip ospf route**  
**no debug ip ospf route**

**Parameters** None.

**Default** By default, the OSPF route switch is turned off.

**Command Mode** Privileged EXEC Mode.

**Command Default Level** Level: 15. (EI Mode Only Command)

**Usage Guideline** Use this command to turn on or turn off OSPF route debug switch. When one OSPF route is added, updated or deleted, the debug information will be print if OSPF debug function is turned on.

Use the command **debug ip ospf** to turn on the OSPF debug function.

**Example** This example shows how to turn on the OSPF route debug switch.

```
DXS-3600-32S#debug ip ospf route
DXS-3600-32S#
```

```
Add an OSPF route level 1 dst 172.18.1.1 mask 255.255.255.0 nh cnt 1 cost 10 cost2: 0 tic: 300
```

## 40-42 debug ip ospf redistribution

This command is used to turn on the OSPF redistribution debug switch. Use the no form of the command to turn off the OSPF redistribution debug switch.

**debug ip ospf redistribution**  
**no debug ip ospf redistribution**

**Parameters** None.

**Default** By default, the OSPF redistribution switch is turned off.

**Command Mode** Privileged EXEC Mode.

**Command Default Level** Level: 15. (EI Mode Only Command)

**Usage Guideline** Use this command to turn on or turn off OSPF redistribution debug switch. When one route of other protocol is redistributed into OSPF or not redistributed into OSPF any more, the debug information will be print if OSPF debug function is turned on.

Use the command **debug ip ospf** to turn on the OSPF debug function.

**Example** This example shows how to turn on the OSPF redistribution debug switch.

```
DXS-3600-32S#debug ip ospf redistribution
DXS-3600-32S#
```

```
Import AS external route from src 5 net 192.1.1.1 mask 255.255.255.0 type 2 cost 50 fwd
10.1.1.100 tic 500
```

## 40-43 debug ip ospf show counter

This command is used to display the OSPF statistic counter.

**debug ip ospf show counter [packet | neighbor | spf]**

### Parameters

<b>packet</b>	Specifies to display the OSPF packet counter.
<b>neighbor</b>	Specifies to display the OSPF neighbor counter.
<b>spf</b>	Specifies to display the OSPF SPF event counter.

**Default** None.

**Command Mode** Privileged EXEC Mode.

<b>Command Default Level</b>	Level: 15. (EI Mode Only Command)
<b>Usage Guideline</b>	Use this command to check statistic information about the OSPF packet, neighbor and SPF calculation.
<b>Example</b>	This example displays all OSPF statistic counters.

```
DXS-3600-32S#debug ip ospf show counter
```

#### OSPF Debug Statistic Counters

##### Packet Receiving:

```
Total   : 5
Hello   : 5
DD      : 0
LSR     : 0
LSU     : 0
LSAck   : 0
Drop    : 0
Auth Fail : 0
```

##### Packet Sending:

```
Total   : 5
Hello   : 5
DD      : 0
LSR     : 0
LSU     : 0
LSAck   : 0
```

##### Neighbor State:

```
Change : 3
SeqMismatch : 0
```

##### SPF Calculation:

```
Intra   : 1
Inter   : 1
Extern  : 1
```

```
DXS-3600-32S#
```

## 40-44 debug ip ospf clear counter

This command is used to reset the OSPF statistic counter.

```
debug ip ospf clear counter [packet | neighbor | spf]
```

### Parameters

<b>packet</b>	Specifies to reset the OSPF packet counter.
<b>neighbor</b>	Specifies to reset the OSPF neighbor counter.
<b>spf</b>	Specifies to reset the OSPF SPF event counter.

<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 15. (EI Mode Only Command)
<b>Usage Guideline</b>	Use this command to reset the OSPF statistic counter. After reset, the specified counter will change to 0.

**Example** This example shows how to reset all OSPF statistic counters.

```
DXS-3600-32S#debug ip ospf clear counter
DXS-3600-32S#
```

## 40-45 debug ip ospf show database

This command is used to display detailed information about OSPF LSDB.

```
debug ip ospf show database {rt-link | net-link | summary-link | external-link | type7-link}
```

### Parameters

<b>rt-link</b>	Specifies to display information about the <b>rt-link</b> parameter.
<b>net-link</b>	Specifies to display information about the <b>net-link</b> parameter.
<b>summary-link</b>	Specifies to display information about the <b>summary-link</b> parameter.
<b>external-link</b>	Specifies to display information about the <b>external-link</b> parameter.
<b>type7-link</b>	Specifies to display information about the <b>type7-link</b> parameter.

<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 15. (EI Mode Only Command)
<b>Usage Guideline</b>	Use this command to check detailed information about OSPF LSDB.

**Example** This example displays detailed information about Router LSA.

```
DXS-3600-32S#debug ip ospf show database rt-link

OSPF Phase2 RT Link:
=====
AREA 0.0.0.0:
Router LSA:
Link-State ID: 100.1.1.2
Advertising Router: 100.1.1.2
LS Age: 10 Seconds
Options: 0x2
.... ..0 = 0 Bit Isn't Set
.... ..1. = E: ExternalRoutingCapability
.... .0.. = MC: NOT Multicast Capable
.... 0... = N/P: NSSA Bit
...0 .... = EA: Not Support Rcv And Fwd EA_LSA
..0. .... = DC: Not Support Handling Of Demand Circuits
.0.. .... = O: O Bit Isn't Set
0... .... = 7 Bit Isn't Set
LS Sequence Number: 0x80000001
Length: 36
Flags: 0x0
.... ..0 = B: NO Area Border Router
.... ..0. = E: NO AS Boundary Router
.... .0.. = V: NO Virtual Link Endpoint
Number Of Links: 1
Type: Stub      ID: 10.1.1.0      Data: 255.255.255.0      Metric: 1
Internal Field:
Del_flag: 0x0  I_ref_count: 0  Seq: 0x80000001  Csum: 0x4d28
Rxtime: 0  Txtime: 0  Orgage: 0
Current Time: 10

DXS-3600-32S#
```

## 40-46 debug ip ospf show request-list

This command is used to display current LSA information of internal OSPF request list.

**debug ip ospf show request-list**

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 15. (EI Mode Only Command)
<b>Usage Guideline</b>	Use this command to check the information about LSAs OSPF is requesting to neighbors.

**Example** This example shows displays the current requested LSA.

```
DXS-3600-32S#debug ip ospf show request-list
OSPF Request List:
*Area 0.0.0.0:
Circuit: 1.1.1.1
Neighbor: 90.2.0.1 IP: 1.1.1.2
LSID: 192.194.134.0 RTID: 90.2.0.1 Type 257 Seq 0x8000002f
LSID: 192.194.135.0 RTID: 90.2.0.1 Type 257 Seq 0x8000002f
LSID: 192.194.136.0 RTID: 90.2.0.1 Type 257 Seq 0x8000002f
LSID: 192.194.137.0 RTID: 90.2.0.1 Type 257 Seq 0x8000002f
LSID: 192.194.138.0 RTID: 90.2.0.1 Type 257 Seq 0x8000002f
DXS-3600-32S#
```

**40-47 debug ip ospf show redistribution**

This command is used to display the current internal OSPF redistribution list.

**debug ip ospf show redistribution**

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 15. (EI Mode Only Command)
<b>Usage Guideline</b>	Use this command to check the information about the external route imported into OSPF.

**Example** This example displays the external routes imported into OSPF.

```
DXS-3600-32S#debug ip ospf show redistribution
OSPF Redistribution List:
IP                Nexthop          State Type Tag
-----
1.1.1.0/24       0.0.0.0         ON    2    0.0.0.0

OSPF ASE Table:
IP                Nexthop          State Type Tag
-----
1.1.1.0/24       0.0.0.0         ON    2    0.0.0.0
DXS-3600-32S#
```

## 40-48 debug ip ospf show summary-list

This command is used to display the current internal OSPF summary list.

```
debug ip ospf show summary-list
```

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 15. (EI Mode Only Command)
<b>Usage Guideline</b>	Use this command to check the LSA information on summary-list which is used to exchange with neighbors.

**Example** This example displays the LSA information on summary-list.

```
DXS-3600-32S#debug ip ospf show summary-list
```

```
OSPF Summary List:
```

```
Area 0.0.0.0:
```

```
Circuit: 1.1.1.1
```

```
Neighbor: 90.2.0.1 IP: 1.1.1.2
```

```
LSID: 1.1.1.1 RTID: 1.1.1.1
```

```
Circuit: 2.2.2.1
```

```
Circuit: 10.1.1.6
```

```
DXS-3600-32S#
```

## 40-49 debug ip ospf log

This command is used to turn on the OSPF debug log function. Use the no form of this command to turn off the OSPF debug log function.

```
debug ip ospf log
no debug ip ospf log
```

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 15. (EI Mode Only Command)
<b>Usage Guideline</b>	Use this command to turn on or turn off the OSPF debug log function. When some important OSPF events happen, some system log entries will be added.

**Example** This example shows how to turn on the OSPF debug log function.

```
DXS-3600-32S#debug ip ospf log
```

```
DXS-3600-32S#
```



# Password Recovery Commands

The first two commands, listed in this chapter, are only available when the user enters the Password Recovery mode. For more information about how to access the Password Recovery mode, see [“Appendix A - Password Recovery Procedure” on page 664](#).

## 41-1 clear

This command is used to clear the password, username or password on the current device.

```
clear {levelpassword | username | configure}
```

### Parameters

<b>levelpassword</b>	Specifies to clear the password for each level.
<b>username</b>	Specifies to clear all the usernames and passwords on the device and set the line authentication to <b>no login local</b> , <b>no login</b> , and <b>no login authentication</b> at the same time.
<b>configure</b>	Specifies to clear all the configurations on the DUT.

<b>Default</b>	None.
<b>Command Mode</b>	EXEC Mode in Password Recovery Mode.
<b>Command Default Level</b>	Level: 1
<b>Usage Guideline</b>	When the password is lost, or the username information is lost, the user can enter the password recovery mode and use this command to clear the level, clear the username or clear the configuration.

**Example** This example shows how to clear the configuration to factory default settings.

```
>clear configure
>
```

**Example** This example shows how to clear the level password to factory default settings.

```
>clear levelpassword
>
```

**Example** This example shows how to clear the local authentication database to factory default settings.

```
>clear username
>
```

## 41-2 reload

This command is used to reboot the switch.

```
reload
```

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	EXEC Mode in Password Recover Mode.
<b>Command Default Level</b>	Level: 1
<b>Usage Guideline</b>	Used to reboot the switch.

**Example** This example shows how to reboot the switch, using the **reload** command.

```
>reload
Save current settings before system restart?(y/n) y
Please wait, the switch is rebooting...
```

### 41-3 password-recover

This command is used to enable the password recover option. The no form of this command is used to disable this option.

```
password-recover
no password-recover
```

<b>Parameters</b>	None.
<b>Default</b>	By default, this option is enabled.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	This command is used to enable the password recover option. The no form of this command is used to disable this option.

**Example** This example shows how to disabled the password recover option.

```
DXS-3600-32S#configure ter
DXS-3600-32S(config)#no password-recover
DXS-3600-32S(config)#
```

**Example** This example shows how to enable the password recover option.

```
DXS-3600-32S#configure ter
DXS-3600-32S(config)#password-recover
DXS-3600-32S(config)#
```

### 41-4 show password-recover

This command is used to display the password recover option's state on the switch.

```
show password-recover
```

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	EXEC Mode.
<b>Command Default Level</b>	Level: 1
<b>Usage Guideline</b>	This command is used to display the password recover option's state on the switch.

**Example** This example shows how to display the password recover option's state.

```
DXS-3600-32S#show password-recover

Running Configuration :Enabled
NV-RAM Configuration  :Enabled

DXS-3600-32S#
```

# Peripheral Commands

## 42-1 show system-info

This command is used to show system information.

**show system-info**

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 3
<b>Usage Guideline</b>	This command shows the system information.

**Example** This example shows how to show the system information.

```
DXS-3600-32S#show system-info
```

```
Device Type           : DXS-3600-32S TenGigabit Ethernet Switch
MAC Address           : 00-01-02-03-04-00
IP Address            : 0.0.0.0 (Manual)
VLAN Name             : default
Subnet Mask           : 0.0.0.0
Default Gateway       : 0.0.0.0
Boot PROM Version     : Build 1.10.007
Firmware Version      : Build 1.10.023
Hardware Version      :
Firmware Type         : EI
Serial Number         : D1234567890
System Name           :
System Location       :
System Uptime         : 0 days, 0 hours, 0 minutes, 41 seconds
System Contact        :
```

```
DXS-3600-32S#
```

## 42-2 show device-status

This command is used to show the device status.

**show device-status**

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 3
<b>Usage Guideline</b>	This command shows the device's status about the temperature, fan and power. It includes the temperature log state. This command also shows the working state of the power and fan.

**Example** This example shows the device status.

```
DXS-3600-32S#show device-status

Temperature Log State      : Enabled
Current Temperature(Celsius) : 20
Power 1                    : Active
Power 2                    : Fail
FAN 1                     : Speed Middle (10598 RPM)
FAN 2                     : Speed Middle (10485 RPM)
FAN 3                     : Speed Middle (10743 RPM)

DXS-3600-32S#
```

---

## 42-3 logging-server enable device

This command is used to enable the sending of log packets about peripheral devices. Use the no command to disable the sending of log packets.

**logging-server enable device**  
**no logging-server enable device**

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	Use the command to enable the sending of log packets about peripheral devices. Use the no command to disable the sending of log packets.

**Example** This example shows how to enable the sending of log packets about Peripheral devices.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#logging-server enable device
DXS-3600-32S(config)#
```

# Port Commands

## 43-1 interface

This command is used to enter the interface configure mode.

```
interface {tenGigabitEthernet <port>}
interface range {tenGigabitEthernet <portlist>}
```

### Parameters

<b>tenGigabitEthernet &lt;port&gt;</b>	Specifies that the Ten Gigabit Ethernet is the port type which want to configure, the <port> is define the ports which want to configure
<b>tenGigabitEthernet &lt;portlist&gt;</b>	Specifies that the Ten Gigabit Ethernet is the port type which want to configure, the <portlist> is define the ports which want to configure

<b>Default</b>	None.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	To configure the attribute of the port-interface, use this command the enter port configure mode.

**Example** This example shows how to configure the attributes of the port-interface.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#exit
DXS-3600-32S(config)#interface range tenGigabitEthernet 1/0/1-1/0/10
DXS-3600-32S(config-if-range)#
```

## 43-2 medium-type

This command is used to specify the medium type while the configure ports are combo ports.

```
medium-type {copper | fiber}
no medium-type
```

### Parameters

<b>copper</b>	Specifies that the copper port will be configured.
<b>fiber</b>	Specifies that the fiber port will be configured.

<b>Default</b>	None.
<b>Command Mode</b>	Port Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	To configure the attributes of the port-interface for a specified type of combo port. Use this command to change the medium type to the specified medium type.

**Example** This example shows how to configure the attributes of the port-interface.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#medium-type copper

Only combo port interface can configure medium type.

Failure

DXS-3600-32S(config-if)#exit
DXS-3600-32S(config)#interface range tenGigabitEthernet 1/0/1-1/0/10
DXS-3600-32S(config-if-range)#medium-type copper

Only combo port interface can configure medium type.

Failure

DXS-3600-32S(config-if-range)#
```

### 43-3 speed

This command is used to specify the speed of the ports.

```
speed {10 | 100 | 1000 | 10G | 40G | auto}
no speed
```

#### Parameters

<b>10</b>	Specifies to set the port interface speed to 10Mbps.
<b>100</b>	Specifies to set the port interface speed to 100Mbps.
<b>1000</b>	Specifies to set the port interface speed to 1Gbps.
<b>10G</b>	Specifies to set the port interface speed to 10Gbps.
<b>40G</b>	Specifies to set the port interface speed to 40Gbps.
<b>auto</b>	Specifies to set the port interface speed to auto-negotiation.

<b>Default</b>	10G.
<b>Command Mode</b>	Port Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	Configure the speed of port. No form means to set the port interface speed to default.

**Example** This example shows how to specify the speed of the ports.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#speed 10G
DXS-3600-32S(config-if)#exit
DXS-3600-32S(config)#interface range tenGigabitEthernet 1/0/1-1/0/10
DXS-3600-32S(config-if-range)#speed 10G
DXS-3600-32S(config-if-range)#
```

### 43-4 shutdown

This command is used to disable the port.

**shutdown**  
**no shutdown**

<b>Parameters</b>	None.
<b>Default</b>	By default, this option is disabled.
<b>Command Mode</b>	Port Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	None.

**Example** This example shows how to disable a port.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#shutdown
DXS-3600-32S(config-if)#exit
DXS-3600-32S(config)#interface range tenGigabitEthernet 1/0/1-1/0/10
DXS-3600-32S(config-if-range)#no shutdown
DXS-3600-32S(config-if-range)#
```

## 43-5 description

This command is used to specify the description of the ports.

**description** *WORD*  
**no description**

### Parameters

<i>WORD</i>	Specifies to set the description of the port interface.
-------------	---

<b>Default</b>	None.
<b>Command Mode</b>	Port Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	None.

**Example** This example shows how to specify the port description.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#description tengigabitethernet1
DXS-3600-32S(config-if)#exit
DXS-3600-32S(config)#interface range tenGigabitEthernet 1/0/1-1/0/10
DXS-3600-32S(config-if-range)#no description
DXS-3600-32S(config-if-range)#
```

## 43-6 duplex

This command is used to specify the communication system used.

**duplex** {full | half | auto}  
**no duplex**

### Parameters

<b>full</b>	Specifies that the communication system will be set to full-duplex.
-------------	---

<b>half</b>	Specifies that the communication system will be set to half-duplex.
<b>auto</b>	Specifies that the communication system will be set to auto-negotiation.

<b>Default</b>	None.
<b>Command Mode</b>	Port Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	None.

**Example** This example shows how to set the communication system for a port.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#duplex full
DXS-3600-32S(config-if)#exit
DXS-3600-32S(config)#interface range tenGigabitEthernet 1/0/1-1/0/10
DXS-3600-32S(config-if-range)#no duplex
DXS-3600-32S(config-if-range)#
```

## 43-7 flowcontrol

This command is used to specify the flow control.

```
flowcontrol {auto | on | off}
no flowcontrol
```

### Parameters

<b>auto</b>	Specifies that the flow control will be set to auto-negotiate.
<b>on</b>	Specifies that the flow control option will be enabled.
<b>off</b>	Specifies that the flow control option will be disabled.

<b>Default</b>	By default, this option is set to <b>auto</b> .
<b>Command Mode</b>	Port Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	None.

**Example** This example shows how to specify the flow control.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#flowcontrol on
DXS-3600-32S(config-if)#exit
DXS-3600-32S(config)#interface range tenGigabitEthernet 1/0/1-1/0/10
DXS-3600-32S(config-if-range)#no flowcontrol
DXS-3600-32S(config-if-range)#
```

## 43-8 mtu

This command is used to specify the Maximum Transmission Unit (MTU) of the port.

```
mtu <64-12288>
no mtu
```



## Parameters

---

<b>64-12288</b>	Specifies to set the Maximum Transmission Unit value. This value must be between 64 and 12288.
-----------------	--

---

<b>Default</b>	The default MTU value is 1536.
<b>Command Mode</b>	Port Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	This command is used to specify the Maximum Transmission Unit (MTU) of the port.

**Example** This example shows how to specify the Maximum Transmission Unit (MTU) of the port.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#mtu 1234
DXS-3600-32S(config-if)#exit
DXS-3600-32S(config)#interface range tenGigabitEthernet 1/0/1-1/0/10
DXS-3600-32S(config-if-range)#no mtu
DXS-3600-32S(config-if-range)#
```

---

## 43-9 snmp trap link-status

This command is used to specify the SNMP trap-link status.

```
snmp trap link-status
no snmp trap link-status
```

<b>Parameters</b>	None.
<b>Default</b>	By default, this option is enabled.
<b>Command Mode</b>	Port Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	To set the port interface send trap when port interface link changes. The no form, of this command, means not to send traps when a port interface link changes.

**Example** This example shows how to specify the SNMP trap-link status.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#snmp trap link-status
DXS-3600-32S(config-if)#exit
DXS-3600-32S(config)#interface range tenGigabitEthernet 1/0/1-1/0/10
DXS-3600-32S(config-if-range)#no snmp trap link-status
DXS-3600-32S(config-if-range)#
```

---

## 43-10 show interface

This command is used to display interface information.

```
show interface [{tenGigabitEthernet <portlist>}] [{description | status | switchport}]
```

### Parameters

---

<b>portlist</b>	Specifies the range of ports that will be displayed.
<b>description</b>	Specifies the interface description, including the link status.

---

<b>status</b>	Specifies the display the interface status.
<b>switchport</b>	Specifies to display Layer 2 interface information.

<b>Default</b>	None.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 1
<b>Usage Guideline</b>	Use this command to show the interface information.

**Example** This example shows how to display interface information of the 10G interface for port 1.

```
DXS-3600-32S#show interface tenGigabitEthernet 1/0/1
```

```
TenGigabitEthernet    : 1/0/1
Description           :
AdminStatus           : Enabled
OperStatus            : Disabled
Hardware              : 10GBASE-R
MTU                   : 1536
PhysAddress           : 00-01-02-03-05-00
AdminDuplex           : Full
OperDuplex            : Link Down
AdminSpeed            : 10G
OperSpeed             : Link Down
FlowControlAdminStatus : Enabled
FlowControlOperStatus : Link Down
Link Trap Status      : Disabled
```

```
DXS-3600-32S#
```

**Example** This example shows how to display the interface description of port 1.

```
DXS-3600-32S#show interface tenGigabitEthernet 1/0/1 description
```

```
Interface Status   Administrative Description
-----
TGi1/0/1 Disabled Enabled
```

```
DXS-3600-32S#
```

**Example** This example shows how to display **switchport** information of port 1.

```
DXS-3600-32S#show interface tenGigabitEthernet 1/0/1 switchport
```

```
Interface State/      Settings                Connection                Address
      MDIX           Speed/Duplex/FlowCtrl  Speed/Duplex/FlowCtrl  Learning
-----
TGi1/0/1 Enabled/Auto  10G/Full/Enabled      Link Down                Enabled
```

```
DXS-3600-32S#
```

## 43-11 show module-info

This command is used to display hot swapping expansion module information.

```
show module-info
```

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Global Configuration Mode.

**Command Default Level** Level: 1

**Usage Guideline** This command displays the hot swapping expansion module information.

**Example** This example show how to view the hot swapping expansion module information.

```
DXS-3600-32S#show module-info

Boot-UP Expansion Module (n)      :DXS-3600-EM-4XT
Equipped Expansion Module (n)     :DXS-3600-EM-4QXS
  1st port mode:40G
  2nd port mode:40G
  3rd port mode:4*10G
  4th port mode:4*10G

4QXS Port Mode Configuration:
  1st port mode:40G
  2nd port mode:40G
  3rd port mode:40G
  4th port mode:40G

DXS-3600-32S#
```

## 43-12 port\_mode

This command is used to configure the port mode of DXS-3600-EM-4QXS ports.

```
port_mode {[1st_port | 2nd_port | 3rd_port | 4th_port]} {4*10g | 40g}
```

### Parameters

<b>1st_port</b>	Specifies to the configure the first port mode.
<b>2nd_port</b>	Specifies to the configure the second port mode.
<b>3rd_port</b>	Specifies to the configure the third port mode.
<b>4th_port</b>	Specifies to the configure the fourth port mode.
<b>4*10g</b>	Specifies to the configure the all the port modes.
<b>40g</b>	Specifies to the configure the 40 Gigabit port mode.

**Default** None.

**Command Mode** Configuration Mode.

**Command Default Level** Level: 15

**Usage Guideline** This command configures the port mode to DXS-3600-EM-4QXS. This command only works when executing the command **copy configuration** to flash when the boot up module and current equipped module is DXS-3600-EM-4QXS.

**Example** This command configure the port mode of DXS-3600-EM-4QXS ports. The port mode can be set as 40g port and 4\*10G port.

```
DXS-3600-32S(config)#port_mode 1st_port 4*10g
DXS-3600-32S(config)#
```

# Port Security Commands

## 44-1 switchport port-security

This command is used to configure port security and the way to deal with violation of the interface. Use the no form of the command to disable the port security or recover it to the default.

```
switchport port-security [violation {protect | restrict | shutdown}]
no switchport port-security [violation]
```

### Parameters

<b>port-security</b>	Specifies to enable the port security function of this interface.
<b>violation protect</b>	Specifies to set the security violation to the protect mode. In this mode, when the number of port secure MAC address reaches the maximum limit allowed on the port, the packets with unknown source address will be dropped until you remove a sufficient number of secure MAC address or increase the number of maximum allowable address. When a security violation occurred, an SNMP trap is not sent, and a syslog message is not logged.
<b>violation restrict</b>	Specifies to set the security violation to the restrict mode. In this mode, when the number of port secure MAC address reaches the maximum limit allowed on the port, the packets with unknown source address will be dropped until you remove a sufficient number of secure MAC address or increase the number of maximum allowable address. At the same time, When a security violation occurred, an SNMP trap is not sent, but a syslog message is logged.
<b>violation shutdown</b>	Specifies to set the security violation to the shutdown mode. In this mode, when the number of port secure MAC address reaches the maximum limit allowed on the port, the port will become error-disabled and be shut down immediately. When a security violation occurred, an SNMP trap is not sent, but a syslog message is logged.

<b>Default</b>	The default is to disabled port security for all ports. The default violation mode is protect mode.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	With port security, you can use the port security feature to restrict input to an interface by limiting and identifying MAC addresses of the stations allowed to access the port. When you assign secure MAC addresses to secure port, the port does not forward packets with source addresses outside the group of defined addresses. If a port is configured as a secure port and maximum number of secure MAC addresses is reached, when the MAC address of a station attempting to access the port is different from any of the identified secure MAC addresses, a security violation occurs. In addition, a secure port has the following limitations: A secure port cannot belong to link aggregation port, and if the state of sticky learning is enabled, and disables port security, an error message will also prompt. And port security and 802.1x authentication are not compatibility.

**Example** This example shows how to enable port security on interface tenGigabitEthernet 1/0/1, and the way to deal with violation is restrict.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#switchport mode access
DXS-3600-32S(config-if)#switchport port-security
DXS-3600-32S(config-if)#switchport port-security violation restrict
DXS-3600-32S(config-if)#
```

**Example** This example shows how to disable port security on the interface tenGigabitEthernet 1/0/1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#switchport mode access
DXS-3600-32S(config-if)#no switchport port-security
DXS-3600-32S(config-if)#
```

**Example** This example shows how to set violation handling to the default mode for interface tenGigabitEthernet 1/0/1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#switchport mode access
DXS-3600-32S(config-if)#no switchport port-security violation
DXS-3600-32S(config-if)#
```

## 44-2 switchport port-security aging

This command is used to set the aging time for all secure addresses on an interface. In this way, you can make the switch automatically add or delete the secure addresses on the interface. Use the no form of the command to disable port security aging or to set the parameters to their default states.

**switchport port-security aging {static | time <min 1–1440> | type {absolute | inactivity}}**  
**no switchport port-security aging {static | time | type}**

### Parameters

<b>static</b>	Specifies to apply the aging time to manually configured secure addresses, sticky secure addresses and automatically learned addresses. Otherwise, apply it to only the automatically learned secure addresses.
<b>time</b>	Specifies the aging time for the secure address on this port. Its range is from 1 to 1440 in minutes. The aging time is the absolute time, which means that an address will be deleted automatically after the time specified expires after the address becomes the secure address of the port.
<b>type</b>	Specifies to set the aging type.
<b>absolute</b>	Specifies to set absolute aging type. All the secure addresses on this port age out exactly after the time specified and removed from the secure address list.
<b>inactivity</b>	Specifies to set the inactivity aging type. The secure addresses on this port age out only if there is no data traffic from the secure source address for the specified time period. If the aging time of mac address table is 0, when there is data traffic, the inactivity aging time is not effective for the secure addresses.

**Default** The port security aging feature is disabled.  
The default time is 0 minutes.  
The default aging type is absolute.

**Command Mode** Interface Configuration Mode.

**Command Default Level** Level: 15

**Usage Guideline** To disable port security aging for all secure addresses on a port, use **no switchport port-security aging time** interface configuration command. To disable aging for only statically configured secure addresses and sticky secure addresses, use the **no switchport port-security aging static** interface configuration command. To recover the type of aging time, use the **no switchport port-security aging type** interface configuration command.

**Example** This example shows how to configure the aging time and type for the manually configured secure address and automatically learnt addresses on interface tenGigabitEthernet 1/0/1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#switchport port-security aging time 8
DXS-3600-32S(config-if)#switchport port-security aging type absolute
DXS-3600-32S(config-if)#switchport port-security aging static
DXS-3600-32S(config-if)#
```

**Example** This example shows how to apply the aging time only for automatically learnt secure MAC addresses for interface tenGigabitEthernet 1/0/1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#no switchport port-security aging static
DXS-3600-32S(config-if)#
```

**Example** This example shows how to recover the port security aging time type for interface tenGigabitEthernet 1/0/1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#no switchport port-security aging type
DXS-3600-32S(config-if)#
```

**Example** This example shows how to disable the port security aging time for interface tenGigabitEthernet 1/0/1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#no switchport port-security aging time
DXS-3600-32S(config-if)#
```

### 44-3 switchport port-security mac-address

This command is used to configure the secure address table. Use the no form of the command to delete the configured address or sticky address of this interface.

```
switchport port-security [{mac-address <mac-address> [vlan <vlan-id>] | mac-address sticky [<mac-address> [vlan <vlan-id>]]}] [maximum <value 1-12288>]
no switchport port-security [{mac-address <mac-address> [vlan <vlan-id>] | mac-address sticky [<mac-address> [vlan <vlan-id>]]}] [maximum]
```

#### Parameters

<b>mac-address</b> <i>mac-address</i>	Specifies to set the secure MAC address of the port.
<b>mac-address sticky</b> <i>mac-address</i>	Specifies to set secure sticky MAC address of the port. These addresses can be dynamically learned or manually configured.
<b>vlan</b> <i>vlan-id</i>	Specifies, except an access port, the VLAN ID and the MAC address. If no VLAN ID is specified, the native VLAN is used.
<b>maximum</b>	Specifies to set the maximum number of the addresses in the secure address table. The range is from 1 to 12288.

**Default** Not set any secure MAC address.  
The default of maximum is 128.  
The default of sticky address is disabled.

**Command Mode** Interface Configuration Mode.

<b>Command Default Level</b>	Level 15 for creating configured addresses and sticky addresses and enable sticky learning and level 8 for configuring the maximum.
<b>Usage Guideline</b>	<p>The first command is used to create secure MAC address, sticky MAC address and set the maximum of addresses in the secure address table. All configured secure MAC address and sticky secure MAC addresses can be added to the running configuration file.</p> <p>When you configure the MAC address and sticky MAC addresses manually, if the number of secure addresses which have been learned has hit the maximum number of the interface, the command will be rejected and the error message will prompt.</p> <p>When you enter a maximum value for an interface, if the new value is greater than the number of addresses which have been learned, the new value will override the previously configured value. If the new value is less than the number of addresses which have been learned, the command will be rejected and the error message will prompt. To enable sticky learning, use <b>switchport port-security mac-address sticky</b> interface configuration command. When sticky learning is enabled, the interface will convert all the dynamic secure MAC addresses, including those that were dynamically learned before sticky learning was enabled, to sticky secure MAC addresses. If the state of port security is disabled, and enables sticky learning, an error message will prompt.</p> <p>To create sticky MAC addresses, use <b>switchport port-security mac-address sticky</b> mac-address interface configuration command. If the state of sticky learning is disabled, and enters the <b>switchport port-security mac-address sticky</b> mac-address interface configuration command, an error message will prompt, and the sticky secure MAC address is not added to the running configuration file. If the port is trunk port or hybrid port or dot1q-tunnel port, when no VLAN ID is specified, the MAC address will be added to native VLAN, and otherwise, it will be added to the VLAN specified, if the VLAN does not exist, an error message will prompt. And if the interface is not the member of the VLAN, an error message will prompt.</p> <p>To delete configured secure MAC address, use no <b>switchport port-security mac-address</b> interface configuration command. And the configured secure MAC addresses will be removed from address table and running configuration file.</p> <p>To disable sticky learning, use no <b>switchport port-security mac-address sticky</b> interface configuration command. And the sticky secure MAC addresses will be removed from address table.</p>

**Example** This example shows how to configure a secure address 00d0.f800.073c on the default VLAN for interface tenGigabitEthernet 1/0/1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#switchport mode access
DXS-3600-32S(config-if)#switchport port-security
DXS-3600-32S(config-if)#switchport port-security mac-address 00d0.f800.073c
DXS-3600-32S(config-if)#
```

**Example** This example shows how to configure a secure address 00d0.f800.073c on specified VLAN 3 for interface tenGigabitEthernet 1/0/1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#switchport mode trunk
DXS-3600-32S(config-if)#switchport port-security
DXS-3600-32S(config-if)#switchport port-security mac-address 00d0.f800.073c vlan 3
DXS-3600-32S(config-if)#
```

**Example** This example shows how to enable sticky learning for interface tenGigabitEthernet 1/0/1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#switchport mode trunk
DXS-3600-32S(config-if)#switchport port-security
DXS-3600-32S(config-if)#switchport port-security mac-address sticky
DXS-3600-32S(config-if)#
```

**Example** This example shows how to configure a sticky secure address 00d0.f800.073c on specified VLAN 3 for interface tenGigabitEthernet 1/0/1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#switchport mode trunk
DXS-3600-32S(config-if)#switchport port-security
DXS-3600-32S(config-if)#switchport port-security mac-address sticky 00d0.f800.073c vlan 3
DXS-3600-32S(config-if)#
```

**Example** This example shows how to delete the configured MAC address on specified VLAN for interface tenGigabitEthernet 1/0/1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#switchport mode trunk
DXS-3600-32S(config-if)#no switchport port-security mac-address 00d0.f800.073c vlan 3
DXS-3600-32S(config-if)#
```

**Example** This example shows how to delete the sticky MAC address to dynamic MAC addresses on specified VLAN for interface tenGigabitEthernet 1/0/1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#switchport mode trunk
DXS-3600-32S(config-if)#no switchport port-security mac-address sticky 00d0.f800.073c vlan 3
DXS-3600-32S(config-if)#
```

**Example** This example shows how to configure the maximum number of secure MAC addresses for interface tenGigabitEthernet 1/0/1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#switchport mode access
DXS-3600-32S(config-if)#switchport port-security
DXS-3600-32S(config-if)#switchport port-security maximum 100
DXS-3600-32S(config-if)#
```

**Example** This example shows how to recover the maximum number of secure MAC addresses for interface tenGigabitEthernet 1/0/1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#switchport mode access
DXS-3600-32S(config-if)#no switchport port-security maximum
DXS-3600-32S(config-if)#
```

#### 44-4 clear port-security

This command is used to delete all secure addresses of a specific type, including configured, sticky and dynamic on the interface.

```
clear port-security {all | configured | dynamic | sticky} [{address <mac-address> | interface <interface-id>}]
```



**Parameters**

<b>all</b>	Specifies to delete all secure MAC addresses.
<b>configured</b>	Specifies to delete configured secure MAC addresses.
<b>dynamic</b>	Specifies to delete secure MAC addresses learned automatically.
<b>sticky</b>	Specifies to delete sticky secure MAC addresses
<b>address &lt;mac-address&gt;</b>	Specifies to delete the specified secure MAC addresses.
<b>interface &lt;interface-id&gt;</b>	Specifies to delete secure MAC addresses on the specified interface.

<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	This command can clear all secure MAC addresses from the address table. When you enter an <i>interface-id</i> , the command deletes secure the MAC address from the interface.
<b>Example</b>	This example shows how to delete the all secure addresses from the MAC address table.

```
DXS-3600-32S#clear port-security all
DXS-3600-32S#
```

<b>Example</b>	This example shows how to delete a specified secure address from MAC address table.
----------------	---

```
DXS-3600-32S#clear port-security configured address 0008.0070.0007
DXS-3600-32S#
```

<b>Example</b>	This example shows how to delete a specific dynamic secure address from the MAC address table on the interface tenGigabitEthernet 1/0/1.
----------------	--

```
DXS-3600-32S#clear port-security dynamic interface tenGigabitEthernet 1/0/1
DXS-3600-32S#
```

**44-5 show port-security**

This command is used to show the port security settings.

```
show port-security [address] [interface <interface-id>]
```

**Parameters**

<b>address</b>	Specifies to display all the secure MAC addresses on all interfaces or a specified interface.
<b>interface &lt;interface-id&gt;</b>	Specifies to display port security settings for the specified interface.

<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 8

**Usage Guideline**

This command shows all the port security configurations, secure addresses and the way to deal with violation if no parameter is configured. When you enter the command without keywords, the output includes the administrative and operational status of all secure ports on the switch. When you enter an *interface-id*, the command displays port security setting for the interface. When you enter the **address** keyword, the command displays the secure MAC address for all interfaces and the aging information for each secure address.

**Example**

This example shows how to display the setting of all secure ports.

```
DXS-3600-32S#show port-security
```

Secure Port	MaxSecureAddr (count)	CurrentAddr (count)	Security	Action
TenGigabitEthernet1/0/1		128	0	Protect
TenGigabitEthernet1/0/2		128	0	Protect
TenGigabitEthernet1/0/3		128	0	Protect
TenGigabitEthernet1/0/4		128	0	Protect
TenGigabitEthernet1/0/5		128	0	Protect
TenGigabitEthernet1/0/6		128	0	Protect
TenGigabitEthernet1/0/7		128	0	Protect
TenGigabitEthernet1/0/8		128	0	Protect
TenGigabitEthernet1/0/9		128	0	Protect
TenGigabitEthernet1/0/10		128	0	Protect
TenGigabitEthernet1/0/11		128	0	Protect
TenGigabitEthernet1/0/12		128	0	Protect
TenGigabitEthernet1/0/13		128	0	Protect
TenGigabitEthernet1/0/14		128	0	Protect
TenGigabitEthernet1/0/15		128	0	Protect
TenGigabitEthernet1/0/16		128	0	Protect
TenGigabitEthernet1/0/17		128	0	Protect
TenGigabitEthernet1/0/18		128	0	Protect
TenGigabitEthernet1/0/19		128	0	Protect
TenGigabitEthernet1/0/20		128	0	Protect
TenGigabitEthernet1/0/21		128	0	Protect
TenGigabitEthernet1/0/22		128	0	Protect
TenGigabitEthernet1/0/23		128	0	Protect
TenGigabitEthernet1/0/24		128	0	Protect

```
DXS-3600-32S#
```

**Example**

This example shows how to display the port security setting of specified interface.

```
DXS-3600-32S#show port-security interface tenGigabitEthernet 1/0/1
```

```
Port Security           : Enabled
Port Status             : Down
Violation Mode          : Protect
Static Address Aging    : Disabled
Sticky Learning         : Enabled
Aging Time              : 0 mins
Aging Type              : Absolute
Maximum MAC Addresses   : 128
Total MAC Addresses     : 0
Configured MAC Addresses : 0
```

```
DXS-3600-32S#
```

**Example**

This example shows how to display all secure MAC addresses in the system.

```
DXS-3600-32S#show port-security address
```

VLAN	MAC Address	Type	Ports	Remaining Time (mins)
1	00d0.f800.073c	Configured	GigabitEthernet1/0/1	1
1	00d0.f800.3cc9	Dynamic	GigabitEthernet1/0/3	2

```
Total Addresses: 2
```

```
DXS-3600-32S#
```

**Example**

This example shows how to display the secure MAC address on the specified interface.

```
DXS-3600-32S#show port-security address interface tenGigabitEthernet 1/1
```

VLAN	MAC Address	Type	Ports	Remaining Time (mins)
1	00d0.f800.073d	Sticky	GigabitEthernet1/0/1	1(I)

```
Total Addresses: 1
```

```
DXS-3600-32S#
```

# Priority-based Flow Control (PFC) Commands

## 45-1 clear priority-flow-control counters

This command is used to clear the Priority-based Flow Control (PFC) counters of specified interface(s).

```
clear priority-flow-control counters [INTERFACE-ID [, | -]] {rx | tx | both}
```

### Parameters

<i>INTERFACE-ID</i>	(Optional) Specifies that the valid interface is a physical interface.
,	(Optional) Specifies a series of interfaces, or separate a range of interfaces from a previous range. No space before and after the comma.
-	(Optional) Specifies a range of interfaces. No space before and after the hyphen.
<b>rx</b>	Specifies to clear the counter of received PFC frames.
<b>tx</b>	Specifies to clear the counter of transmitted PFC frames.
<b>both</b>	Specifies to clear the counter of received and transmitted PFC frames.

<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 3.
<b>Usage Guideline</b>	You can use this command to clear PFC counters of requests and indications on the specified interface(s). If no interface is specified, the counters on all interfaces will be cleared.

**Example** This example shows how to clear the counter of transmitted PFC frames on the interface 1/1/1.

```
DXS-3600-32S#clear priority-flow-control counters interface gigabitEthernet 1/1/1 tx
DXS-3600-32S#
```

## 45-2 priority-flow-control willing

This command is used to turn on the Priority Flow Control (PFC) willing feature. When enabled, the system will use Data Center Bridging Exchange (DCBX) to detect remote systems and accept a PFC configuration from them.

```
priority-flow-control willing
no priority-flow-control willing
```

<b>Parameters</b>	None.
<b>Default</b>	Disabled
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 3.

**Usage Guideline**

Priority-based Flow Control (PFC), which is defined in the IEEE 802.1Qbb standard, extends the basic IEEE 802.3x PAUSE semantics and uses the IEEE 802.1p CoS values in the IEEE 802.1Q VLAN tag to differentiate up to eight CoSs that can be subject to flow control independently.

The following is a procedure to enable PFC on a priority basis.

1. Use class-map type network-qos global configuration command to create a type network-qos class map.
  - a. Use match cos class-map configuration command to specify which priorities you want to configure.
2. Use policy map type network-qos to create a type network-qos policy map.
  - a. Use the class type network-qos policy-map configuration command to specify a type network-qos class map to be associated with a traffic policy.
  - b. Use pause policy map type network-qos class configuration command to enable PFC pause characteristics on a class referenced in a type network-qos policy map.
3. Use service-policy interface configuration command to apply a type network-qos policy map.

If PFC of all priorities is disabled on an interface, the interface defaults to the IEEE 802.3x flow control setting. When PFC of any priority is enabled, the interface will pause a CoS on which PFC is enabled and a pause frame for that CoS is received. Meanwhile, a pause frame will be transmitted if the congestion is detected on the PFC enabled CoS.

This command is used to turn on the Priority Flow Control (PFC) willing feature. When enabled, the system will use Data Center Bridging Exchange (DCBX) to detect remote systems and accept a PFC configuration from them.

You need enable the Switch to transmit LLDP DCBX PFC TLV to advertise the PFC setting of per-CoS and negotiated with the peer to take the PFC willing (on) into effect.

The Priority-based flow control configured applies to all member interfaces if the port is member port of a Port group.

**Example**

This example shows how to turn on the DCBX PFC willing bit on interface 1/1/1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface gigabitEthernet 1/1/1
DXS-3600-32S(config-if)# priority-flow-control willing
```

**45-3 show interface priority-flow-control**

This command is used to display Priority-based flow control information of interface.

```
show interface [INTERFACE-ID [, | -]] priority-flow-control
```

**Parameters**

<i>INTERFACE-ID</i>	(Optional) Specifies that a valid interface is a physical interface.
,	(Optional) Specifies a series of interfaces, or separate a range of interfaces from a previous range. No space before and after the comma.
-	(Optional) Specifies a range of interfaces. No space before and after the hyphen.

**Default**

None.

**Command Mode**

EXEC Mode.

**Command Default Level**

Level: 3.

**Usage Guideline**

Use this command to display the PFC information on the specified interfaces.

**Example**

This example shows how to display Priority-based flow control of an interface.

```
DXS-3600-32S#show interface priority-flow-control
```

```
Interface PFC Admin PFC On Oper PFC On Will- Rx PFC Tx PFC
Id Cap. Priorities Priorities ing Frame(s) Frame(s)
-----
eth1.1 8 0,1,2,3,4,5,6,7 0,1,3,4,5 on 4294967295 4294967295
eth1.2 8 0,1,2,3,4,5,6,7 0,1,2,3,4,5,6,7 off 4294967295 4294967295
eth1.3 8 on 0 0
!---Output Truncated.
```

**Display Parameters****Description****PFC Cap**

PFC capability: indicates the device's limitation of how many traffic classes may simultaneously support PFC.

**Oper PFC On Priorities**

The list CoS that the operational PFC is on. Empty means there is no CoS on which the operational PFC is on at the interface.

# Protocol Independent Commands

## 46-1 clear ip route

This command is used to remove all or specified static routes from the IP routing table.

```
clear ip route [vrf vrf-name] [* | network [net-mask]]
```

### Parameters

<b>vrf vrf-name</b>	(Optional) Specifies to remove all routes of one VRF.
<b>*</b>	Specifies to remove all static routes.
<b>network</b>	Specifies that the IP address and network address are both accepted. If <i>net-mask</i> is not specified, the longest prefix matched route will be removed.
<b>net-mask</b>	(Optional) Specifies the network mask of the destination network.

**Default** None.

**Command Mode** Privileged EXEC Mode.

**Command Default Level** Level: 8

**Usage Guideline** Use this command to remove all the static routes or the specified static routes from the IP routing table. If there area multi-paths to one destination, all these static routes will be removed.

Users can verify the settings by entering the **show ip route static** command.

**Example** This example shows how to remove the static route 33.3.3.0/24.

```
DXS-3600-32S#clear ip route 33.3.3.0 255.255.255.0
DXS-3600-32S#
```

**Example** This example shows how to remove all static routes.

```
DXS-3600-32S#clear ip route *
DXS-3600-32S#
```

**Example** This example shows how to remove the static route 33.3.3.0/24 in VRF VPN-A:

```
DXS-3600-32S#clear ip route vrf VPN-A 33.3.3.0 255.255.255.0
DXS-3600-32S#
```

## 46-2 route-preference default

This command is used to set the preference of the static default route. Use no form of this command to restore it to the default setting.

```
route-preference [vrf vrf-name] default value
no route-preference [vrf vrf-name] default
```

### Parameters

<b>vrf vrf-name</b>	(Optional) Specifies to set the route preference of VRF routing table.
<b>value</b>	Specifies the preference of the static default route. The value range is 1-999.

**Default** The default value of the static default route's preference is 1.

**Command Mode** Global Configuration Mode.

**Command Default Level** Level: 8

**Usage Guideline** This command sets the preference of static default routes.

Among the different type default routes, the one with the lowest preference will be established as the active route. If that route has been found failed, then this route will be automatically deactivated and the route with the next lower preference will be the active route.

Users can verify the settings by entering the **show ip route-preference** command.

**Example** This example shows how to set the preference of the static default route to 100.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#route-preference default 100
DXS-3600-32S(config)#
```

**Example** This example shows how to set the preference of static default route to 90 in VRF VPN-A:

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)# route-preference vrf VPN-A default 90
```

### 46-3 route-preference static

This command is used to set the preference of the static route. Use no form of this command to restore to the default setting.

**route-preference [vrf vrf-name] static value**  
**no route-preference [vrf vrf-name] static**

#### Parameters

<b>vrf vrf-name</b>	(Optional) Specifies to set the route preference of VRF routing table.
<b>value</b>	Specifies the preference of the static route. The value range is 1-999.

**Default** The default value of the static default route's preference is 60.

**Command Mode** Global Configuration Mode.

**Command Default Level** Level: 8

**Usage Guideline** Among the different type routes with same destination network address, the one with the lowest preference will be established as the active route. If that route has been found failed, then this route will be automatically deactivated and the route with the next lower preference will be the active route.

Users can verify the settings by entering the **show ip route-preference** command.

**Example** This example shows how to set the preference of static route to 50.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#route-preference static 50
DXS-3600-32S(config)#
```

**Example** This example shows how to set the preference of static route to 60 in VRF VPN-A.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#route-preference vrf VPN-A static 60
DXS-3600-32S(config)#
```



## 46-4 ip mtu

This command is used to set the Maximum Transmission Unit (MTU) size of IP packets sent on an interface. Use the no form of this command to restore to the default setting.

```
ip mtu bytes
no ip mtu
```

### Parameters

<i>bytes</i>	Specifies the Maximum Transmission Unit of an IP packet. The value range is 512-1712.
--------------	---

<b>Default</b>	The default value of IP MTU is 1500
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	<p>If an outgoing IP packet from CPU interface exceeds the MTU set for the interface, software will fragment it before sending out.</p> <p><b>Note:</b> Changing the MTU value (with the jumbo frame command) won't affect the IP MTU value, vice versa is same. Therefore you should care both MTU and IP MTU sizes to make the system working correctly. For example, if IP MTU is larger than MTU at the egress port, the packet larger than MTU but less than IP MTU may be dropped by the egress port.</p> <p>Use <b>show ip interface</b> to see the current setting of IP MTU</p>

**Example** This example shows how to set the IP MTU of interface 'vlan1' to 800 bytes.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface vlan 1
DXS-3600-32S(config-if)#ip mtu 800
DXS-3600-32S(config-if)#
```

## 46-5 ip ecmp load-balance

This command is used to set the load-balancing algorithm for ECMP/WCMP route. Use no form of this command to remove the configuration set before.

```
ip ecmp load-balance [{sip | crc32_lower | crc32_upper} | dip | port](1)
no ip ecmp load-balance [{sip | crc32_lower | crc32_upper} | dip | port]
```

### Parameters

<b>sip</b>	(Optional) Specifies that the load-balancing algorithm will include the lower 5 bits of the source IP address. This attribution is mutually exclusive with <b>crc32_lower</b> and <b>crc32_upper</b> . If it is set, <b>crc32_lower</b> and <b>crc32_upper</b> will be excluded.
<b>crc32_lower</b>	(Optional) Specifies that the load-balancing algorithm will include the lower 5 bits of the CRC. This attribution is mutually exclusive with <b>crc32_upper</b> and <b>sip</b> . If it is set, <b>crc32_upper</b> and <b>sip</b> will be excluded.
<b>crc32_upper</b>	(Optional) Specifies that the load-balancing algorithm will include the upper 5 bits of the CRC. This attribution is mutually exclusive with <b>crc32_lower</b> and <b>sip</b> . If it is set, <b>crc32_lower</b> and <b>sip</b> will be excluded.
<b>dip</b>	(Optional) Specifies that the load-balancing algorithm will include the destination IP address.
<b>port</b>	(Optional) Specifies that the load-balancing algorithm will include the TCP or UDP port.

<b>Default</b>	By default, <b>dip</b> and <b>crc32_lower</b> is set.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	<p>User can use any combination of <b>dip</b>, <b>port</b>, <b>sip</b>, <b>crc32_lower</b> or <b>crc32_upper</b> to build the Hash algorithm. <b>sip</b>, <b>crc32_lower</b> or <b>crc32_upper</b> are mutually exclusive with each other. User is required to select one and only one of them.</p> <p>The no form of this command will remove the keywords it carries with as the components of a key from the saved setting. For example, if the system saves the setting of <b>sip</b>, <b>dip</b> and <b>port</b>. After the <b>no ip ecmp load-balance dip port</b> is executed, only <b>sip</b> is available for the key. If the no form of this command has the keywords not in the saved settings, the command runs properly. If using the no form of this command without any keywords, the configuration will go back to the default settings.</p> <p>Use <b>show ip ecmp load-balance</b> to check the current setting of load-balancing algorithm.</p>
<b>Example</b>	This example shows how to set the load-balancing algorithm to use <b>sip</b> and TCP or UDP port.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip ecmp load-balance sip port
DXS-3600-32S(config)#
```

## 46-6 ip route

This command is used to add a static route entry. Use no form of this command to remove a static route entry. Primary and backup are mutually exclusive. Users can select only one when creating a new route. If user sets neither of these, the system will try to set the new route first by primary and second by backup and not set this route to be a multipath route. The weight is used to configure the equal cost multiple paths (WCMP) function.

```
ip route [vrf vrf-name] network net-mask {ip-address [{primary | backup | weight number}] | null0 | ip_tunnel tunnel-name}
no ip route [vrf vrf-name] network net-mask {ip-address | null0 | ip_tunnel tunnel-name}
```

### Parameters

<b>vrf vrf-name</b>	(Optional) Specifies to add this static route to the VRF routing table.
<b>network</b>	Specifies the network address of the destination. The destination of the route is determined by network and net-mask.
<b>net-mask</b>	Specifies the network mask of the destination.
<b>ip-address</b>	Specifies the IP address of the next-hop router
<b>primary</b>	(Optional) Specifies the route as the primary route to the destination.
<b>backup</b>	(Optional) Specifies the route as the backup route to the destination.
<b>weight number</b>	(Optional) Specifies a weight number greater than zero, but not greater than the maximum paths number for the WCMP. This number is used to replicate identical route path (multiple copies) in routing table, so the path get more chance to be hit for traffic routing.
<b>null0</b>	Specifies a black hole route.
<b>ip_tunnel tunnel-name</b>	Specifies to use an IP tunnel as the next-hop.

<b>Default</b>	By default, no static route is configured.
<b>Command Mode</b>	Global Configuration Mode.

<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	<p>When the value of network and net-mask are both 0.0.0.0, it means to create a static default route.</p> <p>Use the command with keyword <b>primary</b> or <b>backup</b> means the newly created route is a floating static route. The keyword <b>weight</b> means the newly created route is a static multipath route. The floating static route and the static multipath route are mutually exclusive. If none of the following parameters, "primary", "backup" or "weight," are selected, the static route will be:</p> <ol style="list-style-type: none"> <li>1. Primary if there is no primary route to the same destination.</li> <li>2. Backup if there has been a primary route to the same destination.</li> <li>3. Fail to create if there have been a primary route and a backup route to the same destination.</li> <li>4. Fail to create if there has been one static multipath route to the same destination.</li> </ol> <p>If <b>null0</b> is specified for one route, the traffic that matched its destination will be dropped.</p> <p>If <b>vrf</b> is specified, the static route is added into or deleted from the VRF routing table. Users can verify the settings by entering the <b>show ip route static</b> command.</p>

**Example** This example shows how to add a static route entry with destination 20.0.0.0/8 and nexthop 10.1.1.254.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip route 20.0.0.0 255.0.0.0 10.1.1.254
DXS-3600-32S(config)#
```

**Example** This example shows how to add a static weighted multipath route entry with destination 30.0.0.0/8 and two nexthops: 10.1.1.253, 10.1.1.254.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip route 30.0.0.0 255.0.0.0 10.1.1.253 weight 1
DXS-3600-32S(config)#ip route 30.0.0.0 255.0.0.0 10.1.1.254 weight 1
DXS-3600-32S(config)#
```

**Example** This example shows how to add a static route entry with destination 40.0.0.0/8 and nexthop 10.1.1.254 and specify this route to be a backup static route.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip route 40.0.0.0 255.0.0.0 10.1.1.254 backup
DXS-3600-32S(config)#
```

**Example** This example shows how to remove the static route with destination 20.0.0.0/8 and nexthop 10.1.1.254.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#no ip route 20.0.0.0 255.0.0.0 10.1.1.254
DXS-3600-32S(config)#
```

**Example** This example shows how to add a static route using an IP tunnel:

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)# ip route 100.1.1.0 255.255.255.0 ip_tunnel tunnel_1
```

**Example** This example shows how to add a static route to VRF VPN-A:

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)# ip vrf VPN-A
DXS-3600-32S(config-vrf)# exit
DXS-3600-32S(config)# ip route vrf VPN-A 100.1.1.0 255.255.255.0 10.1.1.253
DXS-3600-32S(config)#
```

## 46-7 show ip route-preference

This command is used to display the preference of different route types.

```
show ip route-preference [vrf vrf-name] [{connected | static | default | rip | ospf | ospfIntra | ospfInter |
ospfExt1 | ospfExt2 | ebgp | ibgp}]
```

### Parameters

<b>vrf vrf-name</b>	(Optional) Specifies to show the route preference of the VRF routing table.
<b>connected</b>	(Optional) Specifies to show the route preference of connected route.
<b>static</b>	(Optional) Specifies to show the route preference of static route.
<b>default</b>	(Optional) Specifies to show the route preference of static default route.
<b>rip</b>	(Optional) Specifies to show the route preference of RIP route.
<b>ospf</b>	(Optional) Specifies to show the route preference of all types of OSPF route.
<b>ospfIntra</b>	(Optional) Specifies to show the route preference of OSPF intra-area route.
<b>ospfInter</b>	(Optional) Specifies to show the route preference of OSPF inter-area route.
<b>ospfExt1</b>	(Optional) Specifies to show the route preference of OSPF external type-1 route.
<b>ospfExt2</b>	(Optional) Specifies to show the route preference of OSPF external type-2 route.
<b>ebgp</b>	(Optional) Specifies to show the route preference of BGP AS-external route.
<b>ibgp</b>	(Optional) Specifies to show the route preference of BGP AS-internal route.

**Default** None.

**Command Mode** Privileged EXEC Mode.

**Command Default Level** Level: 3

**Usage Guideline** In general, the higher the preference is, the lower the trust rating is. So, if there are two routes to a same destination, the source with lower preference will be selected to forward.

The preference for connected routes is fixed to 0. This means the connected route always has the highest priority.

**Example** This example shows how to check the route preference of all route types.

```
DXS-3600-32S#show ip route-preference
```

```
Route Preference Settings
```

```
Protocol      Preference
-----      -
RIP           100
Static        100
Default       100
Connected     0
OSPF Intra    80
OSPF Inter    90
OSPF ExtT1    110
OSPF ExtT2    115
EBGP          70
IBGP          130
```

```
DXS-3600-32S#
```

**Example** This example shows how to check the route preference of OSPF route.

```
DXS-3600-32S#show ip route-preference ospf

Route Preference Settings

Protocol      Preference
-----
OSPF Intra   80
OSPF Inter   90
OSPF ExtT1   110
OSPF ExtT2   115

DXS-3600-32S#
```

**Example** This example shows how to check the route preference of RIP route.

```
DXS-3600-32S#show ip route-preference rip

Route Preference Settings

Protocol      Preference
-----
RIP           100

DXS-3600-32S#
```

Display Parameters	Description
<b>Protocol</b>	The route type.
<b>Preference</b>	Route Preference.
<b>OSPF Intra</b>	OSPF intra-area route type.
<b>OSPF Inter</b>	OSPF inter-area route type.
<b>OSPF ExtT1</b>	OSPF AS external type-1 route.
<b>OSPF ExtT2</b>	OSPF AS external type-2 route.

**Example** This example shows how to check the route preference of all route types of VRF VPN-A.

```
DXS-3600-32S#show ip route-preference vrf VPN1

Route Preference Settings of VRF: VPN-A

Protocol      Preference
-----
RIP           100
Static        60
Default       1
Connected     0
OSPF Intra    80
OSPF Inter    90
OSPF ExtT1    110
OSPF ExtT2    115
EBGP          70
IBGP          130

DXS-3600-32S#
```

## 46-8 show ip ecmp load-balance

This command is used to show the load-balancing algorithm settings.

**show ip ecmp load-balance**

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 3
<b>Usage Guideline</b>	Use this command to check the load-balancing algorithm settings.

**Example** This example shows how to check the load-balancing algorithm settings.

```
DXS-3600-32S#show ip ecmp load-balance
```

```
ECMP Load Balance Algorithm :
Destination IP : used.
Source IP : used.
CRC_Low : not used.
CRC_High : not used.
TCP_UDP_Port : used.
```

```
DXS-3600-32S#
```

**46-9 show ip route**

This command is used to display the current state of the IP routing table.

```
show ip route [vrf vrf-name] [network [net-mask]] [{count | connected | static | rip | ospf | bgp | weight}
```

**Parameters**

<b>vrf</b> <i>vrf-name</i>	(Optional) Specifies to show routes of one VRF.
<b>network</b>	(Optional) Specify the destination IP address of the route want to be displayed. If net-mask is not specified, the longest prefix matched route will be displayed.
<b>net-mask</b>	(Optional) Specify the destination netmask of the route want to be displayed.
<b>count</b>	(Optional) Specifies to show the number of active route.
<b>connected</b>	(Optional) Specifies to show only connected routes.
<b>static</b>	(Optional) Specifies to show only static routes. One static route may be active or inactive.
<b>rip</b>	(Optional) Specifies to show only RIP routes.
<b>ospf</b>	(Optional) Specifies to show only OSPF routes.
<b>bgp</b>	(Optional) Specifies to show only BGP routes.
<b>weight</b>	(Optional) Specifies to show only multipath static routes.

<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 3
<b>Usage Guideline</b>	Use the command with keyword <b>count</b> means to show the number of active routes, active route is the route which had been written into chip and can forward traffic.

User can specify the network as an IP address or a network address. They both are the same in this implementation. If net-mask is not specified, the longest prefix matched route will be displayed. If net-mask is specified, only the destination routes matched the specified network will be displayed

**Example**

This example shows how to check the IP routing table.

DXS-3600-32S#show ip route

Routing Table

IP Address/Netmask	Gateway	Interface	Cost	Protocol
20.1.1.0/24	10.1.1.9	vlan1	1	Static
30.1.1.0/24	10.1.1.9	vlan1	1	Static
10.0.0.0/8	0.0.0.0	vlan1	1	Connected

Total Entries: 3

DXS-3600-32S#

**Example**

This example shows how to check all static routes.

DXS-3600-32S#show ip route static

Routing Table

IP Address/Netmask	Gateway	Cost	Protocol	Backup	Weight	Status
20.1.1.0/24	10.1.1.9	1	Static	Primary	None	Active
30.1.1.0/24	10.1.1.9	1	Static	None	2	Active
30.1.1.0/24	10.1.1.89	1	Static	None	2	Inactive

Total Entries: 3

DXS-3600-32S#

**Example**

This example shows how to check all static weighted multi-path routes.

DXS-3600-32S#show ip route weight

Routing Table

IP Address/Netmask	Gateway	Cost	Protocol	Weight	Status
30.1.1.0/24	10.1.1.9	1	Static	2	Active
30.1.1.0/24	10.1.1.89	1	Static	2	Inactive

Total Entries: 2

DXS-3600-32S#

**Example**

This example shows how to check the number of active routes.

DXS-3600-32S#show ip route count

----- route info -----

The num of active route: 3

DXS-3600-32S#

**Example**

This example shows how to check the VRF VPN-A's IP routing table.

```
DXS-3600-32S#show ip route
```

```
Routing Table ( VRF: VPN-A )
```

IP Address/Netmask	Gateway	Interface	Cost	Protocol
100.1.1.0/24	10.1.1.253	ip10	1	Static
10.0.0.0/8	0.0.0.0	ip10	1	Connected

```
Total Entries : 1
```

```
DXS-3600-32S#
```

**Display Parameters****Description**

<b>IP Address/Netmask</b>	The network address of destination.
<b>Gateway</b>	The IP address of next router.
<b>Interface</b>	The name of the outgoing interface.
<b>Cost</b>	The metric of route.
<b>Protocol</b>	The route type.
<b>Weight</b>	The weight of static weighted multipath route.
<b>Status</b>	The status of static route. If be active, the static route is able to used to forward packet.



# Protocol Independent Multicast (PIM) Commands

## 47-1 ip pim

This command is used to enable Protocol Independent Multicast (PIM) on an interface. To disable PIM on the interface, use the **no** form of this command.

```
ip pim {dense-mode | sparse-mode | sparse-dense-mode}
no ip pim
```

### Parameters

<b>dense-mode</b>	Specifies to enables dense mode of operation.
<b>sparse-mode</b>	Specifies to enables sparse mode of operation.
<b>sparse-dense-mode</b>	Specifies to enables sparse-dense-mode of operation.

<b>Default</b>	PIM is disabled on all interfaces.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 8. (EI Mode Only Command)
<b>Usage Guideline</b>	<p>This command enables PIM protocol on the specified interface. An interface can be configured to be in dense mode, sparse mode or sparse-dense mode.</p> <p>If you want to use PIM to forward multicast packets, use <b>ip multicast-routing</b> command to enable multicast global state.</p> <p>To verify your configuration, use <b>show ip pim sparse-mode interface</b> or <b>show ip pim dense-mode interface</b>.</p>

**Example** This example shows how to configure the interface VLAN 1 to enable PIM dense-mode.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface vlan 1
DXS-3600-32S(config-if)#ip pim dense-mode
DXS-3600-32S(config-if)#
```

**Example** This example shows how to disable PIM on interface VLAN 1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface vlan 1
DXS-3600-32S(config-if)#no ip pim
DXS-3600-32S(config-if)#
```

## 47-2 ip pim query-interval

This command is used to configure the frequency of Protocol Independent Multicast (PIM) router query messages. To return to the default interval, use the **no** form of this command.

```
ip pim query-interval SECONDS
no ip pim query-interval
```

### Parameters

<b>SECONDS</b>	Specifies the interval of sending hello message, in the range of 1 to 18724 seconds.
----------------	--

**Default** 30 seconds.

<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 8. (EI Mode Only Command)
<b>Usage Guideline</b>	The change of hello interval would lead to the change of hello hold time. The principle of the updating hold time is configured hello interval * 3.5.  To verify your configuration, use <b>show ip pim dense-mode interface detail</b> or <b>show ip pim sparse-mode interface detail</b> .

**Example** This example shows how to configure the PIM query interval of VLAN 1 to 60 seconds.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface vlan 1
DXS-3600-32S(config-if)#ip pim query-interval 60
DXS-3600-32S(config-if)#
```

**Example** This example shows how to configure the query interval of VLAN 2 back to default.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface vlan 2
DXS-3600-32S(config-if)#no ip pim query-interval
DXS-3600-32S(config-if)#
```

### 47-3 ip pim join-prune-interval

This command is used to configure the interval of Protocol Independent Multicast (PIM) router join/prune messages. To return default, use the **no** form of this command.

```
ip pim join-prune-interval SECONDS
no ip pim join-prune-interval
```

#### Parameters

<i>SECONDS</i>	Specifies the interval to send the join/prune message, in the range 1 to 18724 seconds.
----------------	---

<b>Default</b>	60 seconds.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 8. (EI Mode Only Command)
<b>Usage Guideline</b>	This command only takes effect when the interface is PIM-SM enabled.  When configuring the Join/Prune interval, the user needs to consider the factors, such as configured bandwidth and expected average number of multicast route entries for the attached network or link (For example, the period would be longer for lower-speed links, or for routers in the center of the network that expect to have a larger number of entries).  For SM-mode, router will periodically send the join message based on this interval. The hold-time in a Join/Prune message is (3.5 * join-prune-interval). The receiving router will start a timer based on this hold-time, and prune the interface if hold-time timer expires.  You can verify your configuration through command <b>show ip pim sparse-mode interface detail</b> .

**Example** This example shows how to configure the PIM join/prune interval to 1000 seconds.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip pim join-prune-interval 1000
DXS-3600-32S(config)#
```

**Example** This example shows how to configure the PIM join/prune interval back to default.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#no ip pim join-prune-interval
DXS-3600-32S(config)#
```

## 47-4 ip pim dr-priority

This command is used to configure the priority for which a switch is elected as the designated router (DR). To return default, use the **no** form of this command.

```
ip pim dr-priority PRIORITY
no ip pim dr-priority
```

### Parameters

<i>PRIORITY</i>	Specifies that the larger the value is, the higher the priority will be. The range is 0 to 4294967294.
-----------------	--

**Default** The default value is 1.

**Command Mode** Interface Configuration Mode.

**Command Default Level** Level: 8. (**EI Mode Only Command**)

**Usage Guideline** The switch with the biggest priority would be selected as DR on a LAN. If several switches have the same DR priority, the one with the highest IP address would be selected. If the DR priority field is not set in PIM hello messages, the one with highest IP address is selected to be DR.

To verify your configuration, use **show ip pim sparse-mode interface detail**.

**Example** This example shows how to configure the priority of VLAN 1 to be 100.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface vlan 1
DXS-3600-32S(config-if)#ip pim dr-priority 100
DXS-3600-32S(config-if)#
```

**Example** This example shows how to configure DR priority of VLAN 2 back to default.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface vlan 2
DXS-3600-32S(config-if)#no ip pim dr-priority
DXS-3600-32S(config-if)#
```

## 47-5 ip pim register-suppression

This command is used to configure the register suppression time. To return to the default interval, use the **no** form of this command.

```
ip pim register-suppression SECONDS
```

**no ip pim register-suppression****Parameters**

<b>SECONDS</b>	Specifies the value of the register suppression time. The range of this value is 11-255 seconds.
----------------	--

<b>Default</b>	60 seconds.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	<p>When a DR receives the register-stop message, it will start the suppression timer. During suppression period, a DR stops sending the register message to the RP. Use the command on the first hop router.</p> <p>Please be noted, the parameter Register Probe Time in RFC 4601 is fixed to 5. Because the value of the Register Probe Time must be less than half the value of the Register Suppression Time to prevent a possible negative value in the setting of the Register-Stop Timer, the minimal value for Register Suppression Time is 11.</p> <p>To verify your configuration, use command <b>show ip pim</b>.</p>

**Example** This example shows how to configure the PIM register suppression to be 100 seconds.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip pim register-suppression 100
DXS-3600-32S(config)#
```

**Example** This example shows how to restore the default value.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#no ip pim register-suppression
DXS-3600-32S(config)#
```

**47-6 ip pim rp-address**

This command is used to create a static RP in PIM-SM. To delete the static RP entry, use the **no** form of this command.

```
ip pim rp-address RP-ADDRESS [ACCESS_LIST]
no ip pim rp-address RP-ADDRESS
```

**Parameters**

<i>RP-ADDRESS</i>	Specifies the IP address of the RP.
<i>ACCESS_LIST</i>	Specifies the name of the access list.

<b>Default</b>	No any static RP entry.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )

**Usage Guideline**

This command is used to configure the static RP.

If no ACL is configured in this command, it means this static RP support all the multicast groups 224.0.0.0/4. To disable this configuration, use `no ip pim rp-address RP-ADDRESS`.

You can configure only one ACL list on one RP, and in each list, the same group range can exist. And for the same group range entry, only the first configured one can work. If the working group range is deleted, the switch will auto search if there is another entry existed with the same group range. If does, this new entry will be selected, this may change the static RP address. The number of ACL entry configured to static RP is limited, and the total number of group range configured to static RP is also limited. If any limitation exceeded, no more static RP can be created.

To verify your configuration, you can use **show ip pim**.

**Example**

This example shows how to configure the static RP address 172.18.62.1 with a group range 234.0.0.0/12.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip pim rp-address 172.18.62.1 statirp-acl
DXS-3600-32S(config)#ip standard access-list statirp-acl
DXS-3600-32S(config-ip-acl)#permit 234.0.0.0/12
DXS-3600-32S(config-ip-acl)#
```

**Example**

This example shows how to configure the static RP address 172.18.63.254 with a group range 224.0.0.0/4.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip pim rp-address 172.18.63.254
DXS-3600-32S(config)#
```

**Example**

This example shows how to delete the access list of the static RP binding at 172.18.62.1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#no ip pim rp-address 172.18.62.1
DXS-3600-32S(config)#
```

**47-7 ip pim rp-candidate**

This command is used to configure the router to advertise itself as a Protocol Independent Multicast (PIM) Version 2 candidate rendezvous point (RP) to the bootstrap router (BSR). To return default, use the **no** form of this command. If no parameter is added in **no** command, the device will restore default value for interval of CRP-Adv and priority of CRP interface. If interface name added in no form of this command, the device will clean the ACL information binding on this interface.

```
ip pim rp-candidate IFNAME [interval SECONDS] [priority PRIORITY] [group-list ACCESS_LIST] [wildcard-prefix-cnt {0 | 1}]
no ip pim rp-candidate [IFNAME]
```

**Parameters**

<i>IFNAME</i>	Specifies the interface name. The IP address associated with this interface is advertised as a candidate RP address.
<i>ACCESS_LIST</i>	Specifies the name of the access list. If no group-list is specified, the switch is a candidate RP for all groups.
<i>SECONDS</i>	Specifies the interval of the sending CRP-Adv message to BSR. The range is 0 to 102.
<i>PRIORITY</i>	Specifies the priority of this CRP interface, in the range 0 to 255.

0	Specifies the Prefix Count value of the wildcard address (224.0.0.0/24) to be set to 0 in PIM C-RP-Adv message.
1	Specifies that the wildcard prefix count value will be set to 1 in PIM C-RP-Adv message.

<b>Default</b>	No candidate RP is configured. The default CRP-Adv interval is 60 seconds. The default priority value is 192. The default wildcard prefix count is 0.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 8. (EI Mode Only Command)
<b>Usage Guideline</b>	This command is used to configure candidate RP information of PIM. The change of CRP-Adv interval would also change the hold time of the CRP at the RP. And the hold time at RP is CRP-Adv interval times 2.5.

It is possible to have the cast, multiple CRP mapping to the same groups. At this situation, the method below is used.

1. Perform longest match on group-range to obtain a list of RPs.
2. From this list of matching RPs, find the one with highest priority. Eliminate any RPs from the list that have lower priorities.
3. If only one RP remains in the list, use that RP.
4. If multiple RPs are in the list, use the PIM hash function to choose one.

So, you can use this command to configure the priority of this CRP to specify the sequence to select the RP for the groups.

This command can cause the router to send a PIM Version 2 message advertising itself as a candidate RP to the BSR and set the parameter of this CRP. To specify an interface as the candidate RP of a specific group, execute this command with ACL. One interface can only configure one ACL. The number of ACL entry configured to candidate RP is limited, and the total number of group range configured to candidate RP is also limited. If any limitation exceeded, no more candidate RP can be created.

To verify your configuration, use **show ip pim**.

<b>Example</b>	This example shows how to configure the candidate RP interface 'vlan2' with group range 234.0.0.0/12, and priority set to 100.
----------------	--

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip pim rp-candidate vlan2 priority 100 group-list crp-acl
DXS-3600-32S(config)#ip standard access-list crp-acl
DXS-3600-32S(config-ip-acl)#permit 234.0.0.0/12
DXS-3600-32S(config-ip-acl)#
```

<b>Example</b>	This example shows how to set the CRP configuration back to default.
----------------	--

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#no ip pim rp-candidate vlan2
DXS-3600-32S(config)#
```

<b>Example</b>	This example shows how to configure the PIM wildcard prefix count to be 1.
----------------	--

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip pim rp-candidate vlan2 wildcard-prefix-cnt 1
DXS-3600-32S(config)#
```

<b>Example</b>	This example shows how to delete all CRP ACL lists binded on the interface 'vlan2'.
----------------	---

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#no ip pim rp-candidate vlan2
DXS-3600-32S(config)#
```

## 47-8 ip pim spt-threshold

This command is used to configure the condition to switchover to the source tree. To restore the default setting, use **no** form of this command.

```
ip pim spt-threshold {0 | infinity}
no ip pim spt-threshold
```

### Parameters

<b>0</b>	Specifies to establish the source tree right at the arrival of the first packet.
<b>infinity</b>	Specifies to always relay on the shared tree.

<b>Default</b>	Infinity.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	Use this command on the last hop of the router.

In PIM-SM mode, initially the multicast traffic from the source will be flowing along the RPT share tree to the receiver. After the first packet arrives at the last hop router, for each group of traffic, it can operate in one of the following two modes. With mode "infinity", the traffic keeps following the share tree. With mode "0", the source tree will be established and the traffic switchover to the source tree.

To verify your configuration, use command **show ip pim**.

**Example** This example shows how to configure the PIM to work in the SPT mode at the arrival of the first packet.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip pim spt-threshold 0
DXS-3600-32S(config)#
```

**Example** This example shows how to configure the PIM to always work in the RPT mode.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#no ip pim spt-threshold
DXS-3600-32S(config)#
```

## 47-9 ip pim rp-register-kat

This command is used to configure the keep alive time when RP receiving a register message. To restore default value, use **no** form of this command.

```
ip pim rp-register-kat SECONDS
no ip pim rp-register-kat
```

### Parameters

<b>SECONDS</b>	Specifies the keep alive time, in the range 1 to 65525 seconds
----------------	--

<b>Default</b>	185 seconds.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )

**Usage Guideline** When the DR receives multicast stream, it will send register message to the RP of the group. And when the RP receives this message, it would set up a timer for this (S, G) entry. This command configures the value of this timer.

To verify your configuration, use command **show ip pim**.

**Example** This example shows how to configure the PIM register keep alive time to 500 seconds.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip pim rp-register-kat 500
DXS-3600-32S(config)#
```

**Example** This example shows how to restore the default value.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#no ip pim rp-register-kat
DXS-3600-32S(config)#
```

## 47-10 ip pim bsr-candidate

This command is used to enable the candidate bootstrap function of the interface or set the hash mask length of calculating the property RP. To return default, use **no** form of this command.

```
ip pim bsr-candidate IFNAME [hash-mask-length VALUE] [priority PRIORITY]
no ip pim bsr-candidate IFNAME
```

### Parameters

<i>IFNAME</i>	Specifies the interface whose IP address will be announced as the bootstrap router address.
<i>VALUE</i>	Specifies to enter a hash mask length, which will be used with the IP address of the candidate RP and the multicast group address, to calculate the hash algorithm used by the router to determine which CRP on the PIM-SM enabled network will be the RP. The range is 0 to 32.
<i>PRIORITY</i>	Specifies to configure the priority for a BSR candidate. The candidate with the highest priority is preferred. If the priority values are the same, the router with the highest IP address is preferred. The range is 0 to 255. If not specified, the default priority is 64.

**Default** The hash mask length is 30, the priority is 64, and the BSR function is disabled.

**Command Mode** Global Configuration Mode.

**Command Default Level** Level: 8. (EI Mode Only Command)

**Usage Guideline** This command only takes effect when the interface specified by the command has IP address configured and is PIM-SM enabled.

This command causes the router to send bootstrap messages to announce the IP address of the designated interface as the BSR candidate address.

The hash mask is used by all routers within a domain, to map a group to one of the RPs from the matching set of group-range-to-RP mappings (this set all have the same longest mask length and same highest priority). The algorithm takes as input the group address, and the addresses of the candidate RPs from the mappings, and gives as output one RP address to be used.

To verify your configuration, use command **show ip pim sparse-mode bsr-router**.



**Example** This example shows how to configure the PIM candidate BSR priority to be 10 and hash mask length to be 32.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip pim bsr-candidate vlan2 hash-mask-length 32 priority 10
DXS-3600-32S(config)#
```

**Example** This example shows how to disable the function of BSR in 'vlan2'.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#no ip pim bsr-candidate vlan2
DXS-3600-32S(config)#
```

## 47-11 ip pim old-register-checksum

This command is used to specify for which RP, the switch should calculate checksum include the data portion or not when transmitting and receiving register messages. To restore the default setting, use **no** form of this command.

```
ip pim old-register-checksum rp-address RP-ADDRESS
no ip pim old-register-checksum rp-address RP-ADDRESS
```

### Parameters

<i>RP-ADDRESS</i>	Specifies that the RP will expect to receive a register packet in which the checksum will include the data portion or not.
-------------------	--

<b>Default</b>	The checksum in the register message to any RP doesn't include the data portion.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	<p>This command is used to decide the checksum in register packet will include the data portion or not. As defined in RFC 4601, the checksum for Registers is done only on the first 8 bytes of the packet, including the PIM header and the next 4 bytes, excluding the data packet portion. Some earlier PIM-SM routers calculate checksum for register packet including data portion. This configuration makes our routers communicate with those earlier routers smoothly. The default setting is not including data portion.</p> <p>To verify your configuration, use command <b>show ip pim</b>.</p>

**Example** This example shows how to configure the checksum to include data for RP 172.18.63.2

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip pim old-register-checksum rp-address 172.18.63.2
DXS-3600-32S(config)#
```

**Example** This example shows how to delete the checksum to include RP 172.18.63.2

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#no ip pim old-register-checksum rp-address 172.18.63.2
DXS-3600-32S(config)#
```

## 47-12 ip pim ssm

This command is used to configure the SSM multicast group address range. Use the **no** form of the command to disable PIM SSM.

```
ip pim ssm {default | range ACCESS-LIST}
no ip pim ssm
```

### Parameters

<i>ACCESS-LIST</i>	Specifies a standard IP access list that defines the user-specified SSM group addresses.
<b>default</b>	Specifies to use the default SSM group addresses. The default SSM group address range is 232/8.

**Default** PIM SSM is disabled.

**Command Mode** Global Configuration Mode.

**Command Default Level** Level: 8. (EI Mode Only Command)

**Usage Guideline** For an SSM group, the switch will use (S, G) in IGMPv3 report to join SPT. And if the group address of configured range is reported by IGMPv1/v2, it will be ignored by IGMP module. If the ACL entry configured for SSM group address range includes multiple networks, only the first group network will work.

To verify your configuration, use command **show ip pim**.

**Example** This example shows how to configure the PIM SSM function enable, use default group address range.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip pim ssm default
DXS-3600-32S(config)#
```

**Example** This example shows how to configure the PIM SSM function enable, and group address range is 239.0.0.0/11

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip pim ssm range ssm-acl
DXS-3600-32S(config)#ip standard access-list ssm-acl
DXS-3600-32S(config-ip-acl)#permit 239.0.0.0/11
DXS-3600-32S(config-ip-acl)#
```

**Example** This example shows how to disable the PIM SSM function.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#no ip pim ssm
DXS-3600-32S(config)#
```

## 47-13 show ip pim dense-mode interface

This command is used to display information about PIM-DM interface.

```
show ip pim dense-mode interface [IFNAME [detail]]
```

### Parameters

<i>IFNAME</i>	Specifies the interface name to be displayed. If no interface name, display all PIM-DM interfaces.
<b>detail</b>	Displays the detailed information.

**Default** None.

**Command Mode** Privileged EXEC Mode.

**Command Default Level** Level: 3. (EI Mode Only Command)

**Usage Guideline** This command displays PIM-DM configuration information.

**Example** This example shows how to display the information of all PIM-DM interfaces.

```
DXS-3600-32S#show ip pim dense-mode interface

IP Address      Interface      Mode  state  Nbr count
-----
10.90.90.90     vlan1          DM    Enabled  0

Total Entries: 1

DXS-3600-32S#
```

**Example** This example shows how to display the detailed information of PIM-DM interface 'vlan1'.

```
DXS-3600-32S#show ip pim dense-mode interface vlan1 detail

Interface Name: vlan1
Address 10.90.90.90, DR 10.90.90.90
Hello period 30 seconds, Next hello in 29 seconds
Neighbor:
 10.2.0.2
 10.2.0.5

DXS-3600-32S#
```

Display Parameters	Description
<b>IP Address</b>	The IP Address of the interface displayed.
<b>Interface</b>	The name of the interface.
<b>Mode</b>	The mode of PIM of this interface, To change mode of PIM, use the <b>ip pim</b> command.
<b>state</b>	The PIM-DM state of this interface.
<b>Nbr count</b>	The numbers of neighbors connected to this interface in the LAN.
<b>Neighbor</b>	The address of the neighbors.
<b>DR</b>	The DR address of this LAN.

## 47-14 show ip pim neighbor

This command is used to display PIM neighbor information.

```
show ip pim neighbor [IFNAME]
```

### Parameters

<i>IFNAME</i>	Specifies the interface to display the neighbor. If no IFNAME specified, all interface's neighbor would be displayed.
---------------	---

<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 3. (EI Mode Only Command)
<b>Usage Guideline</b>	Use this command to display the neighbor information of PIM. Both PIM-SM and PIM-DM neighbor would be displayed.

**Example** This example displays all the interface's neighbor information.

```
DXS-3600-32S#show ip pim neighbor
```

```
Neighbor Address  Interface      Uptime        Expires        Mode
-----
10.2.0.2          vlan1          00:00:32      00:01:26      SM
```

```
Total Entries: 1
```

```
DXS-3600-32S#
```

Display Parameters	Description
<b>Neighbor Address</b>	Specify the neighbor's address.
<b>Interface</b>	Specify the name of interface binding by the neighbor.
<b>Uptime</b>	Length of time (in hours, minutes, and seconds) that the router has known about this neighbor.
<b>Expires</b>	Time (in hours, minutes, and seconds) this neighbor expires.
<b>Mode</b>	The mode of this interface. To configure this value, use command <b>ip pim</b> .

## 47-15 show ip pim sparse-mode bsr-router

This command is used to display PIM-SM bootstrap router information.

```
show ip pim sparse-mode bsr-router
```

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 3. (EI Mode Only Command)
<b>Usage Guideline</b>	This command is used to show BSR information.

**Example** This example displays PIM BSR information.

```
DXS-3600-32S#show ip pim sparse-mode bsr-router
```

```
PIMv2 Bootstrap information
```

```
This System is the Bootstrap Router (BSR)
BSR Address: 10.90.90.90
BSR Priority: 100, Hash mask length: 30
Role: Candidate BSR Priority: 100 Hash mask lenth: 30
Next bootstrap message in 00:00:17
state: Elected BSR
Candidate RP: 10.90.90.90(vlan1)
  Group acl: crp-system
Candidate RP: 172.16.11.254(vlan2)
  Group acl: crp-acl
Candidate RP priority : 192
Holdtime 150 seconds
Advertisement interval 60 seconds
Next Cand_RP_advertisement in 00:00:15
```

```
DXS-3600-32S#
```

Display Parameters	Description
<b>BSR Address</b>	IP address of the bootstrap router.

Display Parameters	Description
<b>BSR Priority</b>	Priority as configured in the ip pim bsr-candidate command.
<b>Role</b>	The role of our CBSR.
<b>Priority</b>	Priority of our CBSR.
<b>Hash mask length</b>	Length of a mask (32 bits maximum) that is to be ANDed with the group address before the hash function is called. This value is configured in the <b>ip pim bsr-candidate</b> command.
<b>state</b>	State of this switch (elected or not).
<b>Next Cand_RP_advertisement in</b>	Time in hours, minutes, and seconds in which the next candidate rendezvous-point advertisement will be sent.
<b>Next bootstrap message in</b>	Time in hours, minutes, and seconds in which the next bootstrap message is due from this BSR.
<b>Holdtime</b>	The hold time of the candidate RP, this value is configured by <b>ip pim rp-candidate</b>
<b>Candidate RP</b>	Candidate RP information of this switch.

## 47-16 show ip pim sparse-mode interface

This command is used to display PIM-SM interface information.

```
show ip pim sparse-mode interface [IFNAME [detail]]
```

### Parameters

<i>IFNAME</i>	Specifies the interface to display the neighbor. If no <i>IFNAME</i> specified, all interface's neighbor would be displayed.
<b>detail</b>	Displayd the detail information of interface.

<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 3. (EI Mode Only Command)
<b>Usage Guideline</b>	Use to display PIM-SM interface information.

**Example** This example shows all PIM-SM interface information.

```
DXS-3600-32S#show ip pim sparse-mode interface
```

```
IP Address      Interface      Mode  state  Nbr count
-----
10.90.90.90     vlan1          SM    Enabled  1
172.18.63.1     vlan2          SM    Enabled  2
```

```
Total Entries: 2
```

```
DXS-3600-32S#
```

**Example**

This example shows detailed information about the PIM interface 'vlan1'.

```
DXS-3600-32S#show ip pim sparse-mode interface vlan1 detail
```

```
Interface Name: vlan1
Address 10.90.90.90, DR 10.90.90.90
My DR priority is: 1
Hello period 30 seconds, Next hello in 7 seconds
Join/Prune interval 60 seconds
Neighbors:
 10.2.0.2
```

```
DXS-3600-32S#
```

Display Parameters	Description
<b>IP Address</b>	The IP Address of the interface displayed.
<b>Interface</b>	The name of the interface.
<b>Mode</b>	The mode of PIM of this interface, To change mode of PIM, use <b>ip pim</b> command.
<b>state</b>	The PIM-DM state of this interface.
<b>Nbr count</b>	The number of neighbors connect to this interface.
<b>Neighbors</b>	List address of the neighbors below.
<b>Join/Prune interval</b>	The period join message of PIM-SM if this switch has outgoing for a specified group. This value is configured by <b>ip pim join-prune-interval</b> .
<b>DR</b>	The DR address of this LAN. To change DR of a LAN, use command <b>ip pim dr-priority</b> .

## 47-17 show ip pim sparse-mode rp mapping

This command is used to display RP mapping information.

```
show ip pim sparse-mode rp mapping
```

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 3. (EI Mode Only Command)
<b>Usage Guideline</b>	This command is used to display PIM-SM RP mapping information.

**Example**

This example displays PIM-SM RP mapping information.

```
DXS-3600-32S#show ip pim sparse-mode rp mapping
Group(s): 229.1.3.0/28
  RP: 10.2.0.2
  via bootstrap, priority 192, RP hold time: 150
  Uptime: 00:17:37, expires: 00:01:52
Group(s): 229.1.5.16/28
  RP: 10.90.90.90
  via bootstrap, priority 192, RP hold time: 150
  Uptime: 00:16:54, expires: 00:01:36
Group(s): 231.0.0.0/8
  RP: 10.90.90.90
  via bootstrap, priority 192, RP hold time: 150
  Uptime: 00:16:54, expires: 00:01:36
Group(s): 233.0.0.0/8
  RP: 10.90.90.90
  via bootstrap, priority 192, RP hold time: 150
  Uptime: 00:16:54, expires: 00:01:36
Group(s): 239.0.0.0/11, static
  RP: 172.18.254.1

DXS-3600-32S#
```

Display Parameters	Description
<b>Groups</b>	Group range mapping to the RP below.
<b>RP</b>	Address of the rendezvous point for that group.
<b>RP hold time</b>	Hold time of the RP.
<b>static</b>	Group-to-mapping information from the static rendezvous-point configuration. Create by command <b>ip pim rp-address</b> .
<b>expires</b>	Time (in hours, minutes, and seconds) after which the information about candidate RP entry expires. If the router does not receive any refresh messages in this time, it discards information.
<b>Uptime</b>	Length of time (in hours, minutes, and seconds) that the router has known about this rendezvous point.

**47-18 show ip pim sparse-mode rp-hash**

This command is used to display which rendezvous point is being selected for a specified group.

```
show ip pim sparse-mode rp-hash GROUP-ADDRESS
```

**Parameters**

<b>GROUP-ADDRESS</b>	Specifies the rendezvous point information for the specified group address.
----------------------	---

<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 3. (EI Mode Only Command)
<b>Usage Guideline</b>	This command displays which rendezvous point was selected for the group specified. It also shows whether this rendezvous point was selected by the PIM Version 2 bootstrap mechanism or manually configured.

**Example** This example shows PIM-SM RP information for 229.1.3.1.

```
DXS-3600-32S#show ip pim sparse-mode rp-hash 229.1.3.1
RP: 10.2.0.2, via bootstrap
Uptime 00:36:46, expires in 00:01:44
DXS-3600-32S#
```

**Example** This example shows PIM-SM RP information for 239.0.0.0.

```
DXS-3600-32S#show ip pim sparse-mode rp-hash 239.0.0.0
RP: 10.90.90.90, static
DXS-3600-32S#
```

Display Parameters	Description
static	Group-to-mapping information from the static rendezvous-point configuration.
RP	Address of the rendezvous point for that group.

## 47-19 show ip pim

This command is used to display PIM global information.

### show ip pim

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 3. (EI Mode Only Command)
<b>Usage Guideline</b>	Use this command to display global information of PIM.

**Example** This example shows global information of PIM.

```
DXS-3600-32S#show ip pim
Register Suppression Time      : 100
Register Keepalive Time       : 185
C-RP Wildcard Prefix Count    : 1
SPT Threshold                  : 0

RP Address
  1.1.1.1, group-list: static-rp-acl

RP Candidate
  vlan1, group-list: candidate-rp
  vlan2, group-list: crp-system

SSM Group : ssm-acl

Old Register Checksum to RP Address
-----
172.18.1.2
DXS-3600-32S#
```

Display Parameters	Description
Register Keepalive Time	Value in seconds. To configure this value, use command <code>ip pim rp-register-kat</code> .



Display Parameters	Description
Register Suppression Time	Value in seconds. To configure this value, use command <b>ip pim register-suppression</b> .
SPT Threshold	Specify whether the switch forwarding in SPT, use command <b>ip pim spt-threshold</b> to change the value.
C-RP Wildcard Prefix Count	Specify the value to be set about Prefix Count value of the wildcard address (224.0.0.0/24) in PIM C-RP-Adv message. To modify the setting, use command <b>ip pim rp-candidate</b>
RP Address	Display the static RP information. To configure static RP, use command <b>ip pim rp-address</b> .
RP Candidate	Display the candidate RP information. To configure candidate RP, use command <b>ip pim rp-candidate</b> .
SSM Group	This field specifies the SSM ACL information. Use command <b>ip pim ssm</b> to configure this value.
Old Register Checksum	For the RP list, the register packets checksum will include data portion. To configure this value, use command <b>ip pim old-register-checksum</b> .

## 47-20 debug ip pim ssm

This command is used to enable the PIM SSM debug function. To disable this debug function, use **no** form of this command.

```
debug ip pim ssm
no debug ip pim ssm
```

<b>Parameters</b>	None.
<b>Default</b>	By default, this option is disabled.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	<p>When PIM-SSM is enabled, some types of IGMP packet referring to multicast address in the SSM range will be ignored by IGMP module: group record <b>MODE_IS_EXCLUDE</b> and <b>CHANGE_TO_EXCLUDE_MODE</b>, IGMPv1/v2 Reports, and IGMPv2 Leave messages.</p> <p>Using this debug command, user can trace which IGMP packets were ignored for SSM reason.</p>

**Example** This example shows how to enable the PIM SSM debug function.

```
DXS-3600-32S#debug ip pim ssm
DXS-3600-32S#
```

**Example** Following debug trace message will be output when Switch receives IGMPv1/v2 Report referring to SSM group "232.0.0.0" from source IP "12.34.3.3" on interface "vlan1".

```
PIM_SSM, 20 Dec 2010 10:49:33 IGMP v1/v2 Report for group 232.0.0.0 from 12.34.3.3 on vlan1, ignored.
```

**Example** Following debug trace message will be output when Switch receives IGMPv2 Leave referring to SSM group "232.0.0.0" from source IP "12.34.3.3" on interface "vlan1".

```
PIM_SSM, 20 Dec 2010 10:50:07 IGMP Leave for group 232.0.0.0 from 12.34.3.3 on vlan1, ignored.
```

**Example**

Following debug trace message will be output when Switch receives IGMPv3 report with Group Record Type MODE\_IS\_EXCLUDE referring to SSM group "232.0.0.0" from source IP "12.34.3.3" on interface "vlan1"

```
PIM_SSM, 20 Dec 2010 10:52:11 IGMP Group Record Type 2 for group 232.0.0.0 from 12.34.3.3 on
vlan1, ignored.
```

**Example**

Following debug trace message will be output when Switch receives IGMPv3 report with Group Record Type CHANGE\_TO\_EXCLUDE\_MODE referring to SSM group "232.0.0.0" from source IP "12.34.3.3" on interface "vlan1".

```
PIM_SSM, 20 Dec 2010 10:52:11 IGMP Group Record Type 4 for group 232.0.0.0 from 12.34.3.3 on
vlan1, ignored.
```

**Example**

This example shows how to disable the PIM SSM debug function.

```
DXS-3600-32S#no debug ip pim ssm
DXS-3600-32S#
```

# Quality of Service (QoS) Commands

## 48-1 class

This command is used to specify a class map to be associated with a traffic policy and then enter into policy-map class configuration mode. Use the no form of this command to remove the specified class from the policy map.

```
class class-map-name
no class class-map-name
```

### Parameters

<i>class-map-name</i>	Specifies the name of the class for the class map. The name can be a maximum of 32 alphanumeric characters.
-----------------------	---

<b>Default</b>	None.
<b>Command Mode</b>	Policy Map Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	<p>The class map needs be created by global configuration command <b>class-map</b> before being associated with a traffic policy. This command enters the policy-map class configuration mode. The user can use the following command to define the QoS policy for the class:</p> <ul style="list-style-type: none"> <li><b>set:</b> Remark specify field of packets that match this classification.</li> <li><b>police:</b> Defines a policer for the classified traffic.</li> <li><b>no:</b> Remove a remark action or policer.</li> </ul>

The user can use **policy-map** global configuration command to identify the policy map and enter the policy map configuration mode.

### Example

This example shows how to create a class map called 'class1' and then use the command **class** in the policy map configuration mode associate class1 with policy-map policy1. The traffic that match access-group 10 will be classified by this class map and then set DSCP value to 10 and policed by a single rate police.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#class-map class1
DXS-3600-32S(config-cmap)#match access-group 10
DXS-3600-32S(config-cmap)#exit
DXS-3600-32S(config)#policy-map policy1
DXS-3600-32S(config-pmap)#class class1
DXS-3600-32S(config-pmap-c)#set dscp 10
DXS-3600-32S(config-pmap-c)#police rate 5000 20 exceed-action dscp 23
DXS-3600-32S(config-pmap-c)#
```

## 48-2 class-map

This command is used to create or modify a class map that defines the criteria for packet matching and to enter the class-map configuration mode. To remove an existing class map from the switch, use the no class-map command.

```
class-map class-map-name
no class-map class-map-name
```

### Parameters

<i>class-map-name</i>	Specifies the name of the class for the class map. The name can be a maximum of 32 alphanumeric characters.
-----------------------	---

<b>Default</b>	None.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	The global configuration command <b>class-map</b> use to specify the name of the class map that user want to create or modify class-map match criteria. The class-map command and its subcommands are used to define packet classification. And these packets which match the class map will be performed specified action such as mark, meter, etc. that defined by globally named service policy applied on a per-port basis. This command enters class-map configuration mode.

The user can use the following commands to define or modify the match criteria:

**match:** Configures classification criteria.

**no:** Removes a match statement from a class map.

A class map that attached to a policy map can not be modified before it was attached from the policy map with no class command.

**Example** This example shows how to configure the class map called class1 with one match criterion, which is an access list called 10.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#class-map class1
DXS-3600-32S(config-cmap)#match access-group 10
DXS-3600-32S(config-cmap)#
```

### 48-3 match

This command is used to define the match criteria to classify traffic. Use the no form of this command to remove the match criteria.

**match access-group** {acl-name | acl-id}

**no match access-group** {acl-name | acl-id}

#### Parameters

<i>acl-name</i>	Specifies the name of an IP standard or extended access control list (ACL) or MAC access control list.
<i>acl-id</i>	Specifies the ID of an IP standard or extended access control list (ACL) or MAC access control list.

<b>Default</b>	None.
<b>Command Mode</b>	Class Map Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	To use the <b>match</b> command, the user must first enter the <b>class-map</b> command to specify the name of the class that will be used to establish the match criteria.

**Example** This example shows how to configure the class map called class1 with one match criterion, which is an access list called 10.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#class-map class1
DXS-3600-32S(config-cmap)#match access-group 10
DXS-3600-32S(config-cmap)#
```

## 48-4 mls qos cos

This command is used to define the default class of service (CoS) value of a port. Use the no form of this command to return to the default setting.

```
mls qos cos default-cos
no mls qos cos
```

### Parameters

<i>default-cos</i>	Specifies to assign a default CoS value to a port. If packets are untagged, the default CoS value becomes the packet CoS value. The CoS range is 0 to 7.
--------------------	--

<b>Default</b>	The default CoS value is 0.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	Only physical ports are valid for this command.  Use <b>mls qos cos</b> command to specify the default CoS of the port. The CoS of the packets will be the packet's CoS if the packets are tagged, and will be the port default CoS if the packet is untagged.

**Example** This example shows how to set the default CoS to 4 for interface tenGigabitEthernet 1/0/1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#mls qos cos 4
DXS-3600-32S(config-if)#
```

## 48-5 mls qos map dscp-cos

This command is used to define a differentiated services code point (DSCP) to class of service (CoS) map in global configuration mode. To restore to the default setting, use the no form of this command.

```
mls qos map dscp-cos dscp-list to cos
no mls qos map dscp-cos
```

### Parameters

<i>dscp-list</i>	Specifies the list of DSCP to be mapped to a COS value. The range of DSCP is 0 to 63. The series of DSCPs can be separated by comma (,) or hyphen (-) with no spaces or hyphen - before and after.
<i>cos</i>	Specifies the associated CoS value.

<b>Default</b>	DSCP -> CoS: 0..7 => 1 8..15 => 2 16..23 => 0 24..31 => 3 32..40 => 4 41..47 => 5 48..55 => 6 56..63 => 7
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 15

**Usage Guideline** The DSCP to CoS map is used by a DSCP trust port to map a DSCP value to an CoS value. This CoS value is then mapped to CoS queue based on the CoS to queue map configured by the **priority-queue cos-map** command.

**Example** This example shows how to configure the DSCP 12, 16, 18 to CoS 1 mapping.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#mls qos map dscp-cos 12,16,18 to 1
DXS-3600-32S(config)#
```

## 48-6 mls qos scheduler

This command is used to configure the queue scheduling algorithm in global configuration mode. To restore to the default setting, use the no form of this command.

```
mls qos scheduler [sp | rr | wrr | wdr | ets]
no mls qos scheduler
```

### Parameters

<b>sp</b>	Specifies all queues of a port in absolute priority scheduling.
<b>rr</b>	Specifies all queues of a port in round-robin scheduling.
<b>wrr</b>	Specifies the queues of a port in frame count weighted round-robin scheduling. If the weight of a queue be configured to zero, the queue is in SP scheduling mode.
<b>wdr</b>	Specifies the queues of a port in frame length weighted round-robin scheduling. If the weight of a queue be configured to zero, the queue is in SP scheduling mode.
<b>ets</b>	Specifies the queues of a port in ETS weighted round-robin scheduling.

**Default** WRR queue scheduling algorithm.

**Command Mode** Global Configuration Mode.

**Command Default Level** Level: 15

**Usage Guideline** The user can specify schedule algorithms to WRR, SP, RR or WDRR for the output queue. By default, the output queue algorithm is WRR (Weighted Round-Robin).

The user may specify the WRR weight by using the **wrr-queue bandwidth** command and specify the WDRR weight by using the **wdr-queue bandwidth** command.

The user can also specify the “SP + WRR/WDRR” scheduling mode by configuring the WRR/WDRR weight of a queue to zero.

**Example** This example shows how to configure the queue scheduling algorithm mode.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#mls qos scheduler sp
DXS-3600-32S(config-if)#
```

## 48-7 mls qos trust

This command is used to trust either the CoS field or the DSCP field of the arriving packet for subsequent QoS operation. Use the no form of this command to restore it to default setting.

```
mls qos trust {cos | dscp}
no mls qos trust
```

**Parameters**

<b>cos</b>	Specifies that the CoS field of the arriving packets are trusted for subsequent QoS operations. For an untagged packet, the default CoS value of the port is used.
<b>dscp</b>	Specifies that the DSCP field of the arriving packets is trusted for subsequent operations. For a non-IP packet, the packet CoS is used if the packet is tagged. For an untagged packet, the default CoS value of the port is used.

**Default**

Trust CoS.

**Command Mode**

Interface Configuration Mode.

**Command Default Level**

Level: 15

**Usage Guideline**

Only physical ports are valid for this command.

Use the **mls qos trust** command to specify the port trust mode and which fields of the packet to use to classify traffic.

When the interface is set to trust DSCP, the DSCP of the arriving packet will be trusted for the subsequent QoS operations. First, the DSCP will be mapped to a CoS value, which will be subsequently used to determine the CoS queue. The DSCP to COS map is configured by the **mls qos map dscp-cos** command. The CoS to queue map is configured by the **priority-queue cos-map** command. If the arriving packet is a non-IP packet, the CoS is trusted. The resulting COS mapped from DSCP will also be the CoS in the transmitted packet.

When an interface is in the trust CoS state, the CoS of the arriving packet will be used to determine the CoS queue. The CoS to queue map is configured by the **priority-queue cos-map** command.

**Example**

This example shows how to configure trust mode to trust DSCP on tenGigabitEthernet 1/0/1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#mls qos trust dscp
DXS-3600-32S(config-if)#
```

**48-8 police sr-tcm**

This command is used to configure traffic policing using the single rate in the policy-map class configuration mode. Remove the traffic policing from the switch configuration, use the no police command.

**police sr-tcm** *bps* [**bc** *cbs*] [**be** *ebs*] **conform-action** *action* **exceed-action** *action* [**violate-action** *action*]  
**no police**

**Parameters**

<b>bps</b>	Specifies the average rate in Kbps.
<b>bc cbs</b>	(Optional) Specifies the committed burst size in Kbyte. If not specify this item, the default committed burst will be use.
<b>be ebs</b>	(Optional) Specifies the excess burst size in Kbyte. If not specify this item, the default excess burst will be use.
<b>conform-action</b>	Specifies the action to take on green color packets.
<b>exceed-action</b>	Specifies the action to take on yellow color packets.
<b>violate-action</b>	(Optional) Specifies the action to take on red color packets. The default action is as same as action for yellow color packets.

<i>action</i>	<p>Specifies the action to take on packets describe following:</p> <p><b>drop:</b> Drops packet.</p> <p><b>set-dscp-transmit new-dscp:</b> Sets the IP differentiated services code points(DSCP) value and transmits the packet with the new DSCP value setting.</p> <p><b>set-1p-transmit new-cos:</b> Sets the packet COS value and transmits it with the new CoS value.</p> <p><b>transmit:</b> Transmit the packet with no change.</p>
<b>Default</b>	None.
<b>Command Mode</b>	Policy-map Class Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	<p>Use the <b>police sr-tcm</b> command to drop a packet or mark a packet with different quality of service (QoS) values based on conformance to the service-level agreement.</p> <p>The CBS and EBS must be configured so that at least one of them is larger than 0.</p> <p>The user may specify multiple policing actions for a color packet, but can not specified contradictory actions at one time. That is, the user can specify action set-dscp-transmit and set-1p-transmit for a color packet at one time, but can not specify the action transmit and drop for it.</p> <p>The algorithm of color classify is described following:</p> <p>The two token buckets are initially (at time 0) full, that is, the token count <math>Tbc(0) = CBS</math> and the token count <math>Tbe(0) = EBS</math>. Thereafter, the token counts <math>Tbc</math> and <math>Tbe</math> are updated bps times per second as follows:</p> <ol style="list-style-type: none"> <li>If <math>Tbc</math> is less than <math>cbs</math>, <math>Tbc</math> is incremented by one, else</li> <li>if <math>Tbe</math> is less then <math>ebs</math>, <math>Tbe</math> is incremented by one, else</li> <li>neither <math>Tbc</math> nor <math>Tbe</math> is incremented.</li> </ol> <p>When a packet of size <math>B</math> bytes arrives at time <math>t</math>, the following happens:</p> <ol style="list-style-type: none"> <li>If <math>Tbc(t)-B \geq 0</math>, the packet is green and <math>Tbc</math> is decremented by <math>B</math> down to the minimum value of 0, else</li> <li>If <math>Tbe(t)-B \geq 0</math>, the packets is yellow and <math>Tbe</math> is decremented by <math>B</math> down to the minimum value of 0, else.</li> <li>The packet is red and neither <math>Tc</math> nor <math>Te</math> is decremented.</li> </ol> <p>It is recommended that when the value of the CBS or the EBS is larger than 0, it is larger than or equal to the size of the largest possible IP packets in the stream.</p> <p>Only one policer can be bound at one time in the policy-map class configuration mode</p>



**Example**

This example shows how to define a traffic class (using the class-map command) and associate the policy with the match criteria for the traffic class in a policy map (using the policy-map command). The service-policy command is then used to attach this service policy to the interface. In this particular example, traffic policing is configured with an average rate of 5000 Kbits per second and a Committed burst size of 4096 Kbytes for all ingress packets specified by class-map class1 at interface tenGigabitEthernet 1/0/3.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#class-map class1
DXS-3600-32S(config-cmap)#match access-group 1
DXS-3600-32S(config-cmap)#exit
DXS-3600-32S(config)#policy-map policy1
DXS-3600-32S(config-pmap)#class class1
DXS-3600-32S(config-pmap-c)#police sr-tcm 5000 4096 2048 conform-action transmit exceed-action
set-dscp-transmit 54 violate-action drop
DXS-3600-32S(config-pmap-c)#exit
DXS-3600-32S(config-pmap)#exit
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/3
DXS-3600-32S(config-if)#service-policy input policy1
DXS-3600-32S(config-if)#
```

**48-9 police tr-tcm cir**

This command is used to configure traffic policing using two rates in policy-map configuration mode. Remove traffic policing from the configuration, use the no police command.

```
police tr-tcm cir cir [bc cbs] pir pir [be pbs] [conform-action action [exceed-action action [violate-action
action]]]
no police
```

**Parameters**

<b>cir</b> <i>cir</i>	Specifies the committed information rate in kbps at which the first token bucket is updated.
<b>bc</b> <i>cbs</i>	(Optional) Specifies the committed burst size in Kbytes used by the first token bucket for policing. It must be configured to be greater than 0.
<b>pir</b> <i>pir</i>	Specifies the peak information rate in kbps at which the second token bucket is updated. The pir must be equal to or greater than the cir.
<b>be</b> <i>pbs</i>	(Optional) Specifies the peak burst size in Kbytes used by the second token bucket for policing. It must be configured to be greater than 0.
<b>conform-action</b>	(Optional) Specifies the action to take on green color packets. The default action is 'transmit'.
<b>exceed-action</b>	(Optional) Specifies the action to take on yellow color packets. The default action is 'drop'.
<b>violate-action</b>	(Optional) Specifies the action to take on red color packets. The default action is as same as action for yellow color packets.
<b>action</b>	Specifies the action to take on the following packets: <b>drop</b> : Drops the packet. <b>set-dscp-transmit</b> <i>new-dscp</i> : Sets the IP differentiated services code points(DSCP) value and transmits the packet with the new DSCP value setting. <b>set-1p-transmit</b> <i>new-cos</i> : Sets the packet COS value and transmits it with the new CoS value. <b>transmit</b> : Transmits the packet with no change.

**Default**

None.

<b>Command Mode</b>	Policy-map Class Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	Use the <b>police tr-tcm cir</b> command to drop a packet or mark a packet with different quality of service (QoS) values based on conformance to the service-level agreement.

The user may specify multiple policing actions for a color packet, but can not specified contradictory actions at one time. That is, the user can specify action set-dscp-transmit and set-1p-transmit for a color packet at one time, but can not specify the action transmit and drop for it.

Two-rate traffic policing uses two token buckets (Tbc and Tbp) for policing traffic at two independent rates. The algorithm of color classify for this command is described following:

- The two token buckets are initially (at time 0) full, that is, the token count Tbp (0) = PBS and the token count Tbc (0) = CBS. Thereafter, the token count Tbp is incremented by one pir times per second up to PBS and the token count Tbc is incremented by one cir times per second up to CBS.
- When a packet of size B bytes arrives at time t, the following happens:
  - a. If Tbp(t)-B < 0, the packet is red, else.
  - b. If Tbc(t)-B < 0, the packet is yellow and Tbp is decremented by B, else.
  - c. The packet is green and both Tbp and Tbc are decremented by B.

The **pir** must be equal to or greater than the **cir**.

The PBS and the CBS are measured in Kbytes and both of them must be configured to be greater than 0. It is recommended that they be configured to be equal to or greater than the size of the largest possible IP packet in the stream.

In the policy-map class configuration mode, only one policer can be bind at one time.

## Example

This example shows how to define a traffic class (using the class-map command) and associate the policy with the match criteria for the traffic class in a policy map (using the policy-map command). In the following example, two-rate traffic policing is configured on a class to limit traffic to an average committed rate of 2Mbps and a peak rate of 5Mbps.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#class-map class1
DXS-3600-32S(config-cmap)#match access-group 1
DXS-3600-32S(config-cmap)#exit
DXS-3600-32S(config)#policy-map policy1
DXS-3600-32S(config-pmap)#class class1
DXS-3600-32S(config-pmap-c)#police tr-tcm cir 2000 bc 4096 pir 5000 be 2048 conform-action
transmit exceed-action set-dscp-transmit 28 violate-action drop
DXS-3600-32S(config-pmap-c)#
```

## 48-10 police rate

This command is used to define a policer for classified traffic. A policer defines a maximum permissible rate of transmission, a maximum burst size for transmissions, and an action to take if either maximum is exceeded. Use the no police command to remove an existing policer .

```
police rate bps burst-byte [exceed-action {drop | dscp dscp-value}]
no police
```

### Parameters

<i>bps</i>	Specifies the average rate in Kbps.
<i>burst-byte</i>	Specifies the burst size in Kbyte.

<b>exceed-action</b>	(Optional) Specifies the action for the packets that exceeded the rate. The default action is 'drop'.
<b>drop</b>	Specifies to drop the packets exceeding the average rate.
<b>dscp</b> <i>dscp-value</i>	Specifies to overwrite the DSCP value of the packets exceeding the average rate.

<b>Default</b>	None.
<b>Command Mode</b>	Policy-map Class Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	Use this command to limit bandwidth of appointed flow and specify the method of handling the excessive part.  If not specify <b>exceed</b> action, the default action ' <b>drop</b> ' will be used.  In the policy-map class configuration mode, only one policer can be bind at one time.

**Example** This example shows how to configure the flow bandwidth.

```
DXS-3600-32S#configure terminal
DXS-3600-32S (config)#policy-map policy1
DXS-3600-32S (config-pmap)#class class1
DXS-3600-32S (config-pmap-c)#police rate 5000 4096 exceed-action dscp 23
DXS-3600-32S (config-pmap-c)#
```

## 48-11 policy-map

This command is used to create or modify a policy map that can be attached to multiple interfaces and to enter policy-map configuration mode. To remove a existing policy map, use the no form of this command.

**policy-map** *policy-map-name*  
**no policy-map** *policy-map-name*

### Parameters

<i>policy-map-name</i>	Specifies the name of the policy map. The name can be a maximum of 32 alphanumeric characters.
------------------------	--

<b>Default</b>	None.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 15

**Usage Guideline**

The global configuration command **policy-map** is used to specify the name of the policy map that user want to create or modify policy-map information and enter policy map configuration mode.

In the policy map configuration mode, the user can use the following command to attach or detach class map to/from the policy map:

**class:** Attach a exist class map that defined classification criteria to the policy map and enter the policy-map class configuration mode.

**no:** Remove a class map from this policy map.

Policy maps maybe contain more than one traffic **class** by using the class policy-map configuration command.

The user can attach the policy map to an interface by using the **service-policy** interface configuration command. Only one policy map per interface is supported and a policy map can apply to multiple interfaces.

If user want modify the policy-map information that attached to one or more interfaces, they must first use no form of **service-policy** interface configuration command to detach it from these interfaces.

**Example**

This example shows how to create a policy map called policy1. When attached to the ingress port, it matches all the incoming traffic defined in class1, sets the COS to 5, and polices the traffic at an average rate of 1 Mbps and bursts at 20 KB. Traffic exceeding the profile is discarded.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#policy-map policy1
DXS-3600-32S(config-pmap)#class class1
DXS-3600-32S(config-pmap-c)#set cos 5
DXS-3600-32S(config-pmap-c)#police rate 1000 20 exceed-action drop
DXS-3600-32S(config-pmap-c)#
```

**Example**

This example shows how to configure multiple classes in a policy map called policy2.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#policy-map policy2
DXS-3600-32S(config-pmap)#class class1
DXS-3600-32S(config-pmap-c)#set dscp 10
DXS-3600-32S(config-pmap-c)#police rate 1000 20 exceed-action dscp 12
DXS-3600-32S(config-pmap-c)#exit
DXS-3600-32S(config-pmap)#class class2
DXS-3600-32S(config-pmap-c)#police sr-tcm 2000 bc 20 be 40 conform-action drop exceed-action drop
DXS-3600-32S(config-pmap-c)#exit
DXS-3600-32S(config-pmap)#class class3
DXS-3600-32S(config-pmap-c)#set cos-queue 5
DXS-3600-32S(config-pmap-c)#
```

**48-12 priority-queue cos-map**

This command is used to define a class of service (CoS) to queue maps in the global configuration mode. To restore to the default setting, use the no form of this command.

```
priority-queue cos-map qid cos0 [cos1 [cos2 [cos3 [cos4 [cos5 [cos6 [cos7]]]]]]]
no priority-queue cos-map
```

**Parameters**

<i>qid</i>	Specifies the queue ID.
<i>cos0...cos7</i>	Specifies the associated CoS value.

<b>Default</b>	CoS -> queue: 0 -> 2 1 -> 0 2 -> 1 3 -> 3 4 -> 4 5 -> 5 6 -> 6 7 -> 7
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	The <b>priority-queue cos-map</b> command use to configure the CoS to queue map table. When a packet is received, the packet will be given an internal CoS. This internal CoS is used to select the transmit queue based on the CoS to queue map table. The CoS queue with higher number owned with higher priority.

**Example** This example shows how to assign the CoS priority 3,5,6 to CoS queue 2.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#priority-queue cos-map 2 3 5 6
DXS-3600-32S(config)#
```

## 48-13 queue bandwidth

This command is used to specify or modify the bandwidth allocated for a CoS. To remove the bandwidth allocated for a CoS, use the no form of this command.

```
queue queue-id bandwidth min max
no queue queue-id bandwidth
```

### Parameters

<i>queue-id</i>	Specifies the CoS queue to assign bandwidth.
<i>min</i>	Specifies the minimal guaranteed bandwidth in Kbps allocated to a specified COS.
<i>max</i>	Specifies the maximum bandwidth in Kbps for a specified COS.

<b>Default</b>	No limitation.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	Only physical ports are valid for this command.  When the minimal bandwidth is configured, the packet transmitted from the queue can be guaranteed even though the link is congested.  When the maximum bandwidth is configured, packets transmitted from the queue cannot exceed the maximum bandwidth even if the bandwidth is available.  Note that the configuration of <b>queue bandwidth</b> can only be attached to a physical port but not a port-channel. That is the bandwidth of one CoS cannot be summation across physical ports.

**Example** This example shows how to set the queue bandwidth.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/3
DXS-3600-32S(config-if)#queue 1 bandwidth 100 2000
DXS-3600-32S(config-if)#
```

## 48-14 rate-limit

This command is used to configure the rate limitation on the interface. Use the no form of the command to restore it to the default setting.

```
rate-limit {input | output} bps burst-size
no rate-limit {input | output}
```

### Parameters

<b>input</b>	Specifies the input rate limit.
<b>output</b>	Specifies the output rate limit.
<i>bps</i>	Specifies the bandwidth limitation in Kbps.
<i>burst-size</i>	Specifies the burst traffic limit in Kbyte.

<b>Default</b>	No limitation.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	Only physical ports are valid for this command.

**Example** This example shows how to set the input bandwidth on interface tenGigabitEthernet 1/0/3.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/3
DXS-3600-32S(config-if)#rate-limit input 2000 4096
DXS-3600-32S(config-if)#
```

## 48-15 service-policy

This command is used to apply a policy map defined by the policy-map command to an interface. Use the no form of this command to remove the policy map from interface.

```
service-policy {input | output} policy-map-name
no service-policy {input | output}
```

### Parameters

<b>input</b>	Specifies to apply the policy map for ingress flow on interface.
<b>output</b>	Specifies to apply the policy map for egress flow on interface.
<i>policy-map-name</i>	Specifies the name of the policy map. The name can be a maximum of 32 alphanumeric characters.

<b>Default</b>	None.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 15

**Usage Guideline**

The **service-policy** command is used to attach a single policy map to interface. This policy is attached to the interface. A packet arriving at an interface will be treated based on the service policy attached to the interface.

A policy map needs be created by **policy-map** command before you apply it on an interface. An interface can just own one policy map.

A policy map that attached to an interface can not be modified unless detach it from the interface with no form of this command.

**Example**

This example shows how to apply the policy map policy1 to a physical ingress interface.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#service-policy input policy1
DXS-3600-32S(config-if)#
```

**48-16 set**

This command is used to set the new DSCP field, and CoS field of the out-going packet. The user can also specify the CoS queue for the packet. Use the no form of this command to remove traffic remarking.

```
set {dscp dscp | cos cos | cos-queue cos-queue}
no set {dscp | cos | cos-queue}
```

**Parameters**

<b>dscp</b> <i>dscp</i>	Specifies a new DSCP for the packet. The range is 0 to 63.
<b>cos</b> <i>cos</i>	Specifies to assign a new CoS value to the packet. The range is 0 to 7.
<b>cos-queue</b> <i>cos-queue</i>	Specifies to assign the CoS queue to the packets. This action will overwrite the original CoS queue selection.

**Default**

None.

**Command Mode**

Policy-map Class Configuration Mode.

**Command Default Level**

Level: 15

**Usage Guideline**

The **set** command is used to set the DSCP field or the COS field of the matched packet to a new value and the **set cos-queue** command may be assigned directly to the CoS queue for the matched packets.

The user can configure multiple set commands for a class if they are not conflicting. The **set dscp** command will not affect the CoS queue selection. The **set cos-queue** command will not alter the CoS field of the outgoing packet.

The **police** command and the **set** command may be configured for the same class. The **set** command will be applied to all colors of packets and the **police** action takes affect after the **set** command.

The command **set cos-queue** can be used only for the policy map that is attached to the ingress interface.

**Example**

This example shows how to assign COS 4 for all packets classified by class1 without any police.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#policy-map policy1
DXS-3600-32S(config-pmap)#class class1
DXS-3600-32S(config-pmap-c)#set cos 4
DXS-3600-32S(config-pmap-c)#
```

## 48-17 show class-map

This command is used to display the quality of service (QoS) class maps, which define the match criteria to classify traffic.

```
show class-map [class-map-name]
```

### Parameters

<i>class-map-name</i>	Specifies the name of the class for the class map. The name can be a maximum of 32 alphanumeric characters.
-----------------------	---

<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	If the class map name is not specified, all class map information will be displayed.

**Example** This example shows the output from the **show class-map** command.

```
DXS-3600-32S#show class-map
```

```
Class Map class1
  Match access-group 101
```

```
Class Map class2
  Match access-group 8
```

```
DXS-3600-32S#
```

## 48-18 show mls qos interface

This command is used to display the QoS configuration on the interface.

```
show mls qos interface [INTERFACE-ID [,|-]] [policers]
```

### Parameters

<i>INTERFACE-ID [, -]</i>	Specifies the interface ID for which the QoS configure information will be displayed. You can specify multiple interface IDs, which are separated by commas (,) or hyphens (-). No space is before or after the commas or hyphens.
<b>policers</b>	Specifies to only show the police associated with specify interface.

<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	If no interface ID is specified, all interfaces QoS information will be display. If the key policers is specified, just the policy map information of the specified interface will be displayed.



**Example**

This example shows the output from the **show mls qos interface** command.

```
DXS-3600-32S#show mls qos interface tenGigabitEthernet 1/0/1

Interface: TenGigabitEthernet1/0/1
Trust Mode: trust DSCP
Default COS: 0, Effective 0
Attached input policy-map: policy1
Attached output policy-map: policy2

DXS-3600-32S#
```

**48-19 show mls qos maps**

This command is used to display the QoS map information.

**show mls qos maps dscp-cos**

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	This command displays information about QoS maps.

**Example**

This example shows the output from the **show mls qos maps** command.

```
DXS-3600-32S#show mls qos maps

DSCP  COS      DSCP  COS      DSCP  COS      DSCP  COS
----  -
0     1       1     1       2     1       3     1
4     1       5     1       6     1       7     1
8     2       9     2       10    2       11    2
12    2       13    2       14    2       15    2
16    0       17    0       18    0       19    0
20    0       21    0       22    0       23    0
24    3       25    3       26    3       27    3
28    3       29    3       30    3       31    3
32    4       33    4       34    4       35    4
36    4       37    4       38    4       39    4
40    5       41    5       42    5       43    5
44    5       45    5       46    5       47    5
48    6       49    6       50    6       51    6
52    6       53    6       54    6       55    6
56    7       57    7       58    7       59    7
60    7       61    7       62    7       63    7

DXS-3600-32S#
```

**48-20 show mls qos queueing**

This command is used to display the QoS queueing information.

**show mls qos queueing** [*INTERFACE-ID* [,|-]]

**Parameters**

<i>INTERFACE-ID</i> [, -]	Specifies the interface ID for which the QoS configure information will be displayed. You can specify multiple interface IDs, which are separated by commas (,) or hyphens (-). No space is before or after the commas or hyphens.
---------------------------	--

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	This command displays information about CoS to queue map and QoS scheduling.

**Example** This example shows how to output from the **show mls qos queueing** command.

```
DXS-3600-32S#show mls qos queueing interface tenGigabitEthernet 1/0/1
```

## CoS-queue map:

CoS	UC QID	MC QID
0	2	1
1	0	0
2	1	0
3	3	1
4	4	2
5	5	2
6	6	3
7	7	3

## Interface: TG1/0/1

## WRR bandwidth weights:

QID	Weights
0	1
1	1
2	1
3	1
4	1
5	1
6	1
7	1

## WDRR bandwidth weights:

QID	Weights
0	1
1	1
2	1
3	1
4	1
5	1
6	1
7	1

## ETS bandwidth weights:

QID	Weights	Effective Weights
0	4	4
1	7	7
2	11	11
3	14	14
4	18	18
5	21	21
6	25	25
7	strict priority	strict priority

```
DXS-3600-32S#
```

## 48-21 show mls qos rate-limit

This command is used to show the information about the rate limit on the interface.

```
show mls qos rate-limit [interface INTERFACE-ID [,|-]]
```

### Parameters

---

<b>interface</b> <i>INTERFACE-ID</i>	(Optional) Specifies the interface ID you want to display.
--------------------------------------	--

---

<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	If no interface ID is specified, then bandwidth information of all interfaces will be displayed.

**Example** This example shows how to display the rate information of tenGigabitEthernet 1/0/1.

```
DXS-3600-32S#show mls qos rate-limit interface tenGigabitEthernet 1/0/1
```

```
Interface: TenGigabitEthernet1/0/1
rate limit:
  input no limit
    Effective no limit
  output no limit
    Effective no limit
queue rate limit:
  QID: 0  minimum rate no limit  maximum rate no limit
  QID: 1  minimum rate no limit  maximum rate no limit
  QID: 2  minimum rate no limit  maximum rate no limit
  QID: 3  minimum rate no limit  maximum rate no limit
  QID: 4  minimum rate no limit  maximum rate no limit
  QID: 5  minimum rate no limit  maximum rate no limit
  QID: 6  minimum rate no limit  maximum rate no limit
  QID: 7  minimum rate no limit  maximum rate no limit
```

```
DXS-3600-32S#
```

## 48-22 show mls qos scheduler

This command is used to show the information for the queue scheduling algorithm.

```
show mls qos scheduler [interface INTERFACE-ID [,|-]]
```

### Parameters

---

<b>interface</b> <i>INTERFACE-ID</i>	(Optional) Specifies the interface ID you want to display.
--------------------------------------	--

---

<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 15

**Usage Guideline**

Use this command to display the information for the queue scheduling algorithm. The **show mls qos queueing** command can also be used to display its weight value.

**Example**

This example shows how to display the information for queue scheduling.

```
DXS-3600-32S#show mls qos scheduler interface tenGigabitEthernet 1/0/1
```

```
Interface: TG1/0/1
Multi-Layer Switching scheduling:
Strict Priority
```

```
DXS-3600-32S#
```

**48-23 show policy-map**

This command is used to display quality of service (QoS) policy maps, which defines the classification criteria for incoming or outgoing traffic.

**show policy-map** [*policy-map-name* [**class** *class-map-name*]]

**Parameters**

<i>class-map-name</i>	Specifies the name of the class for the class map. The name can be a maximum of 32 alphanumeric characters.
<i>policy-map-name</i>	Specifies the name of a policy map that contains the class configuration to be displayed. The name can be a maximum of 32 alphanumeric characters.

**Default**

None.

**Command Mode**

Privileged EXEC Mode.

**Command Default Level**

Level: 15

**Usage Guideline**

If no policy map name is specified, all policy map information will be display. If the class map name is not specified, all class maps attached to the policy map's information will be displayed.

**Example**

This example shows the output from the **show policy-map** command.

```
DXS-3600-32S#show policy-map
```

```
Policy Map policy
Class class1
  set dscp 22
Class class2
  set dscp 14
  set cos 2
  police sr-tcm 8000 bc 8 be 9
    conform-action: transmit
    exceed-action: set-lp-transmit 3
    violate-action: drop
```

```
Policy Map policy1
Class class3
  set dscp 36
```

```
DXS-3600-32S#
```

## 48-24 wdr-queue bandwidth

This command is used to set the queue weight in the WDRR scheduling mode. To restore to the default setting, use the no form of this command.

```
wdr-queue bandwidth weight1...weight8
no wdr-queue bandwidth
```

### Parameters

<i>weight1...weight8</i>	Specifies the weight values per queue in frame length count weighted round-robin scheduling. <i>weight1</i> is used for queue 0, <i>weight2</i> is used for queue 1, and so on.
--------------------------	---

<b>Default</b>	None.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	Before running the <b>wdr-queue bandwidth</b> command, the scheduling mode must be configured as WDRR mode. If the weight of a queue is set to zero, the scheduling mode must be 'SP + WDRR', and the queue must be in SP scheduling mode.

**Example** This example shows how to configure the queue weight of WDRR scheduling mode.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#wdr-queue bandwidth 1 2 3 4 5 6 7 8
DXS-3600-32S(config-if)#
```

## 48-25 wr-queue bandwidth

This command is used to set the queue weight in the WRR scheduling mode. To restore to the default setting, use the no form of this command.

```
wr-queue bandwidth weight1...weight8
no wr-queue bandwidth
```

### Parameters

<i>weight1...weight8</i>	Specifies the weight values, per queue, used in the frame count weighted round-robin scheduling method. <i>weight1</i> is used for queue 0, <i>weight2</i> is used for queue 1, and so on.
--------------------------	--

<b>Default</b>	None.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	Before running the <b>wr-queue bandwidth</b> command, the scheduling mode must be configured as WRR mode. If the weight of a queue is configured to zero, the scheduling mode must be 'SP + WRR', and the queue must be in the SP scheduling mode.

**Example** This example shows how to configure the queue weight of WRR scheduling mode.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#wdr-queue bandwidth 1 2 3 4 5 6 7 8
DXS-3600-32S(config-if)#
```



# Quantized Congestion Notification (QCN) Commands

## 49-1 clear qcn counters

This command is used to clear QCN counters.

```
clear qcn counters {all | interface INTERFACE-ID [, | -]}
```

### Parameters

<b>all</b>	Specifies to clear QCN counters on all interfaces.
<b>interface <i>INTERFACE-ID</i> [,   -]</b>	Specifies the interface to clear QCN counters. Valid interfaces are physical interface. You can specify multiple interfaces, which are separated by “,” (comma) or “-“ (hyphen). No space before and after the comma or hyphen.

<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 3.
<b>Usage Guideline</b>	You can use this command with the <b>interface</b> keyword to clear QCN counters of CP(s) on the specified interface(s). If the command <b>clear qcn counters</b> is issued with the <b>all</b> keyword, the QCN counters of all CP(s) on all interfaces will be cleared.

**Example** This example shows how to reset QCN counters on all interfaces.

```
DXS-3600-32S#clear qcn counters all
DXS-3600-32S#
```

## 49-2 qcn

This command is used to enable the QCN functionality. Use the **no** form of this command to disable the QCN functionality.

```
qcn enable
no qcn enable
```

<b>Parameters</b>	None.
<b>Default</b>	Disabled.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 3.
<b>Usage Guideline</b>	QCN is a form of end-to-end congestion management defined in IEEE 802.1.Qau. The purpose of QCN is to ensure that congestion is controlled from the sending device to the receiving device in a dynamic fashion that can deal with changing bottlenecks. Use this command to enable/disable the QCN functionality.

**Example** This example shows how to enable the QCN functionality.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)# qcn enable
DXS-3600-32S(config)#
```

**Example** This example shows how to disable the QCN functionality.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)# no qcn enable
DXS-3600-32S(config)#
```

### 49-3 qcn cnm-transmit-priority

This command is used to configure the IEEE 802.1p priority for transmitting Congestion Notification Messages (CNMs). Use the **no** form of this command to reset to the default setting.

```
qcn cnm-transmit-priority PRIORITY-VALUE
no qcn cnm-transmit-priority
```

#### Parameters

<i>PRIORITY-VALUE</i>	Specifies the IEEE 802.1p priority value for all Congestion Notification Messages (CNMs). The valid priority range of CNMs is 0 to 7
-----------------------	--

**Default** Priority value is 0.

**Command Mode** Global Configuration Mode.

**Command Default Level** Level: 3.

**Usage Guideline** Use the command to configure the priority of Congestion Notification Messages which are transmitted by the Switch.

**Example** This example shows how to configure the priority of Congestion Notification Messages to 1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S (config)# qcn cnm-transmit-priority 1
DXS-3600-32S (config)#
```

### 49-4 qcn cnpv

This command is used to assign IEEE 802.1p priority as Congestion Notification Priority Value (CNPV), and configure the default settings for all ports. Use the **no** form of this command to delete a priority from CNPV.

```
qcn cnpv CNPV-PRIORITY-VALUE [admin-defense-mode {disable | interior | interior-ready | edge} |
  alternate-priority PRIORITY-VALUE | defense-mode-choice {admin | auto} | cp-creation {enable | disable}]
no qcn cnpv CNPV-PRIORITY-VALUE
```

#### Parameters

<i>CNPV-PRIORITY-VALUE</i>	Specifies the IEEE 802.1p priority value to be the Congestion Notification Priority Value (CNPV). The valid priority range of CNPV is 0 to 7.
----------------------------	---

<b>admin-defense-mode</b> { <b>disable</b>   <b>interior</b>   <b>interior-ready</b>   <b>edge</b> }	(Optional) Specifies the default CNV defense mode for this CNPV on all interfaces. This setting can be overridden by <b>admin-defense-mode</b> of per-interface. disable:
--	--

The congestion notification capability is administratively disabled for this priority:

**interior:** The priority parameter of frames input are not remapped to or from this priority, and the frames are transmitted without CN-TAG ;

**interior-ready:** The priority parameter of frames input are not remapped to or from this priority, and CN-TAGs won't be stripped off when transmitting the frames;

**edge:** The priority parameter of frames input at this priority are remapped to an alternate value, frames at other priorities are not remapped to this priority, and the frames are transmitted without CN-TAG .

If not specified, the default administrative defense mode is **interior**.

<b>alternate-priority</b> <i>PRIORITY-VALUE</i>	(Optional) Specifies a priority value to which this priority value is to be remapped when the receiving frame with a dot1p priority equal to the specified CNPV at Edge port. The valid priority range is 0 to 7. This value can be overridden by <b>alternate-priority</b> of per-interface. If not specified, the default alternate priority is 0.
--	--



---

**defense-mode-choice {admin | auto}** (Optional) Specifies how to choose CND defense mode and alternate priority for this Congestion Notification Priority Value on all ports. This setting can be overridden by **defense-mode-choice** of per-interface.

**admin:** The default CND defense mode and alternate priority are specified by administrator.

**auto:** The default CND defense mode and alternate priority are controlled automatically.

If not specified, the default defense mode choice is **auto**.

---

**cp-creation {enable | disable}** (Optional) Specifies the default value for defense mode for newly-created port entries.

**enable:** Newly-created port entries take the defense mode by global setting

**disable:** Newly-created port entries take the defense mode by itself settings.

If not specified, the default cp-creation is **enable**.

---

**Default** None.

**Command Mode** Global Configuration Mode.

**Command Default Level** Level: 3.

**Usage Guideline** Use this command to specify the priority to be the Congestion Notification Priority Value (CNPV) and configure the setting for this CNPV.

If the **qcn cnpv CNPV-PRIORITY-VALUE** command is issued without any optional keywords:

- If the specified *CNPV-PRIORITY-VALUE* is CNPV, all the configured settings will be retained.
- Else if the specified *CNPV-PRIORITY-VALUE* is not CNPV, the specified *CNPV-PRIORITY-VALUE* is assigned as a CNPV and the corresponding settings will be filled with the default value.

When an IEEE 802.1p priority is assigned as CNPV globally, the CNPV configuration for all interfaces will be created with default value. When a priority is deleted from CNPV, the CNPV configuration for all interfaces will be deleted.

The command only takes effect when the QCN is enabled globally. The command **qcn cnpv** in interface configuration mode has higher precedence. According to IEEE 802.1Qau, up to seven entries can be active in the global CNPV table. If the maximum number of the table is reached, an error message will be issued when adding a new priority as CNPV.

**Example** This example shows how to configure the priority 2 as CNPV and administratively assigns the defense mode for all ports as *Edge*. It assigns the default alternate priority to 1 for all other ports.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)# qcn cnpv 2 defense-mode-choice admin
DXS-3600-32S(config)# qcn cnpv 2 admin-defense-mode edge
DXS-3600-32S(config)# qcn cnpv 2 alternate-priority 1
DXS-3600-32S(config)#
```

**Example** This example shows how to delete the priority 2 from CNPV.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)# no qcn cnpv 2
DXS-3600-32S(config)#
```

---

## 49-5 qcn cnpv (interface)

This command is used to configure the QCN settings in the interface configuration mode.

**qcn cnpv CNPV-PRIORITY-VALUE [admin-defense-mode {disable | interior | interior-ready | edge} | alternate-priority PRIORITY-VALUE | defense-mode-choice {admin | auto | comp}]**

## Parameters

<i>CNPV-PRIORITY-VALUE</i>	Specifies the IEEE 802.1p priority value to be the Congestion Notification Priority Value (CNPV). The valid priority range of CNPV is 0 to 7.
<b>admin-defense-mode</b> { <b>disable</b>   <b>interior</b>   <b>interior-ready</b>   <b>edge</b> }	(Optional) Specifies the CND defense mode for this CNPV on the interface. <b>disable</b> : The congestion notification capability is administratively disabled for this priority. <b>interior</b> : The priority parameter of frames input are not remapped to or from this priority, and the frames are transmitted without CN-TAG ; <b>interior-ready</b> : The priority parameter of frames input are not remapped to or from this priority, and CN-TAGs won't be stripped off when transmitting the frames; <b>edge</b> : The priority parameter of frames input at this priority are remapped to an alternate value, frames at other priorities are not remapped to this priority, and the frames are transmitted without CN-TAG . If not specified, the default defense mode is <b>disable</b>
<b>alternate-priority</b> <i>PRIORITY-VALUE</i>	Specifies a priority value to which this priority value is to be remapped when the receiving frame with a dot1p priority equal to the specified CNPV at Edge port. The valid priority range is 0 to 7. If not specified, the default alternate priority is 0.
<b>defense-mode-choice</b> { <b>admin</b>   <b>auto</b>   <b>comp</b> }	Specifies how the default CND defense mode and alternate priority for this Congestion Notification Priority Value on this interface. <b>admin</b> : The default CND defense mode and alternate priority are specified by administrator. <b>auto</b> : The default CND defense mode and alternate priority are controlled automatically. <b>comp</b> : The default CND defense mode and alternate priority are determined by global setting. If not specified, the default defense mode choice is <b>comp</b> .

## Default

None.

## Command Mode

Interface Configuration Mode.

## Command Default Level

Level: 12.

## Usage Guideline

The command is available for physical port configuration. You need use the **qcn cnpv** command in the global configuration mode to assign the priority value as a CNPV at first. When you issue the command in the interface mode and specify a priority which has not been globally assigned as a CNPV an error message will be prompted. The interface CNPV configuration has higher precedence than global CNPV configuration. That means the modification of the interface CNPV configuration overrides the global CNPV configuration.

If the **qcn cnpv CNPV-PRIORITY-VALUE** command is issued without any optional keywords, all the setting of the specified CNPV for the interface will be retained.

If you want administratively deactivate the CNPV on the specified interface, you need to:

- Use the optional keyword **defense-mode-choice** to set the defense mode choice to admin.
- Use the optional keyword **admin-defense-mode** with the argument **disable**.

The command only takes effect when the QCN is enabled globally.

## Example

This example shows how to administratively assign the defense mode to interior for CNPV 2 at interface *Gi1.1*.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)# interface gigabitEthernet 1/1/1
DXS-3600-32S(config-if)# qcn cnpv 2 defense-mode-choice admin
DXS-3600-32S(config-if)# qcn cnpv 2 admin-defense-mode interior
DXS-3600-32S(config-if)#
```

## 49-6 qcn cp

This command is used to configure the settings of Congestion Point (CP).

```
qcn cp CP-INDEX [set-point QSP-VALUE | weight WEIGHT-VALUE | sample-base SAMPLE-BASE-VALUE | min-header-octets MIN-HEADER-VALUE]
```

### Parameters

<i>CP-INDEX</i>	Specifies the Congestion Point (CP) Index to be configured. The valid range is 1 to 4096.
<b>set-point</b> <i>QSP-VALUE</i>	Specifies the set point (cpQSp) in unit of octets for the queue managed by this Congestion Point (CP). Congestion Notification Messages are transmitted to the sources of frames queued in this CP's queue in order to keep the total number of octets stored in the queue at this set point. The valid set point range is 100 to 4294967295.
<b>weight</b> <i>CPWEIGHT-VALUE</i>	Specifies the weight change in queue length in the calculation of <b>cpFb</b> which is used to determine the value of the Quantized Feedback. The valid weight range is -10 to 10.
<b>sample-base</b> <i>SAMPLEBASE-VALUE</i>	Specifies the minimum number of octets to en-queue in the Congestion Point's queue between transmissions of Congestion Notification Messages. The valid sample base range is 10000 to 4294967295.
<b>min-header-octets</b> <i>MIN-HEADER-VALUE</i>	Specifies the minimum number of octets to be returned in a Congestion Notification Message from the data frame that triggered transmission of the CNM. The valid range is 0 to 64.

### Default

The default set point for the queue is 26000 octets.  
The default feedback weight is 2 to the power of 1.  
The default sample base is 15000 octets.  
The default minimum header size is 0.

### Command Mode

Interface Configuration Mode.

### Command Default Level

Level: 12.

**Usage Guideline**

The command is available for physical port configuration. The Congestion Point (CP) Index is decided by IEEE 802.1p priority remapping procedure. Each priority transforms to the traffic class after priority remapping. The transformed traffic class is the Congestion Point (CP) Index. This means that multiple priority values could be mapped to the same traffic class and uses the same Congestion Point (CP) to detect traffic congestion. The CP index is obtained by priority remapping procedure, it might cause some CP index is never used. If the user configures the unused CP, a warning message will be prompted.

You can use this command to configure set point (**cpQSp**) and weight (**cpW**) which play roles in the calculation of the **cpFb** which is used to determine the value of the Quantized Feedback. The Quantized Feedback (6-bit) is a field of a Congestion Notification Message and indicates the degree of congestion. In other words, **cpFb** has two terms.

- The first term is the difference between the current and the desired queue lengths.
- The second is a weight factor **cpW** times the difference between the current and the previous queue lengths (**cpQDelta**).

A multiple of the first derivative of the queue size is subtracted from the current non-optimality of the queue, so that if the queue length is moving toward the set point **cpQSp**, **cpFb** will be closer to 0 than if the queue length is moving away from **cpQSp**.

Use the command to configure the Congestion Point (CP) settings in interface configuration mode. The command only takes effect when the QCN is enabled globally.

**Example**

This example shows how to configure the Congestion Point for interface *Gi1.1*.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)# interface Gi1.1
DXS-3600-32S(config-if)# qcn cp 1 set-point 30000
DXS-3600-32S(config-if)# qcn cp 1 weight 1
DXS-3600-32S(config-if)# qcn cp 1 sample-base 160000
DXS-3600-32S(config-if)# qcn cp 1 min-header-octets 10
DXS-3600-32S(config-if)#
```

**49-7 show qcn cnpv**

This command is used to display the QCN CNPV settings and status.

```
show qcn cnpv [status]
```

**Parameters**

<b>status</b>	(Optional) Specifies to display the total discarded frames, auto alternate priority and error portlist for the CNPV.
---------------	--

**Default**

None.

**Command Mode**

EXEC Mode.

**Command Default Level**

Level: 3.

**Usage Guideline**

Use this command to display the configured QCN CNPV configuration. Use this command with the **status** keyword to display the total discarded frames, auto alternate priority and error portlist.

**Example**

This example shows how to display the QCN CNPV settings.

```
DXS-3600-32S#show qcn cnpv

Dot1p      Defense      Admin Defense  Alternate CP
Priority Mode Choice Mode          Priority  Creation
-----
      1      admin      interior      0      enable
      2      auto      interior-ready 0      disable

DXS-3600-32S#
```

**Example**

This example shows how to display the total discarded frames, auto alternate priority and error portlist for all CNPVs.

```
DXS-3600-32S#show qcn cnpv status
QCN Status           : Enabled
QCN Discarded Frames : 1234
CNM Transmit Priority : 1
CNPV: 1
-----
Auto Alternate Priority : 0
Errored Portlist      : ---

CNPV: 2
-----
Auto Alternate Priority : 0
Errored Portlist      : ---
!---Output Truncated.

DXS-3600-32S#
```

**49-8 show qcn cnpv interface**

This command is used to display the QCN configuration and status for each Congestion Notification Priority Value (CNPV).

```
show qcn cnpv PRIORIT-VALUE [, | -] interface [INTERFACE-ID [, | -]] [simple]
```

**Parameters**

<i>PRIORIT-VALUE</i> [,   -]	Specifies the priority value to display in the configuration and status. The valid priority value range is 0 to 7. You can specify multiple priority values, which are separated by “,” or “-”.
<i>INTERFACE-ID</i> [,   -]	(Optional) Specifies the interface to display QCN CNPV information. Valid interfaces are physical interfaces. You can specify multiple interfaces, which are separated by “,” or “-”. Otherwise, display the CNPV configuration and status for all physical interfaces.
<b>simple</b>	(Optional) Specifies to only display the CND defense mode which would operate for the CNPV as determined by the LLDP Congestion Notification TLV.

**Default**

None.

**Command Mode**

EXEC Mode.

**Command Default Level**

Level: 3.

**Usage Guideline**

Use this command to display the QCN per priority or interface configuration and the status. Use this command with the **simple** option to display the CND defense mode controlled by the LLDP Congestion Notification TLV.

**Example**

This example shows how to display the QCN configuration on all interfaces for CNPV 1.

```
DXS-3600-32S#show qcn cnpv 1 interface
```

```
CNPV : 1
Intf.   Defense   Admin   Auto   Alt. Defense Mode  Alt. Pri.
Id      Mode Choice Defense Mode  Defense Mode  Pri. (Active)      (Active)
-----
TGi 1/0/1  Comp      Disabled Interior      0 Interior          0
TGi 1/0/2  Comp      Disabled Interior      0 Interior          0
TGi 1/0/3  Comp      Disabled Interior      0 Interior          0
TGi 1/0/4  Comp      Disabled Interior      0 Interior          0
TGi 1/0/5  Comp      Disabled Interior      0 Interior          0
TGi 1/0/6  Comp      Disabled Interior      0 Interior          0
!--- Output truncated.
```

**Example**

This example shows how to display the QCN configuration for CNPV 1 on interface, Gi1.1.

```
DXS-3600-32S#show qcn cnpv 1 interface tenGigabitEthernet 1/0/1
```

```
CNPV           : 1
Interface Id    : TGi 1/0/1
Defense Mode Choice : Comp
Admin Defense Mode : Disabled
Auto Defense Mode : Interior
Alternate Priority : 0
Defense Mode (Active) : Interior
Alternate Priority (Active) : 0
Corresponding CP Queue ID : 0
```

```
DXS-3600-32S#
```

**Display Parameters****Description****Corresponding CP-Index**

Display the status for the CP.  
**CP-Index (status)**: indicate the corresponding CP index and the status.

**Auto Defense Mode**

----: indicates the Auto Defense Mode is not meaningful information because the defense mode of the interface is controlled by the network administrator.

**Example**

This example shows how to display the CND defense mode controlled by the LLDP Congestion Notification TLV for all interfaces and CNPV 0 -7.

```
DXS-3600-32S#show qcn cnpv 0 interface simple
```

```
Codes: N/A: Not Applied, I - Interior, IR - Interior Ready, E - Edge
```

```
Interface  CNPV 0 CNPV 1 CNPV 2 CNPV 3 CNPV 4 CNPV 5 CNPV 6 CNPV 7
-----
TGi 1/0/1  I      I      I      I      I      I      I      I
TGi 1/0/2  I      I      I      I      I      I      I      I
!--- Output truncated.
```

**49-9 show qcn cp**

This command is used to display the information for the CP.

```
show qcn cp [counters] {all | interface INTERFACE-ID [, | -] [quene CP-INDEX [, | -]}
```

**Parameters**

<b>counters</b>	(Optional) Specifies to only display CP counters.
-----------------	---

---

<b>all</b>	Specifies to display CP information for all interfaces.
<b>interface</b> <i>INTERFACE-ID</i> [,   -]	Specifies the interface to show QCN CP information. Valid interfaces are physical interfaces. You can specify multiple interfaces, which are separated by “,” or “-“. No space before and after the comma or hyphen.
<b>queue</b> <i>CP-INDEX</i> [,   -]	(Optional) Specifies the Congestion Point (CP) index to be displayed. The valid Congestion Point index range is 1 to <i>MAX_CP_INDEX</i> . You can specify multiple CPs, which are separated by “,” or “-“. No space before and after the comma or hyphen. When the argument of <b>cp-index</b> is not selected, all CPs on the specified interfaces will be displayed.

---

<b>Default</b>	None.
<b>Command Mode</b>	EXEC Mode.
<b>Command Default Level</b>	Level: 3.
<b>Usage Guideline</b>	Use this command to display the CP information for the specified interface(s). When the command <b>show qcn cp</b> is issued with the optional keyword <b>counters</b> , only the active CPs will be showed.

**Example** This example shows how to display CP information for the interface *Gi1.1* with the CP index 1.

```
DXS-3600-32S#show qcn cp interface tenGigabitEthernet 1/0/1 queue 0
```

```
Interface Id      : TGi 1/0/1
CP Index         : 1
Status           : Inactive
CP Priority       : -
CP Identifier     : 0036003201000140
MAC Address      : 00-36-00-32-01-00
Queue Set Point  : 26000
Feedback Weight  : 2
Minimum Sample-Base : 15000
Minimum Header-Octets : 0
```

```
DXS-3600-32S#
```

**Example** This example shows how to display CP information for the interface *Gi1.1* with the CP index 1.

```
DXS-3600-32S#show qcn cp counters interface tenGigabitEthernet 1/0/1 queue 0
```

```
Int.      CP  CP
Id        Idx Pri Discarded Frames   Transmitted Frames   Transmitted CNMs
-----
TGi 1/0/1  1  N/A N/A                N/A                  N/A
```

```
DXS-3600-32S#
```

## 49-10 show qcn cpid

This command is used to display the relationship between the CP identifier, interface, and CP index.

```
show qcn cpid CP-IDENTIFIER
```

### Parameters

---

<i>CP-IDENTIFIER</i>	Specifies 16 hexadecimal digits for the Congestion Point Identifier (CPID) to get the corresponding interface ID and CP index.
----------------------	--

---

<b>Default</b>	None.
----------------	-------

**Command Mode** EXEC Mode.

**Command Default Level** Level: 3.

**Usage Guideline** Use this command to display the corresponding interface ID and CP index for the specified CP Identifier.

**Example** This example shows how to display the interface ID and CP index for CP Identifier, 0011223344550101.

```
DXS-3600-32S#show qcn cpid 9094e408dc000140
```

```
CP-Identifier           : 9094e408dc000140
QCN Component Id       : 1
Interface Index        : TGi 1/0/1
CP-Index               : 1
```

```
DXS-3600-32S#
```



# RADIUS Commands

## 50-1 radius-server host

This command is used to specify a RADIUS security server host. The no form of this command without parameter is used to delete the RADIUS server host. The no form of this command with the parameters is used to restore the specified parameter to default value.

```
radius-server host ip-address [auth-port port-number] [acct-port port-number] [retransmit retries] [timeout seconds] [key text-string]
no radius-server host ip-address [auth-port | acct-port | retransmit | timeout | key]
```

### Parameters

<i>ip-address</i>	Specifies the IP address of the RADIUS security server host.
<b>auth-port</b>	Specifies the UDP port used for RADIUS authentication. If not specified, the port number defaults to 1812.
<i>port-number</i>	Specifies the number of the UDP port used for RADIUS authentication. The range is 1 to 65535.
<b>acct-port</b>	Specifies the UDP port used for RADIUS accounting. If not specified, the port number defaults to 1813.
<i>port-number</i>	Specifies the number of the UDP port used for RADIUS accounting. The range is 1 to 65535.
<b>key</b>	Specifies the shared password for the network access server (device) to communicate with the RADIUS security server.
<i>text-string</i>	Specifies the text of the shared password. The maximum length of the key is 32.
<b>retransmit</b>	Specifies the number of packet retransmissions before the device considers that the RADIUS security server does not respond.
<i>retries</i>	Specifies the number of retransmissions in the range 1 to 100.
<b>timeout</b>	Specifies to set the time for the device to wait for a response from the security server after retransmitting the RADIUS packet.
<b>seconds</b>	Specifies the timeout in the range 1 to 1000 seconds.

<b>Default</b>	No RADIUS host is specified.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	In order to implement the AAA security service using RADIUS, you must define a RADIUS security server. You can define one or more RADIUS security servers using the <b>radius-server</b> command.

**Example** This example shows how to define a RADIUS security server host.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#radius-server host 192.168.12.1
DXS-3600-32S(config)#
```

## 50-2 radius-server key

This command is used to define a shared password for the network access server (device) to communicate with the RADIUS security server. The no form of this command is used to remove the shared password.

```
radius-server key text-string
no radius-server key
```

**Parameters**


---

<i>text-string</i>	Specifies the text of the shared password. The maximum length of the key is 32.
--------------------	---

---

**Default** No shared password is specified.

**Command Mode** Global Configuration Mode.

**Command Default Level** Level: 15

**Usage Guideline** A shared password is the basis for communications between the device and the RADIUS security server. In order to allow the device to communicate with the RADIUS security server, you must define the same shared password on the device and the RADIUS security server.

**Example** This example shows how to define the shared password aaa for the RADIUS security server.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#radius-server key aaa
DXS-3600-32S(config)#
```

**50-3 radius-server retransmit**

This command is used to configure the number of packet retransmissions before the device considers that the RADIUS security server does not respond. The no form of this command is used to restore it to the default setting.

**radius-server retransmit** *retries*  
**no radius-server retransmit**

**Parameters**


---

<i>retries</i>	Specifies the number of retransmissions in the range 1 to100.
----------------	---

---

**Default** The default number of retransmissions is 3.

**Command Mode** Global Configuration Mode.

**Command Default Level** Level: 15

**Usage Guideline** AAA uses the next method to authenticate users only when the current security server for authentication does not respond. When the device retransmits the RADIUS packet for the specified times and the interval between every two retries is timeout, the device considers that the security sever does not respond.

**Example** This example shows how to set the number of retransmissions to 4.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#radius-server retransmit 4
DXS-3600-32S(config)#
```

**50-4 radius-server timeout**

This command is used to set the time for the device to wait for a response from the security server after retransmitting the RADIUS packet. The no format of this command is used to restore it to the default setting.

**radius-server timeout** *seconds*  
**no radius-server timeout**

**Parameters**


---

<i>seconds</i>	Specifies the timeout value in the range of 1 to 1000 seconds.
----------------	--

---

**Default** 5 seconds.

**Command Mode** Global Configuration Mode.

**Command Default Level** Level: 15

**Usage Guideline** Use this command to change the timeout of packet retransmission.

**Example** This example shows how to set the timeout to 10 seconds.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#radius-server timeout 10
DXS-3600-32S(config)#
```

---

**50-5 show radius statistics**

This command is used to display the RADIUS statistics for accounting and authentication packets.

**show radius statistics**

**Parameters** None.

**Default** None.

**Command Mode** Privileged EXEC Mode.

**Command Default Level** Level: 15

**Usage Guideline** Use this command to show all RADIUS statistics.

**Example** This example shows the output for the **show radius statistics** command.

```
DXS-3600-32S#show radius statistics

RADIUS Server: 192.168.12.1: Auth-Port 1812, Acct-Port 1813
Auth.      Acct.
Round Trip Time: 0      0
Access Requests: 0      NA
Access Accepts: 0      NA
Access Rejects: 0      NA
Access Challenges: 0      NA
Acct Request: NA      0
Acct Response: NA      0
Retransmissions: 0      0
Malformed Responses: 0      0
Bad Authenticators: 0      0
Pending Requests: 0      0
Timeouts: 0      0
Unknown Types: 0      0
Packets Dropped: 0      0

DXS-3600-32S#
```

Display Parameters	Description
<b>Auth.</b>	Statistics for authentication packets.
<b>Acct.</b>	Statistics for accounting packets.
<b>Round Trip Time</b>	The time interval (in hundredths of a second) between the most recent Response and the Request that matched it from this RADIUS server.
<b>Access Requests</b>	The number of RADIUS Access-Request packets sent to this server. This does not include retransmissions.

---

Display Parameters	Description
<b>Access Accepts</b>	The number of RADIUS Access-Accept packets (valid or invalid) received from this server.
<b>Access Rejects</b>	The number of RADIUS Access-Reject packets (valid or invalid) received from this server.
<b>Access Challenges</b>	The number of RADIUS Access-Challenge packets (valid or invalid) received from this server.
<b>Acct Request</b>	The number of RADIUS Accounting-Request packets sent. This does not include retransmissions.
<b>Acct Response Retransmissions</b>	The number of RADIUS packets received on the accounting port from this server. Retransmissions include retries where the Identifier and Acct-Delay have been updated, as well as those in which they remain the same.
<b>Malformed Responses</b>	The number of malformed RADIUS Response packets received from this server. Malformed packets include packets with an invalid length. Bad authenticators or Signature attributes or unknown types are not included as malformed responses.
<b>Bad Authenticators</b>	The number of RADIUS Response packets containing invalid authenticators or Signature attributes received from this server.
<b>Pending Requests</b>	The number of RADIUS Request packets destined for this server that have not yet timed out or received a response. This variable is incremented when an Request is sent and decremented due to receipt of an Response, a timeout or retransmission.
<b>Timeouts</b>	The number of timeouts to this server. After a timeout the client may retry to the same server, send to a different server, or give up. A retry to the same server is counted as a retransmit as well as a timeout. A send to a different server is counted as a Request as well as a timeout.
<b>Unknown Types</b>	The number of RADIUS packets of unknown type which were received from this server.
<b>Packets Dropped</b>	The number of RADIUS packets of which were received from this server and dropped for some other reason.

## 50-6 show radius-server configuration

This command is used to display the RADIUS authentication & accounting server configuration.

### show radius-server configuration

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	Use this command to show all RADIUS authentication & accounting server hosts.

**Example**

This example shows the output for the show RADIUS authentication & accounting server hosts command.

```
DXS-3600-32S#show radius-server configuration
```

```

IP-Address      Auth-Port  Acct-Port  Key                               Retransmit  Timeout
-----
192.168.12.1    1812      1813
Default Key:aaa
Default Retransmit:4
Default Timeout:10

1 RADIUS server(s) in total
DXS-3600-32S#
```

Display Parameters	Description
<b>IP-Address</b>	IP address of the RADIUS security server host.
<b>Auth-Port</b>	UDP port used for RADIUS authentication.
<b>Acct-Port</b>	UDP port used for RADIUS accounting.
<b>Key</b>	A shared password for the network access server (device) to communicate with the RADIUS security server.
<b>Retransmit</b>	The number of packet retransmissions before the device considers that the RADIUS security server does not respond.
<b>Timeout</b>	Set the time for the device to wait for a response from the security server after retransmitting the RADIUS packet. The unit is seconds.
<b>Default Key</b>	A default shared password for the network access server (device) to communicate with the RADIUS security server
<b>Default Retransmit</b>	The default number of packet retransmissions before the device considers that the RADIUS security server does not respond.
<b>Default Timeout</b>	The default time for the device to wait for a response from the security server after retransmitting the RADIUS packet.

# Remote Network MONitoring (RMON) Commands

## 51-1 rmon collection stats

This command is used to add a statistic entry. Use the no form of this command to remove a statistic entry.

```
rmon collection stats index [owner ownername]
no rmon collection stats index
```

### Parameters

<i>index</i>	Specifies the statistic index in the range of 1 to 65535.
<b>owner</b> <i>ownername</i>	Specifies the string that describes the owner name information. The maximum length is 127 characters (please refer to the RFC1213 for more information about the <b>maximum length</b> parameter).

<b>Default</b>	None.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	At the present, this switch supports only the statistics of the Ethernet interface. Add an RMON collection statistic for the specified interface on the switch.

**Example** This example shows how to add a statistic entry.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#rmon collection stats 100
DXS-3600-32S(config-if)#
```

**Example** This example shows how to remove a statistic entry.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#no rmon collection stats 100
DXS-3600-32S(config-if)#
```

## 51-2 rmon collection history

This command is used to add a history entry. Use the no form of this command to remove a history entry.

```
rmon collection history index [owner ownername] [buckets bucket-number] [interval seconds]
no rmon collection history index
```

### Parameters

<i>index</i>	Specifies the history index in the range of 1 to 65535.
<b>owner</b> <i>ownername</i>	Specifies the string that describes the owner name information. The maximum length is 127 characters (please refer to RFC1213 for the maximum length in detail).
<b>buckets</b> <i>bucket-number</i>	Specifies the used data source and time interval. Each sampling interval should be sampled once. The sampling results are saved. The <i>bucket-number</i> specifies the maximum number of sampling. When the maximum is reached for the sampling records, the new one will overwrite the earliest one. The value range of Bucket-number is 1 to 65535. Its default value is 50.
<b>interval</b> <i>seconds</i>	Specifies the sampling interval in the range of 1 to 3600 seconds, 1800 seconds by default.

<b>Default</b>	None.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	At the present, this switch supports only the records of Ethernet. Add an RMON history statistic for the specified interface on the switch.

**Example** This example shows how to add a history entry.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#rmon collection history 100
DXS-3600-32S(config-if)#
```

**Example** This example shows how to remove a history entry.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#no rmon collection history 100
DXS-3600-32S(config-if)#
```

### 51-3 rmon alarm

This command is used to add an alarm entry. Use the no form of this command to remove an alarm entry.

```
rmon alarm number variable interval {absolute | delta} rising-threshold value [event-number] falling-threshold value [event-number] [owner ownername]
no rmon alarm number
```

#### Parameters

<i>number</i>	Specifies the alarm index in the range of 1 to 65535.
<i>variable</i>	Specifies the variable to be monitored by the alarm (in integer).
<i>interval</i>	Specifies the sampling interval in the range of 1 to 2147483647.
<b>absolute</b>	Specifies each sampling value compared with the upper and lower limits.
<b>delta</b>	Specifies the difference with previous sampling value compared with the upper and lower limits.
<i>value</i>	Specifies the upper and lower limits.
<i>event-number</i>	Specifies that when the value exceeds the upper or lower limit, the event with the index of Event-number will be triggered.
<b>owner</b> <i>ownername</i>	Specifies the string that describes the owner name information. The maximum length is 127 characters (please refer to RFC1213 for the maximum length in detail).

<b>Default</b>	None.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	Add the RMON alarm information on the switch.

**Example** This example shows how to add an alarm entry.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#rmon alarm 100 1.3.6.1.2.1.16.1.1.1.14.1 30 delta rising-threshold 10000
100 falling-threshold 1000 200 owner test
DXS-3600-32S(config)#
```

**Example** This example shows how to remove an alarm entry.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#no rmon alarm 100
DXS-3600-32S(config)#
```

## 51-4 rmon event

This command is used to add an event entry. Use the no form of this command to remove an event entry.

```
rmon event number [log] [trap community] [description description-string]
no rmon event number
```

### Parameters

<i>number</i>	Specifies the event index in the range of 1 to 65535.
<b>log</b>	Specifies to record the event.
<b>trap</b>	Specifies to send the trap message to the NMS when the event is triggered.
<i>community</i>	Specifies the community string used for sending the SNMP trap message.
<b>description</b> <i>description-string</i>	Specifies the description of the event.

**Default** None.

**Command Mode** Global Configuration Mode.

**Command Default Level** Level: 12

**Usage Guideline** Add the RMON event information on the switch.

**Example** This example shows how to add an event entry.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#rmon event 100 log trap public description test
DXS-3600-32S(config)#
```

**Example** This example shows how to remove an event entry.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#no rmon event 100
DXS-3600-32S(config)#
```

## 51-5 show rmon statistics

This command is used to monitor basic statistics information.

```
show rmon statistics
```

**Parameters** None.

**Default** None.

**Command Mode** Privileged EXEC Mode.

**Command Default Level** Level: 3



**Usage Guideline**

Statistics is the first group in RMON. It measures the basic statistics information of each monitored subnet. At present, only the Ethernet interfaces of network devices can be monitored and measured. This group contains a statistics of Ethernet, including the discarded packets, broadcast packets, CRC errors, size block, conflicts, etc.

**Example**

This example shows how to display the RMON statistics information.

```
DXS-3600-32S#show rmon statistics
Statistics : 1
Data Source : 1.3.6.1.2.1.2.2.1.1.1
DropEvents : 0
Octets : 0
Pkts : 0
BroadcastPkts : 0
MulticastPkts : 0
CRCAlignErrors : 0
UndersizePkts : 0
OversizePkts : 0
Fragments : 0
Jabbers : 0
Collisions : 0
Pkts64Octets : 0
Pkts65to127Octets : 0
Pkts128to255Octets : 0
Pkts256to511Octets : 0
Pkts512to1023Octets : 0
Pkts1024to1518Octets : 0
Owner : monitor
Statistics : 2
Data Source : 1.3.6.1.2.1.2.2.1.1.2
DropEvents : 0
Octets : 0
CTRL+C ESC q Quit SPACE n Next Page ENTER Next Entry a All
```

**51-6 show rmon history**

This command is used to display history control and history data information.

**show rmon history**

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 3
<b>Usage Guideline</b>	History is the second group in RMON. It collects the network statistics information regularly and keeps them for processing later.

This group contains two subgroups:

1. The subgroup **History Control** is used to set such control information as sampling interval and sampling data source.
2. The subgroup **Ethernet History** provides history data about the network section traffic, error messages, broadcast packets, utilization, number of collision and other statistics for the administrator.

**Example**

This example shows how to display the RMON history entry.

```
DXS-3600-32S#show rmon history
Entry : 1
Data Source : 1.3.6.1.2.1.2.2.1.1.1
Buckets Requested : 50
Buckets Granted : 50
Interval : 30
Owner : monitor
Sample : 15
Interval Start : 45103
DropEvents : 0
Octets : 0
Pkts : 0
BroadcastPkts : 0
MulticastPkts : 0
CRCAlignErrors : 0
UndersizePkts : 0
OversizePkts : 0
Fragments : 0
Jabbers : 0
Collisions : 0
Utilization : 0
Sample : 16
Interval Start : 48103
DropEvents : 0
Octets : 0
CTRL+C ESC q Quit SPACE n Next Page ENTER Next Entry a All
```

**51-7 show rmon alarm**

This command is used to display alarm information.

**show rmon alarm**

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 3
<b>Usage Guideline</b>	Alarm is the third group in RMON. It monitors a specific management information base (MIB) object at the specified interval. When the value of this MIB object is higher than the predefined upper limit or lower than the predefined lower limit, an alarm will be triggered. The alarm is handled as an event by means of recording the log or sending the SNMP Trap message.

**Example**

This example shows how to display the RMON alarm information.

```
DXS-3600-32S#show rmon alarm

Alarm : 1
Interval : 100
Variable : 1.3.6.1.2.1.16.1.1.1.14.1
Sample Type : delta
Last Value : 0
Startup Alarm : 3
Rising Threshold : 10000
Falling Threshold : 1000
Rising event : 1
Falling event : 1
Owner : test

DXS-3600-32S#
```

## 51-8 show rmon event

This command is used to display event information.

### show rmon event

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 3
<b>Usage Guideline</b>	Event is the ninth group in RMON. It determines to generate a log entry or a SNMP Trap message when an event is generated due to alarms.

**Example** This example shows how to display the RMON event information.

```
DXS-3600-32S#show rmon event
```

```
Entry : 1  
Description : des  
Event Type : log-and-trap  
Community : public  
Last Time Sent : 0d:4h:46m:3s  
Owner : test  
Log : 1  
Log Time : 0d:4h:46m:3s  
Log Description : des
```

```
DXS-3600-32S#
```

---

# Routing Information Protocol (RIP) Commands

## 52-1 route-preference

This command is used to configure the route preference for the Routing Information Protocol (RIP) routes. Use the no form of this command to restore to the default value.

**route-preference** *value*  
**no route-preference**

### Parameters

<i>value</i>	Specifies the route preference of the RIP route. The value range is 1-999.
--------------	--

<b>Default</b>	The default value of route preference of RIP route is 100.
<b>Command Mode</b>	Router Configuration Mode. Router Address Family Configuration Mode.
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	This command sets the route preference of the RIP routes. A route preference is a rating of the trustworthiness of a routing information source, such as an individual router or a group of routers. In general, the higher the value, the lower the trust rating is.  You can verify your settings by entering the <b>show ip route-preference</b> command.

**Example** This example shows how to set the route preference of RIP routes to 120.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router rip
DXS-3600-32S(config-router)#route-preference 120
DXS-3600-32S(config-router)#
```

**Example** This example shows how to restore the route preference of RIP route to default value.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router rip
DXS-3600-32S(config-router)#no route-preference
DXS-3600-32S(config-router)#
```

**Example** This example shows how to set the route preference of RIP routes to 120 of RIP VRF VPN-A instance.

```
DXS-3600-32S# configure terminal
DXS-3600-32S(config)# router rip
DXS-3600-32S(config)# address-family ipv4 vrf VPN-A
DXS-3600-32S(config-router-af)# route-preference 120
```

## 52-2 distribute-list in (RIP)

This command is used to filter RIP routes inserted into routing table. Use the no form of this command to remove the setting.

**distribute-list** *list\_name* in *ipif\_name*  
**no distribute-list** *list\_name* in *ipif\_name*

### Parameters

<i>list_name</i>	Specifies the name of the standard IP access list.
------------------	--

---

<i>ipif_name</i>	Specifies the interface name on which the access list should be applied to incoming updates.
------------------	--

---

<b>Default</b>	By default, no distribute-list in is configured.
<b>Command Mode</b>	Router Configuration Mode. Router Address Family Configuration Mode.
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	This command must specify an access list name. According to access list rule, one route is determined to be or not to be inserted into routing table. It is independent to specify access list rule on each interface. The special access list will not affect the route to be inserted into routing table before it is created.

You can verify your settings by entering the **show ip rip interface** command.

<b>Example</b>	This example shows how to configure the interface 'vlan1' to use access list list1 to filter RIP route.
----------------	---

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip standard access-list list1
DXS-3600-32S(config-ip-acl)#permit 172.18.0.0/16
DXS-3600-32S(config-ip-acl)#exit
DXS-3600-32S(config)#router rip
DXS-3600-32S(config-router)#distribute-list list1 in vlan1
DXS-3600-32S(config-router)#
```

### 52-3 ip rip authentication mode

This command is used to configure the simple password authentication type used by RIP interface. Use the no form of this command to restore to the default value.

```
ip rip authentication mode text
no ip rip authentication mode
```

<b>Parameters</b>	None.
<b>Default</b>	By default, no-authentication is used by RIP interface.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	RIP Version 1 does not support authentication. To exchange RIP routing information directly, all devices must have the same IP authentication mode; otherwise, the RIP packets exchange will fail.

The configuration of authentication mode should be cleared, if the interface receive or send state is set as disable or receive or send version is set as Version 1, this because authentication just exist when the interface send or receive version is Version 2, otherwise the configuration of authentication mode should be cleared.

You can verify your settings by entering the **show ip rip interface** command.

<b>Example</b>	This example shows how to set the interface 'vlan1' to use simple password authentication.
----------------	--

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface vlan 1
DXS-3600-32S(config-if)#ip rip authentication mode text
DXS-3600-32S(config-if)#
```

## 52-4 ip rip authentication text-password

This command is used to configure the plaintext password for RIP simple password authentication. Use the no form of this command to remove the plaintext password.

```
ip rip authentication text-password password-string
no ip rip authentication text-password
```

### Parameters

<i>password-string</i>	Specifies the plaintext password that must be sent and received in the RIP packets on the RIP interface using simple password authentication. The string can contain from 1 to 16 uppercase and lowercase alphanumeric characters.
------------------------	--

<b>Default</b>	By default, no plaintext password is configured.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 8. (EI Mode Only Command)
<b>Usage Guideline</b>	<p>The RIP Version 1 does not support RIP authentication. To exchange RIP information directly, the password must be identify.</p> <p>You can configure the <b>authentication text-password</b> and <b>authentication mode</b> individually. When enable the simple password authentication, the plaintext password should be used. If the plaintext password is not configured, the update packets should be sent and received without password.</p> <p>The configuration of authentication text-password should be cleared, if the interface receive and send state is set as disable or receive and send version is set as Version 1, because authentication just exist when the interface send and receive version is Version 2.</p> <p>You can verify your settings by entering the <b>show ip rip interface</b> command.</p>

**Example** This example shows how to configure the interface 'vlan1' to use simple password authentication and set the plaintext password to 1234.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface vlan 1
DXS-3600-32S(config-if)#ip rip authentication mode text
DXS-3600-32S(config-if)#ip rip authentication text-password 1234
DXS-3600-32S(config-if)#
```

## 52-5 ip rip receive enable

This command is used to receive RIP packets on an RIP interface. Use the no form of this command to prohibit receiving RIP packets on the interface.

```
ip rip receive enable
no ip rip receive enable
```

<b>Parameters</b>	None.
<b>Default</b>	By default, receiving RIP packets is enabled on each RIP interface.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 8. (EI Mode Only Command)

**Usage Guideline**

Use the no form of this command to prevent from receiving RIP packets on the interface, the RIP protocol should not receive the packets coming from the interface.

On one interface whose sending packets is disabled or Version 1, disabling receiving packets will cause the configuration of authentication on this interface to be cleared and can't be restored when enable interface receiving packets again. The authentication needs to be reconfigured.

With the no form of this command, the configuration set by **ip rip receive version** command will be cleared. After enable interface receiving packets again, the receive version of the interface depends on global version setting with the **version** command.

You can verify your settings by entering the **show ip rip interface** command.

**Example**

This example shows how to configure the interface 'vlan1' to not receive RIP packets.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface vlan 1
DXS-3600-32S(config-if)#no ip rip receive enable

The configuration of authentication is cleared because only Version 2 supports authentication.

DXS-3600-32S(config-if)#
```

**52-6 ip rip receive version**

This command is used to specify the version of RIP packet received on an RIP interface. Use the no form of this command to restore to the default value.

```
ip rip receive version [1 | 2]
no ip rip receive version
```

**Parameters**

1	(Optional) Specifies to accept RIP Version 1 packets on the interface.
2	(Optional) Specifies to accept RIP Version 2 packets on the interface.

**Default**

None.

**Command Mode**

Interface Configuration Mode.

**Command Default Level**

Level: 8. (**EI Mode Only Command**)

**Usage Guideline**

Use this command to override the default behavior of RIP as specified by the version command. If the interface receive version isn't specified, it should depend on the global version setting. This command applies only to the interface being configured. You can configure the interface to accept both RIP Version 1 and Version 2.

When the send state is disable or send version is Version 1, Configure the receive version to Version 1 should cause the configuration of authentication cleared, because authentication just exist when the interface send and receive version is Version 2.

You can verify your settings by entering the **show ip rip interface** command.

**Example** This example shows how to configure the interface 'vlan1' to receive both RIP version 1 and version 2 packets.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface vlan 1
DXS-3600-32S(config-if)#ip rip receive version 1 2
DXS-3600-32S(config-if)#
```

## 52-7 ip rip send enable

This command is used to send RIP packets on a RIP interface. Use the no form of this command to prohibit sending RIP packets on the interface.

**ip rip send enable**  
**no ip rip send enable**

**Parameters** None.

**Default** By default, the sending of RIP packets is enabled on the RIP interface.

**Command Mode** Interface Configuration Mode.

**Command Default Level** Level: 8. (**EI Mode Only Command**)

**Usage Guideline** Use the no form of this command to prevent from sending RIP packets on the interface, the RIP protocol should not send out RIP packets.

On one interface whose receiving packets is disabled or Version 1, disabling sending packets will cause the configuration of authentication on this interface to be cleared and can't be restored when enable interface sending packets again. The authentication needs to be reconfigured.

With the no form of this command, the configuration set by **ip rip send version** command will be cleared. After enable interface sending packets again, the send version of the interface depends on global version setting with the **version** command.

**Example** This example shows how to configure the interface 'vlan1' to not send out RIP packets.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface vlan 1
DXS-3600-32S(config-if)#no ip rip send enable
DXS-3600-32S(config-if)#
```

## 52-8 ip rip send version

This command is used to specify the version of RIP packets sent on a RIP interface. Use the no form of this command to restore to the default value.

**ip rip send version {1 | 2}**  
**no ip rip send version**

### Parameters

<b>1</b>	(Optional) Specifies to send only RIP Version 1 packets out the interface.
<b>2</b>	(Optional) Specifies to send only RIP Version 2 packets out the interface.

**Default** None.



<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	<p>Use this command to override the default behavior of RIP as specified by the version command. If the interface send version isn't specified, it should depend on the global version setting. This command applies only to the interface being configured.</p> <p>When the receive state is disable or receive version is Version 1, configure the send version to Version 1 should cause the configuration of authentication cleared, because authentication just exist when the interface send and receive version is Version 2.</p> <p>You can verify your settings by entering the <b>show ip rip</b> command.</p>

**Example** This example shows how to configure the interface 'vlan1' to only send RIP version 2 packets.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface vlan 1
DXS-3600-32S(config-if)#ip rip send version 2
DXS-3600-32S(config-if)#
```

## 52-9 ip rip v2-broadcast

This command is used to send RIP version 2 update packets as a broadcast instead of multicast. Use the no form of this command to restore to the default value.

```
ip rip v2-broadcast
no ip rip v2-broadcast
```

<b>Parameters</b>	None.
<b>Default</b>	By default, this function is disabled.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	<p>Use this command to broadcast RIP version 2 updates to hosts that do not listen to multicast broadcast. Version 2 updates (requests and responses) will be sent to the IP broadcast address instead of the IP multicast address 224.0.0.9.</p> <p>In order to reduce unnecessary load on those hosts that are not listening to RIP Version 2 broadcast, the system uses an IP multicast address for periodic broadcasts. The IP multicast address is 224.0.0.9.</p> <p>When the interface send version is 2, use this command to enable v2-broadcast. If the send version is version 1, the command should not be effective. If restore the interface version to 2, the v2-broadcast setting should be cleared.</p> <p>You can verify your settings by entering the <b>show ip rip interface</b> command.</p>

**Example** This example shows how to configure the interface 'vlan1' to send RIP version 2 packets with broadcast.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface vlan 1
DXS-3600-32S(config-if)#ip rip send version 2
DXS-3600-32S(config-if)#ip rip v2-broadcast
DXS-3600-32S(config-if)#
```

## 52-10 network

This command is used to enable RIP on one interface. Use the no form of this command to restore to the default setting.

```
network network-number
no network
```

### Parameters

<i>network-number</i>	Specifies the IP address of the network of directly connected networks. The interface whose IP address belongs to the network can transmit and receive the RIP packets.
-----------------------	---

**Default** By default, RIP is disabled on all interfaces.

**Command Mode** Router Configuration Mode.  
Router Address Family Configuration Mode.

**Command Default Level** Level: 8. (EI Mode Only Command)

**Usage Guideline** You can verify your settings by entering the **show ip rip** command.

**Example** This example shows how to enable RIP on the interface 'vlan1' (10.0.0.0/8).

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router rip
DXS-3600-32S(config-router)#network 10.0.0.0
DXS-3600-32S(config-router)#
```

**Example** This example shows how to enable RIP on interface *ip100* associated to VRF VPN-A (100.1.1.1/24).

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)# router rip
DXS-3600-32S(config)# address-faimly ipv4 vrf VPN-A
DXS-3600-32S(config-router-af)# network 100.1.1.0
```

## 52-11 redistribute (RIP)

This command is used to redistribute routes from another routing domain into the RIP domain. Use no form of the command to remove route redistribution settings to RIP.

```
redistribute {connected | static | bgp |ospf} [metric value] [route-map map_name]
no redistribute {connected | static | bgp |ospf} [metric value] [route-map map_name]
```

### Parameters

<b>connected</b>	(Optional) Specifies that the connected routes are to be redistributed into RIP domain.
<b>static</b>	(Optional) Specifies that the static routes are to be redistributed into RIP domain.
<b>bgp</b>	(Optional) Specifies that the BGP routes are to be redistributed into RIP domain.
<b>ospf</b>	(Optional) Specifies that the OSPF routes are to be redistributed into RIP domain.
<b>metric value</b>	(Optional) Specifies that the RIP route metric value for the redistributed routes. The value range is 0 to 16.
<b>route-map map_name</b>	(Optional) Specifies the route map that should be interrogated to filter the importation of routes from this source routing protocol to the RIP protocol. If not specified, all routes are redistributed.

<b>Default</b>	By default, no route redistribution to RIP is configured. The default value of the metric is 0. By default, no route map is configured.
<b>Command Mode</b>	Router Configuration Mode. Router Address Family Configuration Mode.
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	This command is used to add route redistribution from other routing protocols into RIP on the switch. Changing or disabling any keyword will not affect the state of other key-words. It is not necessary to convert the metric of one routing protocol into that of another routing protocol for route redistribution, since different routing protocols use different metric measurement methods. However, a symbolic metric suggest to be set for route redistribution.  You can filter the routes redistributed into RIP domain using the route map. If the specified route map is not defined, all routes should be redistributed. You can use the route-map math-clauses to filter the routes, and use the route-map set-clauses to set the metric of routes redistributed into RIP domain.  You can verify your settings by entering the <b>show ip rip</b> command.

**Example** This example shows how to configure the redistribution of static routes to RIP.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router rip
DXS-3600-32S(config-router)#redistribute static
DXS-3600-32S(config-router)#
```

**Example** This example shows how to configure the redistribution of OSPF routes to RIP and specify the metric to 2.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router rip
DXS-3600-32S(config-router)#redistribute ospf metric 2
DXS-3600-32S(config-router)#
```

**Example** This example shows how to configure the redistribution of OSPF routes to RIP and use the route map.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#route-map map1 permit 1
DXS-3600-32S(config-route-map)#match ip address list1
DXS-3600-32S(config-route-map)#set metric 4
DXS-3600-32S(config-route-map)#exit
DXS-3600-32S(config)#router rip
DXS-3600-32S(config-router)#redistribute ospf route-map map1
DXS-3600-32S(config-router)#
```

**Example** This example shows how to configure the redistribution of static route to RIP VRF VPN-A instance.

```
DXS-3600-32S# configure terminal
DXS-3600-32S(config)# router rip
DXS-3600-32S(config)# address-family ipv4 vrf VPN-A
DXS-3600-32S(config-router-af)# redistribute static
```

## 52-12 router rip

This command is used to enable RIP and enter the RIP router configuration mode. Use the no form of this command to disable RIP.

**router rip**

**no router rip**

<b>Parameters</b>	None.
<b>Default</b>	By default, RIP is disabled.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	This command is used to enable the RIP and enter the Router configuration mode of RIP protocol. The no form of this command will disable RIP function.  You can verify your settings by entering the <b>show ip rip</b> command.
<b>Example</b>	This example shows how to enable RIP and enter the RIP router configuration mode.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router rip
DXS-3600-32S(config-router)#
```

**52-13 show ip rip**

This command is used to show the RIP information.

```
show ip rip [vrf vrf-name]
```

**Parameters**


---

<b>vrf <i>vrf-name</i></b>	(Optional) Specifies to display information about the RIP VRF instance.
----------------------------	---

---

<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 3. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	This command is used to show the settings about RIP timers, status, redistribution, and interface RIP version, authentication, and status.

**Example**

This example shows how to display RIP information.

```

DXS-3600-32S#show ip rip

RIP Global State           : Enabled
Update Time                : 30 seconds
Timeout Time               : 180 seconds
Garbage Collection Time    : 120 seconds

RIP Interface Settings

Interface      IP Address      TX Mode  RX Mode  Authen-  State
-----
vlan1         10.90.90.90/8   V1 Only  V1 or V2 Disabled Disabled

Total Entries : 1

RIP Redistribution Settings

Source  Destination  Type  Metric  RouteMapName
Protocol Protocol
-----
OSPF    RIP          All   2
STATIC  RIP          All   Transparency map1

Total Entries : 2

DXS-3600-32S#

```

**Example**

This example shows how to check RIP information in VRF VPN-A.

```

DXS-3600-32S#show ip rip vrf VPN-A

VRF: VPN-A
RIP Global State           : Enabled
Update Time                : 40 seconds
Timeout Time               : 120 seconds
Garbage Collection Time    : 120 seconds

RIP Interface Settings

Interface      IP Address      TX Mode  RX Mode  Authen-  State
-----
ip100         100.1.1.1/24   V1 Only  V1 or V2 Disabled Disabled

Total Entries : 1

RIP Redistribution Settings

Source  Destination  Type  Metric  RouteMapName
Protocol Protocol
-----
OSPF    RIP          All   Transparency

Total Entries : 1

DXS-3600-32S#

```

**Display Parameters****Description**

<b>RIP Global state</b>	The global administrative status of RIP. It is specified with the <b>router rip</b> command.
<b>Update Time</b>	Rate (in seconds) at which update packets are sent. It is specified with the <b>timers basic</b> command.

Display Parameters	Description
<b>Timeout Time</b>	Interval of time (in seconds) after which a route is declared invalid. It is specified with the <b>timers basic</b> command.
<b>Garbage Collection Time</b>	Amount of time (in seconds) that must pass before the route is removed from the garbage list. It is specified with the <b>timers basic</b> command.
<b>Interface</b>	The name of RIP interfaces.
<b>IP Address</b>	The IP address of RIP interfaces.
<b>TX Mode</b>	The version of RIP packets sent on the interface. It is specified with the <b>ip rip send version</b> command, the <b>ip rip send enable</b> command and the <b>version</b> command.
<b>RX Mode</b>	The version of RIP packets received on the interface. It is specified with the <b>ip rip receive version</b> command, the <b>ip rip receive enable</b> command and the <b>version</b> command.
<b>Authentication</b>	The authentication type of RIP interfaces. It is specified with the <b>ip rip authentication mode</b> command.
<b>State</b>	Administrative state of RIP interfaces. It is specified with the <b>network</b> command.
<b>Source Protocol</b>	The source route domain of redistribution. It is specified with the <b>redistribute</b> command.
<b>Destination Protocols</b>	The destination route domain of redistribution.
<b>Type</b>	The route type of source route domain of redistribution.
<b>Metric</b>	Metric of routes redistributed into RIP domain. It is specified with the <b>redistribute</b> command.
<b>RouteMapName</b>	Route map name used to filter routes redistributed into RIP domain. It is specified with the <b>redistribute</b> command.

## 52-14 show ip rip interface

This command is used to show information of all RIP interfaces.

```
show ip rip interface [vrf vrf-name]
```

### Parameters

<b>vrf vrf-name</b>	(Optional) Specifies to display information about the RIP VRF instance.
<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 3. (EI Mode Only Command)
<b>Usage Guideline</b>	This command will display all interfaces specific information, such as: <b>authentication</b> , <b>send version</b> , <b>receive version</b> , <b>v2 broadcast mode</b> , and <b>status</b> .

**Example**

This example shows how to check the settings of all RIP interfaces.

```
DXS-3600-32S#show ip rip interface

RIP Interface Settings

Interface Name: vlan1                               IP Address: 10.90.90.90/8 (Link Up)
Interface Metric: 1                                 Administrative State: Enabled
TX Mode: V1 Broadcast                               RX Mode: V1 or V2
Authentication: Enabled
Password for Authentication: 1234
Distribute List In: map1

Interface Name: vlan2                               IP Address: 172.18.1.1/24 (Link Down)
Interface Metric: 1                                 Administrative State: Disabled
TX Mode: V1 Broadcast                               RX Mode: V1 or V2
Authentication: Disabled
Distribute List In: None

Total Entries : 2

DXS-3600-32S#
```

**Example**

This example shows how to check settings of all RIP interfaces in VRF VPN-A.

```
DXS-3600-32S#show ip rip interface vrf VPN-A

RIP Interface Settings

Interface Name: ip100                               IP Address: 100.1.1.1/24 (Link Up)
Interface Metric: 1                                 Administrative State: Disabled
TX Mode: V1 Broadcast                               RX Mode: V1 or V2
Authentication: Disabled

Total Entries : 1

DXS-3600-32S#
```

**Display Parameters****Description**

<b>Interface Name</b>	The name of RIP interfaces.
<b>IP Address</b>	The IP address of RIP interfaces.
<b>Interface Metric</b>	The metric used by RIP interfaces to send update.
<b>Administrative State</b>	Administrative state of RIP interfaces. It is specified with the <b>network</b> command.
<b>TX Mode</b>	The version of RIP packets sent on the interface. It is specified with the <b>ip rip send version</b> command, the <b>ip rip send enable</b> command and the <b>version</b> command.
<b>RX Mode</b>	The version of RIP packets received on the interface. It is specified with the <b>ip rip receive version</b> command, the <b>ip rip receive enable</b> command and the <b>version</b> command.
<b>Authentication</b>	The authentication type of RIP interfaces. It is specified with the <b>ip rip authentication mode</b> command.
<b>Password for Authentication</b>	The plain text password. It is specified with the <b>ip rip authentication text-password</b> command.
<b>Distribute List In</b>	Access list name used as distribute-list in list. It is specified with the <b>distribute-list in</b> command.
<b>Total Entries</b>	The total value of RIP interfaces.

**52-15 timers basic**

This command is used to configure RIP timers. Use the no form of this command to restore to the default value.

**timer basic** *update timeout garbage\_collection*  
**no timer basic**

## Parameters

<i>update</i>	Specifies the rate (in seconds) at which updates are sent. The value range is 5 to 65535.
<i>timeout</i>	Specifies the interval of time (in seconds) after which a route is declared invalid. A route becomes invalid when there is an absence of updates that refresh the route. The invalid route is put in the garbage list, marked as inaccessible, and advertised as unreachable. The value range is 5 to 65535.
<i>garbage_collection</i>	Specifies the amount of time (in seconds) that must pass before the route is removed from the garbage list. Before timeout, the entry is advertised as unreachable. The value range is 5 to 65535.

**Default** By default, the update time is 30 seconds, the timeout time is 180 seconds and the garbage\_collection time is 120 seconds

**Command Mode** Router Configuration Mode.  
Router Address Family Configuration Mode.

**Command Default Level** Level: 8. (**EI Mode Only Command**)

**Usage Guideline** The basic timers' parameters for RIP are adjustable. Although the RIP protocol does not require the router process RIP protocol with same basic timers, otherwise RIP is executing a distributed, asynchronous routing algorithm. These timers are suggested to be the same for all routers and access servers in the network.

In this command, we don't check that if the update timer is bigger than timeout timer, the user should configure the update timer bigger than timeout timer to ensure RIP to work normally.

You can verify your settings by entering the **show ip rip** command.

**Example** This example shows how to configure the RIP update time to 20 seconds, the timeout time to 180 seconds, and the garbage collection time to 100.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router rip
DXS-3600-32S(config-router)#timer basic 20 180 100
DXS-3600-32S(config-router)#
```

**Example** This example shows how to configure RIP update time to 40 seconds, timeout time to 120 seconds, and garbage collection time to 120 in VRF VPN-A.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router rip
DXS-3600-32S(config)#address-family ipv4 vrf VPN-A
DXS-3600-32S(config-router-af)#timer basic 40 120 120
```

## 52-16 version

This command is used to configure the default version for all RIP interfaces to send or receive RIP packets. Use the no form of this command to restore to the default value.

**version {1 | 2}**  
**no version**



**Parameters**

<b>1</b>	Specifies RIP Version 1.
<b>2</b>	Specifies RIP Version 2.

<b>Default</b>	By default RIPv1 packets are sent out and both RIPv1 and RIPv2 packets are received.
<b>Command Mode</b>	Router Configuration Mode. Router Address Family Configuration Mode.
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	This command defines the default RIP version. This version will be override if version is explicitly specified for the interface (e.g. interface command ip rip receive version).  Please note when receiving and sending packets are all be disabled or both version is Version 1, the configuration of authentication will be cleared.  You can verify your settings by entering the <b>show ip rip interface</b> command.

**Example** This example shows how to configure the global RIP version to Version 2.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router rip
DXS-3600-32S(config-router)#version 2
DXS-3600-32S(config-router)#
```

**Example** This example shows how to configure RIP global version to version 2 in VRF VPN-A.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#router rip
DXS-3600-32S(config)#address-family ipv4 vrf VPN-A
DXS-3600-32S(config-router-af)#version 2
```

**52-17 address-family ipv4 vrf (RIP)**

This command is used to create an RIP VRF instance and enter the RIP VRF address family configuration mode. Use the **no** form of this command to remove the RIP VRF instance.

```
address-family ipv4 vrf vrf-name
no address-family ipv4 vrf vrf-name
```

**Parameters**

<b>vrf vrf-name</b>	Specifies the name of the VRF.
---------------------	--------------------------------

<b>Default</b>	By default, no RIP VRF instance is created.
<b>Command Mode</b>	Router Configuration Mode.
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	This command is used to configure RIP routing instances that use IPv4 address prefixes. After executing this command, the address family configuration mode will be entered and a new RIP VRF routing instance will be created with this command. If the <b>no</b> form of this command is executed, the related configurations of the RIP VRF instance will be removed.  You can verify your settings by entering the <b>show ip rip vrf</b> command.

**Example** This example shows how to create a new RIP instance in VRF VPN-A.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)# router rip
DXS-3600-32S(config-router)# address-family ipv4 vrf VPN-A
DXS-3600-32S(config-router-af)#
```

---

## 52-18 exit address-family

This command is used to exit the address family configuration mode.

### exit address-family

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Address Family Configuration Mode
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	This command is used to exit the address family configuration mode.

**Example** This example show how to exit the address family configuration mode:

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)# router rip
DXS-3600-32S(config-router)# address-family ipv4 vrf VPN-A
DXS-3600-32S(config-router-af)#network 10.1.1.0
DXS-3600-32S(config-router-af)#exit address-family
DXS-3600-32S(config-router)#
```

---

# Route Map Commands

## 53-1 route-map

This command is used to create or configure a route map or enter route map configuration mode. Use the no form of this command to delete a route map or remove a clause of route map.

```
route-map MAP-NAME [permit | deny] [SEQUENCE-NUM]
no route-map MAP-NAME [permit | deny] [SEQUENCE-NUM]
```

### Parameters

<i>MAP-NAME</i>	Specifies the name of route map. It can accept up to 16 characters. The syntax is general string that does not allow space.
<b>permit</b>	(Optional) Specifies a permit clause. If the match commands of one permit clause are met, the route will be redistributed while the set commands of this clause may modify the information of the route to be redistributed. If the match commands of one permit clause are not met, the next clause of this route map will be tested.
<b>deny</b>	(Optional) Specifies a deny clause. If the match commands of one deny clause are met, the route will not be redistributed.
<i>SEQUENCE-NUM</i>	(Optional) Specifies the sequence number of clause. Each clause has a sequence number, which indicates the position of the clause. The clause with lower sequence number is preferred. The range is 1 to 65535.

### Default

The **permit** keyword is the default.  
The default value of the sequence number of the first clause is 10.

### Command Mode

Global Configuration Mode.

### Command Default Level

Level: 8

### Usage Guideline

The route map can be used in route redistribution and route filtering. A route map could be configured with multiple permit/deny clauses, which can have multiple match or set commands.

The clause with lower sequence number has higher priority. If the route map clause with low sequence number is not met, the next clause with higher sequence number will be tested. If all clauses are not met, the test result is to deny (This means the route map is ended with a implicit deny clause if this route map is not empty). If one clause is met, next clauses will be skipped.

When one clause is tested, the logical AND algorithm is applied for multiple match commands and the logical OR algorithm is applied for multiple objects within one match command.

There is a limitation about sequence number. If the route map has been configured with one clause, the sequence number must be specified when configure more clauses for this route map.

If no argument is specified when use no route-map command, the route map is deleted.

You can verify your settings by entering the **show route-map** command.

### Example

This example shows how to add one route map and enter the route map configuration mode.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#route-map rmap1 permit 10
DXS-3600-32S(config-route-map)#
```

## 53-2 match as-path

This command is used to add a match command to match a BGP autonomous system (AS) path access list. Use the **no** form of this command to delete the match command with BGP autonomous system path access list.

```
match as-path ACCESS-LIST-NAME
no match as-path
```

### Parameters

---

<i>ACCESS-LIST-NAME</i>	Specifies the name of the path access list. The length is up to 16 characters.
-------------------------	--

---

<b>Default</b>	None.
<b>Command Mode</b>	Route Map Configuration Mode.
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	Only one path access list is supported. If this command is executed with a different path access list, the old one will be overwritten.  You can verify your settings by entering the <b>show route-map</b> command.

**Example** This example shows how to add a match clause to match AS path access list.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#route-map rmap1 permit 10
DXS-3600-32S(config-route-map)#match as-path PATH_AC
DXS-3600-32S(config-route-map)#
```

## 53-3 match community

This command is used to add a match command to match a Border Gateway Protocol (BGP) community list. Use the **no** form of this command to delete the match command with BGP community list.

```
match community COMMUNITY-LIST-NAME [exact]
no match community
```

### Parameters

---

<i>COMMUNITY-LIST-NAME</i>	Specifies the name of BGP community list. The length is up to 16 characters.
<b>exact</b>	(Optional) Specifies to match BGP community list exactly.

---

<b>Default</b>	None.
<b>Command Mode</b>	Route Map Configuration Mode.
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	The BGP community list is created with the command ip community-list. If exact is specified, the communities in the community list must be exactly same as the communities of the route.  If exact is not specified, this command is matched as long as one community is matched.  Only one community list is supported. If this command is executed with a different community list, the old one will be overwritten.  You can verify your settings by entering the <b>show route-map</b> command.

**Example** This example shows how to add a match command to match a BGP community list.

```
DXS-3600-32S(config)#ip community-list standard A-COMMUNITY permit 101:1
DXS-3600-32S(config)#route-map rmap1 permit 10
DXS-3600-32S(config-route-map)#match community A-COMMUNITY exact
DXS-3600-32S(config-route-map)#
```

## 53-4 match extcommunity

This command is used to add a match command to match a Border Gateway Protocol (BGP) extended community (extcommunity) list. Use the **no** form of this command to delete the match command with BGP extended community list.

```
match extcommunity EXTCOMMUNITY-LIST-NAME
no match extcommunity
```

### Parameters

<i>EXTCOMMUNITY-LIST-NAME</i>	Specifies the name of the BGP extended community list. The length is up to 16 characters.
-------------------------------	---

<b>Default</b>	None.
<b>Command Mode</b>	Route Map Configuration Mode.
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	The BGP extended community list is created with the command ip extcommunity-list. Only one community list is supported. If this command is executed with a different community list, the old one will be overwritten. You can verify your settings by entering the <b>show route-map</b> command.

**Example** This example is used to add a match command to match a BGP extended community list.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)# ip extcommunity-list standard EXTCOM permit rt 192.168.1.1:100
DXS-3600-32S(config)# route-map rmap1 permit 10
DXS-3600-32S(config-route-map)# match extcommunity EXTCOM
DXS-3600-32S(config-route-map)#
```

## 53-5 match interface

This command is used to add a match command to match the outgoing interface of routes. Use the no form of this command to delete the match command with outgoing interface of routes.

```
match interface ipif_name
no match interface
```

### Parameters

<i>ipif_name</i>	Specifies the name of the outgoing interface of routes.
------------------	---

<b>Default</b>	None.
<b>Command Mode</b>	Route Map Configuration Mode.
<b>Command Default Level</b>	Level: 8

**Usage Guideline** Only one interface is supported. If this command is executed with a different interface, the old one will be overwritten.

You can verify your settings by entering the **show route-map** command.

**Example** This example shows how to add a match command to match a outgoing interface of routes.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#route-map rmap1 permit 10
DXS-3600-32S(config-route-map)#match interface System
DXS-3600-32S(config-route-map)#
```

## 53-6 match ip address

This command is used to add a match command to match the destination network address of routes. Use the no form of this command to delete the match command with destination network address of routes.

```
match ip address {ACCESS-LIST-NAME | prefix-list PREFIX-LIST-NAME}
no match ip address {ACCESS-LIST-NAME | prefix-list PREFIX-LIST-NAME}
```

### Parameters

<i>ACCESS-LIST-NAME</i>	Specifies the name of a standard IP access list. The maximum length is 16 characters.
<i>PREFIX-LIST-NAME</i>	Specifies the name of an IP prefix list. The maximum length is 16 characters.

**Default** None.

**Command Mode** Route Map Configuration Mode.

**Command Default Level** Level: 8

**Usage Guideline** The standard IP access list is created with the command ip standard access-list. The prefix list is created with the command ip prefix-list.

Only one of them can be supported for matching destination network address at one time.

The destination network address is testes with the specified standard IP access list or prefix list.

You can verify your settings by entering the **show route-map** command.

**Example** This example shows how to add a match command to match destination network address of routes using standard IP access list.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip standard access-list Strict-Control
DXS-3600-32S(config-ip-acl)#permit 10.1.1.0/24
DXS-3600-32S(config-ip-acl)#exit
DXS-3600-32S(config)#route-map rmap1 permit 10
DXS-3600-32S(config-route-map)#match ip address Strict-Control
DXS-3600-32S(config-route-map)#
```

## 53-7 match ip next-hop

This command is used to add a match command to match the next hop of routes. Use the no form of this command to delete the match command with next hop of routes.

**match ip next-hop** {*ACCESS-LIST-NAME* | **prefix-list** *PREFIX-LIST-NAME*}

**no match ip next-hop** {*ACCESS-LIST-NAME* | **prefix-list** *PREFIX-LIST-NAME*}

### Parameters

<i>ACCESS-LIST-NAME</i>	Specifies the name of a standard IP access list. The maximum length is 16 characters.
<i>PREFIX-LIST-NAME</i>	Specifies the name of an IP prefix list. The maximum length is 16 characters.

<b>Default</b>	None.
<b>Command Mode</b>	Route Map Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	<p>The standard IP access list is created with the command <code>ip standard access-list</code>. The prefix list is created with the command <code>ip prefix-list</code>.</p> <p>Only one of them can be supported for matching the next hop of routes at one time. The next hop of routes is tested with the specified standard IP access list or prefix list.</p> <p>You can verify your settings by entering the <b>show route-map</b> command.</p>

**Example** This example shows how to add a match command to match destination network address of routes using standard IP access list.

```

DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip standard access-list Strict-Control
DXS-3600-32S(config-ip-acl)#permit 10.1.1.0/24
DXS-3600-32S(config-ip-acl)#exit
DXS-3600-32S(config)#route-map rmap1 permit 10
DXS-3600-32S(config-route-map)#match ip next-hop Strict-Control
DXS-3600-32S(config-route-map)#

```

## 53-8 match ip route-source

This command is used to add a match command to match the source router IP address of the routes. Use the no form of this command to delete the match command with source router IP address.

**match ip route-source** *ACCESS-LIST-NAME*

**no match ip route-source**

### Parameters

<i>ACCESS-LIST-NAME</i>	Specifies the name of a standard IP access list. The maximum length is 16 characters.
-------------------------	---

<b>Default</b>	None.
<b>Command Mode</b>	Route Map Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	<p>The standard IP access list is created with the command <code>ip standard access-list</code>.</p> <p>Only one standard IP access list is supported. If this command is executed with a different standard IP access list, the old one will be overwritten.</p> <p>You can verify your settings by entering the <b>show route-map</b> command.</p>

**Example** This example shows how to add a match command to match source router IP address of routes using standard IP access list.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip standard access-list LocalServer
DXS-3600-32S(config-ip-acl)#permit 172.19.10.1/32
DXS-3600-32S(config-ip-acl)#exit
DXS-3600-32S(config)#route-map rmap1 permit 10
DXS-3600-32S(config-route-map)#match ip route-source LocalServer
DXS-3600-32S(config-route-map)#
```

## 53-9 match metric

This command is used to add a match command to match the metric of routes. Use the no form of this command to delete the match command with metric of routes.

```
match metric NUMBER
no match metric
```

### Parameters

<i>NUMBER</i>	Specifies the metric of routes. The range is 0 to 4294967294.
---------------	---

<b>Default</b>	None.
<b>Command Mode</b>	Route Map Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	You can verify your settings by entering the <b>show route-map</b> command.

**Example** This example shows how to add a match command to match the metric of routes.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#route-map rmap1 permit 10
DXS-3600-32S(config-route-map)#match metric 5
DXS-3600-32S(config-route-map)#
```

## 53-10 match route-type

This command is used to add a match command to match the type of routes. Use the no form of this command to delete the match command with type of routes.

```
match route-type {internal | external | type-1 | type-2}
no match route-type
```

### Parameters

<b>internal</b>	Specifies the Intra-area and inter-area routes of Open Shortest Path First (OSPF).
<b>external</b>	Specifies the Autonomous System external route of OSPF, including type-1 and type-2 external routes.
<b>type-1</b>	Specifies the Type-1 external route of OSPF
<b>type-2</b>	Specifies the Type-2 external route of OSPF

<b>Default</b>	None.
<b>Command Mode</b>	Route Map Configuration Mode.
<b>Command Default Level</b>	Level: 8



**Usage Guideline** All types of routes, internal, external, type-1 and type-2, are only for OSPF.

You can verify your settings by entering the **show route-map** command.

**Example** This example shows how to add a match command to match the metric of routes.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#route-map rmap1 permit 10
DXS-3600-32S(config-route-map)#match route-type internal
DXS-3600-32S(config-route-map)#
```

## 53-11 set as-path prepend

This command is used to add a set command to modify an autonomous system path of BGP routes. Use the no form of this command to delete this set command.

```
set as-path prepend ASPATH-LIST
no set as-path prepend
```

### Parameters

<i>ASPATH-LIST</i>	Specifies the path list to be appended before the autonomous system path of the route. It could be an AS number or a list of AS numbers separated by comma.
--------------------	---

**Default** None.

**Command Mode** Route Map Configuration Mode.

**Command Default Level** Level: 8. (**EI Mode Only Command**)

**Usage Guideline** Use this command to change the length of the autonomous system path of BGP route. This can affect the best path selection.

You can verify your settings by entering the **show route-map** command.

**Example** This example shows how to add a set command to append an autonomous system path list to BGP routes.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#route-map mapaspath permit 10
DXS-3600-32S(config-route-map)#set as-path prepend 1,10,100,200
DXS-3600-32S(config-route-map)#
```

## 53-12 set community

This command is used to add a set command to modify the BGP communities attribute. Use the no form of this command to delete this set command.

```
set community [COMMUNITY-SET | internet | local-as | no-advertise | no-export](1) [additive]
no set community
```

### Parameters

<i>COMMUNITY-SET</i>	(Optional) Specifies a 32-bits integer number represented by AA:NN, where AA (AS number) is the upper part of the word and NN (community number, user-specified) is the lower part of the word
<b>internet</b>	(Optional) Specifies routes to be advertised to all peers (internal and external)
<b>local-as</b>	(Optional) Specifies routes not to be advertised to external BGP peers.
<b>no-advertise</b>	(Optional) Specifies routes not to be advertised to other BGP peers.

<b>no-export</b>	(Optional) Specifies routes not to be advertised outside of autonomous system boundary.
<b>additive</b>	(Optional) Specifies to add the community to the existed communities.

<b>Default</b>	None.
<b>Command Mode</b>	Route Map Configuration Mode.
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	Use this command to modify the BGP community attribute. If additive is not specified, the existing communities in the routes will be replaced.  You can verify your settings by entering the <b>show route-map</b> command.

**Example** This example shows how to add a set command to replace the BGP communities attribute.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#route-map mapdampending permit 10
DXS-3600-32S(config-route-map)#set community 2:1
DXS-3600-32S(config-route-map)#
```

### 53-13 set dampening

This command is used to add a set command specify the dampening parameters of routes. Use the no form of this command to delete this set command.

**set dampening** *HALF-LIFE REUSE SUPPRESS MAX-SUPPRESS-TIME UN-REACHABILITY-HALF-LIFE*  
**no set dampening**

#### Parameters

<i>HALF-LIFE</i>	Specifies the time (in minutes) after which the penalty of the reachable routes is decreased by half. The range is 1 to 45.
<i>REUSE</i>	Specifies that if the penalty of a route is lower than this value, the route is unsuppressed. The range is 1 to 20000.
<i>SUPPRESS</i>	Specifies that if the penalty of a route is higher than this value, the route is suppressed. The range is 1 to 20000.
<i>MAX-SUPPRESS-TIME</i>	Specifies the maximum time (in minutes) a route can be suppressed. The range is 1 to 255.
<i>UN-REACHABILITY-HALF-LIFE</i>	Specifies the time (in minutes) after which the penalty of the unreachable routes is decreased by half. The range is 1 to 45.

<b>Default</b>	<i>HALF-LIFE</i> : 15 minutes. <i>REUSE</i> : 750. <i>SUPPRESS</i> : 2000. <i>MAX-SUPPRESS-TIME</i> : 60 minutes <i>UN-REACHABILITY-HALF-LIFE</i> : 15 minutes
<b>Command Mode</b>	Route Map Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	Use this command to modify the dampening parameters of routes when match conditions are met.  You can verify your settings by entering the <b>show route-map</b> command.

**Example** This example shows how to add a set command to modify the dampening parameters of route 120.1.1.0/24.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip standard access-list Strict-Control
DXS-3600-32S(config-ip-acl)#permit 120.1.1.0/24
DXS-3600-32S(config-ip-acl)#exit
DXS-3600-32S(config)#route-map rmap1 permit 10
DXS-3600-32S(config-route-map)#match ip address Strict-Control
DXS-3600-32S(config-route-map)#set dampening 14 500 900 60 15
DXS-3600-32S(config-route-map)#
```

## 53-14 set ip next-hop

This command is used to add a set command to modify the next hop of routes. Use the no form of this command to delete this set command.

```
set ip next-hop {IP-ADDRESS | peer-address}
no set ip next-hop
```

### Parameters

<i>IP-ADDRESS</i>	Specifies the IP address the next hop.
<i>peer-address</i>	This setting will take effect for both the ingress and egress directions. When set next hop to peer's address, for ingress direction, the next hop will be set to the neighbor peer address. For egress direction, the next hop associated with the route in the packet will be local router id.

<b>Default</b>	None.
<b>Command Mode</b>	Route Map Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	Use this command to modify the next hop of route when match conditions are met.  You can verify your settings by entering the <b>show route-map</b> command.

**Example** This example shows how to add a set command to modify the next hop of route 10.1.1.0/24.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip standard access-list Strict-Control
DXS-3600-32S(config-ip-acl)#permit 10.1.1.0/24
DXS-3600-32S(config-ip-acl)#exit
DXS-3600-32S(config)#route-map mapnethop permit 10
DXS-3600-32S(config-route-map)#match ip address Strict-Control
DXS-3600-32S(config-route-map)#set ip next-hop 120.1.2.2
DXS-3600-32S(config-route-map)#
```

## 53-15 set local-preference

This command is used to add a set command to modify the local preference attribute of routes. Use the no form of this command to delete this set command.

```
set local-preference NUMBER
no set local-preference
```

**Parameters**


---

<i>NUMBER</i>	Specifies the value of local preference. The range is 0 to 4294967295.
---------------	--

---

**Default** The default value of local preference is 100.

**Command Mode** Route Map Configuration Mode.

**Command Default Level** Level: 8

**Usage Guideline** Use this command to modify the local preference attribute of route when match conditions are met.

By default, the BGP router will send the default local preference with the routes to IBGP neighbors and to EBGP neighbors which are in one confederation. It can be overwritten by the local preference set by the route map. For the received route, the local preference sent with the route will be used in the best path selection. This local preference will be overwritten if the local preference is ingress set by the route map. For the connected routes, the default local preference will be used for them in the best path selection.

This will take effect for both ingress and egress directions.

You can verify your settings by entering the **show route-map** command.

**Example** This example shows how to add a set command to modify the local preference of route 120.1.1.0/24.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip standard access-list Strict-Control
DXS-3600-32S(config-ip-acl)#permit 120.1.1.0/24
DXS-3600-32S(config-ip-acl)#exit
DXS-3600-32S(config)#route-map mapprefer permit 10
DXS-3600-32S(config-route-map)#match ip address Strict-Control
DXS-3600-32S(config-route-map)#set local-preference 500
DXS-3600-32S(config-route-map)#
```

**53-16 set metric**

This command is used to add a set command to modify the metric of routes. Use the no form of this command to delete this command.

```
set metric NUMBER
no set metric
```

**Parameters**


---

<i>NUMBER</i>	Specifies the metric of routes. The range is 0 to 4294967294.
---------------	---

---

**Default** None.

**Command Mode** Route Map Configuration Mode.

**Command Default Level** Level: 8

**Usage Guideline** Use this command to modify the metric of routes to be redistributed

. You can verify your settings by entering the **show route-map** command.

**Example** This example shows how to add a set command to modify the metric of routes.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#route-map mapmetric permit 10
DXS-3600-32S(config-route-map)#set metric 100
DXS-3600-32S(config-route-map)#
```

## 53-17 set metric-type

This command is used to add a set command to modify the metric type of routes. Use the no form of this command to delete this set command.

```
set metric-type {type-1 | type-2}
no set metric-type
```

### Parameters

<b>type-1</b>	Specifies the OSPF external type 1 metric.
<b>type-2</b>	Specifies the OSPF external type 2 metric.

**Default** None.

**Command Mode** Route Map Configuration Mode.

**Command Default Level** Level: 8

**Usage Guideline** This command is only applied to the routes redistributed to OSPF.

You can verify your settings by entering the **show route-map** command.

**Example** This example shows how to add a set command to modify the metric type of routes.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#route-map mapmetrictype permit 10
DXS-3600-32S(config-route-map)#set metric-type type-1
DXS-3600-32S(config-route-map)#
```

## 53-18 set origin

This command is used to add a set command to modify the BGP origin code. Use the no form of this command to delete this set command.

```
set origin {igp | egp | incomplete}
no set origin
```

### Parameters

<b>igp</b>	Specifies that the origin code of the route will be set to IGP.
<b>egp</b>	Specifies that the origin code of the route will be set to EGP.
<b>incomplete</b>	Specifies that the origin code of the route will be set to INCOMPLETE.

**Default** None.

**Command Mode** Route Map Configuration Mode.

**Command Default Level** Level: 8

**Usage Guideline**

Use this command to modify the BGP origin code route attribute. The origin code (ORIGIN) is a well-known mandatory attribute that indicates the origin of the prefix or, rather, the way in which the prefix was injected into BGP.

There are three origin codes, listed in order of preference:

**IGP**, meaning the prefix was originated from information learned from an interior gateway protocol.

**EGP**, meaning the prefix originated from the EGP protocol, which BGP replaced.

**Incomplete**, meaning the prefix originated from some unknown source, for example, redistribute.

You can verify your settings by entering the **show route-map** command.

**Example**

This example shows how to add a set command to modify the origin code of routes.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#route-map maporigin permit 10
DXS-3600-32S(config-route-map)#match as-path PATH_ACL
DXS-3600-32S(config-route-map)#set origin egp
DXS-3600-32S(config-route-map)#
```

**53-19 set weight**

This command is used to add a set command to specify the weight of BGP routes. Use the no form of this command to delete this set command.

```
set weight NUMBER
no set weight
```

**Parameters**

<i>NUMBER</i>	Specifies the value of the weight. The range is 0 to 65535.
---------------	---

**Default**

None.

**Command Mode**

Route Map Configuration Mode.

**Command Default Level**

Level: 8

**Usage Guideline**

Weights set by this command will override the weights specified by BGP neighbor commands. In other words, the weights specified with the command **set weight** in route map configuration mode override the weights specified with the command **neighbor weight** in BGP router mode.

You can verify your settings by entering the **show route-map** command.

**Example**

This example shows how to add a set command to modify the weight of BGP routes.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#route-map mapweight permit 10
DXS-3600-32S(config-route-map)#match as-path PATH_ACL
DXS-3600-32S(config-route-map)#set weight 30
DXS-3600-32S(config-route-map)#
```

**53-20 show route-map**

This command is used to show route map settings.

```
show route-map [MAP-NAME]
```

## Parameters

<i>MAP-NAME</i>	(Optional) Specifies to display information about specified route map. The maximum length is 16 characters.
-----------------	---

<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 3
<b>Usage Guideline</b>	Use this command to check the settings of route map, including permit or deny clauses and match or set commands.

**Example** This example shows information of route map "rmap1".

```
DXS-3600-32S#show route-map rmap1

route-map : rmap1
-----
sequence : 10 (Permit)
  Match clauses:
    as-path : PATH_AC
    community : ALPHA-COMMUNITY exact
    interface : System
    ip address : Strict-Control
    ip next-hop : Strict-Control
    route-source : LocalServer
    metric : 5
    route-type : internal
  Set clauses:
    dampening : 14 500 900 60 15

DXS-3600-32S#
```

Display Parameters	Description
<b>Route Map</b>	The name of route map. It is specified with the command <b>route-map</b> .
<b>Sequence</b>	The sequence number of clause. It is specified with the command <b>route-map</b> .
<b>Match</b>	List of match commands.
<b>Set</b>	List of set commands.

# Secure Shell (SSH) Commands

## 54-1 ip ssh time-out

This command is used to specify the time interval that the switch waits for the SSH client to respond. Use the no form of this command to reset the time interval that the switch waits for the SSH client to respond.

```
ip ssh time-out <sec 30-600>
no ip ssh time-out
```

### Parameters

---

<b>time-out</b> <sec 30-600>	Specifies the time interval that the switch waits for the SSH client to respond. The range is 30 to 600 seconds and this parameter is only applied to the negotiation phase.
------------------------------	--

---

<b>Default</b>	The default time out value for the switch waiting for the SSH client to respond is 120 seconds.
----------------	---

<b>Command Mode</b>	Global Configuration Mode.
---------------------	----------------------------

<b>Command Default Level</b>	Level: 8
------------------------------	----------

<b>Usage Guideline</b>	This parameter is only applied to the negotiation phase. If the negotiation phase has not completed during the time specified by this parameter, the connection be disconnected directly.
------------------------	---

After the execution shell starts, the CLI-based timers will start.

**Note:** The modification of CLI-based timers or other CLI-based parameters can not be applied the connected SSH sessions, i.e. the modification of CLI-based parameters can only be applied to the SSH sessions after those modifications.

<b>Example</b>	This example shows how to specify the SSH time interval value to 240 seconds.
----------------	---

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip ssh time-out 240
DXS-3600-32S(config)#
```

## 54-2 ip ssh authentication-retries

This command is used to specify the number of authentication attempts after which the session is reset or authentication failed. Use the no form of this command to reset the number of authentication attempts after which the session is reset or authentication failed.

```
ip ssh authentication-retries <int 2-20>
no ip ssh authentication-retries
```

### Parameters

---

<b>authentication-retries</b> <int 2-20>	Specifies the number of times that a client can reauthenticate. The range is 2 to 20 times.
--	---

---

<b>Default</b>	The default authentication retry time is 3.
----------------	---

<b>Command Mode</b>	Global Configuration Mode.
---------------------	----------------------------

<b>Command Default Level</b>	Level: 8
------------------------------	----------

<b>Usage Guideline</b>	If authentication fails, the SSH connection attempted will be disconnected if the total number of failed times has exceeded the value specified by this command.
------------------------	--



**Example** This example shows how to specify the number of SSH authentication retry times to 5.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip ssh authentication-retries 5
DXS-3600-32S(config)#
```

### 54-3 ip ssh port

This command is used to specify the TCP port number on which SSH server listens. Use the no form of this command to reset the TCP port number to the default value 22.

```
ip ssh port <int 1-65535>
no ip ssh port
```

#### Parameters

<b>port</b> <int 1-65535>	Specifies the TCP port number on which the SSH server listens. This port number can not be well-known port number and can no be occupied by other applications.
---------------------------	---

<b>Default</b>	The default TCP port number for the SSH server is 22.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	By default, the SSH server listens on TCP port number 22. If you want it to listen on other TCP port number in order to avoid regular SSH attacks or for other personal reasons, you can change the TCP port number to any one you like, but just make sure that the configured TCP port number is not occupied by other applications.

**Example** This example shows how to specify the TCP port number of the SSH server to 2244.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip ssh port 2244
DXS-3600-32S(config)#
```

### 54-4 ip ssh server enable

This command is used to enable the SSH server on the switch. Use the no form of this command to disable the SSH server on the switch.

```
ip ssh server enable
no ip ssh server
```

<b>Parameters</b>	None.
<b>Default</b>	The SSH server is disabled by default.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	This command is used to enable SSH server on the switch in order to execute switch management in secure manner.

**Example** This example shows how to enable the SSH server globally on the switch.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip ssh server enable
DXS-3600-32S(config)#
9      2011-12-23 07:22:12 INFO(6) SSH server is enabled
DXS-3600-32S(config)#
```

## 54-5 show ip ssh server

This command is used to show the version and configuration information of the SSH server.

**show ip ssh server**

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	This command is used to show the version and configuration information of the SSH server.

**Example** This example shows the SSH version and configuration information.

```
DXS-3600-32S#show ip ssh server

Version           : 2.0
State             : Enabled
Server port number : 2244
Connection timeout : 240 secs
Authentication retries : 5 times

DXS-3600-32S#
```

## 54-6 show ip ssh sessions

This command is used to show the status of SSH server connections on the switch.

**show ip ssh sessions**

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	This command is used to show the status of SSH server connections on the switch.

**Example** This example shows the status of SSH server connections on the switch.

```
DXS-3600-32S#show ip ssh sessions

Index Version Username          IP
-----
1      2.0      abc             172.180.161.242
2      2.0      tom             172.180.161.3

DXS-3600-32S#
```

# Simple Network Management Protocol (SNMP) Commands

## 55-1 snmp-server

This command is used to enable the Simple Network Management Protocol (SNMP) agent. To stop and shield the SNMP agent, use the no form of this command.

```
snmp-server
no snmp-server
```

<b>Parameters</b>	None.
<b>Default</b>	SNMP global state is disabled.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	The remote SNMP manager sends SNMP requests to agents and receives SNMP responses and notifications from agents. When the SNMP agent is enabled, the remote SNMP manager can query SNMP agents and send SNMP traps. This command will shield the SNMP agent service and related configuration by executing the <b>no snmp-server</b> command.

**Example** This example shows how to enable the SNMP global setting.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#snmp-server
DXS-3600-32S(config)#
```

**Example** This example shows how to disable the SNMP global setting.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#no snmp-server
DXS-3600-32S(config)#
```

## 55-2 no enable service snmp-agent

This command is used to disable the SNMP Agent.

```
no enable service snmp-agent
```

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	This command will act on all of the SNMP services instead of shielding the configuration information of the SNMP Agent.

**Example** This example shows how to disable the SNMP global setting.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#no enable service snmp-agent
DXS-3600-32S(config)#
```

## 55-3 snmp-server name

This command is used to configure the system name information in global configuration mode. Use the no form of this command to remove the configuration of system name information.

```
snmp-server name TEXT
no snmp-server name
```

### Parameters

<i>TEXT</i>	Specifies the string that describes the system name information. The maximum length is 255 characters (please refer to RFC1213 for the maximum length in detail). The syntax is general string that allows space.
-------------	---

<b>Default</b>	No system name string is set.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	Configure the system name information on the switch.

**Example** This example shows how to set up the system name information with string test.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#snmp-server name test
DXS-3600-32S(config)#
```

**Example** This example shows how to set system name information to default value.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#no snmp-server name
DXS-3600-32S(config)#
```

## 55-4 snmp-server contact

This command is used to configure the system contact information in global configuration mode. Use the no form of this command to remove the configuration of system contact information.

```
snmp-server contact TEXT
no snmp-server contact
```

### Parameters

<i>TEXT</i>	Specifies the string that describes the system contact information. The maximum length is 255 characters (please refer to RFC1213 for the maximum length in detail). The syntax is general string that allows space.
-------------	--

<b>Default</b>	No system contact string is set.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	Configure the system contact information on the switch.

**Example** This example shows how to set up the system contact information with string test.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#snmp-server contact test
DXS-3600-32S(config)#
```

**Example** This example shows how to set system contact information to default value.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#no snmp-server contact
DXS-3600-32S(config)#
```

## 55-5 snmp-server location

This command is used to configure the system location information in global configuration mode. Use the no form of this command to remove the configuration of system location information.

**snmp-server location** *TEXT*  
**no snmp-server location**

### Parameters

<i>TEXT</i>	Specifies the string that describes the system location information. The maximum length is 255 characters (please refer to RFC1213 for the maximum length in detail). The syntax is general string that allows space.
-------------	---

<b>Default</b>	No system location string is set.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	Configure the system location information on the switch.

**Example** This example shows how to set up the system location information with string test.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#snmp-server location test
DXS-3600-32S(config)#
```

**Example** This example shows how to set system location information to default value.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#no snmp-server location
DXS-3600-32S(config)#
```

## 55-6 snmp-server view

This command is used to create or update a view entry for the SNMP. Use the no form of this command to remove a specified SNMP view entry.

**snmp-server view** *VIEW-NAME* *OID-TREE* {**included** | **excluded**}  
**no snmp-server view** *VIEW-NAME* [*OID-TREE*]

### Parameters

<i>VIEW-NAME</i>	Specifies the label for the view record that you are updating or creating. The name is used to reference the record. The valid length for <i>VIEW-NAME</i> is 1 to 32 characters. The syntax is general string that does not allow space.
<i>OID-TREE</i>	Specifies the object identifier of the ASN.1 subtree to be included or excluded from the view. To identify the subtree, specify a text string consisting of numbers, such as 1.3.6.2.4. Replace a single subidentifier with the asterisk (*) wildcard to specify a subtree family; for example 1.3.*.4.

<b>included</b>	(Optional) Specifies to configure the OID (and subtree OIDs) specified in <i>OID-TREE</i> argument to be included in the SNMP view.
<b>excluded</b>	(Optional) Specifies to configure the OID (and subtree OIDs) specified in <i>OID-TREE</i> argument to be explicitly excluded from the SNMP view.

**Default** There are eight VIEWS in the default as following:

VIEW-NAME	OID-TREE	View Type
restricted	1.3.6.1.2.1.1	Included
restricted	1.3.6.1.2.1.11	Included
restricted	1.3.6.1.6.3.10.2.1	Included
restricted	1.3.6.1.6.3.11.2.1	Included
restricted	1.3.6.1.6.3.15.1.1	Included
CommunityView	1	Included
CommunityView	1.3.6.1.6.3	Excluded
CommunityView	1.3.6.1.6.3.1	Included

**Command Mode** Global Configuration Mode.

**Command Default Level** Level: 12

**Usage Guideline** You use this command to create a view for the MIB object trees.

The user will need to specify the view when they use the **snmp-server group** command to define a user group.

**Example** This example shows how to set a MIB view to interfacesMibView.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#snmp-server view interfacesMibView 1.3.6.1.2.1.2 included
DXS-3600-32S(config)#
```

**Example** This example shows how to set a MIB view of interfacesMibView to default value.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#no snmp-server view interfacesMibView
DXS-3600-32S(config)#
```

## 55-7 snmp-server group

This command is used to create a new SNMP group entry that maps SNMP users to SNMP views. Use the no form of this command to remove a specified SNMP group entry.

```
snmp-server group GROUP-NAME {v1 | v2c | v3 {auth | noauth | priv}} [read READ-VIEW] [write WRITE-VIEW] [notify NOTIFY-VIEW]
no snmp-server group GROUP-NAME
```

### Parameters

<i>GROUP-NAME</i>	Specifies the name of the group. The valid length for GROUP-NAME is 1 to 32 characters. The syntax is general string that does not allow space.
<b>v1</b>	Specifies that SNMPv1 (the least secure of the possible SNMP security models) should be used for the group.
<b>v2c</b>	Specifies that SNMPv2c should be used for the group. The SNMPv2c security model allows for the transmission of informs, and supports 64 character strings (instead of 32 character strings).

<b>v3</b>	Specifies that SNMPv3 should be used for the group. SNMPv3 is the most secure of the supported security models, as it allows you to explicitly configure the authentication characteristics.
<b>auth</b>	Specifies authentication of a packet without encrypting it.
<b>noauth</b>	Specifies no authentication of a packet.
<b>priv</b>	Specifies authentication of a packet with encryption.
<b>read</b> <i>READ-VIEW</i>	(Optional) Specifies a read view for the SNMP group. The read-view argument represents a string that is the name of the view that enables you to view only the contents of the agent.
<b>write</b> <i>WRITE-VIEW</i>	(Optional) Specifies a write view for the SNMP group. The write-view argument represents a string that is the name of the view that enables you to enter data and configure the contents of the agent.
<b>notify</b> <i>NOTIFY-VIEW</i>	(Optional) Specifies a notify view for the SNMP group. The notify-view argument represents a string that is the name of the view that enables you to specify a notify, inform, or trap.

**Default** No default access control list is associated with any group.

The default settings of SNMP group are as following:

Group Name	Version	Security Level	Read View Name	Write View Name	Notify View Name
initial	SNMPv3	noauth	restricted	None	restricted
public	SNMPv1	noauth	CommunityView	None	CommunityView
public	SNMPv2c	noauth	CommunityView	None	CommunityView
private	SNMPv1	noauth	CommunityView	CommunityView	CommunityView
private	SNMPv2c	noauth	CommunityView	CommunityView	CommunityView

**Command Mode** Global Configuration Mode.

**Command Default Level** Level: 12

**Usage Guideline** An SNMP group defines the access method, the read view, the write view, and the notification view.

For the access method, it means that when the user who belongs to this group must use the version, access method (for V3) to access the SNMP agent.

For the read view, it means that the user who belongs to this group can only read objects that fall in this view. For the write view, it means that the user who belongs to this group can only write objects that fall in this view. The access to objects range out of the view will get error messages.

For the notification view, it means that the system will check whether the trap manager owns the view to the binding objects associated with the notification packet. The notification will not sent to a trap manager if it does not own the notification view to the binding objects.

**Example** This example shows how to create SNMP group test with SNMPv1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#snmp-server group test v1
DXS-3600-32S(config)#
```

**Example** This example shows how to remove snmp group test.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#no snmp-server group test
DXS-3600-32S(config)#
```

## 55-8 snmp-server user

This command is used to configure a new user to a Simple Network Management Protocol (SNMP) group. Use the no form of this command to remove a user from an SNMP group.

```
snmp-server user USER-NAME GROUP-NAME {v1 | v2c | v3 [encrypted] [auth {md5 | sha} AUTH-PASSWORD] [priv des56 PRIV-PASSWORD]}
no snmp-server user USER-NAME
```

### Parameters

<i>USER-NAME</i>	Specifies the name of the user on the host that connects to the agent. The valid length is 1 to 32 characters. The syntax is general string that does not allow space.
<i>GROUP-NAME</i>	Specifies the name of the group to which the user belongs. The valid length is 1 to 32 characters. The syntax is general string that does not allow space.
<b>v1</b>	Specifies that the SNMPv1 security model should be used.
<b>v2c</b>	Specifies that the SNMPv2c security model should be used.
<b>v3</b>	Specifies that the SNMPv3 security model should be used. Allows the use of the encrypted and or auth keywords.
<b>encrypted</b>	(Optional) Specifies whether the password appears in encrypted format (a series of digits, masking the true characters of the string).
<b>auth</b>	(Optional) Specifies which authentication level should be used.
<b>md5</b>	Specifies the HMAC-MD5-96 authentication level.
<b>sha</b>	Specifies the HMAC-SHA-96 authentication level.
<i>AUTH-PASSWORD</i>	Specifies the password used for authentication.
<b>des56</b>	Specifies the 56-bit DES algorithm for encryption.
<i>PRIV-PASSWORD</i>	Specifies the password used for privacy.

### Default

There is one user in default as following:  
 User Name: initial  
 Engine ID: 800000ab03000102030400  
 Storage-Type: nonVolatile  
 Security Level:  
 Auth Protocol: None  
 Priv Protocol: None  
 Group-Name: initial

### Command Mode

Global Configuration Mode.

### Command Default Level

Level: 12

### Usage Guideline

Use this command to create an SNMP user. The group to which this user belongs must be created first. If this user belongs to a V3 group, then the password used for authentication and encryption needs to be defined.

### Example

This example shows how to create an SNMP user called test in the SNMPv1 group public.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#snmp-server user test public v1
DXS-3600-32S(config)#
```

### Example

This example shows how to remove the SNMP user called test.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#no snmp-server user test
DXS-3600-32S(config)#
```



## 55-9 snmp-server community

This command is used to set up the community access string to permit access to the SNMP. Use the no command to remove the specified community string,

```
snmp-server community COMMUNITY-STRING view VIEW-NAME {ro | rw}
no snmp-server community COMMUNITY-STRING
```

### Parameters

<i>COMMUNITY-STRING</i>	Specifies the community string that consists of from 1 to 32 alphanumeric characters and functions much like a password, permitting access to the SNMP protocol. Blank spaces are not permitted in the community string. The syntax is general string that does not allow space.
view <i>VIEW-NAME</i>	(Optional) Specifies the name of a previously defined view. The view defines the objects available to the SNMP community.
ro	(Optional) Specifies read-only access. Authorized management stations are only able to retrieve MIB objects.
rw	(Optional) Specifies read-write access. Authorized management stations are able to both retrieve and modify MIB objects.

### Default

There are two communities in the default as following:

Community Name: private  
Community Index: private  
Community SecurityName: private  
Storage-type: nonVolatile active

Community Name: public  
Community Index: public  
Community SecurityName: public  
Storage-type: nonVolatile active

### Command Mode

Global Configuration Mode.

### Command Default Level

Level: 12

### Usage Guideline

This command creates a community name entry in the community name table.

### Example

This example shows how to create SNMP community called 'comaccess' with view mib2.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#snmp-server community comaccess view mib2 rw
DXS-3600-32S(config)#
```

### Example

This example shows how to remove the SNMP community called 'comaccess'.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#no snmp-server community comaccess
DXS-3600-32S(config)#
```

## 55-10 snmp-server enable traps

This command is used to enable all Simple Network Management Protocol (SNMP) notification types that are available on your system, use the snmp-server enable traps command in global configuration mode. To disable all available SNMP notifications, use the **no** form of this command.

```
snmp-server enable traps
```

**no snmp-server enable traps**

<b>Parameters</b>	None.
<b>Default</b>	Sending SNMP traps is enabled.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	SNMP notifications can be sent as traps or inform requests. This command enables both traps and informs requests for the specified notification types.

To configure the router to send these SNMP notifications, you must enter at least one **snmp-server enable traps** command. If you enter the command with no keywords, all notification types are enabled. If you enter the command with a keyword, only the notification type related to that keyword is enabled. To enable multiple types of notifications, you must issue a separate **snmp-server enable traps** command for each notification type and notification option.

**Example** This example shows how to enable the SNMP traps.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#snmp-server enable traps
DXS-3600-32S(config)#
```

**Example** This example shows how to disable the SNMP traps.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#no snmp-server enable traps
DXS-3600-32S(config)#
```

---

## 55-11 snmp-server host

This command is used to specify the recipient of a SNMP notification operation. Use the no command to remove the recipient.

```
snmp-server host {IP-ADDRESS [vrf NAME]} version {1 | 2c | 3 {auth | noauth | priv}} COMMUNITY-STRING
no snmp-server host {IP-ADDRESS [vrf NAME]}
```

### Parameters

<i>IP-ADDRESS</i>	Specifies the IPv4 address of the SNMP notification host.
<i>vrf NAME</i>	(Optional) Specifies association with one VRF.
<b>version</b>	(Optional) Specifies the version of the SNMP used to send the traps. The default is 1. If you use the version keyword, one of the following keywords must be specified:
<b>1</b>	Specifies to use SNMPv1. This option is not available with informs.
<b>2c</b>	Specifies to use SNMPv2C.
<b>3</b>	Specifies to use SNMPv3. The most secure model, because it allows packet encryption with the priv keyword. One of the following three optional security level keywords can follow the 3 keyword: <b>auth</b> - Enables Message Digest 5 (MD5) and Secure Hash Algorithm (SHA) packet authentication. <b>noauth</b> — Specifies that the noAuthNoPriv security level applies to this host. This is the default security level for SNMPv3. <b>priv</b> — Enables Data Encryption Standard (DES) packet encryption (also called “privacy”).
<i>COMMUNITY-STRING</i>	Specifies the password-like community string is sent with the notification operation. If the version is 3, the <b>COMMUNITY-STRING</b> is used as the UserName as defined in <b>snmp-sever user</b> command. The community string that consists of from 1 to 32 characters. The syntax is general string that does not allow space.

<b>Default</b>	No host entry exists.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	SNMP notifications are sent as trap packets. If you do not enter an <b>snmp-server host</b> command, no notifications are sent. In order to configure the switch to send SNMP notifications, you must create at least one recipient of a SNMP notification by <b>snmp-server host</b> command.

To create an SNMP host where the notification will be sent to, the user can specify the version of notification packet. For the V1/V2, the notification will be sent in trap protocol data unit (PDU). For V3, the notification will be sent in the SNMPv2-TRAP-PDU with the SNMPv3 header.

If the user specifies to send the notification in V3 format, the user can further specify whether do authentication and encryption for the packet. The system will use the community string specified for this command as the user name and look up in the user table to get the password for the authentication and encryption.

For both V1/V2 and V3, the system will find out the notification view for the group associated with this SNMP host. If the binding variables associated with this notification are out of this notification view, then this notification will not send to this host. Even more if the IP access list associated with does not include the IP address of the host, this notification won't be sent out, either.

For V3 host, the argument of *COMMUNITY-STRING* refers to a user created by the **snmp-server user** command. For V1/V2 host, the community string can either refer to a user created by the **snmp-server user** command or a community string entry created by the **snmp-server community** command. To create a SNMP host, the community string (or user) must be created first. An error message will appear to indicate this situation.

If the host version is different from the group version defined for this host (via access control list option in **snmp-server group** command), it will not work because the version is not matched. If user creates the community, the system will create V1/V2 group implicitly.

**Example** This example shows how to set up the trap recipient as 163.10.50.126 by using SNMP version 1 with community string public.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#snmp-server host 163.10.50.126 version 1 public
DXS-3600-32S(config)#
```

**Example** This example shows how to remove the trap recipient 163.10.50.126.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#no snmp-server host 163.10.50.126
DXS-3600-32S(config)#
```

---

## 55-12 show snmp community

This command is used to display information about the configured characteristics of SNMP community.

**show snmp community**

<b>Parameters</b>	None.
<b>Default</b>	None.

---

<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 3
<b>Usage Guideline</b>	Used this command can view the SNMP community configured on the current SNMP agent.

**Example** This example shows how to display the SNMP community information.

```
DXS-3600-32S#show snmp community

Community Name: private
Community Index: private
Community SecurityName: private
storage-type: nonVolatile active

Community Name: public
Community Index: public
Community SecurityName: public
storage-type: nonVolatile active

DXS-3600-32S#
```

---

### 55-13 show snmp user

This command is used to display information about the configured characteristics of SNMP user.

**show snmp user**

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 3
<b>Usage Guideline</b>	This command can view the SNMP users configured on the current SNMP agent.

**Example** This example shows how to display the SNMP user information.

```
DXS-3600-32S#show snmp user

User Name: initial
Engine ID: 800000ab03000102030400
Storage-Type: nonVolatile
Security Level:
Auth Protocol: None
Priv Protocol: None
Group-Name: initial

DXS-3600-32S#
```

---

### 55-14 show snmp group

This command is used to display information about the configured characteristics of SNMP group.

**show snmp group**

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 3

**Usage Guideline**                      Used this command can view the SNMP groups configured on the current SNMP agent.

**Example**                                This example shows how to display the SNMP group information.

```
DXS-3600-32S#show snmp group
```

```
GroupName: public
SecurityModel: v1
SecurityLevel: NoAuthNoPriv
ReadView: CommunityView
WriteView:
NotifyView: CommunityView
```

```
GroupName: public
SecurityModel: v2c
SecurityLevel: NoAuthNoPriv
ReadView: CommunityView
WriteView:
NotifyView: CommunityView
```

```
GroupName: initial
SecurityModel: v3
SecurityLevel: NoAuthNoPriv
ReadView: restricted
WriteView:
NotifyView: restricted
```

```
GroupName: private
SecurityModel: v1
SecurityLevel: NoAuthNoPriv
ReadView: CommunityView
WriteView: CommunityView
NotifyView: CommunityView
```

```
GroupName: private
SecurityModel: v2c
SecurityLevel: NoAuthNoPriv
ReadView: CommunityView
WriteView: CommunityView
NotifyView: CommunityView
```

```
DXS-3600-32S#
```

## 55-15 show snmp view

This command is used to display information about the configured characteristics of SNMP view.

```
show snmp view
```

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 3
<b>Usage Guideline</b>	This command can view the SNMP views configured on the current SNMP agent.

**Example**

This example shows how to display the SNMP view information.

```
DXS-3600-32S#show snmp view

restricted(Include) 1.3.6.1.2.1.1
restricted(Include) 1.3.6.1.2.1.11
restricted(Include) 1.3.6.1.6.3.10.2.1
restricted(Include) 1.3.6.1.6.3.11.2.1
restricted(Include) 1.3.6.1.6.3.15.1.1
CommunityView(Include) 1
CommunityView(Exclude) 1.3.6.1.6.3
CommunityView(Include) 1.3.6.1.6.3.1

DXS-3600-32S#
```

---

**55-16 show snmp host**

This command is used to display information about the configured characteristics of SNMP host.

**show snmp host**

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 3
<b>Usage Guideline</b>	Used this command can view the SNMP host configured on the current SNMP agent.

**Example**

This example shows how to display the SNMP host information.

```
DXS-3600-32S#show snmp host

Host IP: 10.90.90.9
Host VRF: vrf1
SNMP Version: V1
Community Name: public

DXS-3600-32S#
```

# Simple Network Time Protocol (SNTP) and Clock Commands

## 56-1 sntp enable

This command is used to enable the SNTP function. Use the no form of this command to restore the default value.

```
sntp enable
no sntp enable
```

<b>Parameters</b>	None.
<b>Default</b>	Disabled.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	This command is used to enable the SNTP function.  You can verify your settings by entering the <b>show sntp</b> command.

**Example** This example shows how to enable the SNTP function.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#sntp enable
DXS-3600-32S(config)#
```

## 56-2 sntp server

This command is used to configure a switch to use the Simple Network Time Protocol (SNTP) to request and accept Network Time Protocol (NTP) traffic from a time server. Use the no form of this command to remove a server from the list of NTP servers.

```
sntp server {IP-ADDRESS}
no sntp server {IP-ADDRESS}
```

### Parameters

<i>IP-ADDRESS</i>	Specifies the IP address of the NTP server.
-------------------	---

<b>Default</b>	By default no NTP server is configured.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	SNTP is a compact, client-only version of the NTP. SNTP can only receive the time from NTP servers; it cannot be used to provide time services to other systems. SNTP typically provides time within 100 milliseconds of the accurate time, but it does not provide the complex filtering and statistical mechanisms of NTP. In addition, SNTP does not authenticate traffic, although you can configure extended access lists to provide some protection. Enter this command once for each NTP server. You must configure the switch with this command in order to enable SNTP.  You can verify your settings by entering the <b>show sntp</b> command.

**Example** This example shows how to set the switch to request and accept NTP packets from the server at 172.21.118.9.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#sntp server 172.21.118.9
DXS-3600-32S(config)#
```

**Example** This example shows how to remove the NTP server.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#no sntp server 172.21.118.9
DXS-3600-32S(config)#
```

### 56-3 sntp interval

This command is used to set the interval for the SNTP Client to synchronize its clock with the NTP Server.

```
sntp interval SECONDS
no sntp interval
```

#### Parameters

<i>SECONDS</i>	Specifies the synchronization interval from 30 to 99999 seconds
----------------	---

**Default** 720 seconds.

**Command Mode** Global Configuration Mode.

**Command Default Level** Level: 15

**Usage Guideline** Use this command to set the query interval.

You can verify your settings by entering the **show sntp** command.

**Example** This example shows how to set the poll interval to 100 seconds.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#sntp interval 100
DXS-3600-32S(config)#
```

### 56-4 show sntp

This command is used to to show the SNTP information.

```
show sntp
```

**Parameters** None.

**Default** None.

**Command Mode** Privileged EXEC Mode.

**Command Default Level** Level: 3

**Usage Guideline** This command is used to show the settings about the SNTP state, server status and poll interval.



**Example** This example shows how to check the SNTP information.

```
DXS-3600-32S#show sntp
```

```
SNTP Status           : Enabled
SNTP poll interval    : 720 sec
```

```
SNTP Server Status:
```

```
Stratum Version Last Receive      SNTP server
-----
```

```
5          1          00:00:12 Synced 10.0.0.2
-----
```

```
Total Entries: 1
```

```
DXS-3600-32S#
```

Display Parameters	Description
<b>SNTP server</b>	IP Address of the configured NTP server.
<b>Stratum</b>	NTP stratum of the server. The stratum indicates how far away from an authoritative time source the server is.
<b>Version</b>	NTP version of the server.
<b>Last Receive</b>	Time since the last NTP packet was received from the server.
<b>Synced</b>	Indicates the server chosen for synchronization.

## 56-5 clock set

This command is used to manually set the system clock.

```
clock set HH:MM:SS DDMMYYYY
```

### Parameters

<i>HH:MM:SS</i>	Specifies the current time, in the format of Hour (24-hour): Minute: Second
<i>DDMMYYYY</i>	Specifies the current date. <i>DD</i> - Current day (1-31) in the month. <i>MMM</i> - Current month (jan, feb, mar, apr, may, jun, jul, aug, sep, oct, nov, dec). <i>YYYY</i> - Current year (2000-2100).

<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	Use this command to set the system time to facilitate the management. For devices without hardware clock, the time set by the clock set command takes effect for only the current setting. Once the device powers off, the manually set time becomes invalid. The time specified in this command is relative to the configured time zone.  You can verify your settings by entering the <b>show clock</b> command.

**Example** This example shows how to manually sets the software clock to 1:32 p.m. on December 23, 2011.

```
DXS-3600-32S#clock set 13:32:00 23dec2011
DXS-3600-32S#
```

## 56-6 clock timezone

This command is used to set the time zone for display purposes. To set the time to Coordinated Universal Time (UTC), use the no form of this command.

```
clock timezone HOURS-OFFSET [MINUTES-OFFSET]
no clock timezone
```

### Parameters

<i>HOURS-OFFSET</i>	Specifies the hour difference from UTC.
<i>MINUTES-OFFSET</i>	(Optional) Specifies the minute difference from UTC.

<b>Default</b>	UTC.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	The system internally keeps time in UTC, so this command is used only for display purposes and when the time is manually set.  You can verify your settings by entering the <b>show clock</b> command.

**Example** This example shows how to set the time zone to Pacific Standard Time, which is 8 hours behind UTC.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#clock timezone -8
DXS-3600-32S(config)#
```

## 56-7 clock summer-time

This command is used to configure the system to automatically switch to summer time (daylight saving time). To configure the software not to automatically switch to summer time, use the no form of this command.

```
clock summer-time repeating WEEK WEEKDAY MONTH HH:MM WEEK WEEKDAY MONTH HH:MM [OFFSET]
clock summer-time date DDMMMYYYY HH:MM DDMMMYYYY HH:MM [OFFSET]
no clock summer-time
```

### Parameters

<b>repeating</b>	Specifies that the summer time should start and end on the corresponding specified days every year.
<b>date</b>	Specifies that the summer time should start on the first specific date listed in the command and end on the second specific date in the command.
<i>WEEK</i>	Specifies the week of the month (1 to 5 or last).
<i>WEEKDAY</i>	Specifies the day of the week (sun, mon, tue, wed, thu, fri, sat ).
<i>MONTH</i>	Specifies the month (1-12).
<i>DDMMMYYYY</i>	Specifies the current date. <i>DD</i> - Current day (1-31) in the month. <i>MMM</i> - Current month (jan, feb, mar, apr, may, jun, jul, aug, sep, oct, nov, dec). <i>YYYY</i> - Current year.
<i>HH:MM</i>	Specifies the time in hours (24-hour) and minutes.
<i>OFFSET</i>	Specifies the number of minutes to add during summer time (30-120, default is 60).

<b>Default</b>	Summer time is disabled.
<b>Command Mode</b>	Global Configuration Mode.

**Command Default Level** Level: 8

**Usage Guideline** In both the **date** and **repeating** forms of the command, the first part of the command specifies when summer time begins, and the second part specifies when it ends. All times are relative to the local time zone. The start time is relative to standard time. The end time is relative to summer time. If the starting month is chronologically after the ending month, the system assumes that you are in the southern hemisphere.

You can verify your settings by entering the **show clock** command.

**Example** This example shows how to specify that the summer time starts on the first Sunday in April at 2 a.m. and ends on the last Sunday in October at 2 a.m.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#clock summer-time repeating 1 sun 4 2:00 last sun 10 2:00
DXS-3600-32S(config)#
```

**Example** This example shows how to specify the exact date and time. In the following example, the daylight saving time (summer time) is configured to start on 2011 October 12 at 2 a.m., and end on 2012 April 26 at 2 a.m.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#clock summer-time date 12oct2011 2:00 26apr2012 2:00
DXS-3600-32S(config)#
```

## 56-8 show clock

This command is used to display the time and date from the system clock.

**show clock [detail]**

### Parameters

<b>detail</b>	(Optional) Specifies the clock source (NTP, SNTP, hardware clock, and so on) and the current summer-time setting (if any).
---------------	--

**Default** None.

**Command Mode** Privileged EXEC Mode.

**Command Default Level** Level: 3

**Usage Guideline** Use this command to show clock setting, time zone setting and summer time setting.

**Example** This example shows the output from the **show clock** command.

```
DXS-3600-32S#show clock detail

Current Time Source   : System Clock
Boot Time             : 23 Dec 2011 05:40:42
Current Time          : 23 Dec 2011 06:56:25
Time Zone             : UTC -08:00
Summer Time           : Date
    Date              :
    From               : 12 Oct 2011 02:00
    To                 : 26 Apr 2012 02:00
    Offset In Minutes : 60

DXS-3600-32S#
```



# Spanning Tree Protocol (STP) Commands

## 57-1 spanning-tree (global configuration)

This command is used to enable the STP mode. Use no form to disable STP.

```
spanning-tree
no spanning-tree
```

<b>Parameters</b>	None.
<b>Default</b>	By default, this option is disabled.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	The spanning-tree/no spanning-tree command allows the Spanning Tree Protocol to be globally enabled/disabled on the switch.

**Example** This example shows how to enable STP mode is the default mode.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#spanning-tree

Success

DXS-3600-32S(config)#
5      2000-02-15 00:22:09 INFO(6) Spanning Tree Protocol is enabled
DXS-3600-32S(config)#
```

## 57-2 spanning-tree reset

This command is used to restore the Spanning Tree configuration to the default value. This command does not have the no form.

```
spanning-tree reset
```

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	To reset the STP configuration to default.

**Example** This example shows how to reset the STP configuration to default.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#spanning-tree reset

Success

DXS-3600-32S(config)#
```

## 57-3 spanning-tree (timers)

This command is used to set the value of Spanning-Tree Timers. Use the no form of this command to restore the default value.

```
spanning-tree [hello-time SECONDS | forward-time SECONDS | max-age SECONDS]
no spanning-tree [hello-time SECONDS | forward-time SECONDS | max-age SECONDS]
```

## Parameters

<b>hello-time</b> <i>SECONDS</i>	Specifies the time interval to send one BPDU at the Designated Port. The default setting is 2 seconds. The range is 1 to 2 seconds. <b>Note:</b> This timer cannot be configured in MSTP mode.
<b>forward-time</b> <i>SECONDS</i>	Specifies the maximum time (in seconds) the device will wait before changing states (i.e., from the listening to learning to forwarding). The default setting is 15 seconds. The range is 4 to 30 seconds.
<b>max-age</b> <i>SECONDS</i>	Specifies the maximum aging time (in seconds) of the BPDU message. The default setting is 20 seconds. The range is 6 to 40 seconds.

**Default** The default value of **hello-time** is 2.  
The default value of **forward-time** is 15.  
The default value of **max-age** is 20.

**Command Mode** Global Configuration Mode.

**Command Default Level** Level: 8

**Usage Guideline** There are some constraints on the relationship of the three timers.

Please refer to the following formulas :

- $2 \times (\text{Bridge\_Forward\_Delay} - 1.0 \text{ seconds}) \geq \text{Bridge\_Max\_Age}$
- $\text{Bridge\_Max\_Age} \geq 2 \times (\text{Bridge\_Hello\_Time} + 1.0 \text{ seconds})$

Parameters cannot be applied if the equation is not satisfied.

**Example** This example shows how to configure the STP timer.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#spanning-tree hello-time 1

Success

DXS-3600-32S(config)#spanning-tree forward-time 16

Success

DXS-3600-32S(config)#spanning-tree max-age 21

Success

DXS-3600-32S(config)#
```

## 57-4 spanning-tree tx-hold-count

This command is used to limit the maximum BPDU transmission rate for every port. Use the no form of this command to return the setting to default setting.

**spanning-tree transmit-hold-count** *TX-HOLD-COUNT*  
**no spanning-tree transmit-hold-count**

## Parameters

<b>TX-HOLD-COUNT</b>	Specifies the value to restrict the numbers of BPDU transmitted on a port in the period of a Hello Time. The range is 1 to 10.
----------------------	--

**Default** The default value is 6.

**Command Mode** Global Configuration Mode.

**Command Default Level** Level: 8

**Usage Guideline** This parameter will be commonly used by STP, RSTP, and MSTP.

**Note:** Changing this parameter to a higher value may have a significant impact on CPU utilization, especially in MSTP mode. Lowering this parameter could slow convergence in some scenarios. We recommend that you do not change the value from the default setting.

**Example** This example shows how to configure the **tx-hold-count** value.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#spanning-tree tx-hold-count 5

Success

DXS-3600-32S(config)#
```

## 57-5 spanning-tree max-hops

This command is used to configure the MSTP related **max-hops** timers. Use the no form of this command to return the setting to default setting.

```
spanning-tree max-hops MAX-COUNT
no spanning-tree max-hops
```

### Parameters

<i>MAX-COUNT</i>	Specifies the MSTP maximum hop number. The range is 6 to 40 hops.
------------------	---

**Default** The default value is 20.

**Command Mode** Global Configuration Mode.

**Command Default Level** Level: 8

**Usage Guideline** Use this command to configure the MSTP related **max-hops** timers.

**Example** This example shows how to configure the **max-hops** value.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#spanning-tree max-hops 19

Success

DXS-3600-32S(config)#
```

## 57-6 spanning-tree mode

This command is used to decide the STP mode. To return to the default settings, use the no form of this command.

```
spanning-tree mode {mstp | rstp | stp}
no spanning-tree mode
```

### Parameters

<b>mstp</b>	Specifies to used the Multiple Spanning Tree Protocol (MSTP).
<b>rstp</b>	Specifies to used the Rapid Spanning Tree Protocol (RSTP).
<b>stp</b>	Specifies to used the Spanning Tree Protocol (IEEE 802.1D-Compatible)

<b>Default</b>	The default mode is RSTP.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	<p>If mode is configured as STP or RSTP, all currently running MSTP instances will be cancelled automatically.</p> <p>If the newly configured mode is changed from the previous one, the spanning-tree state machine will restart again, therefore all of the stable spanning-tree port states will transit into discarding states.</p>

**Example** This example shows how to configure the running version of STP module to RSTP.

```

DXS-3600-32S#configure terminal
DXS-3600-32S(config)#spanning-tree mode rstp

Success

DXS-3600-32S(config)#
12      2000-02-15 00:46:00 INFO(6) Spanning Tree version change (new version:RSTP
)
DXS-3600-32S(config)#

```

## 57-7 spanning-tree mst configure

This command is used to enter the MST configuration mode in the global configuration mode and configure the MSTP region. Use the no form of the command to restore all parameters (name, revision, vlan map) to the default values.

**spanning-tree mst configure**  
**no spanning-tree mst configure**

<b>Parameters</b>	None.
<b>Default</b>	By default, all VLANs are mapped to the CIST (instance 0), name is 'bridge mac', and the revision is 0.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 3
<b>Usage Guideline</b>	<p>The MST configuration consists of three main parameters:</p> <ul style="list-style-type: none"> <li>• <b>Instance VLAN mapping</b> - See the instance command</li> <li>• <b>Region name</b> - See the name (MST configuration mode) command</li> <li>• <b>Configuration revision number</b> - See the revision (MST configuration mode) command</li> </ul>

The exit command is used to leave MST configuration mode.

**Example** This example shows how to enter the MST configuration mode in the global configuration.

```

DXS-3600-32S#configure terminal
DXS-3600-32S(config)#spanning-tree mst configure

Success

DXS-3600-32S(config-mst)#

```



## 57-8 instance

This command is used to map a VLAN or a set of VLANs to an MST instance. To return the VLANs to the default instance (CIST), use the **no instance** *INSTANCE-ID* **vlan** *VLANDID* [,].] command. Use the **no instance** *INSTANCE-ID* command to delete an MST instance.

```
instance INSTANCE-ID vlan VLANDID [,].]
no instance INSTANCE-ID [vlan VLANDID [,].]
```

### Parameters

<b>INSTANCE-ID</b>	Specifies the MSTP Instance identifier to which the specified VLANs are mapped. The instance 0 represents for default instance, CIST.
<b>vlan</b> <i>VLANDID</i> [,].]	Specifies the number of the VLANs to be mapped to the specified instance. Valid values are from 1 to 4094.

<b>Default</b>	All VLANs are mapped to the CIST instance in default.
<b>Command Mode</b>	MST Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	This command is used to map VLANs to the MST instance.  When mapping VLAN(s) to a MST instance, if this instance is not exist, this instance will be created automatically. User can use no instance <i>INSTANCE-ID</i> command to delete a MST instance manually.

**Example** This example shows how to map a range of VLANs to instance 2.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#spanning-tree mst configure

Success

DXS-3600-32S(config-mst)#instance 2 vlan 1-100

Success

DXS-3600-32S(config-mst)#
```

## 57-9 name

This command is used to set the name of an MST region. To return to the default name, use the no form of this command.

```
name NAME
no name
```

### Parameters

<i>NAME</i>	Specifies the name given for a specified MST region. The name string has a maximum length of 32 characters.
-------------	---

<b>Default</b>	The default value for name is the Bridge MAC Address.
<b>Command Mode</b>	MST Configuration Mode.
<b>Command Default Level</b>	Level: 8

**Usage Guideline**

Two or more switches with the same VLAN mapping and configuration version number are considered to be in different MST regions if the region names are different.

**Caution:** Be careful when using the name command to set the name of an MST region. If you make a mistake, you can put the switch in a different region. The configuration name is a case-sensitive parameter.

**Example**

This example shows how to configure the MSTP configuration name to 'region1'.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#spanning-tree mst configure

Success

DXS-3600-32S(config-mst)#name region1

Success

DXS-3600-32S(config-mst)#
13 2000-02-15 00:56:55 INFO(6) Spanning Tree MST configuration ID name and revision level
change (name:region1 revision level:0)
DXS-3600-32S(config-mst)#
```

**57-10 revision\_level**

This command is used to set the revision number for the MST configuration. To return to the default settings, use the no form of this command.

```
revision_level REVISION
no revision_level
```

**Parameters**

<i>REVISION</i>	Specifies the same given name with different revision level also represents for different MST region. The range is 0 to 65535.
-----------------	--

**Default**

Default value for revision-level is 0.

**Command Mode**

MST Configuration Mode

**Command Default Level**

Level: 8

**Usage Guideline**

Two or more switches that have the same configuration but different revision numbers are considered to be part of two different regions.

**Caution:** Be careful when using the revision command to set the revision number of the MST configuration because a mistake can put the switch in a different region.

**Example**

This example shows how to configure the revision level of MSTP configuration to 2.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#spanning-tree mst configure

Success

DXS-3600-32S(config-mst)#revision_level 2

Success

DXS-3600-32S(config-mst)#
14 2000-02-15 01:00:08 INFO(6) Spanning Tree MST configuration ID name and revision level
change (name:region1 revision level:2)
DXS-3600-32S(config-mst)#
```

## 57-11 spanning-tree mst

This command is used to set the path cost and port-priority parameters for any MST instance (including the CIST with instance ID 0). To return to the default settings, use the no form of this command.

```
spanning-tree mst INSTANCE-ID {cost COST | port-priority PRIORITY}
no spanning-tree mst INSTANCE-ID {cost | port-priority}
```

### Parameters

<b>INSTANCE-ID</b>	Specifies the MSTP instance identifier. The instance 0 represents for default instance, CIST.
<b>cost</b> <i>COST</i>	(Optional) Specifies the internal path cost for an instance. Valid values are from 0 to 200000000 and 0 means auto.
<b>port-priority</b> <i>PRIORITY</i>	(Optional) Specifies the port priority for an instance. Valid values are from 0 to 240 in increments of 16.

<b>Default</b>	The default port priority is 128.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	Higher cost values indicate higher costs. Smaller port-priority priority values indicate higher priorities.

**Example** This example shows how to set the internal path cost of instance 0.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#spanning-tree mst 0 cost 32

Success

DXS-3600-32S(config-if)#
```

## 57-12 spanning-tree mst priority

This command is used to configure the bridge priority value for the selected MSTP instance. Use the no form of this command to return the setting to default setting.

```
spanning-tree mst INSTANCE-ID priority PRIORITY
no spanning-tree mst INSTANCE-ID priority
```

### Parameters

<i>INSTANCE-ID</i>	Specifies the MSTP instance identifier. The instance 0 represents for default instance, CIST.
<i>PRIORITY</i>	Specifies the bridge priority value must be divisible by 4096. The range is 0 to 61440.

<b>Default</b>	The default value is 32768.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	This command is used to configure the bridge priority for special MST instance.

**Example** This example shows how to configure bridge priority for the MSTP instance 2.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#spanning-tree mst 2 priority 0

Success

DXS-3600-32S(config)#
```

## 57-13 clear spanning-tree detected-protocols

This command is used to restart the protocol migration.

**clear spanning-tree detected-protocols** [*interface* *INTERFACE-ID*]

### Parameters

<b>interface</b> <i>INTERFACE-ID</i>	(Optional) Specifies the port interface that will be triggered the detecting action. If no option is specified, every port is affected by this command.
--------------------------------------	---

**Default** None.

**Command Mode** EXEC Mode.

**Command Default Level** Level: 8

### Usage Guideline

This configuration is only effective for RSTP version or MSTP mode. By issuing the command Port protocol migrating state machine will be forced to SEND\_RSTP state. This action can be used to test whether all legacy bridges on a given LAN have been removed. If there is no STP Bridge on the LAN, the port will be operated in the configured mode, either in RSTP or MSTP mode. Otherwise, the port will be operated in STP mode.

RSTP and MST have built-in compatibility mechanisms that allow them to interact properly with other versions of IEEE spanning tree or other regions. For example, a bridge running RSTP can send 802.1D BPDUs on one of its ports when it is connected to a legacy bridge. An MST bridge can detect that a port is at the boundary of a region when it receives a legacy BPDU or an MST BPDU that is associated with a different region. These mechanisms are not always able to revert to the most efficient mode. For example, an RSTP bridge that is designated for a legacy 802.1D stays in 802.1D mode even after the legacy bridge has been removed from the link. Similarly, an MST port assumes that it is a boundary port when the bridges to which it is connected have joined the same region. To force the MST port to renegotiate with the neighbors, enter the clear spanning-tree detected-protocol command.

If you enter the **clear spanning-tree detected-protocol** command with no arguments, the command is applied to every port of the switch.

**Example** This example shows how to trigger the protocol migration event for port 1.

```
DXS-3600-32S#clear spanning-tree detected-protocols interface tenGigabitEthernet 1/0/1

Success

DXS-3600-32S#
```

## 57-14 spanning-tree (interface configuration)

This command is used to enable the STP mode. Use no form to disable STP.

**spanning-tree**  
**no spanning-tree**

<b>Parameters</b>	None.
<b>Default</b>	The value is disabled in default.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	The spanning-tree/no spanning-tree command allows the Spanning Tree Protocol to be enabled/disabled on the switch interface.

**Example** This example shows how to enable STP on an interface.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#spanning-tree

Success

DXS-3600-32S(config-if)#
```

## 57-15 spanning-tree hello-time

This command is used to configure the MSTP port hello time. Use the no form of this command to return the setting to default setting.

**spanning-tree hello-time SECONDS**  
**no spanning-tree hello-time**

### Parameters

<i>SECONDS</i>	Specifies the time interval to send one BPDU at the Designated Port. The default setting is 2 seconds. The range is 1 to 2 seconds.
----------------	---

<b>Default</b>	The default value is 2.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	The port hello time is only used in MSTP version. This parameter cannot be configured in STP or RSTP version.

**Example** This example shows how to configure the port hello time.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#spanning-tree hello-time 1

Success

DXS-3600-32S(config-if)#
```

## 57-16 spanning-tree externalcost

This command is used to configure the STP port external cost. Use the no form of this command to return the setting to default setting.

**spanning-tree externalcost COST**

**no spanning-tree externalcost****Parameters**


---

<b>COST</b>	Specifies the external cost of interface. Valid values are from 0 to 200000000 and 0 means auto.
-------------	--

---

<b>Default</b>	The default port cost is calculated by port speed.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	This command is used to configure the path cost between MST regions from the transmitting Bridge to the CIST Root Bridge.

**Example** This example shows how to configure the external path cost.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#spanning-tree externalcost 22

Success

DXS-3600-32S(config-if)#
```

**57-17 spanning-tree portfast**

This command is used to enable fast forwarding mode where the interface is immediately put into the forwarding state upon linkup without waiting for the timer to expire.

**spanning-tree portfast [disabled]****Parameters**


---

<b>disabled</b>	Specifies to disable the portfast on the interface.
-----------------	---

---

<b>Default</b>	The default vaule is disabled.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	You should use this command only with interfaces that connect to end stations; otherwise, an accidental topology loop could cause a data-packet loop and disrupt the switch and network operation.
	An interface with portfast mode enabled is moved directly to the spanning-tree forwarding state when linkup occurs without waiting for the standard forward-time delay.

**Example** This example shows how to configure the portfast state.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#spanning-tree portfast

Success

DXS-3600-32S(config-if)#
```

## 57-18 spanning-tree autoedge

This command is used to enable auto-edge on the interface. Use the disabled option of this command to disable auto-edge on the interface.

**spanning-tree autoedge [disabled]**

### Parameters

<b>disabled</b>	Specifies to disable the auto-edge on the interface.
-----------------	--

<b>Default</b>	By default, this option is enabled.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	In auto mode, the bridge will delay for a period to become edge port if no bridge BPDU is received

**Example** This example shows how to configure auto-edge.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#spanning-tree autoedge

Success

DXS-3600-32S(config-if)#
```

## 57-19 spanning-tree guard root

This command is used to the guard mode. To return to the default settings, use the no form of this command.

**spanning-tree guard root**  
**no spanning-tree guard root**

<b>Parameters</b>	None.
<b>Default</b>	By default, this option is disabled.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	<p>BPDU guard prevents a port from being a root port BPDUs. Typically, this feature is used in a service-provider environment where the network administrator wants to prevent a low speed port being a root for the local bridge networks. This configuration will take effect on all the spanning-tree versions.</p> <p>A Boolean value set by management. If TRUE causes the Port not to be selected as Root Port for the CIST or any MSTI, even it has the best spanning tree priority vector. Such a Port will be selected as an Alternate Port after the Root Port has been selected. This parameter should be FALSE by default. If set, it can cause lack of spanning tree connectivity. It is set by a network administrator to prevent bridges external to a core region of the network influencing the spanning tree active topology, possibly because those bridges are not under the full control of the administrator.</p>

**Example** This example shows how to prevent an interface from being a root port.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#spanning-tree guard root

Success

DXS-3600-32S(config-if)#
```

## 57-20 spanning-tree link-type

This command is used to configure the link type of the interface. Use the no form of the command to restore the configuration to the default value.

**spanning-tree link-type [point-to-point | shared]**  
**no spanning-tree link-type**

### Parameters

<b>point-to-point</b>	Specifies to set the link type of the interface to point-to-point.
<b>shared</b>	Specifies to forcibly set the link type of the interface to shared.

**Default** For a full-duplex interface, its link type is set to a point-to-point link. For a half-duplex interface, its link type is set to shared.

**Command Mode** Interface Configuration Mode.

**Command Default Level** Level: 8

**Usage Guideline** A full-duplex port is considered to have a point-to-point connection. On the opposite, a half-duplex port is considered to have a shared connection. The port can't transit into the forwarding state rapidly by setting the link type to shared-media. Hence, the auto-determination of link-type by the STP module is recommended.

This configuration will take effect on all the spanning-tree modes.

**Example** This example shows how to configure link type.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#spanning-tree link-type point-to-point

Success

DXS-3600-32S(config-if)#
```

## 57-21 spanning-tree tc-guard

This command is used to enable the Topology Change guard at the specific interface. Use no form of this command to disable TCN filtering.

**spanning-tree tc-guard**  
**no spanning-tree tc-guard**

**Parameters** None.

**Default** By default, this option is disabled.

**Command Mode** Interface Configuration Mode.



**Command Default Level** Level: 8  
**Usage Guideline** Both of the physical port and port-channel interfaces are valid for this command.

This configuration will take effect on all the spanning-tree modes.

A Boolean value set by management. If TRUE causes the Port not to propagate received topology changenotifications and topology changes to other Ports. This parameter should be FALSE by default. If set it can cause temporary loss of connectivity after changes in a spanning trees active topology as a result opersistent incorrectly learned station location information. It is set by a network administrator to prevent bridges external to a core region of the network, causing address flushing in that region, possibly because those bridges are not under the full control of the administrator or MAC\_Operational for the attached LANs transitions frequently.

**Example** This example shows how to configure TCN filtering.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#spanning-tree tc-guard

Success

DXS-3600-32S(config-if)#
```

## 57-22 show spanning-tree

This command is used to display the global spanning-tree configurations.

**show spanning-tree [summary | forward-time | hello-time | max-age | tx-hold-count | max-hops]**

### Parameters

<b>summary</b>	Displays the information on various instances of MSTP.
<b>forward-time</b>	Displays the forward-time.
<b>hello-time</b>	Displays the hello-time.
<b>max-age</b>	Displays the max-age.
<b>tx-hold-count</b>	Displays the tx-hold-count.
<b>max-hops</b>	Displays the max_hops.

**Default** None.  
**Command Mode** EXEC Mode.  
**Command Default Level** Level: 3  
**Usage Guideline** Show the Spanning-Tree global configuration.

**Example** This example shows how to display the global configuration of STP.

```
DXS-3600-32S#show spanning-tree

StpVersion : RSTP
StpStatus : Disabled
BridgeMaxAge : 21
BridgeHelloTime : 1
BridgeForwardDelay : 16
MaxHops : 19
TxHoldCount : 5

DXS-3600-32S#
```

**Example** This example shows how to display the global configuration of STP summary.

```
DXS-3600-32S#show spanning-tree summary
```

```
StpVersion : RSTP
StpStatus : Disabled
BridgeMaxAge : 21
BridgeHelloTime : 1
BridgeForwardDelay : 16
MaxHops : 19
TxHoldCount : 5
##### MST 0 vlans mapped : 1-4094
BridgeAddr : 0001.0203.0400
Priority : 32768
TimeSinceTopologyChange : 0d:0h:0m:0s
TopologyChanges : 0
DesignatedRoot : 0000.0000.0000.0000
RootCost : 0
RootPort : 0
CistRegionRoot : 0000.0000.0000.0000
CistPathCost : 0
```

```
DXS-3600-32S#
```

**Example** This example shows how to display the global configuration of STP about forward-time.

```
DXS-3600-32S#show spanning-tree forward-time
```

```
BridgeForwardDelay : 16
```

```
DXS-3600-32S#
```

**Example** This example shows how to display the global configuration of STP about hello-time.

```
DXS-3600-32S#show spanning-tree hello-time
```

```
BridgeHelloTime : 1
```

```
DXS-3600-32S#
```

**Example** This example shows how to display the global configuration of STP about max-age.

```
DXS-3600-32S#show spanning-tree max-age
```

```
BridgeMaxAge : 21
```

```
DXS-3600-32S#
```

**Example** This example shows how to display the global configuration of STP about max\_hops.

```
DXS-3600-32S#show spanning-tree max-hops
```

```
MaxHops : 19
```

```
DXS-3600-32S#
```

**Example** This example shows how to the display global configuration of STP about tx-hold-count.

```
DXS-3600-32S#show spanning-tree tx-hold-count
```

```
TxHoldCount : 5
```

```
DXS-3600-32S#
```

## 57-23 show spanning-tree interface

This command is used to show the STP configuration of the interface.

```
show spanning-tree interface INTERFACE-ID [{portfast | link-type}]
```

### Parameters

<b>interface</b> <i>INTERFACE-ID</i>	Displays the STP interface information.
<b>portfast</b>	Displays the STP interface's portfast information
<b>link-type</b>	Displays the STP interface's link-type information.

<b>Default</b>	None.
<b>Command Mode</b>	EXEC Mode.
<b>Command Default Level</b>	Level: 3
<b>Usage Guideline</b>	Show the STP configuration of the interface.

**Example** This example shows the port information.

```
DXS-3600-32S#show spanning-tree interface tenGigabitEthernet 1/0/1
```

```
PortAdminExternalCost : 22
operExternalPortPathCost : 200000
PortAdminPortFast : Disabled
PortAutoEdge : Enabled
PortOperPortFast : Disabled
PortAdminLinkType : point-to-point
PortOperP2PLinkType : point-to-point
PortRootGuard : Enabled
PortTcGuard : Enabled
##### MST 0 vlans mapped : 1-4094
PortState : Disabled
PortPriority : 128
PortDesignatedRoot : 0000.0000.0000.0000
PortDesignatedCost : 0
PortDesignatedBridge : 0000.0000.0000.0000
PortDesignatedPort : 0
PortAdminInternalCost : 32
PortOperInternalCost : 200000
PortRole : Disabled
```

```
DXS-3600-32S#
```

**Example** This example shows the port information about portfast.

```
DXS-3600-32S#show spanning-tree interface tenGigabitEthernet 1/0/1 portfast
```

```
PortAdminPortFast : Disabled
PortOperPortFast : Disabled
PortAdminAutoEdge : Enabled
PortOperAutoEdge : Disabled
```

```
DXS-3600-32S#
```

**Example** This example shows the port information about link-type.

```
DXS-3600-32S#show spanning-tree interface tenGigabitEthernet 1/0/1 link-type

PortAdminLinkType : point-to-point
PortOperP2PLinkType : point-to-point

DXS-3600-32S#
```

## 57-24 show spanning-tree mst

This command is used to display the information of MST and instances.

**show spanning-tree mst {configuration | instance *INSTANCE-ID* [interface *INTERFACE-ID*]}**

### Parameters

<b>configuration</b>	Specifies the MST configuration of the equipment.
<i>INSTANCE-ID</i>	Specifies the instance number.
<b>interface</b> <i>INTERFACE-ID</i>	Specifies the interface number.

<b>Default</b>	None.
<b>Command Mode</b>	EXEC Mode.
<b>Command Default Level</b>	Level: 3
<b>Usage Guideline</b>	Show about MSTP information.

**Example** This example shows the MST configuration,

```
DXS-3600-32S#show spanning-tree mst configuration

Multi spanning tree protocol : Disabled
Name : region1
Revision Level : 2
Instance      VLANS Mapped
-----      -
CIST         1-4094

DXS-3600-32S#
```

**Example** This example shows MSTP port information.

```
DXS-3600-32S#show spanning-tree mst instance 0 interface tenGigabitEthernet 1/0/1
##### MST 0 vlans mapped : 1-4094
PortState : Disabled
PortPriority : 128
PortDesignatedRoot : 0000.0000.0000.0000
PortDesignatedCost : 0
PortDesignatedBridge : 0000.0000.0000.0000
PortDesignatedPort : 0
PortAdminInternalCost : 32
PortOperInternalCost : 200000
PortRole : Disabled

DXS-3600-32S#
```

**Example**

This example shows MSTP instance information.

```
DXS-3600-32S#show spanning-tree mst instance 0
```

```
##### MST 0 vlans mapped : 1-4094  
BridgeAddr : 0001.0203.0400  
Priority : 32768  
TimeSinceTopologyChange : 0d:0h:0m:0s  
TopologyChanges : 0  
DesignatedRoot : 0000.0000.0000.0000  
RootCost : 0  
RootPort : 0  
CistRegionRoot : 0000.0000.0000.0000  
CistPathCost : 0
```

```
DXS-3600-32S#
```

# Storm Control Commands

## 58-1 storm-control

This command is used to enable the storm suppression. Use the no form of the command to disable the storm suppression.

**storm-control** {broadcast | multicast | unicast} {pps *pps-rise* [*pps-low*] | level *level-rise* [*level-low*]}  
**no storm-control** {broadcast | multicast | unicast}

### Parameters

<b>broadcast</b>	Specifies to enable the broadcast storm suppression function on the port.
<b>multicast</b>	Specifies to enable the multicast storm suppression function on the port.
<b>unicast</b>	Specifies to enable the unknown unicast storm suppression function on the port.
<b>pps</b> <i>pps-rise</i> [ <i>pps-low</i> ]	Specifies the threshold as packet count per second at which traffic is received on the port. The range is 1 to 14881000.
<b>level</b> <i>level-rise</i> [ <i>level-low</i> ]	Specifies the threshold as a percentage of total bandwidth per port at which traffic is received on the port. The range is 1 to 100.

<b>Default</b>	The default setting of broadcast, multicast, and unicast storm control are disabled.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	Too many broadcast, multicast or unknown unicast packets received on a port may cause storm and thus slow network.

A device can implement the storm suppression to a broadcast, a multicast, or a unicast storm respectively. When excessive broadcast, multicast or unknown unicast packets are received, the switch temporarily prohibits forwarding of relevant types of packets until data streams are recovered to the normal state (then packets will be forwarded normally).

The low threshold must be equal to or less than the rise threshold suppression value. If don't configure the low threshold, it default equal to rise threshold.

Use **show storm-control** to display configuration. Use **storm-control action** to config action.

#### Note:

1. The **storm-control** option is not supported on a link aggregation port.
2. The **level-based** storm control option has certain errors for the packets in the length of more than 64 bytes. The longer the packet length is, the greater the comparable error value is.

<b>Example</b>	This example shows how to enable the multicast storm suppression on port 1 with a 1000 pps rising suppression and a 500 pps falling suppression.
----------------	--

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#storm-control multicast pps 1000 500
```

Success

```
DXS-3600-32S(config-if)#
```

## 58-2 storm-control action

This command is used to enable the specified action. Use the no form of this command to configure this option to the default settings.

```
storm-control action {block | shutdown | drop}
no storm-control action
```

### Parameters

<b>block</b>	Specifies the <b>storm-control</b> block the flooding of which storm packets when the value specified for rise threshold is reached, and recover the flooding of which storm packets when the value specified for low threshold is falling.
<b>shutdown</b>	Specifies the <b>storm-control</b> to <b>shutdown</b> the port when the value specified for rise threshold is reached.
<b>drop</b>	Specifies the <b>storm-control</b> discard packets that exceed the rise threshold

<b>Default</b>	The default setting of the action is block storm packets.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	If the port shutdown, you must use the <b>no storm-control action</b> or the <b>no storm-control {broadcast   multicast   unicast}</b> commands to recover the port.

**Example** This example shows how to enable the shutdown action on port 1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#storm-control action shutdown

Success

DXS-3600-32S(config-if)#
```

## 58-3 storm-control interval

This command is used to configure the interval time. Use the no form of the command to default time

```
storm-control interval <sec 1-300>
no storm-control interval
```

### Parameters

<b>interval &lt;sec 1-300&gt;</b>	Specifies the time interval that the switch checks the storm. The range of 1 to 300 in seconds.
-----------------------------------	---

<b>Default</b>	The default interval time is 5s.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	In order to maintain the stability of network state, it is recommended to set the time interval of not less than the default value.

**Example**

This example shows how to set the interval time 5s.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#storm-control interval 5

Success

DXS-3600-32S(config)#
```

**58-4 show storm-control**

This command is used to display storm suppression information.

```
show storm-control [interface interface-id] [broadcast | multicast | unicast]
```

**Parameters**

<b>interface</b> <i>interface-id</i>	(Optional) Specifies a port to display storm-control information
<b>broadcast</b>	(Optional) Displays storm-control information for broadcast packets
<b>multicast</b>	(Optional) Displays storm-control information for multicast packets
<b>unicast</b>	(Optional) Displays storm-control information for unicast packets

**Default**

None.

**Command Mode**

Privileged EXEC Mode.

**Command Default Level**

Level: 15

**Usage Guideline**

If you do not specify a port, display all the ports of one traffic type.  
If you do not specify a traffic type, display broadcast storm control.



**Example**

This example shows the storm control information for all interfaces.

```
DXS-3600-32S#show storm-control
```

```
Function Version : 1.01
```

```
Storm Control Statistic Interval: 5(seconds)
```

Interface Type	Lower	Upper	Action	Status
TenGigabitEthernet1/0/1	Broadcast	100 pps	200 pps	Shutdown Normal
TenGigabitEthernet1/0/2	Broadcast	10 %	50 %	Shutdown Shutdown
TenGigabitEthernet1/0/3	Broadcast	50 %	90 %	Drop Drop
TenGigabitEthernet1/0/4	Broadcast	-	-	Block Disabled
TenGigabitEthernet1/0/5	Broadcast	200 pps	500 pps	None None
TenGigabitEthernet1/0/6	Broadcast	-	-	Drop Disabled
TenGigabitEthernet1/0/7	Broadcast	-	-	Drop Disabled
TenGigabitEthernet1/0/8	Broadcast	-	-	Drop Disabled
TenGigabitEthernet1/0/9	Broadcast	-	-	Drop Disabled
TenGigabitEthernet1/0/10	Broadcast	-	-	Drop Disabled
TenGigabitEthernet1/0/11	Broadcast	-	-	Drop Disabled
TenGigabitEthernet1/0/12	Broadcast	-	-	Drop Disabled
TenGigabitEthernet1/0/13	Broadcast	-	-	Drop Disabled
TenGigabitEthernet1/0/14	Broadcast	-	-	Drop Disabled
TenGigabitEthernet1/0/15	Broadcast	-	-	Drop Disabled
TenGigabitEthernet1/0/16	Broadcast	-	-	Drop Disabled
TenGigabitEthernet1/0/17	Broadcast	-	-	Drop Disabled
TenGigabitEthernet1/0/18	Broadcast	-	-	Drop Disabled
TenGigabitEthernet1/0/19	Broadcast	-	-	Drop Disabled
TenGigabitEthernet1/0/20	Broadcast	-	-	Drop Disabled
TenGigabitEthernet1/0/21	Broadcast	-	-	Drop Disabled
TenGigabitEthernet1/0/22	Broadcast	-	-	Drop Disabled
TenGigabitEthernet1/0/23	Broadcast	-	-	Drop Disabled
TenGigabitEthernet1/0/24	Broadcast	-	-	Drop Disabled

```
DXS-3600-32S#
```

**Example**

This example shows the storm control information for a specified type and interface.

```
DXS-3600-32S#show storm-control interface tenGigabitEthernet 1/0/1 multicast
```

```
Function Version : 1.01
```

```
Storm Control Statistic Interval: 5(seconds)
```

Interface Type	Lower	Upper	Action	Status
TenGigabitEthernet1/0/1	Multicast	500 pps	1000 pps	Shutdown Normal

```
DXS-3600-32S#
```

**Display Parameters****Description****Type**

Displays the storm packet type:  
**Broadcast** - broadcast packet.  
**Multicast** - multicast packet.  
**Unicast** - unicast packet.

**Status**

Displays the status of the filter:  
**Normal** - Storm control is enabled, and no storms have occurred  
**Block** - Storm control is enabled, a storm has occurred, and has blocked the storm.  
**Shutdown** - Storm control is enabled, a storm has occurred, and has shutdown the interface.  
**Drop** - Storm control is enabled, discard packets that exceed the rise threshold  
**None** - Storm control is detected, but not filter storm packets.  
**Disabled** - Storm control is disabled.

# Switch Management Commands

## 59-1 login (Console)

This command is used to login to the device.

### login

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	EXEC Mode.
<b>Command Default Level</b>	Level: 1
<b>Usage Guideline</b>	Use the <b>login</b> command to login to the device.

When the user used this command, the DUT will ask the user to input a username and a password depending on the line login configurations.

Syslog information is requested to output, if the username and password is correct.

It will output:

INFO(6) Successful login through Console (Username: %s),  
otherwise output;

WARN(4) Login failed through Console (Username: %s)

### Example

This example shows how to login to the device.

```
DXS-3600-32S#login
Username:admin
Password:*****
DXS-3600-32S#
14 2011-12-23 07:58:18 INFO(6) Logout through Console (Username: admin)
15 2011-12-23 07:58:18 INFO(6) Successful login through Console (Username: ad
min)
DXS-3600-32S#
```

## 59-2 logout

This command is used to logout of the device.

### logout

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	EXEC Mode.
<b>Command Default Level</b>	Level: 1
<b>Usage Guideline</b>	Use the <b>logout</b> command to logout of the device.

### Example

This example shows how to logout of the device.

```
DXS-3600-32S#logout

Switch con0 is now available

Press any key to login...
```

## 59-3 username

This command is used to set a local username database for the purpose of authentication.

```
username name {{nopassword | password {password | encrypted encrypted-password}} | privilege privilege-level}
no username name
```

### Parameters

<b>name</b>	Specifies the name of the access database name.
<b>nopassword</b>	Specifies to identify that no password will be set.
<b>password</b> {password   <b>encrypted</b> encrypted-password}	<b>password</b> - Specifies to identify the plain text password. <b>encrypted</b> - Specifies to identify that the password entered is encrypted. <i>encrypted-password</i> - Specifies to identify that the password entered is a encrypted password. Consists out of 1-26 letters in upper/lower case and numerals. Leading spaces are allowed but ignored. Spaces in between or at the end are regarded as part of the password.
<b>privilege</b> <i>privilege-level</i>	Specifies to identify the privilege level that will be entered when you use this username to login. If not specified, the privilege level is 1.

<b>Default</b>	By default, there is no username or password configured on this switch.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	This command is used to create a local user database for the purpose of authentication.

**Example** This example shows how to create a username and password.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#username user password 12345
DXS-3600-32S(config)#
```

## 59-4 login local

This command is used to set the line login method.

```
login local
no login local
```

<b>Parameters</b>	None.
<b>Default</b>	By default, this option is disabled.
<b>Command Mode</b>	Line Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	When a user wants to use a username to enter the device on any line, we need to set the login method as login local. If no username was created, the interface will notify the user that no username is configured after which the switch will login automatically without asking for a username and a password.

**Example** This example shows how to

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#line console
DXS-3600-32S(config-line)#login local
DXS-3600-32S(config-line)#
```

## 59-5 password

This command is used to create a password used on the line interface. The no form of this command will disable the use of a password.

```
password {password | encrypted encrypted-password}
no password
```

### Parameters

<b>password</b>	Specifies to identify the plain text password.
<b>encrypted</b>	Specifies to identify that the password entered is encrypted.
<i>encrypted-password</i>	Specifies the encrypted password used. This password must be between 1 to 26 characters long. Leading spaces will be ignored and spaces in between or at the end are regarded as part of the password.

**Default** By default, there is no password specified.

**Command Mode** Line Configuration Mode.

**Command Default Level** Level: 15

**Usage Guideline** None.

**Example** This example shows how to create a password of '12345'.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#line console
DXS-3600-32S(config-line)#password 12345
DXS-3600-32S(config-line)#
```

## 59-6 login (Line)

This command is used to configure the line login method

```
login
no login
```

**Parameters** None.

**Default** By default, no login is configured.

**Command Mode** Line Configuration Mode.

**Command Default Level** Level: 15

**Usage Guideline** None.

**Example** This example shows how to use the line login command.

```
DXS-3600-32S(config-line)#login
DXS-3600-32S(config-line)#
```

## 59-7 enable

This command is used to enter a privilege level.

```
enable [privilege-level]
```

**Parameters**


---

<i>privilege-level</i>	Specifies the privilege level used. If this value is not specified, then the default privilege level value will be used.
------------------------	--

---

**Default** The default privilege level is 15.

**Command Mode** EXEC Mode.

**Command Default Level** Level: 1

**Usage Guideline** When a user finds that some commands cannot be executed because the current level is lower than command's required level, the user can use this command to login to a higher level. If the privilege level have a password configured, the user needs to input the required password before access to the higher privilege level will be given. If the user inputs the incorrect password three times, the switch will stop requesting the user to input the password and return to current privilege level.

**Example** This example shows how to enable the privilege level of 15.

```
DXS-3600-32S>enable 15
DXS-3600-32S#
```

**59-8 disable**

This command is used to leave a privilege level.

**disable** [*privilege-level*]

**Parameters**


---

<i>privilege-level</i>	Specifies the privilege level used. If this value is not specified, then the default privilege level value will be used.
------------------------	--

---

**Default** The default privilege level is 1.

**Command Mode** EXEC Mode.

**Command Default Level** Level: 1

**Usage Guideline** None.

**Example** This example shows how to leave the privilege level.

```
DXS-3600-32S#disable
DXS-3600-32S>
```

**59-9 enable password**

This command is used to create a privilege level password.

**enable password** [*level privilege-level*] {*password* | **encrypted** *encrypted-password*}

**no enable password** [*level privilege-level*]

**Parameters**


---

<b>level</b> <i>privilege-level</i>	Specifies the privilege level used. If not specified, the privilege level will set to 15.
<b>password</b>	Specifies that a plain text password will be used.
<b>encrypted</b>	Specifies that the password will be encrypted.

---

---

<i>encrypted-password</i>	Specifies the encrypted password used. This password can be up to 26 characters long. Spaces will be ignored, however, if there is spaces before and after the password, they will be considered part of the password.
---------------------------	--

---

**Default** No password encryption is applied.

**Command Mode** Global Configuration Mode.

**Command Default Level** Level: 15

**Usage Guideline** None.

**Example** This example shows how to enable a password with the privilege level of 15.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#enable password level 15 12345
DXS-3600-32S(config)#
```

---

## 59-10 service password-encryption

This command is used to encrypt the password used. The no form of this command restores to the default value.

**service password-encryption**  
**no service password-encryption**

**Parameters** None.

**Default** By default, no encryption is applied.

**Command Mode** Global Configuration Mode.

**Command Default Level** Level: 15

**Usage Guideline** Various passwords are displayed in the form of plain text, unless it is directly configured in the cipher text form. After executing the **service password-encryption** command, the password will transform into ciphered text.

**Example** This example shows how to encrypt the password used.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#enable password level 15 12345
DXS-3600-32S(config)#service password-encryption
DXS-3600-32S(config)#
```

---

## 59-11 show privilege

This command is used to display the current privilege level used.

**show privilege**

**Parameters** None.

**Default** None.

**Command Mode** EXEC Mode.

**Command Default Level** Level: 1

**Usage Guideline** None.

**Example** This example shows how to display the privilege level used.

```
DXS-3600-32S#show privilege
Current privilege level is 15
DXS-3600-32S#
```

---

## 59-12 privilege

This command is used to change the command string execution rights to a specific level. The no form of this command restores the command string, on this mode execution, to its default rights.

```
privilege mode {level privilege-level | reset} command-string
no privilege mode command-string
```

### Parameters

<i>mode</i>	Specifies the CLI mode of the command in which the execution rights are attributed.
<b>level</b> <i>privilege-level</i>	Specifies the execution right level (1–15) of a command.
<b>reset</b>	Specifies to restore the command execution rights to its default level.
<i>command-string</i>	Specifies the command string of the level that will be changed. All the commands beginning with this string will be changes.

<b>Default</b>	No privilege.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	Privilege is used to attribute the rights of the command string to a command level.

**Example** This example shows how to attribute the command config terminal to level 12.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#privilege exec level 12 configure terminal
DXS-3600-32S(config)#
```

# Syslog Commands

## 60-1 logging on

This command is used to turn on logging of system messages. Use no form of this command to turn off the logging.

**logging on**  
**no logging on**

<b>Parameters</b>	None.
<b>Default</b>	By default, this option is enabled.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	The logging of system messages must be enabled in order for the system messages to be logged to the local logging buffer, external log file or the remote host. If logging is turned off, no log will be displayed or recorded unless the severity level is greater than 1 such as: Console, VTY window, Memory buffer, Flash and syslog host.

**Example** This example shows how to turn on logging of system messages.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#logging on
DXS-3600-32S(config)#
```

## 60-2 logging server

This command is used to send system log messages to a remote syslog server. Use no form of the command to disable logging to syslog servers.

**logging server** *IP-ADDRESS* [**vrf** *VRF-NAME*]  
**no logging server** *IP-ADDRESS* [**vrf** *VRF-NAME*]

### Parameters

<i>IP-ADDRESS</i>	Specifies the IP address of the syslog server.
<b>vrf</b> <i>VRF-NAME</i>	Specifies the name of the routing forwarding instance.

<b>Default</b>	By default, don't send system log messages to syslog server.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	To send the system log messages to the remote syslog server, the user should use the <b>logging on</b> command to enable the logging function and use the <b>logging server</b> command to configure the remote syslog server.  Up to 4 syslog servers can be configured. The system log messages will be sent to all configured syslog servers at the same time.

**Example** This example shows how to enable the logging of system messages to the remote syslog server 10.90.90.4.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#logging on
DXS-3600-32S(config)#logging server 10.90.90.4 vrf 123
DXS-3600-32S(config)#
```



## 60-3 logging console

This command is used to set the severity of logs that are allowed to be displayed on the console. The no format of the command disable show log on console.

**logging console** *LEVEL*  
**no logging console**

### Parameters

<i>LEVEL</i>	Specifies the severity of log messages, 0 to 7. The name of the severity or the numeral can be used.
--------------	--

<b>Default</b>	Debugging level.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	When a log severity is set here, the log messages at or below that severity will be displayed on the console.

The following table is description about the level:

Severity	Level	Description
Emergency	0	System is unusable.
Alert	1	Action must be taken immediately.
Critical	2	Critical conditions.
Error	3	Error conditions.
Warning	4	Warning conditions.
Notice	5	Normal but significant condition.
Information	6	Information messages.
Debug	7	Debug-level messages.

**Example** This example shows how to set the severity of the log, that is allowed to be displayed on the console, as 6:

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#logging console informational
DXS-3600-32S(config)#
```

## 60-4 logging trap

This command is used to set the severity of logs that are allowed to be send to the syslog server. The no format of the command disable send log to syslog server.

**logging trap** *LEVEL*  
**no logging trap**

### Parameters

<i>LEVEL</i>	Specifies the severity of log messages, 0 to 7. The name of the severity or the numeral can be used.
--------------	--

<b>Default</b>	Informational level.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 15

**Usage Guideline** To send logs to the syslog server, execute first the global configuration command logging server to configure syslog server. Then, execute logging trap to specify the severity of logs to be sent. The show logging command displays the related setting parameters and statistics of the log.

**Example** This example shows how to enable logs at severity 6 to be sent to the syslog server at address 10.90.90.4

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#logging server 10.90.90.4
DXS-3600-32S(config)#logging trap 6
DXS-3600-32S(config)#
```

## 60-5 logging source

This command is used to configure the source IP address of logs. The no format of the command cancel the specified source's configuration.

**logging source** {interface *INTERFACE-ID* | *IP-ADDRESS*}  
**no logging source**

### Parameters

<b>interface</b> <i>INTERFACE-ID</i>	Specifies the interface which IP address that will be used as source to send logs to log server
<i>IP-ADDRESS</i>	Specifies the source IPV4 address that will be used as source to send logs to log server.

**Default** None.

**Command Mode** Global Configuration Mode.

**Command Default Level** Level: 15

**Usage Guideline** By default, the source address of the log messages sent to the syslog server is the address of the sending interface. For easy tracing and management, this command can be used to fix the source address of all log messages as an interface address, so that the administrator can identify which device is sending the message through the unique addresses.

**Example** This example shows how to specify VLAN 1 as the source interface of the syslog messages.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#logging source interface vlan 1
DXS-3600-32S(config)#
```

## 60-6 logging facility

This command is used to configure the log device. The no format of the command restores it to the default device value.

**logging facility** *FACILITY-TYPE*  
**no logging facility**

### Parameters

<i>FACILITY-TYPE</i>	Specifies the Syslog device value.
----------------------	------------------------------------

<b>Default</b>	Local7.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	A list of facility descriptions and their respective codes are listed below:

Numerical code	Facility
0	Kernel messages
1	User-level messages
2	Mail system
3	System daemons
4	Security/authorization messages
5	Messages generated internally by syslogd
6	Line printer sub-system
7	Network news sub-system
8	UUCP sub-system
9	Clock daemon
10	Security/authorization messages
11	FTP daemon
12	NTP sub-system
13	Log audit
14	Log alert
15	Clock daemon
16	Local use 0 (local0)
17	Local use 1 (local1)
18	Local use 2 (local2)
19	Local use 3 (local3)
20	Local use 4 (local4)
21	Local use 5 (local5)
22	Local use 6 (local6)
23	Local use 7 (local7)

**Example** This example shows how to set the facility as local1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#logging facility local1
DXS-3600-32S(config)#
```

## 60-7 logging count

This command is used to enable the log statistics function. The no format of the command deletes the log statistics and disables the statistics function.

**logging count**  
**no logging count**

<b>Parameters</b>	None.
<b>Default</b>	By default, this option is disabled.
<b>Command Mode</b>	Global Configuration Mode.

---

<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	This command enables the log statistics function. The statistics begins when the function is enabled. If you run no logging count, the statistics function is disabled and the statistics data is deleted.
<b>Example</b>	This example shows how to enable the log statistics function.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#logging count
DXS-3600-32S(config)#
```

---

## 60-8 clear logging

This command is used to clear the logs from the buffer.

### clear logging

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	This command clears the log packets from the memory buffer. You cannot clear the statistics of the log packets.

**Example** This example shows how to clear the log packets from the memory buffer.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#clear logging
DXS-3600-32S(config)#
```

---

## 60-9 show logging

This command is used to display the logs in the buffer.

### show logging

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	EXEC Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	This command only allows you to view the log files. You cannot use this command to view other non-log files.

**Example**

This example shows the result of the show logging command.

```
DXS-3600-32S#show logging
Syslog Logging: Enabled
Console Logging: Level Informational
Buffer Logging: Level Debugging
Trap Logging: Level Informational
Facility: local1
logging to 10.90.90.4
Logging File Write Delay: On_demand

Syslog Source IP Interface Configuration:
IP Interface : vlan1
IPv4 Address : 192.168.69.123
DXS-3600-32S#
```

**60-10 show logging count**

This command is used to show the log statistics.

**show logging count**

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	EXEC Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	To use the log packet statistics function, run logging count in the global configuration mode. The show logging count can show the information of a log.

**Example**

This example shows the log statistics.

```
DXS-3600-32S#show logging count
Total logging Count: 0
DXS-3600-32S#
```

**60-11 logging buffered**

This command is used to set the memory buffer parameters for logs. The no form of the command disables recording logs in memory buffer.

```
logging buffered [LEVEL] | [write-delay {SECONDS | INFINITE}]
no logging buffered
```

**Parameters**

<i>LEVEL</i>	Specifies the severity of log messages, 0 to 7. The name of the severity or the numeral can be used.
<i>SECONDS</i>	Specifies the minutes interval to write logs in the flash.
<i>INFINITE</i>	Specifies that the logs are not recorded in the flash.

<b>Default</b>	Default level : Debugging(7). Default will log to buffer and disable periodical writing of the logging buffer to FLASH.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 15

**Usage Guideline**

The memory buffer for the log is used in a recycled manner. That is, when it is full, the oldest information will be overwritten. The content of the logging buffer will be saved to the FLASH periodically if the interval time is specified, so the message can be restored on reboot. To show the log information in the memory buffer, run **show logging** at the privileged user level.

As lower values indicate higher levels, level 0 indicates the information of the highest level. When the level of log information to be displayed on a specified device, the log information is at or below the set level will not be displayed.

**Example**

This example shows how to disable record logs into flash.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#logging buffered write-delay infinite
DXS-3600-32S(config)#
```

---

**60-12 save log**

This command is used to save the log.

**save log****Parameters**

None.

**Default**

None.

**Command Mode**

Global Configuration Mode.

**Command Default Level**

Level: 15

**Usage Guideline**

As log entries are created and store in the DRAM, a log message may be lost while powering down the switch. To avoid the loss of log entries, the administrator needs save the log into the NVRAM via UI or use the periodical save command to save the log to the NVRAM.

**Example**

This example shows the command of **save log**.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#save log

Saving all system logs to NV-RAM..... Done.

DXS-3600-32S(config)#
1      2011-12-23 17:35:27 INFO(6) System log saved to flash by console (Username
: Anonymous)
DXS-3600-32S(config)#
```

# TACACS+ Commands

## 61-1 tacacs-server host

This command is used to configure the IP address of TACACS+ server host. The no form of this command without parameters is used to delete the TACACS+ server host. The no form of this command with the parameters is used to restore the specified parameter to default value.

```
tacacs-server host ip-address [port integer] [timeout integer] [key string]  
no tacacs-server host ip-address [port | timeout | key]
```

### Parameters

<i>ip-address</i>	Specifies the IP address of the TACACS+ server host.
<b>port</b> <i>integer</i>	Specifies the TCP port used in TACACS+ communication. The range is 1 to 65535. If unspecified, the port number defaults to 49.
<b>timeout</b> <i>integer</i>	Specifies the timeout value of the TACACS+ host. The range is 1 to 1000s.
<b>key</b> <i>string</i>	Specifies the shared keyword of the TACACS+ client and server. The maximum length of the key is 254.

<b>Default</b>	No specified TACACS+ host.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	To use TACACS+ to implement AAA security service, you must define TACACS+ secure server. You can define one or multiple TACACS+ secure servers by using <b>tacacs-server</b> .

**Example** This example shows how to define a TACACS+ secure server host.

```
DXS-3600-32S#configure terminal  
DXS-3600-32S (config)#tacacs-server host 192.168.12.1  
DXS-3600-32S (config)#
```

## 61-2 tacacs-server key

This command is used to configure global password of TACACS+.

```
tacacs-server key string  
no tacacs-server key
```

### Parameters

<i>string</i>	Specifies the text of the shared password. The maximum length of the key is 254.
---------------	--

<b>Default</b>	No specified shared password.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	The device and TACACS+ secure server communicates with each other successfully on the basis of the shared password. Therefore, in order to make the device and TACACS+ secure server communicate with each other, the same shared password must be defined on both of them. When we need to specify different passwords to every server, use key option in host command. We can set a key to all the servers that have not set key option in global configuration mode.

**Example** This example shows how to define the shared password of the TACACS+ secure server as 'aaa'.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#tacacs-server key aaa
DXS-3600-32S(config)#
```

### 61-3 tacacs-server timeout

This command is used to configure the global timeout time waiting for the server when communicating with TACACS+ server.

**tacacs-server timeout** *seconds*  
**no tacacs-server timeout**

#### Parameters

<i>seconds</i>	Specifies the timeout value used. The range is from 1 to 1000 seconds.
----------------	--

<b>Default</b>	5 seconds.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	Use this command to adjust the timeout time of reply packet. When we need to specify different timeout time to every server, use timeout option in host command. We can set a timeout to all the servers that have not set timeout option in global configuration mode.

**Example** This example shows how to define the timeout time as 10 sec.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#tacacs-server timeout 10
DXS-3600-32S(config)#
```

### 61-4 show tacacs statistics

This command is used to show the interoperation condition with each TACACS+ server.

**show tacacs statistics**

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	Use this command to show the interoperation condition with each TACACS+ server.



**Example** This example shows how to display all the server groups configured for TACACS+.

```
DXS-3600-32S#show tacacs statistics
```

```
TACACS+ Server: 192.168.12.1/49
Socket Opens: 0
Socket Closes: 0
Total Packets Sent: 0
Total Packets Recv: 0
Reference Count: 0
```

```
DXS-3600-32S#
```

Display Parameters	Description
<b>TACACS+ Server</b>	IP address of the TACACS+ server.
<b>Socket Opens</b>	Number of successful TCP socket connections to the TACACS+ server.
<b>Socket Closes</b>	Number of successfully closed TCP socket attempts.
<b>Total Packets Sent</b>	Number of packets sent to the TACACS+ server.
<b>Total Packets Recv</b>	Number of packets received from the TACACS+ server.
<b>Reference Count</b>	Number of authentication requests from the TACACS+ server.

## 61-5 show tacacs-server configuration

This command is used to display the TACACS+ server configuration.

### show tacacs-server configuration

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	Use this command to show all TACACS+ server hosts.

**Example** This example shows the output for the show TACACS+ server hosts command.

```
DXS-3600-32S#show tacacs-server configuration
```

```
IP-Address      Port Key                               Timeout
-----
192.168.12.1    49
Default Key:aaa
Default Timeout:10

1 TACACS+ server(s) in total
```

```
DXS-3600-32S#
```

Display Parameters	Description
<b>IP-Address</b>	IP address of TACACS+ server host.
<b>Port</b>	TCP port used in TACACS+ communication.
<b>Key</b>	Shared keyword of TACACS+ client and server.
<b>Timeout</b>	Timeout time of TACACS+ host, the unit is seconds.
<b>Default Key</b>	Global password of TACACS+.

<b>Display Parameters</b>	<b>Description</b>
<b>Default Timeout</b>	The global timeout time waiting for the server when communicating with TACACS+ server.

---

# TELNET Commands

## 62-1 ip telnet server enable

This command is used to enable the TELNET server on the switch. Use the no form of this command to disable the TELNET server on the switch.

```
ip telnet server enable
no ip telnet server enable
```

<b>Parameters</b>	None.
<b>Default</b>	By default the TELNET server is enabled.
<b>Command Mode</b>	Global Configure Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	This command enables the TELNET server service on the switch. It allows communication with and management of the switch using the TELNET protocol.

**Example** This example shows how to enable the TELNET server on the switch.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#ip telnet server enable
DXS-3600-32S(config)#
```

## 62-2 telnet

This command is used to TELNET to a remote server and manage it through the TELNET protocol.

```
telnet <ip-address> [port]
telnet [vrf <string 1-12>] <ip-address> [port]
```

### Parameters

<i>vrf &lt;string 1-12&gt;</i>	Specifies the VRF of the TELNET server. If the parameter is not specified, it indicates the global routing forward space.
<i>ip-address</i>	Specifies the IPv4 address of the destination end station.
<i>port</i>	Specifies the TCP port number of the TELNET server.

<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 2
<b>Usage Guideline</b>	This command is used to TELNET to a remote server and manage it through the TELNET protocol

**Example** This example shows how to TELNET to a remote server.

```
DXS-3600-32S#telnet 10.90.90.91
```

## 62-3 show ip telnet server

This command is used to display the TELNET server information.

```
show ip telnet server
```

<b>Parameters</b>	None.
-------------------	-------

<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	This command is used to display the TELNET server information.
<b>Example</b>	This example shows how to display the TELNET server information.

```
DXS-3600-32S#show ip telnet server
```

```
Server State      : Enabled
```

```
DXS-3600-32S#
```

# Time Range Commands

## 63-1 time-range

This command is used to enter the Time Range configuration mode in the global configuration mode. To delete a time range, use the `no` form of this command.

```
time-range <range_name 32>
no time-range <range_name 32>
```

### Parameters

---

<code>range_name 32</code>	Specifies the time range name string in the range of 1 to 32.
----------------------------	---

---

<b>Default</b>	None.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	In the time range configuration mode, the time range can be configured periodically.  Use the <b>no time-range</b> command to delete the time range. If the time range is binded to an ACL profile or a PoE port (if PoE is supported), the deletion will fail.

**Example** This example shows how to enter time range configure mode.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#time-range a
DXS-3600-32S(config-time-range)#
```

**Example** This example shows how to delete a time range.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#no time-range a
Success
DXS-3600-32S(config)#
```

## 63-2 periodic

This command is used to configure the time range.

```
periodic <daylist> HH:MM to HH:MM
```

### Parameters

---

<code>daylist</code>	Specifies the day list string used. Options to choose from are sun, mon, tue, wen, thu, fri and sat.
<code>HH:MM</code>	Specifies the start or end time used. The range is from 00:00 to 23:59.

---

<b>Default</b>	The maximum number of the time range is 64.
<b>Command Mode</b>	Time Range Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	This command configures the time range. If the time range already exists, this command will modify the configuration. If not, this command will add a time range.  To verify your configuration, use <b>show time-range</b> .

**Example** This example shows how to configure a new time range called time1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#time-range time1
DXS-3600-32S(config-time-range)#periodic sun-tue 1:00 to 2:00
Success
DXS-3600-32S(config-time-range)#
```

---

### 63-3 show time-range

This command is used to display all existing time ranges.

**show time-range**

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 4
<b>Usage Guideline</b>	None.

**Example** This example shows how to display all existing time range.

```
DXS-3600-32S#show time-range

Time Range Information
-----
Range Name      :  time1
Weekdays       :  Sun,Mon,Tue
Start Time      :  01:00
End Time        :  02:00

Total Entries :1

DXS-3600-32S#
```

---

# Traffic Segmentation Commands

## 64-1 switchport protected unidirectional

This command is used to enable the interface isolated to a specified interface list for unidirectional protected. Use the no form of the command to disable the interface isolated to a specified interface list.

**switchport protected unidirectional** {*interface-type interface-list*}  
**no switchport protected unidirectional** [*interface-type interface-list*]

### Parameters

<i>interface-type</i>	Specifies the interface type, such as fastEthernet, gigabitEthernet and tenGigabitEthernet.
<i>interface-list</i>	Specifies the interface list.

<b>Default</b>	The main interface is not isolated.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	<p>After the interface is isolated to a specified interface, the interface can not switch on L2 and route on L3 to the specified interface. But the specified interface to it has no limit.</p> <p>If not specified, all interfaces will be included.</p> <p>Use the <b>show protected-ports</b> command to display unidirectional configuration.</p>

**Example** This example shows how to enable the port 1 isolated to port 2-6.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#switchport protected unidirectional tenGigabitEthernet 1/0/2-1/0/6

Success

DXS-3600-32S(config-if)#
```

## 64-2 show protected-ports

This command is used to display the switch port's protected configuration information.

**show protected-ports interface** *interface-id*

### Parameters

<b>interface</b> <i>interface-id</i>	Displays the specified interface's unidirectional isolated information.
--------------------------------------	---

<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	This command is used to display the switch port's protected configuration information.

**Example**

This example shows how to display the switch port's protected unidirectional information for interface 1.

```
DXS-3600-32S#show switchport protected interface tenGigabitEthernet 1/0/1
Function Version: 1.01

Interface      Unidirectional Portlist
-----
TenGigabitEthernet1/0/1      1:2, 1:4-1:26
DXS-3600-32S#
```



# Upgrade and Maintenance Commands

## 65-1 copy

This command is used to upgrade and maintain the switch by use of the TFTP protocol for uploads and downloads.

**copy flash:** *filename* **tftp://location/***filename*  
**copy tftp://location/***filename* **flash:** *filename*

### Parameters

<i>filename</i>	Specifies the file name used.
<i>//location/filename</i>	Specifies the file's location or the server IP address.

<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	If the file is transmitted successfully, show the length of the transmitted file. Otherwise, show the failure information. Only configuration and firmware files can be transmitted by TFTP.

**Example** This example shows how to download a firmware named "firmware.had" from a TFTP server.

```
DXS-3600-32S#copy tftp: //192.168.0.27/firmware.had flash: run.had

Address of remote host [192.168.0.27]
Source filename [firmware.had]
Destination filename [run.had]
Accessing tftp://192.168.0.27/ firmware.had...
Transmission start...
Transmission finished, file length 5156864 bytes.
Please wait, programming flash... Done

DXS-3600-32S#
```

**Example** This example shows how to upload a firmware to a TFTP server.

```
DXS-3600-32S#copy flash: run.had tftp: //192.168.0.27/firmware.had

Source filename [run.had]
Address of remote host [192.168.0.27]
Destination filename [firmware.had]
Accessing tftp://192.168.0.27/firmware.had...
Transmission start...
Transmission finished, file length 5156864 bytes.

DXS-3600-32S#
```

## 65-2 boot system

This command is used to configure the specific firmware as the boot up image.

**boot system flash** *filename*

### Parameters

<i>filename</i>	Specifies the file name used.
-----------------	-------------------------------

<b>Default</b>	None.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	By default, the switch attempts to automatically boot the system using the information in the BOOT environment variable. If this variable is not set, the switch attempts to load and execute the first executable image.

**Example** This example shows how to configure the 'firmware.had' file as the boot up image.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#boot system flash firmware.had
DXS-3600-32S(config)#
```

---

## 65-3 show bootup

This command is used to display the boot up file information.

### show bootup

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 3
<b>Usage Guideline</b>	Used to display the boot up file information.

**Example** This example shows how to display the boot up file information.

```
DXS-3600-32S#show bootup

Bootup Firmware : /c:/runtime.had
Bootup Configuration : /c:/y

DXS-3600-32S#
```

---

# Virtual LAN (VLAN) Commands

## 66-1 vlan

This command is used to create VLANs and enter the VLAN configuration mode. Use the **no vlan** configuration command to remove VLANs.

```

vlan VLAN-ID [, |-]
no vlan VLAN-ID [, |-]

```

### Parameters

<i>VLAN-ID</i>	Specifies the ID of the VLAN to be created, removed or configured. The valid VLAN ID range is from 1 to 4094. The default VLAN with VLAN ID 1 can not be removed.
,	Specifies a series of VLANs, or separate a range of VLANs from a previous range. No space is required before and after the comma.
-	(Optional) Specifies a range of VLANs. No space is required before and after the hyphen.

### Default

VLAN ID 1 exists in the system as the default VLAN.

### Command Mode

Global Configuration Mode.

### Command Default Level

Level: 12

### Usage Guideline

This command can be used to create VLANs. Entering the `vlan` command with a VLAN ID enters VLAN configuration mode. Entering the VLAN ID of an existing VLAN does not create a new VLAN, but allows the user to modify VLAN parameters for the specified VLAN. When the user enters the VLAN ID of a new VLAN, the VLAN will be automatically created. If the new VLAN is a port allowed VLAN, the port will join to the new VLAN automatically.

The user can use the **no vlan** command to remove VLANs. The default VLAN cannot be removed. The dynamic VLAN that is created through GVRP cannot be removed through this command. If the VLAN is used as ERPS R-APS VLAN, RSPAN VLAN, voice VLAN, subnet VLAN or MAC-based VLAN, it cannot be removed too.

Removing VLAN doesn't remove the association of the VLAN with its static member ports. Once the VLAN is re-created, these ports will join into it automatically.

The learned dynamic FDB entries in the removed VLAN will be cleared. The static FDB entries in this VLAN will not be removed.

If the removed VLAN is a private VLAN, the configuration for the private VLAN will be cleared.

If the removed VLAN is a port's access VLAN, the port's access VLAN will be reset to VLAN 1.

If the VLAN is used as protocol VLAN or VLAN translation, removing it doesn't affect the VLAN assignment.

If the VLAN is used as super VLAN or L3 interface, removing it will lead to these functions become unavailable until this VLAN is re-created.

**Example** In the following example, the user adds a new VLAN, assigning the new VLAN with the VLAN IDs 1000 to 1005.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#vlan 1000-1005
DXS-3600-32S(config-vlan)#
```

**Example** In the following example, the user removes the existing VLANs with the VLAN IDs.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#no vlan 1000-1005
DXS-3600-32S(config)#
```

## 66-2 name

This command is used to specify the name of a VLAN. Use the **no name** command to reset the VLAN name to the default VLAN name.

```
name VLAN-NAME
no name
```

### Parameters

<i>VLAN-NAME</i>	Specifies the VLAN name. This name is an ASCII string from 1 to 32 characters that must be unique within the administrative domain. The syntax is a general string that does not allow spaces.
------------------	--

**Default** The default VLAN name is VLANxxxx, where xxxx represents four numeric digits (including the leading zeros) that are equal to the VLAN ID.

**Command Mode** VLAN Configuration Mode.

**Command Default Level** Level: 12

**Usage Guideline** The user can use the name *VLAN-NAME* VLAN configuration command to specify a VLAN name. The VLAN name length must be between 1 and 32 characters, and it must be unique within the administrative domain.

**Example** In the following example, the user configures the VLAN name of VLAN 1000 to be "admin-vlan".

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#vlan 1000
DXS-3600-32S(config-vlan)#name admin-vlan
DXS-3600-32S(config-vlan)#
```

## 66-3 switchport mode

This command is used to specify the VLAN mode for the port. Use **no switchport** command to reset the VLAN mode to default setting.

```
switchport mode {access | hybrid | trunk | dot1q-tunnel}
no switchport mode
```

### Parameters

<b>access</b>	Specifies the port as an access port.
<b>hybrid</b>	Specifies the port as a hybrid port.
<b>trunk</b>	Specifies the port as a trunk port.

---

<b>dot1q-tunnel</b>	Specifies the port as a dot1q-tunnel port.
---------------------	--

---

<b>Default</b>	Access mode.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	The valid interfaces for this command are physical ports or link aggregation groups.

When the port changes the VLAN mode, the VLAN membership setting related to the previous mode will be lost. The PVID is set to default value too. If setting the port mode to access or dot1q tunnel, the GVRP status of the port will be disabled.

The user can specify the access VLAN for an access port. On an access port, only untagged packets are processed, they are transmitted and received on the access VLAN. The user can specify multiple VLANs for a trunk port. Packets on a trunk port are received and transmitted on trunk VLANs in tagged form. The user can specify multiple VLANs for a hybrid port. Packets on a hybrid can be received and transmitted in tagged form or untagged form.

Creating a link aggregation doesn't need the VLAN setting of its member ports are same as. The VLAN setting of the new link aggregation is default value. The VLAN setting of member ports become inactive. Once a member port is removed from the link aggregation group, its VLAN setting becomes active again.

**Example** This example shows how to set an interface port 1 as a trunk port.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#switchport mode trunk
DXS-3600-32S(config-if)#
```

---

## 66-4 switchport access vlan

This command is used to specify the access VLAN for the interface. Use **no switchport access vlan** interface command to reset to default setting.

```
switchport access vlan VLAN-ID
no switchport access vlan
```

### Parameters

---

<i>VLAN-ID</i>	Specifies the access VLAN for the interface.
----------------	--

---

<b>Default</b>	VLAN 1.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	The command can only be configured on physical ports or link aggregation groups that are set to access mode or dot1q-tunnel mode.

This command sets the access VLAN for an access port. The port becomes an untagged member of access VLAN and the port's PVID will also be changed to the access VLAN. If the specified access VLAN does not exist, it will be created automatically. Only one access VLAN can be specified. The succeeding command overwrites the previous command.

The **switchport access vlan** command can also be used to configure the tunnel VLAN for a Dot1q-tunnel port. Removing the VLAN that is used as a port's access VLAN will lead to the port's access VLAN to reset to the default VLAN.

**Example** This example shows how to set an interface port 1 to access mode with access VLAN 1000.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#switchport mode access
DXS-3600-32S(config-if)#switchport access vlan 1000
DXS-3600-32S(config-if)#
```

## 66-5 switchport trunk allowed vlan

This command is used to configure the VLANs that will be allowed to receive and send traffic on the specified interface in a tagged format. Use the **no switchport trunk allowed vlan** command to reset the VLAN membership of the port.

**switchport trunk allowed vlan {all | {add | remove } VLAN-ID [, | -]}**  
**no switchport trunk allowed vlan**

### Parameters

<b>all</b>	Specifies to add all VLANs to the allowed VLAN list.
<b>add</b>	Specifies to add the specified VLAN list to the allowed VLAN list.
<b>remove</b>	Specifies to remove the specified VLAN list from the allowed VLAN list.
<i>VLAN-ID</i>	Specifies the VLAN list that will be added or removed from.
,	(Optional) Specifies a series of VLANs, or separate a range of VLANs from a previous range. No space is required before and after the comma.
-	(Optional) Specifies a range of VLANs. No space is required before and after the hyphen.

**Default** By default a port that is set to trunk mode allows all VLANs.

**Command Mode** Interface Configuration Mode.

**Command Default Level** Level: 12

**Usage Guideline** The command can only be configured on physical ports or link aggregation groups that are set to trunk mode.

If a trunk port is allowed all VLANs, the traffic of all VLANs can be transmitted over it. Entering the **switchport trunk allowed vlan** command to restrict the traffic of some VLANs from passing the trunk port. A trunk port is a tagged member of a VLAN if the VLAN is existed and it is in the allowed VLAN list of this port. If an allowed VLAN is created at later, the trunk port joins to it automatically.

Using **no switchport trunk allowed-vlan** command resets the allowed VLAN list of the trunk port to default.

**Example** This example shows how to configure an interface port 1 allowed VLAN list to 1-1000.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#switchport mode trunk
DXS-3600-32S(config-if)#switchport trunk allowed vlan add 1-1000
DXS-3600-32S(config-if)#
```

## 66-6 switchport hybrid allowed vlan

This command is used to specify if the port will be a tagged or untagged member of the specified VLAN for a hybrid port. Use the **no switchport hybrid allowed vlan** command to reset the membership.

```
switchport hybrid allowed vlan {add {tagged | untagged} | remove} VLAN-ID [, | -]
no switchport hybrid allowed vlan
```

### Parameters

<b>VLAN-ID</b>	Specifies the VLAN to add or remove the VLAN membership from.
<b>add</b>	Specifies the port will be added into the specified VLAN(s).
<b>remove</b>	Specifies the port will be removed from the specified VLAN(s).
<b>tagged</b>	Specifies the port as a tagged member of the specified VLAN(s).
<b>untagged</b>	Specifies the port as an untagged member of the specified VLAN(s).
<b>,</b>	(Optional) Specifies a series of VLANs, or separate a range of VLANs from a previous range. Enter a space before and after the comma.
<b>-</b>	(Optional) Specifies a range of VLANs. Enter a space before and after the hyphen.

<b>Default</b>	By default, no VLAN memberships are configured for a hybrid port.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	<p>The command can only be configured on physical ports or port-channels that are set to hybrid mode or dot1q-tunnel mode. The command can be used to setting the VLAN membership of a hybrid port. If the port has already been the tagged member of a VLAN, adding the VLAN into the port untagged membership VLAN will lead to the port becomes its untagged member, and vice versa. You cannot add a port into its forbidden membership VLAN.</p> <p>Use <b>no switchport hybrid allowed vlan</b> command all VLAN membership will be removed, and the port will reset to default VLAN as untagged member. The port remains in hybrid mode. The <b>switchport hybrid allowed vlan</b> command can also be used to specify the VLAN membership for a dot1q-tunnel port.</p> <p>The configuration doesn't need the specified VLAN exist. Once the VLAN is created, the interface will join to the VLAN automatically.</p>

**Example** In the following example, the user configures interface port 1 to be a tagged member of VLAN 1000, and an untagged member of VLAN 2000 & 3000.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#switchport mode hybrid
DXS-3600-32S(config-if)#switchport hybrid allowed vlan add tagged 1000
DXS-3600-32S(config-if)#switchport hybrid allowed vlan add untagged 2000,3000
DXS-3600-32S(config-if)#
```

## 66-7 switchport native vlan

This command is used to specify the native VLAN (PVID) of a trunk or hybrid mode interface. Use the **no switchport native vlan** command to reset to the native VLAN ID to the default setting.

```
switchport native vlan VLAN-ID
no switchport native vlan
```

**Parameters**

<i>VLAN-ID</i>	Specifies the native VLAN ID for the trunk or hybrid interface.
----------------	---

<b>Default</b>	The default is VLAN 1.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	<p>This command can only be configured on physical ports or link aggregation groups that set to trunk or hybrid mode. This command is used to set the native VLAN (PVID) of a trunk or hybrid port.</p> <p>An interface can be specified with only one native VLAN. The succeeding command overwrites the previous command.</p> <p>The configuration doesn't need the specified VLAN exist. For making the port join to its native VLAN, the user shall add the native VLAN into its allowed VLAN. If the port mode is trunk, the port will join to its native VLAN as untagged member. If the port mode is hybrid, user can set its native VLAN as tagged or untagged.</p>

**Example** In the following example, the user configures interface port 1 to become a trunk interface and configure its native VLAN to 20.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#switchport mode trunk
DXS-3600-32S(config-if)#switchport native vlan 20
DXS-3600-32S(config-if)#
```

**66-8 acceptable-frame**

This command is used to set acceptable frame type of a port. The default acceptable frame type is admit-all.

**acceptable-frame {tagged-only | untagged-only | admit-all}**

**Parameters**

<b>tagged-only</b>	Specifies that only tagged frames will be accepted by the interface.
<b>untagged-only</b>	Specifies that only untagged frames will be accepted by the interface.
<b>admit-all</b>	Specifies that all frames will be accepted by the interface.

<b>Default</b>	The default acceptable frame setting is <b>admit-all</b> .
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	<p>The valid interfaces for this command are physical port or link aggregation groups.</p> <p>The <b>acceptable-frame</b> interface command can be used to set the acceptable frame type for an interface. If the acceptable frame type is set to <b>tagged-only</b>, only tagged incoming packets will be received by the interface and untagged packets will be dropped. If specifying <b>untagged-only</b>, only untagged packets will be received and tagged packets will be dropped. If specifying <b>admit-all</b>, the interface will receive all packets.</p> <p>The access port only accepts untagged packets, no matter its acceptable-frame type.</p>



**Example** In the following example, the user sets the acceptable frame type to be tagged-only on port 1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#acceptable-frame tagged-only
DXS-3600-32S(config-if)#
```

## 66-9 ingress-checking

This command is used to enable the ingress checking of the received frames on a port. Use the **no ingress-checking** interface command to disable the ingress checking function.

**ingress-checking**  
**no ingress-checking**

**Parameters** None.

**Default** By default, ingress checking is enabled.

**Command Mode** Interface Configuration Mode.

**Command Default Level** Level: 12

**Usage Guideline** The valid interfaces for this command are physical ports or link aggregation groups.

You can use the **ingress-checking** interface command to enable ingress checking on interfaces. If ingress checking is enabled, if the port is not member port of the VLAN that has been classified for the received packet, the packet will be dropped. The user can use the **no ingress-checking** interface command to disable this function on a port.

**Example** This example shows how to set ingress checking to enable of port 1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#ingress-checking
DXS-3600-32S(config-if)#
```

## 66-10 mac-base (vlan)

This command is used to create a MAC-based VLAN classification entry. Use the **no mac-base** command to remove a MAC-based VLAN classification entry.

**mac-base** *MAC-ADDRESS* [**priority** *COS-VALUE*]  
**no mac-base** *MAC-ADDRESS*

### Parameters

<i>MAC-ADDRESS</i>	Specifies the MAC address for the entry.
<b>priority</b> <i>COS-VALUE</i>	Specifies the priority for the entry. The value is a number from 0 to 7, if the priority is not specified, the default value is 0.

**Default** No MAC-based VLAN ID classification entries exist.

**Command Mode** VLAN Configuration Mode.

**Command Default Level** Level: 12

**Usage Guideline**

The user can use the **mac-base** command in VLAN configuration mode to create the MAC entry that will be classified to the MAC based VLAN. If MAC based VLAN entries are configured, the packet received by the switch regardless of the incoming port that have a source MAC address matching an the entry will be classified to the corresponding MAC-based VLAN. The maximum number of MAC-based VLAN assignment entry is project dependent.

The precedence to classify the VLAN for an untagged packet is  
MAC-based > Subnet-based > Protocol VLAN > Port-based VLAN

The user should use the **switchport hybrid allowed vlan** command to set the VLAN membership for the MAC-based VLAN.

**Example**

This example shows how to create a MAC-based VLAN entry for the MAC address 00-80-cc-00-00-11.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#vlan 101
DXS-3600-32S(config-vlan)#mac-base 00-80-cc-00-00-11 priority 4
DXS-3600-32S(config-vlan)#
```

**66-11 subnet-base (vlan)**

This command is used to specify subnet-based VLAN ID assignment entry for un-tagged incoming packets. Use the **no subnet-base** command to remove a subnet-based VLAN ID assignment entry.

```
subnet-base {NETWORK-PREFIX /PREFIX-LENGTH | IPV6-NETWORK-PREFIX /PREFIX-LENGTH} [priority
COS-VALUE]
no subnet-base {NETWORK-PREFIX /PREFIX-LENGTH | IPV6-NETWORK-PREFIX /PREFIX-LENGTH}
```

**Parameters**

<i>NETWORK-PREFIX / PREFIX-LENGTH</i>	Specifies the network prefix and the prefix length in the form of A.B.C.D/x
<i>IPV6-NETWORK-PREFIX / PREFIX-LENGTH</i>	Specifies the IPv6 network prefix and the prefix length in the form of x:x:x:x:x:x/n. The prefix length of IPv6 network address shall not greater than 64 bits.
<b>priority</b> <i>COS-VALUE</i>	Specifies the priority for the entry. The value is a number from 0 to 7, if the priority is not specified, the default value is 0.

**Default**

No subnet-based VLAN.

**Command Mode**

VLAN Configuration Mode.

**Command Default Level**

Level: 12

**Usage Guideline**

A subnet VLAN entry is an IP subnet-based VLAN classification rule. If an untagged or priority-tagged IP packet is received on a port, its source IPv4 address or the upper 64 bits of source IPv6 address will be used to match the subnet VLAN entries. If the source IP matches the subnet of an entry, the packet will be classified to the VLAN of this entry. If the packet is untagged, the priority will be picked up from it too. For priority-tagged packet, its priority will not change. The number of subnet-based VLAN entries is project dependent.

The precedence to classify an untagged packet is  
MAC-based > Subnet-based > Protocol VLAN > Port-based VLAN

The user should use the **switchport hybrid allowed vlan** command to set the VLAN membership for the subnet-based VLAN user.

**Example**

In the following example, the user creates a subnet-based VLAN entry for VLAN 100, specifying the subnets 20.0.1.0/8, 192.0.1.0/8 and 3ffe:22:33:44::55/64.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#vlan 100
DXS-3600-32S(config-vlan)#subnet-base 20.0.1.0/8
DXS-3600-32S(config-vlan)#subnet-base 192.0.1.0/8 priority 4
DXS-3600-32S(config-vlan)#subnet-base 3ffe:22:33:44::55/64
DXS-3600-32S(config-vlan)#
```

**66-12 show vlan**

This command is used to display the parameters for all configured VLANs or one VLAN (if the VLAN ID or name is specified) on the switch.

**show vlan [VLAN-ID [, | -] | interface [INTERFACE-ID [, | -]] | subnet-base | mac-base]**

**Parameters**

<i>VLAN-ID</i>	(Optional) Displays information about a signal VLAN identified by VLAN ID number. The VLAN ID range is 1 to 4094. Separate nonconsecutive VLAN-ID with a comma; use a hyphen to designate a range of VLAN-ID.
<b>interface</b>	(Optional) Displays the port PVID, ingress checking, acceptable frame type information.
<i>INTERFACE-ID</i>	Specifies the port to display.
,	(Optional) Specifies a series of ports, or separate a range of ports from a previous range. No space before and after the comma.
-	(Optional) Specifies a range of ports. No space before and after the hyphen.
<b>subnet-base</b>	(Optional) Displays the subnet-based VLAN related configuration.
<b>mac-base</b>	(Optional) Displays the mac-based VLAN related configuration.

**Default**

None.

**Command Mode**

EXEC Mode.

**Command Default Level**

Level: 3

**Usage Guideline**

The user can use the **show vlan** command to display the current VLAN status. The user can display the VLAN list using the **show vlan** command. The user can display a specific VLAN entry by specifying a VLAN-ID. The user can use the **show vlan interface** command to show port related VLAN information, such as port PVID, ingress checking, and acceptable frame type information.

If no optional keywords are specified, all of the VLAN configurations will be displayed.

**Example**

This example displays all the current VLAN entries.

```

DXS-3600-32S#show vlan

VLAN 1
  Name : default
  Tagged Member Ports   : 1/0/1
  Untagged Member Ports : 1/0/2-1/0/24

VLAN 100
  Name : VLAN0100
  Tagged Member Ports   : 1/0/1
  Untagged Member Ports :

VLAN 101
  Name : VLAN0101
  Tagged Member Ports   : 1/0/1
  Untagged Member Ports :

VLAN 1000
  Name : admin-vlan
  Tagged Member Ports   : 1/0/1
  Untagged Member Ports :

Total Entries : 4

DXS-3600-32S#

```

**Example**

This example displays the PVID, ingress checking, and acceptable frame type information for ports 1- 4.

```

DXS-3600-32S#show vlan interface tenGigabitEthernet 1/0/1-1/0/4

TGi1/0/1
  VLAN mode           : Trunk
  Trunk allowed VLAN  : 1-4094
  Dynamic Tagged VLAN :
  Native VLAN         : 20
  GVRP State          : Disabled
  Forbidden VLAN      :
  Ingress checking    : Enabled
  Acceptable frame type : Tagged-Only

TGi1/0/2
  VLAN mode           : Access
  Access VLAN         : 1
  Ingress checking    : Enabled
  Acceptable frame type : Untagged-Only

TGi1/0/3
  VLAN mode           : Access
  Access VLAN         : 1
  Ingress checking    : Enabled
  Acceptable frame type : Untagged-Only

TGi1/0/4
  VLAN mode           : Access
  Access VLAN         : 1
  Ingress checking    : Enabled
  Acceptable frame type : Untagged-Only

DXS-3600-32S#

```

**Example**

This example displays the MAC-based VLAN table: The MAC-based VLAN can be set by manual configuration or by MAC-based authorization. If the authorization assigns the MAC address that is set by manual configuration to different VLAN, the manual configuration MAC-based VLAN entry becomes inactive.

```
DXS-3600-32S#show vlan mac-base
```

```

MAC Address          VLAN ID  Priority  Status
-----
00-80-CC-00-00-11   101      4         Active

Total Entries: 1

DXS-3600-32S#
```

**Example**

This example displays the subnet-based VLAN table.

```
DXS-3600-32S#show vlan subnet-base
```

```

Subnet                VLAN ID  Priority
-----
20.0.0.0/8            100      0
192.0.0.0/8           100      4
3FFE:22:33:44::/64    100      0

Total Entries: 3

DXS-3600-32S#
```

**66-13 protocol-vlan profile**

This command is used to create a protocol group. Use the **no protocol-vlan profile** command to remove the specified protocol group.

```

protocol-vlan profile PROFILE-ID frame-type {ethernet2 | snap | llc} ether-type TYPE-VALUE
no protocol-vlan profile PROFILE-ID

```

**Parameters**

<i>PROFILE-ID</i>	Specifies the profile ID to add or delete.
<b>frame-type</b>	Specifies the frame type that will be bound to the entry.
<b>ethernet2</b>	Specifies the operational protocol value of Ethernet II type frames.
<b>snap</b>	Specifies the operational protocol value of SNAP type frames.
<b>llc</b>	Specifies the operational protocol value of LLC type frames.
<b>ether-type</b> <i>TYPE-VALUE</i>	Specifies the protocol value of the specific frame type. The value is in hexadecimal form. The range is 0x0 to 0xFFFF.

**Default**

By default, the protocol VLAN table is empty.

**Command Mode**

Global Configuration Mode.

**Command Default Level**

Level: 12

**Usage Guideline**

The **protocol-vlan profile** configuration command can be used to create a protocol group.  
The **no protocol-vlan profile** command can be used to delete an existing protocol VLAN group.

**Example** This example shows how to create a protocol VLAN group with a group ID of 10, specifying that the IPv6 protocol (frame type is ethernet2 value is 0x86dd) will be used.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#protocol-vlan profile 10 frame-type ethernet2 ether-type 0x86dd
DXS-3600-32S(config)#
```

## 66-14 protocol-vlan profile (interface)

This command is used to bind the protocol VLAN classification rule to a port. The **no protocol-vlan profile** command is used to remove the binding of a protocol VLAN classification from the port.

**protocol-vlan profile** *PROFILE-ID* **vlan** *VLAN-ID* [**priority** *COS-VALUE*]  
**no protocol-vlan profile** [*PROFILE-ID*]

### Parameters

<i>PROFILE-ID</i>	Specifies the profile ID to be classified. The range is 1 to 16.
<b>vlan</b> <i>VLAN-ID</i>	Specifies the VLAN ID of the protocol VLAN. Only one VLAN ID can be specified for each binding group on a port.
<b>priority</b> <i>COS-VALUE</i>	Specifies the priority of the protocol VLAN to a port. The value is a number from 0 to 7, if the priority is not specified, the default value is 0.

<b>Default</b>	No protocol classification rules are created.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	<p>The valid interfaces for this command are either physical ports or link aggregation groups. The command can only be configured on hybrid port or dot1q-tunnel port.</p> <p>The user can use the <b>protocol-vlan profile</b> interface command to bind a protocol VLAN group with a VLAN id. As a result, the packet received by the port that matches the specified protocol group will be classified to the binding VLAN. The number of supported protocol classification entries is depending on hardware. The VLAN does not need to exist to successfully execute the command. If the user does not specify the profile ID with the <b>no protocol-vlan profile</b> command, the switch will remove all the protocol group and VLAN bindings on the specified interface.</p> <p>The precedence for classifying the untagged packet is  MAC-based &gt; Subnet-based &gt; Protocol VLAN &gt; Port-based VLAN</p> <p>The user should use the <b>switchport hybrid allowed vlan</b> command to set the VLAN member port for the protocol-based VLAN user.</p>

**Example** This example shows how to bind the protocol VLAN group 10 with VLAN ID 3000 on port 2.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/2
DXS-3600-32S(config-if)#switchport mode hybrid
DXS-3600-32S(config-if)#switchport hybrid allowed vlan add untagged 3000
DXS-3600-32S(config-if)#protocol-vlan profile 10 vlan 3000
DXS-3600-32S(config-if)#
```

## 66-15 show protocol-vlan

This command is used to display the configuration settings of a protocol VLAN. The **show protocol-vlan profile** command displays the protocol VLAN list and its protocols. The **show protocol-vlan interface** command displays the protocol group binding VLAN of the ports.

```
show protocol-vlan {profile [PROFILE-ID] | interface [INTERFACE-ID [, | -]]}
```

### Parameters

<b>profile</b>	Specifies the display protocol group.
<i>PROFILE-ID</i>	(Optional) Specifies the profile ID of the protocol group. If not specified, display all protocol groups.
<b>interface</b>	Specifies the display protocol VLAN that is associated to interfaces
<i>INTERFACE-ID</i>	Specifies the interface to display.
,	(Optional) Specifies a series of interfaces, or separate a range of interfaces from a previous range. No space is required before or after the comma.
-	(Optional) Specifies a range of interfaces. No space is required before or after the hyphen.

<b>Default</b>	None.
<b>Command Mode</b>	EXEC Mode.
<b>Command Default Level</b>	Level: 3
<b>Usage Guideline</b>	The user can use the <b>show protocol-vlan</b> command to display the current protocol VLAN status. The user can display the protocol VLAN group list table by using the <b>show protocol-vlan profile</b> command. The user can display the protocol VLAN binding of the ports by using the <b>show protocol-vlan interface</b> command.

**Example** This example shows how to display the protocol VLAN binding of ports 1-3.

```
DXS-3600-32S#show protocol-vlan interface tenGigabitEthernet 1/0/1-1/0/3

Interface  Profile ID/Binding-VLAN/Priority
-----  -----
TGi1/0/2   10/3000/  -

DXS-3600-32S#
```

**Example** This example shows how to display the protocol group settings.

```
DXS-3600-32S#show protocol-vlan profile

Profile ID  Frame-type  Ether-type
-----  -----  -----
10          Ethernet2   0x86DD(IPv6)

DXS-3600-32S#
```

# Virtual Private LAN Service (VPLS) Commands

## 67-1 vpls

This command is used to create a VPLS and enter the VPLS configuration mode. Use the **no vpls** command to delete a VPLS.

```
vpls VPLS-NAME
no vpls VPLS-NAME
```

### Parameters

---

<i>VPLS-NAME</i>	Specifies the VPLS name. This name can be up to 32 characters long.
------------------	---

---

<b>Default</b>	No VPLS created.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 3.
<b>Usage Guideline</b>	This command is used to create a VPLS and enter the VPLS configuration mode. If that VPLS already exists, this command will skip the creation and directly enter the VPLS configuration mode. The VPLS name is used to locally identify a unique VPLS in a device.

**Example** This example show how to create a VPLS with the name of *vpls100* and enter the VPLS configuration mode.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#vpls vpls100
DXS-3600-32S(config-vpls)#
```

**Example** This example shows how to delete a VPLS with the name of *vpls100*.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#no vpls vpls100
DXS-3600-32S(config)#
```

## 67-2 vpls-id

This command is used to set the VPLS ID of a VPLS.

```
vpls-id VPLS-ID
```

### Parameters

---

<i>VPLS-ID</i>	Specifies the VPLS ID of a VPLS. This value must be between 1 and 4294967295. The VPLS ID is used as the VC ID of the pseudowires in the VPLS, which do not have a specified VC ID.
----------------	---

---

<b>Default</b>	0.
<b>Command Mode</b>	VPLS Configuration Mode.
<b>Command Default Level</b>	Level: 15.
<b>Usage Guideline</b>	This command is used to set the VPLS ID of a VPLS in VPLS configuration mode. Each VPLS in a device should have a local unique VPLS ID.



**Example** This example shows how to set the VPLS ID of a VPLS to 100.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#vpls vpls100
DXS-3600-32S(config-vpls)#vpls-id 100
DXS-3600-32S(config-vpls)#
```

### 67-3 service-type

This command is used to set the type of emulated service in a VPLS.

**service-type** {raw | tagged}

#### Parameters

<b>raw</b>	Specifies the service type is Ethernet-raw mode in a VPLS. It means the encapsulation of all pseudowires in the VPLS is Ethernet-raw mode.
<b>tagged</b>	Specifies the service type is Ethernet-tagged mode in a VPLS. It means the encapsulation of all pseudowires in the VPLS is Ethernet-tagged mode.

**Default** Ethernet-tagged mode.

**Command Mode** VPLS Configuration Mode.

**Command Default Level** Level: 15.

**Usage Guideline** This command is used to set the type of emulated service in a VPLS in VPLS configuration mode. All pseudowires of a VPLS should have same encapsulation as the type of emulated service in the VPLS. The service type of a VPLS can be modified only when there is no pseudowire existed in this VPLS.

**Example** This example shows how to set the service type of a VPLS to Ethernet-raw mode.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#vpls vpls100
DXS-3600-32S(config-vpls)#service-type raw
DXS-3600-32S(config-vpls)#
```

### 67-4 mtu

This command is used to set local AC link MTU of a VPLS.

**mtu** <VALUE 0-65535>

#### Parameters

<b>VALUE 0-65535</b>	Specifies the local AC link MTU of a VPLS that will be advertised to remote peers in this VPLS. The MTU must be same at both local and remote sites. If not, the related pseudowires will not communicate correctly with remote peers. If a user specifies the MTU as 0, the local MTU will not be advertised to remote peers in the VPLS.
	<b>Note:</b> A user must ensure that the specified MTU is same as the real MTU of the local AC link.

**Default** 1500.

**Command Mode** VPLS Configuration Mode.

**Command Default Level** Level: 15.

**Usage Guideline** This command is used to set the local AC link MTU of a VPLS in VPLS configuration mode. The local AC link MTU of a VPLS can be modified only when there is no pseudowire in this VPLS.

**Example** This example shows how to set the local AC link MTU of a VPLS to 1000.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#vpls vpls100
DXS-3600-32S(config-vpls)#mtu 1000
DXS-3600-32S(config-vpls)#
```

## 67-5 peer

This command is used to create a peer in a VPLS. Use the **no peer** command to delete a peer in a VPLS.

```
peer IP-ADDRESS [VC-ID] [{network | spoke}]
no peer IP-ADDRESS [VC-ID]
```

### Parameters

<i>IP-ADDRESS</i>	Specifies the LSR ID that is used to identify the PE.
<i>VC-ID</i>	(Optional) Specifies the pseudowire ID. This ID must be between 1 and 4294967295. It is used with the <i>IP-ADDRESS</i> to uniquely identify a peer for a VPLS. If no ID is specified, the pseudowire ID is configured to be the same as the VPLS ID of this VPLS.
<b>network</b>	Specifies that a peer is used as a network pseudowire. The packets from other network pseudowires in a VPLS must not be forwarded to this pseudowire and the packets from this pseudowire must not be forwarded to other network pseudowires in the VPLS. It is the "split horizon" rule.
<b>spoke</b>	Specifies that a peer is used as a spoke pseudowire (in H-VPLS topology). The packets from other pseudowires in a VPLS can be forwarded to this pseudowire, and the packets from this pseudowire can be forwarded to other pseudowires in the VPLS.

**Default** The VC-ID is configured to be the same as the VPLS ID of this VPLS and it is a network pseudowire.

**Command Mode** VPLS Configuration Mode.

**Command Default Level** Level: 15.

**Usage Guideline** This command is used to create a peer in a VPLS. The **no peer** command is used to delete a peer or a backup peer from a VPLS.

**Example** This example shows how to create a peer, with the IP address of 2.2.2.2. The VC ID is set by the VPLS ID and it is a network pseudowire.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#vpls vpls100
DXS-3600-32S(config-vpls)#peer 2.2.2.2
DXS-3600-32S(config-vpls)#
```

**Example** This example shows how to create a peer, with the IP address of 2.2.2.2. The VC ID is 100 and it is a spoke pseudowire in the H-VPLS topology.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#vpls vpls100
DXS-3600-32S(config-vpls)#peer 2.2.2.2 100 spoke
DXS-3600-32S(config-vpls)#
```

**Example** This example shows how to delete a peer from a VPLS with the IP address of 2.2.2.2 and VC ID of 100.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#vpls vpls100
DXS-3600-32S(config-vpls)#no peer 2.2.2.2 100
DXS-3600-32S(config-vpls)#
```

**Example** This example shows how to delete all peers from a VPLS with the IP address of 2.2.2.2.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#vpls vpls100
DXS-3600-32S(config-vpls)#no peer 2.2.2.2
DXS-3600-32S(config-vpls)#
```

## 67-6 peer backup

This command is used to create a backup peer for PW redundancy of H-VPLS.

```
peer backup IP-ADDRESS [VC-ID]
```

### Parameters

<i>IP-ADDRESS</i>	Specifies the LSR ID that is used to identify the PE which the peer belongs to.
<i>VC-ID</i>	(Optional) Specifies the pseudowire ID. This ID must be between 1 and 4294967295. It is used with the <i>IP-ADDRESS</i> to uniquely identify a peer for a VPLS. If no ID is specified, the pseudowire ID will be the same as the VPLS ID of this VPLS.

**Default** The VC-ID is set by the VPLS ID of this VPLS

**Command Mode** VPLS Configuration Mode.

**Command Default Level** Level: 15.

**Usage Guideline** This command is used to create a backup peer for PW redundancy of an H-VPLS in the VPLS configuration mode. To reach PW redundancy in an H-VPLS, the device will act as an MTU-s and there should be one primary pseudowire and one backup pseudowire configured.

In a normal situation the primary pseudowire is link up and the backup pseudowire is link standby. The packet forwarding between the MTU-s and PE will work on the primary pseudowire. When the LDP hello procedure fails the primary pseudowire link is down, the backup pseudowire will be changed to link up to take over the packet forwarding between the MTU-s and the PE. After the primary pseudowire is recovered to link up, the backup pseudowire will be toggled back to link standby and the packet forwarding between the MTU-s and the PE will be back to the primary pseudowire again.

When the backup pseudowire is changed from link standby to link up, the MAC withdraw message with a NULL-MAC list will be sent from the MTU-s to the PE via the backup pseudowire to clear old MAC addresses. When the primary pseudowire is recovered to link up and the backup pseudowire is changed from link up to link standby, the MAC withdraw message with a NULL-MAC list will be sent from the MTU-s to the PE via the primary pseudowire to clear old MAC addresses.

**Example** This example shows how to create a backup peer with the IP address of 2.2.2.2 and VC ID is set by VPLS ID.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#vpls vpls100
DXS-3600-32S(config-vpls)#peer backup 2.2.2.2
DXS-3600-32S(config-vpls)#
```

**Example** This example shows how to create a backup peer with the IP address of 2.2.2.2 and VC ID of 100.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#vpls vpls100
DXS-3600-32S(config-vpls)#peer backup 2.2.2.2 100
DXS-3600-32S(config-vpls)#
```

## 67-7 xconnect vpls

This command is used to create a local AC in a VPLS. Use the **no xconnect vpls** command to delete a local AC in a VPLS.

```
xconnect vpls VPLS-NAME
no xconnect vpls VPLS-NAME
```

### Parameters

<i>VPLS-NAME</i>	Specifies the VPLS name. This name can be up to 32 characters long.
------------------	---

<b>Default</b>	None.
<b>Command Mode</b>	Interface Configuration Mode (Ethernet Interface or Ethernet VLAN Interface Mode).
<b>Command Default Level</b>	Level: 15.
<b>Usage Guideline</b>	This command is used to create a local AC in a VPLS. A local AC could be an Ethernet-based AC, which is created in an Ethernet interface, or an Ethernet VLAN-based AC, which is created in Ethernet VLAN interface. All local ACs in a VPLS should have same AC type.

**Example** This example shows how to create a local AC, which is an Ethernet-based AC and the Ethernet port is 1/0/1, into a VPLS with the name of *vpls100*.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface GigabitEthernet 1/0/1
DXS-3600-32S(config-if)#xconnect vpls vpls100
DXS-3600-32S(config-if)#
```

**Example** This example shows how to create a local AC, which is an Ethernet VLAN-based AC, the Ethernet port is 1/0/1, and the VLAN is 100, into a VPLS with the name of *vpls100*.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface GigabitEthernet 1/0/1
DXS-3600-32S(config)#encapsulation dot1q 100
DXS-3600-32S(config-subif)#xconnect vpls vpls100
DXS-3600-32S(config-subif)#
```

**Example** This example shows how to delete a local AC, which is an Ethernet-based AC and the Ethernet port is 1/0/1, from a VPLS named *vpls100*.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface GigabitEthernet 1/0/1
DXS-3600-32S(config-if)#no xconnect vpls vpls100
DXS-3600-32S(config-if)#
```

**Example** This example shows how to delete a local AC, which is an Ethernet VLAN-based AC, the Ethernet port is 1/0/1, and VLAN is 100, from a VPLS named *vpls100*.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface GigabitEthernet 1/0/1
DXS-3600-32S(config)#encapsulation dot1q 100
DXS-3600-32S(config-subif)#no xconnect vpls vpls100
DXS-3600-32S(config-subif)#
```

## 67-8 show vpls

This command is used to display VPLS information.

```
show vpls [VPLS-NAME] [detail]
```

### Parameters

<i>VPLS-NAME</i>	(Optional) Specifies the VPLS name. This name can be up to 32 characters long.
<b>detail</b>	(Optional) Specifies to display detailed VPLS information.

**Default** None.

**Command Mode** EXEC Mode.

**Command Default Level** Level: 3.

**Usage Guideline** This command is used to display VPLS information.

**Example** This example shows how to display all VPLS information.

```
DXS-3600-32S#show vpls
```

VPLS Name	VPLS ID	Peers/ACs	Oper Status
vpls100	100	3/1	Up
vpls101	101	3/1	Up
vpls102	102	3/1	Up
vpls103	103	3/1	Up
vpls104	104	3/1	Up
vpls105	105	3/1	Up
vpls106	106	3/1	Up
vpls107	107	3/1	Down

```
Total Entries: 8
DXS-3600-32S#
```

**Example** This example shows how to display VPLS information for a VPLS.

```
DXS-3600-32S#show vpls vpls100
```

VPLS Name	VPLS ID	Peers/ACs	Oper Status
vpls100	100	3/1	Up

```
Total Entries: 1
```

```
DXS-3600-32S#
```

**Example** This example shows how to display all VPLS detailed information.

```
DXS-3600-32S#show vpls detail
```

```
VPLS Name: vpls100, Operate Status: Up
VPLS ID: 100, Service Type: Tagged, MTU: 1500
Peers via Pseudowires:
  VC ID      Peer           Type           Oper Status
  -----
  100        3.3.3.3        Network        Down
  100        1.1.1.1        Network        Up
  100        5.5.5.5        Spoke          Down
Local ACs:
  Local AC           Oper Status
  -----
  Eth1/0/17/VLAN100  Up
```

```
VPLS Name: vpls101, Operate Status: Up
VPLS ID: 101, Service Type: Tagged, MTU: 1500
Peers via Pseudowires:
  VC ID      Peer           Type           Oper Status
  -----
  101        3.3.3.3        Network        Down
  101        1.1.1.1        Network        Up
  101        5.5.5.5        Spoke          Down
Local ACs:
  Local AC           Oper Status
  -----
  Eth1/0/17/VLAN101  Up
```

```
Total Entries: 2
```

```
DXS-3600-32S#
```

**Example** This example shows how to display detailed information for a VPLS.

```
DXS-3600-32S#show vpls vpls100 detail
```

```
VPLS Name: vpls100, Operate Status: Up
VPLS ID: 100, Service Type: Tagged, MTU: 1500
Peers via Pseudowires:
  VC ID      Peer           Type           Oper Status
  -----
  100        3.3.3.3        Network        Down
  100        1.1.1.1        Network        Up
  100        5.5.5.5        Spoke          Down
Local ACs:
  Local AC           Oper Status
  -----
  Eth1/0/17/VLAN100  Up
```

```
Total Entries: 1
```

```
DXS-3600-32S#
```

**Example** This example shows how to display detailed information for a VPLS with PW redundancy.

```
DXS-3600-32S#show vpls vpls102 detail
VPLS Name: vpls102, Operate Status: Up
VPLS ID: 102, Service Type: Tagged, MTU: 1500
Peers via Pseudowires:
  VC ID      Peer           Type      Oper Status
  -----
  100        1.1.1.1        Primary   Up
  100        2.2.2.2        Backup    Standby
Local ACs:
  Local AC      Oper Status
  -----
  Eth1/0/17/VLAN102  Up

Total Entries: 1
DXS-3600-32S#
```

## 67-9 show mac-address-table vpls

This command is used to display VPLS MAC address information.

```
show mac-address-table vpls [VPLS-NAME [{peer IP-ADDRESS [VC-ID] | ac interface INTERFACE-ID [vlan
VLAN-ID]]] [address MAC-ADDR]
```

### Parameters

<b>VPLS-NAME</b>	(Optional) Specifies the VPLS name. This name can be up to 32 characters long.
<b>peer</b>	(Optional) Specifies a peer in a VPLS.
<b>IP-ADDRESS</b>	(Optional) Specifies the LSR ID that is used to identify the PE which the peer is belongs to.
<b>VC-ID</b>	(Optional) Specifies the pseudowire ID. This ID must be between 1 and 4294967295.
<b>ac</b>	(Optional) Specifies a local AC in a VPLS.
<b>interface INTERFACE-ID</b>	(Optional) Specifies the Ethernet interface of a local AC.
<b>vlan VLAN-ID</b>	(Optional) Specifies that a local AC is an Ethernet VLAN-based AC and the related VLAN ID. If not specified, the local AC will be an Ethernet-based AC.
<b>address MAC-ADDR</b>	(Optional) Specifies to display the MAC address.

**Default** None.

**Command Mode** EXEC Mode.

**Command Default Level** Level: 3.

**Usage Guideline** This command is used to display VPLS MAC address information. A user can select to display a specified VPLS MAC address, or the VPLS MAC addresses on a specified VPLS peer, or the VPLS MAC addresses on a specified VPLS AC, or the VPLS MAC addresses on a specified VPLS, or all VPLS MAC addresses.

**Example**

This example shows how to display all VPLS MAC address information.

```
DXS-3600-32S#show mac-address-table vpls
```

VPLS Name	MAC Address	Peer (VC ID/IP) or AC
vpls100	00-08-A1-79-9A-DF	101/1.1.1.1
vpls100	00-08-A1-79-9A-E0	101/1.1.1.1
vpls100	00-08-A1-79-9A-E1	101/1.1.1.1
vpls100	00-08-A1-79-9A-E2	101/1.1.1.1
vpls100	00-08-A1-79-9A-E3	101/1.1.1.1
vpls100	00-08-A1-79-9A-E4	101/1.1.1.1
vpls100	00-08-A1-79-9A-E5	101/1.1.1.1
vpls100	00-08-A1-79-9A-E6	101/1.1.1.1

```
Total Entries: 8
```

```
DXS-3600-32S#
```

**Example**

This example shows how to display the VPLS MAC addresses for a VPLS named *vpls100*.

```
DXS-3600-32S#show mac-address-table vpls vpls100
```

VPLS Name	MAC Address	Peer (VC ID/IP) or AC
vpls100	00-08-A1-79-9A-DF	101/1.1.1.1
vpls100	00-08-A1-79-9A-E0	101/1.1.1.1
vpls100	00-08-A1-79-9A-E1	101/1.1.1.1
vpls100	00-08-A1-79-9A-E2	101/1.1.1.1
vpls100	00-08-A1-79-9A-E3	101/1.1.1.1
vpls100	00-08-A1-79-9A-E4	101/1.1.1.1
vpls100	00-08-A1-79-9A-E5	101/1.1.1.1
vpls100	00-08-A1-79-9A-E6	101/1.1.1.1

```
Total Entries: 8
```

```
DXS-3600-32S#
```

**Example**

This example shows how to display the VPLS MAC addresses for a peer of a VPLS.

```
DXS-3600-32S#show mac-address-table vpls vpls100 peer 1.1.1.1
```

VPLS Name	MAC Address	Peer (VC ID/IP) or AC
vpls100	00-08-A1-79-9A-DF	101/1.1.1.1
vpls100	00-08-A1-79-9A-E0	101/1.1.1.1
vpls100	00-08-A1-79-9A-E1	101/1.1.1.1
vpls100	00-08-A1-79-9A-E2	101/1.1.1.1
vpls100	00-08-A1-79-9A-E3	101/1.1.1.1
vpls100	00-08-A1-79-9A-E4	101/1.1.1.1
vpls100	00-08-A1-79-9A-E5	101/1.1.1.1
vpls100	00-08-A1-79-9A-E6	101/1.1.1.1

```
Total Entries: 8
```

```
DXS-3600-32S#
```



**Example**

This example shows how to display the VPLS MAC addresses for a local AC of a VPLS.

```
DXS-3600-32S#show mac-address-table vpls vpls100 ac interface gigabitEthernet1/0/ 21 vlan 101
```

VPLS Name	MAC Address	Peer (VC ID/IP) or AC
vpls100	00-08-A1-79-9A-DF	Eth1/0/21/VLAN101
vpls100	00-08-A1-79-9A-E0	Eth1/0/21/VLAN101
vpls100	00-08-A1-79-9A-E1	Eth1/0/21/VLAN101
vpls100	00-08-A1-79-9A-E2	Eth1/0/21/VLAN101
vpls100	00-08-A1-79-9A-E3	Eth1/0/21/VLAN101
vpls100	00-08-A1-79-9A-E4	Eth1/0/21/VLAN101
vpls100	00-08-A1-79-9A-E5	Eth1/0/21/VLAN101
vpls100	00-08-A1-79-9A-E6	Eth1/0/21/VLAN101

```
Total Entries: 8
DXS-3600-32S#
```

**Example**

This example shows how to display a specified VPLS MAC address in a VPLS named *vpls100*.

```
DXS-3600-32S#show mac-address-table vpls vpls100 address 00:08:A1:79:9A:DF
```

VPLS Name	MAC Address	Peer (VC ID/IP) or AC
vpls100	00-08-A1-79-9A-DF	Eth1/0/21/VLAN101

```
Total Entries: 1
DXS-3600-32S#
```

**Example**

This example shows how to display a specified VPLS MAC address in all VPLS.

```
DXS-3600-32S#show mac address-table vpls address 00:08:A1:79:9A:DF
```

VPLS Name	MAC Address	Peer (VC ID/IP) or AC
vpls100	00-08-A1-79-9A-DF	Eth1/0/21/VLAN101

```
Total Entries: 1
DXS-3600-32S#
```

**67-10 clear mac-address-table vpls**

This command is used to clear VPLS MAC address.

```
clear mac-address-table vpls dynamic [VPLS-NAME [{peer IP-ADDRESS [VC-ID] | ac interface INTERFACE-ID [vlan VLAN-ID] | address MAC-ADDR}]]
```

**Parameters**

<b>dynamic</b>	Specifies that dynamic VPLS MAC address will be cleared.
<i>VPLS-NAME</i>	(Optional) Specifies the VPLS name. This name can be up to 32 characters long.
<b>peer</b>	(Optional) Specifies a peer in a VPLS.
<i>IP-ADDRESS</i>	(Optional) Specifies the LSR ID that is used to identify the PE which the peer is belongs to.
<i>VC-ID</i>	(Optional) Specifies the pseudowire ID. This ID must be between 1 and 4294967295.
<b>ac</b>	(Optional) Specifies the local AC in a VPLS.

<b>interface</b> <i>INTERFACE-ID</i>	(Optional) Specifies the Ethernet interface of a local AC.
<b>vlan</b> <i>VLAN-ID</i>	(Optional) Specifies that the local AC is an Ethernet VLAN-based AC and the related VLAN ID. If not specified, then the local AC will be an Ethernet-based AC.
<b>address</b> <i>MAC-ADDR</i>	(Optional) Specifies that the MAC address needs to be cleared.

<b>Default</b>	None.
<b>Command Mode</b>	EXEC Mode.
<b>Command Default Level</b>	Level: 3.
<b>Usage Guideline</b>	This command is used to clear VPLS MAC addresses. A user can select to clear a specified VPLS MAC address, or the VPLS MAC addresses on a specified VPLS peer, or the VPLS MAC addresses on a specified VPLS AC, or the VPLS MAC addresses on a specified VPLS, or all VPLS MAC addresses.

**Example** This example shows how to clear all VPLS MAC addresses.

```
DXS-3600-32S#clear mac-address-table vpls dynamic
DXS-3600-32S#
```

**Example** This example shows how to clear VPLS MAC addresses for a VPLS.

```
DXS-3600-32S#clear mac-address-table vpls dynamic vpls100
DXS-3600-32S#
```

**Example** This example shows how to clear a VPLS MAC address for a peer of a VPLS.

```
DXS-3600-32S#clear mac-address-table vpls dynamic vpls100 peer 1.1.1.1
DXS-3600-32S#
```

**Example** This example shows how to clear a VPLS MAC address for a local AC of a VPLS.

```
DXS-3600-32S#clear mac-address-table vpls dynamic vpls100 ac interface gigabitEthernet 1/0/1
vlan 100
DXS-3600-32S#
```

**Example** This example shows how to clear one VPLS MAC address.

```
DXS-3600-32S#clear mac-address-table vpls dynamic vpls100 address 00:11:22:33:44:55
DXS-3600-32S#
```

## 67-11 show mpls l2transport vc

This command is used to display VC information for VPWS and VPLS.

```
show mpls l2transport vc [VC-ID] [detail]
```

### Parameters

<i>VC-ID</i>	(Optional) Specifies the pseudowire ID. This ID must be between 1 and 4294967295.
<b>detail</b>	(Optional) Specifies to display detailed VC information.

<b>Default</b>	None.
<b>Command Mode</b>	EXEC Mode.
<b>Command Default Level</b>	Level: 3.
<b>Usage Guideline</b>	This command is used to display summarized or detailed VC information for VPWS and VPLS.

**Example**

This example shows how to display all VC information, including VPWS and VPLS.

```
DXS-3600-32S#show mpls l2transport vc
```

VC ID	Peer	Local AC	Type	Oper Status
1	150.1.1.4	Eth1/0/1/VLAN2	Raw	Up
2	130.1.1.2	Eth1/0/1/VLAN3	Tagged	Down
3	140.1.1.2	vpls100	Tagged	Up
4	160.1.1.2	vpls100	Tagged	Standby
5	120.1.1.2	vpls101	Tagged	Up

```
Total Entries: 5
```

```
DXS-3600-32S#
```

**Example**

This example shows how to detailed VC information for a VPLS.

```
DXS-3600-32S#show mpls l2transport vc 5 detail
```

```
VC ID: 5, Peer IP Address: 120.1.1.2, Operate Status: Up
```

```
Local AC: vpls101, Status: Up
```

```
Remote AC Status: Up
```

```
MPLS VC Labels: Local 19, Remote 19
```

```
Outbound Tunnel label: 103
```

```
MTU: Local 1500, Remote 1500
```

```
Group ID: Local 0, Remote 0
```

```
Signaling Protocol: LDP
```

```
VC Statistics:
```

```
RX Bytes: 0, RX Packets: 0
```

```
TX Bytes: 0, TX Packets: 0
```

```
Total Entries: 1
```

```
DXS-3600-32S#
```

# Virtual Private Wire Service (VPWS) Commands

## 68-1 xconnect

This command is used to enable the VPWS service on the interface. Use the **no** form of this command to cancel the VPWS service.

```
xconnect VC-ID IP-ADDRESS encapsulation mpls [{raw | tagged}] [mtu 0-65535]
no xconnect
```

### Parameters

<b>VC-ID</b>	Specifies the Pseudo-Wire (PW) service instance ID. It is used to uniquely identify the VPWS and it must be unique at both Provider Edges (PEs). The range is 1-4294967295.
<b>IP-ADDRESS</b>	Specifies the peer LSR ID that is used to identify the other end PE.
<b>raw</b>	(Optional) Specifies that the PW type is in the Ethernet-raw mode. For this type, S-tags are never sent over the PW.
<b>tagged</b>	Specifies that the PW type is in the Ethernet-tag mode. For this type, S-tags shall be sent over the PW. By default, the PW type is in the Ethernet-tag mode.
<b>mtu</b>	(Optional) Specifies the local CE-PE link MTU that will be advertised to a remote peer. If the MTU is specified as 0, the LDP will not advertise the local MTU. The MTU must be the same at both local and remote, otherwise, the PW will not function correctly. If not specified, the default MTU is 1500. <b>Note:</b> The specified MTU must be the same as the real MTU of the CE-PE link.

<b>Default</b>	No VPWS on interface.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 15.
<b>Usage Guideline</b>	<p>When creating the VPWS on a physical port or link aggregation group, the service is Ethernet-based and this Ethernet port or link aggregation group is the AC. When creating the VPWS on a VLAN sub-interface, of a port interface, the service is Ethernet VLAN-based and this VLAN sub-interface of the port interface is the AC. The interface that is specified will be used as the AC and cannot be a Layer 3 interface.</p> <p>The <b>no xconnect</b> command can be used to cancel a VPWS service. If PW redundancy, of the VPWS service, is enabled, this command will also cancel the PW redundancy of the VPWS service.</p>

**Example** This example is used to show how to configure VPWS. The AC from the Customer Edge (CE) Bridge to PE is in VLAN 10 of port 1. Assume the MPLS interfaces of the PEs are in VLAN 20 and the VC-ID is 2. To generate VLAN 10 packets from the CE, one can be transmitted to the other end through the MPLS network. Configure PE1 and PE2 as follows:

PE1:

```
DXS-3600-32S(config)#interface vlan 20
DXS-3600-32S(config-if)#mpls ip
DXS-3600-32S(config-if)#mpls label protocol ldp
DXS-3600-32S(config-if)#exit
DXS-3600-32S(config)#mpls ip
DXS-3600-32S(config)#mpls label protocol ldp
DXS-3600-32S(config)#mpls router-id 110.1.1.1
DXS-3600-32S(config-mpls-router)#exit
DXS-3600-32S(config)#interface GigabitEthernet 1/0/1
DXS-3600-32S(config-if)#encapsulation dot1q 10
DXS-3600-32S(config-subif)#xconnect 2 130.1.1.2 encapsulation mpls
DXS-3600-32S(config-subif)#
```

PE2:

```

DXS-3600-32S(config)#interface vlan 20
DXS-3600-32S(config-if)#mpls ip
DXS-3600-32S(config-if)#mpls label protocol ldp
DXS-3600-32S(config-if)#exit
DXS-3600-32S(config)#mpls ip
DXS-3600-32S(config)#mpls label protocol ldp
DXS-3600-32S(config-mpls-router)#ldp router-id 130.1.1.2
DXS-3600-32S(config-mpls-router)#exit
DXS-3600-32S(config)#interface GigabitEthernet 1/0/1
DXS-3600-32S(config-if)#encapsulation dot1q 10
DXS-3600-32S(config-subif)#xconnect 2 110.1.1.1 encapsulation mpls

```

## 68-2 show mpls l2transport vc

This command is used to display the VPWS VC information.

```
show mpls l2transport vc [VC-ID] [detail]
```

### Parameters

<i>VC-ID</i>	Specifies to display the specified PW ID only.
<b>detail</b>	Specifies to display detailed PW information.

<b>Default</b>	None.
<b>Command Mode</b>	EXEC Mode.
<b>Command Default Level</b>	Level: 3.
<b>Usage Guideline</b>	None.

**Example** This example is used to display information of all VCs.

```
DXS-3600-32S#show mpls l2transport vc
```

VC ID	Peer	Local AC	Type	Oper Status
1	150.1.1.4	Eth1/0/1/VLAN2	Raw	Up
2	130.1.1.2	Eth1/0/1/VLAN3	Tagged	Down
3	140.1.1.2	Eth1/0/1/VLAN4	Tagged	Up
4	160.1.1.2	Eth1/0/1/VLAN4	Tagged	Standby

```
Total Entries: 4
```

```
DXS-3600-32S#
```

**Example** This example is used to display detailed information of VC 1.

```
DXS-3600-32S#show mpls l2transport vc 1 detail

VC ID: 1, Peer IP Address: 150.1.1.4, Operate Status: Up
  Local AC: Eth1/0/1/VLAN2, Status: Up
Remote AC Status: Up
  MPLS VC Labels: Local 16, Remote 16
  Outbound Tunnel label: 100
  MTU: Local 1500, Remote 1500
  Group ID: Local 0, Remote 0
  Signaling Protocol: LDP
VC Statistics:
  RX Bytes: 0, RX Packets: 0
  TX Bytes: 0, TX Packets: 0

Total Entries: 1

DXS-3600-32S#
```

**Example** This example is used to display detailed information of VC 3 belonged to PW redundancy.

```
DXS-3600-32S#show mpls l2transport vc 3 detail

VC ID: 3, Peer IP Address: 140.1.1.2, Operate Status: Up, Primary
  Local AC: Eth1/0/1/VLAN4, Status: Up
Remote AC Status: Up
  MPLS VC Labels: Local 17, Remote 17
  Outbound Tunnel label: 101
  MTU: Local 1500, Remote 1500
  Group ID: Local 0, Remote 0
  Signaling Protocol: LDP
VC Statistics:
  RX Bytes: 0, RX Packets: 0
  TX Bytes: 0, TX Packets: 0

VC ID: 3, Peer IP Address: 160.1.1.2, Operate Status: Up, Backup
  Local AC: Eth1/0/1/VLAN4, Status: Standby
Remote AC Status: Up
  MPLS VC Labels: Local 18, Remote 18
  Outbound Tunnel label: 102
  MTU: Local 1500, Remote 1500
  Group ID: Local 0, Remote 0
  Signaling Protocol: LDP
VC Statistics:
  RX Bytes: 0, RX Packets: 0
  TX Bytes: 0, TX Packets: 0

Total Entries: 2

DXS-3600-32S#
```

### 68-3 xconnect backup

This command is used to enable the PW redundancy of the VPWS service on an interface. Use the **no xconnect backup** command to cancel the PW redundancy of the VPWS service.

```
xconnect backup VC-ID IP-ADDRESS
no xconnect backup
```

**Parameters**

<i>VC-ID</i>	Specifies the PW service instance ID. It is used to uniquely identify the VPWS and it must be unique at both PEs. The range is 1-4294967295.
<i>IP-ADDRESS</i>	Specifies the peer LSR ID that is used to identify the other end's PE.

**Default** No PW redundancy of VPWS on the interface.

**Command Mode** Interface Configuration Mode.

**Command Default Level** Level: 15.

**Usage Guideline** This command can be used to enable PW redundancy of a VPWS service. It will create a backup pseudowire service. Before this command is executed, the VPWS service i.e. primary pseudowire must be existed. The backup pseudowire will have same PW type and MTU with primary pseudowire. There should be one primary pseudowire and one backup pseudowire set up for PW redundancy of the VPWS service. In normal situations, the primary pseudowire is link up and the backup pseudowire is in link standby. The packet forwarding in the VPWS service will work in the primary pseudowire. But when the LDP hello procedure or other situations are found when the primary pseudowire link down happens, the backup pseudowire will be changed to link up to manage packet forwarding in the VPWS service. After the primary pseudowire was recovered to link up again, the backup pseudowire will toggle back to link standby, and the packet forwarding in the VPWS service will be managed by the primary pseudowire again.

**Example** This example is used to configure PW redundancy for a VPWS, which will add a backup PW to another PE.

```
DXS-3600-32S(config)#interface vlan 20
DXS-3600-32S(config-if)#mpls ip
DXS-3600-32S(config-if)#mpls label protocol ldp
DXS-3600-32S(config-if)#exit
DXS-3600-32S(config)#mpls ip
DXS-3600-32S(config)#mpls label protocol ldp
DXS-3600-32S(config-mpls-router)#ldp router-id 110.1.1.1
DXS-3600-32S(config-mpls-router)#exit
DXS-3600-32S(config)#interface GigabitEthernet 1/0/1
DXS-3600-32S(config-if)#encapsulation dot1q 10
DXS-3600-32S(config-subif)#xconnect 2 130.1.1.2 encapsulation mpls
DXS-3600-32S(config-subif)#xconnect backup 2 120.1.1.2
```

# Virtual Router Redundancy Protocol (VRRP) Commands

## 69-1 vrrp authentication

This command is used to enable VRRP authentication and set the password on an interface. Use the no form of this command to remove the authentication.

```
vrrp authentication string
no vrrp authentication
```

### Parameters

<i>string</i>	Specifies the plaintext authentication password (8 bytes).
---------------	--

<b>Default</b>	By default no authentication is configured.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 8. (EI Mode Only Command)
<b>Usage Guideline</b>	<p>This command is used to enable VRRP authentication on an interface. The authentication is applied to all virtual routers on this interface. The devices in the same VRRP group must have the same authentication password.</p> <p>Use the command <b>show vrrp</b> to verify your settings.</p>

**Example** This example shows how to configure one interface's VRRP authentication.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface vlan 1
DXS-3600-32S(config-if)#vrrp authentication test
DXS-3600-32S(config-if)#
```

## 69-2 vrrp critical-ip

This command is used to set the critical IP address of a virtual router. Use the no form of this command to remove the critical IP address.

```
vrrp vrid critical-ip ip-address
no vrrp vrid critical-ip
```

### Parameters

<i>vrid</i>	Specifies the virtual router identifier. The valid range is from 1 to 255.
<i>ip-address</i>	Specifies the critical IP address.

<b>Default</b>	By default, no critical IP address is configured.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 8. (EI Mode Only Command)
<b>Usage Guideline</b>	<p>This command is used to set the critical IP address for one virtual router. If the critical IP is configured on one virtual router, the virtual router can not be active when the critical IP address is unreachable. The critical IP address is a valid host address and must belong to one existing interface on switch.</p> <p>Use command <b>show vrrp</b> to verify your settings.</p>



**Example** This example shows how to set the critical IP address of virtual router 1 on the interface 'vlan1'.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface vlan1
DXS-3600-32S(config-if)#vrrp 1 critical-ip 192.168.100.1
DXS-3600-32S(config-if)#
```

## 69-3 vrrp ip

This command is used to create a VRRP router. Use the no form of this command to remove a VRRP router.

```
vrrp vrid ip ip-address
no vrrp vrid
```

### Parameters

<i>vrid</i>	Specifies the virtual router identifier that identifies the VRRP group. The valid range is from 1 to 255.
<i>ip-address</i>	Specifies the IP address for the virtual router.

**Default** No virtual group is created on the interface.

**Command Mode** Interface Configuration Mode.

**Command Default Level** Level: 8. (EI Mode Only Command)

**Usage Guideline** This command creates a virtual router and specifies its IP address. All routers in the same VRRP group must be configured with the same virtual router ID and IP address. A virtual router group is represented by a virtual router ID. The IP address of the virtual router is the default router configured on hosts. The virtual router's IP address can be a real address configured on the routers, or an unused IP address. If the virtual router address is a real IP address, the router that has this IP address is the IP address owner.

A master will be elected in a group of routers that supports the same virtual routers. Others are the backup routers. The master is responsible for forwarding the packets that are sent to the virtual router. The limitation about the number of supported virtual router groups is project dependent.

Use the command **show vrrp** to verify your settings.

**Example** This example shows how to create a VRRP virtual router on an interface.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface vlan 1
DXS-3600-32S(config-if)#vrrp 1 ip 10.1.1.100
DXS-3600-32S(config-if)#
```

**Example** This example shows how to remove the VRRP virtual router.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface vlan 1
DXS-3600-32S(config-if)#no vrrp 1
DXS-3600-32S(config-if)#
```

## 69-4 vrrp preempt

This command is used to allow a router to take over the master role if it has a better priority than the current master. Use the no form of the command to restore to the default setting.

**vrp vrid preempt**  
**no vrrp vrid preempt**

### Parameters

<i>vrid</i>	Specifies the virtual router identifier. The valid range is from 1 to 255.
-------------	--

<b>Default</b>	By default, the preempt mode is enabled.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	<p>In preempt mode, a router will take over the master role if it has a better priority than the current master. To reduce unnecessary changes to the role in an unstable network, the router will delay the process of taking over the master role for the specified period of time. In non-preempt mode, the master will not be preempted unless the incoming router is the IP address owner of the virtual router.</p> <p>Use the command <b>show vrrp</b> to verify your settings.</p>

**Example** This example shows how to configure the router for VRRP group 7 to preempt the current master router.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface vlan 1
DXS-3600-32S(config-if)#vrrp 7 preempt
DXS-3600-32S(config-if)#
```

**Example** This example shows how to configure the router to disable the preempt function of the virtual router.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface vlan 1
DXS-3600-32S(config-if)#no vrrp 7 preempt
DXS-3600-32S(config-if)#
```

## 69-5 vrrp priority

This command is used to set the priority of a virtual router. Use the no form of this command to restore to the default priority,

**vrrp vrid priority priority**  
**no vrrp vrid priority**

### Parameters

<i>vrid</i>	Specifies the virtual router identifier. The valid range is from 1 to 255.
<i>priority</i>	Specifies the priority of the virtual router. A higher value means a higher priority. The valid range is from 1 to 254.

<b>Default</b>	The default value of priority of virtual router is 100.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )

**Usage Guideline** The master of a virtual router is elected based on the priority setting. The router that owns the virtual router IP address has the highest priority to be elected.

The router with the highest priority will become the master, and other routers with a lower priority will then act as the backup for the virtual router. Each router should be configured with different priority values. If there are multiple routers with the same highest priority value, the router with the highest numbers in its IP address will become the master. The router that is the IP address owner of the VRRP group is always the master of the VRRP group.

Use the command **show vrrp** to verify your settings.

**Example** This example shows how to configure the priority of VRRP group 7 to be 200 on interface vlan1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface vlan 1
DXS-3600-32S(config-if)#vrrp 7 priority 200
DXS-3600-32S(config-if)#
```

**Example** This example shows how to reset the priority of VRRP group 7 to the default value on interface vlan1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface vlan 1
DXS-3600-32S(config-if)#no vrrp 7 priority
DXS-3600-32S(config-if)#
```

## 69-6 vrrp timers advertise

This command is used to configure the interval between successive VRRP advertisements by the master router. Use the no form of this command to restore to the default value.

```
vrrp vrid timers advertise interval
no vrrp vrid timers advertise
```

### Parameters

<i>vrid</i>	Specifies the virtual router identifier. The valid range is from 1 to 255.
<i>interval</i>	Specifies the time interval between successive advertisements by the master router. The unit of the interval is second. The valid value is from 1 to 255.

**Default** The default value of advertisement interval is 1 second.

**Command Mode** Interface Configuration Mode.

**Command Default Level** Level: 8. (EI Mode Only Command)

**Usage Guideline** The maser will constantly send the VRRP advertisements to communicate the related information of the current master virtual router. The vrrp timers advertise command configures the interval between advertisement packets and the time before other routers declare the master router as down. All routers in a VRRP group must use the same timer values.

Use the command **show vrrp** to verify your settings.

**Example** This example shows how to configure the router to send advertisements for VRRP 7 every 10 seconds on interface vlan1.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface vlan 1
DXS-3600-32S(config-if)#vrrp 7 timers advertise 10
DXS-3600-32S(config-if)#
```

**Example** This example shows how to configure the advertisement interval to use the default settings.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface vlan 1
DXS-3600-32S(config-if)#no vrrp 7 timers advertise
DXS-3600-32S(config-if)#
```

## 69-7 show vrrp

This command is used to display the VRRP status.

```
show vrrp [interface ipif_name [group vrid]] [brief]
```

### Parameters

<b>interface</b> <i>ipif_name</i>	Displays information about the virtual routers that belong to specified interface.
<i>vrid</i>	Displays the detailed information about the specified virtual router. The valid range is from 1 to 255.
<b>brief</b>	Displays brief information.

**Default** None.

**Command Mode** Privileged EXEC Mode.

**Command Default Level** Level: 3. (EI Mode Only Command)

**Usage Guideline** Use this command to show the VRRP related setting and status.

**Example** This example shows brief information about all virtual routers.

```
DXS-3600-32S#show vrrp brief
```

```
Interface      Grp Pri Own Pre State  Master addr  Group addr
vlan1          1  255 Y  Y  Master  10.1.1.1    10.1.1.1
vlan1          2  100   Y  Master  10.1.1.1    10.1.1.101
vlan2          1   50   Y  Init   100.1.1.1   100.1.1.100
```

```
DXS-3600-32S#
```

**Example** This example shows brief information about the virtual routers belong to interface 'vlan2'.

```
DXS-3600-32S#show vrrp interface vlan2 brief
```

```
Interface      Grp Pri Own Pre State  Master addr  Group addr
vlan2          1   50   Y  Init   100.1.1.1   100.1.1.100
```

```
DXS-3600-32S#
```

**Example** This example shows brief information about the group 1 on interface 'vlan1'.

```
DXS-3600-32S#show vrrp interface vlan1 group 1 brief

Interface      Grp Pri Own Pre State   Master addr   Group addr
vlan1          1  255 Y  Y  Master  10.1.1.1     10.1.1.1

DXS-3600-32S#
```

**Example** This example shows detailed information about all virtual routers.

```
DXS-3600-32S#show vrrp

vlan1 - Group 1
  State is Master
  Virtual IP Address is 10.1.1.1
  Virtual MAC Address is 00-00-5E-00-01-01
  Advertisement Interval is 1 seconds
  Preemption is enabled
  Priority is 255
  Master Router is 10.1.1.1

vlan1 - Group 2
  State is Master
  Virtual IP Address is 10.1.1.101
  Virtual MAC Address is 00-00-5E-00-01-02
  Advertisement Interval is 1 seconds
  Preemption is enabled
  Priority is 100
  Master Router is 10.1.1.1

vlan2 - Group 1
  State is Init
  Virtual IP Address is 100.1.1.100
  Virtual MAC Address is 00-00-5E-00-01-01
  Advertisement Interval is 1 seconds
  Preemption is enabled
  Priority is 100
  Authentication is enabled
  Authentication Text is 12345678
  Master Router is 100.1.1.1

DXS-3600-32S#
```

**Example** This example shows detailed information about groups on interface 'vlan1'.

```
DXS-3600-32S#show vrrp interface vlan1

vlan1 - Group 1
  State is Master
  Virtual IP Address is 10.1.1.1
  Virtual MAC Address is 00-00-5E-00-01-01
  Advertisement Interval is 1 seconds
  Preemption is enabled
  Priority is 255
  Master Router is 10.1.1.1

vlan1 - Group 2
  State is Master
  Virtual IP Address is 10.1.1.101
  Virtual MAC Address is 00-00-5E-00-01-02
  Advertisement Interval is 1 seconds
  Preemption is enabled
  Priority is 100
  Master Router is 10.1.1.1

DXS-3600-32S#
```

**Example** This example shows detailed information about group 1 on interface 'vlan1'.

```
DXS-3600-32S#show vrrp interface vlan1 group 1

vlan1 - Group 1
  State is Master
  Virtual IP Address is 10.1.1.1
  Virtual MAC Address is 00-00-5E-00-01-01
  Advertisement Interval is 1 seconds
  Preemption is enabled
  Priority is 255
  Master Router is 10.1.1.1

DXS-3600-32S#
```

Display Parameters	Description
<b>Interface</b>	Interface name the virtual routers belong to.
<b>Grp</b>	Group ID, the identifier of virtual router, as specified with the <b>vrrp ip</b> command.
<b>Pri</b>	The priority of virtual router, as specified with the <b>vrrp priority</b> command.
<b>Own</b>	"Y" represents IP address owner.
<b>Pre</b>	The preempt mode of virtual router, as specified with the <b>vrrp preempt</b> command. "Y" represents the preempt mode is enabled.
<b>State</b>	State of this virtual router, which could be Master, Backup or Init.
<b>Master addr</b>	The IP address of the interface that the Master virtual router belongs to.
<b>Group addr</b>	The IP address of virtual router, as specified with the <b>vrrp ip</b> command.

## 69-8 debug vrrp

This command is used to turn on the VRRP debug function. Use the no form of the command to turn off the VRRP debug function.

```
debug vrrp
no debug vrrp
```

<b>Parameters</b>	None.
<b>Default</b>	By default the VRRP debug is turned off.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 8. ( <b>EI Mode Only Command</b> )
<b>Usage Guideline</b>	Use this command to turn on or turn off the VRRP debug function.

**Example** This example shows how to turn on the VRRP debug function.

```
DXS-3600-32S#debug vrrp
DXS-3600-32S#
```

## 69-9 debug vrrp errors

This command is used to turn on the VRRP error prompt debug switch. Use the no form of the command to turn off the VRRP error prompt debug switch.

```
debug vrrp errors
no debug vrrp errors
```

<b>Parameters</b>	None.
-------------------	-------

---

<b>Default</b>	By defaultn the VRRP error prompt debug switch is turned off.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	Use this command to turn on or turn off the VRRP error prompt debug switch.

**Example** This example shows how to turn on the VRRP error prompt debug switch.

```
DXS-3600-32S#debug vrrp errors
DXS-3600-32S#
```

```
Received an ADV msg with incorrect checksum on VR 1 at interface vlan1
Received an ADV msg with incorrect checksum on VR 1 at interface vlan1
Received an ADV msg with incorrect checksum on VR 1 at interface vlan1
```

---

## 69-10 debug vrrp events

This command is used to turn on the VRRP event debug switch. Use the no form of the command to turn off the VRRP event debug switch.

```
debug vrrp events
no debug vrrp events
```

<b>Parameters</b>	None.
<b>Default</b>	By default, the VRRP event debug switch is turned off.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	Use this command to turn on or turn off all VRRP event debug switch.

**Example** This example shows how to turn on the VRRP event debug switch.

```
DXS-3600-32S#debug vrrp events
DXS-3600-32S#
```

```
interface vlan2 link up
interface vlan2 link down
Master received a higher priority ADV msg at VR 2 at interface vlan1
Master received a higher priority ADV msg at VR 2 at interface vlan1
Authentication type mismatch on VR 1 at interface vlan1
```

---

## 69-11 debug vrrp packets

This command is used to turn on the VRRP packet debug switch. Use the no form of the command to turn off the VRRP packet debug switch.

```
debug vrrp packets
no debug vrrp packets
```

<b>Parameters</b>	None.
<b>Default</b>	By default, the VRRP packet debug switch is turned off.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	Use this command to turn on or turn off all VRRP packet debug switch.

**Example**

This example shows how to turn on the VRRP packet debug switch.

```
DXS-3600-32S#debug vrrp packets
DXS-3600-32S#

Received an ADV msg at VR 2 on interface vlan1
Received an ADV msg at VR 2 on interface vlan1
Received an ADV msg at VR 2 on interface vlan1
Send out an ADV msg at VR 1 at interface vlan1 priority 255
Send out an ADV msg at VR 1 at interface vlan1 priority 255
Send out an ADV msg at VR 1 at interface vlan1 priority 255
```

**69-12 debug vrrp state**

This command is used to turn on the VRRP state debug switch. Use the no form of the command to turn off the VRRP state debug switch.

```
debug vrrp state
no debug vrrp state
```

<b>Parameters</b>	None.
<b>Default</b>	By default, the VRRP state debug switch is turned off.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	Use this command to turn on or turn off the VRRP state debug switch.

**Example**

This example shows how to turn on the VRRP state debug switch.

```
DXS-3600-32S#debug vrrp state
DXS-3600-32S#

VR 1 at interface vlan1 switch to Master
VR 2 at interface vlan1 switch to Master
VR 1 at interface vlan2 switch to Init
```

**69-13 debug vrrp log**

This command is used to turn on the log of VRRP. Use the no form of the command to turn off the log of VRRP.

```
debug vrrp log
no debug vrrp log
```

<b>Parameters</b>	None.
<b>Default</b>	By default, the log of VRRP is turned off.
<b>Command Mode</b>	Privileged EXEC Mode.
<b>Command Default Level</b>	Level: 8. (EI Mode Only Command)
<b>Usage Guideline</b>	Use this command to turn on or turn off the log of VRRP. When the log of VRRP is turned on and there are some VRRP change events, some logs will be recorded.

**Example**

This example shows how to turn on the log of VRRP.

```
DXS-3600-32S#debug vrrp log
DXS-3600-32S#
```





# VLAN Mapping Commands

## 70-1 vlan mapping profile

This command is used to enter the VLAN mapping profile configuration mode. If the VLAN mapping profile doesn't exist, it will be created. Use no command to remove the VLAN mapping profile.

```
vlan mapping profile ID [type [ethernet | ip | ipv6]]
no vlan mapping profile ID
```

### Parameters

<i>ID</i>	Specifies the ID of the VLAN mapping profile. A lower ID has a higher priority. The ID range is from 1 to 1000.
<b>type</b>	Specifies the profile types. Different profiles can match different fields. <b>ethernet:</b> The profile can match L2 fields. <b>ip:</b> The profile can match L3 IP fields. <b>ipv6:</b> The profile can match IPv6 destination or source address.

<b>Default</b>	No VLAN mapping profile.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	A VLAN mapping profile can be used to provide flexible and powerful flow-based VLAN translation.  Creating a VLAN mapping profile, users must specify the type to decide which fields can be matched by the profile rules.

**Example** This example shows how to create a VLAN mapping profile for matching Ethernet fields.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#vlan mapping profile 1 type ethernet
DXS-3600-32S(config-vlan-map)#
```

## 70-2 vlan mapping rule

This command is used to configure the VLAN mapping rules of the profile. Use the no rule command to remove the previous configured rules

```
rule {SN} match [src-mac MAC-ADDRESS | dst-mac MAC-ADDRESS | priority COS-VALUE | inner-vid VLAN-ID | ether-type VALUE | src-ip NETWORK-PREFIX | dst-ip NETWORK-PREFIX | src-ipv6 IPV6-NETWORK-PREFIX / PREFIX-LENGTH | dst-ipv6 IPV6-NETWORK-PREFIX / PREFIX-LENGTH | dscp VALUE | src-port VALUE | dst-port VALUE | ip-protocol VALUE] {dot1q-tunnel | translate} outer-vid VLAN-ID [priority COS-VALUE] [inner-vid VLAN-ID]
no rule SN [- | ,]
```

### Parameters

<i>SN</i>	(Optional) Specifies the sequence number of the VFP rule. If not specified, the <i>SN</i> begins from 10 and the increment is 10. The <i>SN</i> range is from 1 to 10000.
<b>action</b>	Specifies that the following parameters are lookup fields of the rule.
<b>src-mac</b> <i>MAC-ADDRESS</i>	Specifies the source MAC address.
<b>dst-mac</b> <i>MAC-ADDRESS</i>	Specifies the destination MAC address.
<b>priority</b> <i>COS-VALUE</i>	Specifies the 802.1p priority.
<b>inner-vid</b> <i>VLAN-ID</i>	Specifies the inner VLAN ID.

<b>ether-type</b> <i>VALUE</i>	Specifies the Ethernet type.
<b>src-ip</b> <i>NETWORK-PREFIX</i>	Specifies the source IPv4 address.
<b>dst-ip</b> <i>NETWORK-PREFIX</i>	Specifies the destination IPv4 address.
<b>src-ipv6</b> <i>IPV6-NETWORK-PREFIX / PREFIX-LENGTH</i>	Specifies the source IPv6 address.
<b>dst-ipv6</b> <i>IPV6-NETWORK-PREFIX / PREFIX-LENGTH</i>	Specifies the destination IPv6 address.
<b>dscp</b> <i>VALUE</i>	Specifies the DSCP value.
<b>src-port</b> <i>VALUE</i>	Specifies the source TCP/UDP port number.
<b>dst-port</b> <i>VALUE</i>	Specifies the destination TCP/UDP port number.
<b>ip-protocol</b> <i>VALUE</i>	Specifies the L3 protocol value.
<b>action</b>	Specifies the follows parameters are the action for matched packets.
<b>drop</b>	Specifies that the matched packets will be dropped.
<b>dot1q-tunnel</b>	Specifies the follows outer-vid will be added for matched packets.
<b>translate</b>	Specifies the follows outer-vid will replace the outer-vid of the matched packets.
<b>outer-vid</b> <i>VLAN-ID</i>	Specifies the new outer VLAN ID.
<b>priority</b> <i>COS-VALUE</i>	(Optional) Specifies the 802.1p priority in the new outer TAG.
<b>inner-vid</b> <i>VLAN-ID</i>	(Optional) Specifies the new inner VLAN ID.

<b>Default</b>	No VLAN mapping rule.
<b>Command Mode</b>	VLAN Mapping Profile Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	<p>The <b>rule</b> command is used to configure the VLAN mapping rules of the profile. If a profile is applied on an interface, the switch tests the incoming packets according to the rules of the profile. If the packets match a rule, the action of the rule will be taken. The action may be adding or replacing the outer-VID. Optional, you can specify the priority of the new outer-TAG or specify the packets new inner-VID. If no specified, the priority of the new outer-TAG is the incoming port default priority and the inner-VID will not be modified.</p> <p>The test order depends on the rule's sequence number of the profile and stopped when first matched. If no specifies the sequence number, it will be allocated automatically. The sequence number begins from 10 and the increment is 10. Multiple different types of profiles could be configured onto one interface.</p>

**Example** This example shows how to configure rules for VLAN mapping profile 10.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#vlan mapping profile 1
DXS-3600-32S(config-vlan-map)#rule 10 match src-ip 100.1.1.0/24 dot1q-tunnel outer-vid 100
DXS-3600-32S(config-vlan-map)#rule 20 match dst-ip 200.1.1.0/24 dot1q-tunnel outer-vid 200
DXS-3600-32S(config-vlan-map)#rule 30 match src-ip 254.1.1.0/24 dot1q-tunnel outer-vid 300
DXS-3600-32S(config-vlan-map)#
```

**Example** This example shows how to remove previous configured VLAN mapping rules.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#vlan mapping profile 1
DXS-3600-32S(config-vlan-map)#no rule 10
DXS-3600-32S(config-vlan-map)#no rule 20
DXS-3600-32S(config-vlan-map)#no rule 30
DXS-3600-32S(config-vlan-map)#
```

## 70-3 show vlan mapping profile

This command is used to display previously configured VLAN mapping profile information.

```
show vlan mapping profile [ID]
```

### Parameters

<i>ID</i>	(Optional) Specifies the ID of the VLAN mapping profile. If not specified, all configured VLAN mapping profiles will be displayed..
-----------	---

<b>Default</b>	None.
<b>Command Mode</b>	EXEC Mode.
<b>Command Default Level</b>	Level: 3
<b>Usage Guideline</b>	Use this command to display previously configured VLAN mapping profile information.

**Example** This example shows all VLAN mapping profile information.

```
DXS-3600-32S#show vlan mapping profile

VLAN mapping profile:1  type:ethernet
rule 10 match src-ip 100.1.1.0/24, dot1q-tunnel outer-vid 100
rule 20 match dst-ip 200.1.1.0/24, dot1q-tunnel outer-vid 200
rule 30 match src-ip 300.1.1.0/24, dot1q-tunnel outer-vid 300
VLAN mapping profile 2: type:ethernet
rule 10 match src-mac 00-00-00-00-00-01, translate outer-vid 40
rule 20 match outer-vid 5, translate outer-vid 10

Total Entries: 2

DXS-3600-32S#
```

## 70-4 switchport vlan mapping profile

This command is used to apply the VLAN mapping rules of profile to specified interface. Use **no switchport vlan-mapping profile** command to remove the application.

```
switchport vlan mapping profile ID
no switchport vlan mapping profile ID
```

### Parameters

<i>ID</i>	Specifies the VLAN mapping profile ID.
-----------	--

<b>Default</b>	None.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 12

**Usage Guideline**

Use this command to apply the VLAN mapping profile to specified interface. The interface can be a physical port or a link aggregation group which is set to dot1q tunnel mode.

If a profile is applied on an interface, the switch tests the incoming packets according the rules of the profile. If the packets match a rule, the action of the rule will be taken. And the switch stops the testing of the profile.

Setting the port mode to no dot1q tunnel will lead to its VLAN mapping profile configuration is cleaned.

**Example**

This example shows how to configure a VLAN mapping profile and apply it to UNI port 1. The customer packets that go to 100.1.1.0/24 will be added to S-VLAN 100 and the packets that go to 200.1.1.0/24 will be added to S-VLAN 200.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#vlan mapping profile 1 type ip
DXS-3600-32S(config-vlan-map)#rule 10 match src-ip 100.1.1.0/24 dot1q-tunnel out
er-vid 100
DXS-3600-32S(config-vlan-map)#rule 20 match dst-ip 200.1.1.0/24 dot1q-tunnel out
er-vid 200
DXS-3600-32S(config-vlan-map)#exit
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#switchport vlan mapping profile 1
```

The interface shall be dot1q-tunnel port.

```
DXS-3600-32S(config-if)#
```

# VLAN Tunnel Commands

## 71-1 switchport mode dot1q-tunnel

This command is used to specify the port as a **dot1q-tunnel** port. Use the no command to reset the VLAN mode to default setting.

```
switchport mode dot1q-tunnel
no switchport mode
```

<b>Parameters</b>	None.
<b>Default</b>	By default, the switch port is operated as an access port.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	This command is available for physical ports or link aggregation groups that are no trunk mode.

An 802.1q tunnel port behaves as an UNI port on the provider edge bridge. Setting an interface to 802.1q tunnel mode will lead to the GVRP disable on it. A service VLAN will be added for packets which ingress from the 802.1q tunnel port. The service VLAN assignment method can be flow-based, C-VLAN based or port-based.

If the content (include DA, SA, DIP, SIP etc) of the incoming packet matches a flow-based VLAN mapping rule that is configured on this 802.1q tunnel port, the service VLAN will be assigned according the flow-based VLAN mapping rule.

If the C-VLAN tag of the incoming packet matches a C-VLAN based VLAN mapping rule that is configured on this port, the service VLAN will be assigned according the C-VLAN based VLAN mapping rule.

The service VLAN will be assigned according to the port-based VLAN of this port. If the inner-priority-trust is enabled on this port, the L2 priority in the C-VLAN tag will be copied to the service VLAN. Otherwise, the priority in the service VLAN tag is the default priority of this port.

When the service VLAN tagged packets are transmitted out from the 802.1q tunnel port, the service VLAN tag will be stripped.

If you configured layer 2 protocol tunneling on the 802.1q tunnel port, the layer 2 protocol packets will be tunneled to remote PE. Otherwise, the layer 2 protocol packets received on this port will be discarded.

Layer 3 routing protocols cannot be running on the 802.1q tunnel port. Other layer 3 application packets maybe tunneled to remote PE.

Management of a Provider Edge Bridge is directly under the control of the service provider. Provider network customers shall not have access to managed objects related to elements of Provider Bridges within the provider network [IEEE 802.1ad -- 16.6].

**Example** This example shows how to set an interface port 1 as a **dot1q tunnel** port.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#switchport mode dot1q-tunnel
DXS-3600-32S(config-if)#
```

## 71-2 frame-tag tpid

This command is used to specify the outer TPID associated with a NNI port.

```
frame-tag tpid TPID
no frame-tag tpid
```

### Parameters

<i>TPID</i>	Specifies the TPID for the outer VLAN tag. The value is in hexadecimal form. Range is 0x0 to 0xFFFF.
-------------	--

<b>Default</b>	The default value is 0x8100.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	<p>This command is available for physical ports or link aggregation groups that are set to trunk mode only.</p> <p>This setting is only effective for trunk port that is used as service provider NNI port. When packets are egress from NNI port, its TPID in the service VLAN tag will be set according the configuration.</p> <p>Setting port to no trunk mode leads to its outer TPID reset to default value.</p>

**Example** This example shows how to set the TPID of interface port 1 to 0x88A8.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#switchport mode trunk
DXS-3600-32S(config-if)#frame-tag tpid 0x88a8
DXS-3600-32S(config-if)#
```

## 71-3 switchport vlan mapping

This command is used to specify the VLAN translation or selective QinQ rule. Use no command to remove the rule.

```
switchport vlan mapping ORIGINAL-VLAN [,|-] {[original-inner-vlan VLAN-ID] TRANSLATED-VLAN | dot1q-  
tunnel VLAN-ID} [priority COS-VALUE] [inner-vlan VLAN-ID]  
no switchport vlan mapping ORIGINAL-VLAN [,|-] [ORIGINAL-INNER-VLAN]
```

### Parameters

<i>ORIGINAL-VLAN</i>	Specifies the original VLAN ID that will be matched for incoming packets. The range is 1-4094.
<i>original-inner-vlan</i> <i>VLAN-ID</i>	(Optional) Specifies the original inner VLAN ID that will be matched for incoming packets. The range is 1-4094.
<i>TRANSLATED-VLAN</i>	Specifies the translated service VLAN ID. The range is 1-4094. The service VLAN will replace the original VLAN for matched packets.
<i>dot1q-tunnel</i> <i>VLAN-ID</i>	Specifies the service VLAN ID that will be added for matched packets.
<i>priority</i> <i>COS-VALUE</i>	(Optional) Specifies the priority for the rule. If no specified, the priority of the service VLAN tag will be set according the default priority of the reception port.
<i>inner-vlan</i> <i>VLAN-ID</i>	(Optional) Specifies the new inner VLAN that will replace original inner VLAN.

**Default** No VLAN mapping rule is configured.

<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	This command can be configured on physical ports or link aggregation groups. This command specifies the VLAN translation or selective QinQ rule on 801.1q tunnel or trunk port.

If the **dot1q-tunnel** parameter is specified in this command, the rule is selective QinQ. Once the C-VLAN tag of the incoming packet matches the specified original VLAN, the specified S-VLAN is added to make the packet becomes double tagged. You can specify a VLAN range to map multiple original VLANs to single S-VLAN. The selective QinQ shall be configured on 802.1q tunnel port. Otherwise, the rule will not take effect (its status is inactive).

If the translated VLAN parameter is specified in this command, the rule performs VLAN translation. Once the VLAN tag of the incoming packet matches the specified original VLAN, the specified S-VLAN replaces original VLAN. The VLAN translation is one-to-one mapping, i.e. you cannot configure multiple original VLANs map to single S-VLAN. The VLAN translation can be configured on both 802.1q tunnel or trunk port.

Optional, you can configure 2:1 VLAN translation rule by specified original inner VLAN parameter. In this case, the outer and inner tag of the incoming packets is used to match the VLAN translation rule. The outer VLAN of the matched packet is replaced by translated service VLAN and the original inner VLAN is no modified.

Moreover, you can configure 2:2 VLAN translation rule by specified inner-vlan parameter. In this case, the original inner VLAN of the matched packet will be replaced by the specified new inner VLAN too. Usually, the 2:1 and 2:2 VLAN translations are configured on trunk port.

If configured rule to translate an original VLAN to an S-VLAN, you shall not configure rule to translate other original VLAN to the S-VLAN, or configure selective QinQ rule bundling C-VLANs to the S-VLAN, vice versa.

If there is no VLAN mapping rule that match the incoming tagged packet, and the **vlan mapping drop** is enabled on the port, the packet will be dropped. If the **vlan mapping drop** is disabled, the port-based service VLAN will be assigned for the no matched packet.

Adding a port into a link aggregation group will lead to the VLAN mapping configuration on this member port is cleaned.

**Example** This example shows how to set VLAN translation on port 1. C-VLAN 1 is translated to S-VLAN 101, C-VLAN 2 is translated to S-VLAN 102 and C-VLAN 3 is translated to S-VLAN 103.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#switchport mode dot1q-tunnel
DXS-3600-32S(config-if)#switchport vlan mapping 1 100
DXS-3600-32S(config-if)#switchport vlan mapping 2 102
DXS-3600-32S(config-if)#switchport vlan mapping 3 103
DXS-3600-32S(config-if)#
```



**Example** This example shows how to set selective QinQ on port 2. C-VLANs 1-10 are mapped to S-VLAN 200.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/2
DXS-3600-32S(config-if)#switchport mode dot1q-tunnel
DXS-3600-32S(config-if)#switchport vlan mapping 1-10 dot1q-tunnel 200
DXS-3600-32S(config-if)#
```

**Example** This example shows how to set 2:1 VLAN translation on trunk port 3. This rule translates the outer VLAN 10 to 100 for the packet which has the original outer VLAN 10 and inner VLAN 20.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/3
DXS-3600-32S(config-if)#switchport mode trunk
DXS-3600-32S(config-if)#switchport vlan mapping 10 original-inner-vlan 20 100
DXS-3600-32S(config-if)#
```

## 71-4 inner-priority-trust

This command is used to set the trusting Dot1Q priority. Use no command to remove the setting.

**inner-priority-trust**

<b>Parameters</b>	None.
<b>Default</b>	No <b>trust dot1q priority</b> set.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	This command is available for on physical ports or link aggregation groups that are set to 802.1Q tunnel mode.  When trusting the Dot1Q priority on a Dot1Q tunnel port, the priority of the Dot1Q VLAN tag in the received packets will be copied to service VLAN tag. If no trust value is set, the priority of the service VLAN tag will be assigned according to the default priority of the reception port.

**Example** This example shows how to set the interface port 1 to trust Dot1Q priority.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#switchport mode dot1q-tunnel
DXS-3600-32S(config-if)#inner-priority-trust
DXS-3600-32S(config-if)#
```

## 71-5 insert-dot1q-tag

This command is used to specify the Dot1Q VLAN tag inserting. Use the no command to remove the Dot1Q VLAN tag inserted.

**insert-dot1q-tag** *VLAN-ID*

### Parameters

<i>VLAN-ID</i>	Specifies the Dot1Q VLAN ID that is inserted to the untagged packets which are received on the Dot1Q tunnel port.
----------------	---

<b>Default</b>	No Dot1Q VLAN tag inserted.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	This command is available for on physical ports or link aggregation groups that are set to the 802.1Q tunnel mode.  If the <b>insert-dot1q-tag</b> is configured, when the untagged packets are received on the 802.1Q tunnel port, the specified Dot1Q VLAN tag will be inserted into it.

**Example** This example shows how to set an interface port 1 to insert inner tag with VLAN 10.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#switchport mode dot1q-tunnel
DXS-3600-32S(config-if)#insert-dot1q-tag 10
DXS-3600-32S(config-if)#
```

## 71-6 vlan mapping miss drop

This command is used to enable the dropping of VLAN mapping unmatched packets. Use the no command to disable the VLAN mapping miss dropping action.

```
vlan mapping miss drop
no vlan mapping miss drop
```

<b>Parameters</b>	None.
<b>Default</b>	VLAN mapping miss dropping is disabled.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 12
<b>Usage Guideline</b>	This command is available for on physical ports or link aggregation groups that are set to the 802.1Q tunnel mode.  If the VLAN mapping miss dropping option is enabled on the reception port, when the original VLAN of the received packets cannot match the VLAN mapping rules on this port, the received packets will be dropped.

**Example** This example shows how to set interface port 1 to enable the VLAN mapping miss dropping option.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/1
DXS-3600-32S(config-if)#switchport mode dot1q-tunnel
DXS-3600-32S(config-if)#vlan mapping miss drop
DXS-3600-32S(config-if)#
```

## 71-7 show dot1q-tunnel

This command is used to display Dot1Q VLAN tunneling configuration on interfaces.

```
show dot1q-tunnel [interface INTERFACE-ID [, | -]]
```

### Parameters

<b>interface <i>INTERFACE-ID</i></b>	(Optional) Specifies the interfaces that will be displayed. If not specified, display all 802.1Q tunnel ports.
--------------------------------------	--

<b>Default</b>	None.
<b>Command Mode</b>	EXEC Mode.
<b>Command Default Level</b>	Level: 3
<b>Usage Guideline</b>	This command is used to display the 802.1Q tunneling configuration on interfaces.

**Example** This example shows all 802.1Q tunnel port configurations.

```
DXS-3600-32S#show dot1q-tunnel

dot1q Tunnel Interface:TGi1/0/1
  Trust inner priority   :Enabled
  VLAN mapping miss drop:Enabled
  Insert dot1q tag       :VLAN10

dot1q Tunnel Interface:TGi1/0/2
  Trust inner priority   :Disabled
  VLAN mapping miss drop:Disabled

DXS-3600-32S#
```

## 71-8 show frame-tag tpid

This command is used to display the outer TPID configuration.

```
show frame-tag tpid [interface INTERFACE-ID [, | -]]
```

### Parameters

---

<b>interface</b> <i>INTERFACE-ID</i>	(Optional) Specifies the interfaces that will be displayed. If not specified, display the outer TPID of all trunk ports.
--------------------------------------	--

---

<b>Default</b>	None.
<b>Command Mode</b>	EXEC Mode.
<b>Command Default Level</b>	Level: 3
<b>Usage Guideline</b>	This command is used to display the outer TPID configuration on trunk ports.

**Example** This example shows the outer TPID of trunk ports.

```
DXS-3600-32S#show frame-tag tpid

Interface  TPID
-----  -
TGi1/0/3   0x8100

DXS-3600-32S#
```

## 71-9 show vlan mapping

This command is used to display the VLAN mapping configuration.

```
show vlan mapping [interface INTERFACE-ID [, | -]]
```

**Parameters**


---

**interface** *INTERFACE-ID* (Optional) Specifies the interfaces that will be displayed. If not specified, display the all VLAN mapping.

---

**Default** None.

**Command Mode** EXEC Mode.

**Command Default Level** Level: 3

**Usage Guideline** Use this command to display the VLAN mapping configuration.

**Example** This example shows all VLAN mappings.

```
DXS-3600-32S#show vlan mapping
```

Interface	Original VLAN	Translated VLAN	Priority	Status
-----	-----	-----	-----	-----
TGi1/0/1	1	translate 100	-	Active
TGi1/0/1	2	translate 102	-	Active
TGi1/0/1	3	translate 103	-	Active
TGi1/0/2	1-10	dot1q-tunnel 200	-	Active
TGi1/0/3	10/20	translate 100	-	Active

```
Total Entries : 5
```

```
DXS-3600-32S#
```

---

# VRF-Lite Commands

## 72-1 address-family ipv4 vrf

This command is used to enter the VRF address family configuration mode. Use the **no** form of this command to disable VRF address family configuration mode.

```
address-family ipv4 vrf vrf-name
no address-family ipv4 vrf vrf-name
```

### Parameters

<i>vrf-name</i>	Specifies the name of the VRF.
-----------------	--------------------------------

<b>Default</b>	By default, no VRF address family is specified.
<b>Command Mode</b>	Router Configuration Mode.
<b>Command Default Level</b>	Level: 8.
<b>Usage Guideline</b>	This command is used for configuring routing instances such as BGP or RIP that use IPv4 address prefixes. After executing this command, the address family configuration mode will be entered and a new routing instance may be created with this command. For example, in RIP, with this command, a new RIP routing instance will be created. Then use the command <b>show ip rip vrf</b> to check the settings. If the no form of this command is executed, the related routing instance will be removed and the command line will exit address family mode.

**Example** This example shows how to create a new RIP routing instance of VRF VPN-A.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)# ip vrf VPN-A
DXS-3600-32S(config-vrf)# exit
DXS-3600-32S(config)# interface vlan 1
DXS-3600-32S(config-if)# ip vrf forwarding VPN-A
DXS-3600-32S(config-if)# ip address 10.1.1.1 255.255.255.0
DXS-3600-32S(config-if)# exit
DXS-3600-32S(config)# router rip
DXS-3600-32S(config-router)# address-family ipv4 vrf VPN-A
DXS-3600-32S(config-router-af)#
```

**Example** This example shows how to disable the address family of the VRF VPN-A.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)# router rip
DXS-3600-32S(config-router)# no address-family ipv4 vrf VPN-A
DXS-3600-32S(config-router)#
```

## 72-2 exit-address-family

This command is used to exit the address family configuration mode.

```
exit-address-family
```

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Address Family Configuration Mode.
<b>Command Default Level</b>	Level: 8
<b>Usage Guideline</b>	This command is used to exit address family configuration mode.

**Example** This example shows how to exit the address family configuration mode.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)# router rip
DXS-3600-32S(config-router)# address-family ipv4 vrf VPN-A
DXS-3600-32S(config-router-af)#network 10.1.1.0
DXS-3600-32S(config-router-af)#exit-address-family
DXS-3600-32S(config-router)#
```

## 72-3 import map

This command is used to configure the import route map of one VRF. Use the **no** form of this command to delete the import route map.

```
import map route-map
no import map
```

### Parameters

<i>route-map</i>	Specifies the name of import route map of the VRF.
------------------	--

<b>Default</b>	By default, no import route map is specified to a VRF instance.
<b>Command Mode</b>	VRF Configuration Mode.
<b>Command Default Level</b>	Level: 15.
<b>Usage Guideline</b>	This command is used to set the import route map of one VRF. This is used by BGP to distribute VPN routing information. One VRF only has one import route map. The new import route map will overwrite the value set before.  Use the command <b>show ip vrf</b> to check the settings.

**Example** This example shows how to create a VRF VPN-A and set its import route map.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)# ip vrf VPN-A
DXS-3600-32S(config-vrf)# import map rmap1
DXS-3600-32S(config-vrf)#
```

## 72-4 ip vrf

This command is used to create a new VRF instance. Use the **no** form of this command to delete one VRF instance.

```
ip vrf vrf-name
no ip vrf vrf-name
```

### Parameters

<i>vrf-name</i>	Specifies the name of the VRF.
-----------------	--------------------------------

<b>Default</b>	By default, no VRF instance is specified.
<b>Command Mode</b>	Global Configuration Mode.
<b>Command Default Level</b>	Level: 15

**Usage Guideline**

This command is used to create a new VRF instance and enter VRF configuration mode. After a new VRF instance is created, a new VRF routing table will be created. With the **no** form of this command, one VRF will be deleted. The related VRF routing table will be deleted at the same time. And all routing instances based on this VRF will be destroyed too. All IP interfaces associated to this VRF will be restored to global routing instance. In the other words, all configurations based on this VRF will be removed. There is a limitation about the max number of VRF instances and it is project dependent.

Use the command **show ip vrf** and **show ip route vrf** to check the settings.

**Example**

This example shows how to create and delete a VRF instance.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)# ip vrf VPN-A
DXS-3600-32S(config-vrf)#exit
DXS-3600-32S(config)# no ip vrf VPN-A
DXS-3600-32S(config)#
```

**72-5 ip vrf forwarding**

This command is used to associate one interface to a VRF instance. Use the **no** form of this command to restore one interface to global routing instance.

```
ip vrf forwarding vrf-name
no ip vrf forwarding vrf-name
```

**Parameters**

<i>vrf-name</i>	Specifies the name of the VRF.
-----------------	--------------------------------

**Default**

By default, no interface is associated to a VRF instance.

**Command Mode**

Interface Configuration Mode.

**Command Default Level**

Level: 15

**Usage Guideline**

This command is used to associate an interface to one VRF instance. After one interface is associated to one VRF instance with this command, its IP address will be restored to unspecified. User needs to set its IP address before use it.

By associating interfaces to different VRF, the interfaces in different VRF can be configured with same IP address. The IP address space in one VRF is individual and can overlap among different VRFs.

Use the command **show ip vrf** to check the settings.

**Example**

This example shows how to associate VLAN 100 interface to VRF VPN-A.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)# interface vlan 100
DXS-3600-32S(config-if)# ip vrf forwarding VPN-A
DXS-3600-32S(config-if)# ip address 100.1.1.1 255.255.255.0
```

**72-6 maximum routes**

This command is used to limit the maximum routes within the VRF. Use the **no** form of this command to remove the limit.

```
maximum routes limit {warn-threshold | warning-only}
```

**no maximum routes****Parameters**

<i>limit</i>	Specifies the maximum number of routes within the VRF. Its ranges from 1 to 16384.
<i>warn-threshold</i>	Specifies the warning threshold percent of limit. A warning message will be printed when the routes number reaches the threshold and no more routes can be written into the hardware. Its range is 1% to 100%.
<b>warning-only</b>	Specifies when the routes number reaches the limit. One warning message will be printed. More routes can still be written into hardware.

**Default** By default, no limit is defined to a VRF instance.

**Command Mode** VRF Configuration Mode.

**Command Default Level** Level: 15.

**Usage Guideline** This command is used to limit how many routes can be allowed within the VRF. Please note this limit only applies to the active route. If the user only wants to get a warning, set the **warning-only** option.

Use the command **show ip vrf details vrf-name** to check the settings.

**Example** This example shows how to set the VRF VPN-A's routes limit to 100.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)# ip vrf VPN-A
DXS-3600-32S(config-vrf)# maximum routes 100 warning-only
DXS-3600-32S(config-vrf)#
```

**72-7 rd**

This command is used to set the route distinguisher of one VRF.

**rd route-distinguisher**

**Parameters**

<i>route-distinguisher</i>	Specifies the VRF's route distinguisher, which is used to prepend an 8-bytes value to an IPv4 prefix to create a VPN-IPv4 prefix.
----------------------------	---

**Default** By default, no route distinguisher is set for one VRF.

**Command Mode** VRF Configuration Mode.

**Command Default Level** Level: 15.

**Usage Guideline** This command is used to set the VRF's route distinguisher to form unique VPN-IPv4 prefix. One VRF has only one route distinguisher and cannot be changed if it has been set to one value.

Use the command **show ip vrf** to check the settings.

**Example** This example shows how to create a VRF instance VPN-A and set its route distinguisher.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)# ip vrf VPN-A
DXS-3600-32S(config-vrf)# rd 100:1
DXS-3600-32S(config-vrf)#
```



## 72-8 route-target

This command is used to add one route target of a VRF. Use the **no** form of this command to remove one route target.

```
route-target {import | export | both} route-target
no route-target {import | export | both} route-target
```

### Parameters

<b>import</b>	Specifies to add an import route target to import routing information from the target VPN extended community.
<b>export</b>	Specifies to add an export route target to export routing information to the target VPN extended community.
<b>both</b>	Specifies to add both an import route target and an export route target.
<i>route-target</i>	Specifies the value of the route target.

<b>Default</b>	By default, no route target is specified for one VRF.
<b>Command Mode</b>	VRF Configuration Mode.
<b>Command Default Level</b>	Level: 15.
<b>Usage Guideline</b>	This command is used to add a route target to one VRF. One VRF can have multiple route targets.  Use the command <b>show ip vrf detail</b> to check the settings.

**Example** This example shows how to create a VRF instance VPN-A and add an import and export target.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)# ip vrf VPN-A
DXS-3600-32S(config-vrf)# route-target import 100:1
DXS-3600-32S(config-vrf)# route-target export 100:1
```

## 72-9 show ip vrf

This command is used to display the VRF settings.

```
show ip vrf [{details | interfaces}] [vrf-name]
```

### Parameters

<b>details</b>	(Optional) Specifies to show detailed information about one or more VRFs.
<b>interfaces</b>	(Optional) Specifies to show interfaces associated with one or more VRFs.
<i>vrf-name</i>	(Optional) Specifies to show information associated with one VRF.
<i>N/A</i>	Specifies to display brief information about all VRF instances.

<b>Default</b>	None.
<b>Command Mode</b>	Privileged Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	This command is used to check the settings of VRF instances.

**Example**

This example shows how to check the current VRF settings.

```
DXS-3600-32S#show ip vrf
```

VRF Name	RD	Interfaces
VPN-A	100:1	ip100
VPN-B	Not Set	

```
DXS-3600-32S#
```

**Example**

This example shows how to check detailed information about VRF VPN-A.

```
DXS-3600-32S#show ip vrf details VPN-A
```

```
VRF VPN-A; Default RD: 100:1
Interfaces:
  ip100
Export VPN Route-target Communities:
  RT:100:1
Import VPN Route-target Communities:
  RT:100:1
Import Route-map: rmap1
Route Warning Limit 5, Current Count 0
```

```
DXS-3600-32S#
```

**Example**

This example shows how to check interfaces associated with VRFs.

```
DXS-3600-32S#show ip vrf interfaces
```

Interfaces	IP Address	VRF
ip100	100.1.1.1/24	VPN-A

```
DXS-3600-32S#
```

# Weighted Random Early Detection (WRED) Commands

## 73-1 clear random-detect drop-counter

This command is used to clear WRED drop counters.

```
clear random-detect drop-counter
```

<b>Parameters</b>	None.
<b>Default</b>	None.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	Only physical ports are valid for this command.

**Example** This example shows how to clear WRED drop counters.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/3
DXS-3600-32S(config-if)#clear random-detect drop-counter
Success
DXS-3600-32S(config-if)#
```

## 73-2 random-detect

This command is used to enable the WRED function. The no form of this command use to disable the WRED function.

```
random-detect COS-VALUE [profile id]
no random-detect COS-VALUE
```

### Parameters

<i>COS-VALUE</i>	Specifies CoS queues on which WRED state will be set.
<i>profile id</i>	Specifies the WRED profile that will be applied. If not specified, the WRED profile 1 will be applied

<b>Default</b>	WRED is disabled.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	<p>Only physical ports are valid for this command. When a packet arrives, the current average queue size is calculated by the hardware. The <b>weight</b> value is set by the command <b>random-detect exponential-weight</b>.</p> <p>If the current average queue size is less than the <b>min-threshold</b> of the queue, the arriving packet is queued. If the current queue length is between the <b>min-threshold</b> and the <b>max-threshold</b> of the queue, the packet is either dropped or queued depending on the packet drop probability. If the average queue size is greater than the <b>max-threshold</b> of the queue, all packets will be dropped</p>

**Example** This example shows how to enable the WRED function queue 5 and apply WRED profile 10.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/3
DXS-3600-32S(config-if)#random-detect 5 profile 10
Success
DXS-3600-32S(config-if)#
```

### 73-3 random-detect exponential-weight

This command is used to configure the WRED exponential weight factor for the average queue size calculation for the queue. The no form is used to configure it to the default setting.

```
random-detect exponential-weight COS-VALUE exponent <VALUE 0-15>
no random-detect exponential-weight
```

#### Parameters

<i>COS-VALUE</i>	Specifies the CoS queues on which exponent will be set.
<b>exponent</b> <VALUE 0-15>	Specifies the exponent value used in the average queue size calculation. This value must be between 0 and 15.

<b>Default</b>	The default exponential weight factor is 9.
<b>Command Mode</b>	Interface Configuration Mode.
<b>Command Default Level</b>	Level: 15
<b>Usage Guideline</b>	Only physical ports are valid for this command.

**Example** This example shows how to configure the exponent to 10 and the queue to 5.

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#interface tenGigabitEthernet 1/0/3
DXS-3600-32S(config-if)#random-detect exponential-weight 5 exponent 10
Success
DXS-3600-32S(config-if)#
```

### 73-4 random-detect profile

This command is used to configure the WRED profile. Use no form of this command to configure it to default setting.

```
random-detect profile id [tcp | non-tcp] [green | yellow | red] min-threshold <0-100> max-threshold <0-100>
max-drop-rate <0-14>
no random-detect profile id
```

#### Parameters

<i>id</i>	Specifies the ID of the WRED profile that will be set.
<b>tcp</b>	Specifies the WRED drop parameters for TCP packet to be set. If not specified, the same WRED drop parameter will be set for both type of traffic.
<b>non-tcp</b>	Specifies the WRED drop parameters for a Non-TCP packet to be set. If not specified, the same WRED drop parameter will be set for both type of traffic.
<b>green</b>	Specifies the WRED drop parameters for the green packet to be set. If not specified, the same WRED drop parameter will be set for all color packet.
<b>yellow</b>	Specifies the WRED drop parameters for the yellow packet to be set. If not specified, the same WRED drop parameter will be set for all color packet.
<b>red</b>	Specifies the WRED drop parameters for the red packet to be set. If not specified, the same WRED drop parameter will be set for all color packet.
<b>min-threshold</b> <0-100>	Specifies the minimum queue size (in percentage of total queue size) to start WRED dropping. This value must be between 0 and 100.
<b>max-threshold</b> <0-100>	Specifies the maximum queue size (in percentage of total queue size) over which WRED will drop all packets destined for this queue. This value must be between 0 and 100.

---

<b>max-drop-rate</b> <0-14>	Specifies the drop probability when the average queue size reaches <b>max-threshold</b> . This value must be between 0 and 14.
-----------------------------	--

---

<b>Default</b>	The default maximum drop rate is 0
----------------	------------------------------------

<b>Command Mode</b>	Global Configuration Mode.
---------------------	----------------------------

<b>Command Default Level</b>	Level: 15
------------------------------	-----------

<b>Usage Guideline</b>	None.
------------------------	-------

<b>Example</b>	This example shows how to configure the WRED drop parameter for all types and color packets on profile 10.
----------------	--

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#random-detect profile 10 min-threshold 30 max-threshold 50 max-drop-rate 10
Success
DXS-3600-32S(config)#
```

<b>Example</b>	This example shows how to configure the WRED drop parameter for TCP yellow and red packets on profile 10.
----------------	---

```
DXS-3600-32S#configure terminal
DXS-3600-32S(config)#random-detect profile 10 tcp yellow red min-threshold 20 max-threshold 40
max-drop-rate 5
Success
DXS-3600-32S(config)#
```

---

## 73-5 show queueing random-detect

This command is used to display the WRED configuration on specified interfaces.

**show queueing random-detect** [**interface** *INTERFACE-ID* [,|-]]

### Parameters

---

<b>interface</b> <i>INTERFACE-ID</i> [, -]	Specifies the interface ID for which the WRED configuration will be displayed. You can specify multiple interface IDs, which are separated by commas (,) or hyphens (-). No spaces are allowed before or after the commas or hyphens.
--	---

---

<b>Default</b>	None.
----------------	-------

<b>Command Mode</b>	EXEC Mode.
---------------------	------------

<b>Command Default Level</b>	Level: 15
------------------------------	-----------

<b>Usage Guideline</b>	The command will display the WRED configuration. If the interface ID isn't specified, the WRED configuration for all ports on the system will be displayed.
------------------------	---

**Example**

This example displays the WRED configuration and CoS queue status.

```
DXS-3600-32S#show queueing random-detect tenGigabitEthernet 1/0/3
```

```
Current WRED configuration:
```

```
Interface: 3
```

CoS	WRED State	Exp-weight-constant	Profile
0	Disabled	9	1
1	Disabled	9	1
2	Disabled	9	1
3	Disabled	9	1
4	Disabled	9	1
5	Enabled	10	10
6	Disabled	9	1
7	Disabled	9	1

```
DXS-3600-32S#
```

**73-6 show random-detect drop-counter**

This command is used to display the WRED drop counter.

```
show random-detect drop-counter [interface INTERFACE-ID [,|-]]
```

**Parameters**

<b>interface</b> <i>INTERFACE-ID</i> [, -]	Specifies the interface ID for which the WRED drop counter will be displayed. You can specify multiple interface IDs, which are separated by commas (,) or hyphens (-). No spaces are allowed before or after the commas or hyphens.
--	--

**Default**

None.

**Command Mode**

EXEC Mode.

**Command Default Level**

Level: 15

**Usage Guideline**

Use this command to display the WRED drop counter.

**Example**

This example shows how to display the WRED drop counter.

```
DXS-3600-32S#show random-detect drop-counter tenGigabitEthernet 1/0/3
```

```
Current WRED Drop Counter:
```

Interface	Green	Yellow	Red
3	0	5	10

```
DXS-3600-32S#
```

**73-7 show random-detect profile**

This command is used to display the WRED profile setting.

```
show random-detect profile [profile id]
```

---

**Parameters**

---

<b>profile id</b>	Specifies the WRED profile ID for which the WRED profile configuration will be displayed. If not specified, the configuration for all WRED profiles will be displayed.
-------------------	--

---

**Default** None.

**Command Mode** EXEC Mode.

**Command Default Level** Level: 15

**Usage Guideline** Use this command to display the WRED profile setting.

**Example** This example shows how to display the WRED profile 1 setting.

```
DXS-3600-32S#show random-detect profile 1
```

```
WRED Profile 1
Packet Type      Min-Threshold  Max-Threshold  Max-Drop-Rate
-----
TCP-GREEN        20             80             0
TCP-YELLOW       20             80             0
TCP-RED          20             80             0
NON-TCP-GREEN   20             80             0
NON-TCP-YELLOW  20             80             0
NON-TCP-RED     20             80             0
```

```
DXS-3600-32S#
```

# Appendix A - Password Recovery Procedure

This section describes the procedure for resetting passwords on the D-Link DXS-3600-32S switch.

Authenticating any user who tries to access networks is necessary and important. The basic authentication method used to accept qualified users is through a local login, utilizing a **Username** and **Password**. Sometimes, passwords get forgotten or destroyed, so network administrators need to reset these passwords. This section will explain how the Password Recovery feature can help network administrators reach this goal.

The following steps explain how to use the Password Recovery feature on this switch to easily recover passwords.

Complete these steps to reset the password:

1. For security reasons, the Password Recovery feature requires the user to physically access the device. Therefore this feature is only applicable when there is a direct connection to the console port of the device. It is necessary for the user needs to attach a terminal or PC with terminal emulation to the console port of the switch.
2. Power on the Switch. After the UART init is loaded to 100%, the Switch will allow 2 seconds for the user to press the hotkey [^] (Shift + 6) to enter the "Password Recovery Mode." Once the Switch enters the "Password Recovery Mode," all ports on the Switch will be disabled.

```

Boot Procedure                                     V1.10.007
-----
Power On Self Test ..... 100 %

MAC Address   : 00-01-02-03-04-00
H/W Version   :

Please Wait, Loading V1.10.023 Runtime Image ..... 100 %
UART init ..... 100 %

Password Recovery Mode
>

```

1. In the "Password Recovery Mode" only the following commands can be used.

Command	Parameters
<b>clear configure</b>	This command allows the administrator to clear the configuration of this switch to the factory default settings. This includes resetting the user accounts to the defaults.
<b>clear levelpassword</b>	This command allows the administrator to clear the level password used on this switch to the factory default settings.
<b>clear username</b>	This command allows the administrator to clear the usernames used on this switch to the factory default settings.
<b>reload</b>	This command will restart the switch.



## Appendix B - System Log Entries

The following table lists all possible entries and their corresponding meanings that will appear in the System Log of this Switch.

Category	Log Description	Severity	Note
IP Directed-broadcast	Event description: IP Directed-broadcast rate exceed 50 packets per second on a certain subnets. Log Message: IP Directed Broadcast packet rate is high on subnet. [(IP: %s)]  Parameters description: IP: the Broadcast IP destination address.	Informational	
	Event description: IP Directed-broadcast rate exceeds 100 packets per second. Log Message: IP Directed Broadcast rate is high.  Parameters description: None.	Informational	
TFTP	Event description: Firmware upgraded successfully. Log Message: [TFTP(1):] Firmware upgraded by <session> was successfully (Username: <username>, IP: <ipaddr>, MAC: <macaddr>)  Parameters description: session: The user's session. Username: Represent current login user. Ipaddr: Represent client IP address. macaddr : Represent client MAC address.	Informational	
	Event description: Firmware upgrade was unsuccessful. Log Message: [TFTP(2):] Firmware upgrade by <session> was unsuccessfully (Username: <username>, IP: <ipaddr>, MAC: <macaddr>)  Parameters description: session: The user's session. Username: Represent current login user. Ipaddr: Represent client IP address. macaddr : Represent client MAC address.	Warning	
	Event description: Firmware successfully uploaded. Log Message: [TFTP(3):]Firmware successfully uploaded by <session> (Username: <username>, IP: <ipaddr>, MAC: <macaddr>)  Parameters description: session: The user's session. Username: Represent current login user. Ipaddr: Represent client IP address. macaddr : Represent client MAC address.	Informational	
	Event description: Firmware upload was unsuccessful. Log Message: [TFTP(4):]Firmware upload by <session> was unsuccessful! (Username: <username>, IP: <ipaddr>, MAC: <macaddr>)  Parameters description: session: The user's session. Username: Represent current login user. Ipaddr: Represent client IP address.	Warning	

Category	Log Description	Severity	Note
	<p>Event description: Configuration successfully downloaded.            Log Message: [TFTP(5):]Configuration successfully downloaded by &lt;session&gt; (Username: &lt;username&gt;, IP: &lt;ipaddr&gt;, MAC: &lt;macaddr&gt;)</p> <p>Parameters description:            session: The user's session.            Username: Represent current login user.            Ipaddr: Represent client IP address.            macaddr : Represent client MAC address.</p>	Informational	
	<p>Event description: Configuration download was unsuccessful.            Log Message: [TFTP(6):]Configuration download by &lt;session&gt; was unsuccessful! (Username: &lt;username&gt;, IP: &lt;ipaddr&gt;, MAC: &lt;macaddr&gt;)</p> <p>Parameters description:            session: The user's session.            Username: Represent current login user.            Ipaddr: Represent client IP address.            macaddr : Represent client MAC address.</p>	Warning	
	<p>Event description: Configuration successfully uploaded.            Log Message: [TFTP(7):]Configuration successfully uploaded by &lt;session&gt; (Username: &lt;username&gt;, IP: &lt;ipaddr&gt;, MAC: &lt;macaddr&gt;)</p> <p>Parameters description:            session: The user's session.            Username: Represent current login user.            Ipaddr: Represent client IP address.            macaddr : Represent client MAC address.</p>	Informational	
	<p>Event description: Configuration upload was unsuccessful.            Log Message: [TFTP(8):]Configuration upload by &lt;session&gt; was unsuccessful! (Username: &lt;username&gt;, IP: &lt;ipaddr&gt;, MAC: &lt;macaddr&gt;)</p> <p>Parameters description:            session: The user's session.            Username: Represent current login user.            Ipaddr: Represent client IP address.            macaddr : Represent client MAC address.</p>	Warning	
	<p>Event description: Log message successfully uploaded.            Log Message: [TFTP(9):]Log message successfully uploaded by &lt;session&gt; (Username: &lt;username&gt;, IP: &lt;ipaddr&gt;, MAC: &lt;macaddr&gt;)</p> <p>Parameters description:            session: The user's session.            Username: Represent current login user.            Ipaddr: Represent client IP address.            macaddr : Represent client MAC address.</p>	Informational	
	<p>Event description: Log message upload was unsuccessful.            Log Message: [TFTP(10):]Log message upload by &lt;session&gt; was unsuccessful! (Username: &lt;username&gt;, IP: &lt;ipaddr&gt;, MAC: &lt;macaddr&gt;)</p> <p>Parameters description:            session: The user's session.            Username: Represent current login user.            Ipaddr: Represent client IP address.            macaddr : Represent client MAC address.</p>	Warning	

Category	Log Description	Severity	Note
<b>DNS Resolver</b>	<p>Event description: Duplicate Domain name cache added. This will lead to the dynamic domain name cache being deleted</p> <p>Log Message: [DNS_RESOLVER(1):]Duplicate Domain name case name: &lt;domainname&gt;, static IP: &lt;ipaddr&gt;, dynamic IP:&lt;ipaddr&gt;</p> <p>Parameters description: domainname: The domain name string. ipaddr: IP address.</p>	Informational	
<b>TELNET</b>	<p>Event description: Successful login through TELNET.</p> <p>Log Message: Successful login through TELNET (Username: &lt;username&gt;, IP: &lt;ipaddr&gt;)</p> <p>Parameters description: ipaddr: The IP address of the TELNET client. username: The user name that used to login to the TELNET server.</p>	Informational	
	<p>Event description: Login failed through TELNET.</p> <p>Log Message: Login failed through TELNET (Username: &lt;username&gt;, IP: &lt;ipaddr&gt;)</p> <p>Parameters description: ipaddr: The IP address of the TELNET client. username: The user name that used to login to the TELNET server.</p>	Warning	
	<p>Event description: Logout from TELNET.</p> <p>Log Message: Logout from TELNET (Username: &lt;username&gt;, IP: &lt;ipaddr&gt;)</p> <p>Parameters description: ipaddr: The IP address of the TELNET client. username: The user name that used to logout from the TELNET server.</p>	Informational	
	<p>Event description: TELNET session timed out.</p> <p>Log Message: TELNET session timed out (Username: &lt;username&gt;, IP: &lt;ipaddr&gt;).</p> <p>Parameters description: ipaddr: The IP address of the TELNET client. username: The user name that used to login to the TELNET server.</p>	Informational	
<b>Interface</b>	<p>Event description: Port link up.</p> <p>Log Message: &lt;interface-id&gt; link up, &lt;link state&gt;</p> <p>Parameters description: &lt;interface-id&gt;: (1) Integer value and (2) logic port number of the device. link state: The link state.</p>	Informational	
	<p>Event description: Port link down.</p> <p>Log Message: &lt;interface-id&gt; link down</p> <p>Parameters description: &lt;interface-id&gt;: (1) Integer value and (2) logic port number of the device.</p>	Informational	

Category	Log Description	Severity	Note
802.1X	<p>Event description: 802.1X Authentication failure.</p> <p>Log Message: 802.1X Authentication failure [for &lt;reason&gt; ] from (Username: &lt;username&gt;, &lt;interface-id&gt;, MAC: &lt;macaddr&gt; )</p> <p>Parameters description:  reason: The reason for the failed authentication.  username: The user that is being authenticated..  interface-id: The interface name.  macaddr: The MAC address of thr authenticated device.</p>	Warning	
	<p>Event description: 802.1X Authentication successful.</p> <p>Log Message: 802.1X Authentication successful from (Username: &lt;username&gt;, &lt;interface-id&gt;, MAC: &lt;macaddr&gt;)</p> <p>Parameters description:  username: The user that is being authenticated.  interface-id: The interface name.  macaddr: The MAC address of the authenticated device.</p>	Informational	
RADIUS	<p>Event description: The VID assigned from the RADIUS server after the RADIUS client was authenticated by the RADIUS server successfully. This VID will be assigned to the port and this port will be the VLAN untagged port member.</p> <p>Log Message: RADIUS server &lt;ipaddr&gt; assigned VID :&lt;vlanID&gt; to port &lt;interface-id&gt; (account :&lt;username&gt; )</p> <p>Parameters description:  ipaddr: The IP address of the RADIUS server.  vlanID: The VID of the RADIUS assigned VLAN.  interface-id: The interface name.  Username: The user that is being authenticated.</p>	Informational	
	<p>Event description: The ingress bandwidth assigned from the RADIUS server after the RADIUS client was authenticated by the RADIUS server successfully. This ingress bandwidth will be assigned to the port.</p> <p>Log Message: RADIUS server &lt;ipaddr&gt; assigned ingress bandwidth :&lt;ingressBandwidth&gt; to port &lt;interface-id&gt; (account : &lt;username&gt;)</p> <p>Parameters description:  ipaddr: The IP address of the RADIUS server.  ingressBandwidth: The ingress bandwidth of the RADIUS assignment.  interface-id: The interface name.  Username: The user that is being authenticated.</p>	Informational	
	<p>Event description: The egress bandwidth assigned from the RADIUS server after the RADIUS client was successfully authenticated by the RADIUS server. This egress bandwidth will be assigned to the port.</p> <p>Log Message: RADIUS server &lt;ipaddr&gt; assigned egress bandwidth :&lt;egressBandwidth&gt; to port &lt;interface-id&gt; (account: &lt;username&gt;)</p> <p>Parameters description:  ipaddr: The IP address of the RADIUS server.  egressBandwidth: The egress bandwidth of the RADIUS assignment.  interface-id: The interface name.  Username: The user that is being authenticated.</p>	Informational	

Category	Log Description	Severity	Note
	<p>Event description: The 802.1p default priority assigned from the RADIUS server after the RADIUS client was successfully authenticated by the RADIUS server. This 802.1p default priority will be assigned to the port. Log Message: RADIUS server &lt;ipaddr&gt; assigned 802.1p default priority:&lt;priority&gt; to port &lt;interface-id&gt; (account : &lt;username&gt;)</p> <p>Parameters description: ipaddr: The IP address of the RADIUS server. priority: Priority of the RADIUS assignment. interface-id: The interface name. Username: The user that is being authenticated.</p>	Informational	
	<p>Event description: Failed to assign ACL profiles or rules from the RADIUS server. Log Message: RADIUS server &lt;ipaddr&gt; assigns &lt;username&gt; ACL failure at port &lt;interface-id&gt; (&lt;string&gt;)</p> <p>Parameters description: ipaddr: The IP address of the RADIUS server. interface-id: The interface name. Username: The user that is being authenticated. string: The failed RADIUS ACL command string.</p>	Warning	
<b>LLDP-MED</b>	<p>Event description: LLDP-MED topology change detected. Log Message: LLDP-MED topology change detected (on port &lt;portNum&gt;, chassis id: &lt;chassisType&gt;, &lt;chassisID&gt;, port id: &lt;portType&gt;, &lt;portID&gt;, device class: &lt;deviceClass&gt;)</p> <p>Parameters description: portNum: The port number. chassisType: chassis ID sub-type. Value list: 1. chassisComponent(1) 2. interfaceAlias(2) 3. portComponent(3) 4. macAddress(4) 5. networkAddress(5) 6. interfaceName(6) 7. local(7) chassisID: The chassis ID. portType: The port ID sub-type. Value list: 1. interfaceAlias(1) 2. portComponent(2) 3. macAddress(3) 4. networkAddress(4) 5. interfaceName(5) 6. agentCircuitId(6) 7. local(7) portID: The port ID. deviceClass: The LLDP-MED device type.</p>	Notice	

Category	Log Description	Severity	Note
	<p>Event description: Conflict LLDP-MED device type detected.            Log Message: Conflict LLDP-MED device type detected (on port &lt; portNum &gt;, chassis id: &lt; chassisType&gt;, &lt;chassisID&gt;, port id: &lt; portType&gt;, &lt;portID&gt;, device class: &lt;deviceClass&gt;)</p> <p>Parameters description:            portNum: The port number.            chassisType: The chassis ID sub-type.              Value list:              1. chassisComponent(1)              2. interfaceAlias(2)              3. portComponent(3)              4. macAddress(4)              5. networkAddress(5)              6. interfaceName(6)              7. local(7)            chassisID: The chassis ID.            portType: The port ID sub-type.            Value list:              1. interfaceAlias(1)              2. portComponent(2)              3. macAddress(3)              4. networkAddress(4)              5. interfaceName(5)              6. agentCircuitId(6)              7. local(7)            portID: The port ID.            deviceClass: The LLDP-MED device type.</p>	Notice	
	<p>Event description: Incompatible LLDP-MED TLV set detected.            Log Message: Incompatible LLDP-MED TLV set detected (on port &lt;portNum&gt;, chassis id: &lt;chassisType&gt;, &lt;chassisID&gt;, port id: &lt; portType&gt;, &lt;portID&gt;, device class: &lt;deviceClass&gt;)</p> <p>Parameters description:            portNum: The port number.            chassisType: The chassis ID sub-type.              Value list:              1. chassisComponent(1)              2. interfaceAlias(2)              3. portComponent(3)              4. macAddress(4)              5. networkAddress(5)              6. interfaceName(6)              7. local(7)            chassisID: The chassis ID.            portType: The port ID sub-type.            Value list:              1. interfaceAlias(1)              2. portComponent(2)              3. macAddress(3)              4. networkAddress(4)              5. interfaceName(5)              6. agentCircuitId(6)              7. local(7)            portID: The port ID.            deviceClass: The LLDP-MED device type.</p>	Notice	

Category	Log Description	Severity	Note
BGP	<p>Event description: The BGP FSM with Peer has gone to the successfully established state.</p> <p>Log Message: [BGP(1):] BGP connection was successfully established (Peer:&lt;ipaddr&gt;).</p> <p>Parameters description: ipaddr: The IP address of the BGP peer.</p>	Informational	
	<p>Event description: BGP connection was closed normally.</p> <p>Log Message:[BGP(2):] BGP connection was closed normally by (Peer:&lt;ipaddr&gt;).</p> <p>Parameters description: ipaddr: The IP address of the BGP peer.</p>	Informational	
	<p>Event description: The BGP connection was closed due to error (Error Code, Error Subcode and Data fields Refer to RFC).</p> <p>Log Message: [BGP(3):] BGP connection was closed due to error (Code:&lt;num&gt; Subcode:&lt;num&gt; Field:&lt;field&gt; Peer:&lt;ipaddr&gt;).</p> <p>Parameters description: num: The Error Code or Error Subcode, defined in RFC 4271. field: The field value when an error happen. ipaddr: The IP address of the BGP peer.</p>	Warning	
	<p>Event description: Receive a BGP notify packet with an undefined error code or sub-error code in RFC 4271.</p> <p>Log Message: [BGP(4):] BGP Notify: unkown Error code(num), Sub Error code(num), Peer:&lt;ipaddr&gt;.</p> <p>Parameters description: num: The Error Code or Error Subcode, defined in RFC 4271. ipaddr: The IP address of the BGP peer.</p>	Warning	
	<p>Event description: Received a BGP update packet but the next-hop points to a local interface.</p> <p>Log Message: [BGP(5):] BGP Update Attr NHop: Erroneous NHop &lt;ipaddr&gt; Peer:&lt;ipaddr&gt;.</p> <p>Parameters description: ipaddr: The IP address of the BGP peer.</p>	Warning	
	<p>Event description: BGP connection was closed due to an event. (For events refer to the RFC)</p> <p>Log Message: [BGP(6):] BGP connection was closed due to Event: &lt;num&gt; (Peer:&lt;ipaddr&gt;).</p> <p>Parameters description: num: The event, defined in RFC 4271. ipaddr: The IP address of the BGP peer.</p>	Warning	
	<p>Event description: The BGP connection was closed due to a received notification packet. (For Error Code and Error Subcode refer to the RFC)</p> <p>Log Message: [BGP(7):] BGP connection was closed due to Notify: Code &lt;num&gt; Subcode &lt;num&gt; (Peer:&lt;ipaddr&gt;).</p> <p>Parameters description: num: The Error Code or Error Subcode, defined in RFC 4271. ipaddr: The IP address of the BGP peer.</p>	Warning	

Category	Log Description	Severity	Note
	<p>Event description: The number of BGP prefixes received from the neighbor reached the threshold.</p> <p>Log Message: [BGP(8):] The number of prefixes received reached &lt;num&gt;, max &lt;limit&gt; (Peer &lt;ipaddr &gt;).</p> <p>Parameters description:  num: The number of prefix received.  limit: The maximum number of prefixes allowed to receive.  ipaddr: The IP address of the BGP peer.</p>	Information	
	<p>Event description: The total number of BGP prefixes received exceeds the limit.</p> <p>Log Message: [BGP(9):] The total number of BGP prefixes received reached the maximum prefix limit.</p>	Information	
	<p>Event description: BGP received unnecessary AS4-PATH attribute from the new 4-bytes AS BGP peer.</p> <p>Log Message: [BGP(10):] Received AS4-PATH attribute from the new (4-bytes AS) peer. (Peer &lt;ipaddr&gt;).</p> <p>Parameters description:  ipaddr: The IP address of the BGP peer.</p>	Warning	
	<p>Event description: BGP received unnecessary AS4-AGGREGATOR attribute from the new 4-bytes AS BGP peer.</p> <p>Log Message: [BGP(11):] Received AS4-AGGREGATOR attribute from new (4-bytes AS) peer. (Peer &lt;ipaddr&gt;).</p> <p>Parameters description:  ipaddr: The IP address of the BGP peer.</p>	Warning	
	<p>Event description: BGP received AS_CONFED_SEQUENCE or AS_CONFED_SET path segment type in AS4-PATH attribute.</p> <p>Log Message: [BGP(12):] Received AS_CONFED_SEQUENCE or AS_CONFED_SET path segment type in AS4-PATH attribute. (Peer &lt;ipaddr&gt;).</p> <p>Parameters description:  ipaddr: The IP address of the BGP peer.</p>	Warning	
	<p>Event description: BGP received invalid AS4-PATH attribute.</p> <p>Log Message: [BGP(13):] Received invalid AS4-PATH attribute. Value : &lt;STRING&gt; (Peer &lt;ipaddr&gt;).</p> <p>Parameters description:  STRING: Detailed description about the invalid attribute.  ipaddr: The IP address of the BGP peer.</p>	Warning	
	<p>Event description: BGP received invalid AS4- AGGREGATOR attribute.</p> <p>Log Message: [BGP(14):] Received invalid AS4- AGGREGATOR attribute. Value : &lt;STRING&gt; (Peer &lt;ipaddr&gt;).</p> <p>Parameters description:  STRING: Detailed description about the invalid attribute.  ipaddr: The IP address of BGP the peer.</p>	Warning	
<b>SNMP</b>	<p>Event Description: SNMP request received with invalid community string.</p> <p>Log Message: SNMP request received from &lt;ipaddr&gt; with invalid community string.</p> <p>Parameters Description:  ipaddr: The IP address.</p>	Informational	



Category	Log Description	Severity	Note
OSPFv2	<p>Event description: OSPF interface link state changed.            Log Message: OSPF interface &lt;intf-name&gt; changed state to [Up   Down]</p> <p>Parameters description:            intf-name: The name of the OSPF interface.</p>	Informational	
	<p>Event description: OSPF interface administrator state changed.            Log Message: OSPF protocol on interface &lt;intf-name&gt; changed state to [Enabled   Disabled]</p> <p>Parameters description:            intf-name: The name of the OSPF interface.</p>	Informational	
	<p>Event description: One OSPF interface changed from one area to another.            Log Message: OSPF interface &lt;intf-name&gt; changed from area &lt;area-id&gt; to area &lt;area-id&gt;.</p> <p>Parameters description:            intf-name: The name of the OSPF interface.            area-id: The OSPF area ID.</p>	Informational	

Category	Log Description	Severity	Note
	<p>Event description: One OSPF neighbor state changed from Loading to Full. Log Message: OSPF nbr &lt;nbr-id&gt; on interface &lt;intf-name&gt; changed state from Loading to Full.</p> <p>Parameters description: intf-name: The name of the OSPF interface. nbr-id: The neighbor's router ID.</p>	Notice	
	<p>Event description: One OSPF neighbor state changed from Full to Down. Log Message: OSPF nbr &lt;nbr-id&gt; on interface &lt;intf-name&gt; changed state from Full to Down.</p> <p>Parameters description: intf-name: The name of the OSPF interface. nbr-id: The neighbor's router ID.</p>	Notice	
	<p>Event description: One OSPF neighbor state's dead timer expired. Log Message: OSPF nbr &lt;nbr-id&gt; on interface &lt;intf-name&gt; dead timer expired.</p> <p>Parameters description: intf-name: The name of the OSPF interface. nbr-id: The neighbor's router ID.</p>	Notice	
	<p>Event description: One OSPF virtual neighbor state changed from Loading to Full. Log Message: OSPF nbr &lt;nbr-id&gt; on virtual link changed state from Loading to Full.</p> <p>Parameters description: nbr-id: Neighbor's router ID.</p>	Notice	
	<p>Event description: One OSPF virtual neighbor state changed from Full to Down. Log Message: OSPF nbr &lt;nbr-id&gt; on virtual link changed state from Full to Down.</p> <p>Parameters description: nbr-id: The neighbor's router ID.</p>	Notice	
	<p>Event description: The OSPF router ID was changed. Log Message: The OSPF router ID changed to &lt;router-id&gt;</p> <p>Parameters description: router-id: The OSPF router ID.</p>	Informational	
	<p>Event description: Enable OSPF. Log Message: OSPF state changed to Enabled.</p>	Informational	
	<p>Event description: Disable OSPF. Log Message: OSPF state changed to Disabled.</p>	Informational	
<b>VRRP Debug</b>	<p>Event description: One virtual router's state becomes Master. Log Message: VR &lt;vr-id&gt; at interface &lt;intf-name&gt; switched to Master</p> <p>Parameters description: vr-id: The VRRP virtual router ID. intf-name: The virtual router's interface name.</p>	Informational	
	<p>Event description: One virtual router's state becomes Backup. Log Message: VR &lt;vr-id&gt; at interface &lt;intf-name&gt; switched to Backup</p> <p>Parameters description: vr-id: The VRRP virtual router ID. intf-name: The virtual router's interface name.</p>	Informational	

Category	Log Description	Severity	Note
	<p>Event description: One virtual router's state becomes Initiate. Log Message: VR &lt;vr-id&gt; at interface &lt;intf-name&gt; switched to Init</p> <p>Parameters description: vr-id: The VRRP virtual router ID. intf-name: The virtual router's interface name.</p>	Informational	
	<p>Event description: Authentication type mismatch on one received VRRP advertisement message. Log Message: Authentication type mismatch on VR &lt;vr-id&gt; at interface &lt;intf-name&gt;</p> <p>Parameters description: vr-id: The VRRP virtual router ID. intf-name: The virtual router's interface name.</p>	Warning	
	<p>Event description: Authentication check failed on one received VRRP advertisement message. Log Message: Authentication failed on VR &lt;vr-id&gt; at interface &lt;intf-name&gt;. Auth type &lt;auth-type&gt;</p> <p>Parameters description: vr-id: The VRRP virtual router ID. intf-name: The virtual router's interface name. Auth-type: The VRRP interface authentication type.</p>	Warning	
	<p>Event description: Checksum error of one received VRRP advertisement message. Log Message: Received an advertisement message with incorrect checksum on VR &lt;vr-id&gt; at interface &lt;intf-name&gt;</p> <p>Parameters description: vr-id: The VRRP virtual router ID. intf-name: The virtual router's interface name.</p>	Warning	
	<p>Event description: Virtual router ID mismatched on one received VRRP advertisement message. Log Message: Received advertisement message virtual router ID mismatched. VR &lt;vr-id&gt; at interface &lt;intf-name&gt;</p> <p>Parameters description: vr-id: The VRRP virtual router ID. intf-name: The virtual router's interface name.</p>	Warning	
	<p>Event description: Advertisement interval mismatched on one received VRRP advertisement message. Log Message: Received advertisement message interval mismatched. VR &lt;vr-id&gt; at interface &lt;intf-name&gt;</p> <p>Parameters description: vr-id: The VRRP virtual router ID. intf-name: The virtual router's interface name.</p>	Warning	
	<p>Event description: A virtual MAC address was added into the switch's L2 table. Log Message: Added a virtual MAC &lt;vrrp-mac-addr&gt; into the switch's L2 table.</p> <p>Parameters description: vrrp-mac-addr: The VRRP virtual MAC address.</p>	Notice	
	<p>Event description: A virtual MAC address was deleted from the switch's L2 table. Log Message: Deleted a virtual MAC &lt;vrrp-mac-addr&gt; from the switch's L2 table.</p> <p>Parameters description: vrrp-mac-addr: The VRRP virtual MAC address.</p>	Notice	

Category	Log Description	Severity	Note
	<p>Event description: A virtual MAC address was added into the switch's L3 table.</p> <p>Log Message: Added a virtual IP &lt;vrrp-ip-addr&gt; MAC &lt;vrrp-mac-addr&gt; into the switch's L3 table.</p> <p>Parameters description: vrrp-ip-addr: The VRRP virtual IP address. vrrp-mac-addr: The VRRP virtual MAC address.</p>	Notice	
	<p>Event description: A virtual MAC address was deleted from the switch's L3 table.</p> <p>Log Message: Deleted a virtual IP &lt;vrrp-ip-addr&gt; MAC &lt;vrrp-mac-addr&gt; from the switch's L3 table.</p> <p>Parameters description: vrrp-ip-addr: The VRRP virtual IP address. vrrp-mac-addr: The VRRP virtual MAC address.</p>	Notice	
	<p>Event description: Failed when adding a virtual MAC into the switch's L2 table.</p> <p>Log Message: Failed to add virtual MAC &lt;vrrp-mac-addr&gt; into the switch's L2 table. Errcode &lt;vrrp-errcode&gt;</p> <p>Parameters description: vrrp-mac-addr: The VRRP virtual MAC address. vrrp-errcode: The error code of the VRRP protocol behavior.</p>	Error	
	<p>Event description: Failed when deleting a virtual MAC from the switch's L2 table.</p> <p>Log Message: Failed to delete virtual MAC &lt;vrrp-mac-addr&gt; from the switch's L2 table. Errcode &lt;vrrp-errcode&gt;</p> <p>Parameters description: vrrp-mac-addr: The VRRP virtual MAC address. vrrp-errcode: The error code of the VRRP protocol behaviour.</p>	Error	
	<p>Event description: Failed when adding a virtual MAC into the switch's L3 table. The L3 table is full.</p> <p>Log Message: Failed to add virtual IP &lt;vrrp-ip-addr&gt; MAC &lt;vrrp-mac-addr&gt; into the switch's L3 table. L3 table is full.</p> <p>Parameters description: vrrp-ip-addr: The VRRP virtual IP address. vrrp-mac-addr: The VRRP virtual MAC address.</p>	Error	
	<p>Event description: Failed when adding a virtual MAC address into the switch's L3 table. The port where the MAC was learned from is invalid.</p> <p>Log Message: Failed to add virtual IP &lt;vrrp-ip-addr&gt; MAC &lt;vrrp-mac-addr&gt; into the switch's L3 table. Port &lt;mac-port&gt; is invalid.</p> <p>Parameters description: vrrp-ip-addr: The VRRP virtual IP address. vrrp-mac-addr: The VRRP virtual MAC address. mac-port: The port number of the VRRP virtual MAC.</p>	Error	
	<p>Event description: Failed when adding a virtual MAC into the switch's L3 table. The interface where the MAC was learned from is invalid.</p> <p>Log Message: Failed to add virtual IP &lt;vrrp-ip-addr&gt; MAC &lt;vrrp-mac-addr&gt; into the switch's L3 table. Interface &lt;mac-intf&gt; is invalid.</p> <p>Parameters description: vrrp-ip-addr: The VRRP virtual IP address. vrrp-mac-addr: The VRRP virtual MAC address. mac-intf: The interface ID on which the VRRP virtual MAC address is based.</p>	Error	

Category	Log Description	Severity	Note
	<p>Event description: Failed when adding a virtual MAC into the switch's L3 table. The box where the MAC was learned from is invalid.</p> <p>Log Message: Failed to add virtual IP &lt;vrrp-ip-addr&gt; MAC &lt;vrrp-mac-addr&gt; into the switch's L3 table. Box ID &lt;mac-box&gt; is invalid.</p> <p>Parameters description:  vrrp-ip-addr: The VRRP virtual IP address.  vrrp-mac-addr: The VRRP virtual MAC address.  mac-box: The stacking box number of the VRRP virtual MAC.</p>	Error	
	<p>Event description: Failed when adding a virtual MAC into the switch's L3 table.</p> <p>Log Message: Failed to add virtual IP &lt;vrrp-ip-addr&gt; MAC &lt;vrrp-mac-addr&gt; into the switch's L3 table. Errcode &lt;vrrp-errcode&gt;.</p> <p>Parameters description:  vrrp-ip-addr: The VRRP virtual IP address.  vrrp-mac-addr: The VRRP virtual MAC address.  vrrp-errcode: The error code of the VRRP protocol behavior.</p>	Error	
	<p>Event description: Failed when deleting a virtual MAC address from the switch's L3 table.</p> <p>Log Message: Failed to delete virtual IP &lt;vrrp-ip-addr&gt; MAC &lt;vrrp-mac-addr&gt; from the switch's L3 table. Errcode &lt;vrrp-errcode&gt;.</p> <p>Parameters description:  vrrp-ip-addr: The VRRP virtual IP address.  vrrp-mac-addr: The VRRP virtual MAC address.  vrrp-errcode: The error code of the VRRP protocol behavior.</p>	Error	
<b>WEB</b>	<p>Event description: Successful login through Web.</p> <p>Log Message: Successful login through Web (Username: &lt;username&gt;, IP: &lt;ipaddr&gt;).</p> <p>Parameters description:  username: The user name that used to login HTTP server.  ipaddr: The IP address of the HTTP client.</p>	Informational	
	<p>Event description: Login failed through Web.</p> <p>Log Message: Login failed through Web (Username: &lt;username&gt;, IP: &lt;ipaddr&gt;).</p> <p>Parameters description:  username: The user name that used to login HTTP server.  ipaddr: The IP address of the HTTP client.</p>	Warning	
	<p>Event description: Web session timed out.</p> <p>Log Message: Web session timed out (Username: &lt;usname&gt;, IP: &lt;ipaddr&gt;).</p> <p>Parameters description:  username: The user name that used to login HTTP server.  ipaddr: The IP address of the HTTP client.</p>	Informational	
	<p>Event description: Logout through Web.</p> <p>Log Message: Logout through Web (Username: %S, IP: %S).</p> <p>Parameters description:  username: The user name that used to login HTTP server.  ipaddr: The IP address of the HTTP client.</p>	Informational	

Category	Log Description	Severity	Note
<b>Port Security</b>	<p>Event description: Port security violation. Log Message: Port security violation. (MAC address: &lt;macaddr&gt; on &lt;interface-id&gt;)</p> <p>Parameters description: macaddr: The violation MAC address. interface-id: The interface name.</p>	Warning	
<b>SSH</b>	<p>Event description: SSH server is enabled. Log Message: SSH server is enabled.</p>	Informational	
	<p>Event description: SSH server is disabled. Log Message: SSH server is disabled.</p>	Informational	
<b>AAA</b>	<p>Event description: Successful login. Log Message: Successful login through &lt;Console   Telnet   Web(SSL)   SSH&gt;(Username: &lt;username&gt;, IP: &lt;ipaddr &gt;).</p> <p>Parameters description: ipaddr: The IP address. username: The user name.</p>	Informational	
	<p>Event description: Login failed. Log Message: Login failed through &lt;Console   Telnet   Web(SSL)   SSH&gt; (Username: &lt;username&gt;, IP: &lt;ipaddr &gt;).</p> <p>Parameters description: ipaddr: The IP address. username: The user name.</p>	Warning	
	<p>Event description: Logout. Log Message: Logout through &lt;Console   Telnet   Web(SSL)   SSH&gt; (Username: &lt;username&gt;, IP: &lt;ipaddr &gt;).</p> <p>Parameters description: ipaddr: The IP address. username: The user name.</p>	Informational	
	<p>Event description: Session timed out. Log Message: &lt;Console   Telnet   Web(SSL)   SSH&gt; session timed out (Username: &lt;username&gt;, IP: &lt;ipaddr &gt;).</p> <p>Parameters description: ipaddr: The IP address. username: The user name.</p>	Informational	
	<p>Event description: Authentication Policy is enabled. Log Message: Authentication Policy is enabled (Module: AAA).</p>	Informational	
	<p>Event description: Authentication Policy is disabled. Log Message: Authentication Policy is disabled (Module: AAA).</p>	Informational	
	<p>Event description: Login failed due to AAA server timeout or improper configuration. Log Message: Login failed through &lt;Console   TELNET   Web(SSL)   SSH&gt; from &lt;ipaddr &gt; due to AAA server &lt;ipaddr&gt; timeout or improper configuration (Username: &lt;username&gt;).</p> <p>Parameters description: ipaddr: The IP address. username: The user name.</p>	Warning	

Category	Log Description	Severity	Note
	<p>Event description: Successful Enable Admin authenticated by AAA local or none or server.</p> <p>Log Message: Successful Enable Admin through &lt;Console   TELNET   Web(SSL)   SSH&gt; from &lt;ipaddr &gt; authenticated by AAA &lt;local   none   server &lt;ipaddr&gt;&gt; (Username: &lt;username&gt;).</p> <p>Parameters description:  local: Enable admin by AAA local method.  none: Enable admin by AAA none method.  server: Enable admin by AAA server method.  ipaddr: The IP address.  username: The user name.</p>	Informational	
	<p>Event description: Enable Admin failed due to AAA server timeout or improper configuration.</p> <p>Log Message: Enable Admin failed through &lt;Console   TELNET   Web(SSL)   SSH&gt; from &lt;ipaddr &gt; due to AAA server &lt;ipaddr &gt; timeout or improper configuration (Username: &lt;username&gt;)</p> <p>Parameters description:  ipaddr: The IP address.  username: The user name.</p>	Warning	
	<p>Event description: Enable Admin failed authenticated by AAA local or server.</p> <p>Log Message: Enable Admin failed through &lt;Console   TELNET   Web(SSL)   SSH&gt; from &lt;ipaddr &gt; authenticated by AAA &lt; local   server &lt;ipaddr &gt;&gt; (Username: &lt;username&gt;).</p> <p>Parameters description:  local: Enable admin by AAA local method.  server: Enable admin by AAA server method.  ipaddr: The IP address.  username: The user name.</p>	Warning	
	<p>Event description: Successful login authenticated by AAA local or none or server.</p> <p>Log Message: Successful login through &lt;Console   TELNET   Web(SSL)   SSH&gt; from &lt; ipaddr &gt; authenticated by AAA &lt;local   none   server &lt;ipaddr &gt;&gt; (Username: &lt;username&gt;).</p> <p>Parameters description:  local: Specify AAA local method.  none: Specify none method.  server: Specify AAA server method.  ipaddr: The IP address.  username: The user name.</p>	Informational	
	<p>Event description: Login failed authenticated by AAA local or server.</p> <p>Log Message: Login failed through &lt;Console   Telnet   Web(SSL)   SSH&gt; from &lt;ipaddr&gt; authenticated by AAA &lt;local   server &lt;ipaddr&gt; (Username: &lt;username&gt;).</p> <p>Parameters description:  local: Specify AAA local method.  server: Specify AAA server method.  ipaddr: The IP address.  username: The user name.</p>	Warning	
<b>Traffic Control</b>	<p>Event description: Broadcast storm occurrence.</p> <p>Log Message: &lt;interface-id&gt; Broadcast storm is occurring.</p> <p>Parameters description:  interface-id: The interface name.</p>	Warning	

Category	Log Description	Severity	Note
	Event description: Broadcast storm cleared. Log Message: <interface-id> Broadcast storm has cleared.  Parameters description: interface-id: The interface name.	Informational	
	Event description: Multicast storm occurrence. Log Message: <interface-id> Multicast storm is occurring.  Parameters description: interface-id: The interface name.	Warning	
	Event description: Multicast storm cleared. Log Message: <interface-id>Multicast storm has cleared.  Parameters description: interface-id: The interface name.	Informational	
	Event description: Unicast storm occurrence. Log Message: <interface-id> Unicast storm is occurring.  Parameters description: interface-id: The interface name.	Warning	
	Event description: Unicast storm cleared. Log Message: <interface-id> Unicast storm has cleared.  Parameters description: interface-id: The interface name.	Informational	
	Event description: Port shut down due to a packet storm Log Message: <interface-id> is currently shut down due to a packet storm.  Parameters description: interface-id: The interface name.	Warning	
<b>MSTP Debug</b>	Event description: Topology changed. Log Message: Topology changed [( [Instance:<InstanceID> ] ,port:<portNum> ,MAC: <macaddr>)]  Parameters description: InstanceID: The instance ID. portNum: The port ID. macaddr: The MAC address.	Notice	
	Event description: Spanning Tree new Root Bridge selected. Log Message: [CIST   CIST Regional   MSTI Regional] New Root bridge selected( [Instance: <InstanceID> ]MAC: <macaddr> Priority :<value>)  Parameters description: InstanceID: The instance ID. macaddr: The MAC address. value: The priority value.	Informational	
	Event description: Spanning Tree Protocol is enabled. Log Message: Spanning Tree Protocol is enabled.	Informational	
	Event description: Spanning Tree Protocol is disabled. Log Message: Spanning Tree Protocol is disabled.	Informational	
	Event description: New Root Port selected. Log Message: New Root Port selected [( [Instance:<InstanceID> ] , port:<portNum>)]  Parameters description: InstanceID: The instance ID. portNum: The port ID.	Notice	



Category	Log Description	Severity	Note
	<p>Event description: Spanning Tree port status changed. Log Message: Spanning Tree port status changed ([ Instance:&lt;InstanceID&gt; ], port:&lt; portNum&gt;)] &lt;old_status&gt; -&gt; &lt;new_status&gt;</p> <p>Parameters description: InstanceID: The instance ID. portNum: The port ID. old_status: The old status. new_status: The new status.</p>	Notice	
	<p>Event description: Spanning Tree port role changed. Log Message: Spanning Tree port status changed. ([ Instance:&lt;InstanceID&gt; ], port:&lt;[ portNum&gt;)] &lt;old_role&gt; -&gt; &lt;new_role&gt;</p> <p>Parameters description: InstanceID: The instance ID. portNum: The port ID. old_role: The old role. new_status: The new role.</p>	Informational	
	<p>Event description: Spanning Tree instance created. Log Message: Spanning Tree instance created. Instance:&lt;InstanceID&gt;</p> <p>Parameters description: InstanceID: The instance ID.</p>	Informational	
	<p>Event description: Spanning Tree instance deleted. Log Message: Spanning Tree instance deleted. Instance:&lt;InstanceID&gt;</p> <p>Parameters description: InstanceID: The instance ID.</p>	Informational	
	<p>Event description: Spanning Tree Version changed. Log Message: Spanning Tree version changed. New version:&lt;new_version&gt;</p> <p>Parameters description: new_version: The new STP version.</p>	Informational	
	<p>Event description: Spanning Tree MST configuration ID name and revision level changed. Log Message: Spanning Tree MST configuration ID name and revision level changed (name:&lt;name&gt; ,revision level &lt;revision_level&gt;).</p> <p>Parameters description: name : The new name. revision_level: The new revision level.</p>	Informational	
	<p>Event description: Spanning Tree MST configuration ID VLAN mapping table deleted. Log Message: Spanning Tree MST configuration ID VLAN mapping table changed (instance: &lt;InstanceID&gt; delete vlan &lt;startvlanid&gt; [- &lt;endvlanid&gt;]).</p> <p>Parameters description: InstanceID: The instance ID. startvlanid-endvlanid: The VLAN list.</p>	Informational	
	<p>Event description: Spanning Tree MST configuration ID VLAN mapping table added. Log Message: Spanning Tree MST configuration ID VLAN mapping table changed (instance: &lt;InstanceID&gt; add vlan &lt;startvlanid&gt; [- &lt;endvlanid&gt;]).</p> <p>Parameters description: InstanceID: The instance ID. startvlanid-endvlanid: The VLAN list.</p>	Informational	

Category	Log Description	Severity	Note
<b>Module</b>	Event Description: Module inserted and working. Log Message: Module <module-type> is inserted.  Parameters Description: module-type: The expansion module name.	Informational	
	Event Description: Module inserted and not working. Log Message: Module < module-type > inserted but can't work except after rebooting the device.  Parameters Description: module-type: The expansion module name.	Warning	
	Event Description: Module hot removed. Log Message: Module < module-type > is removed.  Parameters Description: module-type: The expansion module name.	Informational	
<b>DLMS</b>	Event Description: Input an illegal activation code. Log Message: Illegal activation code (AC: <string25>).  Parameters Description: <string25>: The activation code	Informational	
	Event Description: License Expired. Log Message: License expired (license:<license-model>, AC: <string25>).  Parameters Description: <license-model>: The license model name. <string25>: The activation code.	Critical	
	Event Description: License successfully installed. Log Message: License successfully installed (license:<license-model>, AC: <string25>).  Parameters Description: <license-model>: The license model name. <string25>: The activation code.	Informational	
	Event Description:The activation code is unbound. Log Message: Unbound activation code (AC: <string25>).  Parameters Description: <string25>: The activation code.	Critical	
	Event Description:When the license is going to expire, it will be logged before 30 days. Log Message: License will expire in 30 days. (license:<license-model>, AC: <string25>).  Parameters Description: <license-model>: The license model name. <string25>: The activation code.	Informational	
<b>Peripheral</b>	Event description: Fan Recovered . Log Message: Fan <id> recovered  Parameters description: Fan <id>: The FAN ID.	Critical	
	Event description: Fan Failed. Log Message: Fan <id> failed.  Parameters description: Fan <id>: The FAN ID.	Critical	

Category	Log Description	Severity	Note
	<p>Event description: Temperature sensor enters alarm state. Log Message: Temperature sensor &lt;sensorID&gt; enters alarm state (current temperature: &lt;temperature&gt;)</p> <p>Parameters description: sensorID: The sensor ID. temperature: The temperature.</p>	Warning	
	<p>Event description: Temperature recovers to normal. Log Message: Temperature sensor &lt;sensorID&gt; recovers to normal state (current temperature: &lt;temperature&gt;)</p> <p>Parameters description: sensorID: The sensor ID. temperature: The temperature.</p>	Informational	
	<p>Event description: Power failed. Log Message: Power &lt;id&gt; failed</p> <p>Parameters description: Power &lt;id&gt;: The Power ID.</p>	Critical	
	<p>Event description: Power is recovered. Log Message: Power &lt;id&gt; is recovered</p> <p>Parameters description: Power &lt;id&gt;: The Power ID.</p>	Critical	
<b>MPLS</b>	<p>Event description: LSP is up. Log Message: LSP &lt;lsp_id&gt; is up.</p> <p>Parameters description: lsp_id: The established LSP ID.</p>	Informational	
	<p>Event description: LSP is down. Log Message: LSP &lt;lsp_id&gt; is down.</p> <p>Parameters description: lsp_id: The deleted LSP ID.</p>	Informational	
<b>VPWS</b>	<p>Event description: Pseudowire link down. Log Message: Pseudowire ID &lt;vc_id&gt; peer IP &lt;ipaddr&gt; link down.</p> <p>Parameters description: vc_id: The link down pseudowire ID. ipaddr: The peer IP address of the link down pseudowire.</p>	Informational	
	<p>Event description: Pseudowire link up. Log Message: Pseudowire ID &lt;vc_id&gt; peer IP &lt;ipaddr&gt; link up.</p> <p>Parameters description: vc_id: The link up pseudowire ID. ipaddr: The peer IP address of the link up pseudowire.</p>	Informational	
	<p>Event description: Pseudowire is deleted. Log Message: Pseudowire ID &lt;vc_id&gt; peer IP &lt;ipaddr&gt; is deleted.</p> <p>Parameters description: vc_id: The deleted pseudowire ID. ipaddr: The peer IP address of the deleted pseudowire.</p>	Informational	
	<p>Event description: Pseudowire link standby. Log Message: Pseudowire ID &lt;vc_id&gt; peer IP &lt;ipaddr&gt; link standby.</p> <p>Parameters description: vc_id: The link standby pseudowire ID. ipaddr: The peer IP address of the link standby pseudowire.</p>	Informational	

Category	Log Description	Severity	Note
<b>VPLS</b>	Event description: VPLS link up. Log Message: VPLS <vpls_name> link up.  Parameters description: vpls_name: The name of the link up VPLS.	Informational	
	Event description: VPLS link down. Log Message: VPLS <vpls_name> link down.  Parameters description: vpls_name: The name of the link down VPLS.	Informational	
<b>LACP</b>	Event description: Link Aggregation Group link up. Log Message: Link Aggregation Group <group_id> link up.  Parameters description: group_id: The group ID of the link down aggregation group.	Informational	
	Event description: Link Aggregation Group link down. Log Message: Link Aggregation Group <group_id> link down.  Parameters description: group_id: The group ID of the link down aggregation group.	Informational	

## Appendix C - Trap Entries

This table lists the trap logs found on the Switch.

Category	Trap Name	Description	OID
VRRP	vrrpTrapNewMaster	The newMaster trap indicates that the sending agent has transitioned to 'Master' state. Binding objects: (1) vrrpOperMasterIpAddr	1.3.6.1.2.1.68.0.1
	vrrpTrapAuthFailure	A vrrpAuthFailure trap signifies that a packet has been received from a router whose authentication key or authentication type conflicts with this router's authentication key or authentication type. Implementation of this trap is optional. Binding objects: (1) vrrpTrapPacketSrc (2) vrrpTrapAuthErrorType	1.3.6.1.2.1.68.0.2
MSTP	newRoot	The newRoot trap indicates that the sending agent has become the new root of the Spanning Tree; the trap is sent by a bridge soon after its election as the new root, e.g., upon expiration of the Topology Change Timer, immediately subsequent to its election. Implementation of this trap is optional.	1.3.6.1.2.1.17.0.1
	topologyChange	A topologyChange trap is sent by a bridge when any of its configured ports transitions from the Learning state to the Forwarding state, or from the Forwarding state to the Blocking state. The trap is not sent if a newRoot trap is sent for the same transition. Implementation of this trap is optional.	1.3.6.1.2.1.17.0.2
Port Trap	linkUp	A notification is generated when port linkup. Binding objects: (1) ifIndex, (2) if AdminStatus (3) ifOperStatu	1.3.6.1.6.3.1.1.5.4
	linkDown	A notification is generated when port linkdown. Binding objects: (1) ifIndex, (2) if AdminStatus (3) ifOperStatu	1.3.6.1.6.3.1.1.5.3
Start Trap	coldStart	A coldStart trap signifies that the SNMPv2 entity, acting in an agent role, is reinitializing itself and that its configuration may have been altered.	1.3.6.1.6.3.1.1.5.1
	warmStart	A warmStart trap signifies that the SNMPv2 entity, acting in an agent role, is reinitializing itself such that its configuration is unaltered.	1.3.6.1.6.3.1.1.5.2

Category	Trap Name	Description	OID
<b>Authentication</b>	authenticationFailure	An authenticationFailure trap signifies that the SNMPv2 entity, acting in an agent role, has received a protocol message that is not properly authenticated. While all implementations of the SNMPv2 must be capable of generating this trap, the snmpEnableAuthenTraps object indicates whether this trap will be generated.	1.3.6.1.6.3.1.1.5.5
<b>RMON</b>	risingAlarm	The SNMP trap that is generated when an alarm entry crosses its rising threshold and generates an event that is configured for sending SNMP traps. Binding objects: (1) alarmIndex (2) alarmVariable (3) alarmSampleType (4) alarmValue (5) alarmRisingThreshold	1.3.6.1.2.1.16.0.1
	fallingAlarm	The SNMP trap that is generated when an alarm entry crosses its falling threshold and generates an event that is configured for sending SNMP traps. Binding objects: (1) alarmIndex (2) alarmVariable (3) alarmSampleType (4) alarmValue (5) alarmFallingThreshold	1.3.6.1.2.1.16.0.2
<b>MPLS</b>	mplsXCUp	This notification is generated when the mplsXCOperStatus object for one or more contiguous entries in the mplsXCTable is about to enter the up state from another state.	1.3.6.1.2.1.10.166.2.0.1
	mplsXCDown	This notification is generated when the mplsXCOperStatus object for one or more contiguous entries in the mplsXCTable is about to enter the up state from another state.	1.3.6.1.2.1.10.166.2.0.2
<b>LDP</b>	mplsLdpInitSessionThresholdExceeded	This notification is generated when the backoff option is enabled and the number of Session Initialization messages exceeds the value of the 'mplsLdpEntityInitSessionThreshold'	1.3.6.1.2.1.10.166.4.0.1
	mplsLdpPathVectorLimitMismatch	This notification is sent when the 'mplsLdpEntityPathVectorLimit' does not match the value of the 'mplsLdpPeerPathVectorLimit' for a specific Entity.	1.3.6.1.2.1.10.166.4.0.2
	mplsLdpSessionUp	This notification is sent when the value of 'mplsLdpSessionState' enters the 'operational (5)' state.	1.3.6.1.2.1.10.166.4.0.3
	mplsLdpSessionDown	This notification is sent when the value of 'mplsLdpSessionState' leaves the 'operational (5)' state.	1.3.6.1.2.1.10.166.4.0.4

Category	Trap Name	Description	OID
LACP	linkUp	<p>A linkUp trap signifies that the SNMP entity, acting in an agent role, has detected that the ifOperStatus object for one of its communication links left the down state and transitioned into some other state (but not into the notPresent state). This other state is indicated by the included value of ifOperStatus.</p> <p>Binding objects:            (1) ifIndex            (2) if AdminStatus            (3) ifOperStatus</p>	1.3.6.1.6.3.1.1.5.4
	linkDown	<p>A linkDown trap signifies that the SNMP entity, acting in an agent role, has detected that the ifOperStatus object for one of its communication links is about to enter the down state from some other state (but not from the notPresent state). This other state is indicated by the included value of ifOperStatus.</p> <p>Binding objects:            (1) ifIndex            (2) if AdminStatus            (3) ifOperStatus</p>	1.3.6.1.6.3.1.1.5.3