

## Installation Example of setting Wireless Access Point in a Network

Author: Steven Sia

Version: 1.1


Date: 30/11/2000

Install the Access Point Program from disks.

**Start > Programs > D-Link Wireless LAN > D-Link AP Manager**


Click on **Build from network** icon (second last icon) or **File > Build from network**.

Check on your IP address, if it is alright, click **Next>**; else click **Change...** to change it to your IP network. **OK, Next>**

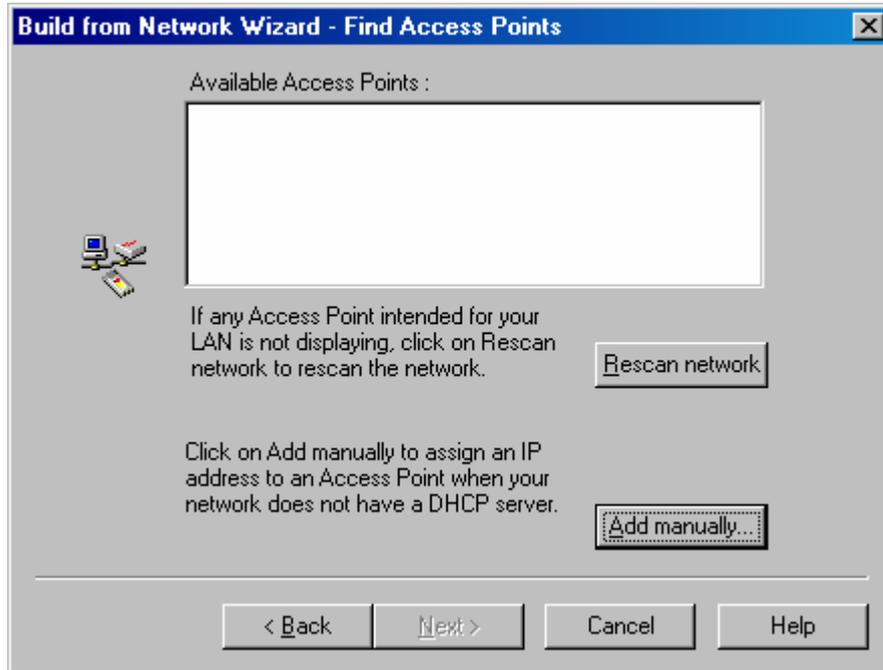

The MAC Address can be found on the Access Point itself (a sticker with 12 characters on it).

Assign an IP address (which is not used on the network) to the Access Point as below.

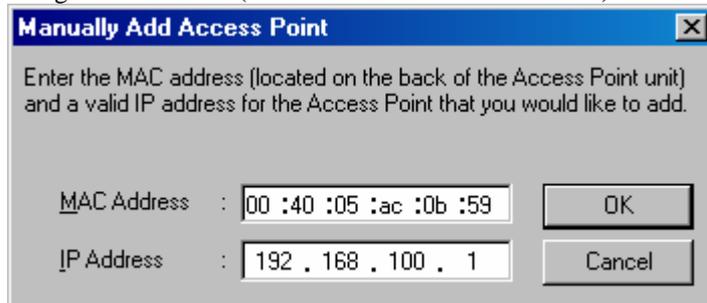

Build from Network Wizard - Find Access Points

Available Access Points :

192.168.100.1 --> 00:40:05:ac:0b:59



If any Access Point intended for your LAN is not displaying, click on Rescan network to rescan the network.

Rescan network

Click on Add manually to assign an IP address to an Access Point when your network does not have a DHCP server.

Add manually...

< Back

Next >


Cancel

Help

**SSID** and **Channel** values are the same as what we have seen before.

These two parameters are the important basic settings.

Please get the basic connection up first leaving other parameters as default before experiencing with other parameters and distances.

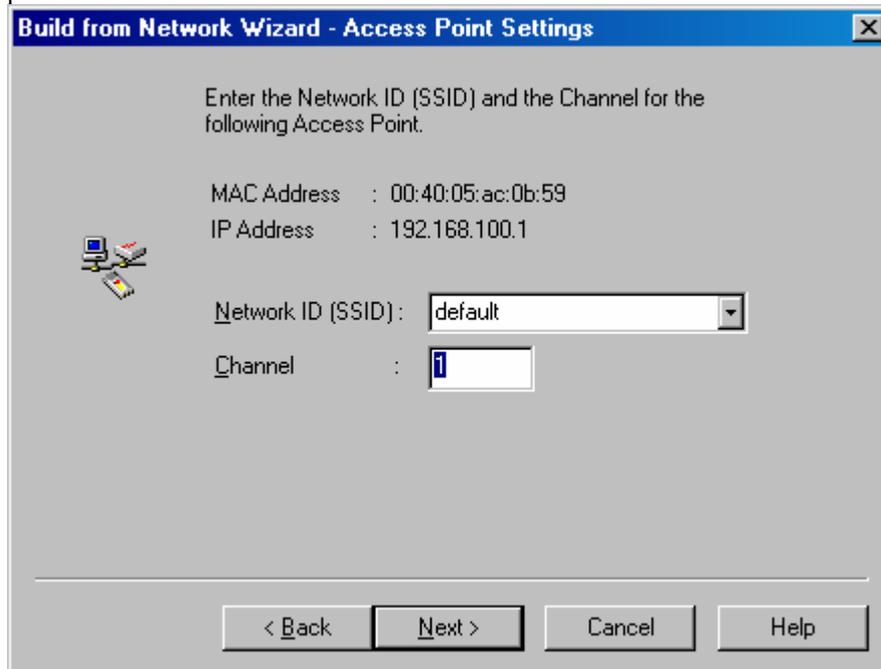


**Build from Network Wizard - Access Point Settings**

Enter the Network ID (SSID) and the Channel for the following Access Point.

MAC Address : 00:40:05:ac:0b:59  
IP Address : 192.168.100.1

Network ID (SSID) : default  
Channel : 1

< Back   Next >   Cancel   Help

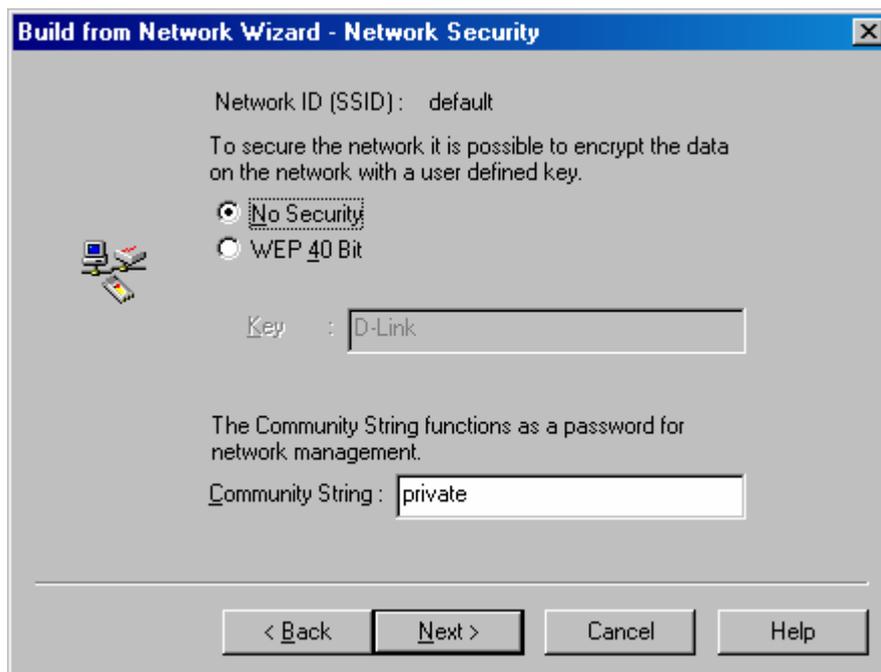

**Build from Network Wizard - Network Security**

Network ID (SSID) : default

To secure the network it is possible to encrypt the data on the network with a user defined key.

No Security  
 WEP 40 Bit

Key : D-Link

The Community String functions as a password for network management.

Community String : private

< Back   Next >   Cancel   Help

