How to change ADSL Username and Password

This document details how to change ADSL Username and Password settings in your modem

Step 1.   Open your Internet Browser and in the address field type in http://192.168.1.1.
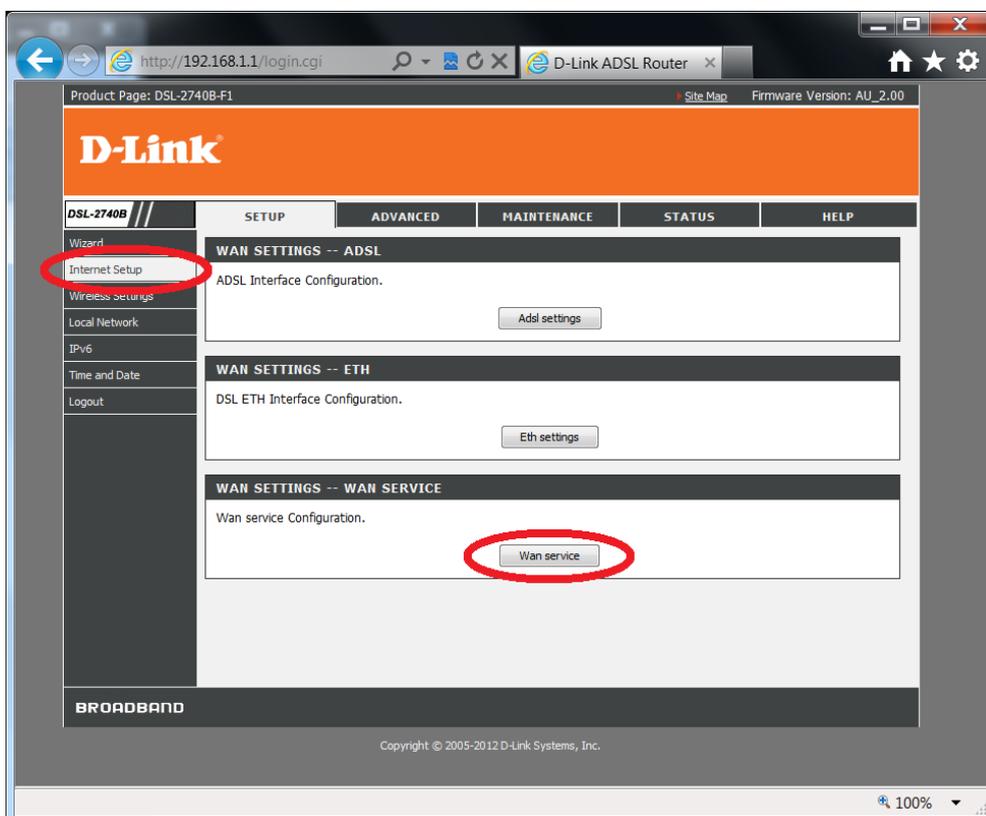

Step 2.   When prompted type in the Username and Password then click on the "Log In" button.
If you have not changed the password for the modem administration, the factory settings are:
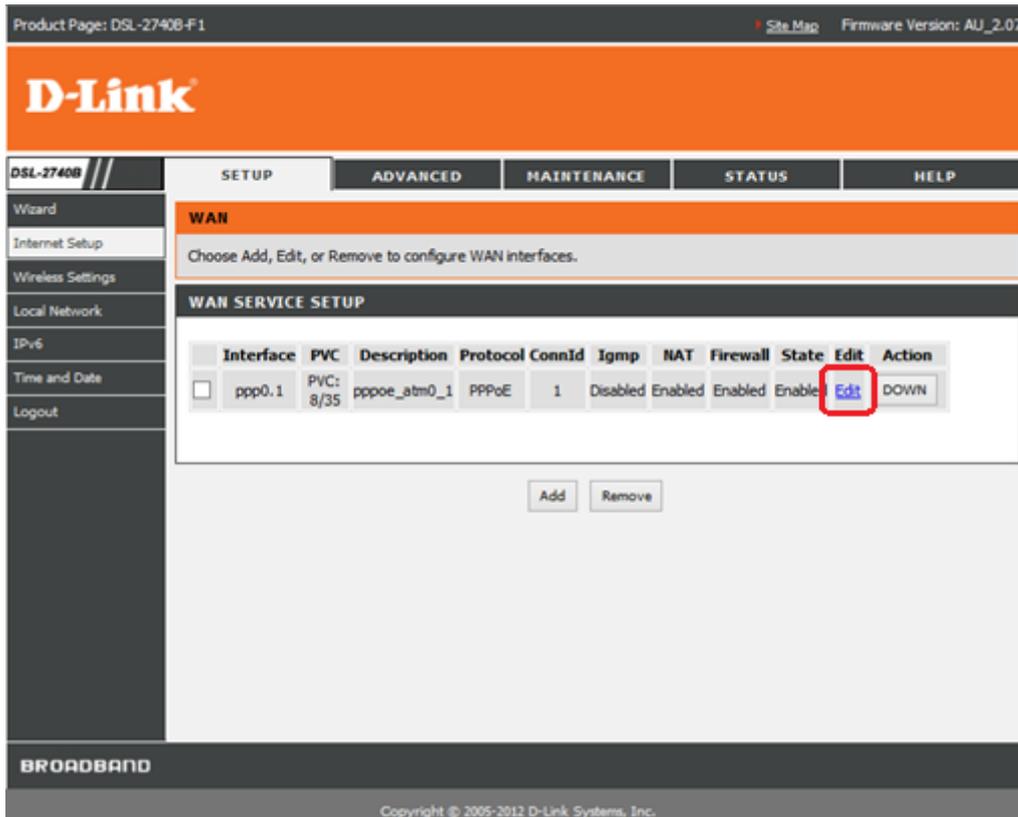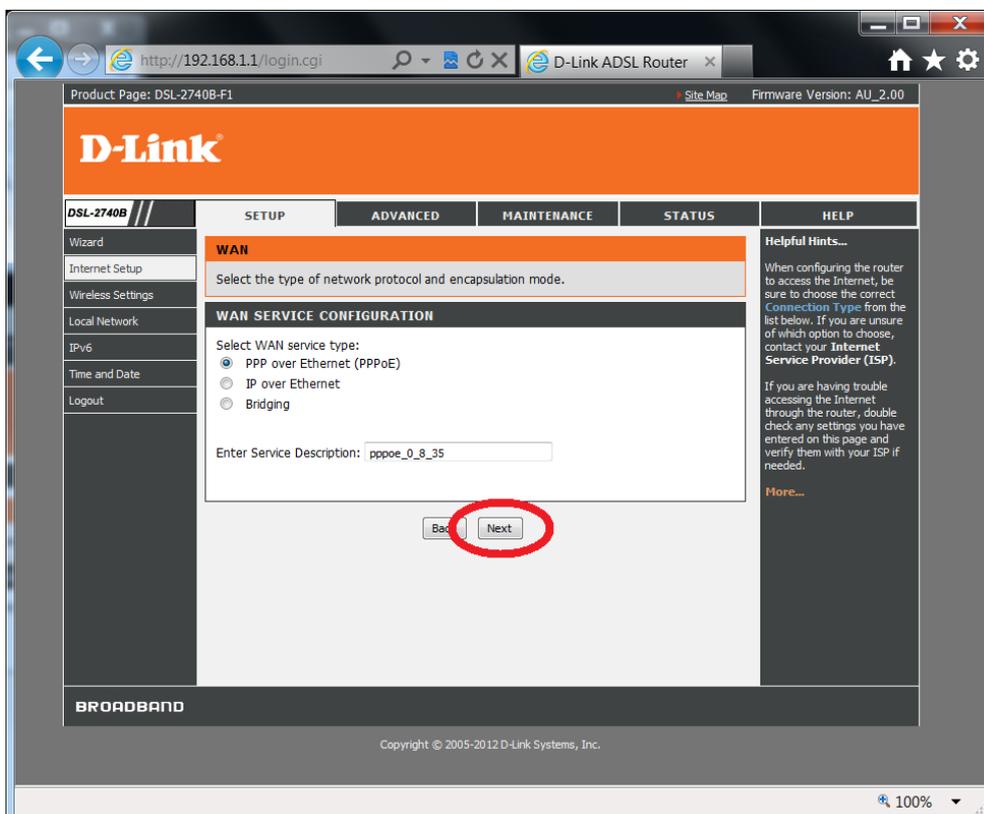
Username: admin
Password: admin

Step 3.   After logging in you will be presented with the modem's configuration pages.
Please click on [**Internet Setup**], and then click on **[Wan service]** button:

Step 4.   Click on the **Edit** button:

Step 5.   Click on the Next button:

Step 6. Please type in your NEW account details as given by you Internet Service Provider:

- In the "PPP Username" field – type in your new username given by your Internet Service Provider
- In the "PPP Password" field – type in your new password given by your Internet Service Provider

Then click on the Next button:

Step 7. Click on the Next button:

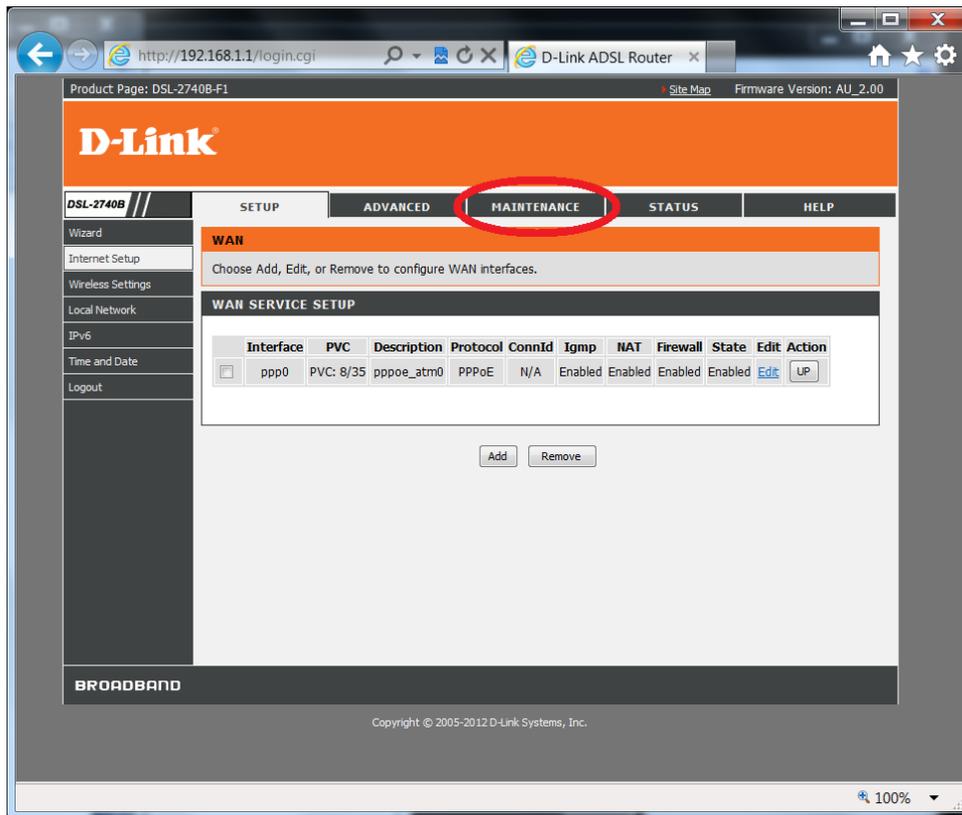**Step 8.** Click on the Next button:

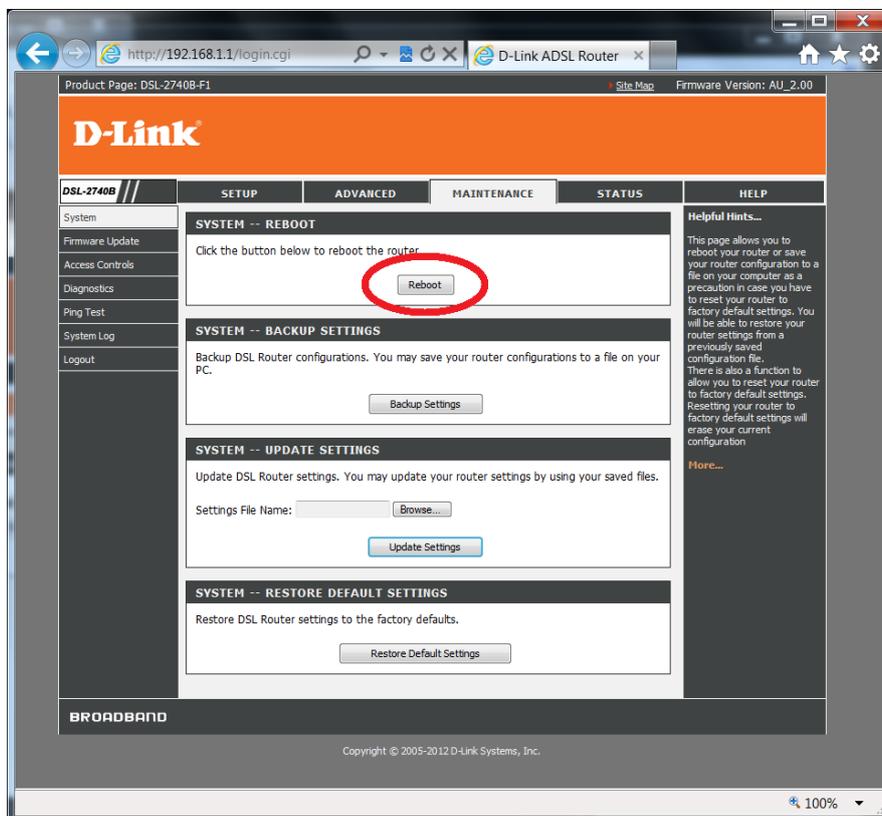**Step 9.** Click on the Apply button:
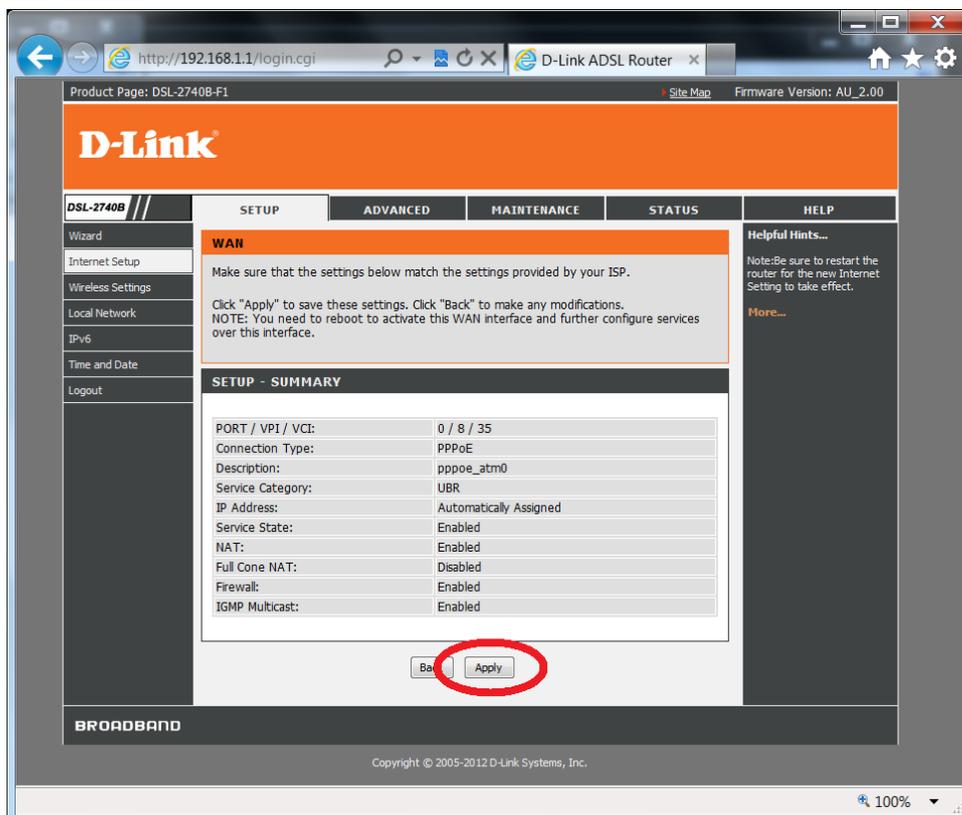
Now follow these steps to restart the modem and verify connection to your Internet Provider.
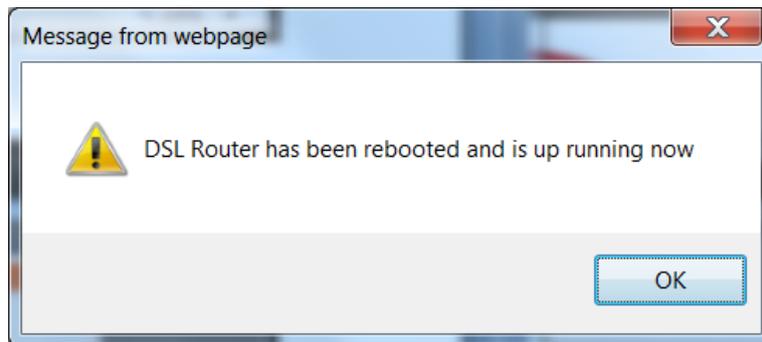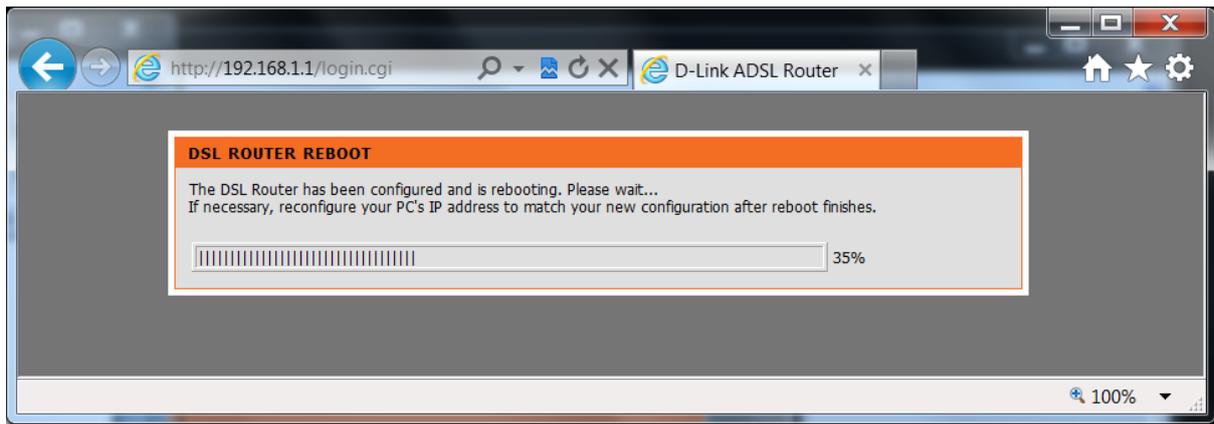
Step 10.   Click on the Maintenance menu:
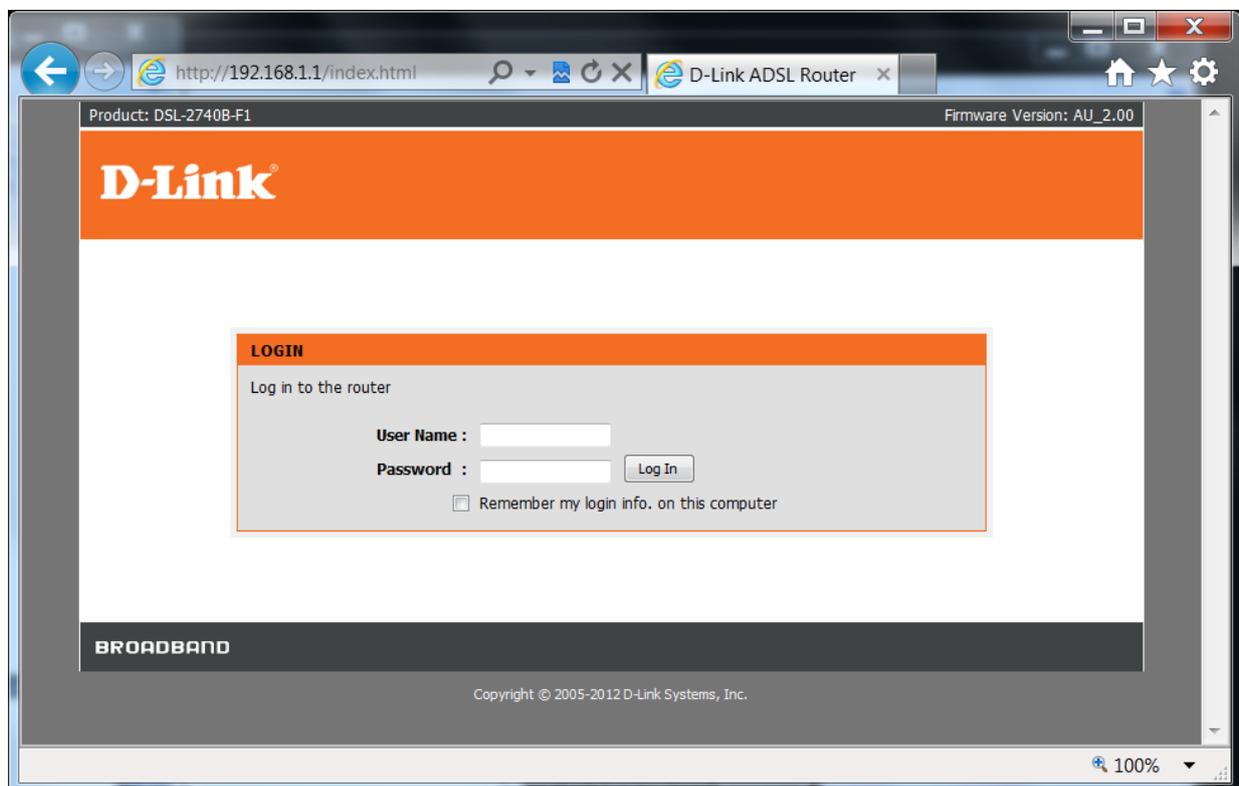

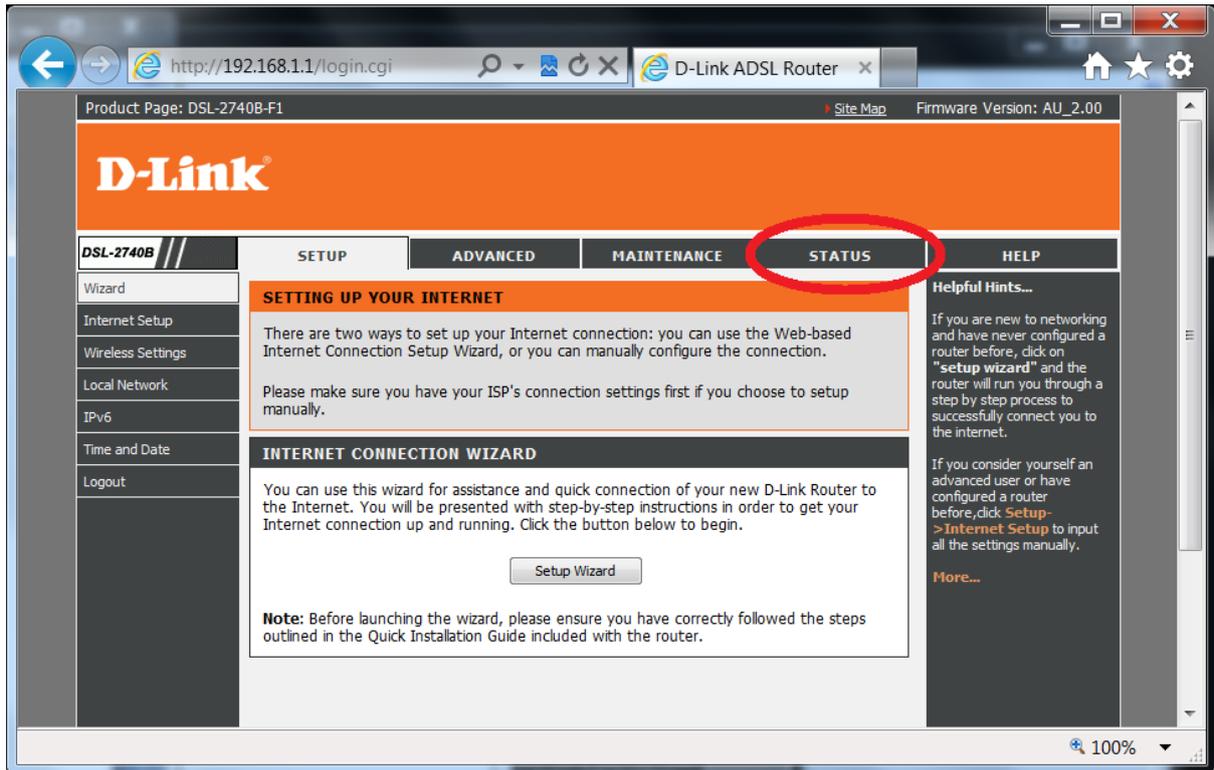**Step 11.**   Click on the Reboot button:

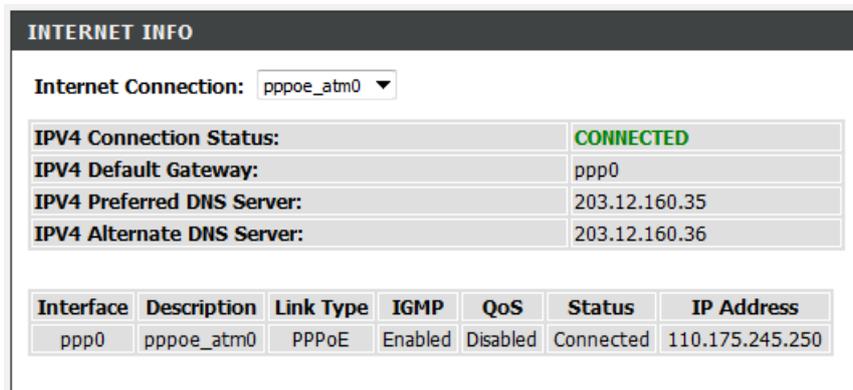**Step 12.** Allow the modem to reboot:

Step 13. Login again into your modem's configuration pages. Follow instructions at Steps 1:

Step 14. Click on the Status menu:

Step 15. Please wait 1-2 minutes and your modem should report Connection Status as Connected:

You should now be able to access the Internet now.