

1.The system will detect the new hardware.




2.Please click Next.



3.Please click Next.



4.Please select “Specify a location” and click Next.

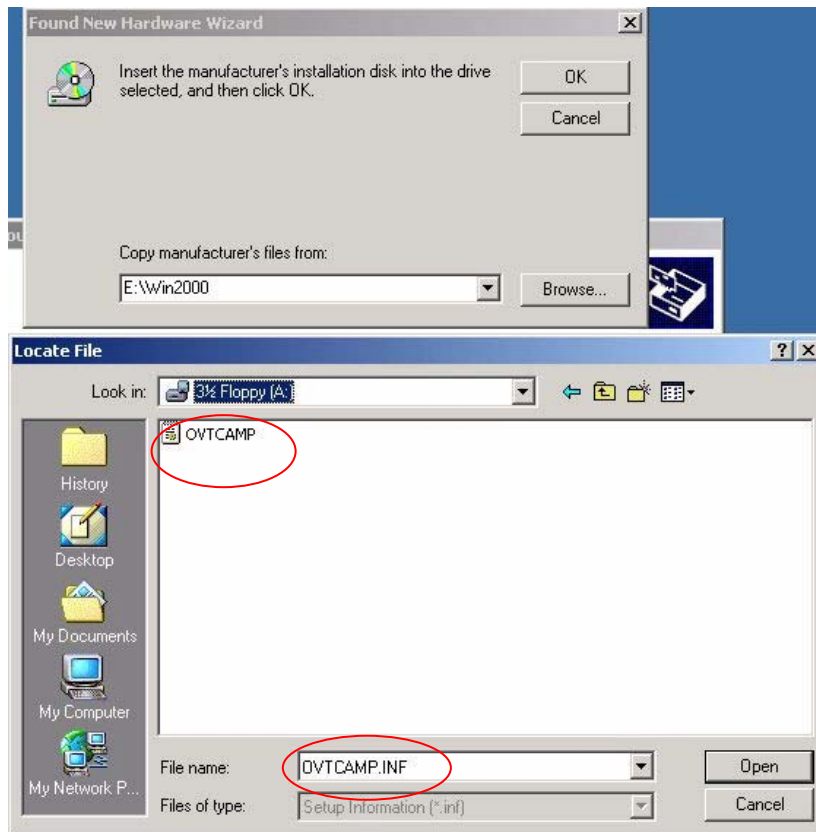

5. Please make sure the system select the OVT CAMP.INF file. And click Open.




6. Please check the driver's path and click OK.



7. Please check the driver's path is the same Step5 and click Next.




8. Please check the system find "D-Link USB Digital Video Camera" and click Yes. Then, the system will copy the driver to Win2000.

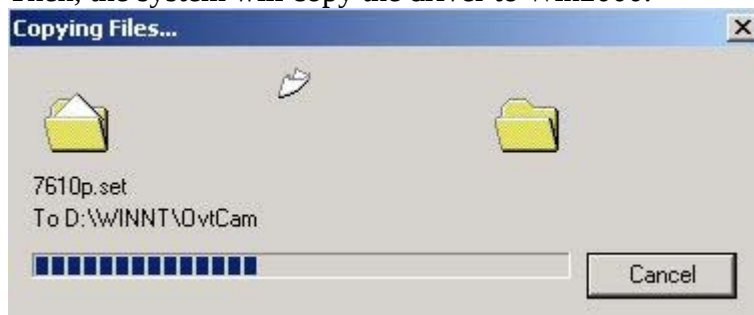

9. Then, the system will show below windows and click Finish.



10. Then, the system will ask you to restart the PC and click Yes.

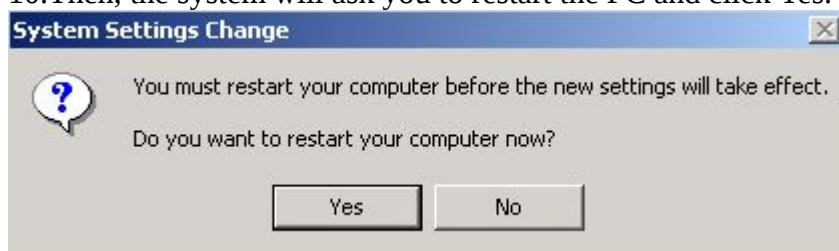

11. After restart the PC, In Device Manager, you can see the "D-Link USB Digital Video Camera."

