D-Link®

COVɾ

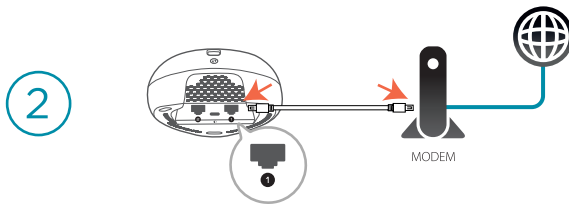## Dual Band Whole Home Wi-Fi System

Simple **Setup** Guide

x 3   x 3

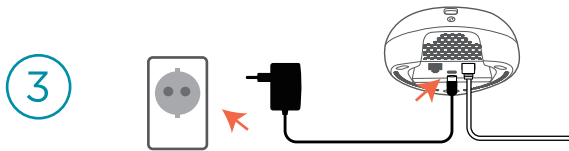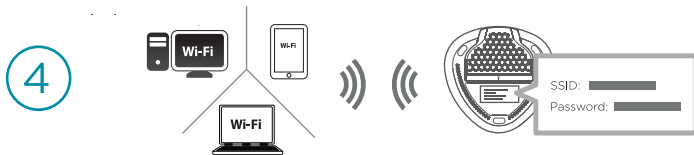**①** If you wish to set up your Covr device on your mobile device, download the D-Link Wi-Fi app from the App Store or Google Play before you begin.

Download on the **App Store**
GET IT ON **Google Play**
🔍 D-Link Wi-Fi

② Power off the modem and connect one end of the Ethernet cable to port 1 on the unit labeled A, and connect the other end to your Internet-connected modem.

MODEM

③ Power the modem back on and plug in the Covr device.

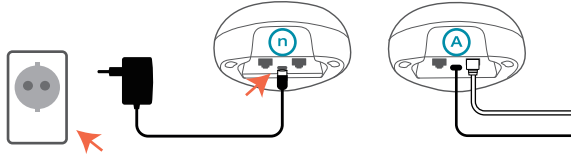**④** Connect to the Wi-Fi name (SSID) printed on the back of the device, or on the included Wi-Fi Configuration Card.

Wi-Fi   Wi-Fi   Wi-Fi
SSID:
Password:

⑤ On your mobile device, open the app and tap Install Your Device to complete the setup.

+ Install Your Device

OR

OR

http://covr.local./

On a laptop or PC, type http://covr.local./ into a web browser and follow the instructions to complete the setup.
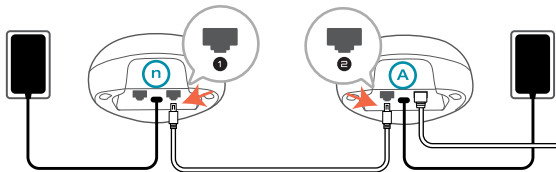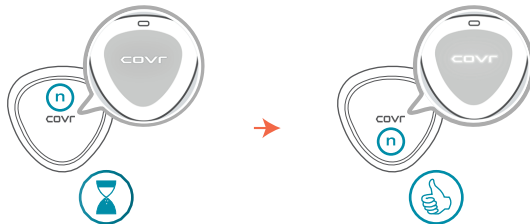
Adding Additional Covr Points

1 Plug the new unit into a power socket nearby your existing Covr Point A.
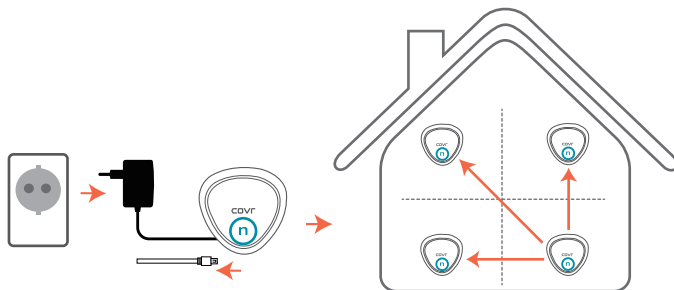
2 Use an Ethernet cable to connect the new unit to port 2 on your existing Covr Point A.

3 Wait for the COVR LED on the new unit to light up solid white. When it does, the device is paired and ready to use.

4 You can now disconnect and unplug the new unit and place it anywhere you want to extend your whole home network to.

If the COVR LED is blinking orange or white, move the unit closer to Covr Point A until the LED turns solid white.