


D-Link Quick Installation Guide

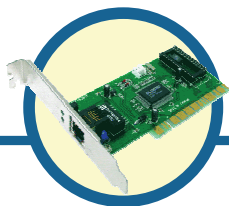

DFE-538TX

10/100Mb Ethernet
PCI Adapter

Check Your Package Contents



- **DFE-538TX 10/100Mb Ethernet PCI Adapter**



- **CD with Manual and Drivers**

If any of the above items are missing, please contact your reseller.

The DFE-538TX supports drivers for the following operating systems:

Microsoft Windows 95/98/ME	Macintosh 10.1.X
Microsoft Windows NT4.0	Netware Server 3.12/4.1X/5.00
Microsoft Windows 2000	Netware DOS ODI Client
Microsoft Windows 2003	DOS NDIS
Microsoft Windows XP	Microsoft Network client 3.0 for DOS
Microsoft Windows Vista x86	Microsoft LAN Manager Workstation/Server
Microsoft Windows Vista x64	SCO Unix 5.0
Linux 2.2	Packet Driver

For Microsoft Windows


DO NOT insert the DFE-538TX into the computer's PCI slot before installing the drivers.

1

Installing the DFE-538TX Drivers

- Turn **ON** the computer.
- Insert the **driver CD**, which is included with the DFE-538TX, into the CD-ROM drive.

The following window will appear.

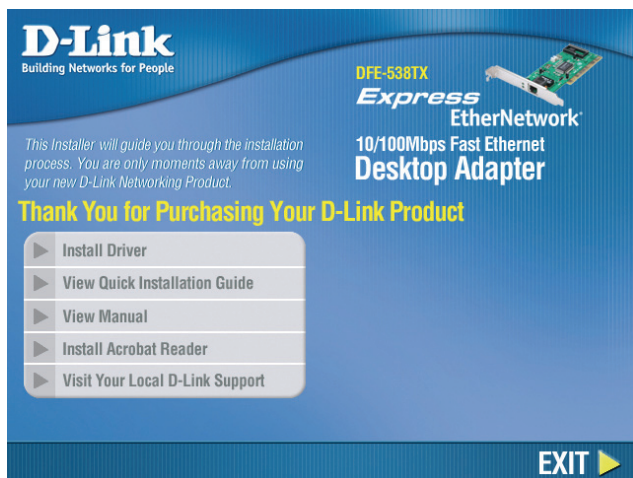


Click on "Install Drivers".

For **Windows 2000, Windows XP, Windows 2003, Windows Vista x86** and **Vista x64** users, the following screen will appear.



Click OK

For **Windows 98SE** and **Windows ME** users, this screen will be displayed.

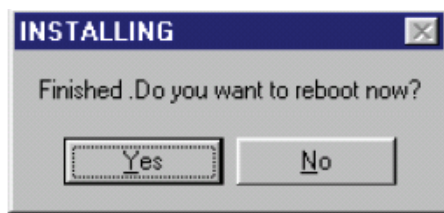


Click Yes

Next, TURN OFF the computer and unplug the power cord.

2

Installing the DFE-538TX into the computer's PCI slot

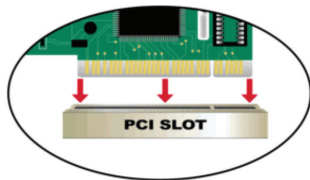

Caution: To avoid damage caused by static electricity, make sure to properly ground yourself by first touching a metal part of your computer to discharge any static electricity before working with the DFE-538TX Ethernet Adapter.


- **Remove** the back cover of your computer. (Refer to your computer's manual if needed.)
- **Locate** an available PCI slot. PCI slots are usually white or cream colored.
- **Remove** the backplate (the small piece of metal that covers the opening for the PCI card on the back cover that you just removed.)
- **Insert** the DFE-538TX carefully and firmly into the PCI slot.
- **Secure** the DFE-538TX with the screw from the backplate.
- **Replace** your computer's cover.

3

Finishing the Installation

TURN ON the computer.

For **Windows 98SE** and **Windows ME** users, the following screen will appear.

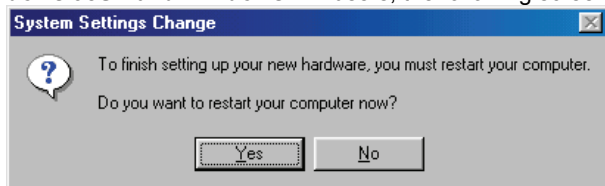


Click **Yes**, to restart the computer.

4

Checking the Installation

Go to:

START>SETTINGS> CONTROL PANEL>SYSTEM>HARDWARE> DEVICE MANAGER.

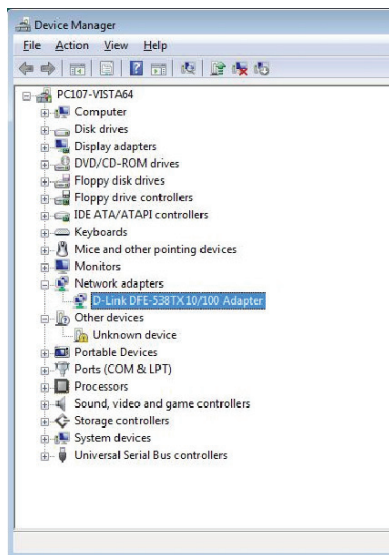

To check that the installation of the **DFE-538TX** was successful, scroll down and click on “**Network Adapters.**”

You have a successful installation when “**D-Link DFE-538TX**” appears (with no errors) as shown at left.



: 08456 12 0003