



User Manual

AX3000 Wi-Fi 6 Extender

Preface

D-Link reserves the right to revise this publication and to make changes in the content hereof without obligation to notify any person or organization of such revisions or changes.

Manual Revisions

Hardware	Revision	Date	Description
A1	v1.00	07/28/2026	Initial Version

Trademarks

D-Link and the D-Link logo are trademarks or registered trademarks of D-Link Corporation or its subsidiaries in the United States or other countries. All other company or product names mentioned herein are trademarks or registered trademarks of their respective companies.

Apple®, Apple logo®, Safari®, iPhone®, and Macintosh® are trademarks of Apple Inc., registered in the U.S. and other countries. App StoreSM is a service mark of Apple Inc.

Google, Android, Google Play and Google Home are trademarks of Google LLC.

Internet Explorer®, Windows® and the Windows logo are trademarks of the Microsoft group of companies.

Copyright © 2026 by D-Link Corporation. All rights reserved. This publication may not be reproduced, in whole or in part, without prior expressed written permission from D-Link Corporation.

Power Usage

ErP Power Usage

This device is an Energy Related Product (ErP) with High Network Availability (HiNA), and automatically switches to a power-saving Network Standby mode within 1 minute of no packets being transmitted. If it is not needed during certain periods of time, it can be unplugged to save energy.


Network Standby: 4.333W

Table of Contents

Preface	i	Settings	33
Product Overview	1	Mode Settings.....	33
Package Contents.....	1	Management.....	34
System Requirements	2	Time	34
Introduction	3	LED Settings.....	35
Features.....	3	Schedule	36
What is a Wireless Extender?	4	System Log.....	37
Hardware Overview	5	System Admin	38
LED Indicators	5	Admin.....	38
Bottom Side	6	System	39
Back.....	7	Upgrade	40
Installation	8	Statistics	41
Wireless Installation Considerations.....	8	D-Link SetupGo App	42
Hardware Setup	9	Connecting Wireless Clients to the Extender	44
Getting Started	10	WPS Button	44
Assessing Uplink Signal Strength	11	Troubleshooting	45
D-Link SetupGo	12	Wireless Basics	47
Setup Wizard	14	Tips.....	48
Bridge Mode Settings	24	Technical Specifications	49
Configuration	25	Regulatory Statements	50
Home	25		
Settings	28		
Wireless	28		
Smart Connect.....	29		

Product Overview

Package Contents

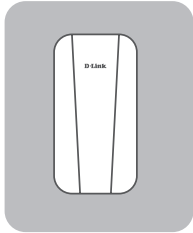

SE30 AX3000 Wi-Fi 6 Extender



Quick Installation Guide

If any of the above items are missing, please contact your reseller.

System Requirements

Network Requirements	• A wireless router with an active Internet connection. • IEEE 802.11ax, IEEE 802.11ac, 802.11n, 802.11g, 802.11b, or 802.11a wireless clients/devices
Web Management Requirements	A Computer or Mobile Device with the following: • Windows®, Apple® Mac OS®, or Linux-based operating system • Wireless adapter or Wi-Fi functionality • An Apple® iPhone®, iPad®, or Android™ device Browser Requirements: • Microsoft Edge • Mozilla Firefox 28 or higher • Apple Safari 6 or higher • Google Chrome 28 or higher
D-Link SetupGo App Requirements	• iOS® or Android™ device (Please refer to the description of the app's page to check whether your device is compatible.)

Introduction

The SE30 is a high-performance Wi-Fi 6 range extender designed to expand your existing wireless network and eliminate Wi-Fi dead zones throughout your home or office. The SE30 works with virtually any router or gateway, extending wireless coverage while delivering fast, reliable connectivity for bandwidth-intensive activities such as 4K video streaming, online gaming, video conferencing, and large file transfers.

Features

High-speed Wireless Performance With Wireless 802.11ax Technology

Equipped with the latest Wi-Fi 6 (802.11ax) technology, the SE30 provides combined dual-band wireless speeds of up to AX3000 (2,976 Mbps)*, offering greater network capacity, improved efficiency, and reduced congestion when multiple devices are connected simultaneously. Advanced features such as MU-MIMO, Target Wake Time (TWT), and support for both 2.4 GHz and 5 GHz bands help ensure a smooth and responsive networking experience.

Compact, Easy to Set Up and Use

Designed with simplicity in mind, the SE30 can be configured through the D-Link SetupGo app or the web-based management interface.

Latest Wireless Network Security and Encryption

The SE30 features advanced and robust WPA3 security technology to help prevent unauthorized access to your wireless network. Support for WPA3, WPA2, and WPA standards ensures that you can use the best available encryption methods with compatible wireless devices.

Extend and Customize Your High-speed Wireless AX Network


D-Link's S Series provides a complete solution for effortlessly extending the coverage of your high-speed AX wireless network. Adding extenders is quick and seamless—simply download the D-Link SetupGo app and enjoy fast, easy setup and pairing.

* Maximum wireless signal rate derived from standard IEEE specifications. Actual data throughput will vary. Network conditions and environmental factors, including volume of network traffic, building materials and construction, and network overhead may lower actual data throughput rate. Environmental conditions will adversely affect wireless signal range.


What is a Wireless Extender?

The SE30 is a repeater that extends the range of an existing wireless network to provide better signals for parts of your home or office that may have poor or no reception. Your existing wireless signal will be rebroadcast by the SE30, allowing you to reach the farthest corners of your home or office. Your SE30 can be connected wirelessly or with an Ethernet cable. For flexibility of access control, the extended network can be configured to inherit the network credentials from the existing network, or you can specify a different network name and password.

Extend Your Wireless Network using Wi-Fi

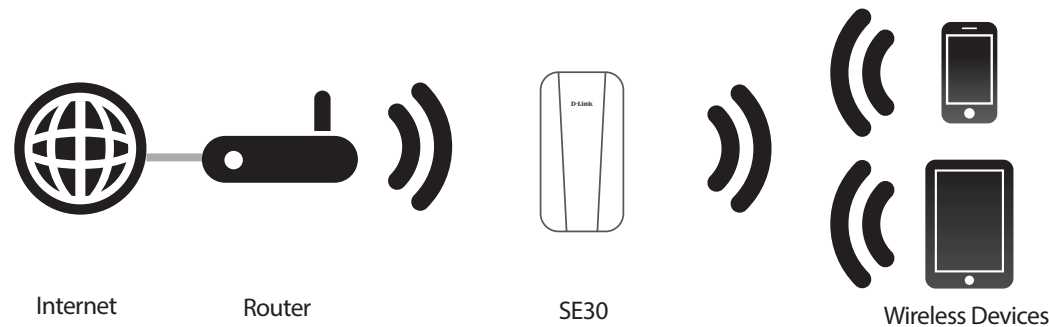


Extend Your Wireless Network using Ethernet

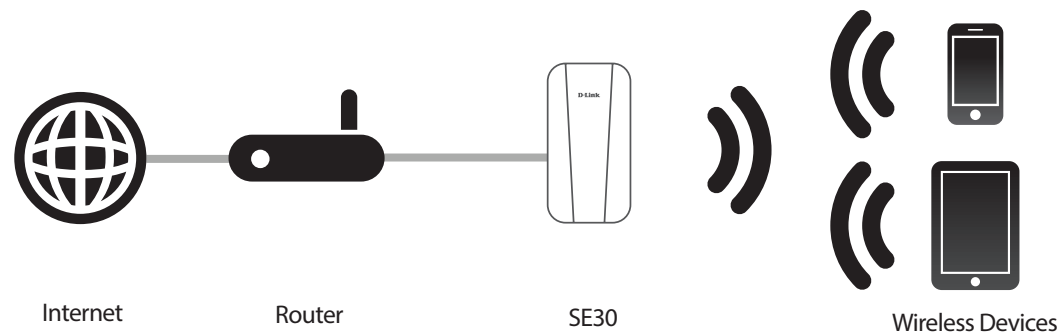

Hardware Overview

LED Indicators

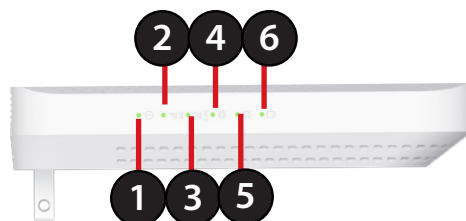

1	Power LED	Solid Green	The device is powered on and has completed system initialization.
		Blinking Green	The device is powering on and going through its startup sequence.
		Off	The device is powered off.
2	5 GHz	Solid Green	The Wi-Fi 5 GHz band is used as the uplink to the main router, and the signal strength is -80 dBm or higher. In Bridge Mode, both the 5 GHz and 2.4 GHz Wi-Fi LEDs remain on.
		Solid Red	The Wi-Fi 5 GHz band is used as the uplink to the main router, but the signal strength is below -80 dBm.
		Off	The Wi-Fi 5 GHz band is not used for uplink.
3	2.4 GHz	Solid Green	The Wi-Fi 2.4 GHz band is used as the uplink to the main router, and the signal strength is -80 dBm or higher. In Bridge Mode, both the 5 GHz and 2.4 GHz Wi-Fi LEDs remain on.
		Solid Red	The Wi-Fi 2.4 GHz band is used as the uplink to the main router, but the signal strength is below -80 dBm.
		Off	The Wi-Fi 2.4 GHz band is not used for uplink.
4	Internet LED	Green	The device is connected to the Internet.
		Off	The device is not connected to the Internet.
5	WPS LED	Blinking Green	WPS connection is in progress. After the WPS button is pressed, the WPS LED blinks for up to 120 seconds. The blinking stops when a device successfully connects via WPS.
		Off	The WPS process is idle.
6	Ethernet LED	Solid Green	The Ethernet port is connected.
		Off	The Ethernet port is not connected.

Bottom Side



1	Reset Button	Press and hold the button for about 10 seconds, then release to restore the extender to its factory default settings. During the reset, all front LEDs will turn off and then turn back on. When the reset is complete, the Power LED will blink green.
2	WPS	Press the WPS button for 1 second to start the WPS process; the WPS LED will start blinking. Connect a wireless device within 120 seconds.
3	Internet	Connect an Ethernet cable to provide wireless connectivity to an existing wired network.

Back

You may locate the Wi-Fi name (SSID) and password for your SE30. This information is printed on the device label on the back of the device. You will need this information to connect your computer or mobile device to the default network (SSID) of your SE30.



Installation


Wireless Installation Considerations

The SE30 lets you extend your existing wireless network's coverage as long as it is within range of the uplink network. Keep in mind that the SE30's extension network's range may be limited by the number, thickness and location of walls, ceilings, or other objects that the wireless signals must pass through. Typical ranges vary depending on the types of materials and background RF (radio frequency) noise in your home or business. The key to maximizing wireless range is to follow these basic guidelines:

1. Keep the number of walls and ceilings between the D-Link extender and other network devices to a minimum - each wall or ceiling can reduce your adapter's range from 3-90 feet (1-30 meters.) Position your devices so that the number of walls or ceilings is minimized.
2. Be aware of the direct line between network devices. A wall that is 1.5 feet thick (0.5 meters), at a 45-degree angle appears to be almost 3 feet (1 meter) thick. At a 2-degree angle it looks over 42 feet (14 meters) thick! Position devices so that the signal will travel straight through a wall or ceiling (instead of at an angle) for better reception.
3. Building materials make a difference. A solid metal door or aluminum studs may have a negative effect on range. Try to position extenders, access points, wireless routers, and computers so that the signal passes through drywall or open doorways. Materials and objects such as glass, steel, metal, walls with insulation, water (fish tanks), mirrors, file cabinets, brick, and concrete will degrade your wireless signal.
4. Keep your product away (at least 3-6 feet or 1-2 meters) from electrical devices or appliances that generate RF noise.
5. If you are using 2.4 GHz cordless phones or X-10 (wireless products such as ceiling fans, lights, and home security systems), your wireless connection may degrade dramatically or drop completely. Make sure your 2.4 GHz phone base is as far away from your wireless devices as possible. The base transmits a signal even if the phone is not in use.
6. For more information on connection quality assessment, refer to **Assessing Uplink Signal Strength on page 11.**

Hardware Setup

Plug in the SE30 to a power outlet. Verify that the Power LED is solid green before continuing with the configuration.

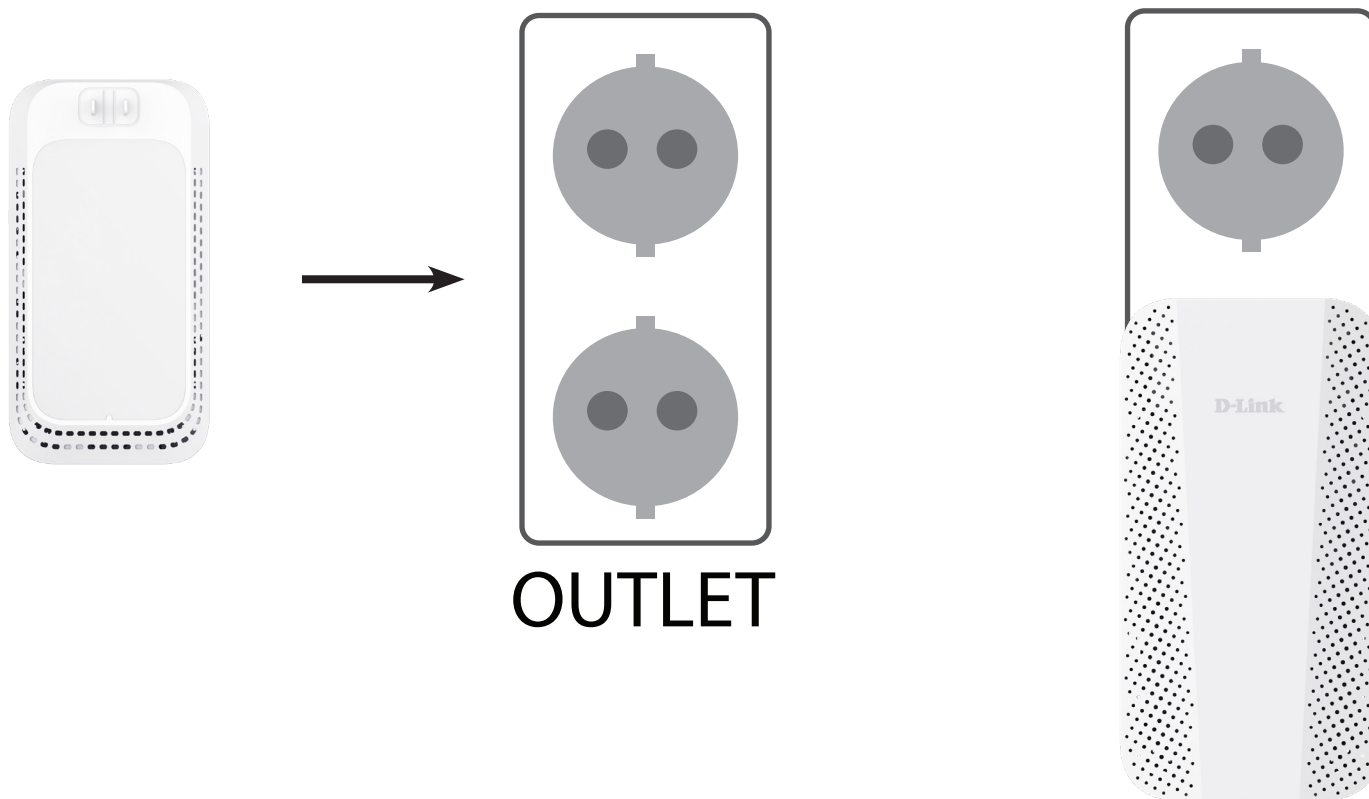


Getting Started

There are several configuration tools you can use to set up your SE30.

- **D-Link SetupGo** - Use your compatible iOS or Android device to configure your extender. Refer to **D-Link SetupGo on page 12** for setup instructions.
- **Web-based Setup Wizard** - This wizard will launch when you log in to the extender's web configuration utility for the first time. Refer to **Setup Wizard on page 14** for setup instructions.
- **Mode Settings**- The system provides two configuration options for extending your existing network: Ethernet or Wi-Fi. Refer to **Mode Settings on page 33** for more information regarding configuration options.

Assessing Uplink Signal Strength

The Wi-Fi LED is solid green when the SE30 has connected successfully to a wireless network and is extending that network. If the Wi-Fi LED is red after the connection process has finished, the SE30 has established a poor quality connection. To improve the connection quality, the SE30 should be relocated closer to the main wireless router. Using the 5 GHz extension network is recommended in order to achieve the fastest wireless speeds.

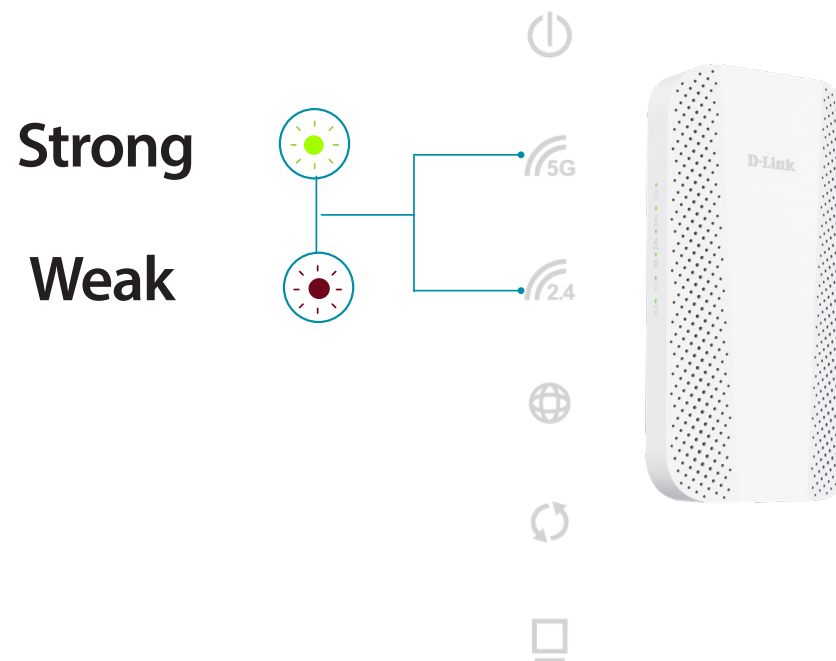

D-Link SetupGo

The D-Link SetupGo app allows you to install and configure your SE30 from your compatible Android or iOS device.

Note: The screenshots may be different depending on your mobile device's OS version. However, the process is the same.

Step 1

Search and install the free **D-Link SetupGo** available on the App Store or on Google Play.



D-Link SetupGo




Step 2

Launch D-Link SetupGo from the home screen of your device.

Step 3

Tap **Set up A New Device**. Scan the Setup code on the back of the extender.

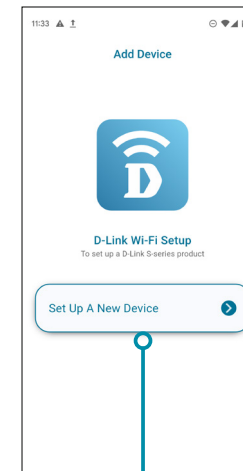

Wi-Fi Name (SSID): SE30-XXXX
Wi-Fi password: XXXXXXXXXXXX
https://192.168.0.50
No need username and password
MAC: XXXXXXXXXXXX



Step 4

Point your camera at the QR code on the device label. Once the scan is complete, the **Connect Device** button will appear at the bottom of the screen. Plug in the SE30 to turn it on. Then tap **Connect Device** to continue.

Note: If the device has been configured previously, reset it to factory default settings first. Otherwise, the app will not be able to detect and connect to it.



Step 5

You will now be guided through a step-by-step process for setting up your device. Simply follow the on-screen instructions to complete the installation and configuration process.



Setup Wizard

The setup wizard is designed to guide you through a step-by-step process to configure your new SE30 to extend your existing network and connect to the Internet.

To access the setup utility on your PC, first connect to the SE30 wirelessly using the Wi-Fi name (SSID) and password located on the back of your SE30. Then open a web browser and enter **http://192.168.0.50/** in your browser's URL field. You can also access the Setup Wizard by connecting to the SE30 through an Ethernet cable.



If this is your first time logging in to the extender and no connection has been established, the setup wizard will automatically appear. By default, you do not need to enter a password to **log in** to start the configuration process.




Note: The Wi-Fi name (SSID), Wi-Fi password, and web configuration address are printed on the device label on the back of the device.

The default HTTPS version of the Web management page may display a security warning message alerting you of possible data breach. Refer to the below steps for additional instructions when you see such warning.



When your browser displays a security warning stating, “Your connection isn’t private.” You will also see Not Secure in the address bar, along with HTTPS crossed out with red lines. This is because the device’s default management URL is not an actual Internet website with valid certificates. You can proceed with the setup by following these steps:


1. Click the “Advanced” button.

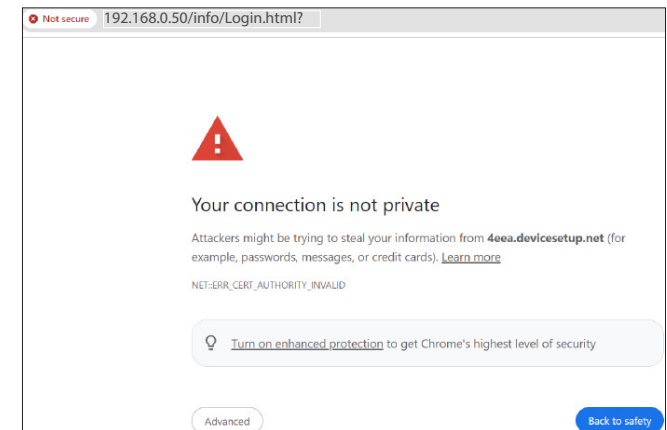

2. Click "Proceed to the default *management URL*".


Now you will be able to log in to your device.

Note: The default *management IP* 192.168.0.50 changes after the SE30 is connected to an uplink router following the initial setup or after a mode change. As a result, the original IP address may no longer be accessible. For further assistance, refer to Questions 1 and 3 in **Troubleshooting on page 45**.

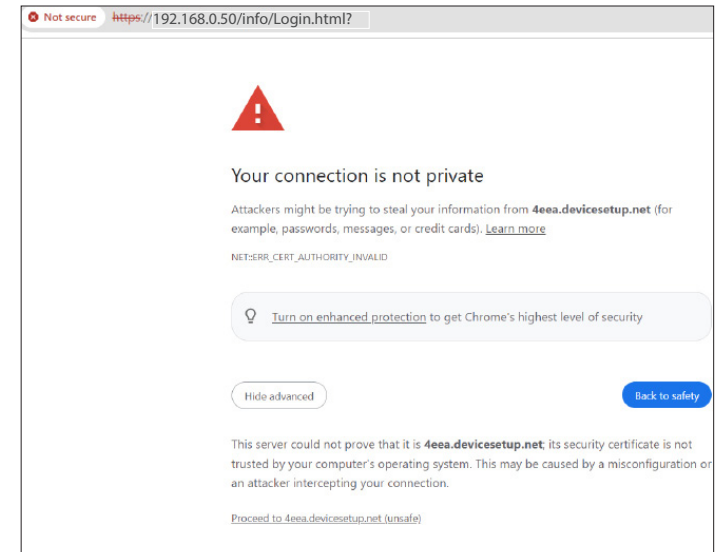


This wizard will guide you through configuring your new SE30.

Click **Next** to begin.

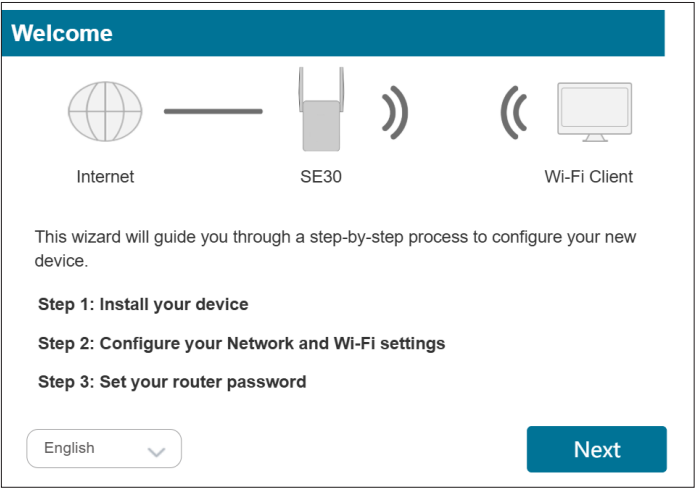

Set the extender's operation mode: Repeater or Bridge Mode.

Click **Next** to continue.

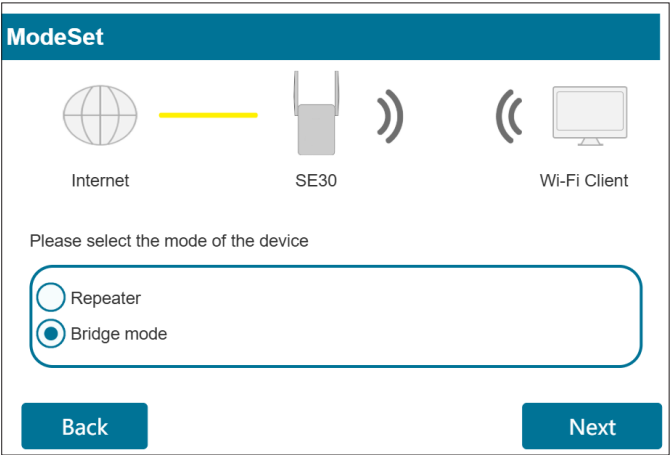

If you select Bridge Mode:

Please connect the extender to the router using an Ethernet cable. Refer to **Bridge Mode Settings on page 24** for more information.

Note: Do not connect the Ethernet cable before the setup is complete.

ModeSet



InternetSE30Wi-Fi Client

Please select the mode of the device

☐ Repeater



☒ Bridge mode

BackNext

If you select Repeater Mode:

The SE30 will scan for available wireless networks and display a list of results. You may choose one of the following options to proceed:

- If the wireless network you wish to extend was detected by the scan, click on it. The extender will automatically forward you to the next step.
- If the wireless network you would like to extend was not detected by the scan, your SE30 might be out of range and you may need to reposition the extender closer to the host network device.

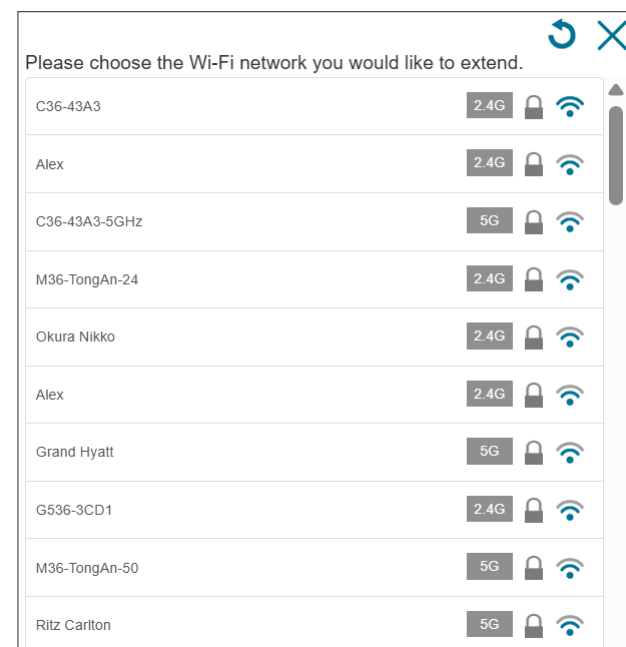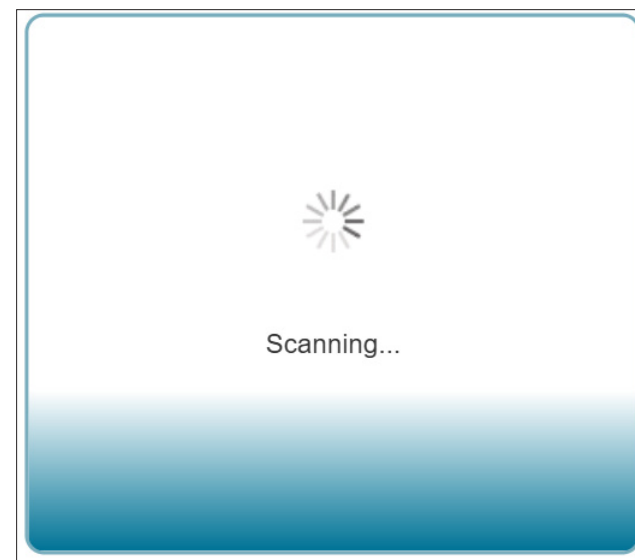

If the wireless network you wish to extend was detected by the scan, enter the password to connect to the network now. If you want to manually configure or modify the selected connection, click the pencil icon and enter the Wi-Fi Network Name (SSID) and Password of an existing Wi-Fi network you wish to connect to.

Click **Next** to continue configuring your extended network, or click **Back** to return to the previous step.


Enter an SSID (network name) and password to identify and secure your extended network. By default, the extended network uses the same credentials as the uplink wireless network.

Click **Next** to continue, or click **Back** to return to the previous step.

The password must contain 10 to 63 characters and include at least 3 of the following character types:

- Uppercase letters (A–Z)
- Lowercase letters (a–z)
- Numbers (0–9)
- Special characters such as %!@#\$()*&


Click **Next** to continue.

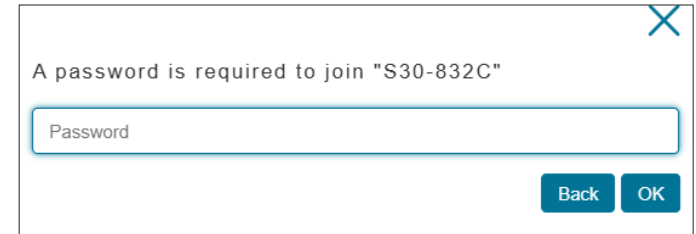

A password is required to join "S30-832C"

Password

Back OK

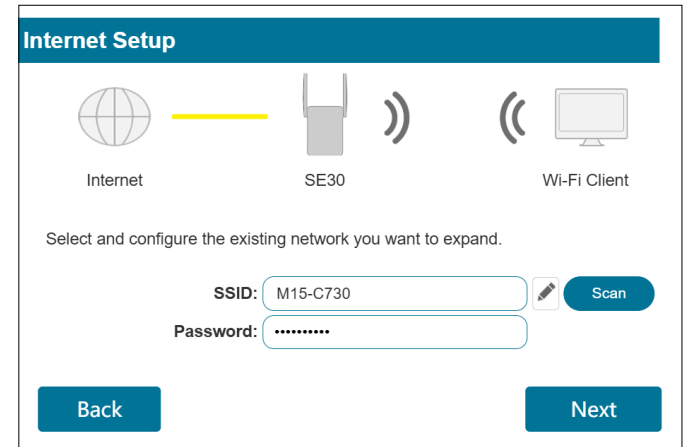

Internet Setup


Internet SE30 Wi-Fi Client

Select and configure the existing network you want to expand.

SSID: M15-C730 Scan

Password:

Back Next

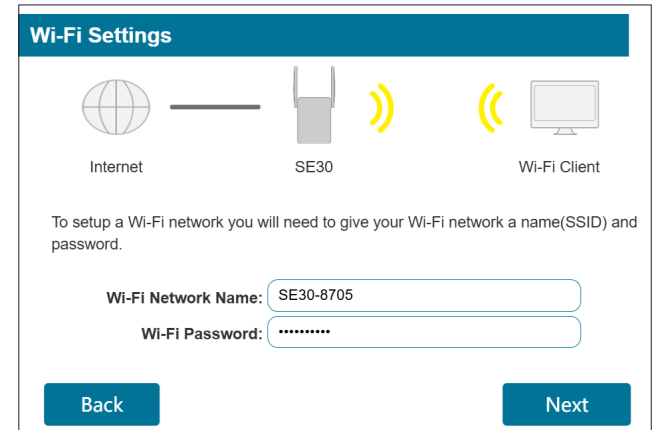

Wi-Fi Settings

Internet SE30 Wi-Fi Client

To setup a Wi-Fi network you will need to give your Wi-Fi network a name(SSID) and password.

Wi-Fi Network Name: SE30-8705

Wi-Fi Password:

Back Next

In order to better protect the extender's web configuration utility, please enter an admin password. You will be prompted for this password each time you want to use the extender's web configuration utility.

Note: Click **Sync Wi-Fi Password** to make the admin password the same as the Wi-Fi password configured above. The password must contain 10 to 63 characters and include at least 3 of the following character types:

- Uppercase letters (A–Z)
- Lowercase letters (a–z)
- Numbers (0–9)
- Special characters such as %!@#\$()*&

Click **Next** to continue.

Admin Password



Internet

SE30

Wi-Fi Client

By default, your new device does not have a password configured for administrator access to the Web-based configuration utility. To secure your new device, please create a password below.

Sync Wi-Fi password: ☐

Admin Password:

Confirm Password:

Back

Next

At the end of the wizard, you will be presented with a summary of your settings. It is recommended that you record this information for future reference.

Click **Finish** to close the wizard.

Summary


Internet


SE30


Wi-Fi Client

Below is a summary of your Wi-Fi security and device password settings. Please make a note of your settings and click "Finish".

Wi-Fi Network Name:	S30-832C
Wi-Fi Password:	***** 
Device Admin Password:	***** 

Back

Finish


Your changes will be saved and the extender will reboot.

Devices may be connected to the new wireless extension network once the extender successfully reboots.




Click **OK** to exit the Setup Wizard. You will be redirected to the login page.

You can now place the SE30 in a place where you require Internet access.

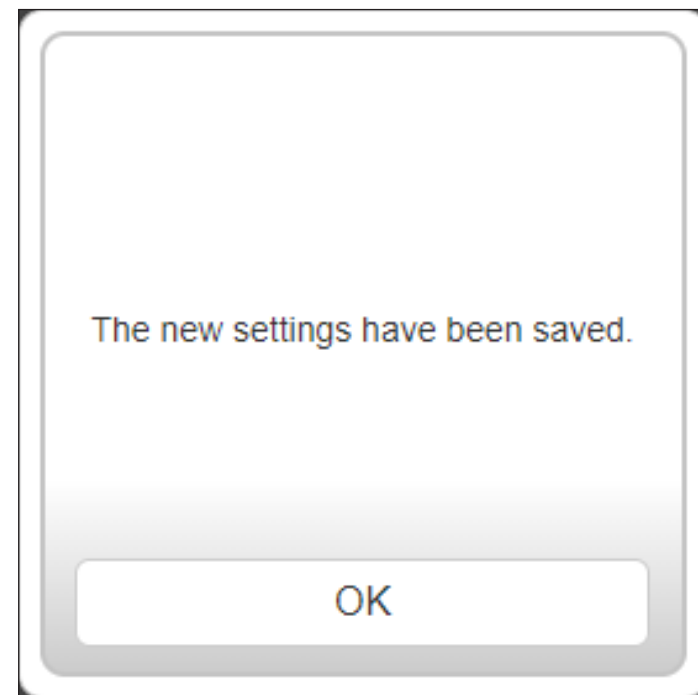

Bridge Mode Settings

This page shows you how to configure the settings to use the SE30 as an access point via Bridge Mode. Connect an Ethernet cable from your main router's LAN port to the Ethernet port (Internet port) of the SE30.

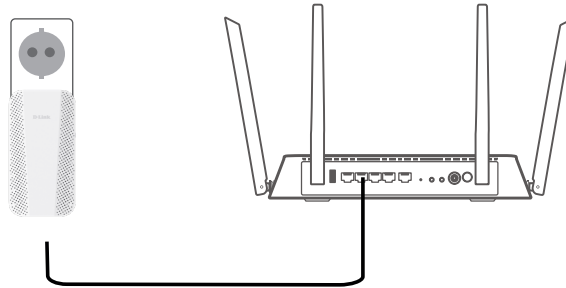

Note: Before connecting the Ethernet cable, complete the setup process through the wizard or app.

To access the mode settings page, go to **Settings > ModeSet**. Under Existing Network, choose **Bridge Mode** to utilize the SE30 as an access point. Click **Save** to apply the settings and return to the home page. After saving the settings, wait a few minutes for the uplinking process to complete. Refer to **Mode Settings on page 33** for more information on mode setting options.

ModeSet

You can set various modes of the Bridge, Repeater

Settings >> ModeSet


Save

Existing Network

Connection: Bridge Mode

Configuration Home

The home screen gives a summary of the current status of devices connected to the SE30. A green check between the device and the uplink router indicates that there is an active connection. A red cross indicates that there is no connection present, or there is a connection error. If there's no active uplink connection, click on **Click to repair** to start the setup wizard.

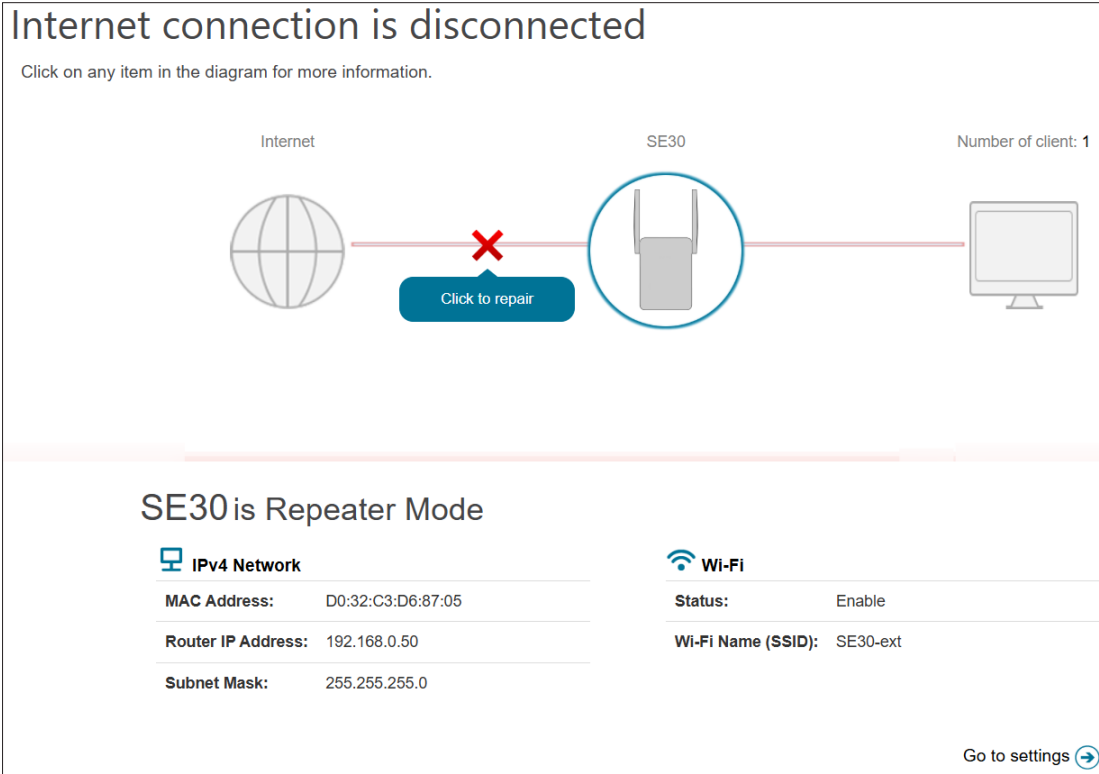

- Internet** This icon shows the status of the Internet connection to the uplink router. A red cross indicates the SE30 is not connected to an uplink router. Once connected, click on it to see its connection details.
- SE30** Click on this icon to see network setting status such as IP and MAC address of the SE30.
- Connected Clients** Click on the Connected Clients icon to see client details.

Once your Internet connection is set up, you can view the details of the IPv4 Network and the Wi-Fi network by clicking on the SE30 icon.

Internet Connected

Click on any item in the diagram for more information.

Internet

SE30

Number of client: 1

SE30 is Repeater Mode

IPv4 Network

MAC Address: D0 32 C3 D6 87 05

Router IP Address: 192.168.0.111

Subnet Mask: 255.255.255.0

Wi-Fi

Status: Enable

Wi-Fi Name (SSID): SE30-ext

Go to settings

By clicking the Internet icon, you will see the details of the Existing Network. This contains information regarding the Connection Type and Status, Connection Uptime, and DNS servers.

Internet Connected

Click on any item in the diagram for more information.

Internet

SE30

Number of client: 1

Internet

Cable Status: Connected

Connection Type: 5G

Connection status: Connected

Connection Time: 0 Day 11 Hour 52 Min 13 Sec

MAC Address: D0 32 C3 D6 87 05

IP Address: 192.168.0.111


Subnet Mask: 255.255.255.0

Default Gateway: 192.168.0.1

Primary DNS Server: 192.168.0.1

Secondary DNS Server: Not Available

Clicking the Connected Clients icon will show you the devices that are currently connected to the SE30 along with their IP and MAC addresses.

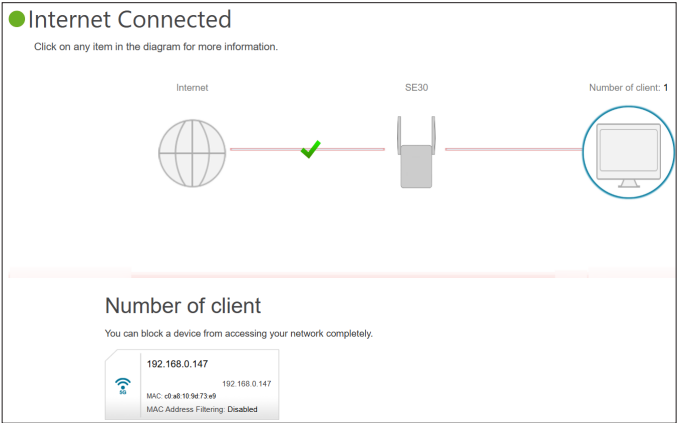

Settings

Wireless

This page lets you configure the settings for the SE30’s extended wireless network. To access this page, go to **Settings > Wireless**. Click **Save** to apply the settings and a reboot may be required.

Settings >> Wireless

Save

Smart Connect

Status: ☒

Wireless

Wi-Fi Name (SSID):

Security Mode:

WPA2-PSK

Password: 

Wi-Fi Protected Setup

WPS-PBC Status: ☒

Smart Connect

Smart Connect Enable or disable the Smart Connect feature. When enabled, fewer configuration options will be available to simplify configuration. And the wireless network will transmit and receive data on the 5 GHz frequency if the client device supports 5 GHz.

Extended Wi-Fi - Smart Connect Enabled

Wi-Fi Name (SSID) This is the name of the SE30’s wireless network. If set as the Repeater Mode, the SE30 will rebroadcast the uplink router’s Internet connection under this SSID. You may also manually set the SSID of the extended network.

Password Enter the password or network key for clients to connect with the extended Wi-Fi network.

Security Mode Select a connection security requirement from the following: Open, WPA-PSK, WPA/WPA2-PSK, WPA2-PSK, WPA2-PSK/WPA3-AES or WPA3-AES. WPA3 provides the highest level of encryption among these. Note that WPS will be enabled only when WPA2 (default) or Open is used.

If Smart Connect is disabled, configure 2.4 GHz and 5 GHz networks individually as shown below.

Settings >> Wireless Save

Smart Connect

Status: ☒

Wireless

Wi-Fi Name (SSID):

Security Mode:

WPA3-AES

Password:

Wi-Fi Protected Setup

WPS-PBC Status: ☒

Wi-Fi Protected Setup

WPS-PBC Status Enable or disable Wi-Fi Protected Setup (WPS).

Wireless - Smart Connect Disabled

2.4 GHz Wi-Fi

- Wi-Fi Name (SSID)

This is the name of the SE30’s extended network. If set as the Repeater Mode, the SE30 will rebroadcast the uplink router’s Internet connection under this SSID. You may also manually set the SSID of the extended network.
- Password

Enter the password or network key for clients to connect with the extended Wi-Fi network.
- Security Mode

Select a connection security requirement from the following:

Open, WPA-PSK, WPA/WPA2-PSK, WPA2-PSK, WPA2-PSK/ WPA3-AES or WPA3-AES. WPA3 provides the highest level of encryption among these. Note that WPS will be enabled only when WPA2 or Open is used.

2.4GHz

Wi-Fi Name (SSID):

SE30-ext

Security Mode:

WPA3-AES

Password:

.....

Advanced Settings

- 802.11 Mode (2.4 GHz)

Select a desired wireless networking standard to use. The available options for the 2.4 GHz wireless network are Mixed 802.11b/g/n/ax, Mixed 802.11b/g, 802.11n only, 802.11g only, or 802.11b only.
- Wi-Fi Channel

Select a desired channel: 1-11. The default is Auto (recommended).
- Transmission Power

Select a desired wireless transmission power: Power, Normal, or Green.
- Channel Width (2.4 GHz)

Select Auto 20/40 MHz if you are using 802.11n and a mix of 802.11b/g devices, or select 20 MHz if you are using 802.11b/g devices.
- Visibility Status

The default setting is Visible. Select Invisible if you do not want to broadcast the SSID of your wireless network.

Wireless - Smart Connect Disabled (Continued)

5 GHz Extended Wi-Fi

- Wi-Fi Name (SSID)

This is the name of the SE30’s extended network. If set as the Repeater Mode, the SE30 will rebroadcast the uplink router’s Internet connection under this SSID. You may also manually set the SSID of the extended network.
- Password

Enter the password or network key for connecting with the extended Wi-Fi network.
- Security Mode

Select a connection security requirement from the following:

Open, WPA-PSK, WPA/WPA2-PSK, WPA2-PSK, WPA2-PSK/ WPA3-AES or WPA3-AES. WPA3 provides the highest level of encryption among these. Note that WPS will be enabled only when WPA2 or Open is used.

5GHz

Wi-Fi Name (SSID):

SE30-ext-5G

Security Mode:

WPA3-AES

Password:

Advanced Settings...

DFS Channel:

☐

Advanced Settings

- 802.11 Mode (5 GHz)

Select a desired wireless networking standard to use. The available options for the 5 GHz wireless network are **Mixed 802.11a/n/ac/ax**, **Mixed 802.11a/n/ac**, or **Mixed 802.11a/n**.
- Wi-Fi Channel

Select a desired channel: 36, 40, 44, 48, 149, 153, 157, 161, or 165. The default is **Auto** (recommended).
- DFS Channel

Enable Dynamic Frequency Selection (DFS) channels to use additional channels if the extender is not in an area close by an airport or a radar station. If enabled, the extender will listen for radar signals, and if radar signals are detected, it will automatically switch to a new channel. The default is disabled.
- Transmission Power

Select a desired wireless transmission power: Power, Normal, or Green.

**Channel Width
(5 GHz)**

Select **Auto 20/40/80** if you are using a mix of a/n and above such as 802.11ac and 802.11ax devices; select **20** or **40 MHz** if you are using only 802.11n/a devices.

Visibility Status

The default setting is **Visible**. Select **Invisible** if you do not want to broadcast the SSID of your wireless network.

Wi-Fi Protected Setup

WPS-PBC Status

Enable or disable Wi-Fi Protected Setup (WPS).

Settings

Mode Settings

This page lets you configure the connection mode of the SE30's extended wireless network. To access this page, go to **Settings > ModeSet**. Click **Save** to apply the settings and a reboot may be required.

Connection	
Mode	Select either Bridge or Repeater Mode. Refer to Bridge Mode Settings on page 24 for Bridge Mode setup. For Repeater Mode, enter the following information.
SSID	Enter the SSID of an uplink router. Or you may click Scan to scan for available wireless networks.
Password	Enter the password or network key for authenticating with the uplink router.
Sync with upper router	Enable this to synchronize the extender's Wi-Fi setting with the uplink router. The default is disabled.

ModeSet

You can set various modes of the AP Repeater

Settings >> ModeSet

Save

Existing Network

Connection: Repeater

SSID: Scan

Password:

Sync with upper router: ☐

Management Time

You can set time zone and the Network Time Protocol (NTP) server on this page. Go to **Management > Time** to access this page. Click **Save** to apply the settings when you are done with your changes.

Time Configuration

Enable Daylight Saving Automatically adjusts the system clock forward or backward when daylight saving time starts or ends.

Automatic Time Configuration

Sync via NTP Server Enable this option to synchronize the time settings with an NTP server automatically. Or disable this option to set the time manually.

NTP Server Select a time server from the drop-down menu to synchronize the time and date.
Choose Manual to set the NTP server's IP address or domain name.

Time Zone Select your time zone.

Manual Time Configuration

Date Enter the current date in this format: YYYY, mm, and dd.

Time Select the current time in the 24-hour clock format.

Time

Your router's internal clock is used for data logging and schedules for features. The date and time can be synchronized with a public time server on the Internet, or set manually.

Management >> System Time

LED SettingsScheduleSave

Time Configuration

Time: 2026/04/04 14:14:52

Enable Daylight Saving ☐

Automatic Time Configuration

Sync via NTP Server ☒

NTP Server: pool.ntp.orgManual

Time Zone: (GMT+08:00) Beijing, Chongqing, Hong Kong, Urumqi

LED Settings

This page allows you to control LED indicators of the SE30. To access this page, go to **Management > Time > LED Settings**. Click **Save** at any time to save the changes you made on this page.

LED Control

LED Settings


Enable or disable the LED control:

- When disabled, the LED indicators will remain on at all times.
- When enabled, you can configure a schedule below to determine when the LED indicators should turn off.

Custom

Select how LED indicators should be controlled:

- Always Enable: LED indicators will always be turned off.
- Scheduled: Choose a pre-configured schedule to turn off the LED indicators during a specified time period. Refer to **Schedule** on the next page.

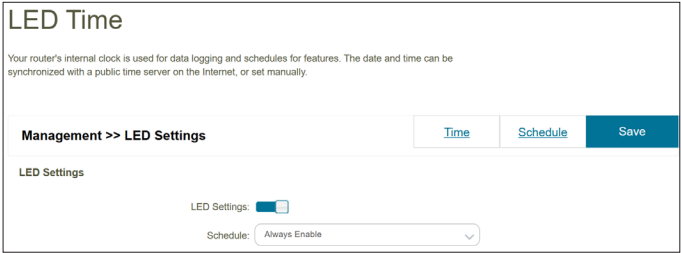

Schedule

This page allows you to set schedules for LED control. To access this page, go to **Management > Time > Schedule**. Click **Save** at any time to save the changes you made on this page.

Schedule Configuration

To start configuring a schedule, click **Add Rule**:

Schedules Each box represents half an hour, with the clock time (0~23) at the top of each column. To add a time period to the schedule, simply click on the start time and drag to the end time. You can add multiple days and multiple periods per day to the schedule.

To remove a time period from the schedule, click on the cross icon.

Click **Apply** to save and close the page. Then click **Save** when you are done creating schedules.

To remove a rule, click on the trash can icon in the Delete column. To edit a rule, click on its pencil icon in the Edit column.

Schedule

Some features, such as the firewall and website filters, can be turned on or off based on a schedule. One common use of schedules is to control access to the Internet by a specified device during specified time periods.

Management >> Schedule

Name	Schedule	Edit	Delete
LED Time	Mon : 2:00 - 17:00		

Add Rule

Remaining: 0

System Log

The router keeps a running log of events. This log can be sent to a Syslog server.
Go to **Management > System Log**. Click **Save** at any time to save the changes you have made on this page.

Log Settings

System Log Click **Check System Log** to download a copy of the system log to your hard drive. You can view the log entries by opening them with any text editing applications, such as WordPad, on Windows.

Syslog Settings

Enable Syslog Enable this function to send the router's logs to a Syslog Server.

Syslog Server IP Address If **Enable Syslog** is **Enabled**, enter the IP address of the Syslog server. Or, select from the drop-down menu for IP address auto-population if the Syslog server is connected to the extender.

System Log

On-board diagnostics run continually in the background to monitor the health of your router. The results are recorded in the system log if it is enabled. This info can be used to diagnose common problems or help Customer Support resolve issues more quickly.

Management >> System Log

Log Settings

System Log:

Check System Log

SysLog Settings

Enable Syslog: ☐

System Admin

Admin

This page allows you to change the administrator (Admin) password. Go to **Management > System Admin > Admin**. Click **Save** at any time to save the changes you have made on this page.

Admin Password

Original Password Enter the original password for password change.

Password Enter a new password for the administrator account. You will need to enter this password whenever you configure the extender using a web browser. The password must adhere to the following rule:

- Contain 10 to 63 characters
- Contain at least three of the following character types: uppercase letters, lowercase letters, numbers, and special characters.

Verify Password Enter the new password again to confirm the entry.

The screenshot shows the 'Admin' configuration page. At the top, it says 'Admin' and provides a warning: 'The admin account can change all router settings. To keep your router secure, you should give the admin account a strong password.' Below this is a breadcrumb trail 'Management >> Admin' and two buttons: 'System' and 'Save'. The main section is titled 'Admin Password' and contains three input fields: 'Original password:', 'Password:', and 'Verify password:'. Each field is followed by a text input box.

System

This page allows you to save or restore your system configurations. It also allows you to reset or reboot the extender. To access this page, go to **Management > System Admin > System**.


- Save Settings To Local Hard Drive

Save the system settings in a file to the local hard drive. The configuration file will be saved in your browser’s download directory.
- Load Settings From Local Hard Drive

Select the system settings from a previously saved file on the local hard drive. Click the **Restore** button that appears after the configuration file is selected to load the settings.
- Restore to Factory Default Settings

Restore the system settings to factory default settings. This will erase all current settings.
- Reboot the Device

Click **Reboot** to reboot the extender.

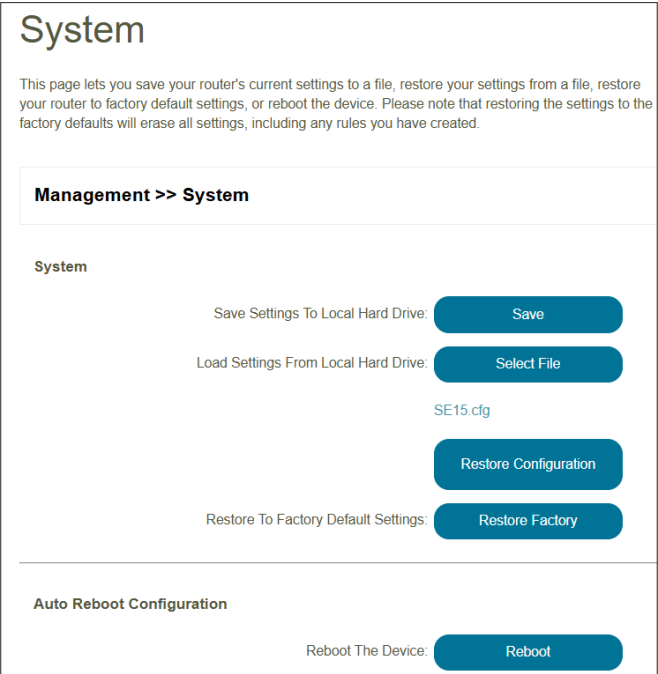

Upgrade

This page allows you to upgrade the extender's firmware, either automatically or manually. To manually upgrade the firmware, download the latest firmware file from <http://support.dlink.com> in advance. To access this page, go to **Management > Upgrade**.

Firmware

Current Firmware Version

The current firmware's version will be displayed.

Check for New Firmware

Click this button to start checking for a new firmware version. If a new version is found, it will prompt you to install it.

Auto Update

Automatic Upgrade

If enabled, the extender will automatically check for and upgrade to the latest firmware available.

Set Update Time

You may set the SE30 to automatically upgrade its firmware at a set time by enabling this function. Set the hour and minute for automatic upgrade every day.

Upgrade Manually

Upgrade Firmware

If you wish to upgrade manually, first download the firmware file you wish to upgrade to. Then, click **Select File** to find the file and click **Upload** to install the new firmware.

Upgrade

Your router can automatically detect firmware updates, but requires your authorization to install them. It is also possible to check for new firmware manually, upgrade firmware from a local file.

Management >> Upgrade

Auto Update

Auto Update: ☐

Will automatically update during (03:14) Auto Update. [Set Update Time](#)

Please sync system time via SNTP before setting auto update.

Firmware

Current Firmware Version: 1.00.03
Current Firmware Date: 2026-04-03

[Check for New Firmware](#)

Upgrade Manually

Upgrade Firmware: [Select File](#)

Click **Clear** to reset the statistics.

Internet, on your wired network (LAN), and through your wireless networks.

	Total Packets	Total KByte(s)	KByte/sec	Session
Sent:	0	0	0	



D-Link SetupGo App


The D-Link SetupGo App is a convenient app that simplifies the installation of SE30. It provides configuration assistance and a quick access to essential network settings after the setup. Through the app, you can easily access and manage key network settings, including Wi-Fi configuration and admin Password.

Note: To manage the SE30 using the SetupGo App, you must first connect your device to the SE30's Wi-Fi network.

Wi-Fi Configuration

To set up and customize your Wi-Fi network, enter the following configuration parameters:

- Wi-Fi Name** Enter a name for the Wi-Fi network.
- Wi-Fi Password** Enter the password that will be required for client connection.
- Dual Band** Enable or disable the dual band function. If it is enabled, the clients will be automatically added to the best band, i.e. 2.4 GHz or 5 GHz instead of selecting one network to join manually. If it is disabled, enter the above Wi-Fi name and password for the 2.4 GHz and 5 GHz band individually.

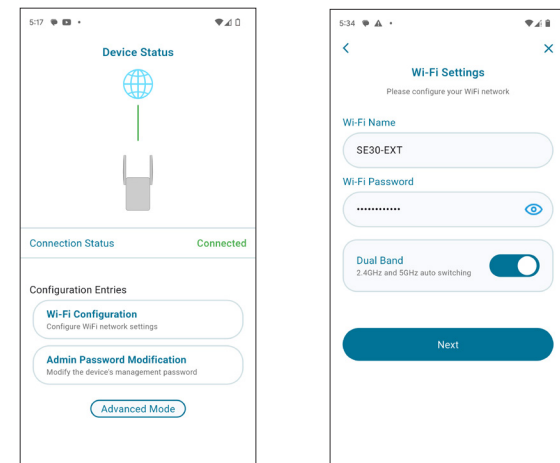

Admin Password Modification

This Admin Password Modification allows you to update and secure your device management credentials.

- Admin Password** To change the admin password, first enter the new password, then re-enter the password to confirm. The password must adhere to the following rule:
- Contain 10 to 63 characters.
 - Include at least three of the following character types:
 - Uppercase letters (A–Z)
 - Lowercase letters (a–z)
 - Numbers (0–9)
 - Special characters (e.g., !, @, #, \$)

5:16

< Change Login Password >

Please set the device's management password

New Password

please enter new password

Confirm New Password

please enter new password again

Password Requirements

- Password length must be 10-63 characters
- No spaces allowed
- Must include at least 3 of the following: uppercase letters, lowercase letters, numbers, special characters

Previous

Complete Setup


Connecting Wireless Clients to the Extender

WPS Button

Once an uplink network has been established, you may use the SE30's WPS function to add additional wireless clients to your extender's network. Many wireless devices such as wireless routers, media players, printers, and cameras will have a WPS button (or a software utility with WPS) that you can press to connect to the SE30. Please refer to the user manual for the wireless device you want to connect to make sure you understand how to enable WPS. Once you are certain, follow the steps below:

- Step 1** - Press the WPS button on the SE30 for about 1 second. The WPS LED on the device will start to blink.
- Step 2** - Within 120 seconds, press the WPS button on your wireless device.
- Step 3** - Allow up to 2 minutes for configuration. If WPS is configured successfully, you will be connected using WPA2 encryption (the default security mode).

Note: To enable or disable WPS, go to **Settings > Wireless** and toggle the WPS-PBC Status slider at the bottom of the page.

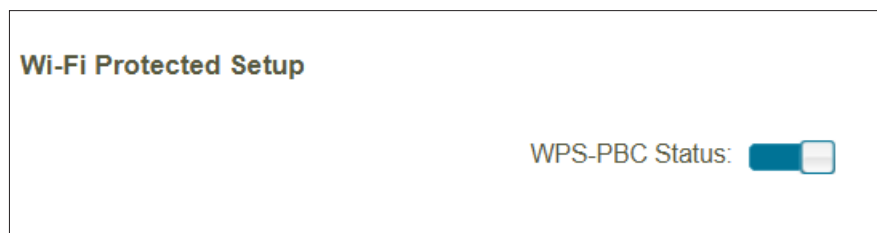

Troubleshooting

This chapter provides solutions to problems that can occur during the installation and operation of the SE30. Read the following descriptions if you are having problems.

1. Why can't I access the web management?

When entering the IP address of the extender, you are not connecting to a website nor do you have to be connected to the Internet. The device has the utility built-in to a ROM chip in the device itself. Your computer must be on the same IP subnet to connect to the web-based utility.

- We recommend the following:
 - Microsoft Edge
 - Firefox® 28 or later
 - Safari® 6.0 or later
 - Google Chrome™ 28 or later
- If you have an active wired LAN Ethernet connection, try temporarily unplugging the Ethernet cable from the computer you are using to eliminate possible conflicts from having two simultaneous connections on the same computer.
- Disable any Internet security software running on the computer. Software firewalls such as ZoneAlarm, BlackICE, Sygate, Norton Personal Firewall, and Windows® XP firewall may block access to the configuration pages. Check the help files included with your firewall software for more information on the operation.

- Access the web management interface. Open your web browser and enter the address of your extender: **https://192.168.0.50**. This should open the login page for your web management. If the SE30 is not connected to an uplink router, you can try accessing the web interface using the default IP address **http://192.168.0.50**. If the SE30 is connected to an uplink router, the original 192.168.0.50 IP address will no longer be valid. You can try accessing the web interface using a client IP address assigned from the uplink router or **https://dlinkap.local**. The device's IP address may change after you modify the Mode Settings (go to **Settings > ModeSet**), refer to the below Question 3: How to access web management interface after changing the device's mode to Repeater or Bridge?
- If you still cannot access the configuration, unplug the extender from the power outlet for at least 10 seconds and plug it back in. Wait about 30 seconds and try accessing the configuration. If you have multiple computers, try connecting using a different computer.

2. What can I do if I forgot my password?

If you forgot your password, you must reset your extender. Unfortunately this process will change all your settings back to the factory defaults.

To reset the extender, locate the reset button of the unit. Refer to **Bottom Side on page 6**. Wait about 30 seconds to access the extender and you will be required to go through the initial setup again. Refer to **Setup Wizard on page 14**.

3. How to access web management interface after changing the device's mode (Repeater or Bridge)?

The device's IP address may change after you modify the Mode Settings (go to **Settings > ModeSet**). Once the extended network has been successfully established, connect to the network via a wired or wireless connection, then open a web browser and enter the following address to log in to the extender: **https://dlinkap.local**.

Wireless Basics

D-Link wireless products are based on industry standards to provide easy-to-use and compatible high-speed wireless connectivity within your home, business or public access wireless networks. D-Link's new S Series products allow you to conveniently and reliably expand your existing network for improved coverage and speeds.

A wireless local area network (WLAN) is a cellular computer network that transmits and receives data with radio signals instead of wires. Innovative ways to utilize WLAN technology are helping people to work and communicate more efficiently. The most recent Wi-Fi 6 has substantial gains over previous generations in speeds and encryption strength. It achieves faster speeds by communicating with multiple clients more efficiently through techniques such as Orthogonal Frequency Division Multiple Access (OFDMA) and Overlapping Basic Service Sets (OBSS). OFDMA improves channel utilization while OBSS further eliminates network congestion.

Wireless users can use the same applications they use on a wired network. To enjoy the mobility of wireless network more safely in office environments and public areas such as airports, shops and universities, Wi-Fi Protected Access (WPA) security method is commonly employed. It uses a passphrase or key to authenticate your wireless connection. The advanced WPA3 implements the strongest password security via Simultaneous Authentication of Equals (SAE). The Simultaneous Authentication of Equals (SAE) of WPA3 enhances the protection against dictionary attacks.

Tips

Here are a few things to keep in mind when you are installing your extender.

Centralize the extender's location

For best performance, make sure you place the extender in a centralized location within your desired usage area. Try to place the extender so that there are minimal obstructions between it and the uplink router. If possible, use an elevated power outlet, so the signal can be dispersed more easily. If you have a large home or usage area, you may need several extenders in order to achieve optimal coverage.

Eliminate Interference

Place home appliances such as cordless telephones, microwaves, and televisions as far away as possible from the extender. This can significantly reduce any interference that the appliances might cause since they operate on the same frequency.

Wireless Encryption

Don't let your neighbors or intruders connect to your wireless network. Encrypt your wireless network by utilizing the Wi-Fi Protected Access security protocols on the extender and uplink router. Refer to the relevant sections of this manual for further details.

Technical Specifications

Device Interfaces

- 1 x Gigabit Ethernet port
- 1 x Reset button
- 1 x WPS button

Wi-Fi Data Rates¹

- 2.4 GHz up to 574 Mbps
- 5 GHz up to 2,402 Mbps

Standards²

- 2.4 GHz: IEEE 802.11ax/n/g/b
- 5 GHz: IEEE 802.11ax/ac/n/a
- Ethernet: IEEE 802.3u/ab
- Wi-Fi Management: IEEE 802.11k/v

Antenna Types

- 2 x 2.4/5 GHz dual-band internal antennas

Security

- WPA-Personal
- WPA2-Personal
- WPA3-Personal
- Wi-Fi Protected Setup (WPS)

Operation Mode

- Bridge Mode
- Repeater Mode

Power Input

100 to 240 VAC, 50/60 Hz

Temperature

- Operating: 0 to 40 °C (32 to 104 °F)
- Storage: -20 to 65 °C (-4 to 149 °F)

Humidity

- Operating: 10% to 90% maximum, non-condensing
- Storage: 5% to 95% maximum, non-condensing

Dimensions

150 x 78 x 48 mm (5.91 x 3.07 x 1.89 in); dimensions do not include plug pins

Weight

239.4 g (8.44 oz)

1. Maximum wireless signal rate derived from IEEE Standard 802.11ax/ac/n/g/b/a specifications. Actual performance may vary due to settings, cabling, temperature, network configuration, interface, device compatibility, environmental and on-site conditions, and other similar factors. References to power capability, signal or processing speed, signal range or distance, data encryption, storage capacity, display properties, or other performance metrics are based on optimal conditions derived from industry standards and provided for informational purposes only.

2. Frequency Range varies depending on country's regulation. The router does not include 5.25-5.35 GHz & 5.47-5.725 GHz in some regions.

3. Specifications may be subject to change without prior notice.

Regulatory Statements

Innovation, Science and Economic Development Canada (ISED) Statement:

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Innovation, Science and Economic Development Canada (ISED) Statement:

This device complies with ISED licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference, and
- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'ISED applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Radiation Exposure Statement

This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 29 cm between the radiator and your body.

Déclaration d'exposition aux radiations

Cet équipement est conforme aux limites d'exposition aux rayonnements ISED établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 29 cm de distance entre la source de rayonnement et votre corps.

Caution:

- i.the device for operation in the band 5150–5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems;
- ii.for devices with detachable antenna(s), the maximum antenna gain permitted for devices in the band 5725-5850 MHz shall be such that the equipment still complies with the e.i.r.p. limits as appropriate;

Avertissement:

- i.les dispositifs fonctionnant dans la bande de 5 150 à 5 250 MHz sont réservés uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux
- ii.pour les dispositifs munis d'antennes amovibles, le gain maximal d'antenne permis (pour les dispositifs utilisant la bande de 5 725 à 5 850 MHz) doit être conforme à la limite de la p.i.r.e. spécifiée, selon le cas;

NCC 警語：

以下警語適用台灣地區
依據 低功率電波輻射性電機管理辦法

第十二條：經型式認證合格之低功率射頻電機，非經許可，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

第十四條：低功率射頻電機之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前項合法通信，指依電信法規定作業之無線電通信。低功率射頻電機須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

應避免影響附近雷達系統之操作。

高增益指向性天線只得應用於固定式點對點系統。

電磁波曝露量MPE標準值 1mW/cm²，送測產品實測值為：0.218mW/cm²



	Frequency Band(s) Frequenzband Fréquence bande(s) Bandas de Frecuencia Frequenza/e Frequentie(s)	Max. Output Power (EIRP) Max. Output Power Puissance max en sortie (PIRE) Potencia máxima de Salida Potenza max. Output Max. Output Power
5 G	5.15 – 5.25 GHz	200 mW
	5.25 – 5.35 GHz	200 mW
	5.47 – 5.725 GHz	1 W
2.4 G	2.4 – 2.4835 GHz	100 mW

European Community Declaration of Conformity:

Česky [Czech]	Tímto D-Link Corporation prohlašuje, že tento produkt, jeho příslušenství a software jsou v souladu se směrnicí 2014/53/EU. Celý text ES prohlášení o shodě vydaného EU a o firmwaru produktu lze stáhnout na stránkách k produktu www.dlink.com .
Dansk [Danish]	D-Link Corporation erklærer herved, at dette produkt, tilbehør og software er i overensstemmelse med direktiv 2014/53/EU. Den fulde tekst i EU-overensstemmelseserklæringen og produktfirmware kan wnloades fra produktsiden hos www.dlink.com .
Deutsch [German]	Hiermit erklärt die D-Link Corporation, dass dieses Produkt, das Zubehör und die Software der Richtlinie 2014/53/EU entsprechen. Der vollständige Text der Konformitätserklärung der Europäischen Gemeinschaft sowie die Firmware zum Produkt stehen Ihnen zum Herunterladen von der Produktseite im Internet auf www.dlink.com zur Verfügung.
Eesti [Estonian]	Käesolevaga kinnitab D-Link Corporation, et see toode, tarvikud ja tarkvara on kooskõlas direktiiviga 2014/53/EL. Euroopa Liidu vastavusdeklaratsiooni täistekst ja toote püsivara on allalaadimiseks saadaval tootelehel www.dlink.com .
English	Hereby, D-Link Corporation, declares that this product, accessories, and software are in compliance with directive 2014/53/EU. The full text of the EU Declaration of Conformity and product firmware are available for download from the product page at www.dlink.com
Español [Spanish]	Por la presente, D-Link Corporation declara que este producto, accesorios y software cumplen con las directivas 2014/53/UE. El texto completo de la declaración de conformidad de la UE y el firmware del producto están disponibles y se pueden descargar desde la página del producto en www.dlink.com .
Ελληνική [Greek]	Με την παρούσα, η D-Link Corporation δηλώνει ότι αυτό το προϊόν, τα αξεσουάρ και το λογισμικό συμμορφώνονται με την Οδηγία 2014/53/ΕΕ. Το πλήρες κείμενο της δήλωσης συμμόρφωσης της ΕΕ και το υλικολογισμικό του προϊόντος είναι διαθέσιμα για λήψη από τη σελίδα του προϊόντος στην τοποθεσία www.dlink.com .
Français [French]	Par les présentes, D-Link Corporation déclare que ce produit, ces accessoires et ce logiciel sont conformes aux directives 2014/53/UE. Le texte complet de la déclaration de conformité de l'UE et le microprogramme du produit sont disponibles au téléchargement sur la page des produits à www.dlink.com .
Italiano [Italian]	Con la presente, D-Link Corporation dichiara che questo prodotto, i relativi accessori e il software sono conformi alla direttiva 2014/53/UE. Il testo completo della dichiarazione di conformità UE e il firmware del prodotto sono disponibili per il download dalla pagina del prodotto su www.dlink.com .

Latviski [Latvian]	Ar šo uzņēmums D-Link Corporation apliecina, ka šis produkts, piederumi un programmatūra atbilst direktīvai 2014/53/ES. ES atbilstības deklarācijas pilno tekstu un produkta aparātprogrammatūru var lejupielādēt attiecīgā produkta lapā vietnē www.dlink.com .
Lietuvių [Lithuanian]	Šiuo dokumentu „D-Link Corporation“ pareiškia, kad šis gaminys, priedai ir programinė įranga atitinka direktyvą 2014/53/ES. Visą ES atitikties deklaracijos tekstą ir gaminio programinę aparatinę įrangą galima atsisiųsti iš gaminio puslapio adresu www.dlink.com .
Nederlands [Dutch]	Hierbij verklaart D-Link Corporation dat dit product, accessoires en software voldoen aan de richtlijnen 2014/53/EU. De volledige tekst van de EU conformiteitsverklaring en productfirmware is beschikbaar voor download van de productpagina op www.dlink.com .
Malti [Maltese]	Bil-preżenti, D-Link Corporation tiddikjara li dan il-prodott, l-aċċessorji, u s-software huma konformi mad-Direttiva 2014/53/UE. Tista' tnizzel it-test sħiħ tad-dikjarazzjoni ta' konformità tal-UE u l-firmware tal-prodott mill-paġna tal-prodott fuq www.dlink.com .
Magyar [Hungarian]	Ezennel a D-Link Corporation kijelenti, hogy a jelen termék, annak tartozékai és szoftvere megfelelnek a 2014/53/EU sz. rendeletnek. Az EU Megfelelőségi nyilatkozat teljes szövege és a termék firmware a termék oldaláról tölthető le a www.dlink.com címen.
Polski [Polish]	D-Link Corporation niniejszym oświadcza, że ten produkt, akcesoria oraz oprogramowanie są zgodne z dyrektywami 2014/53/EU. Pełen tekst deklaracji zgodności UE oraz oprogramowanie sprzętowe do produktu można pobrać na stronie produktu w witrynie www.dlink.com .
Português [Portuguese]	Desta forma, a D-Link Corporation declara que este produto, os acessórios e o software estão em conformidade com a diretiva 2014/53/UE. O texto completo da declaração de conformidade da UE e do firmware
Slovensko[Slovenian]	Podjetje D-Link Corporation s tem izjavlja, da so ta izdelek, dodatna oprema in programska oprema skladni z direktivami 2014/53/EU. Celotno besedilo izjave o skladnosti EU in vdelana programska oprema sta na voljo za prenos na strani izdelka na www.dlink.com .
Slovensky [Slovak]	Spoločnosť D-Link týmto vyhlasuje, že tento produkt, príslušenstvo a softvér sú v súlade so smernicou 214/53/EÚ. Úplné znenie vyhlásenia EÚ o zhode a firmvéri produktu sú k dispozícii na prevzatie zo stránky produktu www.dlink.com .
Suomi [Finnish]	D-Link Corporation täten vakuuttaa, että tämä tuote, lisävarusteet ja ohjelmisto ovat direktiivin 2014/53/EU vaatimusten mukaisia. Täydellinen EU-vaatimustenmukaisuusvakuutus samoin kuin tuotteen laiteohjelmisto ovat ladattavissa osoitteesta www.dlink.com .
Svenska[Swedish]	D-Link Corporation försäkrar härmed att denna produkt, tillbehör och programvara överensstämmer med direktiv 2014/53/EU. Hela texten med EU-försäkran om överensstämmelse och produkt-firmware kan hämtas från produktsidan på www.dlink.com .

Íslenska [Icelandic]	Hér með lýsir D-Link Corporation því yfir að þessi vara, fylgihlutir og hugbúnaður eru í samræmi við tilskipun 2014/53/EB. Sækja má ESB-samræmisýfirlýsinguna í heild sinni og fastbúnað vörunnar af vefsíðu vörunnar á www.dlink.com .
Norsk [Norwegian]	Herved erklærer D-Link Corporation at dette produktet, tilbehøret og programvaren er i samsvar med direktivet 2014/53/EU. Den fullstendige teksten i EU-erklæring om samsvar og produktets fastvare er tilgjengelig for nedlasting fra produktsiden på www.dlink.com .

Warning Statement:

The equipment supplied by an approved external power adapter which is considered to be Pluggable Equipment Type A. The socket outlets shall be installed near the equipment and be easily accessible.

NOTICE OF WIRELESS RADIO LAN USAGE IN THE EUROPEAN COMMUNITY (FOR WIRELESS PRODUCT ONLY):

- This device is restricted to indoor use when operated in the European Community using channels in the 5.15-5.35 GHz band to reduce the potential for interference.
- This device is a 2.4 GHz wideband transmission system (transceiver), intended for use in all EU member states and EFTA countries. This equipment may be operated in AL, AD, BE, BG, DK, DE, FI, FR, GR, GW, IS, IT, HR, LI, LU, MT, MK, MD, MC, NL, NO, AT, PL, PT, RO, SM, SE, RS, SK, ES, CI, HU, and CY.

Usage Notes:

- To remain in conformance with European National spectrum usage regulations, frequency and channel limitations will be applied on the products according to the country where the equipment will be deployed.
- This device is restricted from functioning in Ad-hoc mode while operating in 5 GHz. Ad-hoc mode is direct peer-to-peer communication between two client devices without an Access Point.
- Access points will support DFS (Dynamic Frequency Selection) and TPC (Transmit Power Control) functionality as required when operating in 5 GHz band within the EU.
- Please refer to the product manual or datasheet to check whether your product uses 2.4 GHz and/or 5 GHz wireless.

HINWEIS ZUR VERWENDUNG VON DRAHTLOS-NETZWERK (WLAN) IN DER EUROPÄISCHEN GEMEINSCHAFT (NUR FÜR EIN DRAHTLOSES PRODUKT)

- Der Betrieb dieses Geräts in der Europäischen Gemeinschaft bei Nutzung von Kanälen im 5,15-5,35 GHz Frequenzband ist ausschließlich auf Innenräume beschränkt, um das Interferenzpotential zu reduzieren.
- Bei diesem Gerät handelt es sich um ein zum Einsatz in allen EU-Mitgliedsstaaten und in EFTA-Ländern - ausgenommen Frankreich. Der Betrieb dieses Geräts ist in den folgenden Ländern erlaubt: AL, AD, BE, BG, DK, DE, FI, FR, GR, GW, IS, IT, HR, LI, LU, MT, MK, MD, MC, NL, NO, AT, PL, PT, RO, SM, SE, RS, SK, ES, CI, HU, CY

Gebrauchshinweise:

- Um den in Europa geltenden nationalen Vorschriften zum Nutzen des Funkspektrums weiterhin zu entsprechen, werden Frequenz und Kanalbeschränkungen, dem jeweiligen Land, in dem das Gerät zum Einsatz kommt, entsprechend, auf die Produkte angewandt.
- Die Funktionalität im Ad-hoc-Modus bei Betrieb auf 5 GHz ist für dieses Gerät eingeschränkt. Bei dem Ad-hoc-Modus handelt es sich um eine Peer-to-Peer-Kommunikation zwischen zwei Client-Geräten ohne einen Access Point.
- Access Points unterstützen die Funktionen DFS (Dynamic Frequency Selection) und TPC (Transmit Power Control) wie erforderlich bei Betrieb auf 5 GHz innerhalb der EU.
- Bitte schlagen Sie im Handbuch oder Datenblatt nach, ob Ihr Gerät eine 2,4 GHz und / oder 5 GHz Verbindung nutzt.

AVIS CONCERNANT L'UTILISATION DE LA RADIO SANS FIL LAN DANS LA COMMUNAUTÉ EUROPÉENNE (UNIQUEMENT POUR LES PRODUITS SANS FIL)

- Cet appareil est limité à un usage intérieur lorsqu'il est utilisé dans la Communauté européenne sur les canaux de la bande de 5,15 à 5,35 GHz afin de réduire les risques d'interférences.
- Cet appareil est un système de transmission à large bande (émetteur-récepteur) de 2,4 GHz, destiné à être utilisé dans tous les États-membres de l'UE et les pays de l'AELE. Cet équipement peut être utilisé dans les pays suivants : AL, AD, BE, BG, DK, DE, FI, FR, GR, GW, IS, IT, HR, LI, LU, MT, MK, MD, MC, NL, NO, AT, PL, PT, RO, SM, SE, RS, SK, ES, CI, HU, CY

Notes d'utilisation:

- Pour rester en conformité avec la réglementation nationale européenne en matière d'utilisation du spectre, des limites de fréquence et de canal seront appliquées aux produits selon le pays où l'équipement sera déployé.
- Cet appareil ne peut pas utiliser le mode Ad-hoc lorsqu'il fonctionne dans la bande de 5 GHz. Le mode Adhoc fournit une communication directe pair à pair entre deux périphériques clients sans point d'accès.
- Les points d'accès prendront en charge les fonctionnalités DFS (Dynamic Frequency Selection) et TPC (Transmit Power Control) au besoin lors du fonctionnement dans la bande de 5 GHz au sein de l'UE.
- Merci de vous référer au guide d'utilisation ou de la fiche technique afin de vérifier si votre produit utilise 2.4 GHz et/ou 5 GHz sans fil.

AVISO DE USO DE LA LAN DE RADIO INALÁMBRICA EN LA COMUNIDAD EUROPEA (SOLO PARA EL PRODUCTO INALÁMBRICO)

- El uso de este dispositivo está restringido a interiores cuando funciona en la Comunidad Europea utilizando canales en la banda de 5,15-5,35 GHz, para reducir la posibilidad de interferencias.
- Este dispositivo es un sistema de transmisión (transceptor) de banda ancha de 2,4 GHz, pensado para su uso en todos los estados miembros de la UE y en los países de la AELC. Este equipo se puede utilizar en AL, AD, BE, BG, DK, DE, FI, FR, GR, GW, IS, IT, HR, LI, LU, MT, MK, MD, MC, NL, NO, AT, PL, PT, RO, SM, SE, RS, SK, ES, CI, HU, CY

Notas de uso:

- Para seguir cumpliendo las normas europeas de uso del espectro nacional, se aplicarán limitaciones de frecuencia y canal en los productos en función del país en el que se pondrá en funcionamiento el equipo.
- Este dispositivo tiene restringido el funcionamiento en modo Ad-hoc mientras funcione a 5 GHz. El modo Ad-hoc es la comunicación directa de igual a igual entre dos dispositivos cliente sin un punto de acceso.
- Los puntos de acceso admitirán la funcionalidad DFS (Selección de frecuencia dinámica) y TPC (Control de la potencia de transmisión) si es necesario cuando funcionan a 5 GHz dentro de la UE.
- Por favor compruebe el manual o la ficha de producto para comprobar si el producto utiliza las bandas inalámbricas de 2.4 GHz y/o la de 5 GHz.

AVVISO PER L'USO DI LAN RADIO WIRELESS NELLA COMUNITÀ EUROPEA (SOLO PER PRODOTTI WIRELESS)

- Nella Comunità europea, l'uso di questo dispositivo è limitato esclusivamente agli ambienti interni sui canali compresi nella banda da 5,15 a 5,35 GHz al fine di ridurre potenziali interferenze. Questo dispositivo è un sistema di trasmissione a banda larga a 2,4 GHz (ricetrasmittente), destinato all'uso in tutti gli stati membri dell'Unione europea e nei paesi EFTA.
- Questo dispositivo può essere utilizzato in AL, AD, BE, BG, DK, DE, FI, FR, GR, GW, IS, IT, HR, LI, LU, MT, MK, MD, MC, NL, NO, AT, PL, PT, RO, SM, SE, RS, SK, ES, CI, HU, CY

Note per l'uso

- Al fine di mantenere la conformità alle normative nazionali europee per l'uso dello spettro di frequenze, saranno applicate limitazioni sulle frequenze e sui canali per il prodotto in conformità alle normative del paese in cui il dispositivo viene utilizzato.
- Questo dispositivo non può essere attivato in modalità Ad-hoc durante il funzionamento a 5 GHz. La modalità Ad-hoc è una comunicazione diretta peer-to-peer fra due dispositivi client senza un punto di accesso.
- I punti di accesso supportano le funzionalità DFS (Dynamic Frequency Selection) e TPC (Transmit Power Control) richieste per operare a 5 GHz nell'Unione europea.
- Ti invitiamo a fare riferimento al manuale del prodotto o alla scheda tecnica per verificare se il tuo prodotto utilizza le frequenze 2,4 GHz e/o 5 GHz.

KENNISGEVING VAN DRAADLOOS RADIO LAN-GEBRUIK IN DE EUROPESE GEMEENSCHAP (ALLEEN VOOR DRAADLOOS PRODUCT)

- Dit toestel is beperkt tot gebruik binnenshuis wanneer het wordt gebruikt in de Europese Gemeenschap gebruik makend van kanalen in de 5.15-5.35 GHz band om de kans op interferentie te beperken.
- Dit toestel is een 2.4 GHz breedband transmissiesysteem (transceiver) dat bedoeld is voor gebruik in alle EU lidstaten en EFTA landen. Deze uitrusting mag gebruikt worden in AL, AD, BE, BG, DK, DE, FI, FR, GR, GW, IS, IT, HR, LI, LU, MT, MK, MD, MC, NL, NO, AT, PL, PT, RO, SM, SE, RS, SK, ES, CI, HU, CY

Gebruiksaanwijzingen:

- Om de gebruiksvoorschriften van het Europese Nationale spectrum na te leven, zullen frequentie- en kanaalbeperkingen worden toegepast op de producten volgens het land waar de uitrusting gebruikt zal worden.
- Dit toestel kan niet functioneren in Ad-hoc mode wanneer het gebruikt wordt in 5 GHz. Ad-hoc mode is directe peer-to-peer communicatie tussen twee klantenapparaten zonder een toegangspunt.
- Toegangspunten ondersteunen DFS (Dynamic Frequency Selection) en TPC (Transmit Power Control) functionaliteit zoals vereist bij gebruik in 5 GHz binnen de EU.
- Raadpleeg de handleiding of de datasheet om te controleren of uw product gebruik maakt van 2.4 GHz en/of 5 GHz.

SAFETY INSTRUCTIONS

The following general safety guidelines are provided to help ensure your own personal safety and protect your product from potential damage. Remember to consult the product user instructions for more details.

- Static electricity can be harmful to electronic components. Discharge static electricity from your body (i.e. touching grounded bare metal) before touching the product.
- Do not attempt to service the product and never disassemble the product. For some products with a user replaceable battery, please read and follow the instructions in the user manual.
- Do not spill food or liquid on your product and never push any objects into the openings of your product.
- Do not use this product near water, areas with high humidity, or condensation unless the product is specifically rated for outdoor application.
- Keep the product away from radiators and other heat sources.
- Always unplug the product from mains power before cleaning and use a dry lint free cloth only.

SICHERHEITSVORSCHRIFTEN

Die folgenden allgemeinen Sicherheitsvorschriften dienen als Hilfe zur Gewährleistung Ihrer eigenen Sicherheit und zum Schutz Ihres Produkts. Weitere Details finden Sie in den Benutzeranleitungen zum Produkt.

- Statische Elektrizität kann elektronischen Komponenten schaden. Um Schäden durch statische Aufladung zu vermeiden, leiten Sie elektrostatische Ladungen von Ihrem Körper ab, (z. B. durch Berühren eines geerdeten blanken Metallteils), bevor Sie das Produkt berühren.
- Unterlassen Sie jeden Versuch, das Produkt zu warten, und versuchen Sie nicht, es in seine Bestandteile zu zerlegen. Für einige Produkte mit austauschbaren Akkus lesen Sie bitte das Benutzerhandbuch und befolgen Sie die dort beschriebenen Anleitungen.
- Vermeiden Sie, dass Speisen oder Flüssigkeiten auf Ihr Produkt gelangen, und stecken Sie keine Gegenstände in die Gehäuseschlitze oder -öffnungen Ihres Produkts.
- Verwenden Sie dieses Produkt nicht in unmittelbarer Nähe von Wasser und nicht in Bereichen mit hoher Luftfeuchtigkeit oder Kondensation, es sei denn, es ist speziell zur Nutzung in Außenbereichen vorgesehen und eingestuft.
- Halten Sie das Produkt von Heizkörpern und anderen Quellen fern, die Wärme erzeugen.
- Trennen Sie das Produkt immer von der Stromzufuhr, bevor Sie es reinigen und verwenden Sie dazu ausschließlich ein trockenes fusselfreies Tuch.

CONSIGNES DE SÉCURITÉ

Les consignes générales de sécurité ci-après sont fournies afin d'assurer votre sécurité personnelle et de protéger le produit d'éventuels dommages. Veuillez consulter les consignes d'utilisation du produit pour plus de détails.

- L'électricité statique peut endommager les composants électroniques. Déchargez l'électricité statique de votre corps (en touchant un objet en métal relié à la terre par exemple) avant de toucher le produit.
- N'essayez pas d'intervenir sur le produit et ne le démontez jamais. Pour certains produits contenant une batterie remplaçable par l'utilisateur, veuillez lire et suivre les consignes contenues dans le manuel d'utilisation.
- Ne renversez pas d'aliments ou de liquide sur le produit et n'insérez jamais d'objets dans les orifices.
- N'utilisez pas ce produit à proximité d'un point d'eau, de zones très humides ou de condensation sauf si le produit a été spécifiquement conçu pour une application extérieure.
- Éloignez le produit des radiateurs et autres sources de chaleur.
- Débranchez toujours le produit de l'alimentation avant de le nettoyer et utilisez uniquement un chiffon sec non pelucheux.

INSTRUCCIONES DE SEGURIDAD

Las siguientes directrices de seguridad general se facilitan para ayudarle a garantizar su propia seguridad personal y para proteger el producto frente a posibles daños. No olvide consultar las instrucciones del usuario del producto para obtener más información.

- La electricidad estática puede resultar nociva para los componentes electrónicos. Descargue la electricidad estática de su cuerpo (p. ej., tocando algún metal sin revestimiento conectado a tierra) antes de tocar el producto.
- No intente realizar el mantenimiento del producto ni lo desmonte nunca. Para algunos productos con batería reemplazable por el usuario, lea y siga las instrucciones del manual de usuario.
- No derrame comida o líquidos sobre el producto y nunca deje que caigan objetos en las aberturas del mismo.
- No utilice este producto cerca del agua, en zonas con humedad o condensación elevadas a menos que el producto esté clasificado específicamente para aplicación en exteriores.
- Mantenga el producto alejado de los radiadores y de otras fuentes de calor.
- Desenchufe siempre el producto de la alimentación de red antes de limpiarlo y utilice solo un paño seco sin pelusa.

ISTRUZIONI PER LA SICUREZZA

Le seguenti linee guida sulla sicurezza sono fornite per contribuire a garantire la sicurezza personale degli utenti e a proteggere il prodotto da potenziali danni. Per maggiori dettagli, consultare le istruzioni per l'utente del prodotto.

- L'elettricità statica può essere pericolosa per i componenti elettronici. Scaricare l'elettricità statica dal corpo (ad esempio toccando una parte metallica collegata a terra) prima di toccare il prodotto.
- Non cercare di riparare il prodotto e non smontarlo mai. Per alcuni prodotti dotati di batteria sostituibile dall'utente, leggere e seguire le istruzioni riportate nel manuale dell'utente.
- Non versare cibi o liquidi sul prodotto e non spingere mai alcun oggetto nelle aperture del prodotto.
- Non usare questo prodotto vicino all'acqua, in aree con elevato grado di umidità o soggette a condensa a meno che il prodotto non sia specificatamente approvato per uso in ambienti esterni.
- Tenere il prodotto lontano da caloriferi e altre fonti di calore.
- Scollegare sempre il prodotto dalla presa elettrica prima di pulirlo e usare solo un panno asciutto che non lasci filacce.

VEILIGHEIDSINFORMATIE

De volgende algemene veiligheidsinformatie werd verstrekt om uw eigen persoonlijke veiligheid te waarborgen en uw product te beschermen tegen mogelijke schade. Denk eraan om de gebruikersinstructies van het product te raadplegen voor meer informatie.

- Statische elektriciteit kan schadelijk zijn voor elektronische componenten. Ontlaad de statische elektriciteit van uw lichaam (d.w.z. het aanraken van geaard bloot metaal) voordat u het product aanraakt.
- U mag nooit proberen het product te onderhouden en u mag het product nooit demonteren. Voor sommige producten met door de gebruiker te vervangen batterij, dient u de instructies in de gebruikershandleiding te lezen en te volgen.
- Mors geen voedsel of vloeistof op uw product en u mag nooit voorwerpen in de openingen van uw product duwen.
- Gebruik dit product niet in de buurt van water, gebieden met hoge vochtigheid of condensatie, tenzij het product specifiek geclassificeerd is voor gebruik buitenshuis.
- Houd het product uit de buurt van radiators en andere warmtebronnen.
- U dient het product steeds los te koppelen van de stroom voordat u het reinigt en gebruik uitsluitend een droge pluisvrije doek.

Disposing and Recycling Your Product

ENGLISH

EN



This symbol on the product or packaging means that according to local laws and regulations this product should not be disposed of in household waste but sent for recycling. Please take it to a collection point designated by your local authorities once it has reached the end of its life, some will accept products for free. By recycling the product and its packaging in this manner you help to conserve the environment and protect human health.

D-Link and the Environment

At D-Link, we understand and are committed to reducing any impact our operations and products may have on the environment. To minimise this impact D-Link designs and builds its products to be as environmentally friendly as possible, by using recyclable, low toxic materials in both products and packaging.

D-Link recommends that you always switch off or unplug your D-Link products when they are not in use. By doing so you will help to save energy and reduce CO2 emissions.

To learn more about our environmentally responsible products and packaging please visit www.dlinkgreen.com.

DEUTSCH

DE



Dieses Symbol auf dem Produkt oder der Verpackung weist darauf hin, dass dieses Produkt gemäß bestehender örtlicher Gesetze und Vorschriften nicht über den normalen Hausmüll entsorgt werden sollte, sondern einer Wiederverwertung zuzuführen ist. Bringen Sie es bitte zu einer von Ihrer Kommunalbehörde entsprechend amtlich ausgewiesenen Sammelstelle, sobald das Produkt das Ende seiner Nutzungsdauer erreicht hat. Für die Annahme solcher Produkte erheben einige dieser Stellen keine Gebühren. Durch ein auf diese Weise durchgeführtes Recycling des Produkts und seiner Verpackung helfen Sie, die Umwelt zu schonen und die menschliche Gesundheit zu schützen.

D-Link und die Umwelt

D-Link ist sich den möglichen Auswirkungen seiner Geschäftstätigkeiten und seiner Produkte auf die Umwelt bewusst und fühlt sich verpflichtet, diese entsprechend zu mindern. Zu diesem Zweck entwickelt und stellt D-Link seine Produkte mit dem Ziel größtmöglicher Umweltfreundlichkeit her und verwendet wiederverwertbare, schadstoffarme Materialien bei Produktherstellung und Verpackung.

D-Link empfiehlt, Ihre Produkte von D-Link, wenn nicht in Gebrauch, immer auszuschalten oder vom Netz zu nehmen. Auf diese Weise helfen Sie, Energie zu sparen und CO2-Emissionen zu reduzieren.

Wenn Sie mehr über unsere umweltgerechten Produkte und Verpackungen wissen möchten, finden Sie entsprechende Informationen im Internet unter www.dlinkgreen.com.

FRANÇAIS**FR**

Ce symbole apposé sur le produit ou son emballage signifie que, conformément aux lois et réglementations locales, ce produit ne doit pas être éliminé avec les déchets domestiques mais recyclé. Veuillez le rapporter à un point de collecte prévu à cet effet par les autorités locales; certains accepteront vos produits gratuitement. En recyclant le produit et son emballage de cette manière, vous aidez à préserver l'environnement et à protéger la santé de l'homme.

D-Link et l'environnement

Chez D-Link, nous sommes conscients de l'impact de nos opérations et produits sur l'environnement et nous engageons à le réduire. Pour limiter cet impact, D-Link conçoit et fabrique ses produits de manière aussi écologique que possible, en utilisant des matériaux recyclables et faiblement toxiques, tant dans ses produits que ses emballages.

D-Link recommande de toujours éteindre ou débrancher vos produits D-Link lorsque vous ne les utilisez pas. Vous réaliserez ainsi des économies d'énergie et réduirez vos émissions de CO₂.

Pour en savoir plus sur les produits et emballages respectueux de l'environnement, veuillez consulter le www.dlinkgreen.com.

ESPAÑOL**ES**

Este símbolo en el producto o el embalaje significa que, de acuerdo con la legislación y la normativa local, este producto no se debe desechar en la basura doméstica sino que se debe reciclar. Llévelo a un punto de recogida designado por las autoridades locales una vez que ha llegado al fin de su vida útil; algunos de ellos aceptan recogerlos de forma gratuita. Al reciclar el producto y su embalaje de esta forma, contribuye a preservar el medio ambiente y a proteger la salud de los seres humanos.

D-Link y el medio ambiente

En D-Link, comprendemos y estamos comprometidos con la reducción del impacto que puedan tener nuestras actividades y nuestros productos en el medio ambiente. Para reducir este impacto, D-Link diseña y fabrica sus productos para que sean lo más ecológicos posible, utilizando materiales reciclables y de baja toxicidad tanto en los productos como en el embalaje.

D-Link recomienda apagar o desenchufar los productos D-Link cuando no se estén utilizando. Al hacerlo, contribuirá a ahorrar energía y a reducir las emisiones de CO₂.

Para obtener más información acerca de nuestros productos y embalajes ecológicos, visite el sitio www.dlinkgreen.com.

ITALIANO**IT**

La presenza di questo simbolo sul prodotto o sulla confezione del prodotto indica che, in conformità alle leggi e alle normative locali, questo prodotto non deve essere smaltito nei rifiuti domestici, ma avviato al riciclo. Una volta terminato il ciclo di vita utile, portare il prodotto presso un punto di raccolta indicato dalle autorità locali. Alcuni questi punti di raccolta accettano gratuitamente i prodotti da riciclare. Scegliendo di riciclare il prodotto e il relativo imballaggio, si contribuirà a preservare l'ambiente e a salvaguardare la salute umana.

D-Link e l'ambiente

D-Link cerca da sempre di ridurre l'impatto ambientale dei propri stabilimenti e dei propri prodotti. Allo scopo di ridurre al minimo tale impatto, D-Link progetta e realizza i propri prodotti in modo che rispettino il più possibile l'ambiente, utilizzando materiali riciclabili a basso tasso di tossicità sia per i prodotti che per gli imballaggi.

D-Link raccomanda di spegnere sempre i prodotti D-Link o di scollegarne la spina quando non vengono utilizzati. In questo modo si contribuirà a risparmiare energia e a ridurre le emissioni di anidride carbonica.

Per ulteriori informazioni sui prodotti e sugli imballaggi D-Link a ridotto impatto ambientale, visitate il sito all'indirizzo www.dlinkgreen.com.

NEDERLANDS**NL**

Dit symbool op het product of de verpakking betekent dat dit product volgens de plaatselijke wetgeving niet mag worden weggegooid met het huishoudelijk afval, maar voor recyclage moeten worden ingeleverd. Zodra het product het einde van de levensduur heeft bereikt, dient u het naar een inzamelpunt te brengen dat hiertoe werd aangeduid door uw plaatselijke autoriteiten, sommige autoriteiten accepteren producten zonder dat u hiervoor dient te betalen. Door het product en de verpakking op deze manier te recyclen helpt u het milieu en de gezondheid van de mens te beschermen.

D-Link en het milieu

Bij D-Link spannen we ons in om de impact van onze handelingen en producten op het milieu te beperken. Om deze impact te beperken, ontwerpt en bouwt D-Link zijn producten zo milieuvriendelijk mogelijk, door het gebruik van recycleerbare producten met lage toxiciteit in product en verpakking.

D-Link raadt aan om steeds uw D-Link producten uit te schakelen of uit de stekker te halen wanneer u ze niet gebruikt. Door dit te doen bespaart u energie en beperkt u de CO₂-emissies.

Breng een bezoek aan www.dlinkgreen.com voor meer informatie over onze milieuverantwoorde producten en verpakkingen.

POLSKI**PL**

Ten symbol umieszczony na produkcie lub opakowaniu oznacza, że zgodnie z miejscowym prawem i lokalnymi przepisami niniejszego produktu nie wolno wyrzucać jak odpady czy śmieci z gospodarstwa domowego, lecz należy go poddać procesowi recyklingu. Po zakończeniu użytkowania produktu, niektóre odpowiednie do tego celu podmioty przyjmą takie produkty nieodpłatnie, dlatego prosimy dostarczyć go do punktu zbiórki wskazanego przez lokalne władze. Poprzez proces recyklingu i dzięki takiemu postępowaniu z produktem oraz jego opakowaniem, pomogą Państwo chronić środowisko naturalne i dbać o ludzkie zdrowie.

D-Link i środowisko

D-Link podchodzimy w sposób świadomy do ochrony otoczenia oraz jesteśmy zaangażowani w zmniejszanie wpływu naszych działań i produktów na środowisko naturalne. W celu zminimalizowania takiego wpływu firma D-Link konstruuje i wytwarza swoje produkty w taki sposób, aby były one jak najbardziej przyjazne środowisku, stosując do tych celów materiały nadające się do powtórnego wykorzystania, charakteryzujące się małą toksycznością zarówno w przypadku samych produktów jak i opakowań.

Firma D-Link zaleca, aby Państwo zawsze prawidłowo wyłączali z użytku swoje produkty D-Link, gdy nie są one wykorzystywane. Postępując w ten sposób pozwalają Państwo oszczędzać energię i zmniejszać emisje CO₂.

Aby dowiedzieć się więcej na temat produktów i opakowań mających wpływ na środowisko prosimy zapoznać się ze stroną Internetową www.dlinkgreen.com.

ČESKY**CZ**

Tento symbol na výrobku nebo jeho obalu znamená, že podle místně platných předpisů se výrobek nesmí vyhazovat do komunálního odpadu, ale odeslat k recyklaci. Až výrobek doslouží, odnese jej prosím na sběrné místo určené místními úřady k tomuto účelu. Někteří sběrná místa přijímají výrobky zdarma. Recyklací výrobku i obalu pomáháte chránit životní prostředí i lidské zdraví.

D-Link a životní prostředí

Ve společnosti D-Link jsme si vědomi vlivu našich provozů a výrobků na životní prostředí a snažíme se o minimalizaci těchto vlivů. Proto své výrobky navrhujeme a vyrábíme tak, aby byly co nejekologičtější, a ve výrobcích i obalech používáme recyklovatelné a nízkotoxické materiály.

Společnost D-Link doporučuje, abyste své výrobky značky D-Link vypnuli nebo vytáhli ze zásuvky vždy, když je nepoužíváte. Pomůžete tak šetřit energii a snížit emise CO₂.

Více informací o našich ekologických výrobcích a obalech najdete na adrese www.dlinkgreen.com.

MAGYAR**HU**

Ez a szimbólum a terméken vagy a csomagoláson azt jelenti, hogy a helyi törvényeknek és szabályoknak megfelelően ez a termék nem semmisíthető meg a háztartási hulladékkal együtt, hanem újrahasznosításra kell küldeni. Kérjük, hogy a termék élettartamának elteltét követően vigye azt a helyi hatóság által kijelölt gyűjtőhelyre. A termékek egyes helyeken ingyen elhelyezhetők. A termék és a csomagolás újrahasznosításával segíti védeni a környezetet és az emberek egészségét.

A D-Link és a környezet

A D-Linknél megértjük és elköteleztük magunkat a műveleteink és termékeink környezetre gyakorolt hatásainak csökkentésére. Az ezen hatás csökkentése érdekében a D-Link a lehető leginkább környezetbarát termékeket tervez és gyárt azáltal, hogy újrahasznosítható, alacsony károsanyag-tartalmú termékeket gyárt és csomagolásokat alkalmaz.

A D-Link azt javasolja, hogy mindig kapcsolja ki vagy húzza ki a D-Link termékeket a tápforrásból, ha nem használja azokat. Ezzel segít az energia megtakarításában és a széndioxid kibocsátásának csökkentésében.

Környezetbarát termékeinkről és csomagolásainkról további információkat a www.dlinkgreen.com weboldalon tudhat meg.

NORSK**NO**

Dette symbolet på produktet eller forpakningen betyr at dette produktet ifølge lokale lover og forskrifter ikke skal kastes sammen med husholdningsavfall, men leveres inn til gjenvinning. Vennligst ta det til et innsamlingssted anvist av lokale myndigheter når det er kommet til slutten av levetiden. Noen steder aksepteres produkter uten avgift. Ved på denne måten å gjenvinne produktet og forpakningen hjelper du å verne miljøet og beskytte folks helse.

D-Link og miljøet

Hos D-Link forstår vi oss på og er forpliktet til å minske innvirkningen som vår drift og våre produkter kan ha på miljøet. For å minimalisere denne innvirkningen designer og lager D-Link produkter som er så miljøvennlig som mulig, ved å bruke resirkulerbare, lav-toksiske materialer både i produktene og forpakningen.

D-Link anbefaler at du alltid slår av eller frakobler D-Link-produkter når de ikke er i bruk. Ved å gjøre dette hjelper du å spare energi og å redusere CO2-utslipp.

For mer informasjon angående våre miljøansvarlige produkter og forpakninger kan du gå til www.dlinkgreen.com.

DANSK**DK**

Dette symbol på produktet eller emballagen betyder, at dette produkt i henhold til lokale love og regler ikke må bortskaffes som husholdningsaffald, mens skal sendes til genbrug. Indlever produktet til et indsamlingssted som angivet af de lokale myndigheder, når det er nået til slutningen af dets levetid. I nogle tilfælde vil produktet blive modtaget gratis. Ved at indlevere produktet og dets emballage til genbrug på denne måde bidrager du til at beskytte miljøet og den menneskelige sundhed.

D-Link og miljøet

Hos D-Link forstår vi og bestræber os på at reducere enhver indvirkning, som vores aktiviteter og produkter kan have på miljøet. For at minimere denne indvirkning designer og producerer D-Link sine produkter, så de er så miljøvenlige som muligt, ved at bruge genanvendelige materialer med lavt giftighedsniveau i både produkter og emballage.

D-Link anbefaler, at du altid slukker eller frakobler dine D-Link-produkter, når de ikke er i brug. Ved at gøre det bidrager du til at spare energi og reducere CO₂-udledningerne.

Du kan finde flere oplysninger om vores miljømæssigt ansvarlige produkter og emballage på www.dlinkgreen.com.

SUOMI**FI**

Tämä symboli tuotteen pakkauksessa tarkoittaa, että paikallisten lakien ja säännösten mukaisesti tätä tuotetta ei pidä hävittää yleisen kotitalousjätteen seassa vaan se tulee toimittaa kierrätettäväksi. Kun tuote on elinkaarensa päässä, toimita se lähimpään viranomaisten hyväksymään kierrätyspisteeseen. Kierrättämällä käytetyn tuotteen ja sen pakkauksen autat tukemaan sekä ympäristön että ihmisten terveyttä ja hyvinvointia.

D-Link ja ympäristö

D-Link ymmärtää ympäristönsuojelun tärkeyden ja on sitoutunut vähentämään tuotteistaan ja niiden valmistuksesta ympäristölle mahdollisesti aiheutuvia haittavaikutuksia. Nämä negatiiviset vaikutukset minimoidakseen D-Link suunnittelee ja valmistaa tuotteensa mahdollisimman ympäristöystävällisiksi käyttämällä kierrätettäviä, alhaisia pitoisuuksia haitallisia aineita sisältäviä materiaaleja sekä tuotteissaan että niiden pakkauksissa.

Suosittelemme, että irrotat D-Link-tuotteesi virtalähteestä tai sammutat ne aina, kun ne eivät ole käytössä. Toimimalla näin autat säästämään energiaa ja vähentämään hiilidioksiidipäästöjä.

Lue lisää ympäristöystävällisistä D-Link-tuotteista ja pakkauksistamme osoitteesta www.dlinkgreen.com.

SVENSKA**SE**

Den här symbolen på produkten eller förpackningen betyder att produkten enligt lokala lagar och föreskrifter inte skall kastas i hushållssoporna utan i stället återvinnas. Ta den vid slutet av dess livslängd till en av din lokala myndighet utsedd uppsamlingsplats, vissa accepterar produkter utan kostnad. Genom att på detta sätt återvinna produkten och förpackningen hjälper du till att bevara miljön och skydda människors hälsa.

D-Link och miljön

På D-Link förstår vi och är fast beslutna att minska den påverkan våra verksamheter och produkter kan ha på miljön. För att minska denna påverkan utformar och bygger D-Link sina produkter för att de ska vara så miljövänliga som möjligt, genom att använda återvinningsbara material med låg gifthalt i både produkter och förpackningar.

D-Link rekommenderar att du alltid stänger av eller kopplar ur dina D-Link produkter när du inte använder dem. Genom att göra detta hjälper du till att spara energi och minska utsläpp av koldioxid.

För mer information om våra miljöansvariga produkter och förpackningar www.dlinkgreen.com.

PORTUGUÊS**PT**

Este símbolo no produto ou embalagem significa que, de acordo com as leis e regulamentações locais, este produto não deverá ser eliminado juntamente com o lixo doméstico mas enviado para a reciclagem. Transporte-o para um ponto de recolha designado pelas suas autoridades locais quando este tiver atingido o fim da sua vida útil, alguns destes pontos aceitam produtos gratuitamente. Ao reciclar o produto e respectiva embalagem desta forma, ajuda a preservar o ambiente e protege a saúde humana.

A D-Link e o ambiente

Na D-Link compreendemos e comprometemo-nos com a redução do impacto que as nossas operações e produtos possam ter no ambiente. Para minimizar este impacto a D-Link concebe e constrói os seus produtos para que estes sejam o mais inofensivos para o ambiente possível, utilizando materiais recicláveis e não tóxicos tanto nos produtos como nas embalagens.

A D-Link recomenda que desligue os seus produtos D-Link quando estes não se encontrarem em utilização. Com esta acção ajudará a poupar energia e reduzir as emissões de CO₂.

Para saber mais sobre os nossos produtos e embalagens responsáveis a nível ambiental visite www.dlinkgreen.com.